

SIXTH EDITION

# Introduction to FLUID MECHANICS



**A NEW book  
contains  
CD-based resources  
for enhanced  
learning!**

Robert W. Fox  
Alan T. McDonald  
Philip J. Pritchard

Table G.1 SI Units and Prefixes<sup>a</sup>

SI Units	Quantity	Unit	SI Symbol	Formula
SI base units:	Length	meter	m	—
	Mass	kilogram	kg	—
	Time	second	s	—
	Temperature	kelvin	K	—
SI supplementary unit:	Plane angle	radian	rad	—
SI derived units:	Energy	joule	J	N · m
	Force	newton	N	kg · m/s <sup>2</sup>
	Power	watt	W	J/s
	Pressure	pascal	Pa	N/m <sup>2</sup>
	Work	joule	J	N · m
SI prefixes	Multiplication Factor	Prefix	SI Symbol	
	1 000 000 000 000 = 10 <sup>12</sup>	tera	T	
	1 000 000 000 = 10 <sup>9</sup>	giga	G	
	1 000 000 = 10 <sup>6</sup>	mega	M	
	1 000 = 10 <sup>3</sup>	kilo	k	
	0.01 = 10 <sup>-2</sup>	centi <sup>b</sup>	c	
	0.001 = 10 <sup>-3</sup>	milli	m	
	0.000 001 = 10 <sup>-6</sup>	micro	μ	
	0.000 000 001 = 10 <sup>-9</sup>	nano	n	
	0.000 000 000 001 = 10 <sup>-12</sup>	pico	p	

<sup>a</sup> Source: ASTM Standard for Metric Practice E 380-97, 1997.

<sup>b</sup> To be avoided where possible.





Table G.2 Conversion Factors and Definitions

Fundamental Dimension	English Unit	Exact SI Value	Approximate SI Value
Length	1 in.	0.0254 m	—
Mass	1 lbm	0.453 592 37 kg	0.454 kg
Temperature	1°F	5/9 K	—

**Definitions:**

Acceleration of gravity:	$g = 9.8066 \text{ m/s}^2 (= 32.174 \text{ ft/s}^2)$
Energy:	Btu (British thermal unit) = amount of energy required to raise the temperature of 1 lbm of water 1°F (1 Btu = 778.2 ft · lbf) kilocalorie = amount of energy required to raise the temperature of 1 kg of water 1 K (1 kcal = 4187 J)
Length:	1 mile = 5280 ft; 1 nautical mile = 6076.1 ft = 1852 m (exact)
Power:	1 horsepower = 550 ft · lbf/s
Pressure:	1 bar = $10^5$ Pa
Temperature:	degree Fahrenheit, $T_F = \frac{9}{5}T_C + 32$ (where $T_C$ is degrees Celsius) degree Rankine, $T_R = T_F + 459.67$ Kelvin, $T_K = T_C + 273.15$ (exact)
Viscosity:	1 Poise = 0.1 kg/(m · s) 1 Stoke = 0.0001 m <sup>2</sup> /s
Volume:	1 gal = 231 in. <sup>3</sup> (1 ft <sup>3</sup> = 7.48 gal)

**Useful Conversion Factors:**

1 lbf = 4.448 N
1 lbf/in. <sup>2</sup> = 6895 Pa
1 Btu = 1055 J
1 hp = 746 W = 2545 Btu/hr
1 kW = 3413 Btu/hr
1 quart = 0.000946 m <sup>3</sup> = 0.946 liter
1 kcal = 3.968 Btu

---

---

INTRODUCTION  
TO  
FLUID  
MECHANICS  
SIXTH EDITION

ROBERT W. FOX  
*Purdue University*

ALAN T. McDONALD  
*Purdue University*

PHILIP J. PRITCHARD  
*Manhattan College*



[www.k-t-dra.com](http://www.k-t-dra.com)

**k-t-dra**  
Grupo k-t-dra

Diagonal 85A No. 26-05 Polo Club • Fax: (571) 2187629  
Teléfonos: 2570895 • 6358137 • A.A. 93825 • Bogotá, D.C.  
Colombia • e-mail: [info@k-t-dra.com](mailto:info@k-t-dra.com)  
[medellin@k-t-dra.com](mailto:medellin@k-t-dra.com) • Tel.: 3426194 • Medellín



JOHN WILEY & SONS, INC.

138422

**On the Cover:**

Aerodynamics in action at speeds of 200+ miles per hour!

The cover photo shows the Formula 1 Ferrari cars of World Driving Champion Michael Schumacher and his teammate Rubens Barrichello at the United States Grand Prix on September 29, 2002. The location is the road circuit of the Indianapolis Motor Speedway in Indianapolis, Indiana. Similar Ferrari 1-2 finishes were seen at many racetracks throughout 2002.

All modern racing cars use aerodynamic downforce (negative lift) to improve traction without adding significant weight to the car. Using high downforce allows high cornering speeds on the twisting, turning road courses typical of Formula 1 races. The maximum downforce can exceed twice the weight of the car at 200+ miles per hour straightaway speeds! Of course high downforce also causes high drag, which reduces straightaway speed, so a compromise is needed.

The photo clearly shows some features of Schumacher's Ferrari. Notable is the extensive use of aerodynamic devices designed to develop and control downforce.

The Ferrari's front wings are two-element designs. They are made as large, and placed as far forward on the chassis, as the rules allow. The rear wing appears to be a three-element design. The rear wing also is made as large as the rules allow; it is placed as far rearward on the chassis as possible. The side-mounted engine-cooling radiators are located in housings faired smoothly on the outside to minimize drag. The radiator housings are designed with careful flow management inside to maximize the flow of cooling air. Also visible are fairings to direct hot air from the radiators around the rear tires, and at the front of the car, cool air toward the brakes.

Details of underbody airflow management, commonly called "ground effects," are not so easily seen. Airflow under the car is routed carefully, using diffusers designed to the limits of the rules, to develop the most negative pressure, and cause it to act over the largest possible area under the car, to develop additional downforce.

ACQUISITIONS EDITOR Wayne Anderson  
ASSOCIATE EDITOR Jennifer Welter  
MARKETING MANAGER Katherine Hepburn  
SENIOR PRODUCTION EDITOR Patricia McFadden  
SENIOR DESIGNER Madelyn Lesure  
PHOTO EDITOR Lisa Gee  
PRODUCTION MANAGEMENT SERVICES Ingra Associates  
COVER PHOTO: © Wayne P. Johnson

This book was set in Times Roman by Progressive Information Technologies and printed and bound by RR Donneley and Sons. The cover was printed by Lehigh Press, Inc.

This book is printed on acid-free paper. ☺

Copyright 2004© John Wiley & Sons, Inc. All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, scanning or otherwise, except as permitted under Sections 107 or 108 of the 1976 United States Copyright Act, without either the prior written permission of the Publisher, or authorization through payment of the appropriate per-copy fee to the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, (978) 750-8400, fax (978) 750-4470. Requests to the Publisher for permission should be addressed to the Permissions Department, John Wiley & Sons, Inc., 111 River Street, Hoboken, NJ 07030, (201) 748-6011, fax (201) 748-6008, E-Mail: PERMREQ@WILEY.COM.  
To order books please call 1(800)-225-5945.

ISBN 0-471-20231-2  
WIE ISBN 0-471-37653-1

Printed in the United States of America

10 9 8 7 6 5 4 3 2 1

The cover photograph originally appeared in the January 2003 edition of Road & Track. It is used by permission of the publisher, Hachette Filipacchi Media U.S., Inc.

---

---

# PREFACE

This text was written for an introductory course in fluid mechanics. Our approach to the subject, as in previous editions, emphasizes the physical concepts of fluid mechanics and methods of analysis that begin from basic principles. The primary objective of this book is to help users develop an orderly approach to problem solving. Thus we always start from governing equations, state assumptions clearly, and try to relate mathematical results to corresponding physical behavior. We emphasize the use of control volumes to maintain a practical problem-solving approach that is also theoretically inclusive.

This approach is illustrated by 116 example problems in the text. Solutions to the example problems have been prepared to illustrate good solution technique and to explain difficult points of theory. Example problems are set apart in format from the text so they are easy to identify and follow. Forty-five example problems include *Excel* workbooks on the accompanying CD-ROM, making them useful for “What if?” analyses by students or by the instructor during class.

Additional important information about the text and our procedures is given in the “Note to Students” section on page 1 of the printed text. We urge you to study this section carefully and to integrate the suggested procedures into your problem solving and results-presentation approaches.

SI units are used in about 70 percent of both example and end-of-chapter problems. English Engineering units are retained in the remaining problems to provide experience with this traditional system and to highlight conversions among unit systems that may be derived from fundamentals.

Complete explanations presented in the text, together with numerous detailed examples, make this book understandable for students. This frees the instructor to depart from conventional lecture teaching methods. Classroom time can be used to bring in outside material, expand upon special topics (such as non-Newtonian flow, boundary-layer flow, lift and drag, or experimental methods), solve example problems, or explain difficult points of assigned homework problems. In addition, the 45 example problem *Excel* workbooks are useful for presenting a variety of fluid mechanics phenomena, especially the effects produced when varying input parameters. Thus each class period can be used in the manner most appropriate to meet student needs.

The material has been selected carefully to include a broad range of topics suitable for a one- or two-semester course at the junior or senior level. We assume a background in rigid-body dynamics and mathematics through differential equations. A background in thermodynamics is desirable for studying compressible flow.

More advanced material, not typically covered in a first course, has been moved to the CD. There the advanced material is available to interested users of the book; on the CD it does not interrupt the topic flow of the printed text.



Material in the printed text has been organized into broad topic areas:

- Introductory concepts, scope of fluid mechanics, and fluid statics (Chapters 1, 2, and 3).
- Development and application of control volume forms of basic equations (Chapter 4).
- Development and application of differential forms of basic equations (Chapters 5 and 6).
- Dimensional analysis and correlation of experimental data (Chapter 7).
- Applications for internal viscous incompressible flows (Chapter 8).
- Applications for external viscous incompressible flows (Chapter 9).
- Analysis of fluid machinery and system applications (Chapter 10).
- Analysis and applications of one- and two-dimensional compressible flows (Chapters 11 and 12).

Chapter 4 deals with analysis using both finite and differential control volumes. The Bernoulli equation is derived (in an optional sub-section of Section 4-4) as an example application of the basic equations to a differential control volume. Being able to use the Bernoulli equation in Chapter 4 allows us to include more challenging problems dealing with the momentum equation for finite control volumes.

Another derivation of the Bernoulli equation is presented in Chapter 6, where it is obtained by integrating Euler's equation along a streamline. If an instructor chooses to delay introducing the Bernoulli equation, the challenging problems from Chapter 4 may be assigned during study of Chapter 6.

This edition incorporates a number of significant changes. In Chapter 7, the discussion of non-dimensionalizing the governing equations to obtain dimensionless parameters is moved to the beginning of the chapter. Chapter 8 incorporates pumps into the discussion of energy considerations in pipe flow. The discussion of multiple-path pipe systems is expanded and illustrated with an interactive *Excel* workbook. Chapter 10 has been restructured to include separate sub-topics on machines for doing work on, and machines for extracting work from, a fluid. Chapter 12 has been completely restructured so that the basic equations for one-dimensional compressible flow are derived once, and then applied to each special case (isentropic flow, nozzle flow, Fanno line flow, Rayleigh line flow, and normal shocks). Finally, a new section on oblique shocks and expansion waves is included.

We have made a major effort to improve clarity of writing in this edition. Professor Philip J. Pritchard of Manhattan College, has joined the Fox-McDonald team as co-author. Professor Pritchard reviewed the entire manuscript in detail to clarify and improve discussions, added numerous physical examples, and prepared the *Excel* workbooks that accompany 45 example problems and over 300 end-of-chapter problems. His contributions have been extraordinary.

The sixth edition includes 1315 end-of-chapter problems. Many problems have been combined and contain multiple parts. Most have been structured so that all parts need not be assigned at once, and almost 25 percent of sub-parts have been designed to explore "What if?" questions.

About 300 problems are new or modified for this edition, and many include a component best suited for analysis using a spreadsheet. A CD icon in the margin identifies these problems. Many of these problems have been designed so the computer component provides a parametric investigation of a single-point solution, to facilitate and encourage students in their attempts to perform "What if?" experimentation. The *Excel* workbooks prepared by Professor Pritchard aid this process significantly. A new Appendix H, "A Brief Review of Microsoft *Excel*," also has been added to the CD.

We have included many open-ended problems. Some are thought-provoking questions intended to test understanding of fundamental concepts, and some require creative thought, synthesis, and/or narrative discussion. We hope these problems will inspire each instructor to develop and use more open-ended problems.

The Solutions Manual for the sixth edition continues the tradition established by Fox and McDonald: It contains a complete, detailed solution for each of the 1315 homework problems. Each solution is prepared in the same systematic way as the example problem solutions in the printed text. Each solution begins from governing equations, clearly states assumptions, reduces governing equations to computing equations, obtains an algebraic result, and finally substitutes numerical values to calculate a quantitative answer. Solutions may be reproduced for classroom or library use, eliminating the labor of problem solving for the instructor who adopts the text.

Problems in each chapter are arranged by topic, and within each topic they generally increase in complexity or difficulty. This makes it easy for the instructor to assign homework problems at the appropriate difficulty level for each section of the book. The Solutions Manual is available in CD form directly from the publisher upon request after the text is adopted. Go to the text's website at [www.wiley.com/college/fox](http://www.wiley.com/college/fox) to request access to the password-protected online version, or to [www.wiley.com/college](http://www.wiley.com/college) to find your local Wiley representative and request the Solutions Manual in CD form.

Where appropriate, we have used open-ended design problems in place of traditional laboratory experiments. For those who do not have complete laboratory facilities, students could be assigned to work in teams to solve these problems. Design problems encourage students to spend more time exploring applications of fluid mechanics principles to the design of devices and systems. In the sixth edition, design problems are included with the end-of-chapter problems.

The presentation of flow functions for compressible flow in Appendix E has been expanded to include data for oblique shocks and expansion waves. Expanded forms of each table in this appendix can be printed from the associated *Excel* workbooks, including tables for ideal gases other than air.

Many worthwhile videos are available to demonstrate and clarify basic principles of fluid mechanics. These are referenced in the text where their use would be appropriate and are also identified by supplier in Appendix C.

When students finish the fluid mechanics course, we expect them to be able to apply the governing equations to a variety of problems, including those they have not encountered previously. In the sixth edition we particularly emphasize physical concepts throughout to help students model the variety of phenomena that occur in real fluid flow situations. We minimize use of "magic formulas" and emphasize the systematic and fundamental approach to problem solving. By following this format, we believe students develop confidence in their ability to apply the material and find they can reason out solutions to rather challenging problems.

The book is well suited for independent study by students or practicing engineers. Its readability and clear examples help to build confidence. Answers to many quantitative problems are provided at the back of the printed text.

We recognize that no single approach can satisfy all needs, and we are grateful to the many students and faculty whose comments have helped us improve upon earlier editions of this book. We especially thank our reviewers for the sixth edition: Mark A. Cappelli of Stanford University, Edward M. Gates of California State Polytechnic University (Pomona), Jay M. Khodadadi of Auburn University, Tim Lee of

McGill University, and S. A. Sherif of University of Florida. We look forward to continued interactions with these and other colleagues who use the book.

We appreciate the unstinting support of our wives, Beryl, Tania, and Penelope. They are keenly aware of all the hours that went into this effort!

We welcome suggestions and/or criticisms from interested users of this book.

Robert W. Fox  
Alan T. McDonald  
Philip J. Pritchard  
April 2003

532  
F69i  
cf:2

JSN 293703

# CONTENTS

May. 14/2004  
3M

<b>CHAPTER 1</b>	<b>INTRODUCTION</b>	<b>/1</b>
1-1	Note to Students	/1
1-2	Definition of a Fluid	/3
1-3	Scope of Fluid Mechanics	/4
1-4	Basic Equations	/4
1-5	Methods of Analysis	/5
	System and Control Volume	/5
	Differential versus Integral Approach	/8
	Methods of Description	/8
1-6	Dimensions and Units	/10
	Systems of Dimensions	/11
	Systems of Units	/11
	Preferred Systems of Units	/13
1-7	Summary	/13
	Problems	/13
<b>CHAPTER 2</b>	<b>FUNDAMENTAL CONCEPTS</b>	<b>/17</b>
2-1	Fluid as a Continuum	/17
2-2	Velocity Field	/19
	One-, Two-, and Three- Dimensional Flows	/20
	Timelines, Pathlines, Streaklines, and Streamlines	/21
2-3	Stress Field	/24
2-4	Viscosity	/26
	Newtonian Fluid	/28
	Non-Newtonian Fluids	/30
2-5	Surface Tension	/32
2-6	Description and Classification of Fluid Motion	/35
	Viscous and Inviscid Flows	/35
	Laminar and Turbulent Flows	/38
	Compressible and Incompressible Flows	/39
	Internal and External Flows	/40
2-7	Summary	/42
	References	/42
	Problems	/42
<b>CHAPTER 3</b>	<b>FLUID STATICS</b>	<b>/52</b>
3-1	The Basic Equation of Fluid Statics	/52
3-2	The Standard Atmosphere	/56
3-3	Pressure Variation in a Static Fluid	/57
	Incompressible Liquids: Manometers	/57
	Gases	/63

138422



- 3-4 Hydraulic Systems /66
- 3-5 Hydrostatic Force on Submerged Surfaces /66
  - Hydrostatic Force on a Plane Submerged Surface /66
  - Hydrostatic Force on a Curved Submerged Surface /74
- \*3.6 Buoyancy and Stability /78
- 3-7 Fluids in Rigid-Body Motion (CD-ROM) /S-1
- 3-8 Summary /82
  - References /82
  - Problems /83

## CHAPTER 4 BASIC EQUATIONS IN INTEGRAL FORM FOR A CONTROL VOLUME /99

- 4-1 Basic Laws for a System /99
  - Conservation of Mass /99
  - Newton's Second Law /100
  - The Angular-Momentum Principle /100
  - The First Law of Thermodynamics /100
  - The Second Law of Thermodynamics /101
- 4-2 Relation of System Derivatives to the Control Volume Formulation /101
  - Derivation /102
  - Physical Interpretation /104
- 4-3 Conservation of Mass /105
  - Special Cases /106
- 4-4 Momentum Equation for Inertial Control Volume /112
  - \*Differential Control Volume Analysis /124
    - Control Volume Moving with Constant Velocity /129
- 4-5 Momentum Equation for Control Volume with Rectilinear Acceleration /131
- 4-6 Momentum Equation for Control Volume with Arbitrary Acceleration (CD-ROM) /S-7
- \*4-7 The Angular-Momentum Principle /139
  - Equation for Fixed Control Volume /139
  - Equation for Rotating Control Volume (CD-ROM) /S-13
- 4-8 The First Law of Thermodynamics /144
  - Rate of Work Done by a Control Volume /144
  - Control Volume Equation /146
- 4-9 The Second Law of Thermodynamics /151
- 4-10 Summary /152
  - Problems /152

## CHAPTER 5 INTRODUCTION TO DIFFERENTIAL ANALYSIS OF FLUID MOTION /184

- 5-1 Conservation of Mass /184
  - Rectangular Coordinate System /184
  - Cylindrical Coordinate System /189
- \*5-2 Stream Function for Two-Dimensional Incompressible Flow /193
- 5-3 Motion of a Fluid Particle (Kinematics) /197
  - Fluid Translation: Acceleration of a Fluid Particle in a Velocity Field /197
  - Fluid Rotation /203
  - Fluid Deformation /207

- 5-4 Momentum Equation /211
  - Forces Acting on a Fluid Particle /212
  - Differential Momentum Equation /213
  - Newtonian Fluid: Navier-Stokes Equations /213
- 5-5 Summary /222
  - References /223
  - Problems /223

## CHAPTER 6 INCOMPRESSIBLE INVISCID FLOW /232

- 6-1 Momentum Equation for Frictionless Flow: Euler's Equation /232
- 6-2 Euler's Equations in Streamline Coordinates /233
- 6-3 Bernoulli Equation – Integration of Euler's Equation along a Streamline for Steady Flow /237
  - Derivation Using Streamline Coordinates /237
  - \*Derivation Using Rectangular Coordinates /238
  - Static, Stagnation, and Dynamic Pressures /239
  - Applications /243
  - Cautions on Use of the Bernoulli Equation /248
- 6-4 The Bernoulli Equation Interpreted as an Energy Equation /249
- 6-5 Energy Grade Line and Hydraulic Grade Line /254
- 6-6 Unsteady Bernoulli Equation – Integration of Euler's Equation along a Streamline (CD-ROM) /S-18
- 6-7 Irrotational Flow (CD-ROM) /S-20
  - Bernoulli Equation Applied to Irrotational Flow (CD-ROM) /S-21
  - Velocity Potential (CD-ROM) /S-22
  - Stream Function and Velocity Potential for Two-Dimensional, Irrotational, Incompressible Flow: Laplace's Equation (CD-ROM) /S-23
  - Elementary Plane Flows (CD-ROM) /S-25
  - Superposition of Elementary Plane Flows (CD-ROM) /S-28
- 6-8 Summary /256
  - References /257
  - Problems /257

## CHAPTER 7 DIMENSIONAL ANALYSIS AND SIMILITUDE /273

- 7-1 Nondimensionalizing the Basic Differential Equations /273
- 7-2 Nature of Dimensional Analysis /275
- 7-3 Buckingham Pi Theorem /277
- 7-4 Determining the Pi Groups /278
- 7-5 Significant Dimensionless Groups in Fluid Mechanics /284
- 7-6 Flow Similarity and Model Studies /286
  - Incomplete Similarity /289
  - Scaling with Multiple Dependent Parameters /295
  - Comments on Model Testing /298
  - Summary /299
  - References /300
  - Problems /301

## CHAPTER 8 INTERNAL INCOMPRESSIBLE VISCOUS FLOW /310

- 8-1 Introduction /310
- PART A. FULLY DEVELOPED LAMINAR FLOW /312

## X CONTENTS


- 8-2 Fully Developed Laminar Flow between Infinite Parallel Plates /312
  - Both Plates Stationary /312
  - Upper Plate Moving with Constant Speed,  $U$  /318
- 8-3 Fully Developed Laminar Flow in a Pipe /324
- PART B. FLOW IN PIPES AND DUCTS /328
- 8-4 Shear Stress Distribution in Fully Developed Pipe Flow /329
- 8-5 Turbulent Velocity Profiles in Fully Developed Pipe Flow /330
- 8-6 Energy Considerations in Pipe Flow /334
  - Kinetic Energy coefficient /335
  - Head Loss /335
- 8-7 Calculation of Head Loss /336
  - Major Loss: Friction Factor /336
  - Minor Losses /341
  - Pumps, Fans, and Blowers in Fluid Systems /347
  - Noncircular Ducts /348
- 8-8 Solution of Pipe Flow Problems /349
  - Single-Path Systems /350
  - \*Multiple-Path Systems /364
- PART C. FLOW MEASUREMENT /369
- 8-9 Direct Methods /369
- 8-10 Restriction Flow Meters for Internal Flows /370
  - The Orifice Plate /373
  - The Flow Nozzle /374
  - The Venturi /376
  - The Laminar Flow Element /376
- 8-11 Linear flow Meters /380
- 8-12 Traversing Methods /382
- 8-13 Summary /383
  - References /383
  - Problems /385

## CHAPTER 9 EXTERNAL INCOMPRESSIBLE VISCOUS FLOW /409

- PART A. BOUNDARY LAYERS /410
- 9-1 The Boundary-Layer Concept /410
- 9-2 Boundary-Layer Thicknesses /412
- 9-3 Laminar Flat-Plate Boundary Layer: Exact Solution (CD-ROM) /S-39
- 9-4 Momentum Integral Equation /415
- 9-5 Use of the Momentum Integral Equation for Flow with Zero Pressure Gradient /421
  - Laminar Flow /422
  - Turbulent Flow /426
- 9-6 Pressure Gradients in Boundary-Layer Flow /430
- PART B. FLUID FLOW ABOUT IMMERSED BODIES /433
- 9-7 Drag /433
  - Flow over a Flat Plate Parallel to the Flow: Friction Drag /434
  - Flow over a Flat Plate Normal to the Flow: Pressure Drag /437
  - Flow over a Sphere and Cylinder: Friction and Pressure Drag /438
  - Streamlining /445
- 9-8 Lift /447
- 9-9 Summary /464

References /465  
 Problems /466

- CHAPTER 10 FLUID MACHINERY /487**
- 10-1 Introduction and Classification of Fluid Machines /487
    - Machines for Doing Work on a Fluid /488
    - Machines for Extracting Work (Power) from a Fluid /489
  - 10-2 Scope of Coverage /490
  - 10-3 Turbomachinery Analysis /491
    - The Angular-Momentum Principle /491
    - Euler Turbomachine Equation /491
    - Velocity Diagrams /493
    - Hydraulic Power /501
  - 10-4 Performance Characteristics /502
    - Performance Parameters /503
    - Dimensional Analysis and Specific Speed /514
    - Similarity Rules /519
    - Cavitation and Net Positive Suction Head /524
  - 10-5 Applications to Fluid Systems /528
    - Machines for Doing Work on a Fluid /529
    - Machines for Extracting Work (Power) from a Fluid /561
  - 10-6 Summary /571
    - References /572
    - Problems /574
- CHAPTER 11 INTRODUCTION TO COMPRESSIBLE FLOW /589**
- 11-1 Review of Thermodynamics /589
  - 11-2 Propagation of Sound Waves /596
    - Speed of Sound /596
    - Types of Flow – The Mach Cone /600
  - 11-3 Reference State: Local Isentropic Stagnation Properties /602
    - Local Isentropic Stagnation Properties for the Flow of an Ideal Gas /603
  - 11-4 Critical Conditions /610
  - 11-5 Summary /611
    - References /611
    - Problems /611
- CHAPTER 12 COMPRESSIBLE FLOW /617**
- 12-1 Basic Equations for One-Dimensional Compressible Flow /617
  - 12-2 Isentropic Flow of an Ideal Gas – Area Variation /621
    - Subsonic Flow,  $M < 1$  /623
    - Supersonic Flow,  $M > 1$  /623
    - Sonic Flow,  $M = 1$  /624
    - Reference Stagnation and Critical Conditions for Isentropic Flow of an Ideal Gas /625
    - Isentropic Flow in a Converging Nozzle /631
    - Isentropic Flow in a Converging-Diverging Nozzle /637
  - 12-3 Flow in a Constant-Area Duct with Friction /643
    - Basic Equations for Adiabatic Flow /644

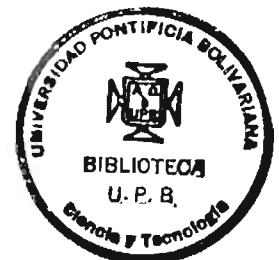



	Adiabatic Flow: The Fanno Line	/645
	Fanno-Line Flow Functions for One-Dimensional Flow of an Ideal Gas	/649
	•Isothermal Flow (CD-ROM)	/S-44
12-4	Frictionless Flow in a Constant-Area Duct with Heat Exchange	/657
	Basic Equations for Flow with Heat Exchange	/658
	The Rayleigh Line	/659
	Rayleigh-Line Flow Functions for One-Dimensional Flow of an Ideal Gas	/664
12-5	Normal Shocks	/669
	Basic Equations for a Normal Shock	/670
	Normal Shock Flow Functions for One-Dimensional Flow of an Ideal Gas	/672
12-6	Supersonic Channel Flow with Shocks	/678
	Flow in a Converging-Diverging Nozzle	/678
	•Supersonic Diffuser (CD-ROM)	/S-46
	•Supersonic Wind Tunnel Operation (CD-ROM)	/S-48
	•Supersonic Flow with Friction in a Constant-Area Channel (CD-ROM)	/S-49
	•Supersonic Flow with Heat Addition in a Constant-Area Channel (CD-ROM)	/S-49
12-7	Oblique Shocks and Expansion Waves	/680
	Oblique Shocks	/680
	Isentropic Expansion Waves	/690
12-8	Summary	/699
	References	/699
	Problems	/700
<b>APPENDIX A</b>	<b>FLUID PROPERTY DATA</b>	<b>/716</b>
<b>APPENDIX B</b>	<b>EQUATIONS OF MOTION IN CYLINDRICAL COORDINATES</b>	<b>/730</b>
<b>APPENDIX C</b>	<b>VIDEOS FOR FLUID MECHANICS</b>	<b>/731</b>
<b>APPENDIX D</b>	<b>SELECTED PERFORMANCE CURVES FOR PUMPS AND FANS</b>	<b>/733</b>
<b>APPENDIX E</b>	<b>FLOW FUNCTIONS FOR COMPUTATION OF COMPRESSIBLE FLOW</b>	<b>/744</b>
<b>APPENDIX F</b>	<b>ANALYSIS OF EXPERIMENTAL UNCERTAINTY</b>	<b>/755</b>
<b>APPENDIX G</b>	<b>SI UNITS, PREFIXES, AND CONVERSION FACTORS</b>	<b>/762</b>
<b>•APPENDIX H</b>	<b>A BRIEF REVIEW OF MICROSOFT EXCEL (CD-ROM)</b>	<b>/S-53</b>
	<b>Answers to Selected Problems</b>	<b>/765</b>
	<b>Index</b>	<b>/779</b>

# INTRODUCTION

The goal of this textbook is to provide a clear, concise introduction to the subject of fluid mechanics. In beginning the study of any subject, a number of questions may come to mind. Students in the first course in fluid mechanics might ask:

What is fluid mechanics all about?

Why do I have to study it?

Why should I want to study it?

How does it relate to subject areas with which I am already familiar?

In this chapter we shall try to present some answers to these and similar questions. This should serve to establish a base and a perspective for our study of fluid mechanics. Before proceeding with the definition of a fluid, we digress for a moment with a few comments to students.

---

### 1-1 NOTE TO STUDENTS

In writing this book we have kept you, the student, uppermost in our minds; the book is written for you. It is our strong feeling that classroom time should *not* be devoted to a regurgitation of textbook material by the instructor. Instead, the time should be used to amplify the textbook material by discussing related material and applying basic principles to the solution of problems. This requires: (1) a clear, concise presentation of the fundamentals that you, the student, can read and understand, and (2) your willingness to read the text before going to class. We have assumed responsibility for meeting the first requirement. You must assume responsibility for satisfying the second requirement. There probably will be times when we fall short of these objectives. If so, we would appreciate hearing from you either directly (at [philip.pritchard@manhattan.edu](mailto:philip.pritchard@manhattan.edu)) or through your instructor.

It goes without saying that an introductory text is not all-inclusive. Your instructor undoubtedly will expand on the material presented, suggest alternative approaches to topics, and introduce additional new material. We encourage you to refer to the many other fluid mechanics textbooks and references available in the library and on the Web; where another text presents a particularly good discussion of a given topic, we shall refer to it directly.

We also encourage you to learn from your fellow students and from the graduate assistant(s) assigned to the course as well as from your instructor. We assume that you have had an introduction to thermodynamics (either in a basic physics course or

an introductory course in thermodynamics) and prior courses in statics, dynamics, and differential and integral calculus. No attempt will be made to restate this subject material; however, the pertinent aspects of this previous study will be reviewed briefly when appropriate.

It is our strong belief that one learns best by *doing*. This is true whether the subject under study is fluid mechanics, thermodynamics, or golf. The fundamentals in any of these are few, and mastery of them comes through practice. *Thus it is extremely important that you solve problems.* The numerous problems included at the end of each chapter provide the opportunity to practice applying fundamentals to the solution of problems. You should avoid the temptation to adopt a “plug and chug” approach to solving problems. Most of the problems are such that this approach simply will not work. In solving problems we strongly recommend that you proceed using the following logical steps:

1. State briefly and concisely (in your own words) the information given.
2. State the information to be found.
3. Draw a schematic of the system or control volume to be used in the analysis. Be sure to label the boundaries of the system or control volume and label appropriate coordinate directions.
4. Give the appropriate mathematical formulation of the *basic* laws that you consider necessary to solve the problem.
5. List the simplifying assumptions that you feel are appropriate in the problem.
6. Complete the analysis algebraically before substituting numerical values.
7. Substitute numerical values (using a consistent set of units) to obtain a numerical answer.
  - a. Reference the source of values for any physical properties.
  - b. Be sure the significant figures in the answer are consistent with the given data.
8. Check the answer and review the assumptions made in the solution to make sure they are reasonable.
9. Label the answer.

In your initial work this problem format may seem unnecessary and even long-winded. However, such an orderly approach to the solution of problems will reduce errors, save time, and permit a clearer understanding of the limitations of a particular solution. This approach also prepares you for communicating your solution method and results to others, as will often be necessary in your career. *This format is used in all example problems presented in this text*; answers to example problems are rounded to three significant figures.

Most engineering calculations involve measured values or physical property data. Every measured value has associated with it an experimental uncertainty. The uncertainty in a measurement can be reduced with care and by applying more precise measurement techniques, but cost and time needed to obtain data rise sharply as measurement precision is increased. Consequently, few engineering data are sufficiently precise to justify the use of more than three significant figures.

Not all measurements can be made to the same degree of accuracy and not all data are equally good; the validity of data should be documented before test results are used for design. A statement of the probable uncertainty of data is an important part of reporting experimental results completely and clearly. Analysis of uncertainty also is useful during experiment design. Careful study may indicate potential sources of unacceptable error and suggest improved measurement methods.

The principles of specifying the experimental uncertainty of a measurement and of estimating the uncertainty of a calculated result are reviewed in Appendix F.

*These should be understood thoroughly by anyone who performs laboratory work. We suggest you take time to review Appendix F before performing laboratory work or solving the homework problems at the end of this chapter.*


## 1-2 DEFINITION OF A FLUID

We already have a common-sense idea of when we are working with a fluid, as opposed to a solid: Fluids tend to flow when we interact with them (e.g., when you stir your morning coffee); solids tend to deform or bend (e.g., when you type on a keyboard, the springs under the keys compress). Engineers need a more formal and precise definition of a fluid: A *fluid* is a substance that deforms continuously under the application of a shear (tangential) stress no matter how small the shear stress may be.

Thus fluids comprise the liquid and gas (or vapor) phases of the physical forms in which matter exists. The distinction between a fluid and the solid state of matter is clear if you compare fluid and solid behavior. A solid deforms when a shear stress is applied, but its deformation does not continue to increase with time.

In Fig. 1.1 the deformations of a solid (Fig. 1.1a) and a fluid (Fig. 1.1b) under the action of a constant shear force are contrasted. In Fig. 1.1a the shear force is applied to the solid through the upper of two plates to which the solid has been bonded. When the shear force is applied to the plate, the block is deformed as shown. From our previous work in mechanics, we know that, provided the elastic limit of the solid material is not exceeded, the deformation is proportional to the applied shear stress,  $\tau = F/A$ , where  $A$  is the area of the surface in contact with the plate.

To repeat the experiment with a fluid between the plates, use a dye marker to outline a fluid element as shown by the solid lines (Fig. 1.1b). When the shear force,  $F$ , is applied to the upper plate, the deformation of the fluid element continues to increase as long as the force is applied. The fluid in direct contact with the solid boundary has the same velocity as the boundary itself; there is no slip at the boundary. This is an experimental fact based on numerous observations of fluid behavior.<sup>1</sup> The shape of the fluid element, at successive instants of time  $t_2 > t_1 > t_0$ , is shown (Fig. 1.1b) by the dashed lines, which represent the positions of the dye markers at successive times. Because the fluid motion continues under the application of a shear stress, we can also define a fluid as a substance that cannot sustain a shear stress when at rest.

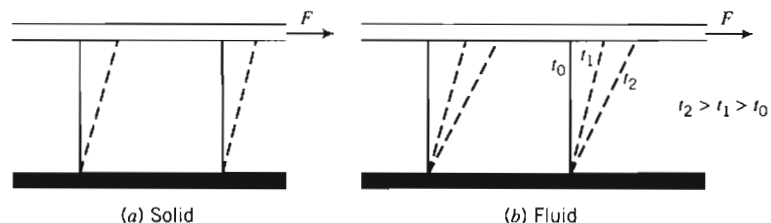

**Fig. 1.1** Behavior of a solid and a fluid, under the action of a constant shear force.

<sup>1</sup> The no-slip condition is demonstrated in the NCFMF video *Fundamentals of Boundary Layers*. A complete list of fluid mechanics video titles and sources is given in Appendix C.



---

**1-3 SCOPE OF FLUID MECHANICS**

Fluid mechanics deals with the behavior of fluids at rest and in motion. We might ask the question: “Why study fluid mechanics?”

Knowledge and understanding of the basic principles and concepts of fluid mechanics are essential to analyze any system in which a fluid is the working medium. We can give many examples. The design of virtually all means of transportation requires application of the principles of fluid mechanics. Included are subsonic and supersonic aircraft, surface ships, submarines, and automobiles. In recent years automobile manufacturers have given more consideration to aerodynamic design. This has been true for some time for the designers of both racing cars and boats. The design of propulsion systems for space flight as well as for toy rockets is based on the principles of fluid mechanics. The collapse of the Tacoma Narrows Bridge in 1940 is evidence of the possible consequences of neglecting the basic principles of fluid mechanics.<sup>2</sup> It is commonplace today to perform model studies to determine the aerodynamic forces on, and flow fields around, buildings and structures. These include studies of skyscrapers, baseball stadiums, smokestacks, and shopping plazas.

The design of all types of fluid machinery including pumps, fans, blowers, compressors, and turbines clearly requires knowledge of the basic principles of fluid mechanics. Lubrication is an application of considerable importance in fluid mechanics. Heating and ventilating systems for private homes and large office buildings and the design of pipeline systems are further examples of technical problem areas requiring knowledge of fluid mechanics. The circulatory system of the body is essentially a fluid system. It is not surprising that the design of blood substitutes, artificial hearts, heart-lung machines, breathing aids, and other such devices must rely on the basic principles of fluid mechanics.

Even some of our recreational endeavors are directly related to fluid mechanics. The slicing and hooking of golf balls can be explained by the principles of fluid mechanics (although they can be corrected only by a golf pro!).

This list of real-world applications of fluid mechanics could go on indefinitely. Our main point here is that fluid mechanics is not a subject studied for purely academic interest; rather, it is a subject with widespread importance both in our everyday experiences and in modern technology.

Clearly, we cannot hope to consider in detail even a small percentage of these and other specific problems of fluid mechanics. Instead, the purpose of this text is to present the basic laws and associated physical concepts that provide the basis or starting point in the analysis of any problem in fluid mechanics.

---

**1-4 BASIC EQUATIONS**

Analysis of any problem in fluid mechanics necessarily includes statement of the basic laws governing the fluid motion. The basic laws, which are applicable to any fluid, are:

<sup>2</sup> For dramatic evidence of aerodynamic forces in action, see the short video *Collapse of the Tacoma Narrows Bridge*.

1. The conservation of mass.
2. Newton's second law of motion.
3. The principle of angular momentum.
4. The first law of thermodynamics.
5. The second law of thermodynamics.

Not all basic laws are always required to solve any one problem. On the other hand, in many problems it is necessary to bring into the analysis additional relations that describe the behavior of physical properties of fluids under given conditions.

For example, you probably recall studying properties of gases in basic physics or thermodynamics. The *ideal gas* equation of state

$$p = \rho RT \quad (1.1)$$

is a model that relates density to pressure and temperature for many gases under normal conditions. In Eq. 1.1,  $R$  is the gas constant. Values of  $R$  are given in Appendix A for several common gases;  $p$  and  $T$  in Eq. 1.1 are the absolute pressure and absolute temperature, respectively;  $\rho$  is density (mass per unit volume). Example Problem 1.1 illustrates use of the ideal gas equation of state.

It is obvious that the basic laws with which we shall deal are the same as those used in mechanics and thermodynamics. Our task will be to formulate these laws in suitable forms to solve fluid flow problems and to apply them to a wide variety of situations.

We must emphasize that there are, as we shall see, many apparently simple problems in fluid mechanics that cannot be solved analytically. In such cases we must resort to more complicated numerical solutions and/or results of experimental tests.

---

## 1-5 METHODS OF ANALYSIS

The first step in solving a problem is to define the system that you are attempting to analyze. In basic mechanics, we made extensive use of the *free-body diagram*. We will use a *system* or a *control volume*, depending on the problem being studied. These concepts are identical to the ones you used in thermodynamics (except you may have called them *closed system* and *open system*, respectively). We can use either one to get mathematical expressions for each of the basic laws. In thermodynamics they were mostly used to obtain expressions for conservation of mass and the first and second laws of thermodynamics; in our study of fluid mechanics, we will be most interested in conservation of mass and Newton's second law of motion. In thermodynamics our focus was energy; in fluid mechanics it will mainly be forces and motion. We must always be aware of whether we are using a system or a control volume approach because each leads to different mathematical expressions of these laws. At this point we review the definitions of systems and control volumes.

### System and Control Volume

A *system* is defined as a fixed, identifiable quantity of mass; the system boundaries separate the system from the surroundings. The boundaries of the system may be fixed or movable; however, no mass crosses the system boundaries.

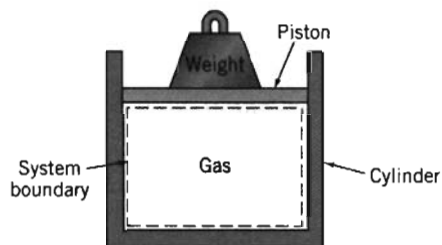


Fig. 1.2 Piston-cylinder assembly.

In the familiar piston-cylinder assembly from thermodynamics, Fig. 1.2, the gas in the cylinder is the system. If the gas is heated, the piston will lift the weight; the boundary of the system thus moves. Heat and work may cross the boundaries of the system, but the quantity of matter within the system boundaries remains fixed. No mass crosses the system boundaries.

### EXAMPLE 1.1 First Law Application to Closed System

A piston-cylinder device contains 0.95 kg of oxygen initially at a temperature of 27°C and a pressure due to the weight of 150 kPa (abs). Heat is added to the gas until it reaches a temperature of 627°C. Determine the amount of heat added during the process.

#### EXAMPLE PROBLEM 1.1

**GIVEN:** Piston-cylinder containing  $O_2$ ,  $m = 0.95$  kg.

$$T_1 = 27^\circ\text{C} \quad T_2 = 627^\circ\text{C}$$

**FIND:**  $Q_{1 \rightarrow 2}$ .

**SOLUTION:**

$$p = \text{constant} = 150 \text{ kPa (abs)}$$

We are dealing with a system,  $m = 0.95$  kg.

Governing equation: First law for the system,  $Q_{12} - W_{12} = E_2 - E_1$

Assumptions: (1)  $E = U$ , since the system is stationary  
(2) Ideal gas with constant specific heats

Under the above assumptions,

$$E_2 - E_1 = U_2 - U_1 = m(u_2 - u_1) = mc_v(T_2 - T_1)$$

The work done during the process is moving boundary work


$$W_{12} = \int_{V_1}^{V_2} p \, dV = p(V_2 - V_1)$$

For an ideal gas,  $pV = mRT$ . Hence  $W_{12} = mR(T_2 - T_1)$ . Then from the first law equation,

$$Q_{12} = E_2 - E_1 + W_{12} = mc_v(T_2 - T_1) + mR(T_2 - T_1)$$

$$Q_{12} = m(T_2 - T_1)(c_v + R)$$

$$Q_{12} = mc_p(T_2 - T_1) \quad \{R = c_p - c_v\}$$

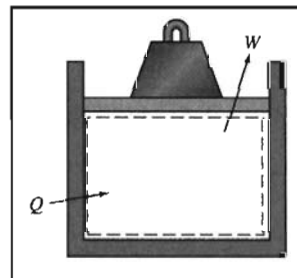

From the Appendix, Table A.6, for  $O_2$ ,  $c_p = 909.4 \text{ J/(kg} \cdot \text{K)}$ . Solving for  $Q_{12}$ , we obtain

$$Q_{12} = 0.95 \text{ kg} \times 909 \frac{\text{J}}{\text{kg} \cdot \text{K}} \times 600 \text{ K} = 518 \text{ kJ} \leftarrow Q_{12}$$

This problem:

- ✓ Was solved using the nine logical steps discussed earlier.
- ✓ Reviewed use of the ideal gas equation and the first law of thermodynamics for a system.

In mechanics courses you used the free-body diagram (system approach) extensively. This was logical because you were dealing with an easily identifiable rigid body. However, in fluid mechanics we normally are concerned with the flow of fluids through devices such as compressors, turbines, pipelines, nozzles, and so on. In these cases it is difficult to focus attention on a fixed identifiable quantity of mass. It is much more convenient, for analysis, to focus attention on a volume in space through which the fluid flows. Consequently, we use the control volume approach.

A *control volume* is an arbitrary volume in space through which fluid flows. The geometric boundary of the control volume is called the control surface. The control surface may be real or imaginary; it may be at rest or in motion. Figure 1.3 shows flow through a pipe junction, with a control surface drawn on it. Note that some regions of the surface correspond to physical boundaries (the walls of the pipe) and others (at locations ①, ②, and ③) are parts of the surface that are imaginary (inlets or outlets). For the control volume defined by this surface, we could write equations for the basic laws and obtain results such as the flow rate at outlet ③ given the flow rates at inlet ① and outlet ② (similar to a problem we will analyze in Example Problem 4.1 in Chapter 4), the force required to hold the junction in place, and so on.

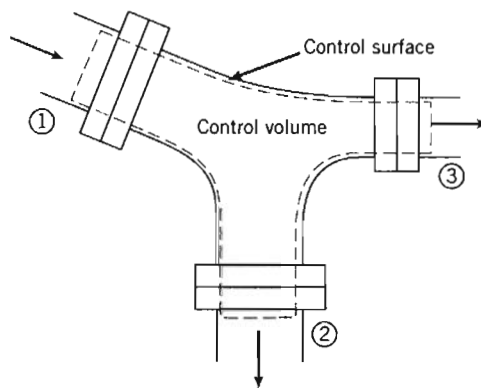


Fig. 1.3 Fluid flow through a pipe junction.

It is always important to take care in selecting a control volume, as the choice has a big effect on the mathematical form of the basic laws.

### Differential versus Integral Approach

The basic laws that we apply in our study of fluid mechanics can be formulated in terms of *infinitesimal* or *finite* systems and control volumes. As you might suspect, the equations will look different in the two cases. Both approaches are important in the study of fluid mechanics and both will be developed in the course of our work.

In the first case the resulting equations are differential equations. Solution of the differential equations of motion provides a means of determining the detailed behavior of the flow. An example might be the pressure distribution on a wing surface.

Frequently the information sought does not require a detailed knowledge of the flow. We often are interested in the gross behavior of a device; in such cases it is more appropriate to use integral formulations of the basic laws. An example might be the overall lift a wing produces. Integral formulations, using finite systems or control volumes, usually are easier to treat analytically. The basic laws of mechanics and thermodynamics, formulated in terms of finite systems, are the basis for deriving the control volume equations in Chapter 4.

### Methods of Description

Mechanics deals almost exclusively with systems; you have made extensive use of the basic equations applied to a fixed, identifiable quantity of mass. On the other hand, attempting to analyze thermodynamic devices, you often found it necessary to use a control volume (open system) analysis. Clearly, the type of analysis depends on the problem.

Where it is easy to keep track of identifiable elements of mass (e.g., in particle mechanics), we use a method of description that follows the particle. This sometimes is referred to as the *Lagrangian* method of description.

Consider, for example, the application of Newton's second law to a particle of fixed mass. Mathematically, we can write Newton's second law for a system of mass  $m$  as

$$\Sigma \vec{F} = m\vec{a} = m \frac{d\vec{V}}{dt} = m \frac{d^2\vec{r}}{dt^2} \quad (1.2)$$

In Eq. 1.2,  $\Sigma \vec{F}$  is the sum of all external forces acting on the system,  $\vec{a}$  is the acceleration of the center of mass of the system,  $\vec{V}$  is the velocity of the center of mass of the system, and  $\vec{r}$  is the position vector of the center of mass of the system relative to a fixed coordinate system.

### EXAMPLE 1.2 Free-Fall of Ball in Air


The air resistance (drag force) on a 200 g ball in free flight is given by  $F_D = 2 \times 10^{-4} V^2$ , where  $F_D$  is in newtons and  $V$  is in meters per second. If the ball is dropped from rest 500 m above the ground, determine the speed at which it hits the ground. What percentage of the terminal speed is the result? (The *terminal speed* is the steady speed a falling body eventually attains.)

**EXAMPLE PROBLEM 1.2**

**GIVEN:** Ball,  $m = 0.2$  kg, released from rest at  $y_0 = 500$  m  
 Air resistance,  $F_D = kV^2$ , where  $k = 2 \times 10^{-4} \text{ N} \cdot \text{s}^2/\text{m}^2$

Units:  $F_D(\text{N})$ ,  $V(\text{m/s})$

**FIND:** (a) Speed at which the ball hits the ground.  
 (b) Ratio of speed to terminal speed.

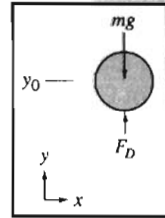**SOLUTION:**

Governing equation:  $\Sigma \vec{F} = m\vec{a}$

Assumption: (1) Neglect buoyancy force.

The motion of the ball is governed by the equation

$$\Sigma F_y = ma_y = m \frac{dV}{dt}$$

Since  $V = V(y)$ , we write  $\Sigma F_y = m \frac{dV}{dy} \frac{dy}{dt} = mV \frac{dV}{dy}$  Then,

$$\Sigma F_y = F_D - mg = kV^2 - mg = mV \frac{dV}{dy}$$

Separating variables and integrating,

$$\int_{y_0}^y dy = \int_0^V \frac{mV dV}{kV^2 - mg}$$

$$y - y_0 = \left[ \frac{m}{2k} \ln(kV^2 - mg) \right]_0^V = \frac{m}{2k} \ln \frac{kV^2 - mg}{-mg}$$

Taking antilogarithms, we obtain

$$kV^2 - mg = -mg e^{\left[\frac{2k}{m}(y-y_0)\right]}$$

Solving for  $V$  gives

$$V = \left\{ \frac{mg}{k} \left( 1 - e^{\left[\frac{2k}{m}(y-y_0)\right]} \right) \right\}^{1/2}$$

Substituting numerical values with  $y = 0$  yields

$$V = \left\{ 0.2 \text{ kg} \times 9.81 \frac{\text{m}}{\text{s}^2} \times \frac{\text{m}^2}{2 \times 10^{-4} \text{ N} \cdot \text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \left( 1 - e^{\left[\frac{2 \times 2 \times 10^{-4}}{0.2}(-500)\right]} \right) \right\}^{1/2}$$

$$V = 78.7 \text{ m/s}$$

V

At terminal speed,  $a_y = 0$  and  $\sum F_y = 0 = kV_t^2 - mg$

$$\text{Then, } V_t = \left[ \frac{mg}{k} \right]^{1/2} = \left[ 0.2 \text{ kg} \times 9.81 \frac{\text{m}}{\text{s}^2} \times \frac{\text{m}^2}{2 \times 10^{-4} \text{ N} \cdot \text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \right]^{1/2} = 99.0 \text{ m/s.}$$

The ratio of actual speed to terminal speed is

$$\frac{V}{V_t} = \frac{78.7}{99.0} = 0.795, \text{ or } 79.5\% \quad \longleftarrow \frac{V}{V_t}$$

This problem:

- ✓ Reviewed the methods used in particle mechanics.
- ✓ Introduced a variable aerodynamic drag force.



Try the *Excel* workbook for this Example Problem for variations on this problem.

We could use this Lagrangian approach to analyze a fluid flow by assuming the fluid to be composed of a very large number of particles whose motion must be described. However, keeping track of the motion of each fluid particle would become a horrendous bookkeeping problem. Consequently, a particle description becomes unmanageable. Often we find it convenient to use a different type of description. Particularly with control volume analyses, it is convenient to use the field, or *Eulerian*, method of description, which focuses attention on the properties of a flow at a given point in space as a function of time. In the Eulerian method of description, the properties of a flow field are described as functions of space coordinates and time. We shall see in Chapter 2 that this method of description is a logical outgrowth of the assumption that fluids may be treated as continuous media.

## 1-6 DIMENSIONS AND UNITS

Engineering problems are solved to answer specific questions. It goes without saying that the answer must include units. In 1999, NASA's Mars Pathfinder crashed because the JPL engineers assumed that a measurement was in meters, but the supplying company's engineers had actually made the measurement in feet! Consequently, it is appropriate to present a brief review of dimensions and units. We say "review" because the topic is familiar from your earlier work in mechanics.

We refer to physical quantities such as length, time, mass, and temperature as *dimensions*. In terms of a particular system of dimensions, all measurable quantities are subdivided into two groups—*primary* quantities and *secondary* quantities. We refer to a small group of dimensions from which all others can be formed as primary quantities, for which we set up arbitrary scales of measure. Secondary quantities are

those quantities whose dimensions are expressible in terms of the dimensions of the primary quantities.

*Units* are the arbitrary names (and magnitudes) assigned to the primary dimensions adopted as standards for measurement. For example, the primary dimension of length may be measured in units of meters, feet, yards, or miles. These units of length are related to each other through unit conversion factors (1 mile = 5280 feet = 1609 meters).

### Systems of Dimensions

Any valid equation that relates physical quantities must be dimensionally homogeneous; each term in the equation must have the same dimensions. We recognize that Newton's second law ( $\vec{F} \propto m\vec{a}$ ) relates the four dimensions,  $F$ ,  $M$ ,  $L$ , and  $t$ . Thus force and mass cannot both be selected as primary dimensions without introducing a constant of proportionality that has dimensions (and units).

Length and time are primary dimensions in all dimensional systems in common use. In some systems, mass is taken as a primary dimension. In others, force is selected as a primary dimension; a third system chooses both force and mass as primary dimensions. Thus we have three basic systems of dimensions, corresponding to the different ways of specifying the primary dimensions.

- a. Mass [ $M$ ], length [ $L$ ], time [ $t$ ], temperature [ $T$ ].
- b. Force [ $F$ ], length [ $L$ ], time [ $t$ ], temperature [ $T$ ].
- c. Force [ $F$ ], mass [ $M$ ], length [ $L$ ], time [ $t$ ], temperature [ $T$ ].

In system *a*, force [ $F$ ] is a secondary dimension and the constant of proportionality in Newton's second law is dimensionless. In system *b*, mass [ $M$ ] is a secondary dimension, and again the constant of proportionality in Newton's second law is dimensionless. In system *c*, both force [ $F$ ] and mass [ $M$ ] have been selected as primary dimensions. In this case the constant of proportionality,  $g_c$ , (not to be confused with  $g$ , the acceleration of gravity!) in Newton's second law (written  $\vec{F} = m\vec{a}/g_c$ ) is not dimensionless. The dimensions of  $g_c$  must in fact be  $[ML/Ft^2]$  for the equation to be dimensionally homogeneous. The numerical value of the constant of proportionality depends on the units of measure chosen for each of the primary quantities.

### Systems of Units

There is more than one way to select the unit of measure for each primary dimension. We shall present only the more common engineering systems of units for each of the basic systems of dimensions.

#### a. MLtT

SI, which is the official abbreviation in all languages for the *Système International d'Unités*,<sup>3</sup> is an extension and refinement of the traditional metric system. More than 30 countries have declared it to be the only legally accepted system.

<sup>3</sup> American Society for Testing and Materials, *ASTM Standard for Metric Practice*, E380-97. Conshohocken, PA: ASTM, 1997.





In the SI system of units, the unit of mass is the kilogram (kg), the unit of length is the meter (m), the unit of time is the second (s), and the unit of temperature is the kelvin (K). Force is a secondary dimension, and its unit, the newton (N), is defined from Newton's second law as

$$1 \text{ N} \equiv 1 \text{ kg} \cdot \text{m/s}^2$$

In the Absolute Metric system of units, the unit of mass is the gram, the unit of length is the centimeter, the unit of time is the second, and the unit of temperature is the kelvin. Since force is a secondary dimension, the unit of force, the dyne, is defined in terms of Newton's second law as

$$1 \text{ dyne} \equiv 1 \text{ g} \cdot \text{cm/s}^2$$

#### b. FLtT

In the British Gravitational system of units, the unit of force is the pound (lbf), the unit of length is the foot (ft), the unit of time is the second, and the unit of temperature is the degree Rankine ( $^{\circ}\text{R}$ ). Since mass is a secondary dimension, the unit of mass, the slug, is defined in terms of Newton's second law as

$$1 \text{ slug} \equiv 1 \text{ lbf} \cdot \text{s}^2/\text{ft}$$

#### c. FMLtT

In the English Engineering system of units, the unit of force is the pound force (lbf), the unit of mass is the pound mass (lbm), the unit of length is the foot, the unit of time is the second, and the unit of temperature is the degree Rankine. Since both force and mass are chosen as primary dimensions, Newton's second law is written as

$$\vec{F} = \frac{m\vec{a}}{g_c}$$

A force of one pound (1 lbf) is the force that gives a pound mass (1 lbm) an acceleration equal to the standard acceleration of gravity on Earth,  $32.2 \text{ ft/s}^2$ . From Newton's second law we see that

$$1 \text{ lbf} \equiv \frac{1 \text{ lbm} \times 32.2 \text{ ft/s}^2}{g_c}$$

or

$$g_c \equiv 32.2 \text{ ft} \cdot \text{lbm}/(\text{lbf} \cdot \text{s}^2)$$

The constant of proportionality,  $g_c$ , has both dimensions and units. The dimensions arose because we selected both force and mass as primary dimensions; the units (and the numerical value) are a consequence of our choices for the standards of measurement.

Since a force of 1 lbf accelerates 1 lbm at  $32.2 \text{ ft/s}^2$ , it would accelerate  $32.2 \text{ lbm}$  at  $1 \text{ ft/s}^2$ . A slug also is accelerated at  $1 \text{ ft/s}^2$  by a force of 1 lbf. Therefore,

$$1 \text{ slug} \equiv 32.2 \text{ lbm}$$

Many textbooks and references use lb instead of lbf or lbm, leaving it up to the reader to determine from the context whether a force or mass is being referred to.

## Preferred Systems of Units

In this text we shall use both the *SI* and the *British Gravitational* systems of units. In either case, the constant of proportionality in Newton's second law is dimensionless and has a value of unity. Consequently, Newton's second law is written as  $\vec{F} = m\vec{a}$ . In these systems, it follows that the gravitational force (the "weight"<sup>4</sup>) on an object of mass  $m$  is given by  $W = mg$ .

SI units and prefixes, together with other defined units and useful conversion factors, are summarized in Appendix G.

---

## 1-7 SUMMARY

In this chapter we introduced or reviewed a number of basic concepts and definitions, including:

- ✓ How fluids are defined, and the no-slip condition.
- ✓ System/Control Volume concepts.
- ✓ Lagrangian & Eulerian descriptions.
- ✓ Units and dimensions (including SI, British Gravitational, and English Engineering systems).
- ✓ Experimental uncertainty.

We also briefly discussed the five basic laws (three from mechanics and two from thermodynamics) governing the motion of fluids.

---

## PROBLEMS

- 1.1 A number of common substances are

Tar	Sand
"Silly Putty"	Jello
Modeling clay	Toothpaste
Wax	Shaving cream

Some of these materials exhibit characteristics of both solid and fluid behavior under different conditions. Explain and give examples.

- 1.2 Give a word statement of each of the five basic conservation laws stated in Section 1-4, as they apply to a system.
- 1.3 Discuss the physics of skipping a stone across the water surface of a lake. Compare these mechanisms with a stone as it bounces after being thrown along a roadway.
- 1.4 The barrel of a bicycle tire pump becomes quite warm during use. Explain the mechanisms responsible for the temperature increase.
- 1.5 A tank of compressed oxygen for flame cutting is to contain 15 kg of oxygen at a pressure of 10 MPa (the temperature is 35°C). How large must be the tank volume? What is the diameter of a sphere with this volume?

<sup>4</sup>Note that in the English Engineering system, the weight of an object is given by  $W = mg/g_c$ .

- 1.6 Make a guess at the order of magnitude of the mass (e.g., 0.01, 0.1, 1.0, 10, 100, or 1000 lbm or kg) of standard air that is in a room 10 ft by 10 ft by 8 ft, and then compute this mass in lbm and kg to see how close your estimate was.
- 1.7 A tank of compressed nitrogen for industrial process use is a cylinder with 6 in. diameter and 4.25 ft length. The gas pressure is 204 atmospheres (gage). Calculate the mass of nitrogen in the tank.
- 1.8 Calculate the density of standard air in a laboratory from the ideal gas equation of state. Estimate the experimental uncertainty in the air density calculated for standard conditions (29.9 in. of mercury and 59°F) if the uncertainty in measuring the barometer height is  $\pm 0.1$  in. of mercury and the uncertainty in measuring temperature is  $\pm 0.5^\circ\text{F}$ . (Note that 29.9 in. of mercury corresponds to 14.7 psia.)
- 1.9 Repeat the calculation of uncertainty described in Problem 1.8 for air in a freezer. Assume the measured barometer height is  $759 \pm 1$  mm of mercury and the temperature is  $-20 \pm 0.5^\circ\text{C}$ . [Note that 759 mm of mercury corresponds to 101 kPa (abs).]
- 1.10 The mass of the standard American golf ball is  $1.62 \pm 0.01$  oz and its mean diameter is  $1.68 \pm 0.01$  in. Determine the density and specific gravity of the American golf ball. Estimate the uncertainties in the calculated values.
- 1.11 The mass flow rate in a water flow system determined by collecting the discharge over a timed interval is 0.2 kg/s. The scales used can be read to the nearest 0.05 kg and the stopwatch is accurate to 0.2 s. Estimate the precision with which the flow rate can be calculated for time intervals of (a) 10 s and (b) 1 min.
- 1.12 A can of pet food has the following internal dimensions: 102 mm height and 73 mm diameter (each  $\pm 1$  mm at odds of 20 to 1). The label lists the mass of the contents as 397 g. Evaluate the magnitude and estimated uncertainty of the density of the pet food if the mass value is accurate to  $\pm 1$  g at the same odds.
- 1.13 The mass of the standard British golf ball is  $45.9 \pm 0.3$  g and its mean diameter is  $41.1 \pm 0.3$  mm. Determine the density and specific gravity of the British golf ball. Estimate the uncertainties in the calculated values.
- 1.14 The mass flow rate of water in a tube is measured using a beaker to catch water during a timed interval. The nominal mass flow rate is 100 g/s. Assume that mass is measured using a balance with a least count of 1 g and a maximum capacity of 1 kg, and that the timer has a least count of 0.1 s. Estimate the time intervals and uncertainties in measured mass flow rate that would result from using 100, 500, and 1000 mL beakers. Would there be any advantage in using the largest beaker? Assume the tare mass of the empty 1000 mL beaker is 500 g.
- 1.15 The estimated dimensions of a soda can are  $D = 66.0 \pm 0.5$  mm and  $H = 110 \pm 0.5$  mm. Measure the mass of a full can and an empty can using a kitchen scale or postal scale. Estimate the volume of soda contained in the can. From your measurements estimate the depth to which the can is filled and the uncertainty in the estimate. Assume the value of SG = 1.055, as supplied by the bottler.
- 1.16 From Appendix A, the viscosity  $\mu$  ( $\text{N} \cdot \text{s}/\text{m}^2$ ) of water at temperature  $T$  (K) can be computed from  $\mu = A10^{B/(T-C)}$ , where  $A = 2.414 \times 10^{-5} \text{ N} \cdot \text{s}/\text{m}^2$ ,  $B = 247.8 \text{ K}$ , and  $C = 140 \text{ K}$ . Determine the viscosity of water at  $20^\circ\text{C}$ , and estimate its uncertainty if the uncertainty in temperature measurement is  $\pm 0.25^\circ\text{C}$ .
- 1.17 An enthusiast magazine publishes data from its road tests on the lateral acceleration capability of cars. The measurements are made using a 150 ft diameter skid pad. Assume the vehicle path deviates from the circle by  $\pm 2$  ft and that the vehicle speed is read from a fifth-wheel speed-measuring system to  $\pm 0.5$  mph. Estimate the experimental uncertainty in a reported lateral acceleration of 0.7 g. How would you improve the experimental procedure to reduce the uncertainty?

- 1.18 Using the nominal dimensions of the soda can given in Problem 1.15, determine the precision with which the diameter and height must be measured to estimate the volume of the can within an uncertainty of  $\pm 0.5$  percent.
- 1.19 An American golf ball is described in Problem 1.10 Assuming the measured mass and its uncertainty as given, determine the precision to which the diameter of the ball must be measured so the density of the ball may be estimated within an uncertainty of  $\pm 1$  percent.
- 1.20 The height of a building may be estimated by measuring the horizontal distance to a point on the ground and the angle from this point to the top of the building. Assuming these measurements are  $L = 100 \pm 0.5$  ft and  $\theta = 30 \pm 0.2$  degrees, estimate the height  $H$  of the building and the uncertainty in the estimate. For the same building height and measurement uncertainties, use *Excel's Solver* to determine the angle (and the corresponding distance from the building) at which measurements should be made to minimize the uncertainty in estimated height. Evaluate and plot the optimum measurement angle as a function of building height for  $50 \leq H \leq 1000$  ft.
- 1.21 In the design of a medical instrument it is desired to dispense 1 cubic millimeter of liquid using a piston-cylinder syringe made from molded plastic. The molding operation produces plastic parts with estimated dimensional uncertainties of  $\pm 0.002$  in. Estimate the uncertainty in dispensed volume that results from the uncertainties in the dimensions of the device. Plot on the same graph the uncertainty in length, diameter, and volume dispensed as a function of cylinder diameter  $D$  from  $D = 0.5$  to 2 mm. Determine the ratio of stroke length to bore diameter that gives a design with minimum uncertainty in volume dispensed. Is the result influenced by the magnitude of the dimensional uncertainty?
- 1.22 Very small particles moving in fluids are known to experience a drag force proportional to speed. Consider a particle of net weight  $W$  dropped in a fluid. The particle experiences a drag force,  $F_D = kV$ , where  $V$  is the particle speed. Determine the time required for the particle to accelerate from rest to 95 percent of its terminal speed,  $V_t$ , in terms of  $k$ ,  $W$ , and  $g$ .
- 1.23 Consider again the small particle of Problem 1.22. Express the distance required to reach 95 percent of its terminal speed in terms of  $g$ ,  $k$ , and  $W$ .
- 1.24 For a small particle of aluminum (spherical, with diameter  $d = 0.025$  mm) falling in standard air at speed  $V$ , the drag is given by  $F_D = 3\pi\mu Vd$ , where  $\mu$  is the air viscosity. Find the maximum speed starting from rest, and the time it takes to reach 95% of this speed. Plot the speed as a function of time.
- 1.25 For small spherical water droplets, diameter  $d$ , falling in standard air at speed  $V$ , the drag is given by  $F_D = 3\pi\mu Vd$ , where  $\mu$  is the air viscosity. Determine the diameter  $d$  of droplets that take 1 second to fall from rest a distance of 1 m. (Use *Excel's Goal Seek*.)
- 1.26 A sky diver with a mass of 75 kg jumps from an aircraft. The aerodynamic drag force acting on the sky diver is known to be  $F_D = kV^2$ , where  $k = 0.228 \text{ N} \cdot \text{s}^2/\text{m}^2$ . Determine the maximum speed of free fall for the sky diver and the speed reached after 100 m of fall. Plot the speed of the sky diver as a function of time and as a function of distance fallen.
- 1.27 The English perfected the longbow as a weapon after the Medieval period. In the hands of a skilled archer, the longbow was reputed to be accurate at ranges to 100 meters or more. If the maximum altitude of an arrow is less than  $h = 10$  m while traveling to a target 100 m away from the archer, and neglecting air resistance, estimate the speed and angle at which the arrow must leave the bow. Plot the required release speed and angle as a function of height  $h$ .
- 1.28 For each quantity listed, indicate dimensions using the *MLIT* system of dimensions, and give typical SI and English units:
- |                           |                      |
|---------------------------|----------------------|
| (a) Power                 | (b) Pressure         |
| (c) Modulus of elasticity | (d) Angular velocity |

- (e) Energy (f) Momentum  
 (g) Shear stress (h) Specific heat  
 (i) Thermal expansion coefficient (j) Angular momentum
- 1.29 For each quantity listed, indicate dimensions using the *FLiT* system of dimensions, and give typical SI and English units:
- (a) Power (b) Pressure  
 (c) Modulus of elasticity (d) Angular velocity  
 (e) Energy (f) Moment of a force  
 (g) Momentum (h) Shear stress  
 (i) Strain (j) Angular momentum
- 1.30 Derive the following conversion factors:
- (a) Convert a pressure of 1 psi to kPa.  
 (b) Convert a volume of 1 liter to gallons.  
 (c) Convert a viscosity of 1 lbf · s/ft<sup>2</sup> to N · s/m<sup>2</sup>.
- 1.31 Derive the following conversion factors:
- (a) Convert a viscosity of 1 m<sup>2</sup>/s to ft<sup>2</sup>/s.  
 (b) Convert a power of 100 W to horsepower.  
 (c) Convert a specific energy of 1 kJ/kg to Btu/lbm.
- 1.32 The density of mercury is given as 26.3 slug/ft<sup>3</sup>. Calculate the specific gravity and the specific volume in m<sup>3</sup>/kg of the mercury. Calculate the specific weight in lbf/ft<sup>3</sup> on Earth and on the moon. Acceleration of gravity on the moon is 5.47 ft/s<sup>2</sup>.
- 1.33 Derive the following conversion factors:
- (a) Convert a volume flow rate in in.<sup>3</sup>/min to mm<sup>3</sup>/s.  
 (b) Convert a volume flow rate in cubic meters per second to gpm (gallons per minute).  
 (c) Convert a volume flow rate in liters per minute to gpm (gallons per minute).  
 (d) Convert a volume flow rate of air in standard cubic feet per minute (SCFM) to cubic meters per hour. A standard cubic foot of gas occupies one cubic foot at standard temperature and pressure ( $T = 15^\circ\text{C}$  and  $p = 101.3$  kPa absolute).
- 1.34 The kilogram force is commonly used in Europe as a unit of force. (As in the U.S. customary system, where 1 lbf is the force exerted by a mass of 1 lbm in standard gravity, 1 kgf is the force exerted by a mass of 1 kg in standard gravity.) Moderate pressures, such as those for auto or truck tires, are conveniently expressed in units of kgf/cm<sup>2</sup>. Convert 32 psig to these units.
- 1.35 Sometimes “engineering” equations are used in which units are present in an inconsistent manner. For example, a parameter that is often used in describing pump performance is the specific speed,  $N_{s_{cu}}$ , given by

$$N_{s_{cu}} = \frac{N(\text{rpm})[Q(\text{gpm})]^{1/2}}{[H(\text{ft})]^{3/4}}$$

What are the units of specific speed? A particular pump has a specific speed of 2000. What will be the specific speed in SI units (angular velocity in rad/s)?

- 1.36 A particular pump has an “engineering” equation form of the performance characteristic equation given by  $H(\text{ft}) = 1.5 - 4.5 \times 10^{-5} [Q(\text{gpm})]^2$ , relating the head  $H$  and flow rate  $Q$ . What are the units of the coefficients 1.5 and  $4.5 \times 10^{-5}$ ? Derive an SI version of this equation.
- 1.37 A container weighs 3.5 lbf when empty. When filled with water at 90°F, the mass of the container and its contents is 2.5 slug. Find the weight of water in the container, and its volume in cubic feet, using data from Appendix A.

---

## Chapter 2

# FUNDAMENTAL CONCEPTS

In Chapter 1 we discussed in general terms what fluid mechanics is about, and described some of the approaches we will use in analyzing fluid mechanics problems. In this chapter we will be more specific in defining some important properties of fluids, and ways in which flows can be described and characterized.

---

### 2-1 FLUID AS A CONTINUUM

We are all familiar with fluids—the most common being air and water—and we experience them as being “smooth,” i.e., as being a continuous medium. Unless we use specialized equipment, we are not aware of the underlying molecular nature of fluids. This molecular structure is one in which the mass is *not* continuously distributed in space, but is concentrated in molecules that are separated by relatively large regions of empty space. In this section we will discuss under what circumstances a fluid can be treated as a *continuum*, for which, by definition, properties vary smoothly from point to point.

The concept of a continuum is the basis of classical fluid mechanics. The continuum assumption is valid in treating the behavior of fluids under normal conditions. It only breaks down when the mean free path of the molecules<sup>1</sup> becomes the same order of magnitude as the smallest significant characteristic dimension of the problem. This occurs in such specialized problems as rarefied gas flow (e.g., as encountered in flights into the upper reaches of the atmosphere). For these specialized cases (not covered in this text) we must abandon the concept of a continuum in favor of the microscopic and statistical points of view.

As a consequence of the continuum assumption, each fluid property is assumed to have a definite value at every point in space. Thus fluid properties such as density, temperature, velocity, and so on, are considered to be continuous functions of position and time.

To illustrate the concept of a property at a point, consider how we determine the density at a point. A region of fluid is shown in Fig. 2.1. We are interested in determining the density at the point *C*, whose coordinates are  $x_0$ ,  $y_0$ , and  $z_0$ . Density is defined as mass per unit volume. Thus the average density in volume  $\mathcal{V}$  is given by  $\rho = m/\mathcal{V}$ . In general, because the density of the fluid may not be uniform, this will not be equal to the value of the density at point *C*. To determine the density at point *C*, we must

<sup>1</sup> Approximately  $6 \times 10^{-8}$  m at STP (Standard Temperature and Pressure) for gas molecules that show ideal gas behavior [1]. STP for air are 15°C (59°F) and 101.3 kPa absolute (14.696 psia), respectively.

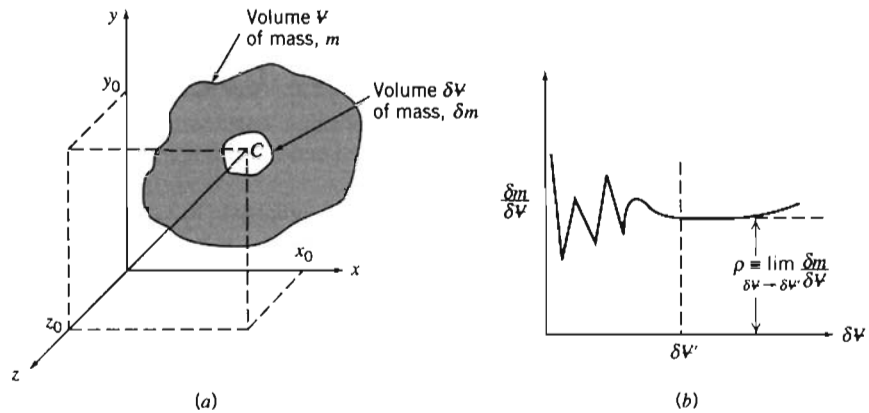


Fig. 2.1 Definition of density at a point.

select a small volume,  $\delta V$ , surrounding point  $C$  and then determine the ratio  $\delta m/\delta V$ . The question is, how small can we make the volume  $\delta V$ ? We can answer this question by plotting the ratio  $\delta m/\delta V$ , and allowing the volume to shrink continuously in size. Assuming that volume  $\delta V$  is initially relatively large (but still small compared with the volume,  $V$ ) a typical plot of  $\delta m/\delta V$  might appear as in Fig. 2.1*b*. In other words,  $\delta V$  must be sufficiently large to yield a meaningful, reproducible value for the density at a location and yet small enough to be called a point. The average density tends to approach an asymptotic value as the volume is shrunk to enclose only homogeneous fluid in the immediate neighborhood of point  $C$ . If  $\delta V$  becomes so small that it contains only a small number of molecules, it becomes impossible to fix a definite value for  $\delta m/\delta V$ ; the value will vary erratically as molecules cross into and out of the volume. Thus there is a lower limiting value of  $\delta V$ , designated  $\delta V'$  in Fig. 2.1*b*, allowable for use in defining fluid density at a point.<sup>2</sup> The density at a “point” is then defined as

$$\rho \equiv \lim_{\delta V \rightarrow \delta V'} \frac{\delta m}{\delta V} \quad (2.1)$$

Since point  $C$  was arbitrary, the density at any other point in the fluid could be determined in the same manner. If density was measured simultaneously at an infinite number of points in the fluid, we would obtain an expression for the density distribution as a function of the space coordinates,  $\rho = \rho(x, y, z)$ , at the given instant.

The density at a point may also vary with time (as a result of work done on or by the fluid and/or heat transfer to the fluid). Thus the complete representation of density (the *field* representation) is given by

$$\rho = \rho(x, y, z, t) \quad (2.2)$$

Since density is a scalar quantity, requiring only the specification of a magnitude for a complete description, the field represented by Eq. 2.2 is a scalar field.

The density of a liquid or solid may also be expressed in dimensionless form as the *specific gravity*,  $SG$ , defined as the ratio of material density to the maximum

<sup>2</sup> The volume  $\delta V'$  is extremely small. For example, a  $0.1 \text{ mm} \times 0.1 \text{ mm} \times 0.1 \text{ mm}$  cube of air (about the size of a grain of sand) at STP conditions contains about  $2.5 \times 10^{13}$  molecules. This is a large enough number to ensure that even though many molecules may enter and leave, the average mass within the cube does not fluctuate. For most purposes a cube this size can be considered “a point.”

density of water, which is  $1000 \text{ kg/m}^3$  at  $4^\circ\text{C}$  ( $1.94 \text{ slug/ft}^3$  at  $39^\circ\text{F}$ ). For example, the SG of mercury is typically 13.6—mercury is 13.6 times as dense as water. Appendix A contains specific gravity data for selected engineering materials. The specific gravity of liquids is a function of temperature; for most liquids specific gravity decreases with increasing temperature.

*Specific weight*,  $\gamma$ , is defined as weight per unit volume; weight is mass times acceleration of gravity, and density is mass per unit volume, hence  $\gamma \equiv \rho g$ . For example, the specific weight of water is approximately  $9.81 \text{ kN/m}^3$  ( $62.4 \text{ lbf/ft}^3$ ).

## 2-2 VELOCITY FIELD

In the previous section we saw that the continuum assumption led directly to the notion of the density field. Other fluid properties also may be described by fields.

In dealing with fluids in motion, we shall be concerned with the description of a velocity field. Refer again to Fig. 2.1a. Define the fluid velocity at point  $C$  as the instantaneous velocity of the center of the volume,  $\delta V'$ , instantaneously surrounding point  $C$ . If we define a *fluid particle* as a small mass of fluid of fixed identity of volume  $\delta V'$ , then the velocity at point  $C$  is defined as the instantaneous velocity of the fluid particle which, at a given instant, is passing through point  $C$ . The velocity at any point in the flow field is defined similarly. At a given instant the velocity field,  $\vec{V}$ , is a function of the space coordinates  $x$ ,  $y$ ,  $z$ . The velocity at any point in the flow field might vary from one instant to another. Thus the complete representation of velocity (the velocity field) is given by

$$\vec{V} = \vec{V}(x, y, z, t) \quad (2.3)$$

Velocity is a vector quantity, requiring a magnitude and direction for a complete description, so the velocity field (Eq. 2.3) is a vector field.

The velocity vector,  $\vec{V}$ , also can be written in terms of its three scalar components. Denoting the components in the  $x$ ,  $y$ , and  $z$  directions by  $u$ ,  $v$ , and  $w$ , then

$$\vec{V} = u\hat{i} + v\hat{j} + w\hat{k} \quad (2.4)$$

In general, each component,  $u$ ,  $v$ , and  $w$ , will be a function of  $x$ ,  $y$ ,  $z$ , and  $t$ .

If properties at every point in a flow field do not change with time, the flow is termed *steady*. Stated mathematically, the definition of steady flow is

$$\frac{\partial \eta}{\partial t} = 0$$

where  $\eta$  represents any fluid property. Hence, for steady flow,

$$\frac{\partial \rho}{\partial t} = 0 \quad \text{or} \quad \rho = \rho(x, y, z)$$

and

$$\frac{\partial \vec{V}}{\partial t} = 0 \quad \text{or} \quad \vec{V} = \vec{V}(x, y, z)$$



In steady flow, any property may vary from point to point in the field, but all properties remain constant with time at every point.

### One-, Two-, and Three-Dimensional Flows

A flow is classified as one-, two-, or three-dimensional depending on the number of space coordinates required to specify the velocity field.<sup>3</sup> Equation 2.3 indicates that the velocity field may be a function of three space coordinates and time. Such a flow field is termed *three-dimensional* (it is also *unsteady*) because the velocity at any point in the flow field depends on the three coordinates required to locate the point in space.

Although most flow fields are inherently three-dimensional, analysis based on fewer dimensions is frequently meaningful. Consider, for example, the steady flow through a long straight pipe that has a divergent section, as shown in Fig. 2.2. In this example, we are using cylindrical coordinates  $(r, \theta, x)$ . We will learn (in Chapter 8) that under certain circumstances (e.g., far from the entrance of the pipe and from the divergent section, where the flow can be quite complicated), the velocity distribution may be described by

$$u = u_{\max} \left[ 1 - \left( \frac{r}{R} \right)^2 \right] \quad (2.5)$$

This is shown on the left of Fig. 2.2. The velocity  $u(r)$  is a function of only one coordinate, and so the flow is one-dimensional. On the other hand, in the diverging section, the velocity decreases in the  $x$ -direction, and the flow becomes two-dimensional:  $u = u(r, x)$ .

As you might suspect, the complexity of analysis increases considerably with the number of dimensions of the flow field. For many problems encountered in engineering, a one-dimensional analysis is adequate to provide approximate solutions of engineering accuracy.

Since all fluids satisfying the continuum assumption must have zero relative velocity at a solid surface (to satisfy the no-slip condition), most flows are inherently two- or three-dimensional. To simplify the analysis it is often convenient to use the notion of *uniform flow* at a given cross section. In a flow that is uniform at a given cross section, the velocity is constant across any section normal to the flow. Under this assumption,<sup>4</sup> the two-dimensional flow of Fig. 2.2 is modeled as the flow shown in Fig. 2.3. In the flow of Fig. 2.3, the velocity field is a function of  $x$  alone, and thus

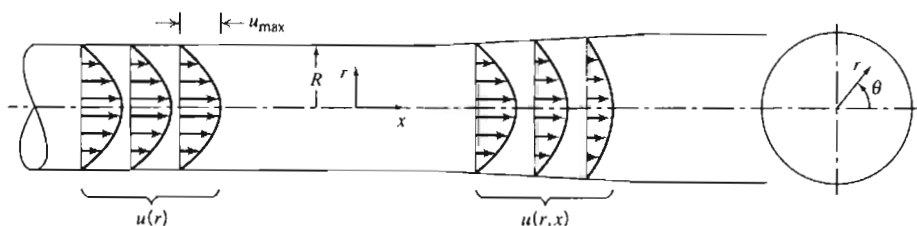


Fig. 2.2 Examples of one- and two-dimensional flows.

<sup>3</sup> Some authors choose to classify a flow as one-, two-, or three-dimensional on the basis of the number of space coordinates required to specify *all* fluid properties. In this text, classification of flow fields will be based on the number of space coordinates required to specify the velocity field only.

<sup>4</sup> This may seem like an unrealistic simplification, but actually in many cases leads to useful results. Sweeping assumptions such as uniform flow at a cross section should always be reviewed carefully to be sure they provide a reasonable analytical model of the real flow.

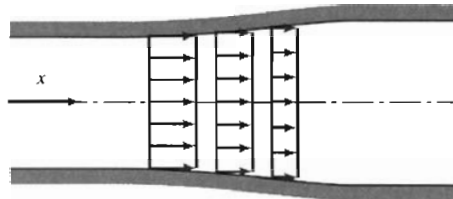


Fig. 2.3 Example of uniform flow at a section.

the flow model is one-dimensional. (Other properties, such as density or pressure, also may be assumed uniform at a section, if appropriate.)

The term *uniform flow field* (as opposed to uniform flow at a cross section) is used to describe a flow in which the velocity is constant, i.e., independent of all space coordinates, throughout the entire flow field.

### Timelines, Pathlines, Streaklines, and Streamlines

Sometimes we want a visual representation of a flow [2]. Such a representation is provided by timelines, pathlines, streaklines, and streamlines.<sup>5</sup>

If a number of adjacent fluid particles in a flow field are marked at a given instant, they form a line in the fluid at that instant; this line is called a *timeline*. Subsequent observations of the line may provide information about the flow field. For example, in discussing the behavior of a fluid under the action of a constant shear force (Section 1-2) timelines were introduced to demonstrate the deformation of a fluid at successive instants.

A *pathline* is the path or trajectory traced out by a moving fluid particle. To make a pathline visible, we might identify a fluid particle at a given instant, e.g., by the use of dye or smoke, and then take a long exposure photograph of its subsequent motion. The line traced out by the particle is a pathline. This approach might be used to study, for example, the trajectory of a contaminant leaving a smokestack.

On the other hand, we might choose to focus our attention on a fixed location in space and identify, again by the use of dye or smoke, all fluid particles passing through this point. After a short period of time we would have a number of identifiable fluid particles in the flow, all of which had, at some time, passed through one fixed location in space. The line joining these fluid particles is defined as a *streakline*.

*Streamlines* are lines drawn in the flow field so that at a given instant they are tangent to the direction of flow at every point in the flow field. Since the streamlines are tangent to the velocity vector at every point in the flow field, there can be no flow across a streamline. Streamlines are the most commonly used visualization technique. For example, they are used to study flow over an automobile in a computer simulation. The procedure used to obtain the equation for a streamline in two-dimensional flow is illustrated in Example Problem 2.1.

In steady flow, the velocity at each point in the flow field remains constant with time and, consequently, the streamline shapes do not vary from one instant to the next. This implies that a particle located on a given streamline will always move along the same streamline. Furthermore, consecutive particles passing through a fixed point in space will be on the same streamline and, subsequently, will remain on this streamline. Thus in a steady flow, pathlines, streaklines, and streamlines are identical lines in the flow field.

<sup>5</sup> Timelines, pathlines, streaklines, and streamlines are demonstrated in the NCFMF video *Flow Visualization*.

The shapes of the streamlines may vary from instant to instant if the flow is unsteady. In the case of unsteady flow, pathlines, streaklines, and streamlines do not coincide.

### EXAMPLE 2.1 Streamlines and Pathlines in Two-Dimensional Flow

A velocity field is given by  $\vec{V} = Ax\hat{i} - Ay\hat{j}$ ; the units of velocity are m/s;  $x$  and  $y$  are given in meters;  $A = 0.3 \text{ s}^{-1}$ .

- Obtain an equation for the streamlines in the  $xy$  plane.
- Plot the streamline passing through the point  $(x_0, y_0) = (2, 8)$ .
- Determine the velocity of a particle at the point  $(2, 8)$ .
- If the particle passing through the point  $(x_0, y_0)$  is marked at time  $t = 0$ , determine the location of the particle at time  $t = 6 \text{ s}$ .
- What is the velocity of this particle at time  $t = 6 \text{ s}$ ?
- Show that the equation of the particle path (the pathline) is the same as the equation of the streamline.

#### EXAMPLE PROBLEM 2.1

**GIVEN:** Velocity field,  $\vec{V} = Ax\hat{i} - Ay\hat{j}$ ;  $x$  and  $y$  in meters;  $A = 0.3 \text{ s}^{-1}$

- FIND:**
- Equation of the streamlines in the  $xy$  plane.
  - Streamline plot through point  $(2, 8)$ .
  - Velocity of particle at point  $(2, 8)$ .
  - Position at  $t = 6 \text{ s}$  of particle located at  $(2, 8)$  at  $t = 0$ .
  - Velocity of particle at position found in (d).
  - Equation of pathline of particle located at  $(2, 8)$  at  $t = 0$ .

#### SOLUTION:

- (a) Streamlines are lines drawn in the flow field such that, at a given instant, they are tangent to the direction of flow at every point. Consequently,

$$\left. \frac{dy}{dx} \right|_{\text{streamline}} = \frac{v}{u} = \frac{-Ay}{Ax} = \frac{-y}{x}$$

Separating variables and integrating, we obtain

$$\int \frac{dy}{y} = - \int \frac{dx}{x}$$

or


$$\ln y = -\ln x + c_1$$

This can be written as  $xy = c \leftarrow$

- (b) For the streamline passing through the point  $(x_0, y_0) = (2, 8)$  the constant,  $c$ , has a value of 16 and the equation of the streamline through the point  $(2, 8)$  is

$$xy = x_0y_0 = 16 \text{ m}^2 \leftarrow$$

The plot is as sketched above.

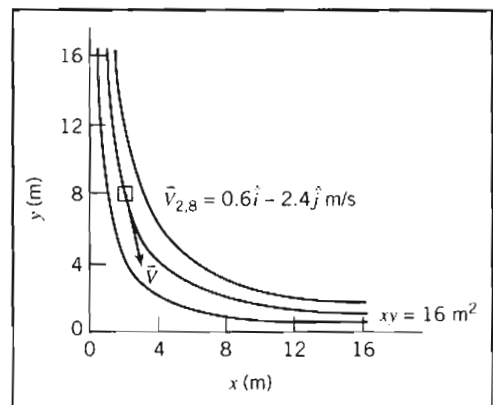

- (c) The velocity field is  $\vec{V} = Ax\hat{i} - Ay\hat{j}$ . At the point (2, 8) the velocity is

$$\vec{V} = A(x\hat{i} - y\hat{j}) = 0.3 \text{ s}^{-1}(2\hat{i} - 8\hat{j}) \text{ m} = 0.6\hat{i} - 2.4\hat{j} \text{ m/s} \leftarrow$$

- (d) A particle moving in the flow field will have velocity given by

$$\vec{V} = Ax\hat{i} - Ay\hat{j}$$

Thus

$$u_p = \frac{dx}{dt} = Ax \quad \text{and} \quad v_p = \frac{dy}{dt} = -Ay$$

Separating variables and integrating (in each equation) gives

$$\int_{x_0}^x \frac{dx}{x} = \int_0^t A dt \quad \text{and} \quad \int_{y_0}^y \frac{dy}{y} = \int_0^t -A dt$$

Then

$$\ln \frac{x}{x_0} = At \quad \text{and} \quad \ln \frac{y}{y_0} = -At$$

or

$$x = x_0 e^{At} \quad \text{and} \quad y = y_0 e^{-At}$$

At  $t = 6$  s,

$$x = 2 \text{ m } e^{(0.3)6} = 12.1 \text{ m} \quad \text{and} \quad y = 8 \text{ m } e^{-(0.3)6} = 1.32 \text{ m}$$

At  $t = 6$  s, particle is at (12.1, 1.32) m  $\leftarrow$

- (e) At the point (12.1, 1.32) m,

$$\vec{V} = A(x\hat{i} - y\hat{j}) = 0.3 \text{ s}^{-1}(12.1\hat{i} - 1.32\hat{j}) \text{ m} = 3.63\hat{i} - 0.396\hat{j} \text{ m/s} \leftarrow$$

- (f) To determine the equation of the pathline, we use the parametric equations

$$x = x_0 e^{At} \quad \text{and} \quad y = y_0 e^{-At}$$

and eliminate  $t$ . Solving for  $e^{At}$  from both equations

$$e^{At} = \frac{y_0}{y} = \frac{x}{x_0}$$

Therefore  $xy = x_0 y_0 = 16 \text{ m}^2 \leftarrow$

**Notes:**

- ✓ This problem illustrates the method for computing streamlines and pathlines.
- ✓ Because this is a steady flow, the streamlines and pathlines have the same shape—in an unsteady flow this would not be true.
- ✓ When we follow a particle (the Lagrangian approach), its position ( $x, y$ ) and velocity ( $u_p = dx/dt$  and  $v_p = dy/dt$ ) are functions of time, even though the flow is steady.

## 2-3 STRESS FIELD

In our study of fluid mechanics, we will need to understand what kinds of forces act on fluid particles. Each fluid particle can experience: *surface forces* (pressure, friction) that are generated by contact with other particles or a solid surface; and *body forces* (such as gravity and electromagnetic) that are experienced throughout the particle.

The gravitational body force acting on an element of volume,  $d\mathcal{V}$ , is given by  $\rho \bar{g} d\mathcal{V}$ , where  $\rho$  is the density (mass per unit volume) and  $\bar{g}$  is the local gravitational acceleration. Thus the gravitational body force per unit volume is  $\rho \bar{g}$  and the gravitational body force per unit mass is  $\bar{g}$ .

Surface forces on a fluid particle lead to *stresses*. The concept of stress is useful for describing how forces acting on the boundaries of a medium (fluid or solid) are transmitted throughout the medium. You have probably seen stresses discussed in solid mechanics. For example, when you stand on a diving board, stresses are generated within the board. On the other hand, when a body moves through a fluid, stresses are developed within the fluid. The difference between a fluid and a solid is, as we've seen, that stresses in a fluid are mostly generated by motion rather than by deflection.

Imagine the surface of a fluid particle in contact with other fluid particles, and consider the contact force being generated between the particles. Consider a portion,  $\delta\bar{A}$ , of the surface at some point  $C$ . The orientation of  $\delta\bar{A}$  is given by the unit vector,  $\hat{n}$ , shown in Fig. 2.4. The vector  $\hat{n}$  is the outwardly drawn unit normal with respect to the particle.

The force,  $\delta\bar{F}$ , acting on  $\delta\bar{A}$  may be resolved into two components, one normal to and the other tangent to the area. A *normal stress*  $\sigma_n$  and a *shear stress*  $\tau_n$  are then defined as

$$\sigma_n = \lim_{\delta A_n \rightarrow 0} \frac{\delta F_n}{\delta A_n} \quad (2.6)$$

and

$$\tau_n = \lim_{\delta A_n \rightarrow 0} \frac{\delta F_t}{\delta A_n} \quad (2.7)$$

Subscript  $n$  on the stress is included as a reminder that the stresses are associated with the surface  $\delta\bar{A}$  through  $C$ , having an outward normal in the  $\hat{n}$  direction. The fluid is actually a continuum, so we could have imagined breaking it up any number

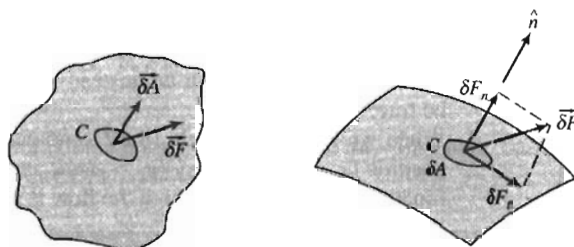


Fig. 2.4 The concept of stress in a continuum.

of different ways into fluid particles around point  $C$ , and therefore obtained any number of different stresses at point  $C$ .

In dealing with vector quantities such as force, we usually consider components in an orthogonal coordinate system. In rectangular coordinates we might consider the stresses acting on planes whose outwardly drawn normals (again with respect to the material acted upon) are in the  $x$ ,  $y$ , or  $z$  directions. In Fig. 2.5 we consider the stress on the element  $\delta A_x$ , whose outwardly drawn normal is in the  $x$  direction. The force,  $\delta \vec{F}$ , has been resolved into components along each of the coordinate directions. Dividing the magnitude of each force component by the area,  $\delta A_x$ , and taking the limit as  $\delta A_x$  approaches zero, we define the three stress components shown in Fig. 2.5b:

$$\sigma_{xx} = \lim_{\delta A_x \rightarrow 0} \frac{\delta F_x}{\delta A_x} \quad (2.8)$$

$$\tau_{xy} = \lim_{\delta A_x \rightarrow 0} \frac{\delta F_y}{\delta A_x} \quad \tau_{xz} = \lim_{\delta A_x \rightarrow 0} \frac{\delta F_z}{\delta A_x}$$

We have used a double subscript notation to label the stresses. The *first* subscript (in this case,  $x$ ) indicates the *plane* on which the stress acts (in this case, a surface perpendicular to the  $x$  axis). The *second* subscript indicates the *direction* in which the stress acts.

Consideration of area element  $\delta A_y$  would lead to the definitions of the stresses,  $\sigma_{yy}$ ,  $\tau_{yx}$ , and  $\tau_{yz}$ ; use of area element  $\delta A_z$  would similarly lead to the definitions of  $\sigma_{zz}$ ,  $\tau_{zx}$ ,  $\tau_{zy}$ .

Although we just looked at three orthogonal planes, an infinite number of planes can be passed through point  $C$ , resulting in an infinite number of stresses associated with planes through that point. Fortunately, the state of stress at a point can be described completely by specifying the stresses acting on *any* three mutually perpendicular planes through the point. The stress at a point is specified by the nine components

$$\begin{bmatrix} \sigma_{xx} & \tau_{xy} & \tau_{xz} \\ \tau_{yx} & \sigma_{yy} & \tau_{yz} \\ \tau_{zx} & \tau_{zy} & \sigma_{zz} \end{bmatrix}$$

where  $\sigma$  has been used to denote a normal stress, and  $\tau$  to denote a shear stress. The notation for designating stress is shown in Fig. 2.6.

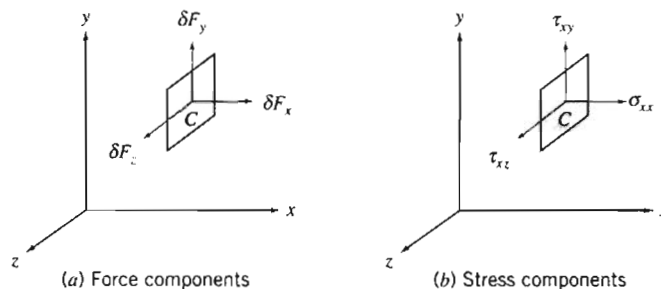


Fig. 2.5 Force and stress components on the element of area  $\delta A_x$ .

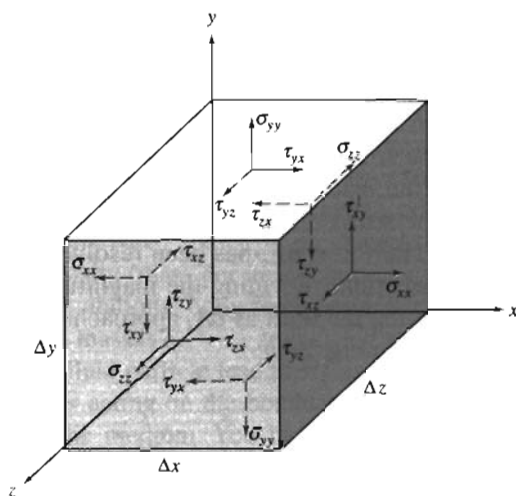


Fig. 2.6 Notation for stress.

Referring to the infinitesimal element shown in Fig. 2.6, we see that there are six planes (two  $x$  planes, two  $y$  planes, and two  $z$  planes) on which stresses may act. In order to designate the plane of interest, we could use terms like front and back, top and bottom, or left and right. However, it is more logical to name the planes in terms of the coordinate axes. The planes are named and denoted as positive or negative according to the direction of the outwardly drawn normal to the plane. Thus the top plane, for example, is a positive  $y$  plane and the back plane is a negative  $z$  plane.

It also is necessary to adopt a sign convention for stress. A stress component is positive when the direction of the stress component and the plane on which it acts are both positive or both negative. Thus  $\tau_{yx} = 5 \text{ lbf/in.}^2$  represents a shear stress on a positive  $y$  plane in the positive  $x$  direction or a shear stress on a negative  $y$  plane in the negative  $x$  direction. In Fig. 2.6 all stresses have been drawn as positive stresses. Stress components are negative when the direction of the stress component and the plane on which it acts are of opposite sign.

## 2-4 VISCOSITY

Where do stresses come from? For a solid, stresses develop when the material is elastically deformed or strained; for a fluid, shear stresses arise due to viscous flow (we will discuss a fluid's normal stresses shortly). Hence we say solids are *elastic*, and fluids are *viscous* (and it's interesting to note that many biological tissues are *viscoelastic*, meaning they combine features of a solid and a fluid). For a fluid at rest, there will be no shear stresses. We will see that each fluid can be categorized by examining the relation between the applied shear stresses and the flow (specifically the rate of deformation) of the fluid.

Consider the behavior of a fluid element between the two infinite plates shown in Fig. 2.7. The upper plate moves at constant velocity,  $\delta u$ , under the influence of a constant applied force,  $\delta F_x$ . The shear stress,  $\tau_{yx}$ , applied to the fluid element is

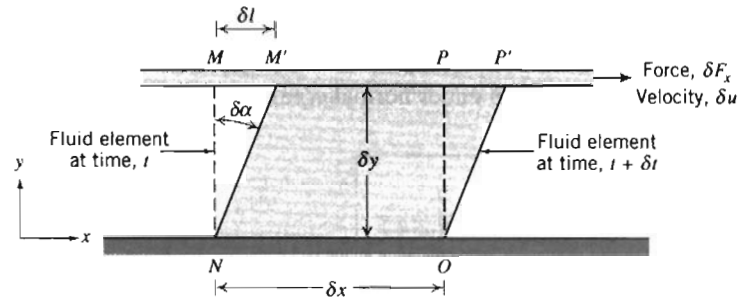


Fig. 2.7 Deformation of a fluid element.

given by

$$\tau_{yx} = \lim_{\delta A_y \rightarrow 0} \frac{\delta F_x}{\delta A_y} = \frac{dF_x}{dA_y}$$

where  $\delta A_y$  is the area of contact of a fluid element with the plate, and  $\delta F_x$  is the force exerted by the plate on that element. During time interval  $\delta t$ , the fluid element is deformed from position  $MNOP$  to position  $M'NOP'$ . The rate of deformation of the fluid is given by

$$\text{deformation rate} = \lim_{\delta t \rightarrow 0} \frac{\delta \alpha}{\delta t} = \frac{d\alpha}{dt}$$

We want to express  $d\alpha/dt$  in terms of readily measurable quantities. This can be done easily. The distance,  $\delta l$ , between the points  $M$  and  $M'$  is given by

$$\delta l = \delta u \delta t$$

Alternatively, for small angles,

$$\delta l = \delta y \delta \alpha$$

Equating these two expressions for  $\delta l$  gives

$$\frac{\delta \alpha}{\delta t} = \frac{\delta u}{\delta y}$$

Taking the limits of both sides of the equality, we obtain

$$\frac{d\alpha}{dt} = \frac{du}{dy}$$

Thus, the fluid element of Fig. 2.7, when subjected to shear stress,  $\tau_{yx}$ , experiences a rate of deformation (*shear rate*) given by  $du/dy$ . We have established that any fluid that experiences a shear stress will flow (it will have a shear rate). What is the relation between shear stress and shear rate? Fluids in which shear stress is directly proportional to rate of deformation are *Newtonian fluids*. The term *non-Newtonian* is used to classify all fluids in which shear stress is not directly proportional to shear rate.



### Newtonian Fluid

Most common fluids (the ones discussed in this text) such as water, air, and gasoline are Newtonian under normal conditions. If the fluid of Fig. 2.7 is Newtonian, then

$$\tau_{yx} \propto \frac{du}{dy} \quad (2.9)$$

We are familiar with the fact that some fluids resist motion more than others. For example, a container of SAE 30W oil is much harder to stir than one of water. Hence SAE 30W oil is much more viscous—it has a higher viscosity. (Note that a container of mercury is also harder to stir, but for a different reason!) The constant of proportionality in Eq. 2.9 is the *absolute* (or *dynamic*) *viscosity*,  $\mu$ . Thus in terms of the coordinates of Fig. 2.7, Newton's law of viscosity is given for one-dimensional flow by

$$\tau_{yx} = \mu \frac{du}{dy} \quad (2.10)$$

Note that, since the dimensions of  $\tau$  are  $[F/L^2]$  and the dimensions of  $du/dy$  are  $[1/t]$ ,  $\mu$  has dimensions  $[Ft/L^2]$ . Since the dimensions of force,  $F$ , mass,  $M$ , length,  $L$ , and time,  $t$ , are related by Newton's second law of motion, the dimensions of  $\mu$  can also be expressed as  $[M/Lt]$ . In the British Gravitational system, the units of viscosity are  $\text{lbf} \cdot \text{s}/\text{ft}^2$  or  $\text{slug}/(\text{ft} \cdot \text{s})$ . In the Absolute Metric system, the basic unit of viscosity is called a poise [ $1 \text{ poise} \equiv 1 \text{ g}/(\text{cm} \cdot \text{s})$ ]; in the SI system the units of viscosity are  $\text{kg}/(\text{m} \cdot \text{s})$  or  $\text{Pa} \cdot \text{s}$  ( $1 \text{ Pa} \cdot \text{s} = 1 \text{ N} \cdot \text{s}/\text{m}^2$ ). The calculation of viscous shear stress is illustrated in Example Problem 2.2.


In fluid mechanics the ratio of absolute viscosity,  $\mu$ , to density,  $\rho$ , often arises. This ratio is given the name *kinematic viscosity* and is represented by the symbol  $\nu$ . Since density has dimensions  $[M/L^3]$ , the dimensions of  $\nu$  are  $[L^2/t]$ . In the Absolute Metric system of units, the unit for  $\nu$  is a stoke ( $1 \text{ stoke} \equiv 1 \text{ cm}^2/\text{s}$ ).

Viscosity data for a number of common Newtonian fluids are given in Appendix A. Note that for gases, viscosity increases with temperature, whereas for liquids, viscosity decreases with increasing temperature.

### EXAMPLE 2.2 Viscosity and Shear Stress in Newtonian Fluid

An infinite plate is moved over a second plate on a layer of liquid as shown. For small gap width,  $d$ , we assume a linear velocity distribution in the liquid. The liquid viscosity is 0.65 centipoise and its specific gravity is 0.88. Determine:

- The absolute viscosity of the liquid, in  $\text{lbf} \cdot \text{s}/\text{ft}^2$ .
- The kinematic viscosity of the liquid, in  $\text{m}^2/\text{s}$ .
- The shear stress on the upper plate, in  $\text{lbf}/\text{ft}^2$ .
- The shear stress on the lower plate, in Pa.
- The direction of each shear stress calculated in parts (c) and (d).

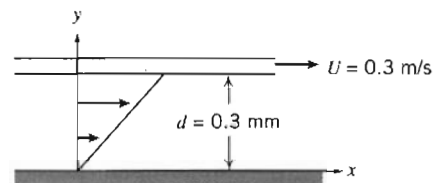


### EXAMPLE PROBLEM 2.2

**GIVEN:** Linear velocity profile in the liquid between infinite parallel plates as shown.

$$\mu = 0.65 \text{ cp}$$

$$\text{SG} = 0.88$$

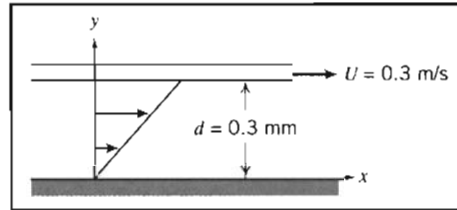

- FIND:** (a)  $\mu$  in units of  $\text{lbf} \cdot \text{s}/\text{ft}^2$ .  
 (b)  $\nu$  in units of  $\text{m}^2/\text{s}$ .  
 (c)  $\tau$  on upper plate in units of  $\text{lbf}/\text{ft}^2$ .  
 (d)  $\tau$  on lower plate in units of Pa.  
 (e) Direction of stresses in parts (c) and (d).

### SOLUTION:

Governing equation:  $\tau_{yx} = \mu \frac{du}{dy}$     Definition:  $\nu = \frac{\mu}{\rho}$

- Assumptions: (1) Linear velocity distribution (given)  
 (2) Steady flow  
 (3)  $\mu = \text{constant}$

$$(a) \quad \mu = 0.65 \text{ cp} \times \frac{\text{poise}}{100 \text{ cp}} \times \frac{\text{g}}{\text{cm} \cdot \text{s} \cdot \text{poise}} \times \frac{\text{lbm}}{454 \text{ g}} \times \frac{\text{slug}}{32.2 \text{ lbm}} \times \frac{30.5 \text{ cm}}{\text{ft}} \times \frac{\text{lbf} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}}$$

$$\mu = 1.36 \times 10^{-5} \text{ lbf} \cdot \text{s}/\text{ft}^2 \leftarrow \mu$$

$$(b) \quad \nu = \frac{\mu}{\rho} = \frac{\mu}{\text{SG} \rho_{\text{H}_2\text{O}}}$$

$$= 1.36 \times 10^{-5} \frac{\text{lbf} \cdot \text{s}}{\text{ft}^2} \times \frac{\text{ft}^3}{(0.88)1.94 \text{ slug}} \times \frac{\text{slug} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2} \times \frac{(0.305)^2 \text{ m}^2}{\text{ft}^2}$$

$$\nu = 7.41 \times 10^{-7} \text{ m}^2/\text{s} \leftarrow \nu$$

$$(c) \quad \tau_{\text{upper}} = \tau_{yx, \text{upper}} = \mu \left. \frac{du}{dy} \right|_{y=d}$$


Since  $u$  varies linearly with  $y$ ,

$$\frac{du}{dy} = \frac{\Delta u}{\Delta y} = \frac{U - 0}{d - 0} = \frac{U}{d} = \frac{0.3 \text{ m}}{\text{s}} \times \frac{1}{0.3 \text{ mm}} \times \frac{1000 \text{ mm}}{\text{m}} = 1000 \text{ s}^{-1}$$

$$\tau_{\text{upper}} = \mu \frac{U}{d} = 1.36 \times 10^{-5} \frac{\text{lbf} \cdot \text{s}}{\text{ft}^2} \times \frac{1000}{\text{s}} = 0.0136 \text{ lbf}/\text{ft}^2 \leftarrow \tau_{\text{upper}}$$

$$(d) \quad \tau_{\text{lower}} = \mu \frac{U}{d} = 0.0136 \frac{\text{lbf}}{\text{ft}^2} \times \frac{4.45 \text{ N}}{\text{lbf}} \times \frac{\text{ft}^2}{(0.305)^2 \text{ m}^2} \times \frac{\text{Pa} \cdot \text{m}^2}{\text{N}} = 0.651 \text{ Pa} \leftarrow \tau_{\text{lower}}$$

(e) Directions of shear stresses on upper and lower plates.

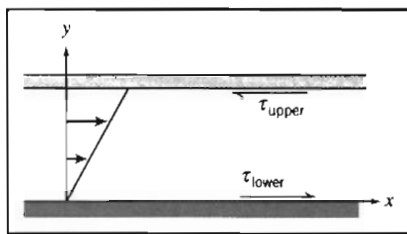

{ The upper plate is a negative  $y$  surface, so positive  $\tau_{yx}$  acts in the negative  $x$  direction. }

{ The lower plate is a positive  $y$  surface, so positive  $\tau_{yx}$  acts in the positive  $x$  direction. }

(e)

Part (c) shows that the shear stress is:

- ✓ Constant across the gap for a linear velocity profile.
- ✓ Directly proportional to the speed of the upper plate (because of the linearity of Newtonian fluids).
- ✓ Inversely proportional to the gap between the plates.

Note that multiplying the shear stress by the plate area in such problems computes the force required to maintain the motion.

### Non-Newtonian Fluids

Fluids in which shear stress is *not* directly proportional to deformation rate are non-Newtonian. Although we will not discuss these much in this text, many common fluids exhibit non-Newtonian behavior. Two familiar examples are toothpaste and Lucite<sup>6</sup> paint. The latter is very “thick” when in the can, but becomes “thin” when sheared by brushing. Toothpaste behaves as a “fluid” when squeezed from the tube. However, it does not run out by itself when the cap is removed. There is a threshold or yield stress below which toothpaste behaves as a solid. Strictly speaking, our definition of a fluid is valid only for materials that have zero yield stress. Non-Newtonian fluids commonly are classified as having time-independent or time-dependent behavior. Examples of time-independent behavior are shown in the rheological diagram of Fig. 2.8.

Numerous empirical equations have been proposed [3, 4] to model the observed relations between  $\tau_{yx}$  and  $du/dy$  for time-independent fluids. They may be adequately represented for many engineering applications by the power law model, which for one-dimensional flow becomes


$$\tau_{yx} = k \left( \frac{du}{dy} \right)^n \quad (2.11)$$

where the exponent,  $n$ , is called the flow behavior index and the coefficient,  $k$ , the consistency index. This equation reduces to Newton’s law of viscosity for  $n = 1$  with  $k = \mu$ .

To ensure that  $\tau_{yx}$  has the same sign as  $du/dy$ , Eq. 2.11 is rewritten in the form

$$\tau_{yx} = k \left| \frac{du}{dy} \right|^{n-1} \frac{du}{dy} = \eta \frac{du}{dy} \quad (2.12)$$

<sup>6</sup> Trademark, E. I. du Pont de Nemours & Company.

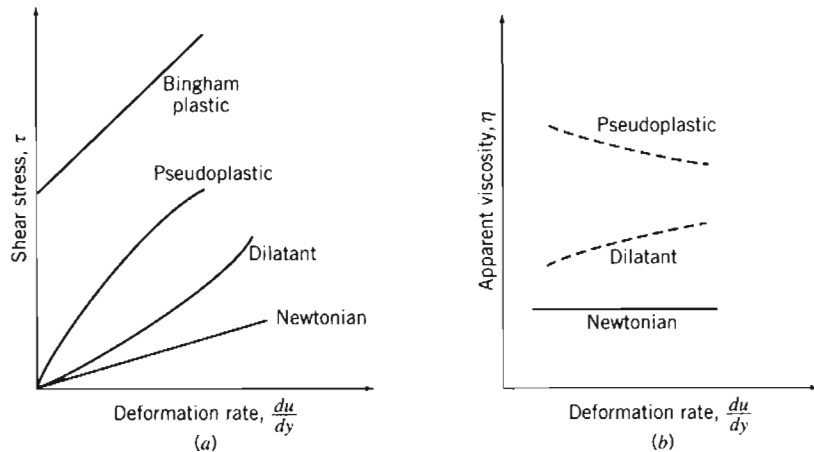

**Fig. 2.8** (a) Shear stress,  $\tau$ , and (b) apparent viscosity,  $\eta$ , as a function of deformation rate for one-dimensional flow of various non-Newtonian fluids.

The term  $\eta = k|du/dy|^{n-1}$  is referred to as the *apparent viscosity*. The idea behind Eq. 2.12 is that we end up with a viscosity  $\eta$  that is used in a formula that is the same form as Eq. 2.10, in which the Newtonian viscosity  $\mu$  is used. The big difference is that while  $\mu$  is constant (except for temperature effects),  $\eta$  depends on the shear rate. Most non-Newtonian fluids have apparent viscosities that are relatively high compared with the viscosity of water.

Fluids in which the apparent viscosity decreases with increasing deformation rate ( $n < 1$ ) are called *pseudoplastic* (or shear thinning) fluids. Most non-Newtonian fluids fall into this group; examples include polymer solutions, colloidal suspensions, and paper pulp in water. If the apparent viscosity increases with increasing deformation rate ( $n > 1$ ) the fluid is termed *dilatant* (or shear thickening). Suspensions of starch and of sand are examples of dilatant fluids.

A "fluid" that behaves as a solid until a minimum yield stress,  $\tau_y$ , is exceeded and subsequently exhibits a linear relation between stress and rate of deformation is referred to as an ideal or *Bingham plastic*. The corresponding shear stress model is

$$\tau_{yx} = \tau_y + \mu_p \frac{du}{dy} \quad (2.13)$$

Clay suspensions, drilling muds, and toothpaste are examples of substances exhibiting this behavior.

The study of non-Newtonian fluids is further complicated by the fact that the apparent viscosity may be time-dependent. *Thixotropic* fluids show a decrease in  $\eta$  with time under a constant applied shear stress; many paints are thixotropic. *Rheopectic* fluids show an increase in  $\eta$  with time. After deformation some fluids partially return to their original shape when the applied stress is released; such fluids are called *viscoelastic*.<sup>7</sup>

<sup>7</sup> Examples of time-dependent and viscoelastic fluids are illustrated in the NCFMF video *Rheological Behavior of Fluids*.



## 2-5 SURFACE TENSION

You can tell when your car needs waxing: Water droplets tend to appear somewhat flattened out. After waxing, you get a nice “beading” effect. These two cases are shown in Fig. 2.9. We define a liquid as “wetting” a surface when the *contact angle*  $\theta < 90^\circ$ . By this definition, the car’s surface was wetted before waxing, and not wetted after. This is an example of effects due to *surface tension*. Whenever a liquid is in contact with other liquids or gases, or in this case a gas/solid surface, an interface develops that acts like a stretched elastic membrane, creating surface tension. There are two features to this membrane: the contact angle  $\theta$ , and the magnitude of the surface tension,  $\sigma$  (N/m or lbf/ft). Both of these depend on the type of liquid and the type of solid surface (or other liquid or gas) with which it shares an interface. In the car-waxing example, the contact angle changed from being smaller than  $90^\circ$ , to larger than  $90^\circ$ , because, in effect, the waxing changed the nature of the solid surface. Factors that affect the contact angle include the cleanliness of the surface and the purity of the liquid.

Other examples of surface tension effects arise when you are able to place a needle on a water surface and, similarly, when small water insects are able to walk on the surface of the water.<sup>8</sup>

Appendix A contains data for surface tension and contact angle for common liquids in the presence of air and of water.

A force balance on a segment of interface shows that there is a pressure jump across the imagined elastic membrane whenever the interface is curved. For a water droplet in air, pressure in the water is higher than ambient; the same is true for a gas bubble in liquid. For a soap bubble in air, surface tension acts on both inside and outside interfaces between the soap film and air along the curved bubble surface. Surface tension also leads to the phenomena of capillary (i.e., very small wavelength) waves on a liquid surface [5] and capillary rise or depression, discussed below.

In engineering, probably the most important effect of surface tension is the creation of a curved *meniscus* that appears in manometers or barometers, leading to a (usually unwanted) *capillary rise* (or depression), as shown in Fig. 2.10. This rise may be pronounced if the liquid is in a small diameter tube or narrow gap, as shown in Example Problem 2.3.


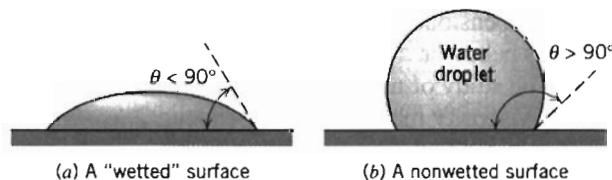


Fig. 2.9 Surface tension effects on water droplets.

<sup>8</sup> These and other example phenomena are illustrated in the NCFMF video *Surface Tension in Fluid Mechanics*.

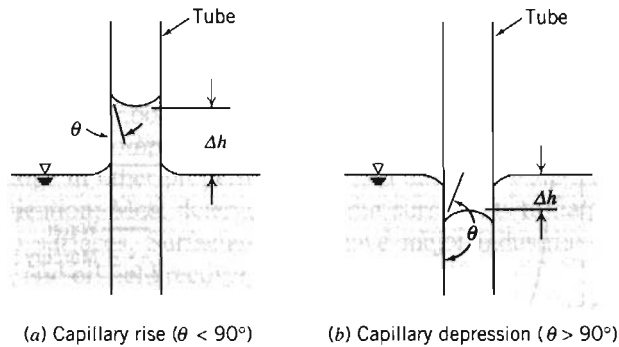

(a) Capillary rise ( $\theta < 90^\circ$ )      (b) Capillary depression ( $\theta > 90^\circ$ )  
**Fig. 2.10** Capillary rise and capillary depression inside and outside a circular tube.

### EXAMPLE 2.3 Analysis of Capillary Effect in a Tube

Create a graph showing the capillary rise or fall of a column of water or mercury, respectively, as a function of tube diameter  $D$ . Find the minimum diameter of each column required so that the height magnitude will be less than 1 mm.

#### EXAMPLE PROBLEM 2.3

**GIVEN:** Tube dipped in liquid as in Fig. 2.10

**FIND:** A general expression for  $\Delta h$  as a function of  $D$ .

**SOLUTION:**

Apply free body diagram analysis, and sum vertical forces.

Governing equation:

$$\sum F_z = 0$$

Assumptions: (1) Measure to middle of meniscus  
 (2) Neglect volume in meniscus region

Summing forces in the  $z$  direction:


$$\sum F_z = \sigma \pi D \cos \theta - \rho g \Delta V = 0 \quad (1)$$

If we neglect the volume in the meniscus region:


$$\Delta V \approx \frac{\pi D^2}{4} \Delta h$$

Substituting in Eq. (1) and solving for  $\Delta h$  gives

$$\Delta h = \frac{4\sigma \cos \theta}{\rho g D} \quad \leftarrow \Delta h$$

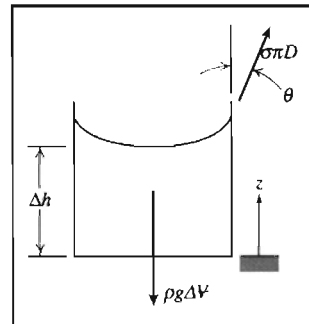

For water,  $\sigma = 72.8 \text{ mN/m}$  and  $\theta \approx 0^\circ$ , and for mercury  $\sigma = 484 \text{ mN/m}$  and  $\theta = 140^\circ$  (Table A.4). Plotting,

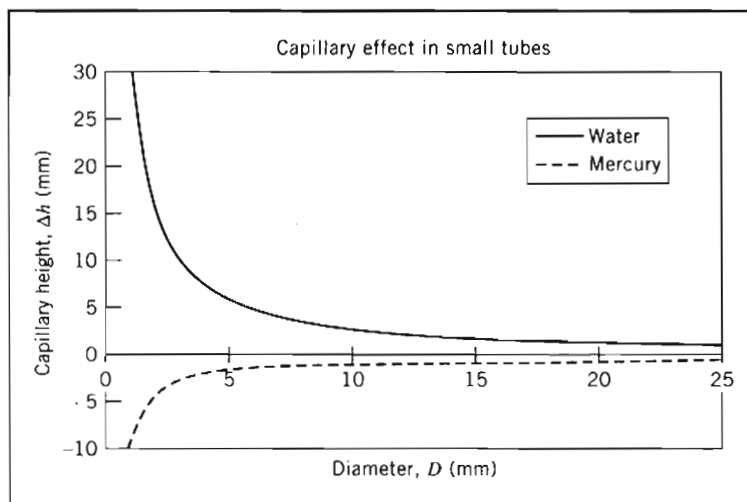

Using the above equation to compute  $D_{\min}$  for  $\Delta h = 1 \text{ mm}$ , we find for mercury and water

$$D_{M_{\min}} = 11.2 \text{ mm} \quad \text{and} \quad D_{W_{\min}} = 30 \text{ mm}$$

Notes:

- ✓ This problem reviewed use of the free-body diagram approach.
- ✓ It turns out that neglecting the volume in the meniscus region is only valid when  $\Delta h$  is large compared with  $D$ . However, in this problem we have the result that  $\Delta h$  is about 1 mm when  $D$  is 11.2 mm (or 30 mm); hence the results can only be very approximate.



The graph and results were generated from the *Excel* workbook.

Folsom [6] shows that the simple analysis of Example 2.3 overpredicts the capillary effect and gives reasonable results only for tube diameters less than 0.1 in. (2.54 mm). Over a diameter range  $0.1 < D < 1.1 \text{ in.}$ , experimental data for the capillary rise with a water-air interface are correlated by the empirical expression  $\Delta h = 0.400/e^{4.37D}$ .

Manometer and barometer readings should be made at the level of the middle of the meniscus. This is away from the maximum effects of surface tension and thus nearest to the proper liquid level.

All surface tension data in Appendix A were measured for pure liquids in contact with clean vertical surfaces. Impurities in the liquid, dirt on the surface, or surface inclination can cause an indistinct meniscus; under such conditions it may be difficult to

determine liquid level accurately. Liquid level is most distinct in a vertical tube. When inclined tubes are used to increase manometer sensitivity (see Section 3-3) it is important to make each reading at the same point on the meniscus and to avoid use of tubes inclined less than about  $15^\circ$  from horizontal.

*Surfactant* compounds reduce surface tension significantly (more than 40% with little change in other properties [7]) when added to water. They have wide commercial application: Most detergents contain surfactants to help water penetrate and lift soil from surfaces. Surfactants also have major industrial applications in catalysis, aerosols, and oil field recovery.

---

## 2-6 DESCRIPTION AND CLASSIFICATION OF FLUID MOTIONS

In Chapter 1 and in this chapter, we have almost completed our brief introduction to some concepts and ideas that are often needed when studying fluid mechanics. Before beginning detailed analysis of fluid mechanics in the rest of this text, we will describe some interesting examples to illustrate a broad classification of fluid mechanics on the basis of important flow characteristics. Fluid mechanics is a huge discipline: It covers everything from the aerodynamics of a supersonic transport vehicle, to the lubrication of human joints by sinovial fluid. We need to break fluid mechanics down into manageable proportions. It turns out that the two most difficult aspects of a fluid mechanics analysis to deal with are: (1) the fluid's viscous nature and (2) its compressibility. In fact, the area of fluid mechanics theory that first became highly developed (about 250 years ago!) was that dealing with a frictionless, incompressible fluid. As we will see shortly (and in more detail later on), this theory, while extremely elegant, led to the famous result called d'Alembert's paradox: All bodies experience no drag as they move through such a fluid—a result not exactly consistent with any real behavior!

Although not the only way to do so, most engineers subdivide fluid mechanics in terms of whether or not viscous effects and compressibility effects are present, as shown in Fig. 2.11. Also shown are classifications in terms of whether a flow is laminar or turbulent, and internal or external. We will now discuss each of these.

### Viscous and Inviscid Flows

When you send a ball flying through the air (as in a game of baseball, soccer, or any number of other sports), in addition to gravity the ball experiences the aerodynamic drag of the air. The question arises: What is the nature of the drag force of the air on the ball? At first glance, we might conclude that it's due to friction of the air as it flows over the ball; a little more reflection might lead to the conclusion that because air has such a low viscosity, friction might not contribute much to the drag, and the drag might be due to the pressure build-up in front of the ball as it pushes the air out of the way. The question arises: Can we predict ahead of time the relative importance of the viscous force, and force due to the pressure build-up in front of the ball? Can we make similar predictions for *any* object, for example, an automobile, a submarine, a red blood cell, moving through *any* fluid, for example, air, water, blood plasma? The answer (which we'll discuss in much more detail in Chapter 7) is that we can! It turns out that we can estimate whether or not viscous forces, as opposed to pressure forces, are negligible by simply computing the Reynolds number  $Re = \rho V L / \mu$ , where  $\rho$



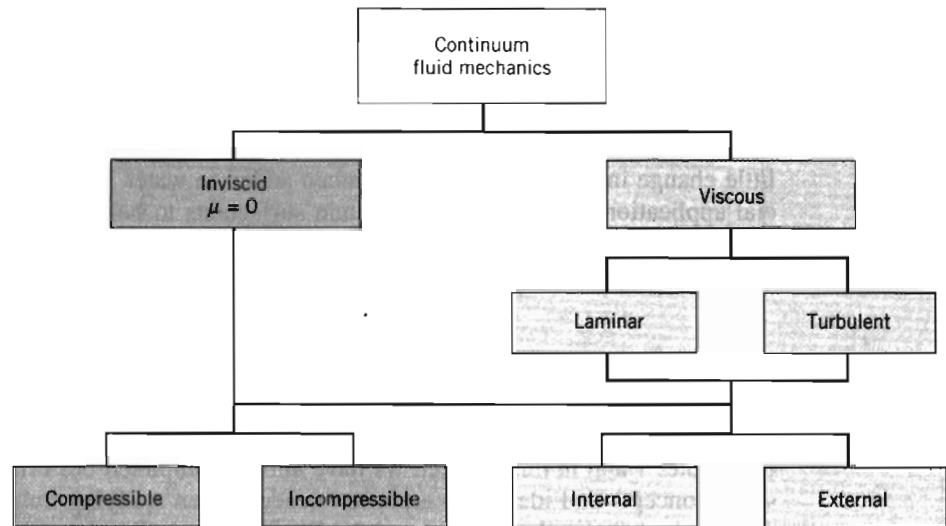


Fig. 2.11 Possible classification of continuum fluid mechanics.

and  $\mu$  are the fluid density and viscosity, respectively, and  $V$  and  $L$  are the typical or “characteristic” velocity and size scale of the flow (in this example the ball velocity and diameter), respectively. If the Reynolds number is “large,” viscous effects will be negligible (but will still have important consequences, as we’ll soon see), at least in most of the flow; if the Reynolds number is small, viscous effects will be dominant. Finally, if the Reynolds number is neither large nor small, no general conclusions can be drawn.

To illustrate this very powerful idea, consider two simple examples. First, the drag on your ball: Suppose you kick a soccer ball (diameter = 8.75 in.) so it moves at 60 mph. The Reynolds number (using air properties from Table A.10) for this case is about 400,000—by any measure a large number; hence the drag on the soccer ball is almost entirely due to the pressure build-up in front of it. For our second example, consider a dust particle (modeled as a sphere of diameter 1 mm) falling under gravity at a terminal velocity of 1 cm/s: In this case  $Re \approx 0.7$ —a quite small number; hence the drag is mostly due to the friction of the air. Of course, in both of these examples, if we wish to *determine* the drag force, we would have to do substantially more analysis.

These examples illustrate an important point: A flow is considered to be friction dominated (or not) based not just on the fluid’s viscosity, but on the complete flow system. In these examples, the airflow was low friction for the soccer ball, but was high friction for the dust particle.

Let’s return for a moment to the idealized notion of frictionless flow, called *inviscid flow*. This is the branch shown on the left in Fig. 2.11. This branch encompasses most aerodynamics, and among other things explains, for example, why sub- and supersonic aircraft have differing shapes, how a wing generates lift, and so forth. If this theory is applied to the ball flying through the air (a flow that is also incompressible), it predicts streamlines (in coordinates attached to the sphere) as shown in Fig. 2.12a.

The streamlines are symmetric front-to-back. Because the mass flow between any two streamlines is constant, wherever streamlines open up, the velocity must decrease, and vice versa. Hence we can see that the velocity in the vicinity of points  $A$  and  $C$  must be relatively low; at point  $B$  it will be high. In fact, the air comes to rest at points  $A$  and  $C$ : they are *stagnation points*. It turns out that (as we’ll learn in

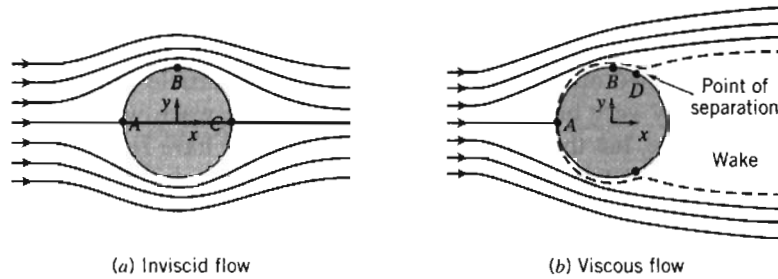


Fig. 2.12 Qualitative picture of incompressible flow over a sphere.

Chapter 6) the pressure in this flow is high wherever the velocity is low, and vice versa. Hence, points *A* and *C* have relatively large (and equal) pressures; point *B* will be a point of low pressure. In fact, the pressure distribution on the sphere is symmetric front-to-back, and there is no net drag force due to pressure. Because we're assuming inviscid flow, there can be no drag due to friction either. Hence we have d'Alembert's paradox of 1752: The ball experiences no drag!

This is obviously unrealistic. On the other hand, everything seems logically consistent: We established that  $Re$  for the sphere was very large (400,000), indicating friction is negligible. We then used inviscid flow theory to obtain our no-drag result. How can we reconcile this theory with reality? It took about 150 years after the paradox first appeared for the answer, obtained by Prandtl in 1904: The no-slip condition (Section 1.2) requires that the velocity everywhere on the surface of the sphere be zero (in sphere coordinates), but inviscid theory states that it's high at point *B*. Prandtl suggested that even though friction is negligible in general for high-Reynolds number flows, there will always be a thin *boundary layer*,<sup>9</sup> in which friction is significant and across the width of which the velocity increases rapidly from zero (at the surface) to the value inviscid flow theory predicts (on the outer edge of the boundary layer). This is shown in Fig. 2.12*b* from point *A* to point *B*, and in more detail in Fig. 2.13.

This boundary layer immediately allows us to reconcile theory and experiment: Once we have friction in a boundary layer we will have drag. However, this boundary layer has another important consequence: It often leads to bodies having a *wake*, as shown in Fig. 2.12*b* from point *D* onwards. Point *D* is a *separation point*, where fluid particles are pushed off the object and cause a wake to develop.<sup>10</sup> Consider once again the original inviscid flow (Fig. 2.12*a*): As a particle moves along the surface from point *B* to *C*, it moves from low to high pressure. This *adverse pressure gradient* (a pressure change opposing fluid motion) causes the particles to slow down as they move along the rear of the sphere. If we now add to this

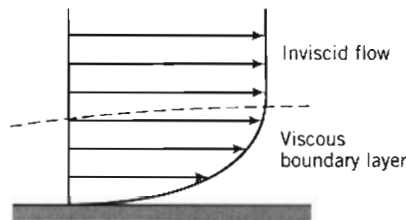


Fig. 2.13 Schematic of a boundary layer.

<sup>9</sup> The formation of a boundary layer is illustrated in the NCFMF video *Fundamentals of Boundary Layers*.

<sup>10</sup> The flow over a variety of models, illustrating flow separation, is demonstrated in the University of Iowa video *Form Drag, Lift, and Propulsion*.

the fact that the particles are moving in a boundary layer with friction that also slows down the fluid, the particles will eventually be brought to rest, and then pushed off the sphere by the following particles, forming the wake. This is generally very bad news: It turns out that the wake will always be relatively low pressure, but the front of the sphere will still have relatively high pressure. Hence, the sphere will now have a quite large *pressure drag* (or *form drag*—so called because it's due to the shape of the object).

This description reconciles the inviscid flow no-drag result with the experimental result of significant drag on a sphere. It's interesting to note that although the boundary layer is necessary to explain the drag on the sphere, the drag is actually due mostly to the asymmetric pressure distribution created by the boundary layer separation—drag directly due to friction is still negligible!

We can also now begin to see how *streamlining* of a body works. The drag force in most aerodynamics is due to the low-pressure wake: If we can reduce or eliminate the wake, drag will be greatly reduced. If we consider once again why the separation occurred, we recall two features: Boundary layer friction slowed down the particles, but so did the adverse pressure gradient. The pressure increased very rapidly across the back half of the sphere in Fig. 2.12a because the streamlines opened up so rapidly. If we make the sphere teardrop shaped, as in Fig. 2.14, the streamlines open up gradually, and hence the pressure gradient will increase slowly, to such an extent that fluid particles are not forced to separate from the object until they almost reach the end of the object, as shown. The wake is much smaller (and it turns out the pressure will not be as low as before), leading to much less pressure drag. The only negative aspect of this streamlining is that the total surface area on which friction occurs is larger, so drag due to friction will increase a little.<sup>11</sup>

We should point out that none of this discussion applies to the example of a falling dust particle: This low-Reynolds number flow was viscous throughout—there is no inviscid region.

Finally, this discussion illustrates the very significant difference between inviscid flow ( $\mu = 0$ ), and flows in which viscosity is negligible but not zero ( $\mu \rightarrow 0$ ).

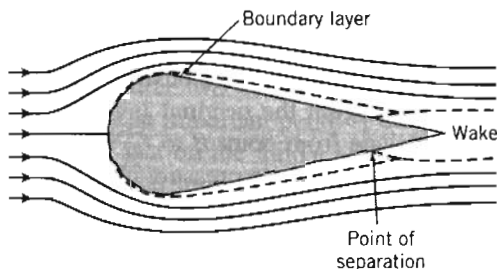


Fig. 2.14 Flow over a streamlined object.

### Laminar and Turbulent Flows

If you turn on a faucet (that doesn't have an aerator or other attachment) at a very low flow rate the water will flow out very smoothly—almost “glass-like.” If you increase the flow rate, the water will exit in a churned-up, chaotic manner. These are examples of how a viscous flow can be laminar or turbulent, respectively. A *laminar* flow is one in which the fluid particles move in smooth layers, or laminas; a *turbulent* flow is one

<sup>11</sup> The effect of streamlining a body is demonstrated in the NCFMF video *Fluid Dynamics of Drag*.

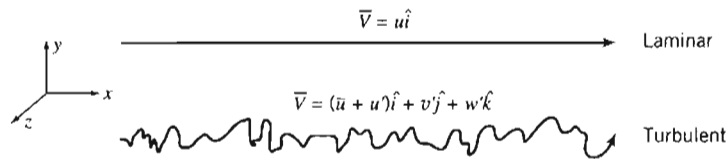


Fig. 2.15 Particle pathlines in one-dimensional laminar and turbulent flows.

in which the fluid particles rapidly mix as they move along due to random three-dimensional velocity fluctuations. Typical examples of pathlines of each of these are illustrated in Fig. 2.15, which shows a one-dimensional flow. In most fluid mechanics problems—for example, flow of water in a pipe—turbulence is an unwanted but often unavoidable phenomenon, because it generates more resistance to flow; in other problems—for example, the flow of blood through blood vessels—it is desirable because the random mixing allows all of the blood cells to contact the walls of the blood vessels to exchange oxygen and other nutrients.<sup>12</sup>

The velocity of the laminar flow is simply  $u$ ; the velocity of the turbulent flow is given by the mean velocity  $\bar{u}$  plus the three components of randomly fluctuating velocity  $u'$ ,  $v'$ , and  $w'$ .

Although many turbulent flows of interest are steady in the mean ( $\bar{u}$  is not a function of time), the presence of the random, high-frequency velocity fluctuations makes the analysis of turbulent flows extremely difficult. In a one-dimensional laminar flow, the shear stress is related to the velocity gradient by the simple relation

$$\tau_{yx} = \mu \frac{du}{dy} \quad (2.10)$$

For a turbulent flow in which the mean velocity field is one-dimensional, no such simple relation is valid. Random, three-dimensional velocity fluctuations ( $u'$ ,  $v'$ , and  $w'$ ) transport momentum across the mean flow streamlines, increasing the effective shear stress. (This apparent stress is discussed in more detail in Chapter 8.) Consequently, in turbulent flow there is no universal relationship between the stress field and the mean-velocity field. Thus in turbulent flows we must rely heavily on semi-empirical theories and on experimental data.

### Compressible and Incompressible Flows

Flows in which variations in density are negligible are termed *incompressible*; when density variations within a flow are not negligible, the flow is called *compressible*. The most common example of compressible flow concerns the flow of gases, while the flow of liquids may frequently be treated as incompressible.

For many liquids, density is only a weak function of temperature. At modest pressures, liquids may be considered incompressible. However, at high pressures, compressibility effects in liquids can be important. Pressure and density changes in liquids are related by the *bulk compressibility modulus*, or modulus of elasticity,

$$E_v \equiv \frac{dp}{(d\rho/\rho)} \quad (2.14)$$

<sup>12</sup> Several examples illustrating the nature of laminar and turbulent flows are shown in the NCFMF video *Turbulence* and in the University of Iowa video *Characteristics of Laminar and Turbulent Flow*.

If the bulk modulus is independent of temperature, then density is only a function of pressure (the fluid is *barotropic*). Bulk modulus data for some common liquids are given in Appendix A.

Water hammer and cavitation<sup>13</sup> are examples of the importance of compressibility effects in liquid flows. *Water hammer* is caused by acoustic waves propagating and reflecting in a confined liquid, for example when a valve is closed abruptly. The resulting noise can be similar to “hammering” on the pipes, hence the term.

*Cavitation* occurs when vapor pockets form in a liquid flow because of local reductions in pressure (for example at the tip of a boat’s propeller blades). Depending on the number and distribution of particles in the liquid to which very small pockets of undissolved gas or air may attach, the local pressure at the onset of cavitation may be at or below the vapor pressure of the liquid. These particles act as nucleation sites to initiate vaporization.

*Vapor pressure* of a liquid is the partial pressure of the vapor in contact with the saturated liquid at a given temperature. When pressure in a liquid is reduced to less than the vapor pressure, the liquid may change phase suddenly and “flash” to vapor.

The vapor pockets in a liquid flow may alter the geometry of the flow field substantially. When adjacent to a surface, the growth and collapse of vapor bubbles can cause serious damage by eroding the surface material.

Very pure liquids can sustain large negative pressures—as much as  $-60$  atmospheres for distilled water—before the liquid “ruptures” and vaporization occurs. Undissolved air is invariably present near the free surface of water or seawater, so cavitation occurs where the local total pressure is quite close to the vapor pressure.

It turns out that gas flows with negligible heat transfer also may be considered incompressible provided that the flow speeds are small relative to the speed of sound; the ratio of the flow speed,  $V$ , to the local speed of sound,  $c$ , in the gas is defined as the Mach number,

$$M \equiv \frac{V}{c}$$

For  $M < 0.3$ , the maximum density variation is less than 5 percent. Thus gas flows with  $M < 0.3$  can be treated as incompressible; a value of  $M = 0.3$  in air at standard conditions corresponds to a speed of approximately 100 m/s. For example, although it might be a little counterintuitive, when you drive your car at 65 mph the air flowing around it has negligible change in density.

Compressible flows occur frequently in engineering applications. Common examples include compressed air systems used to power shop tools and dental drills, transmission of gases in pipelines at high pressure, and pneumatic or fluidic control and sensing systems. Compressibility effects are very important in the design of modern high-speed aircraft and missiles, power plants, fans, and compressors.

### Internal and External Flows

Flows completely bounded by solid surfaces are called *internal* or *duct flows*. Flows over bodies immersed in an unbounded fluid are termed *external flows*. Both internal and external flows may be laminar or turbulent, compressible or incompressible.

<sup>13</sup> Examples of cavitation are illustrated in the NCFMF video *Cavitation*.

We mentioned an example of internal flow when we discussed the flow out of a faucet—the flow in the pipe leading to the faucet is an internal flow. It turns out that we have a Reynolds number for pipe flows defined as  $Re = \rho \bar{V} D / \mu$ , where  $\bar{V}$  is the average flow velocity and  $D$  is the pipe diameter (note that we do *not* use the pipe length!). This Reynolds number indicates whether a pipe flow will be laminar or turbulent. Flow will generally be laminar for  $Re \leq 2300$ , and turbulent for larger values: Flow in a pipe of constant diameter will be entirely laminar or entirely turbulent, depending on the value of the velocity  $\bar{V}$ . We will explore internal flows in detail in Chapter 8.

We already saw some examples of external flows when we discussed the flow over a sphere (Fig. 2.12*b*) and a streamlined object (Fig. 2.14). What we didn't mention was that these flows could be laminar or turbulent. In addition, we mentioned boundary layers (Fig. 2.13): It turns out these also can be laminar or turbulent. When we discuss these in detail (Chapter 9), we'll start with the simplest kind of boundary layer—that over a flat plate—and learn that just as we have a Reynolds number for the overall external flow that indicates the relative significance of viscous forces, there will also be a boundary-layer Reynolds number  $Re_x = \rho U_\infty x / \mu$  where in this case the characteristic velocity  $U_\infty$  is the velocity immediately outside the boundary layer and the characteristic length  $x$  is the distance along the plate. Hence, at the leading edge of the plate  $Re_x = 0$ , and at the end of a plate of length  $L$ , it will be  $Re_x = \rho U_\infty L / \mu$ . The significance of this Reynolds number is that (as we'll learn) the boundary layer will be laminar for  $Re_x \leq 5 \times 10^5$ , and turbulent for larger values: A boundary layer will start out laminar, and if the plate is long enough the boundary layer will transition to become turbulent.

It is clear by now that computing a Reynolds number is often very informative for both internal and external flows. We will discuss this and other important *dimensionless groups* (such as the Mach number) in Chapter 7.

The internal flow of liquids in which the duct does not flow full—where there is a free surface subject to a constant pressure—is termed *open-channel flow*. Common examples of open-channel flow include flow in rivers, irrigation ditches, and aqueducts. Open-channel flow will not be treated in this text. (References [8] through [11] contain introductory treatments of open-channel flow.)

The internal flow through fluid machines is considered in Chapter 10. The principle of angular momentum is applied to develop fundamental equations for fluid machines. Pumps, fans, blowers, compressors, and propellers that add energy to fluid streams are considered, as are turbines and windmills that extract energy. The chapter features detailed discussion of operation of fluid systems.

Both internal and external flows can be compressible or incompressible. Compressible flows can be divided into subsonic and supersonic regimes. We will study compressible flows in Chapters 11 and 12, and see among other things that *supersonic flows* ( $M > 1$ ) will behave very differently than *subsonic flows* ( $M < 1$ ). For example, supersonic flows can experience oblique and normal shocks, and can also behave in a counterintuitive way—e.g., a supersonic nozzle (a device to accelerate a flow) must be divergent (i.e., it has *increasing* cross-sectional area) in the direction of flow! We note here also that in a subsonic nozzle (which has a convergent cross-sectional area), the pressure of the flow at the exit plane will always be the ambient pressure; for a sonic flow, the exit pressure can be higher than ambient; and for a supersonic flow the exit pressure can be greater than, equal to, or less than the ambient pressure!



---

## 2-7 SUMMARY

In this chapter we have completed our review of some of the fundamental concepts we will utilize in our study of fluid mechanics. Some of these are:

- ✓ How to describe flows (timelines, pathlines, streamlines, streaklines).
- ✓ Forces (surface, body) and stresses (shear, normal).
- ✓ Types of fluids (Newtonian, non-Newtonian—dilatant, pseudoplastic, thixotropic, rheopectic, Bingham plastic) and viscosity (kinematic, dynamic, apparent).
- ✓ Types of flow (viscous/inviscid, laminar/turbulent, compressible/incompressible, internal/external).

We also briefly discussed some interesting phenomena, such as surface tension, boundary layers, wakes, and streamlining. Finally, we introduced two very useful dimensionless groups—the Reynolds number and the Mach number.

---

## REFERENCES

1. Vincenti, W. G., and C. H. Kruger, Jr., *Introduction to Physical Gas Dynamics*. New York: Wiley, 1965.
2. Merzkirch, W., *Flow Visualization*, 2nd ed. New York: Academic Press, 1987.
3. Tanner, R. I., *Engineering Rheology*. Oxford: Clarendon Press, 1985.
4. Macosko, C. W., *Rheology: Principles, Measurements, and Applications*. New York: VCH Publishers, 1994.
5. Loh, W. H. T., "Theory of the Hydraulic Analogy for Steady and Unsteady Gas Dynamics," in *Modern Developments in Gas Dynamics*, W. H. T. Loh, ed. New York: Plenum, 1969.
6. Folsom, R. G., "Manometer Errors due to Capillarity," *Instruments*, 9, 1, 1937, pp. 36–37.
7. Waugh, J. G., and G. W. Stubstad, *Hydroballistics Modeling*. San Diego: Naval Undersea Center, ca. 1972.
8. Munson, B. R., D. F. Young, and T. H. Okiishi, *Fundamentals of Fluid Mechanics*, 3rd ed. New York: Wiley, 1999.
9. Roberson, J. A., and C. T. Crowe, *Engineering Fluid Mechanics*, 6th ed. New York: Wiley, 1997.
10. Streeter, V. L., K. Bedford, and E. B. Wylie, *Fluid Mechanics*, 9th ed. New York: McGraw-Hill, 1998.
11. White, F. M., *Fluid Mechanics*, 4th ed. New York: McGraw-Hill, 1998.

---

## PROBLEMS

- 2.1 For the velocity fields given below, determine:
- (a) whether the flow field is one-, two-, or three-dimensional, and why.
  - (b) whether the flow is steady or unsteady, and why.

(The quantities  $a$  and  $b$  are constants.)

- |  |  |
|--|--|
| (1) $\vec{V} = [ax^2e^{-bt}]\hat{i}$               | (2) $\vec{V} = ax\hat{i} - by\hat{j}$                |
| (3) $\vec{V} = ax^2\hat{i} + bx\hat{j} + c\hat{k}$ | (4) $\vec{V} = ax^2\hat{i} + bxz\hat{j} + cz\hat{k}$ |
| (5) $\vec{V} = [ae^{-bx}]\hat{i} + bx^2\hat{j}$    | (6) $\vec{V} = axy\hat{i} - byz\hat{j}$              |
| (7) $\vec{V} = a(x^2 + y^2)^{1/2}(1/z^3)\hat{k}$   | (8) $\vec{V} = (ax + t)\hat{i} - by^2\hat{j}$        |

- 2.2 A viscous liquid is sheared between two parallel disks; the upper disk rotates and the lower one is fixed. The velocity field between the disks is given by  $\vec{V} = \hat{e}_\theta r\omega z/h$ . (The origin of coordinates is located at the center of the lower disk; the upper disk is located at  $z = h$ .) What are the dimensions of this velocity field? Does this velocity field satisfy appropriate physical boundary conditions? What are they?
- 2.3 The velocity field  $\vec{V} = ax\hat{i} - by\hat{j}$ , where  $a = b = 1 \text{ s}^{-1}$ , can be interpreted to represent flow in a corner. Find an equation for the flow streamlines. Plot several streamlines in the first quadrant, including the one that passes through the point  $(x, y) = (0, 0)$ .
- 2.4 A velocity field is given by  $\vec{V} = ax\hat{i} - bty\hat{j}$ , where  $a = 1 \text{ s}^{-1}$  and  $b = 1 \text{ s}^{-2}$ . Find the equation of the streamlines at any time  $t$ . Plot several streamlines in the first quadrant at  $t = 0 \text{ s}$ ,  $t = 1 \text{ s}$ , and  $t = 20 \text{ s}$ .
- 2.5 For the velocity field  $\vec{V} = Ax\hat{i} + By^2\hat{j}$ , where  $A = 1 \text{ m}^{-1}\text{s}^{-1}$ ,  $B = -\frac{1}{2} \text{ m}^{-1}\text{s}^{-1}$ , and the coordinates are measured in meters, obtain an equation for the flow streamlines. Plot several streamlines for positive  $y$ .
- 2.6 A velocity field is specified as  $\vec{V} = ax^2\hat{i} + bxy\hat{j}$ , where  $a = 2 \text{ m}^{-1}\text{s}^{-1}$ ,  $b = -6 \text{ m}^{-1}\text{s}^{-1}$ , and the coordinates are measured in meters. Is the flow field one-, two-, or three-dimensional? Why? Calculate the velocity components at the point  $(2, \frac{1}{2})$ . Develop an equation for the streamline passing through this point. Plot several streamlines in the first quadrant including the one that passes through the point  $(2, \frac{1}{2})$ .
- 2.7 A flow is described by the velocity field  $\vec{V} = (Ax + B)\hat{i} + (-Ay)\hat{j}$ , where  $A = 10 \text{ ft/s/ft}$  and  $B = 20 \text{ ft/s}$ . Plot a few streamlines in the  $xy$  plane, including the one that passes through the point  $(x, y) = (1, 2)$ .
- 2.8 A velocity field is given by  $\vec{V} = ax^3\hat{i} + bxy^3\hat{j}$ , where  $a = 1 \text{ m}^{-2} \text{ s}^{-1}$  and  $b = 1 \text{ m}^{-3} \text{ s}^{-1}$ . Find the equation of the streamlines. Plot several streamlines in the first quadrant.
- 2.9 The velocity for a steady, incompressible flow in the  $xy$  plane is given by  $\vec{V} = \hat{i}Ax + \hat{j}Ay/x^2$ , where  $A = 2 \text{ m}^2/\text{s}$ , and the coordinates are measured in meters. Obtain an equation for the streamline that passes through the point  $(x, y) = (1, 3)$ . Calculate the time required for a fluid particle to move from  $x = 1 \text{ m}$  to  $x = 3 \text{ m}$  in this flow field.
- 2.10 Beginning with the velocity field of Problem 2.3, verify that the parametric equations for particle motion are given by  $x_p = c_1e^{at}$  and  $y_p = c_2e^{-bt}$ . Obtain the equation for the pathline of the particle located at the point  $(x, y) = (1, 2)$  at the instant  $t = 0$ . Compare this pathline with the streamline through the same point.
- 2.11 A velocity field is given by  $\vec{V} = ay\hat{i} - bx\hat{j}$ , where  $a = 1 \text{ s}^{-2}$  and  $b = 4 \text{ s}^{-1}$ . Find the equation of the streamlines at any time  $t$ . Plot several streamlines at  $t = 0 \text{ s}$ ,  $t = 1 \text{ s}$ , and  $t = 20 \text{ s}$ .
- 2.12 Air flows downward toward an infinitely wide horizontal flat plate. The velocity field is given by  $\vec{V} = (ax\hat{i} - ay\hat{j})(2 + \cos \omega t)$ , where  $a = 3 \text{ s}^{-1}$ ,  $\omega = \pi \text{ s}^{-1}$ ,  $x$  and  $y$  (measured in meters) are horizontal and vertically upward, respectively, and  $t$  is in s. Obtain an algebraic equation for a streamline at  $t = 0$ . Plot the streamline that passes through point  $(x, y) = (2, 4)$  at this instant. Will the streamline change with time? Explain briefly. Show the velocity vector on your plot at the same point and time. Is the velocity vector tangent to the streamline? Explain.



- 2.13 Consider the flow field given in Eulerian description by the expression  $\vec{V} = A\hat{i} + Bt\hat{j}$ , where  $A = 2 \text{ m/s}$ ,  $B = 0.6 \text{ m/s}^2$ , and the coordinates are measured in meters. Derive the Lagrangian position functions for the fluid particle that was located at the point  $(x, y) = (1, 1)$  at the instant  $t = 0$ . Obtain an algebraic expression for the pathline followed by this particle. Plot the pathline and compare with the streamlines plotted through the same point at the instants  $t = 0, 1$ , and  $2 \text{ s}$ .
- 2.14 Consider the flow described by the velocity field  $\vec{V} = Bx(1 + At)\hat{i} + Cy\hat{j}$ , with  $A = 0.5 \text{ s}^{-1}$ , and  $B = C = 1 \text{ s}^{-1}$ . Coordinates are measured in meters. Plot the pathline traced out by the particle that passes through the point  $(1, 1)$  at time  $t = 0$ . Compare with the streamlines plotted through the same point at the instants  $t = 0, 1$ , and  $2 \text{ s}$ .
- 2.15 A velocity field is given by  $\vec{V} = ax\hat{i} - by\hat{j}$ , where  $a = 0.1 \text{ s}^{-2}$  and  $b = 1 \text{ s}^{-1}$ . For the particle that passes through the point  $(x, y) = (1, 1)$  at instant  $t = 0 \text{ s}$ , plot the pathline during the interval from  $t = 0$  to  $t = 3 \text{ s}$ . Compare with the streamlines plotted through the same point at the instants  $t = 0, 1$ , and  $2 \text{ s}$ .
- 2.16 Consider the flow field  $\vec{V} = ax\hat{i} + b\hat{j}$ , where  $a = 0.2 \text{ s}^{-2}$  and  $b = 3 \text{ m/s}$ . Coordinates are measured in meters. For the particle that passes through the point  $(x, y) = (3, 1)$  at the instant  $t = 0$ , plot the pathline during the interval from  $t = 0$  to  $3 \text{ s}$ . Compare this pathline with the streamlines plotted through the same point at the instants  $t = 1, 2$ , and  $3 \text{ s}$ .
- 2.17 Consider the velocity field  $V = ax\hat{i} + by(1 + ct)\hat{j}$ , where  $a = b = 2 \text{ s}^{-1}$ , and  $c = 0.4 \text{ s}^{-1}$ . Coordinates are measured in meters. For the particle that passes through the point  $(x, y) = (1, 1)$  at the instant  $t = 0$ , plot the pathline during the interval from  $t = 0$  to  $1.5 \text{ s}$ . Compare this pathline with the streamlines plotted through the same point at the instants  $t = 0, 1$ , and  $1.5 \text{ s}$ .
- 2.18 Consider the velocity field of Problem 2.14. Plot the streakline formed by particles that passed through the point  $(1, 1)$  during the interval from  $t = 0$  to  $t = 3 \text{ s}$ . Compare with the streamlines plotted through the same point at the instants  $t = 0, 1$ , and  $2 \text{ s}$ .
- 2.19 Streaklines are traced out by neutrally buoyant marker fluid injected into a flow field from a fixed point in space. A particle of the marker fluid that is at point  $(x, y)$  at time  $t$  must have passed through the injection point  $(x_0, y_0)$  at some earlier instant  $t = \tau$ . The time history of a marker particle may be found by solving the pathline equations for the initial conditions that  $x = x_0, y = y_0$  when  $t = \tau$ . The present locations of particles on the streakline are obtained by setting  $\tau$  equal to values in the range  $0 \leq \tau \leq t$ . Consider the flow field  $\vec{V} = ax(1 + bt)\hat{i} + cy\hat{j}$ , where  $a = c = 1 \text{ s}^{-1}$  and  $b = 0.2 \text{ s}^{-1}$ . Coordinates are measured in meters. Plot the streakline that passes through the initial point  $(x_0, y_0) = (1, 1)$ , during the interval from  $t = 0$  to  $t = 3 \text{ s}$ . Compare with the streamline plotted through the same point at the instants  $t = 0, 1$ , and  $2 \text{ s}$ .
- 2.20 Tiny hydrogen bubbles are being used as tracers to visualize a flow. All the bubbles are generated at the origin  $(x = 0, y = 0)$ . The velocity field is unsteady and obeys the equations:

$$\begin{array}{lll} u = -1 \text{ m/s} & v = 1 \text{ m/s} & 0 \leq t < 2 \text{ s} \\ u = 0 & v = 2 \text{ m/s} & 2 \leq t \leq 4 \text{ s} \end{array}$$

Plot the pathlines of bubbles that leave the origin at  $t = 0, 1, 2, 3$ , and  $4 \text{ s}$ . Mark the locations of these five bubbles at  $t = 4 \text{ s}$ . Use a dashed line to indicate the position of a streakline at  $t = 4 \text{ s}$ .

- 2.21 Consider the flow field  $\vec{V} = ax\hat{i} + b\hat{j}$ , where  $a = 0.2 \text{ s}^{-2}$  and  $b = 1 \text{ m/s}$ . Coordinates are measured in meters. For the particle that passes through the point  $(x, y) = (1, 2)$  at the instant  $t = 0$ , plot the pathline during the time interval from  $t = 0$  to  $3 \text{ s}$ . Compare this pathline with the streakline through the same point at the instant  $t = 3 \text{ s}$ .

- 2.22 A flow is described by velocity field,  $\vec{V} = a\hat{i} + bx\hat{j}$ , where  $a = 2 \text{ m/s}$  and  $b = 1 \text{ s}^{-1}$ . Coordinates are measured in meters. Obtain the equation for the streamline passing through point (2, 5). At  $t = 2 \text{ s}$ , what are the coordinates of the particle that passed through point (0, 4) at  $t = 0$ ? At  $t = 3 \text{ s}$ , what are the coordinates of the particle that passed through point (1, 4.25) 2 s earlier? What conclusions can you draw about the pathline, streamline, and streakline for this flow?
- 2.23 A flow is described by velocity field,  $\vec{V} = ay\hat{i} + b\hat{j}$ , where  $a = 1 \text{ s}^{-1}$  and  $b = 2 \text{ m/s}$ . Coordinates are measured in meters. Obtain the equation for the streamline passing through point (6, 6). At  $t = 1 \text{ s}$ , what are the coordinates of the particle that passed through point (1, 4) at  $t = 0$ ? At  $t = 3 \text{ s}$ , what are the coordinates of the particle that passed through point (-3, 0) 2 s earlier? Show that pathlines, streamlines, and streaklines for this flow coincide.
- 2.24 A flow is described by velocity field,  $\vec{V} = at\hat{i} + b\hat{j}$ , where  $a = 0.4 \text{ m/s}^2$  and  $b = 2 \text{ m/s}$ . At  $t = 2 \text{ s}$ , what are the coordinates of the particle that passed through point (2, 1) at  $t = 0$ ? At  $t = 3 \text{ s}$ , what are the coordinates of the particle that passed through point (2, 1) at  $t = 2 \text{ s}$ ? Plot the pathline and streakline through point (2, 1) and compare with the streamlines through the same point at the instants  $t = 0, 1, \text{ and } 2 \text{ s}$ .
- 2.25 A flow is described by velocity field,  $\vec{V} = ay\hat{i} + bt\hat{j}$ , where  $a = 1 \text{ s}^{-1}$  and  $b = 0.5 \text{ m/s}^2$ . At  $t = 2 \text{ s}$ , what are the coordinates of the particle that passed through point (1, 2) at  $t = 0$ ? At  $t = 3 \text{ s}$ , what are the coordinates of the particle that passed through point (1, 2) at  $t = 2 \text{ s}$ ? Plot the pathline and streakline through point (1, 2) and compare with the streamlines through the same point at the instants  $t = 0, 1, \text{ and } 2 \text{ s}$ .
- 2.26 The variation with temperature of the viscosity of air is correlated well by the empirical Sutherland equation

$$\mu = \frac{bT^{1/2}}{1 + S/T}$$

Best-fit values of  $b$  and  $S$  are given in Appendix A for use with SI units. Use these values to develop an equation for calculating air viscosity in British Gravitational units as a function of absolute temperature in degrees Rankine. Check your result using data from Appendix A.

- 2.27 The variation with temperature of the viscosity of air is represented well by the empirical Sutherland correlation

$$\mu = \frac{bT^{1/2}}{1 + S/T}$$

Best-fit values of  $b$  and  $S$  are given in Appendix A. Develop an equation in SI units for kinematic viscosity versus temperature for air at atmospheric pressure. Assume ideal gas behavior. Check using data from Appendix A.

- 2.28 Some experimental data for the viscosity of helium at 1 atm are

$T, ^\circ\text{C}$	0	100	200	300	400
$\mu, \text{N} \cdot \text{s/m}^2 (\times 10^5)$	1.86	2.31	2.72	3.11	3.46

Using the approach described in Appendix A-3, correlate these data to the empirical Sutherland equation

$$\mu = \frac{bT^{1/2}}{1 + S/T}$$

(where  $T$  is in kelvin) and obtain values for constants  $b$  and  $S$ .

- 2.29 The velocity distribution for laminar flow between parallel plates is given by

$$\frac{u}{u_{\max}} = 1 - \left(\frac{2y}{h}\right)^2$$

where  $h$  is the distance separating the plates and the origin is placed midway between the plates. Consider a flow of water at  $15^\circ\text{C}$ , with  $u_{\max} = 0.10$  m/s and  $h = 0.25$  mm. Calculate the shear stress on the upper plate and give its direction. Sketch the variation of shear stress across the channel.

- 2.30 The velocity distribution for laminar flow between parallel plates is given by

$$\frac{u}{u_{\max}} = 1 - \left(\frac{2y}{h}\right)^2$$

where  $h$  is the distance separating the plates and the origin is placed midway between the plates. Consider flow of water at  $15^\circ\text{C}$  with maximum speed of  $0.05$  m/s and  $h = 1$  mm. Calculate the force on a  $1\text{m}^2$  section of the lower plate and give its direction.

- 2.31 Explain how an ice skate interacts with the ice surface. What mechanism acts to reduce sliding friction between skate and ice?
- 2.32 A female freestyle ice skater, weighing  $100$  lbf, glides on one skate at speed  $V = 20$  ft/s. Her weight is supported by a thin film of liquid water melted from the ice by the pressure of the skate blade. Assume the blade is  $L = 11.5$  in. long and  $w = 0.125$  in. wide, and that the water film is  $h = 0.0000575$  in. thick. Estimate the deceleration of the skater that results from viscous shear in the water film, if end effects are neglected.



- 2.33 Crude oil, with specific gravity  $SG = 0.85$  and viscosity  $\mu = 2.15 \times 10^{-3}$  lbf · s/ft<sup>2</sup>, flows steadily down a surface inclined  $\theta = 30$  degrees below the horizontal in a film of thickness  $h = 0.125$  in. The velocity profile is given by


$$u = \frac{\rho g}{\mu} \left( hy - \frac{y^2}{2} \right) \sin \theta$$

(Coordinate  $x$  is along the surface and  $y$  is normal to the surface.) Plot the velocity profile. Determine the magnitude and direction of the shear stress that acts on the surface.

- 2.34 A block weighing  $10$  lbf and having dimensions  $10$  in. on each edge is pulled up an inclined surface on which there is a film of SAE 10W oil at  $100^\circ\text{F}$ . If the speed of the block is  $2$  ft/s and the oil film is  $0.001$  in. thick, find the force required to pull the block. Assume the velocity distribution in the oil film is linear. The surface is inclined at an angle of  $25^\circ$  from the horizontal.
- 2.35 Recording tape is to be coated on both sides with lubricant by drawing it through a narrow gap. The tape is  $0.015$  in. thick and  $1.00$  in. wide. It is centered in the gap with a clearance of  $0.012$  in. on each side. The lubricant, of viscosity  $\mu = 0.021$  slug/(ft · s), completely fills the space between the tape and gap for a length of  $0.75$  in. along the tape. If the tape can withstand a maximum tensile force of  $7.5$  lbf, determine the maximum speed with which it can be pulled through the gap.



- 2.36 A block of mass  $M$  slides on a thin film of oil. The film thickness is  $h$  and the area of the block is  $A$ . When released, mass  $m$  exerts tension on the cord, causing the block to accelerate. Neglect friction in the pulley and air resistance. Develop an algebraic expression for the viscous force that acts on the block when it moves at speed  $V$ . Derive a differential equation for the block speed as a function of time. Obtain an expression for the block speed as a function of time. The mass  $M = 5$  kg,  $m = 1$  kg,  $A = 25$  cm<sup>2</sup>, and  $h = 0.5$  mm. If it takes  $1$  s for the speed to reach  $1$  m/s, find the oil viscosity  $\mu$ . Plot the curve for  $V(t)$ .

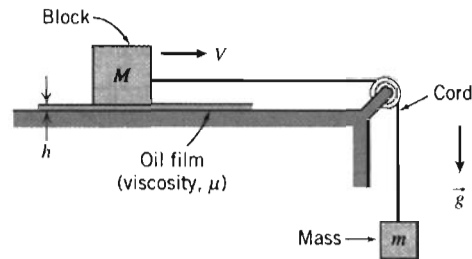

P2.36

- 2.37 A block that is  $a$  mm square slides across a flat plate on a thin film of oil. The oil has viscosity  $\mu$  and the film is  $h$  mm thick. The block of mass  $M$  moves at steady speed  $U$  under the influence of constant force  $F$ . Indicate the magnitude and direction of the shear stresses on the bottom of the block and the plate. If the force is removed suddenly and the block begins to slow, sketch the resulting speed versus time curve for the block. Obtain an expression for the time required for the block to lose 95 percent of its initial speed.
- 2.38 A block 0.2 m square, with 5 kg mass, slides down a smooth incline,  $30^\circ$  below the horizontal, on a film of SAE 30 oil at  $20^\circ\text{C}$  that is 0.20 mm thick. If the block is released from rest at  $t = 0$ , what is its initial acceleration? Derive an expression for the speed of the block as a function of time. Plot the curve for  $V(t)$ . Find the speed after 0.1 s. If we want the mass to instead reach a speed of 0.3 m/s at this time, find the viscosity  $\mu$  of the oil we would have to use.
- 2.39 Magnet wire is to be coated with varnish for insulation by drawing it through a circular die of 1.0 mm diameter. The wire diameter is 0.9 mm and it is centered in the die. The varnish ( $\mu = 20$  centipoise) completely fills the space between the wire and the die for a length of 50 mm. The wire is drawn through the die at a speed of 50 m/s. Determine the force required to pull the wire.
- 2.40 A concentric cylinder viscometer may be formed by rotating the inner member of a pair of closely fitting cylinders (see Fig. P2.43). The annular gap is small so that a linear velocity profile will exist in the liquid sample. Consider a viscometer with an inner cylinder of 4 in. diameter and 8 in. height, and a clearance gap width of 0.001 in., filled with castor oil at  $90^\circ\text{F}$ . Determine the torque required to turn the inner cylinder at 400 rpm.
- 2.41 A concentric cylinder viscometer may be formed by rotating the inner member of a pair of closely fitting cylinders (see Fig. P2.43). For small clearances, a linear velocity profile may be assumed in the liquid filling the annular clearance gap. A viscometer has an inner cylinder of 75 mm diameter and 150 mm height, with a clearance gap width of 0.02 mm. A torque of  $0.021 \text{ N} \cdot \text{m}$  is required to turn the inner cylinder at 100 rpm. Determine the viscosity of the liquid in the clearance gap of the viscometer.
- 2.42 A shaft with outside diameter of 18 mm turns at 20 revolutions per second inside a stationary journal bearing 60 mm long. A thin film of oil 0.2 mm thick fills the concentric annulus between the shaft and journal. The torque needed to turn the shaft is  $0.0036 \text{ N} \cdot \text{m}$ . Estimate the viscosity of the oil that fills the gap.
- 2.43 A concentric cylinder viscometer is driven by a falling mass  $M$  connected by a cord and pulley to the inner cylinder, as shown. The liquid to be tested fills the annular gap of width  $a$  and height  $H$ . After a brief starting transient, the mass falls at constant speed  $V_m$ . Develop an algebraic expression for the viscosity of the liquid in the device in terms of  $M$ ,  $g$ ,  $V_m$ ,  $r$ ,  $R$ ,  $a$ , and  $H$ . Evaluate the viscosity of the liquid using:

$$M = 0.10 \text{ kg}$$


$$R = 50 \text{ mm}$$

$$H = 80 \text{ mm}$$

$$r = 25 \text{ mm}$$


$$a = 0.20 \text{ mm}$$

$$V_m = 30 \text{ mm/s}$$

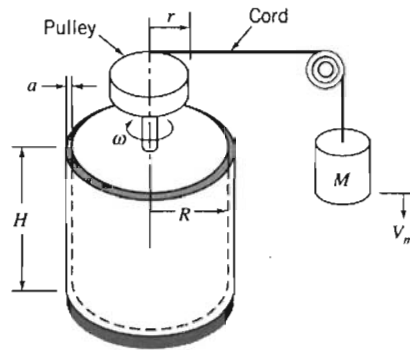


P2.43, 2.44

- 2.44 The viscometer of Problem 2.43 is being used to verify that the viscosity of a particular fluid is  $\mu = 0.1 \text{ N} \cdot \text{s}/\text{m}^2$ . Unfortunately the cord snaps during the experiment. How long will it take the cylinder to lose 99% of its speed? The moment of inertia of the cylinder/pulley system is  $0.0273 \text{ kg} \cdot \text{m}^2$ .
- 2.45 The thin outer cylinder (mass  $m_2$  and radius  $R$ ) of a small portable concentric cylinder viscometer is driven by a falling mass,  $m_1$ , attached to a cord. The inner cylinder is stationary. The clearance between the cylinders is  $a$ . Neglect bearing friction, air resistance, and the mass of liquid in the viscometer. Obtain an algebraic expression for the torque due to viscous shear that acts on the cylinder at angular speed  $\omega$ . Derive and solve a differential equation for the angular speed of the outer cylinder as a function of time. Obtain an expression for the maximum angular speed of the cylinder.

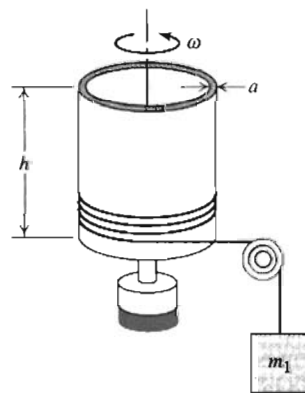


P2.45

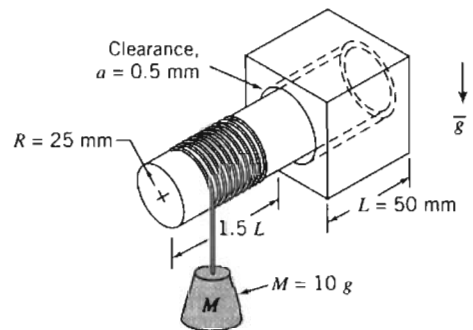

P2.46


- 2.46 A circular aluminum shaft mounted in a journal is shown. The symmetric clearance gap between the shaft and journal is filled with SAE 10W-30 oil at  $T = 30^\circ\text{C}$ . The shaft is caused to turn by the attached mass and cord. Develop and solve a differential equation for the angular speed of the shaft as a function of time. Calculate the maximum angular speed of the shaft and the time required to reach 95 percent of this speed.
- 2.47 A shock-free coupling for a low-power mechanical drive is to be made from a pair of concentric cylinders. The annular space between the cylinders is to be filled with oil. The drive must transmit power,  $\mathcal{P} = 5 \text{ W}$ . Other dimensions and properties are as shown. Neglect any bearing friction and end effects. Assume the minimum practical gap clearance  $\delta$  for the device is  $\delta = 0.5 \text{ mm}$ . Dow manufactures silicone fluids with

viscosities as high as  $10^6$  centipoise. Determine the viscosity that should be specified to satisfy the requirement for this device.

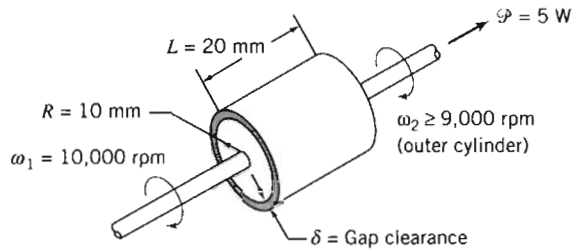


P2.47

- 2.48 A proposal has been made to use a pair of parallel disks to measure the viscosity of a liquid sample. The upper disk rotates at height  $h$  above the lower disk. The viscosity of the liquid in the gap is to be calculated from measurements of the torque needed to turn the upper disk steadily. Obtain an algebraic expression for the torque needed to turn the disk. Could we use this device to measure the viscosity of a non-Newtonian fluid? Explain.

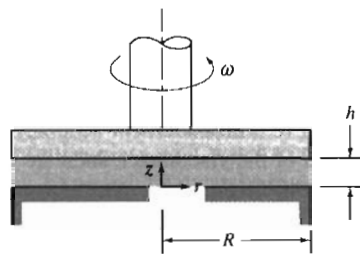

P2.48

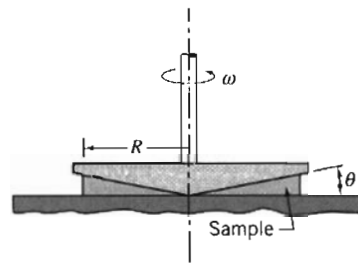


P2.49, 2.50

- 2.49 The cone and plate viscometer shown is an instrument used frequently to characterize non-Newtonian fluids. It consists of a flat plate and a rotating cone with a very obtuse angle (typically  $\theta$  is less than 0.5 degrees). The apex of the cone just touches the plate surface and the liquid to be tested fills the narrow gap formed by the cone and plate. Derive an expression for the shear rate in the liquid that fills the gap in terms of the geometry of the system. Evaluate the torque on the driven cone in terms of the shear stress and geometry of the system.


- 2.50 The viscometer of Problem 2.49 is used to measure the apparent viscosity of a fluid. The data below are obtained. What kind of non-Newtonian fluid is this? Find the values of  $k$  and  $n$  used in Eqs. 2.11 and 2.12 in defining the apparent viscosity of a fluid. (Assume  $\theta$  is 0.5 degrees.) Predict the viscosity at 90 and 100 rpm.

Speed (rpm)	10	20	30	40	50	60	70	80
$\mu(\text{N} \cdot \text{s}/\text{m}^2)$	0.121	0.139	0.153	0.159	0.172	0.172	0.183	0.185

- 2.51 A viscous clutch is to be made from a pair of closely spaced parallel disks enclosing a thin layer of viscous liquid. Develop algebraic expressions for the torque and the power transmitted by the disk pair, in terms of liquid viscosity,  $\mu$ , disk radius,  $R$ , disk spacing,  $a$ , and the angular speeds:  $\omega_i$  of the input disk and  $\omega_o$  of the output disk. Also develop expressions for the slip ratio,  $s = \Delta\omega/\omega_i$ , in terms of  $\omega_i$  and the torque transmitted. Determine the efficiency,  $\eta$ , in terms of the slip ratio.

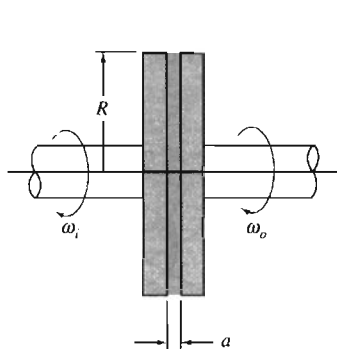


P2.51

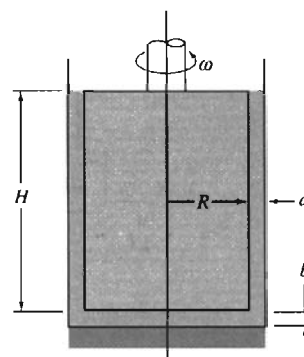


P2.52

- 2.52 A concentric-cylinder viscometer is shown. Viscous torque is produced by the annular gap around the inner cylinder. Additional viscous torque is produced by the flat bottom of the inner cylinder as it rotates above the flat bottom of the stationary outer cylinder. Obtain an algebraic expression for the viscous torque due to flow in the annular gap of width  $a$ . Obtain an algebraic expression for the viscous torque due to flow in the bottom clearance gap of height  $b$ . Prepare a plot showing the ratio,  $b/a$ , required to hold the bottom torque to 1 percent or less of the annulus torque, versus the other geometric variables. What are the design implications? What modifications to the design can you recommend?
- 2.53 Design a concentric-cylinder viscometer to measure the viscosity of a liquid similar to water. The goal is to achieve a measurement accuracy of  $\pm 1$  percent. Specify the configuration and dimensions of the viscometer. Indicate what measured parameter will be used to infer the viscosity of the liquid sample.
- 2.54 A conical pointed shaft turns in a conical bearing. The gap between shaft and bearing is filled with heavy oil having the viscosity of SAE 30 at  $30^\circ\text{C}$ . Obtain an algebraic expression for the shear stress that acts on the surface of the conical shaft. Calculate the viscous torque that acts on the shaft.

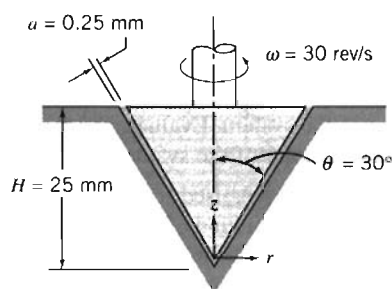


P2.54

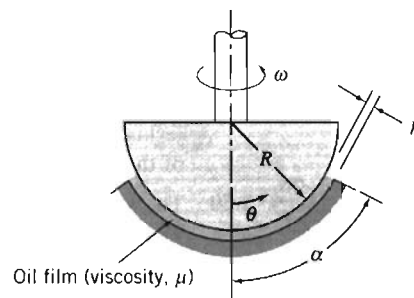

P2.55

- 2.55 A spherical thrust bearing is shown. The gap between the spherical member and the housing is of constant width  $h$ . Obtain and plot an algebraic expression for the nondimensional torque on the spherical member, as a function of angle  $\alpha$ .
- 2.56 A cross section of a rotating bearing is shown. The spherical member rotates with angular speed  $\omega$ , a small distance,  $a$ , above the plane surface. The narrow gap is filled with viscous oil, having  $\mu = 1250$  cp. Obtain an algebraic expression for the shear stress acting on the spherical member. Evaluate the maximum shear stress that acts on the spherical member for the conditions shown. (Is the maximum necessarily located

at the maximum radius?) Develop an algebraic expression (in the form of an integral) for the total viscous shear torque that acts on the spherical member. Calculate the torque using the dimensions shown.

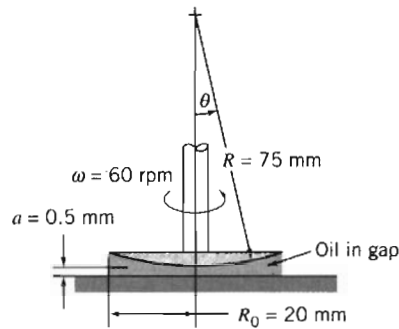

P2.56

- 2.57 Small gas bubbles form in soda when a bottle or can is opened. The average bubble diameter is about 0.1 mm. Estimate the pressure difference between the inside and outside of such a bubble.
- 2.58 You intend to gently place several steel needles on the free surface of the water in a large tank. The needles come in two lengths: Some are 5 cm long, and some are 10 cm long. Needles of each length are available with diameters of 1 mm, 2.5 mm, and 5 mm. Make a prediction as to which needles, if any, will float.
- 2.59 Slowly fill a glass with water to the maximum possible level. Observe the water level closely. Explain how it can be higher than the rim of the glass.
- 2.60 Plan an experiment to measure the surface tension of a liquid similar to water. If necessary, review the NCFMF video *Surface Tension* for ideas. Which method would be most suitable for use in an undergraduate laboratory? What experimental precision could be expected?
- 2.61 Water usually is assumed to be incompressible when evaluating static pressure variations. Actually it is 100 times more compressible than steel. Assuming the bulk modulus of water is constant, compute the percentage change in density for water raised to a gage pressure of 100 atm. Plot the percentage change in water density as a function of  $p/p_{\text{atm}}$  up to a pressure of 50,000 psi, which is the approximate pressure used for high-speed cutting jets of water to cut concrete and other composite materials. Would constant density be a reasonable assumption for engineering calculations for cutting jets?
- 2.62 How does an airplane wing develop lift?





# FLUID STATICS

We defined a fluid as a substance that will continuously deform, or flow, whenever a shear stress is applied to it. It follows that for a fluid at rest the shear stress must be zero. We can conclude that for a static fluid (or one undergoing “rigid-body” motion) only normal stress is present—in other words, pressure. We will study the topic of fluid statics (often called *hydrostatics*, even though it is not restricted to water) in this chapter.

Although fluid statics problems are the simplest kind of fluid mechanics problems, this is not the only reason we will study them. The pressure generated within a static fluid is an important phenomenon in many practical situations. Using the principles of hydrostatics, we can compute forces on submerged objects, develop instruments for measuring pressures, and deduce properties of the atmosphere and oceans. The principles of hydrostatics also may be used to determine the forces developed by hydraulic systems in applications such as industrial presses or automobile brakes.

In a static, homogeneous fluid, or in a fluid undergoing rigid-body motion, a fluid particle retains its identity for all time, and fluid elements do not deform. We may apply Newton’s second law of motion to evaluate the forces acting on the particle.

---

## 3-1 THE BASIC EQUATION OF FLUID STATICS

The first objective of this chapter is to obtain an equation for computing the pressure field in a static fluid. We will deduce what we already know from everyday experience, that the pressure increases with depth. To do this, we apply Newton’s second law to a differential fluid element of mass  $dm = \rho d\mathcal{V}$ , with sides  $dx$ ,  $dy$ , and  $dz$ , as shown in Fig. 3.1. The fluid element is stationary relative to the stationary rectangular coordinate system shown. (Fluids in rigid-body motion will be treated in Section 3-7 on the CD.)

From our previous discussion, recall that two general types of forces may be applied to a fluid: body forces and surface forces. The only body force that must be considered in most engineering problems is due to gravity. In some situations body forces caused by electric or magnetic fields might be present; they will not be considered in this text.<sup>1</sup>

For a differential fluid element, the body force is

$$d\vec{F}_B = \vec{g} dm = \vec{g} \rho d\mathcal{V}$$

where  $\vec{g}$  is the local gravity vector,  $\rho$  is the density, and  $d\mathcal{V}$  is the volume of the element. In Cartesian coordinates  $d\mathcal{V} = dx dy dz$ , so

$$d\vec{F}_B = \rho \vec{g} dx dy dz$$

<sup>1</sup> The effect of body forces caused by magnetic fields is illustrated in the NCFMF video *Magnetohydrodynamics*.

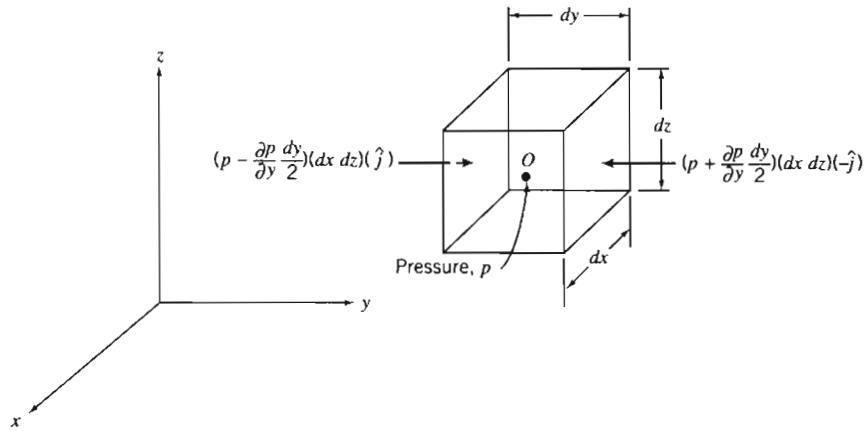


Fig. 3.1 Differential fluid element and pressure forces in the  $y$  direction.

In a static fluid no shear stresses can be present. Thus the only surface force is the pressure force. Pressure is a scalar field,  $p = p(x, y, z)$ ; the pressure varies with position within the fluid. The net pressure force that results from this variation can be evaluated by summing the forces that act on the six faces of the fluid element.

Let the pressure be  $p$  at the center,  $O$ , of the element. To determine the pressure at each of the six faces of the element, we use a Taylor series expansion of the pressure about point  $O$ . The pressure at the left face of the differential element is

$$p_L = p + \frac{\partial p}{\partial y}(y_L - y) = p + \frac{\partial p}{\partial y}\left(-\frac{dy}{2}\right) = p - \frac{\partial p}{\partial y}\frac{dy}{2}$$

(Terms of higher order are omitted because they will vanish in the subsequent limiting process.) The pressure on the right face of the differential element is

$$p_R = p + \frac{\partial p}{\partial y}(y_R - y) = p + \frac{\partial p}{\partial y}\frac{dy}{2}$$

The pressure forces acting on the two  $y$  surfaces of the differential element are shown in Fig. 3.1. Each pressure force is a product of three factors. The first is the magnitude of the pressure. This magnitude is multiplied by the area of the face to give the magnitude of the pressure force, and a unit vector is introduced to indicate direction. Note also in Fig. 3.1 that the pressure force on each face acts *against* the face. A positive pressure corresponds to a *compressive* normal stress.

Pressure forces on the other faces of the element are obtained in the same way. Combining all such forces gives the net surface force acting on the element. Thus

$$\begin{aligned} d\vec{F}_S = & \left(p - \frac{\partial p}{\partial x}\frac{dx}{2}\right)(dy dz)(\hat{i}) + \left(p + \frac{\partial p}{\partial x}\frac{dx}{2}\right)(dy dz)(-\hat{i}) \\ & + \left(p - \frac{\partial p}{\partial y}\frac{dy}{2}\right)(dx dz)(\hat{j}) + \left(p + \frac{\partial p}{\partial y}\frac{dy}{2}\right)(dx dz)(-\hat{j}) \\ & + \left(p - \frac{\partial p}{\partial z}\frac{dz}{2}\right)(dx dy)(\hat{k}) + \left(p + \frac{\partial p}{\partial z}\frac{dz}{2}\right)(dx dy)(-\hat{k}) \end{aligned}$$

Collecting and canceling terms, we obtain

$$d\vec{F}_S = -\left(\frac{\partial p}{\partial x} \hat{i} + \frac{\partial p}{\partial y} \hat{j} + \frac{\partial p}{\partial z} \hat{k}\right) dx dy dz \quad (3.1a)$$

The term in parentheses is called the gradient of the pressure or simply the pressure gradient and may be written  $\text{grad } p$  or  $\nabla p$ . In rectangular coordinates

$$\text{grad } p \equiv \nabla p \equiv \left(\hat{i} \frac{\partial p}{\partial x} + \hat{j} \frac{\partial p}{\partial y} + \hat{k} \frac{\partial p}{\partial z}\right) \equiv \left(\hat{i} \frac{\partial}{\partial x} + \hat{j} \frac{\partial}{\partial y} + \hat{k} \frac{\partial}{\partial z}\right) p$$

The gradient can be viewed as a vector operator; taking the gradient of a scalar field gives a vector field. Using the gradient designation, Eq. 3.1a can be written as

$$d\vec{F}_S = -\text{grad } p (dx dy dz) = -\nabla p dx dy dz \quad (3.1b)$$

Physically the gradient of pressure is the negative of the surface force per unit volume due to pressure. We note that the level of pressure is not important in evaluating the net pressure force. Instead, what matters is the rate at which pressure changes occur with distance, the *pressure gradient*. We shall encounter this term throughout our study of fluid mechanics.

We combine the formulations for surface and body forces that we have developed to obtain the total force acting on a fluid element. Thus

$$d\vec{F} = d\vec{F}_S + d\vec{F}_B = (-\nabla p + \rho \vec{g}) dx dy dz = (-\nabla p + \rho \vec{g}) d\mathcal{V}$$

or on a per unit volume basis

$$\frac{d\vec{F}}{d\mathcal{V}} = -\nabla p + \rho \vec{g} \quad (3.2)$$

For a fluid particle, Newton's second law gives  $d\vec{F} = \vec{a} dm = \vec{a} \rho d\mathcal{V}$ . For a static fluid,  $\vec{a} = 0$ . Thus

$$\frac{d\vec{F}}{d\mathcal{V}} = \rho \vec{a} = 0$$

Substituting for  $d\vec{F}/d\mathcal{V}$  from Eq. 3.2, we obtain

$$-\nabla p + \rho \vec{g} = 0 \quad (3.3)$$

Let us review this equation briefly. The physical significance of each term is

$$\begin{aligned} & -\nabla p & + & \rho \vec{g} & = & 0 \\ & \left\{ \begin{array}{l} \text{net pressure force} \\ \text{per unit volume} \\ \text{at a point} \end{array} \right\} & + & \left\{ \begin{array}{l} \text{body force per} \\ \text{unit volume} \\ \text{at a point} \end{array} \right\} & = & 0 \end{aligned}$$

This is a vector equation, which means that it is equivalent to three component equations that must be satisfied individually. The component equations are

$$\left. \begin{aligned} -\frac{\partial p}{\partial x} + \rho g_x &= 0 & x \text{ direction} \\ -\frac{\partial p}{\partial y} + \rho g_y &= 0 & y \text{ direction} \\ -\frac{\partial p}{\partial z} + \rho g_z &= 0 & z \text{ direction} \end{aligned} \right\} \quad (3.4)$$

Equations 3.4 describe the pressure variation in each of the three coordinate directions in a static fluid. To simplify further, it is logical to choose a coordinate system such that the gravity vector is aligned with one of the coordinate axes. If the coordinate system is chosen with the  $z$  axis directed vertically upward, as in Fig. 3.1, then  $g_x = 0$ ,  $g_y = 0$ , and  $g_z = -g$ . Under these conditions, the component equations become

$$\frac{\partial p}{\partial x} = 0 \quad \frac{\partial p}{\partial y} = 0 \quad \frac{\partial p}{\partial z} = -\rho g \quad (3.5)$$

Equations 3.5 indicate that, under the assumptions made, the pressure is independent of coordinates  $x$  and  $y$ ; it depends on  $z$  alone. Thus since  $p$  is a function of a single variable, a total derivative may be used instead of a partial derivative. With these simplifications, Eqs. 3.5 finally reduce to

$$\frac{dp}{dz} = -\rho g \equiv -\gamma \quad (3.6)$$

- Restrictions: (1) Static fluid.  
 (2) Gravity is the only body force.  
 (3) The  $z$  axis is vertical and upward.

This equation is the basic pressure-height relation of fluid statics. It is subject to the restrictions noted. Therefore it must be applied only where these restrictions are reasonable for the physical situation. To determine the pressure distribution in a static fluid, Eq. 3.6 may be integrated and appropriate boundary conditions applied.

Before considering specific cases that are readily treated analytically, it is important to remember that pressure values must be stated with respect to a reference level. If the reference level is a vacuum, pressures are termed *absolute*, as shown in Fig. 3.2.

Most pressure gages indicate a pressure *difference*—the difference between the measured pressure and the ambient level (usually atmospheric pressure). Pressure levels measured with respect to atmospheric pressure are termed *gage* pressures. Thus

$$p_{\text{gage}} = p_{\text{absolute}} - p_{\text{atmosphere}}$$

Absolute pressures must be used in all calculations with the ideal gas equation or other equations of state.

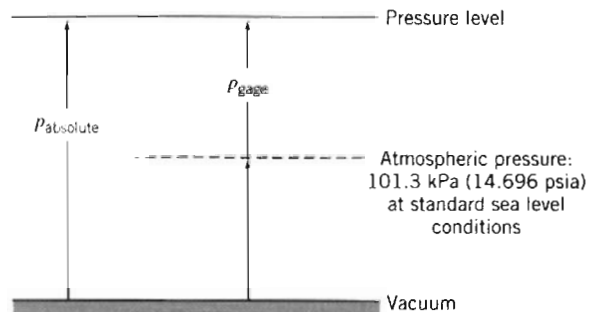


Fig. 3.2 Absolute and gage pressures, showing reference levels.

### 3-2 THE STANDARD ATMOSPHERE

Several International Congresses for Aeronautics have been held so that aviation experts around the world might communicate better. Their goal is to develop an acceptable model atmosphere for use as a standard; agreement is yet to be reached on an international standard.

The temperature profile of the U.S. Standard Atmosphere is shown in Fig. 3.3. Additional property values are tabulated as functions of elevation in Appendix A. Sea level conditions of the U.S. Standard Atmosphere are summarized in Table 3.1.

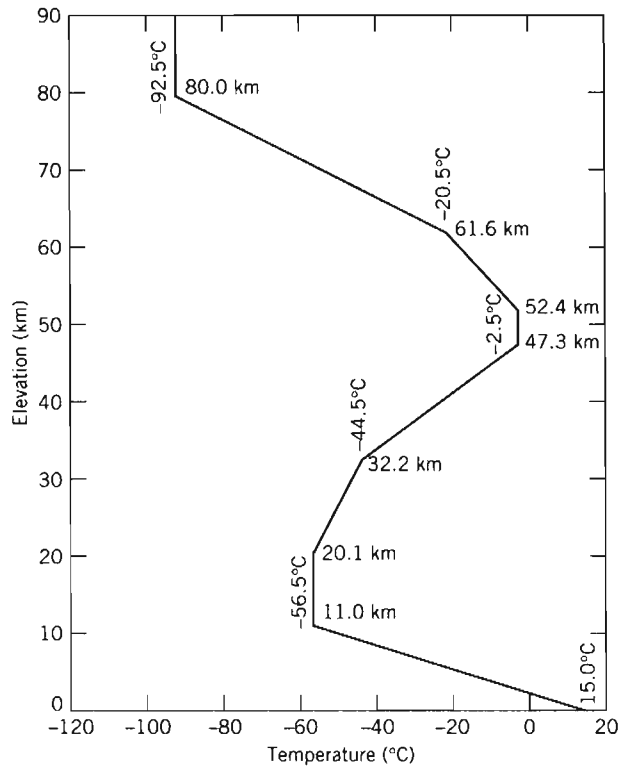


Fig. 3.3 Temperature variation with altitude in the U.S. Standard Atmosphere.

Table 3.1 Sea Level Conditions of the U.S. Standard Atmosphere

Property	Symbol	SI	English
Temperature	$T$	15°C	59°F
Pressure	$p$	101.3 kPa (abs)	14.696 psia
Density	$\rho$	1.225 kg/m <sup>3</sup>	0.002377 slug/ft <sup>3</sup>
Specific weight	$\gamma$	—	0.07651 lbf/ft <sup>3</sup>
Viscosity	$\mu$	1.789 × 10 <sup>-5</sup> kg/(m · s) (Pa · s)	3.737 × 10 <sup>-7</sup> lbf · s/ft <sup>2</sup>

### 3-3 PRESSURE VARIATION IN A STATIC FLUID

We have seen that pressure variation in any static fluid is described by the basic pressure-height relation

$$\frac{dp}{dz} = -\rho g \quad (3.6)$$

Although  $\rho g$  may be defined as the specific weight,  $\gamma$ , it has been written as  $\rho g$  in Eq. 3.6 to emphasize that *both*  $\rho$  and  $g$  must be considered variables. In order to integrate Eq. 3.6 to find the pressure distribution, assumptions must be made about variations in both  $\rho$  and  $g$ .

For most practical engineering situations, the variation in  $g$  is negligible. Only for a purpose such as computing very precisely the pressure change over a large elevation difference would the variation in  $g$  need to be included. Unless we state otherwise, we shall assume  $g$  to be constant with elevation at any given location.

#### Incompressible Liquids: Manometers

For an incompressible fluid,  $\rho = \text{constant}$ . Then for constant gravity,

$$\frac{dp}{dz} = -\rho g = \text{constant}$$

To determine the pressure variation, we must integrate and apply appropriate boundary conditions. If the pressure at the reference level,  $z_0$ , is designated as  $p_0$ , then the pressure,  $p$ , at level  $z$  is found by integration:

$$\int_{p_0}^p dp = -\int_{z_0}^z \rho g dz$$

or

$$p - p_0 = -\rho g(z - z_0) = \rho g(z_0 - z)$$

For liquids, it is often convenient to take the origin of the coordinate system at the free surface (reference level) and to measure distances as positive downward from the free surface as in Fig. 3.4.

With  $h$  measured positive downward, we have

$$z_0 - z = h$$

and

$$p - p_0 = \rho g h \quad (3.7)$$

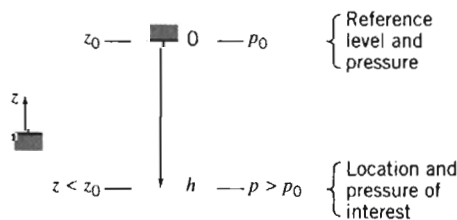


Fig. 3.4 Use of  $z$  and  $h$  coordinates.

Equation 3.7 indicates that the pressure difference between two points in a static incompressible fluid can be determined by measuring the elevation difference between the two points. Devices used for this purpose are called *manometers*.

Use of Eq. 3.7 for a manometer is illustrated in Example Problem 3.1.

### EXAMPLE 3.1 Systolic and Diastolic Pressure

The normal blood pressure of a human is 120/80 mm Hg. By modeling a sphygmomanometer pressure gage as a U-tube manometer, convert these pressures to psig.

#### EXAMPLE PROBLEM 3.1

**GIVEN:** Gage pressures of 120 and 80 mm Hg

**FIND:** The corresponding pressures in psig.


**SOLUTION:**

Apply hydrostatic equation to points A, A', and B.

Governing equation:

$$p - p_0 = \rho gh \quad (3.7)$$

Assumptions: (1) Static fluid.  
(2) Incompressible fluids.  
(3) Neglect air density ( $\ll$  Hg density).

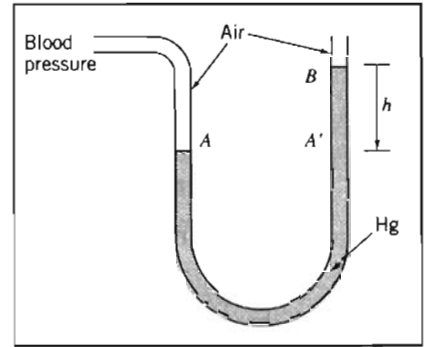

Applying the governing equation between points A' and B (and  $p_B$  is atmospheric and therefore zero gage):

$$p_{A'} = p_B + \rho_{\text{Hg}} gh = SG_{\text{Hg}} \rho_{\text{H}_2\text{O}} gh$$

In addition, the pressure increases as we go downward from point A' to the bottom of the manometer, and decreases by an equal amount as we return up the left branch to point A. Hence points A and A' have the same pressure, so we end up with

$$p_A = p_{A'} = SG_{\text{Hg}} \rho_{\text{H}_2\text{O}} gh$$

Substituting  $SG_{\text{Hg}} = 13.6$  and  $\rho_{\text{H}_2\text{O}} = 1.94 \text{ slug/ft}^3$  from Appendix A-1 yields for the systolic pressure ( $h = 120 \text{ mm Hg}$ )

$$p_{\text{systolic}} = p_A = 13.6 \times 1.94 \frac{\text{slug}}{\text{ft}^3} \times \frac{32.2 \text{ ft}}{\text{s}^2} \times 120 \text{ mm} \times \frac{\text{in.}}{25.4 \text{ mm}} \times \frac{\text{ft}}{12 \text{ in.}} \times \frac{\text{lb} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}}$$

$$p_{\text{systolic}} = 334 \text{ lbf/ft}^2 = 2.32 \text{ psi} \quad \leftarrow P_{\text{systolic}}$$

By a similar process, the diastolic pressure ( $h = 80 \text{ mm Hg}$ ) is

$$p_{\text{diastolic}} = 1.55 \text{ psi} \quad \leftarrow P_{\text{diastolic}}$$


Notes:

- ✓ Two points at the same level in a continuous single fluid have the same pressure.
- ✓ In manometer problems we neglect change in pressure with depth for a gas.
- ✓ This problem shows the conversion from mm Hg to psi, using Eq. 3.7: 120 mm Hg is equivalent to about 2.32 psi. More generally, 1 atm = 14.7 psi = 101 kPa = 760 mm Hg.

Manometers are simple and inexpensive devices used frequently for pressure measurements. Because the liquid level change is small at low pressure differential, a U-tube manometer may be difficult to read accurately. The manometer *sensitivity* is defined as the ratio of observed manometer liquid deflection to the equivalent water level differential in a U-tube manometer for a given applied pressure difference. Sensitivity can be increased by changing the manometer design or by using two immiscible liquids of slightly different density. Analysis of an inclined manometer is illustrated in Example Problem 3.2.

### EXAMPLE 3.2 Analysis of Inclined-Tube Manometer


An inclined-tube reservoir manometer is constructed as shown. Analyze the manometer to obtain a general expression for the liquid deflection,  $L$ , in the inclined tube, in terms of the applied pressure difference,  $\Delta p$ . Also obtain a general expression for the manometer sensitivity, and determine the parameter values that give maximum sensitivity.

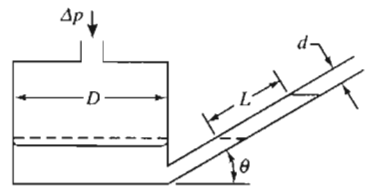

#### EXAMPLE PROBLEM 3.2

**GIVEN:** Inclined-tube reservoir manometer as shown.

**FIND:** Expression for  $L$  in terms of  $\Delta p$ .  
General expression for manometer sensitivity.  
Parameter values that give maximum sensitivity.

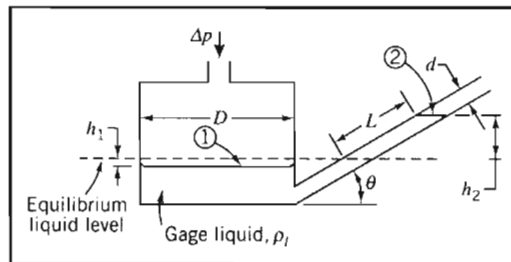

**SOLUTION:** Use the equilibrium liquid level as a reference.

Governing equations:  $p = p_0 + \rho gh$      $SG = \frac{\rho}{\rho_{H_2O}}$

Assumptions: (1) Static fluid.  
(2) Incompressible fluid.

Applying the governing equation between points 1 and 2

$$p_1 = p_2 + \rho_l g(h_1 + h_2)$$

Hence we obtain

$$p_1 - p_2 = \Delta p = \rho_l g(h_1 + h_2) \quad (1)$$

To eliminate  $h_1$ , we recognize that the *volume* of manometer liquid remains constant; the volume displaced from the reservoir must equal the volume that rises in the tube, so

$$\frac{\pi D^2}{4} h_1 = \frac{\pi d^2}{4} L \quad \text{or} \quad h_1 = L \left( \frac{d}{D} \right)^2$$

In addition, from the geometry of the manometer,  $h_2 = L \sin \theta$ . Substituting into Eq. 1 gives

$$\Delta p = \rho_l g \left[ L \sin \theta + L \left( \frac{d}{D} \right)^2 \right] = \rho_l g L \left[ \sin \theta + \left( \frac{d}{D} \right)^2 \right] \quad (2)$$



Thus

$$L = \frac{\Delta p}{\rho_l g \left[ \sin \theta + \left( \frac{d}{D} \right)^2 \right]} \quad \leftarrow L$$

To obtain an expression for sensitivity, express  $\Delta p$  in terms of an equivalent water column height,  $h_e$ .

$$\Delta p = \rho_{\text{H}_2\text{O}} g h_e \quad (3)$$

Combining Eqs. 2 and 3, noting that  $\rho_l = \text{SG}_l \rho_{\text{H}_2\text{O}}$ , gives

$$\rho_{\text{H}_2\text{O}} g h_e = \text{SG}_l \rho_{\text{H}_2\text{O}} g L \left[ \sin \theta + \left( \frac{d}{D} \right)^2 \right]$$

or

$$s = \frac{L}{h_e} = \frac{1}{\text{SG}_l \left[ \sin \theta + \left( \frac{d}{D} \right)^2 \right]} \quad \leftarrow s$$

This expression defines the sensitivity of an inclined-tube manometer. It shows that to increase sensitivity,  $\text{SG}_l$ ,  $\sin \theta$ , and  $d/D$  each should be made as small as possible. Thus the designer must choose a gage liquid and two geometric parameters to complete a design, as discussed below.

### Gage Liquid


The gage liquid should have the smallest possible specific gravity to increase sensitivity. In addition, the gage liquid must be safe (without toxic fumes or flammability), be immiscible with the fluid being gaged, suffer minimal loss from evaporation, and develop a satisfactory meniscus. Thus the gage liquid should have relatively low surface tension and should accept dye to improve its visibility.

Tables A.1, A.2, and A.4 show that hydrocarbon liquids satisfy many of these criteria. The lowest specific gravity is about 0.8, which increases manometer sensitivity by 25 percent compared to water.

### Diameter Ratio

The plot shows the effect of diameter ratio on sensitivity for a vertical reservoir manometer with gage liquid of unity specific gravity. Note that  $d/D = 1$  corresponds to an ordinary U-tube manometer; its sensitivity is 0.5 because half the height differential appears on either side of the manometer. Sensitivity doubles to 1.0 as  $d/D$  approaches zero because most of the level change occurs in the measuring tube.

The minimum tube diameter  $d$  must be larger than about 6 mm to avoid excessive capillary effect. The maximum reservoir diameter  $D$  is limited by the size of the manometer. If  $D$  is set at 60 mm, so that  $d/D$  is 0.1, then  $(d/D)^2 = 0.01$ , and the sensitivity increases to 0.99, very close to the maximum attainable value of 1.0.

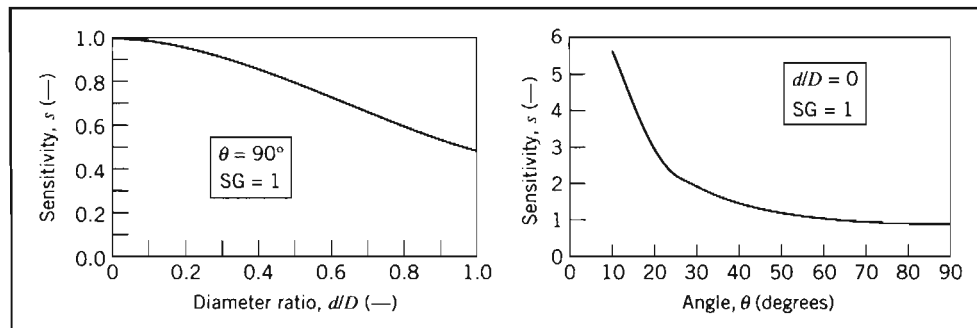

### Inclination Angle

The final plot shows the effect of inclination angle on sensitivity for  $d/D = 0$ . Sensitivity increases sharply as inclination angle is reduced below 30 degrees. A practical limit is reached at about 10 degrees: The meniscus becomes indistinct and the level hard to read for smaller angles.

### Summary

Combining the best values ( $SG = 0.8$ ,  $d/D = 0.1$ , and  $\theta = 10$  degrees) gives a manometer sensitivity of 6.81. Physically this is the ratio of observed gage liquid deflection to equivalent water column height. Thus the deflection in the inclined tube is amplified 6.81 times compared to a vertical water column. With improved sensitivity, a small pressure difference can be read more accurately than with a water manometer, or a smaller pressure difference can be read with the same accuracy.



The graphs were generated from the *Excel* workbook for this Example Problem. This workbook has more detailed graphs, showing sensitivity curves for a range of values of  $d/D$  and  $\theta$ .

Students sometimes have trouble analyzing multiple-liquid manometer situations. The following rules of thumb are useful:

1. Any two points at the same elevation in a continuous volume of the same liquid are at the same pressure.
2. Pressure increases as one goes *down* a liquid column (remember the pressure change on diving into a swimming pool).


To find the pressure difference  $\Delta p$  between two points separated by a series of fluids, we can use the following modification of Eq. 3.7:


$$\Delta p = g \sum_i \rho_i h_i \quad (3.8)$$

where  $\rho_i$  and  $h_i$  represent the densities and depths of the various fluids, respectively. Use care in applying signs to the depths  $h_i$ ; they will be positive downwards, and negative upwards. Example Problem 3.3 illustrates the use of a multiple-liquid manometer for measuring a pressure difference.

### EXAMPLE 3.3 Multiple-Liquid Manometer

Water flows through pipes *A* and *B*. Lubricating oil is in the upper portion of the inverted U. Mercury is in the bottom of the manometer bends. Determine the pressure difference,  $p_A - p_B$ , in units of  $\text{lbf/in.}^2$

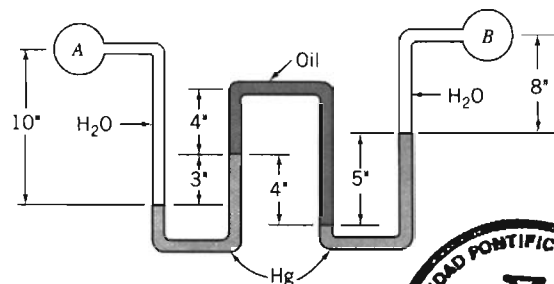

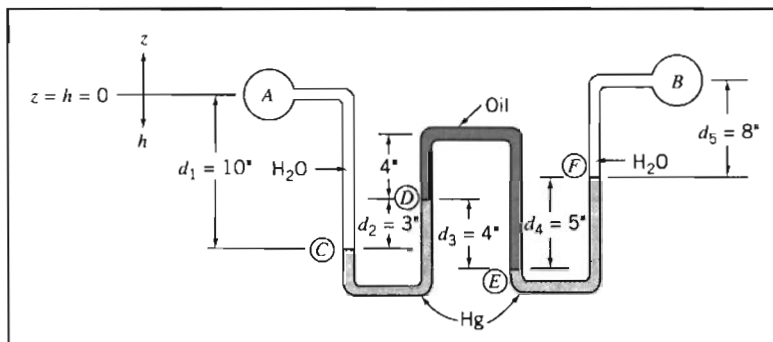**EXAMPLE PROBLEM 3.3****GIVEN:** Multiple-liquid manometer as shown.**FIND:** Pressure difference,  $p_A - p_B$ , in lbf/in.<sup>2</sup>**SOLUTION:**

Governing equations:  $\Delta p = g \sum_i \rho_i h_i$      $SG = \frac{\rho}{\rho_{H_2O}}$

Assumptions: (1) Static fluid.  
 (2) Incompressible fluid.

Applying the governing equation, working from point  $B$  to  $A$

$$p_A - p_B = \Delta p = g(\rho_{H_2O}d_5 + \rho_{Hg}d_4 - \rho_{oil}d_3 + \rho_{Hg}d_2 - \rho_{H_2O}d_1) \quad (1)$$

This equation can also be derived by repeatedly using Eq. 3.7 in the following form:

$$p_2 - p_1 = \rho g(h_2 - h_1)$$

Beginning at point  $A$  and applying the equation between successive points along the manometer gives

$$p_C - p_A = +\rho_{H_2O}gd_1$$

$$p_D - p_C = -\rho_{Hg}gd_2$$

$$p_E - p_D = +\rho_{oil}gd_3$$

$$p_F - p_E = -\rho_{Hg}gd_4$$

$$p_B - p_F = -\rho_{H_2O}gd_5$$

Multiplying each equation by minus one and adding, we obtain Eq. (1)

$$\begin{aligned} p_A - p_B &= (p_A - p_C) + (p_C - p_D) + (p_D - p_E) + (p_E - p_F) + (p_F - p_B) \\ &= -\rho_{H_2O}gd_1 + \rho_{Hg}gd_2 - \rho_{oil}gd_3 + \rho_{Hg}gd_4 + \rho_{H_2O}gd_5 \end{aligned}$$

Substituting  $\rho = SG\rho_{H_2O}$  with  $SG_{Hg} = 13.6$  and  $SG_{oil} = 0.88$  (Table A.2), yields

$$\begin{aligned} p_A - p_B &= g(-\rho_{H_2O}d_1 + 13.6\rho_{H_2O}d_2 - 0.88\rho_{H_2O}d_3 + 13.6\rho_{H_2O}d_4 + \rho_{H_2O}d_5) \\ &= g\rho_{H_2O}(-d_1 + 13.6d_2 - 0.88d_3 + 13.6d_4 + d_5) \\ p_A - p_B &= g\rho_{H_2O}(-10 + 40.8 - 3.52 + 68 + 8) \text{ in.} \end{aligned}$$

$$\begin{aligned}
 p_A - p_B &= g\rho_{\text{H}_2\text{O}} \times 103.3 \text{ in.} \\
 &= \frac{32.2 \text{ ft}}{\text{s}^2} \times \frac{1.94 \text{ slug}}{\text{ft}^3} \times 103.3 \text{ in.} \times \frac{\text{ft}}{12 \text{ in.}} \times \frac{\text{ft}^2}{144 \text{ in.}^2} \times \frac{\text{lb} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}}
 \end{aligned}$$

$$p_A - p_B = 3.73 \text{ lbf/in.}^2 \leftarrow \overbrace{\hspace{15em}}^{p_A - p_B}$$

This Example Problem shows use of both Eq. 3.7 and Eq. 3.8. Use of either equation is a matter of personal preference.

Atmospheric pressure may be obtained from a *barometer*, in which the height of a mercury column is measured. The measured height may be converted to pressure using Eq. 3.7 and the data for specific gravity of mercury given in Appendix A, as discussed in the Notes of Example Problem 3.1. Although the vapor pressure of mercury may be neglected, for precise work, temperature and altitude corrections must be applied to the measured level and the effects of surface tension must be considered. The capillary effect in a tube caused by surface tension was illustrated in Example Problem 2.3.

## Gases

In many practical engineering problems density will vary appreciably with altitude, and accurate results will require that this variation be accounted for. Pressure variation in a compressible fluid can be evaluated by integrating Eq. 3.6. Before this can be done, density must be expressed as a function of one of the other variables in the equation. Property information or an equation of state may be used to obtain the required relation for density. Several types of property variation may be analyzed. (See Example Problem 3.4.)

The density of gases generally depends on pressure and temperature. The ideal gas equation of state,

$$p = \rho RT \quad (1.1)$$

where  $R$  is the gas constant (see Appendix A) and  $T$  the absolute temperature, accurately models the behavior of most gases under engineering conditions. However, the use of Eq. 1.1 introduces the gas temperature as an additional variable. Therefore, an additional assumption must be made about temperature variation before Eq. 3.6 can be integrated.

In the U.S. Standard Atmosphere the temperature decreases linearly with altitude up to an elevation of 11.0 km. For a linear temperature variation with altitude given by  $T = T_0 - mz$ , we obtain, from Eq. 3.6,

$$dp = -\rho g dz = -\frac{\rho g}{RT} dz = -\frac{\rho g}{R(T_0 - mz)} dz$$

Separating variables and integrating from  $z = 0$  where  $p = p_0$  to elevation  $z$  where the pressure is  $p$  gives

$$\int_{p_0}^p \frac{dp}{p} = -\int_0^z \frac{g dz}{R(T_0 - mz)}$$

Then

$$\ln \frac{p}{p_0} = \frac{g}{mR} \ln \left( \frac{T_0 - mz}{T_0} \right) = \frac{g}{mR} \ln \left( 1 - \frac{mz}{T_0} \right)$$

and the pressure variation, in a gas whose temperature varies linearly with elevation, is given by

$$p = p_0 \left( 1 - \frac{mz}{T_0} \right)^{g/mR} = p_0 \left( \frac{T}{T_0} \right)^{g/mR} \quad (3.9)$$

### EXAMPLE 3.4 Pressure and Density Variation in the Atmosphere

The maximum power output capability of an internal combustion engine decreases with altitude because the air density and hence the mass flow rate of air decrease. A truck leaves Denver (elevation 5280 ft) on a day when the local temperature and barometric pressure are 80°F and 24.8 in. of mercury, respectively. It travels through Vail Pass (elevation 10,600 ft), where the temperature is 62°F. Determine the local barometric pressure at Vail Pass and the percent change in density.

#### EXAMPLE PROBLEM 3.4

**GIVEN:** Truck travels from Denver to Vail Pass.

Denver: $z = 5280 \text{ ft}$ $p = 24.8 \text{ in. Hg}$ $T = 80^\circ\text{F}$	Vail Pass: $z = 10,600 \text{ ft}$ $T = 62^\circ\text{F}$
--	--

**FIND:** Atmospheric pressure at Vail Pass.  
Percent change in air density between Denver and Vail.

**SOLUTION:**

Governing equations:  $\frac{dp}{dz} = -\rho g$      $p = \rho RT$

Assumptions: (1) Static fluid.  
(2) Air behaves as an ideal gas.

We shall consider four assumptions for property variations with altitude.

(a) If we assume temperature varies linearly with altitude, Eq. 3.9 gives

$$\frac{p}{p_0} = \left( \frac{T}{T_0} \right)^{g/mR}$$

Evaluating the constant  $m$  gives

$$m = \frac{T_0 - T}{z - z_0} = \frac{(80 - 62)^\circ\text{F}}{(10.6 - 5.28)10^3 \text{ ft}} = 3.38 \times 10^{-3} \text{ }^\circ\text{F/ft}$$

and

$$\frac{g}{mR} = \frac{32.2 \text{ ft}}{\text{s}^2} \times \frac{\text{ft}}{3.38 \times 10^{-3} \text{ }^\circ\text{F}} \times \frac{\text{lbm} \cdot \text{ }^\circ\text{R}}{53.3 \text{ ft} \cdot \text{ lbf}} \times \frac{\text{slug}}{32.2 \text{ lbm}} \times \frac{\text{lbf} \cdot \text{ s}^2}{\text{slug} \cdot \text{ ft}} = 5.55$$

Thus

$$\frac{p}{p_0} = \left(\frac{T}{T_0}\right)^{g/mR} = \left(\frac{460 + 62}{460 + 80}\right)^{5.55} = (0.967)^{5.55} = 0.830$$

and

$$p = 0.830 p_0 = (0.830)24.8 \text{ in. Hg} = 20.6 \text{ in. Hg} \leftarrow p$$

Note that temperature must be expressed as an absolute temperature in the ideal gas equation of state. The percent change in density is given by

$$\frac{\rho - \rho_0}{\rho_0} = \frac{\rho}{\rho_0} - 1 = \frac{p}{p_0} \frac{T_0}{T} - 1 = \frac{0.830}{0.967} - 1 = -0.142 \text{ or } -14.2\% \leftarrow \frac{\Delta\rho}{\rho_0}$$

(b) For  $p$  assumed constant ( $= \rho_0$ ),

$$p = p_0 - \rho_0 g(z - z_0) = p_0 - \frac{\rho_0 g(z - z_0)}{RT_0} = p_0 \left[ 1 - \frac{g(z - z_0)}{RT_0} \right]$$

$$p = 20.2 \text{ in. Hg} \quad \text{and} \quad \frac{\Delta\rho}{\rho_0} = 0 \leftarrow \frac{\Delta\rho}{\rho_0}$$

(c) If we assume the temperature is constant, then

$$dp = -\rho g dz = -\frac{p}{RT} g dz$$

and

$$\int_{p_0}^p \frac{dp}{p} = -\int_{z_0}^z \frac{g}{RT} dz$$

$$p = p_0 \exp\left[\frac{-g(z - z_0)}{RT}\right]$$

For  $T = \text{constant} = T_0$ ,

$$p = 20.6 \text{ in. Hg} \quad \text{and} \quad \frac{\Delta\rho}{\rho_0} = -16.9\% \leftarrow \frac{\Delta\rho}{\rho_0}$$

(d) For an adiabatic atmosphere  $p/\rho^k = \text{constant}$ ,

$$p = p_0 \left(\frac{T}{T_0}\right)^{k/k-1} = 22.0 \text{ in. Hg} \quad \text{and} \quad \frac{\Delta\rho}{\rho_0} = -8.2\% \leftarrow \frac{\Delta\rho}{\rho_0}$$

We note that over the modest change in elevation the predicted pressure is not strongly dependent on the assumed property variation; values calculated under four different assumptions vary by a maximum of approximately 9 percent. There is considerably greater variation in the predicted percent

change in density. The assumption of a linear temperature variation with altitude is the most reasonable assumption.

This Example Problem shows use of the ideal gas equation with the basic pressure–height relation to obtain the change in pressure with height in the atmosphere under various atmospheric assumptions.

---

### 3-4 HYDRAULIC SYSTEMS

Hydraulic systems are characterized by very high pressures. As a consequence of these high system pressures, hydrostatic pressure variations often may be neglected. Automobile hydraulic brakes develop pressures up to 10 MPa (1500 psi); aircraft and machinery hydraulic actuation systems frequently are designed for pressures up to 40 MPa (6000 psi), and jacks use pressures to 70 MPa (10,000 psi). Special-purpose laboratory test equipment is commercially available for use at pressures to 1000 MPa (150,000 psi)!

Although liquids are generally considered incompressible at ordinary pressures, density changes may be appreciable at high pressures. Bulk moduli of hydraulic fluids also may vary sharply at high pressures. In problems involving unsteady flow, both compressibility of the fluid and elasticity of the boundary structure must be considered. Analysis of problems such as water hammer noise and vibration in hydraulic systems, actuators, and shock absorbers quickly becomes complex and is beyond the scope of this book.

---

### 3-5 HYDROSTATIC FORCE ON SUBMERGED SURFACES

Now that we have determined the manner in which the pressure varies in a static fluid, we can examine the force on a surface submerged in a liquid.

In order to determine completely the resultant force acting on a submerged surface, we must specify:

1. The magnitude of the force.
2. The direction of the force.
3. The line of action of the force.

We shall consider both plane and curved submerged surfaces.

#### Hydrostatic Force on a Plane Submerged Surface

A plane submerged surface, on whose upper face we wish to determine the resultant hydrostatic force, is shown in Fig. 3.5. The coordinates have been chosen so that the surface lies in the  $xy$  plane, and the origin  $O$  is located at the intersection of the plane surface (or its extension) and the free surface. As well as the magnitude of the force  $F_R$ , we wish to locate the point (with coordinates  $x'$ ,  $y'$ ) through which it acts on the surface.

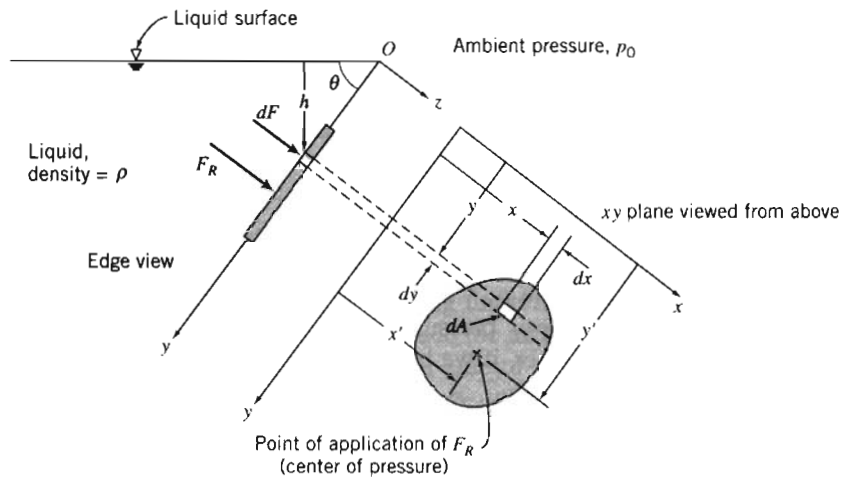


Fig. 3.5 Plane submerged surface.

Since there are no shear stresses in a static fluid, the hydrostatic force on any element of the surface acts normal to the surface. The pressure force acting on an element  $dA = dx dy$  of the upper surface is given by

$$dF = p dA$$

The *resultant* force acting on the surface is found by summing the contributions of the infinitesimal forces over the entire area.

Usually when we sum forces we must do so in a vectorial sense. However, in this case all of the infinitesimal forces are perpendicular to the plane, and hence so is the resultant force. Its magnitude is given by

$$F_R = \int_A p dA \quad (3.10a)$$

In order to evaluate the integral in Eq. 3.10a, both the pressure,  $p$ , and the element of area,  $dA$ , must be expressed in terms of the same variables.

We can use Eq. 3.7 to express the pressure  $p$  at depth  $h$  in the liquid as

$$p = p_0 + \rho gh \quad (3.7)$$

In this expression  $p_0$  is the pressure at the free surface ( $h = 0$ ).

In addition, we have, from the system geometry,  $h = y \sin \theta$ . Using this expression and Eq. 3.7 in Eq. 3.10a,

$$F_R = \int_A p dA = \int_A (p_0 + \rho gh) dA = \int_A (p_0 + \rho g y \sin \theta) dA$$

$$F_R = p_0 \int_A dA + \rho g \sin \theta \int_A y dA = p_0 A + \rho g \sin \theta \int_A y dA$$

The integral is the first moment of the surface area about the  $x$  axis, which may be written

$$\int_A y dA = y_c A$$



where  $y_c$  is the  $y$  coordinate of the *centroid* of the area,  $A$ . Thus,

$$F_R = p_0 A + \rho g \sin \theta y_c A = (p_0 + \rho g h_c) A$$

or

$$F_R = p_c A \quad (3.10b)$$

where  $p_c$  is the absolute pressure in the liquid at the location of the centroid of area  $A$ . Eq. 3.10b computes the resultant force due to the liquid—including the effect of the ambient pressure  $p_0$ —on one side of a submerged plane surface. It does not take into account whatever pressure or force distribution may be on the other side of the surface. However, if we have the *same* pressure,  $p_0$ , on this side as we do at the free surface of the liquid, as shown in Fig. 3.6, its effect on  $F_R$  cancels out, and if we wish to obtain the *net* force on the surface we can use Eq. 3.10b with  $p_c$  expressed as a *gage* rather than absolute pressure.

In computing  $F_R$  we can use either the integral of Eq. 3.10a or the resulting Eq. 3.10b. It is important to note that even though the force can be computed from the pressure at the center of the plate, this is *not* the point through which the force acts!


Our next task is to determine  $(x', y')$ , the location of the resultant force. Let's first obtain  $y'$  by recognizing that the moment of the resultant force about the  $x$  axis must be equal to the moment due to the distributed pressure force. Taking the sum (i.e., integral) of the moments of the infinitesimal forces  $dF$  about the  $x$  axis we obtain

$$y' F_R = \int_A y p dA \quad (3.11a)$$

We can integrate by expressing  $p$  as a function of  $y$  as before:

$$\begin{aligned} y' F_R &= \int_A y p dA = \int_A y (p_0 + \rho g h) dA = \int_A (p_0 y + \rho g y^2 \sin \theta) dA \\ &= p_0 \int_A y dA + \rho g \sin \theta \int_A y^2 dA \end{aligned}$$

The first integral is our familiar  $y_c A$ . The second integral,  $\int_A y^2 dA$ , is the second moment of area about the  $x$  axis,  $I_{xx}$ . We can use the parallel axis theorem,  $I_{xx} = I_{\hat{x}\hat{x}} + A y_c^2$ , to replace  $I_{xx}$  with the standard second moment of area, about the centroidal  $\hat{x}$  axis. Using all of these, we find

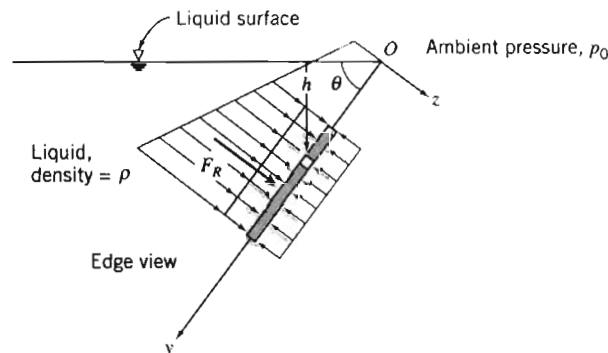

**Fig. 3.6** Pressure distribution on plane submerged surface.

$$\begin{aligned} y'F_R &= p_0 y_c A + \rho g \sin \theta (I_{\hat{x}\hat{x}} + Ay_c^2) = y_c(p_0 + \rho g y_c \sin \theta)A + \rho g \sin \theta I_{\hat{x}\hat{x}} \\ &= y_c(p_0 + \rho g h_c)A + \rho g \sin \theta I_{\hat{x}\hat{x}} = y_c F_R + \rho g \sin \theta I_{\hat{x}\hat{x}} \end{aligned}$$

Finally, we obtain for  $y'$ :

$$y' = y_c + \frac{\rho g \sin \theta I_{\hat{x}\hat{x}}}{F_R} \quad (3.11b)$$

Equation 3.11b is convenient for computing the location  $y'$  of the force on the submerged side of the surface when we include the ambient pressure  $p_0$ . If we have the same ambient pressure acting on the other side of the surface we can use Eq. 3.10b with  $p_0$  neglected to compute the net force,

$$F_R = p_{c_{\text{gage}}} A = \rho g h_c A = \rho g y_c \sin \theta A$$

and Eq. 3.11b becomes for this case

$$y' = y_c + \frac{I_{\hat{x}\hat{x}}}{Ay_c} \quad (3.11c)$$

Equation 3.11a is the integral equation for computing the location  $y'$  of the resultant force; Eq. 3.11b is a useful algebraic form for computing  $y'$  when we are interested in the resultant force on the submerged side of the surface; Eq. 3.11c is for computing  $y'$  when we are interested in the net force for the case when the same  $p_0$  acts at the free surface and on the other side of the submerged surface. For problems that have a pressure on the other side that is *not*  $p_0$ , we can either analyze each side of the surface separately or reduce the two pressure distributions to one net pressure distribution, in effect creating a system to be solved using Eq. 3.10b with  $p_c$  expressed as a gage pressure.

Note that in any event,  $y' > y_c$ —the location of the force is always below the level of the plate centroid. This makes sense—as Fig. 3.6 shows, the pressures will always be larger on the lower regions, moving the resultant force down the plate.

A similar analysis can be done to compute  $x'$ , the  $x$  location of the force on the plate. Taking the sum of the moments of the infinitesimal forces  $dF$  about the  $y$  axis we obtain

$$x'F_R = \int_A xp \, dA \quad (3.12a)$$

We can express  $p$  as a function of  $y$  as before:

$$\begin{aligned} x'F_R &= \int_A xp \, dA = \int_A x(p_0 + \rho gh) \, dA = \int_A (p_0 x + \rho gxy \sin \theta) \, dA \\ &= p_0 \int_A x \, dA + \rho g \sin \theta \int_A xy \, dA \end{aligned}$$

The first integral is  $x_c A$  (where  $x_c$  is the distance of the centroid from  $y$  axis). The second integral is  $\int_A xy \, dA = I_{xy}$ . Using the parallel axis theorem,  $I_{xy} = I_{\hat{x}\hat{y}} + Ax_c y_c$ , we find

$$\begin{aligned} x'F_R &= p_0 x_c A + \rho g \sin \theta (I_{\hat{x}\hat{y}} + Ax_c y_c) = x_c(p_0 + \rho g y_c \sin \theta)A + \rho g \sin \theta I_{\hat{x}\hat{y}} \\ &= x_c(p_0 + \rho g h_c)A + \rho g \sin \theta I_{\hat{x}\hat{y}} = x_c F_R + \rho g \sin \theta I_{\hat{x}\hat{y}} \end{aligned}$$

Finally, we obtain for  $x'$ :

$$x' = x_c + \frac{\rho g \sin \theta I_{\bar{x}\bar{y}}}{F_R} \quad (3.12b)$$

Equation 3.12b is convenient for computing  $x'$  when we include the ambient pressure  $p_0$ . If we have ambient pressure also acting on the other side of the surface we can again use Eq. 3.10b with  $p_0$  neglected to compute the net force and Eq. 3.12b becomes for this case

$$x' = x_c + \frac{I_{\bar{x}\bar{y}}}{Ay_c} \quad (3.12c)$$


Equation 3.12a is the integral equation for computing the location  $x'$  of the resultant force; Eq. 3.12b can be used for computations when we are interested in the force on the submerged side only; Eq. 3.12c is useful when we have  $p_0$  on the other side of the surface and we are interested in the net force.

In summary, Eqs. 3.10 through 3.12 constitute a complete set of equations for computing the magnitude and location of the force due to hydrostatic pressure on any submerged plane surface. The direction of the force will always be perpendicular to the plane.

We can now consider several examples using these equations. In Example 3.5 we use both the integral and algebraic sets of equations.


### EXAMPLE 3.5 Resultant Force on Inclined Plane Submerged Surface

The inclined surface shown, hinged along edge A, is 5 m wide. Determine the resultant force,  $\vec{F}_R$ , of the water and the air on the inclined surface.

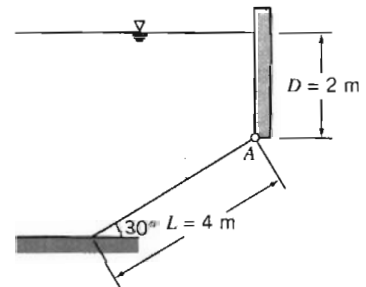

### EXAMPLE PROBLEM 3.5

**GIVEN:** Rectangular gate, hinged along A,  $w = 5$  m.

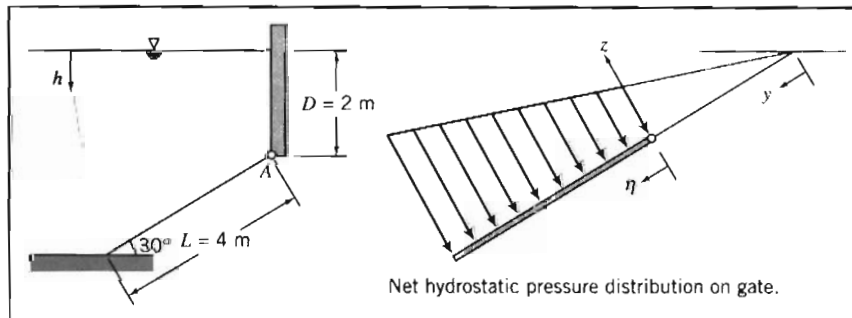

**FIND:** Resultant force,  $F_R$ , of the water and the air on the gate.

**SOLUTION:**

In order to completely determine  $F_R$ , we need to find (a) the magnitude and (b) the line of action of the force (the direction of the force is perpendicular to the surface). We will solve this problem by using (i) direct integration and (ii) the algebraic equations.

**Direct Integration**

Governing equations:  $p = p_0 + \rho gh$      $F_R = \int_A p dA$      $\eta' F_R = \int_A \eta p dA$      $x' F_R = \int_A x p dA$

Because atmospheric pressure  $p_0$  acts on both sides of the plate its effect cancels, and we can work in gage pressures ( $p = \rho gh$ ). In addition, while we *could* integrate using the  $y$  variable, it will be more convenient here to define a variable  $\eta$ , as shown in the figure.

Using  $\eta$  to obtain expressions for  $h$  and  $dA$ , then

$$h = D + \eta \sin 30^\circ \quad \text{and} \quad dA = w d\eta$$

Applying these to the governing equation for the resultant force,

$$\begin{aligned} F_R &= \int_A p dA = \int_0^L \rho g (D + \eta \sin 30^\circ) w d\eta \\ &= \rho g w \left[ D\eta + \frac{\eta^2}{2} \sin 30^\circ \right]_0^L = \rho g w \left[ DL + \frac{L^2}{2} \sin 30^\circ \right] \\ &= \frac{999 \text{ kg}}{\text{m}^3} \times \frac{9.81 \text{ m}}{\text{s}^2} \times 5 \text{ m} \left[ 2 \text{ m} \times 4 \text{ m} + \frac{16 \text{ m}^2}{2} \times \frac{1}{2} \right] \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \end{aligned}$$

$$F_R = 588 \text{ kN} \quad \leftarrow \quad F_R$$

For the location of the force we compute  $\eta'$  (the distance from the top edge of the plate),

$$\eta' F_R = \int_A \eta p dA$$

Then

$$\begin{aligned} \eta' &= \frac{1}{F_R} \int_A \eta p dA = \frac{1}{F_R} \int_0^L \eta p w d\eta = \frac{\rho g w}{F_R} \int_0^L \eta (D + \eta \sin 30^\circ) d\eta \\ &= \frac{\rho g w}{F_R} \left[ \frac{D\eta^2}{2} + \frac{\eta^3}{3} \sin 30^\circ \right]_0^L = \frac{\rho g w}{F_R} \left[ \frac{DL^2}{2} + \frac{L^3}{3} \sin 30^\circ \right] \\ &= \frac{999 \text{ kg}}{\text{m}^3} \times \frac{9.81 \text{ m}}{\text{s}^2} \times \frac{5 \text{ m}}{5.88 \times 10^5 \text{ N}} \left[ \frac{2 \text{ m} \times 16 \text{ m}^2}{2} + \frac{64 \text{ m}^3}{3} \times \frac{1}{2} \right] \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \end{aligned}$$

$$\eta' = 2.22 \text{ m} \quad \text{and} \quad y' = \frac{D}{\sin 30^\circ} + \eta' = \frac{2 \text{ m}}{\sin 30^\circ} + 2.22 \text{ m} = 6.22 \text{ m} \quad \leftarrow \quad y'$$

Also, from consideration of moments about the  $y$  axis through edge  $A$ ,

$$x' = \frac{1}{F_R} \int_A x p dA$$



In calculating the moment of the distributed force (right side), recall, from your earlier courses in statics, that the centroid of the area element must be used for  $x$ . Since the area element is of constant width, then  $x = w/2$ , and

$$x' = \frac{1}{F_R} \int_A \frac{w}{2} p \, dA = \frac{w}{2F_R} \int_A p \, dA = \frac{w}{2} = 2.5 \text{ m} \leftarrow x'$$

### Algebraic Equations

In using the algebraic equations we need to take care in selecting the appropriate set. In this problem we have  $p_0 = p_{\text{atm}}$  on both sides of the plate, so Eq. 3.10b with  $p_c$  as a gage pressure is used for the net force:

$$F_R = p_c A = \rho g h_c A = \rho g \left( D + \frac{L}{2} \sin 30^\circ \right) Lw$$

$$F_R = \rho g w \left[ DL + \frac{L^2}{2} \sin 30^\circ \right]$$

This is the same expression as was obtained by direct integration.

The  $y$  coordinate of the center of pressure is given by Eq. 3.11c:

$$y' = y_c + \frac{I_{\hat{x}\hat{x}}}{Ay_c} \quad (3.11c)$$

For the inclined rectangular gate

$$y_c = \frac{D}{\sin 30^\circ} + \frac{L}{2} = \frac{2 \text{ m}}{\sin 30^\circ} + \frac{4 \text{ m}}{2} = 6 \text{ m}$$

$$A = Lw = 4 \text{ m} \times 5 \text{ m} = 20 \text{ m}^2$$

$$I_{\hat{x}\hat{x}} = \frac{1}{12} WL^3 = \frac{1}{12} \times 5 \text{ m} \times (4 \text{ m})^3 = 26.7 \text{ m}^2$$

$$y' = y_c + \frac{I_{\hat{x}\hat{x}}}{Ay_c} = 6 \text{ m} + \frac{26.7 \text{ m}^2}{20 \text{ m}^2} \times \frac{1}{6 \text{ m}} = 6.22 \text{ m} \leftarrow y'$$

The  $x$  coordinate of the center of pressure is given by Eq. 3.12c:

$$x' = x_c + \frac{I_{\hat{x}\hat{y}}}{Ay_c} \quad (3.12c)$$


For the rectangular gate  $I_{\hat{x}\hat{y}} = 0$  and  $x' = x_c = 2.5 \text{ m}$ .  $\leftarrow x'$


This Example Problem shows

- ✓ Use of integral and algebraic equations.
- ✓ Use of the algebraic equations for computing the *net* force.


### EXAMPLE 3.6 Force on Vertical Plane Submerged Surface with Nonzero Gage Pressure at Free Surface

The door shown in the side of the tank is hinged along its bottom edge. A pressure of 100 psfg is applied to the liquid free surface. Find the force,  $F_r$ , required to keep the door closed.

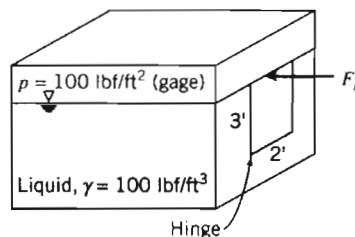

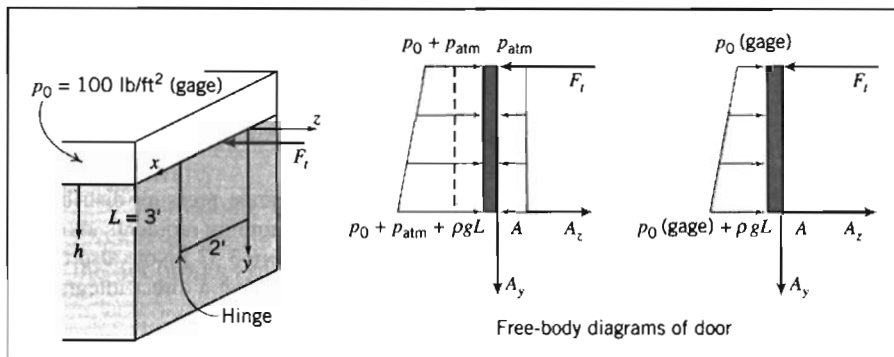**EXAMPLE PROBLEM 3.6****GIVEN:** Door as shown in the figure.**FIND:** Force required to keep door shut.**SOLUTION:**

This problem requires a free-body diagram (FBD) of the door. The pressure distributions on the inside and outside of the door will lead to a net force (and its location) that will be included in the FBD. We need to be careful in choosing the equations for computing the resultant force and its location. We can either use absolute pressures (as on the left FBD) and compute two forces (one on each side) or gage pressures and compute one force (as on the right FBD). For simplicity we will use gage pressures. The right-hand FBD makes clear we should use Eqs. 3.10b and 3.11b, which were derived for problems in which we wish to include the effects of an ambient pressure ( $p_0$ ), or in other words, for problems when we have a nonzero gage pressure at the free surface. The components of force due to the hinge are  $A_y$  and  $A_z$ . The force  $F_i$  can be found by taking moments about A (the hinge).

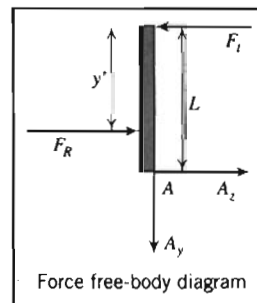

Governing equations:

$$F_R = p_c A \quad y' = y_c + \frac{\rho g \sin \theta I_{\hat{x}\hat{x}}}{F_R} \quad \Sigma M_A = 0$$

The resultant force and its location are

$$F_R = (p_0 + \rho g h_c) A = \left( p_0 + \gamma \frac{L}{2} \right) bL \quad (1)$$

and

$$y' = y_c + \frac{\rho g \sin 90^\circ I_{\hat{x}\hat{x}}}{F_R} = \frac{L}{2} + \frac{\gamma b L^3 / 12}{(p_0 + \gamma \frac{L}{2}) bL} = \frac{L}{2} + \frac{\gamma L^2 / 12}{(p_0 + \gamma \frac{L}{2})} \quad (2)$$

Taking moments about point A

$$\Sigma M_A = F_i L - F_R (L - y') = 0 \quad \text{or} \quad F_i = F_R \left( 1 - \frac{y'}{L} \right)$$

Using Eqs. 1 and 2 in this equation we find

$$F_i = \left( p_0 + \gamma \frac{L}{2} \right) bL \left[ 1 - \frac{1}{2} - \frac{\gamma L^2 / 12}{(p_0 + \gamma \frac{L}{2})} \right]$$

$$\begin{aligned}
 F_t &= \left( p_0 + \gamma \frac{L}{2} \right) \frac{bL}{2} + \gamma \frac{bL^2}{12} \\
 &= \frac{p_0 bL}{2} + \frac{\gamma bL^2}{6} \\
 &= \frac{100 \text{ lbf}}{\text{ft}^2} \times 2 \text{ ft} \times 3 \text{ ft} \times \frac{1}{2} + \frac{100 \text{ lbf}}{\text{ft}^3} \times 2 \text{ ft} \times 9 \text{ ft}^2 \times \frac{1}{6} \\
 F_t &= 600 \text{ lbf} \leftarrow F_t
 \end{aligned} \tag{3}$$

We could have solved this problem by considering the two separate pressure distributions on each side of the door, leading to two resultant forces and their locations. Summing moments about point A with these forces would also have yielded the same value for  $F_t$ . (See Problem 3.53.) Note also that Eq. 3 could have been obtained directly (without separately finding  $F_R$  and  $y'$ ) by using a direct integration approach:

$$\Sigma M_A = F_t L - \int_A y p dA = 0$$

This Example Problem shows:

- ✓ Use of algebraic equations for nonzero gage pressure at the liquid free surface.
- ✓ Use of the moment equation from statics for computing the required applied force.

### Hydrostatic Force on a Curved Submerged Surface

For curved surfaces, we will once again derive expressions for the resultant force by integrating the pressure distribution over the surface. However, unlike for the plane surface, we have a more complicated problem—the pressure force is normal to the surface at each point, but now the infinitesimal area elements point in varying directions because of the surface curvature. This means that instead of integrating over an element  $dA$  we need to integrate over vector element  $d\vec{A}$ . This will initially lead to a more complicated analysis, but we will see that a simple solution technique will be developed.

Consider the curved surface shown in Fig. 3.7. The pressure force acting on the element of area,  $d\vec{A}$ , is given by

$$d\vec{F} = -p d\vec{A}$$

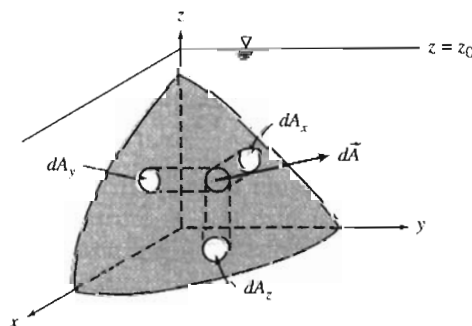


Fig. 3.7 Curved submerged surface.

where the minus sign indicates that the force acts on the area, in the direction opposite to the area normal. The resultant force is given by

$$\vec{F}_R = -\int_A p \, d\vec{A} \quad (3.13)$$

We can write

$$\vec{F}_R = \hat{i}F_{R_x} + \hat{j}F_{R_y} + \hat{k}F_{R_z}$$

where  $F_{R_x}$ ,  $F_{R_y}$ , and  $F_{R_z}$  are the components of  $\vec{F}_R$  in the positive  $x$ ,  $y$ , and  $z$  directions, respectively.

To evaluate the component of the force in a given direction, we take the dot product of the force with the unit vector in the given direction. For example, taking the dot product of each side of Eq. 3.13 with unit vector  $\hat{i}$  gives

$$F_{R_x} = \vec{F}_R \cdot \hat{i} = \int d\vec{F} \cdot \hat{i} = -\int_A p \, d\vec{A} \cdot \hat{i} = -\int_{A_x} p \, dA_x$$

where  $dA_x$  is the projection of  $d\vec{A}$  on a plane perpendicular to the  $x$  axis (see Fig. 3.7), and the minus sign indicates that the  $x$  component of the resultant force is in the negative  $x$  direction.

Since, in any problem, the direction of the force component can be determined by inspection, the use of vectors is not necessary. In general, the magnitude of the component of the resultant force in the  $l$  direction is given by

$$F_{R_l} = \int_{A_l} p \, dA_l \quad (3.14)$$

where  $dA_l$  is the projection of the area element  $dA$  on a plane perpendicular to the  $l$  direction. The line of action of each component of the resultant force is found by recognizing that the moment of the resultant force component about a given axis must be equal to the moment of the corresponding distributed force component about the same axis.

Equation 3.14 can be used for the horizontal forces  $F_{R_x}$  and  $F_{R_y}$ . We have the interesting result that *the horizontal force and its location are the same as for an imaginary vertical plane surface of the same projected area*. This is illustrated in Fig. 3.8, where we have called the horizontal force  $F_H$ .

Figure 3.8 also illustrates how we can compute the vertical component of force: With atmospheric pressure at the free surface and on the other side of the curved surface *the net vertical force will be equal to the weight of fluid directly above the surface*. This can be seen by applying Eq. 3.14 to determine the magnitude of the vertical component of the resultant force, obtaining

$$F_{R_z} = F_V = \int p \, dA_z$$

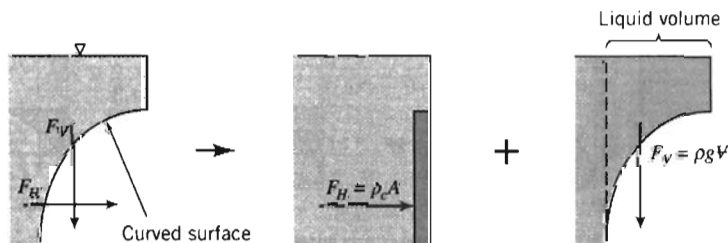


Fig. 3.8 Forces on curved submerged surface.



Since  $p = \rho gh$ ,

$$F_V = \int \rho gh dA_z = \int \rho g dV$$

where  $\rho gh dA_z = \rho g dV$  is the weight of a differential cylinder of liquid above the element of surface area,  $dA_z$ , extending a distance  $h$  from the curved surface to the free surface. The vertical component of the resultant force is obtained by integrating over the entire submerged surface. Thus


$$F_V = \int_{A_z} \rho gh dA_z = \int_V \rho g dV = \rho g V$$

It can be shown that the line of action of the vertical force component passes through the center of gravity of the volume of liquid directly above the curved surface (see Example Problem 3.7).

We have shown that the resultant hydrostatic force on a curved submerged surface is specified in terms of its components. We recall from our study of statics that the resultant of any force system can be represented by a force-couple system, i.e., the resultant force applied at a point and a couple about that point. If the force and the couple vectors are orthogonal (as is the case for a two-dimensional curved surface), the resultant can be represented as a pure force with a unique line of action. Otherwise the resultant may be represented as a "wrench," also having a unique line of action.


### EXAMPLE 3.7 Force Components on a Curved Submerged Surface

The gate shown is hinged at  $O$  and has constant width,  $w = 5$  m. The equation of the surface is  $x = y^2/a$ , where  $a = 4$  m. The depth of water to the right of the gate is  $D = 4$  m. Find the magnitude of the force,  $F_a$ , applied as shown, required to maintain the gate in equilibrium if the weight of the gate is neglected.

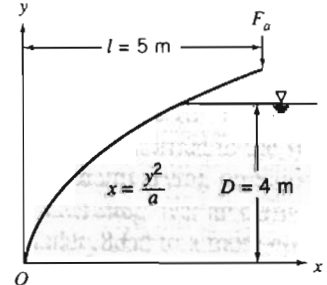

#### EXAMPLE PROBLEM 3.7

**GIVEN:** Gate of constant width,  $w = 5$  m.  
Equation of surface in  $xy$  plane is  $x = y^2/a$ , where  $a = 4$  m.  
Water stands at depth  $D = 4$  m to the right of the gate.  
Force  $F_a$  is applied as shown, and weight of gate is to be neglected.

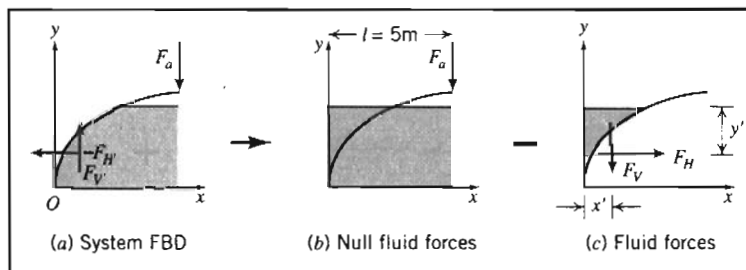

**FIND:** Force  $F_o$  required to maintain the gate in equilibrium.

**SOLUTION:**

We will take moments about point  $O$  after finding the magnitudes and directions of the horizontal and vertical forces due to the water. The free body diagram (FBD) of the system is shown above in part (a). Before proceeding we need to think about how we compute  $F_v$ , the vertical component of the fluid force—we have stated that it is equal (in magnitude and location) to the weight of fluid directly above. However, we have no fluid directly above, even though it is clear that the fluid does exert a vertical force! We need to do a “thought experiment” in which we imagine having a system with water on both sides of the gate (with null effect), minus a system with water directly above the gate (which generates fluid forces). This logic is demonstrated above: the system FBD(a) = the null FBD(b) – the fluid forces FBD(c). Thus the vertical and horizontal fluid forces on the system, FBD(a), are equal and opposite to those on FBD(c). In summary, the magnitude and location of the vertical fluid force  $F_v$  are given by the weight and location of the centroid of the fluid “above” the gate; the magnitude and location of the horizontal fluid force  $F_H$  are given by the magnitude and location of the force on an equivalent vertical flat plate.

$$\text{Governing equations: } F_H = p_c A \quad y' = y_c + \frac{I_{\hat{x}\hat{x}}}{Ay_c} \quad F_v = \rho g \Psi \quad x' = \text{water center of gravity}$$

For  $F_H$ , the centroid, area, and second moment of the equivalent vertical flat plate are, respectively,  $y_c = h_c = D/2$ ,  $A = Dw$  and  $I_{\hat{x}\hat{x}} = wD^3/12$ .

$$\begin{aligned} F_H &= p_c A = \rho g h_c A \\ &= \rho g \frac{D}{2} Dw = \rho g \frac{D^2}{2} w = \frac{999 \text{ kg}}{\text{m}^3} \times \frac{9.81 \text{ m}}{\text{s}^2} \times \frac{(4 \text{ m}^2)}{2} \times 5 \text{ m} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ F_H &= 392 \text{ kN} \end{aligned} \quad (1)$$

and

$$\begin{aligned} y' &= y_c + \frac{I_{\hat{x}\hat{x}}}{Ay_c} \\ &= \frac{D}{2} + \frac{wD^3/12}{wDD/2} = \frac{D}{2} + \frac{D}{6} \\ y' &= \frac{2}{3} D = \frac{2}{3} \times 4 \text{ m} = 2.67 \text{ m} \end{aligned} \quad (2)$$

For  $F_v$ , we need to compute the weight of water “above” the gate. To do this we define a differential column of volume  $(D - y) w dx$  and integrate

$$\begin{aligned} F_v &= \rho g \Psi = \rho g \int_0^{D^2/a} (D - y) w dx = \rho g w \int_0^{D^2/a} \left( D - \sqrt{ax} \right) dx \\ &= \rho g w \left[ Dx - \frac{2}{3} \sqrt{ax}^{\frac{3}{2}} \right]_0^{D^2/a} = \rho g w \left[ \frac{D^3}{a} - \frac{2}{3} \sqrt{a} \frac{D^3}{a^{\frac{3}{2}}} \right] = \frac{\rho g w D^3}{3a} \\ F_v &= \frac{999 \text{ kg}}{\text{m}^3} \times \frac{9.81 \text{ m}}{\text{s}^2} \times 5 \text{ m} \times \frac{(4)^3 \text{ m}^3}{3} \times \frac{1}{4 \text{ m}} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} = 261 \text{ kN} \end{aligned} \quad (3)$$

The location  $x'$  of this force is given by the location of the center of gravity of the water “above” the gate. We recall from statics that this can be obtained by using the notion that the moment of  $F_v$ , and the



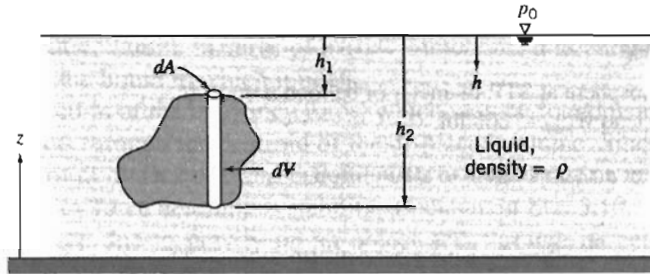


Fig. 3.9 Immersed body in static liquid.

But  $(h_2 - h_1)dA = dV$ , the volume of the element. Thus

$$F_z = \int dF_z = \int_V \rho g dV = \rho g V$$

where  $V$  is the volume of the object. Hence we conclude that for a submerged body *the buoyancy force of the fluid is equal to the weight of displaced fluid*,

$$F_{\text{buoyancy}} = \rho g V \quad (3.15)$$


This relation reportedly was used by Archimedes in 220 B.C. to determine the gold content in the crown of King Hiero II. Consequently, it is often called "Archimedes' Principle." In more current technical applications, Eq. 3.15 is used to design displacement vessels, flotation gear, and submersibles [1].

The submerged object need not be solid. Hydrogen bubbles, used to visualize streaklines and timelines in water (see Section 2-2), are positively buoyant; they rise slowly as they are swept along by the flow. Conversely, water droplets in oil are negatively buoyant and tend to sink.

Airships and balloons are termed "lighter-than-air" craft. The density of an ideal gas is proportional to molecular weight, so hydrogen and helium are less dense than air at the same temperature and pressure. Hydrogen ( $M_m = 2$ ) is less dense than helium ( $M_m = 4$ ), but extremely flammable, whereas helium is inert. Hydrogen has not been used commercially since the disastrous explosion of the German passenger airship *Hindenburg* in 1937. The use of buoyancy force to generate lift is illustrated in Example Problem 3.8.

### EXAMPLE 3.8 Buoyancy Force in a Hot Air Balloon

A hot air balloon (approximated as a sphere of diameter 50 ft) is to lift a basket load of 600 lbf. To what temperature must the air be heated in order to achieve liftoff?

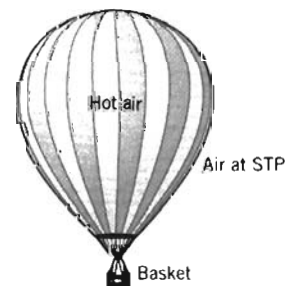

**EXAMPLE PROBLEM 3.8**

**GIVEN:** Atmosphere at STP, diameter of balloon  $d = 50$  ft, and load  $W_{\text{load}} = 600$  lbf.

**FIND:** The hot air temperature to attain liftoff.

**SOLUTION:**

Apply the buoyancy equation to determine the lift generated by atmosphere, and apply the vertical force equilibrium equation to obtain the hot air density. Then use the ideal gas equation to obtain the hot air temperature.

Governing equations:

$$F_{\text{buoyancy}} = \rho g \mathcal{V} \quad \sum F_y = 0 \quad p = \rho RT$$

Assumptions: (1) Ideal gas.  
(2) Atmospheric pressure throughout.

Summing vertical forces

$$\sum F_y = F_{\text{buoyancy}} - W_{\text{hot air}} - W_{\text{load}} = \rho_{\text{atm}} g \mathcal{V} - \rho_{\text{hot air}} g \mathcal{V} - W_{\text{load}} = 0$$

Rearranging and solving for  $\rho_{\text{hot air}}$  (using data from Appendix A),

$$\begin{aligned} \rho_{\text{hot air}} &= \rho_{\text{atm}} - \frac{W_{\text{load}}}{g \mathcal{V}} = \rho_{\text{atm}} - \frac{6 W_{\text{load}}}{\pi d^3 g} \\ &= 0.00238 \frac{\text{slug}}{\text{ft}^3} - 6 \times \frac{600 \text{ lbf}}{\pi (50)^3 \text{ft}^3} \times \frac{\text{s}^2}{32.2 \text{ ft}} \times \frac{\text{slug} \cdot \text{ft}}{\text{s}^2 \cdot \text{lbf}} \\ \rho_{\text{hot air}} &= (0.00238 - 0.000285) \frac{\text{slug}}{\text{ft}^3} = 0.00209 \frac{\text{slug}}{\text{ft}^3} \end{aligned}$$


Finally, to obtain the temperature of this hot air, we can use the ideal gas equation in the following form

$$\frac{p_{\text{hot air}}}{\rho_{\text{hot air}} RT_{\text{hot air}}} = \frac{p_{\text{atm}}}{\rho_{\text{atm}} RT_{\text{atm}}}$$

and with  $p_{\text{hot air}} = p_{\text{atm}}$

$$T_{\text{hot air}} = T_{\text{atm}} \frac{\rho_{\text{atm}}}{\rho_{\text{hot air}}} = (460 + 59)^\circ \text{R} \times \frac{0.00238}{0.00209} = 591^\circ \text{R}$$

$$T_{\text{hot air}} = 131^\circ \text{F} \quad \leftarrow T_{\text{hot air}}$$

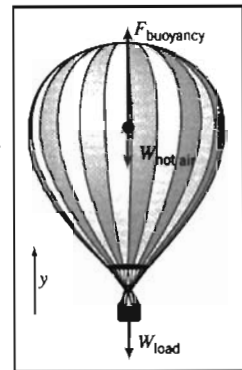**Notes:**

- ✓ Absolute pressures and temperatures are always used in the ideal gas equation.
- ✓ This problem demonstrates that for lighter-than-air vehicles the buoyancy force exceeds the vehicle weight—that is, the weight of fluid (air) displaced exceeds the vehicle weight.

Equation 3.15 predicts the net vertical pressure force on a body that is totally submerged in a single liquid. In cases of partial immersion, a floating body displaces its own weight of the liquid in which it floats.

The line of action of the buoyancy force, which may be found using the methods of Section 3-5, acts through the centroid of the displaced volume. Since floating bodies are in equilibrium under body and buoyancy forces, the location of the line of action of the buoyancy force determines stability, as shown in Fig. 3.10.

The body force due to gravity on an object acts through its center of gravity, CG. In Fig. 3.10a, the lines of action of the buoyancy and the body forces are offset in such a way as to produce a couple that tends to right the craft. In Fig. 3.10b, the couple tends to capsize the craft.

Ballast may be needed to achieve roll stability. Wooden warships carried stone ballast low in the hull to offset the weight of the heavy cannon on upper gun decks. Modern ships can have stability problems as well: overloaded ferry boats have capsized when passengers all gathered on one side of the upper deck, shifting the CG laterally. In stacking containers high on the deck of a container ship, care is needed to avoid raising the center of gravity to a level that may result in the unstable condition depicted in Fig. 3.10b.

For a vessel with a relatively flat bottom, as shown in Fig. 3.10a, the restoring moment increases as roll angle becomes larger. At some angle, typically that at which the edge of the deck goes below water level, the restoring moment peaks and starts to decrease. The moment may become zero at some large roll angle, known as the angle of vanishing stability. The vessel may capsize if the roll exceeds this angle; then, if still intact, the vessel may find a new equilibrium state upside down.

The actual shape of the restoring moment curve depends on hull shape. A broad beam gives a large lateral shift in the line of action of the buoyancy force and thus a high restoring moment. High freeboard above the water line increases the angle at which the moment curve peaks, but may make the moment drop rapidly above this angle.

Sailing vessels are subjected to large lateral forces as wind engages the sails (a boat under sail in a brisk wind typically operates at a considerable roll angle). The lateral wind force must be counteracted by a heavily weighted keel extended below the hull bottom. In small sailboats, crew members may lean far over the side to add additional restoring moment to prevent capsizing [2].

Within broad limits, the buoyancy of a surface vessel is adjusted automatically as the vessel rides higher or lower in the water. However, craft that operate fully

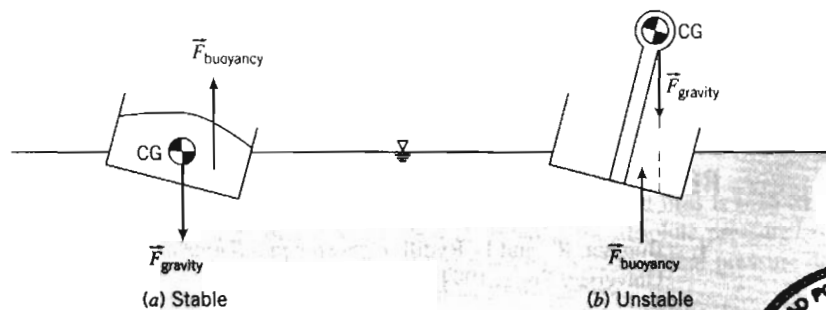


Fig. 3.10 Stability of floating bodies.



submerged must actively adjust buoyancy and gravity forces to remain neutrally buoyant. For submarines this is accomplished using tanks which are flooded to reduce excess buoyancy or blown out with compressed air to increase buoyancy [1]. Airships may vent gas to descend or drop ballast to rise. Buoyancy of a hot-air balloon is controlled by varying the air temperature within the balloon envelope.

For deep ocean dives use of compressed air becomes impractical because of the high pressures (the Pacific Ocean is over 10 km deep; seawater pressure at this depth is greater than 1000 atmospheres!). A liquid such as gasoline, which is buoyant in seawater, may be used to provide buoyancy. However, because gasoline is more compressible than water, its buoyancy decreases as the dive gets deeper. Therefore it is necessary to carry and drop ballast to achieve positive buoyancy for the return trip to the surface.

The most structurally efficient hull shape for airships and submarines has a circular cross-section. The buoyancy force passes through the center of the circle. Therefore, for roll stability the CG must be located below the hull centerline. Thus the crew compartment of an airship is placed beneath the hull to lower the CG.

### 3-7 FLUIDS IN RIGID-BODY MOTION (CD-ROM)

### 3-8 SUMMARY

In this chapter we have reviewed the basic concepts of fluid statics. This included:

- ✓ Deriving the basic equation of fluid statics in vector form.
- ✓ Applying this equation to compute the pressure variation in a static fluid:
  - Incompressible liquids: pressure increases uniformly with depth.
  - Gases: pressure decreases nonuniformly with elevation (dependent on other thermodynamic properties).
- ✓ Study of:
  - Gage and absolute pressure.
  - Use of manometers and barometers.
- ✓ Analysis of the fluid force magnitude and location on submerged:
  - Plane surfaces.
  - Curved surfaces.
- ✓ \*Derivation and use of Archimedes' Principle of Buoyancy.
- ✓ \*Analysis of rigid-body fluid motion (on the CD).

We have now concluded our introduction to the fundamental concepts of fluid mechanics, and the basic concepts of fluid statics. In the next chapter we will begin our study of fluids in motion.


### REFERENCES

1. Burcher, R., and L. Rydill, *Concepts in Submarine Design*. Cambridge, U.K.: Cambridge University Press, 1994.
2. Marchaj, C. A., *Aero-Hydrodynamics of Sailing*, rev. ed. Camden, ME: International Marine Publishing, 1988.



\* These topics apply to sections that may be omitted without loss of continuity in the text material.

## PROBLEMS

- 3.1 Compressed nitrogen is stored in a spherical tank of diameter  $D = 0.75$  m. The gas is at an absolute pressure of 25 MPa and a temperature of 25°C. What is the mass in the tank? If the maximum allowable wall stress in the tank is 210 MPa, find the minimum theoretical wall thickness of the tank.
- 3.2 Ear “popping” is an unpleasant phenomenon sometimes experienced when a change in pressure occurs, for example in a fast-moving elevator or in an airplane. If you are in a two-seater airplane at 3000 m and a descent of 100 m causes your ears to “pop,” what is the pressure change that your ears “pop” at, in millimeters of mercury? If the airplane now rises to 8000 m and again begins descending, how far will the airplane descend before your ears “pop” again? Assume a U.S. Standard Atmosphere.
- 3.3 Because the pressure falls, water boils at a lower temperature with increasing altitude. Consequently, cake mixes and boiled eggs, among other foods, must be cooked different lengths of time. Determine the boiling temperature of water at 1000 and 2000 m elevation on a standard day, and compare with the sea-level value.
- 3.4 When you are on a mountain face and boil water, you notice that the water temperature is 90°C. What is your approximate altitude? The next day, you are at a location where it boils at 85°C. How high did you climb between the two days? Assume a U.S. Standard Atmosphere.
- 3.5 The tube shown is filled with mercury at 20°C. Calculate the force applied to the piston.

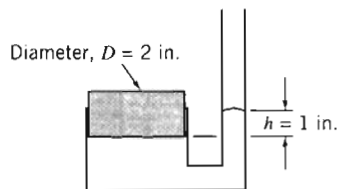

P3.5

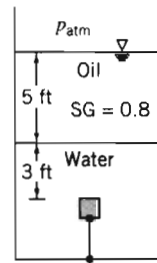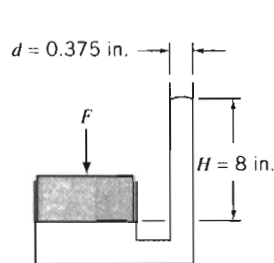

P3.6

- 3.6 A 1 ft cube of solid oak is held submerged by a tether as shown. Calculate the actual force of the water on the bottom surface of the cube and the tension in the tether.
- 3.7 A cube with 6 in. sides is suspended in a fluid by a wire. The top of the cube is horizontal and 8 in. below the free surface. If the cube has a mass of 2 slugs and the tension in the wire is  $T = 50.7$  lbf, compute the fluid specific gravity, and from this determine the fluid. What are the gage pressures on the upper and lower surfaces?
- 3.8 A hollow metal cube with sides 100 mm floats at the interface between a layer of water and a layer of SAE 10W oil such that 10% of the cube is exposed to the oil. What is the pressure difference between the upper and lower horizontal surfaces? What is the average density of the cube?
- 3.9 Your pressure gage indicates that the pressure in your cold tires is 0.25 MPa (gage) on a mountain at an elevation of 3500 m. What is the absolute pressure? After you drive down to sea level, your tires have warmed to 25°C. What pressure does your gage now indicate? Assume a U.S. Standard Atmosphere.
- 3.10 An air bubble, 10 mm in diameter, is released from the regulator of a scuba diver swimming 30 m below the sea surface. (The water temperature is 30°C.) Estimate the diameter of the bubble just before it reaches the water surface.




- 3.11 An inverted cylindrical container is lowered slowly beneath the surface of a pool of water. Air trapped in the container is compressed isothermally as the hydrostatic pressure increases. Develop an expression for the water height,  $y$ , inside the container in terms of the container height,  $H$ , and depth of submersion,  $h$ . Plot  $y/H$  versus  $h/H$ .
- 3.12 Oceanographic research vessels have descended to 10 km below sea level. At these extreme depths, the compressibility of seawater can be significant. One may model the behavior of seawater by assuming that its bulk modulus remains constant. Using this assumption, evaluate the deviations in density and pressure compared with values computed using the incompressible assumption at a depth,  $h$ , of 10 km in seawater. Express your answers in percent. Plot the results over the range  $0 \leq h \leq 10$  km.
- 3.13 Assuming the bulk modulus is constant for seawater, derive an expression for the density variation with depth,  $h$ , below the surface. Show that the result may be written

$$\rho \approx \rho_0 + bh$$


where  $\rho_0$  is the density at the surface. Evaluate the constant  $b$ . Then using the approximation, obtain an equation for the variation of pressure with depth below the surface. Determine the percent error in pressure predicted by the approximate solution at a depth of 1000 m.

- 3.14 A container with two circular vertical tubes of diameters  $d_1 = 39.5$  mm and  $d_2 = 12.7$  mm is partially filled with mercury. The equilibrium level of the liquid is shown in the left diagram. A cylindrical object made from solid brass is placed in the larger tube so that it floats, as shown in the right diagram. The object is  $D = 37.5$  mm in diameter and  $H = 76.2$  mm high. Calculate the pressure at the lower surface needed to float the object. Determine the new equilibrium level,  $h$ , of the mercury with the brass cylinder in place.

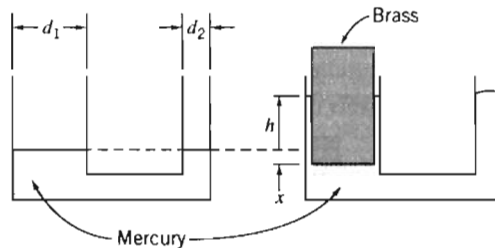


P3.14

- 3.15 A partitioned tank as shown contains water and mercury. What is the gage pressure in the air trapped in the left chamber? What pressure would the air on the left need to be pumped to in order to bring the water and mercury free surfaces level?

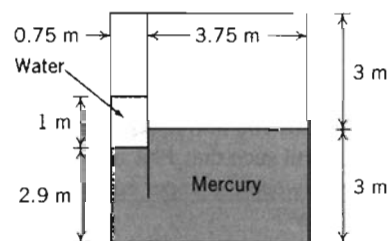


P3.15, 3.16

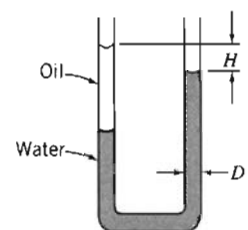


P3.17

- 3.16 In the tank of Problem 3.15, if the opening to atmosphere on the right chamber is first sealed, what pressure would the air on the left now need to be pumped to in order to bring the water and mercury free surfaces level? (Assume the air trapped in the right chamber behaves isothermally.)

- 3.17 A manometer is formed from glass tubing with uniform inside diameter,  $D = 6.35$  mm, as shown. The U-tube is partially filled with water. Then  $V = 3.25$  cm<sup>3</sup> of Meriam red oil is added to the left side. Calculate the equilibrium height,  $H$ , when both legs of the U-tube are open to the atmosphere.
- 3.18 Consider the two-fluid manometer shown. Calculate the applied pressure difference.

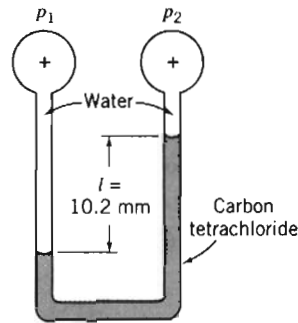


P3.18

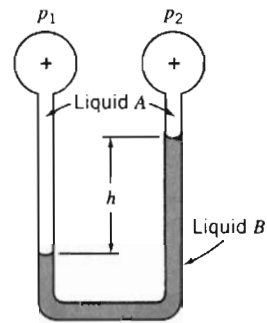


P3.19

- 3.19 The manometer shown contains two liquids. Liquid A has SG = 0.88 and liquid B has SG = 2.95. Calculate the deflection,  $h$ , when the applied pressure difference is  $p_1 - p_2 = 870$  Pa.
- 3.20 The manometer shown contains water and kerosene. With both tubes open to the atmosphere, the free-surface elevations differ by  $H_0 = 20.0$  mm. Determine the elevation difference when a pressure of 98.0 Pa (gage) is applied to the right tube.

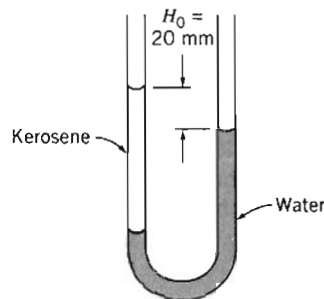


P3.20

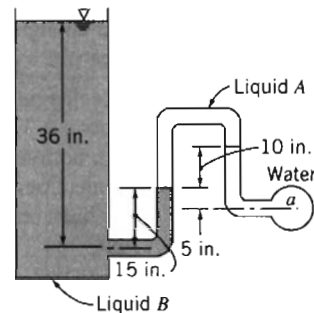


P3.21

- 3.21 Determine the gage pressure in psig at point  $a$ , if liquid A has SG = 0.75 and liquid B has SG = 1.20. The liquid surrounding point  $a$  is water and the tank on the left is open to the atmosphere.
- 3.22 The NIH Corporation's engineering department is evaluating a sophisticated \$80,000 laser system to measure the difference in water level between two large water storage tanks. It is important that small differences be measured accurately. You suggest that the job can be done with a \$200 manometer arrangement. An oil less dense than water can be used to give a 10 : 1 amplification of meniscus movement; a small difference in level between the tanks will cause 10 times as much deflection in the oil levels in the manometer. Determine the specific gravity of the oil required for 10 : 1 amplification. (See P3.22 on next page.)

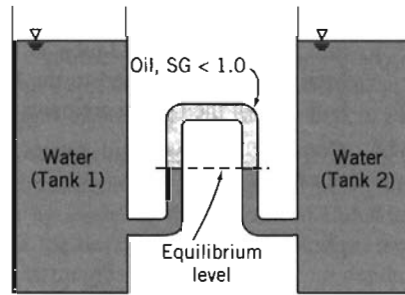


P3.22

- 3.23 Consider a tank containing mercury, water, benzene, and air as shown. Find the air pressure (gage). If an opening is made in the top of the tank, find the equilibrium level of the mercury in the manometer.

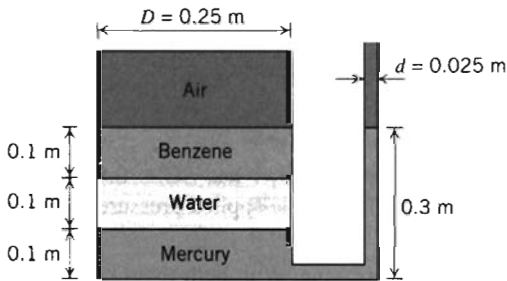


P3.23

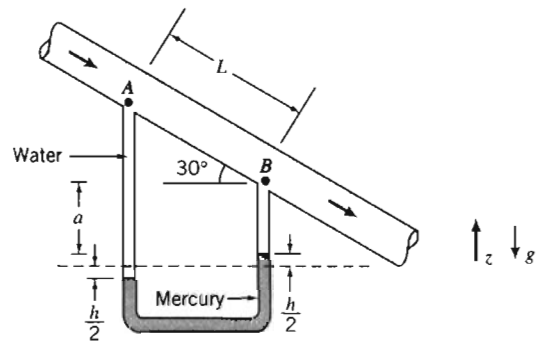


P3.24

- 3.24 Water flows downward along a pipe that is inclined at  $30^\circ$  below the horizontal, as shown. Pressure difference  $p_A - p_B$  is due partly to gravity and partly to friction. Derive an algebraic expression for the pressure difference. Evaluate the pressure difference if  $L = 5$  ft and  $h = 6$  in.
- 3.25 A rectangular tank, open to the atmosphere, is filled with water to a depth of 2.5 m as shown. A U-tube manometer is connected to the tank at a location 0.7 m above the tank bottom. If the zero level of the Meriam blue manometer fluid is 0.2 m below the connection, determine the deflection  $l$  after the manometer is connected and all air has been removed from the connecting leg.

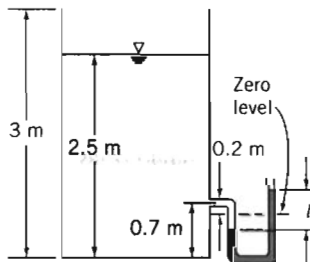


P3.25, 3.27, 3.33

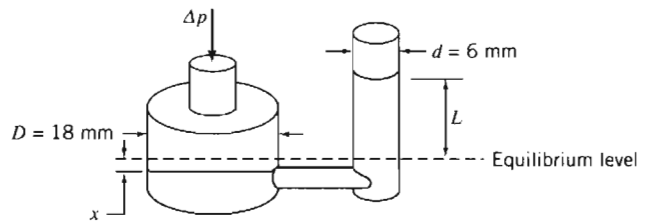

P3.26

- 3.26 A reservoir manometer has vertical tubes of diameter  $D = 18$  mm and  $d = 6$  mm. The manometer liquid is Meriam red oil. Develop an algebraic expression for liquid deflection  $L$  in the small tube when gage pressure  $\Delta p$  is applied to the reservoir. Evaluate the liquid deflection when the applied pressure is equivalent to 25 mm of water (gage).

- 3.27 The manometer fluid of Problem 3.25 is replaced with mercury (same zero level). The tank is sealed and the air pressure is increased to a gage pressure of 0.5 atm. Determine the deflection  $l$ .
- 3.28 A reservoir manometer is calibrated for use with a liquid of specific gravity 0.827. The reservoir diameter is  $\frac{5}{8}$  in. and the (vertical) tube diameter is  $\frac{3}{16}$  in. Calculate the required distance between marks on the vertical scale for 1 in. of water pressure difference.
- 3.29 The inclined-tube manometer shown has  $D = 3$  in. and  $d = 0.25$  in., and is filled with Meriam red oil. Compute the angle,  $\theta$ , that will give a 5 in. oil deflection along the inclined tube for an applied pressure of 1 in. of water (gage). Determine the sensitivity of this manometer.

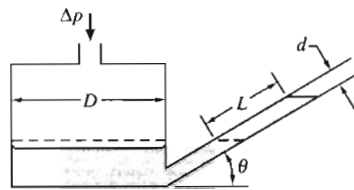


P3.29, 3.30

- 3.30 The inclined-tube manometer shown has  $D = 96$  mm and  $d = 8$  mm. Determine the angle,  $\theta$ , required to provide a 5 : 1 increase in liquid deflection,  $L$ , compared with the total deflection in a regular U-tube manometer. Evaluate the sensitivity of this inclined-tube manometer.



- 3.31 A student wishes to design a manometer with better sensitivity than a water-filled U-tube of constant diameter. The student's concept involves using tubes with different diameters and two liquids, as shown. Evaluate the deflection  $h$  of this manometer, if the applied pressure difference is  $\Delta p = 250$  N/m<sup>2</sup>. Determine the sensitivity of this manometer. Plot the manometer sensitivity as a function of the diameter ratio  $d_2/d_1$ .

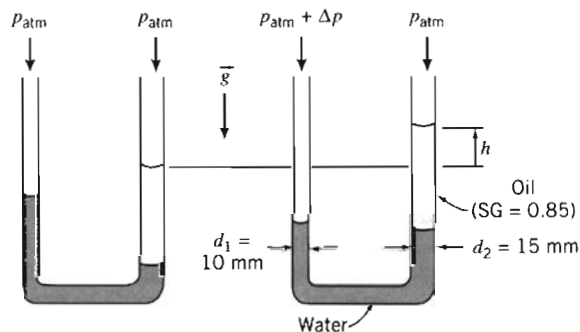


P3.31

- 3.32 A barometer accidentally contains 6.5 inches of water on top of the mercury column (so there is also water vapor instead of a vacuum at the top of the barometer). On a day when the temperature is 70°F, the mercury column height is 28.35 inches (corrected for thermal expansion). Determine the barometric pressure in psia. If the ambient temperature increased to 85°F and the barometric pressure did not change, would the mercury column be longer, be shorter, or remain the same length? Justify your answer.
- 3.33 If the tank of Problem 3.25 is sealed tightly and water drains slowly from the bottom of the tank, determine the deflection,  $l$ , after the system has attained equilibrium.


- 3.34 A water column stands 50 mm high in a 2.5 mm diameter glass tube. What would be the column height if the surface tension were zero? What would be the column height in a 1.0 mm diameter tube?
- 3.35 Consider a small diameter open-ended tube inserted at the interface between two immiscible fluids of different densities. Derive an expression for the height difference  $\Delta h$  between the interface level inside and outside the tube in terms of tube diameter  $D$ , the two fluid densities,  $\rho_1$  and  $\rho_2$ , and the surface tension  $\sigma$  and angle  $\theta$  for the two fluids' interface. If the two fluids are water and mercury, find the tube diameter such that  $\Delta h < 10$  mm.
- 3.36 Compare the height due to capillary action of water exposed to air in a circular tube of diameter  $D = 0.5$  mm, and between two infinite vertical parallel plates of gap  $a = 0.5$  mm.
- 3.37 Two vertical glass plates 300 mm  $\times$  300 mm are placed in an open tank containing water. At one end the gap between the plates is 0.1 mm, and at the other it is 2 mm. Plot the curve of water height between the plates from one end of the pair to the other.
- 3.38 Based on the atmospheric temperature data of the U.S. Standard Atmosphere of Fig. 3.3, compute and plot the pressure variation with altitude, and compare with the pressure data of Table A.3.
- 3.39 On a certain calm day, a mild inversion causes the atmospheric temperature to remain constant at 30°C between sea level and 5 km altitude. Under these conditions, (a) calculate the elevation change for which a 1 percent reduction in air pressure occurs, (b) determine the change of elevation necessary to effect a 15 percent reduction in density, and (c) plot  $p_2/p_1$  and  $\rho_2/\rho_1$  as a function of  $\Delta z$ .
- 3.40 The Martian atmosphere behaves as an ideal gas with mean molecular mass of 32.0 and constant temperature of 200 K. The atmospheric density at the planet surface is  $\rho = 0.015$  kg/m<sup>3</sup> and Martian gravity is 3.92 m/s<sup>2</sup>. Calculate the density of the Martian atmosphere at height  $z = 20$  km above the surface. Plot the ratio of density to surface density as a function of elevation. Compare with that for data on the earth's atmosphere.
- 3.41 At ground level in Denver, Colorado, the atmospheric pressure and temperature are 83.2 kPa and 25°C. Calculate the pressure on Pike's Peak at an elevation of 2690 m above the city assuming (a) an incompressible and (b) an adiabatic atmosphere. Plot the ratio of pressure to ground level pressure in Denver as a function of elevation for both cases.
- 3.42 A hydropneumatic elevator consists of a piston-cylinder assembly to lift the elevator cab. Hydraulic oil, stored in an accumulator tank pressurized by air, is valved to the piston as needed to lift the elevator. When the elevator descends, oil is returned to the accumulator. Design the least expensive accumulator that can satisfy the system requirements. Assume the lift is 3 floors, the maximum load is 10 passengers, and the maximum system pressure is 800 kPa (gage). For column bending strength, the piston diameter must be at least 150 mm. The elevator cab and piston have a combined mass of 3000 kg, and are to be purchased. Perform the analysis needed to define, as a function of system operating pressure, the piston diameter, the accumulator volume and diameter, and the wall thickness. Discuss safety features that your company should specify for the complete elevator system. Would it be preferable to use a completely pneumatic design or a completely hydraulic design? Why?
- 3.43 A door 1 m wide and 1.5 m high is located in a plane vertical wall of a water tank. The door is hinged along its upper edge, which is 1 m below the water surface. Atmospheric pressure acts on the outer surface of the door. (a) If the pressure at the water surface is atmospheric, what force must be applied at the lower edge of the door in order to keep the door from opening? (b) If the water surface gage pressure is raised to 0.5 atm, what force must be applied at the lower edge of the door to keep the door from opening? (c) Find the ratio  $F/F_0$  as a function of the surface pressure ratio  $p_s/p_{atm}$ . ( $F_0$  is the force required when  $p_s = p_{atm}$ .)

- 3.44 A door 1 m wide and 1.5 m high is located in a plane vertical wall of a water tank. The door is hinged along its upper edge, which is 1 m below the water surface. Atmospheric pressure acts on the outer surface of the door and at the water surface. (a) Determine the magnitude and line of action of the total resultant force from all fluids acting on the door. (b) If the water surface gage pressure is raised to 0.3 atm, what is the resultant force and where is its line of action? (c) Plot the ratios  $F/F_0$  and  $y'/y_c$  for different values of the surface pressure ratio  $p_s/p_{atm}$ . ( $F_0$  is the resultant force when  $p_s = p_{atm}$ .)

- 3.45 A triangular access port must be provided in the side of a form containing liquid concrete. Using the coordinates and dimensions shown, determine the resultant force that acts on the port and its point of application.

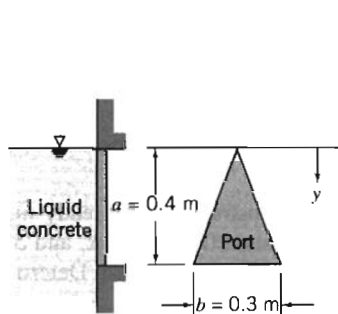


P 3.45

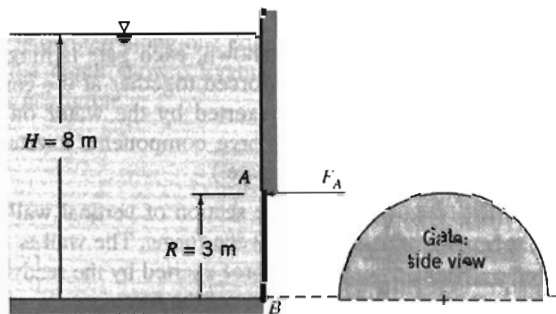


P3.46

- 3.46 Semicircular plane gate  $AB$  is hinged along  $B$  and held by horizontal force  $F_A$  applied at  $A$ . The liquid to the left of the gate is water. Calculate the force  $F_A$  required for equilibrium.

- 3.47 A plane gate of uniform thickness holds back a depth of water as shown. Find the minimum weight needed to keep the gate closed.

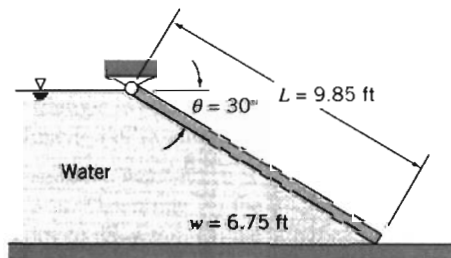

P3.47

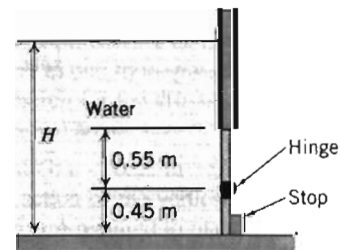


P3.48


- 3.48 A rectangular gate (width  $w = 2$  m) is hinged as shown, with a stop on the lower edge. At what depth  $H$  will the gate tip?

- 3.49 Consider a semicylindrical trough of radius  $R$  and length  $L$ . Develop general expressions for the magnitude and line of action of the hydrostatic force on one end, if the trough is partially filled with water and open to atmosphere. Plot the results (in nondimensional form) over the range of water depth  $0 \leq d/R \leq 1$ .

- 3.50 A window in the shape of an isosceles triangle and hinged at the top is placed in the vertical wall of a form that contains liquid concrete. Determine the minimum force that must be applied at point  $D$  to keep the window closed for the configuration of form and concrete shown. Plot the results over the range of concrete depth  $0 \leq c \leq a$ .

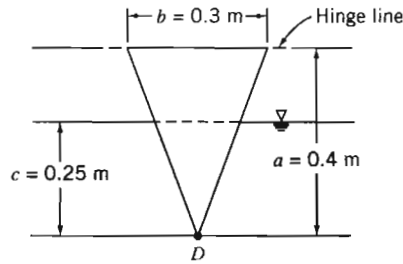


P3.50

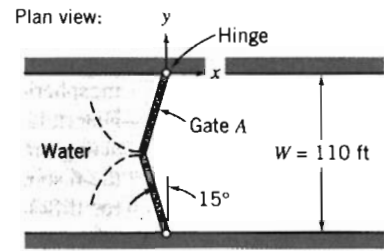


P3.51

- 3.51 Gates in the Poe Lock at Sault Ste. Marie, Michigan, close a channel  $W = 110$  ft wide,  $L = 1200$  ft long, and  $D = 32$  ft deep. The geometry of one pair of gates is shown; each gate is hinged at the channel wall. When closed, the gate edges are forced together at the center of the channel by water pressure. Evaluate the force exerted by the water on gate A. Determine the magnitude and direction of the force components exerted by the gate on the hinge. (Neglect the weight of the gate.)
- 3.52 A section of vertical wall is to be constructed from ready-mix concrete poured between forms. The wall is to be 3 m high, 0.25 m thick, and 5 m wide. Calculate the force exerted by the ready-mix concrete on each form. Determine the line of application of the force.
- 3.53 Solve Example Problem 3.6 again using the first alternative method described on page 74. Consider the distributed force to be the sum of a force  $F_1$  caused by the uniform gage pressure and a force  $F_2$  caused by the liquid. Solve for these forces and their lines of action. Then sum moments about the hinge axis to calculate  $F_1$ .
- 3.54 The circular access port in the side of a water standpipe has a diameter of 0.6 m and is held in place by eight bolts evenly spaced around the circumference. If the standpipe diameter is 7 m and the center of the port is located 12 m below the free surface of the water, determine (a) the total force on the port and (b) the appropriate bolt diameter.
- 3.55 The gate AOC shown is 6 ft wide and is hinged along O. Neglecting the weight of the gate, determine the force in bar AB. The gate is sealed at C.

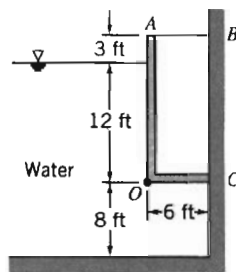


P3.55

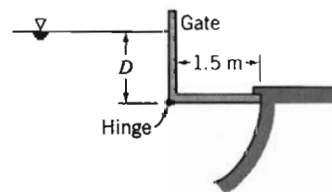


P3.56

- 3.56 As water rises on the left side of the rectangular gate, the gate will open automatically. At what depth above the hinge will this occur? Neglect the mass of the gate.
- 3.57 The gate shown is hinged at H. The gate is 2 m wide normal to the plane of the diagram. Calculate the force required at A to hold the gate closed.

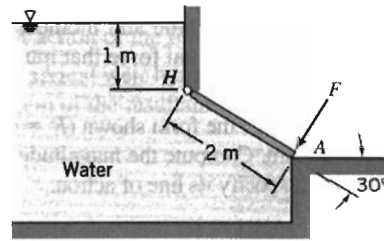


P3.57

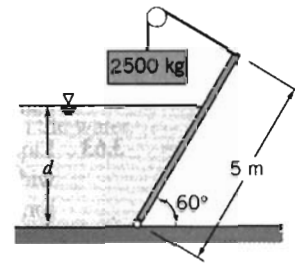


P3.58

3.58 The gate shown is 3 m wide and for analysis can be considered massless. For what depth of water will this rectangular gate be in equilibrium as shown?

3.59 A long, square wooden block is pivoted along one edge. The block is in equilibrium when immersed in water to the depth shown. Evaluate the specific gravity of the wood, if friction in the pivot is negligible.

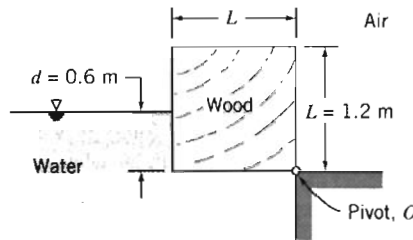

P3.59

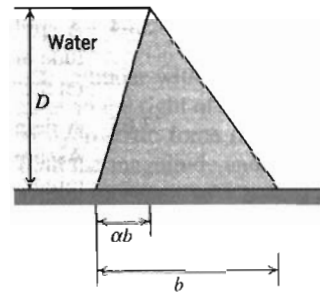


P3.60




3.60 A solid concrete dam is to be built to hold back a depth  $D$  of water. For ease of construction the walls of the dam must be planar. Your supervisor asks you to consider the following dam cross-sections: a rectangle, a right triangle with the hypotenuse in contact with the water, and a right triangle with the vertical in contact with the water. She wishes you to determine which of these would require the least amount of concrete. What will your report say? You decide to look at one more possibility: a non-right triangle, as shown. Develop and plot an expression for the cross-section area  $A$  as a function of  $\alpha$ , and find the minimum cross-sectional area.

3.61 The parabolic gate shown is 2 m wide and pivoted at  $O$ ;  $c = 0.25 \text{ m}^{-1}$ ,  $D = 2 \text{ m}$ , and  $H = 3 \text{ m}$ . Determine (a) the magnitude and line of action of the vertical force on the gate due to the water, (b) the horizontal force applied at  $A$  required to maintain the gate in equilibrium, and (c) the vertical force applied at  $A$  required to maintain the gate in equilibrium.

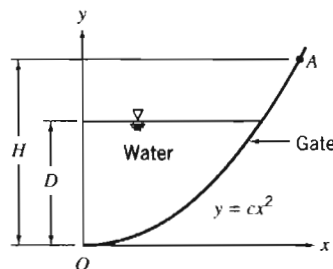

P3.61

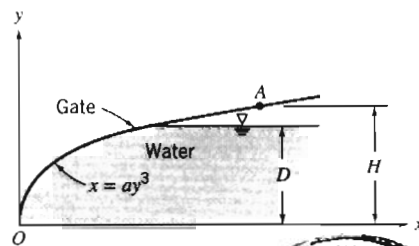


P3.62






- 3.62 The gate shown is 1.5 m wide and pivoted at  $O$ ;  $a = 1.0 \text{ m}^{-2}$ ,  $D = 1.20 \text{ m}$ , and  $H = 1.40 \text{ m}$ . Determine (a) the magnitude and moment of the vertical component of the force about  $O$ , and (b) the horizontal force that must be applied at point  $A$  to hold the gate in position.
- 3.63 Liquid concrete is poured into the form shown ( $R = 0.313 \text{ m}$ ). The form is  $w = 4.25 \text{ m}$  wide normal to the diagram. Compute the magnitude of the vertical force exerted on the form by the concrete and specify its line of action.

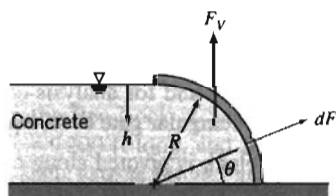


P3.63

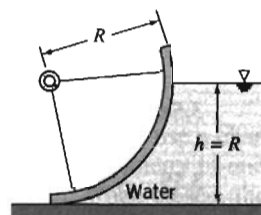


P3.64

- 3.64 A spillway gate formed in the shape of a circular arc is  $w \text{ m}$  wide. Find the magnitude and line of action of the vertical component of the force due to all fluids acting on the gate.
- 3.65 A dam is to be constructed across the Wabash River using the cross-section shown. Assume the dam width is  $w = 50 \text{ m}$ . For water height  $H = 2.5 \text{ m}$ , calculate the magnitude and line of action of the vertical force of water on the dam face. Is it possible for water forces to overturn this dam? Under what circumstances?

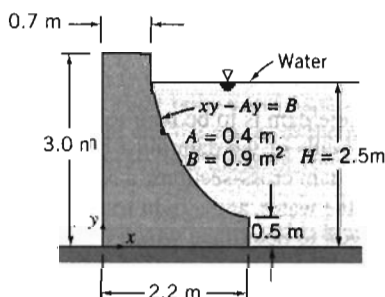


P3.65

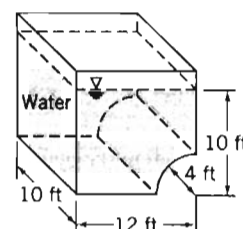


P3.66

- 3.66 An open tank is filled with water to the depth indicated. Atmospheric pressure acts on all outer surfaces of the tank. Determine the magnitude and line of action of the vertical component of the force of the water on the curved part of the tank bottom.
- 3.67 A gate, in the shape of a quarter-cylinder, hinged at  $A$  and sealed at  $B$ , is 2 m wide. The bottom of the gate is 3 m below the water surface. Determine the force on the stop at  $B$  if the gate is made of concrete;  $R = 2 \text{ m}$ .

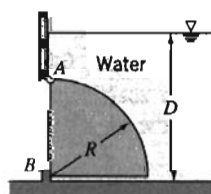


P3.67

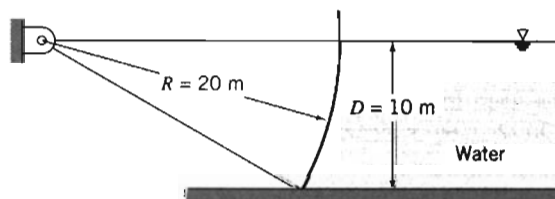


P3.68

- 3.68 A Tainter gate used to control water flow from the Uniontown Dam on the Ohio River is shown; the gate width is  $w = 35$  m. Determine the magnitude, direction, and line of action of the force from the water acting on the gate.
- 3.69 A cylindrical weir has a diameter of 3 m and a length of 6 m. Find the magnitude and direction of the resultant force acting on the weir from the water.

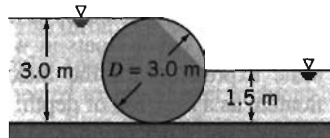


P3.69, 3.70

- 3.70 Consider the cylindrical weir of diameter 3 m and length 6 m. If the fluid on the left has a specific gravity of 1.6, and on the right has a specific gravity of 0.8, find the magnitude and direction of the resultant force.
- 3.71 A cylindrical log of diameter  $D$  rests against the top of a dam. The water is level with the top of the log and the center of the log is level with the top of the dam. Obtain expressions for (a) the mass of the log per unit length and (b) the contact force per unit length between the log and dam.
- 3.72 A curved surface is formed as a quarter of a circular cylinder with  $R = 0.750$  m as shown. The surface is  $w = 3.55$  m wide. Water stands to the right of the curved surface to depth  $H = 0.650$  m. Calculate the vertical hydrostatic force on the curved surface. Evaluate the line of action of this force. Find the magnitude and line of action of the horizontal force on the surface.

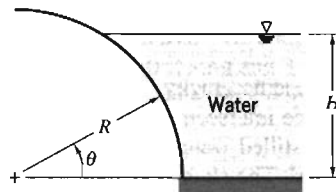


P3.72

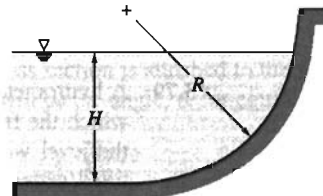


P3.73

- 3.73 A curved submerged surface, in the shape of a quarter cylinder, with radius  $R = 0.3$  m is shown. The form is filled to depth  $H = 0.24$  m with liquid concrete. The width is  $w = 1.25$  m. Calculate the magnitude of the vertical hydrostatic force on the form from the concrete. Find the line of action of the force. Plot the results over the range of concrete depth  $0 \leq H \leq R$ .
- 3.74 The cross-sectional shape of a canoe is modeled by the curve  $y = ax^2$ , where  $a = 3.89 \text{ m}^{-1}$  and the coordinates are in meters. Assume the width of the canoe is constant at  $W = 0.6$  m over its entire length  $L = 5.25$  m. Set up a general algebraic expression relating the total mass of the canoe and its contents to distance  $d$  between the water surface and the gunwale of the floating canoe. Calculate the maximum total mass allowable without swamping the canoe.

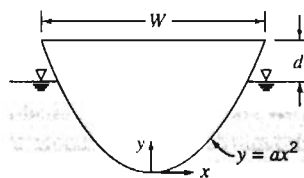


P3.74

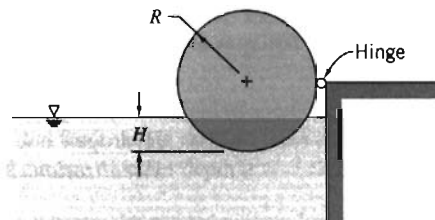

P3.75

- 3.75 The cylinder shown is supported by an incompressible liquid of density  $\rho$ , and is hinged along its length. The cylinder, of mass  $M$ , length  $L$ , and radius  $R$ , is immersed in liquid to depth  $H$ . Obtain a general expression for the cylinder specific gravity versus the ratio of liquid depth to cylinder radius,  $\alpha = H/R$ , needed to hold the cylinder in equilibrium for  $0 \leq \alpha < 1$ . Plot the results.
- 3.76 A canoe is represented by a right circular semicylinder, with  $R = 0.35$  m and  $L = 5.25$  m. The canoe floats in water that is  $d = 0.245$  m deep. Set up a general algebraic expression for the maximum total mass (canoe and contents) that can be floated, as a function of depth. Evaluate for the given conditions. Plot the results over the range of water depth  $0 \leq d \leq R$ .
- 3.77 A glass observation room is to be installed at the corner of the bottom of an aquarium. The aquarium is filled with seawater to a depth of 10 m. The glass is a segment of a sphere, radius 1.5 m, mounted symmetrically in the corner. Compute the magnitude and direction of the net force on the glass structure.
- \*3.78 Find the specific weight of the sphere shown if its volume is  $1 \text{ ft}^3$ . State all assumptions. What is the equilibrium position of the sphere if the weight is removed?

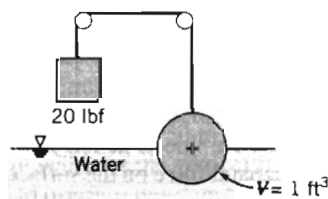

P3.78




P3.79

- \*3.79 A hydrometer is a specific gravity indicator, the value being indicated by the level at which the free surface intersects the stem when floating in a liquid. The 1.0 mark is the level when in distilled water. For the unit shown, the immersed volume in distilled water is  $15 \text{ cm}^3$ . The stem is 6 mm in diameter. Find the distance,  $h$ , from the 1.0 mark to the surface when the hydrometer is placed in a nitric acid solution of specific gravity 1.5.
- \*3.80 Quantify the experiment performed by Archimedes to identify the material content of King Hiero's crown. Assume you can measure the weight of the king's crown in air,  $W_a$ , and the weight in water,  $W_w$ . Express the specific gravity of the crown as a function of these measured values.
- \*3.81 The fat-to-muscle ratio of a person may be determined from a specific gravity measurement. The measurement is made by immersing the body in a tank of water and measuring the net weight. Develop an expression for the specific gravity of a person in terms of their weight in air, net weight in water, and  $SG = f(T)$  for water.
- \*3.82 Quantify the statement, "Only the tip of an iceberg shows (in seawater)."
- \*3.83 An open tank is filled to the top with water. A steel cylindrical container, wall thickness  $\delta = 1$  mm, outside diameter  $D = 100$  mm, and height  $H = 1$  m, with an open top, is gently placed in the water. What is the volume of water that overflows from the tank? How many 1 kg weights must be placed in the container to make it sink? Neglect surface tension effects.
- \*3.84 Hydrogen bubbles are used to visualize water flow streaklines in the video, *Flow Visualization*. A typical hydrogen bubble diameter is  $d = 0.025$  mm. The bubbles

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

tend to rise slowly in water because of buoyancy; eventually they reach terminal speed relative to the water. The drag force of the water on a bubble is given by  $F_D = 3\pi\mu Vd$ , where  $\mu$  is the viscosity of water and  $V$  is the bubble speed relative to the water. Find the buoyancy force that acts on a hydrogen bubble immersed in water. Estimate the terminal speed of a bubble rising in water.

- \*3.85 Gas bubbles are released from the regulator of a submerged scuba diver. What happens to the bubbles as they rise through the seawater? Explain.
- \*3.86 Hot-air ballooning is a popular sport. According to a recent article, "hot-air volumes must be large because air heated to 150°F over ambient lifts only 0.018 lbf/ft<sup>3</sup> compared to 0.066 and 0.071 for helium and hydrogen, respectively." Check these statements for sea-level conditions. Calculate the effect of increasing the hot-air maximum temperature to 250°F above ambient.
- \*3.87 Scientific balloons operating at pressure equilibrium with the surroundings have been used to lift instrument packages to extremely high altitudes. One such balloon, constructed of polyester with a skin thickness of 0.013 mm, lifted a payload of 230 kg to an altitude of approximately 49 km, where atmospheric conditions are 0.95 mbar and -20°C. The helium gas in the balloon was at a temperature of approximately -10°C. The specific gravity of the skin material is 1.28. Determine the diameter and mass of the balloon. Assume that the balloon is spherical.
- \*3.88 A helium balloon is to lift a payload to an altitude of 40 km, where the atmospheric pressure and temperature are 3.0 mbar and -25°C, respectively. The balloon skin is polyester with specific gravity of 1.28 and thickness of 0.015 mm. To maintain a spherical shape, the balloon is pressurized to a gage pressure of 0.45 mbar. Determine the maximum balloon diameter if the allowable tensile stress in the skin is limited to 62 MN/m<sup>2</sup>. What payload can be carried?
- \*3.89 One cubic foot of material weighing 67 lbf is allowed to sink in water as shown. A circular wooden rod 10 ft long and 3 in.<sup>2</sup> in cross section is attached to the weight and also to the wall. If the rod weighs 3 lbf, what will be the angle,  $\theta$ , for equilibrium?

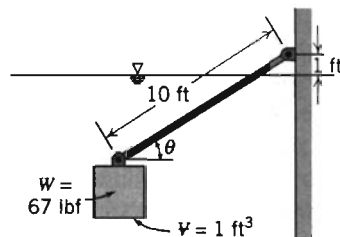


P3.89

- \*3.90 The stem of a glass hydrometer used to measure specific gravity is 6 mm in diameter. The distance between marks on the stem is 3 mm per 0.1 increment of specific gravity. Calculate the magnitude and direction of the error introduced by surface tension if the hydrometer floats in ethyl alcohol. (Assume the contact angle between ethanol and glass is zero degrees.)
- \*3.91 If the weight  $W$  in Problem 3.89 is released from the rod, at equilibrium how much of the rod will remain submerged? What will be the minimum required upward force at the tip of the rod to just lift it out of the water?
- \*3.92 A sphere, of radius  $R$ , is partially immersed, to depth  $d$ , in a liquid of specific gravity  $SG$ . Obtain an algebraic expression for the buoyancy force acting on the sphere as a function of submersion depth  $d$ . Plot the results over the range of water depth  $0 \leq d \leq 2R$ .


\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- \*3.93 A sphere of radius  $R$ , made from material of specific gravity  $SG$ , is submerged in a tank of water. The sphere is placed over a hole, of radius  $a$ , in the tank bottom. Develop a general expression for the range of specific gravities for which the sphere will float to the surface. For the dimensions given, determine the minimum  $SG$  required for the sphere to remain in the position shown.

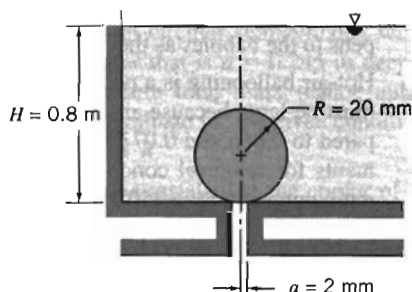


P3.93

- \*3.94 A cylindrical timber, with  $D = 0.3$  m and  $L = 4$  m, is weighted on its lower end so that it floats vertically with 3 m submerged in seawater. When displaced vertically from its equilibrium position, the timber oscillates or "heaves" in a vertical direction upon release. Estimate the frequency of oscillation in this heave mode. Neglect viscous effects and water motion.
- \*3.95 A proposed ocean salvage scheme involves pumping air into "bags" placed within and around a wrecked vessel on the sea bottom. Comment on the practicality of this plan, supporting your conclusions with analyses.
- \*3.96 In the "Cartesian diver" child's toy, a miniature "diver" is immersed in a column of liquid. When a diaphragm at the top of the column is pushed down, the diver sinks to the bottom. When the diaphragm is released, the diver again rises. Explain how the toy might work.
- \*3.97 Consider a conical funnel held upside down and submerged slowly in a container of water. Discuss the force needed to submerge the funnel if the spout is open to the atmosphere. Compare with the force needed to submerge the funnel when the spout opening is blocked by a rubber stopper.
- \*3.98 A cylindrical container, similar to that analyzed in Example Problem 3.9 (on the CD), is rotated at constant angular velocity about its axis. The cylinder is 1 ft in diameter, and initially contains water that is 4 in. deep. Determine the maximum rate at which the container can be rotated before the liquid free surface just touches the bottom of the tank. Does your answer depend on the density of the liquid? Explain.
- \*3.99 A crude accelerometer can be made from a liquid-filled U-tube as shown. Derive an expression for the acceleration  $\bar{a}$ , in terms of liquid level difference  $h$ , tube geometry, and fluid properties.

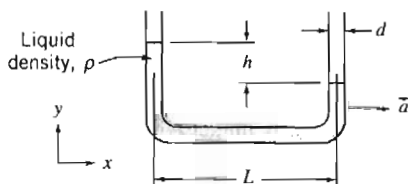


P3.99

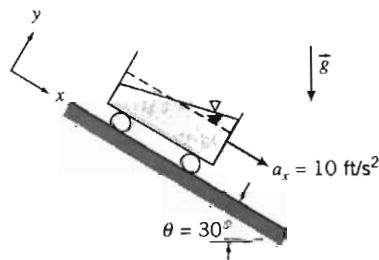

P3.100

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- \*3.100 A rectangular container of water undergoes constant acceleration down an incline as shown. Determine the slope of the free surface using the coordinate system shown.
- \*3.101 The U-tube shown is filled with water at  $T = 20^\circ\text{C}$ . It is sealed at  $A$  and open to the atmosphere at  $D$ . The tube is rotated about vertical axis  $AB$ . For the dimensions shown, compute the maximum angular speed if there is to be no cavitation.

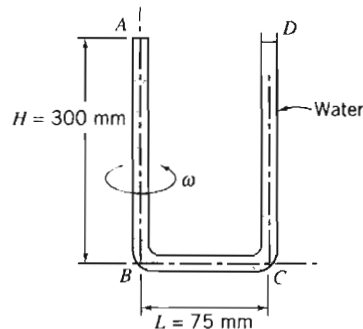

P3.101, 3.102

- \*3.102 If the U-tube of Problem 3.101 is spun at 200 rpm, what will be the pressure at  $A$ ? If a small leak appears at  $A$ , how much water will be lost at  $D$ ?
- \*3.103 A centrifugal micromanometer can be used to create small and accurate differential pressures in air for precise measurement work. The device consists of a pair of parallel disks that rotate to develop a radial pressure difference. There is no flow between the disks. Obtain an expression for pressure difference in terms of rotation speed, radius, and air density. Evaluate the speed of rotation required to develop a differential pressure of  $8\ \mu\text{m}$  of water using a device with a 50 mm radius.
- \*3.104 A test tube is spun in a centrifuge at  $\omega = 1000\ \text{rev/s}$ . The tube support is mounted on a pivot so that the tube swings outward as rotation speed increases. At high speeds, the tube is nearly horizontal. Find (a) an expression for the radial component of acceleration of a liquid element located at radius  $r$ , (b) the radial pressure gradient  $\partial p/\partial r$ , and (c) the maximum pressure on the bottom of the test tube if it contains water. (The free surface and bottom radii are 50 and 130 mm, respectively.)
- \*3.105 A cubical box, 1 m on a side, half-filled with oil ( $\text{SG} = 0.80$ ), is given a constant horizontal acceleration of  $0.2g$  parallel to one edge. Determine the slope of the free surface and the pressure along the horizontal bottom of the box.
- \*3.106 A rectangular container, of base dimensions  $0.4\ \text{m} \times 0.2\ \text{m}$  and height  $0.4\ \text{m}$ , is filled with water to a depth of  $0.2\ \text{m}$ ; the mass of the empty container is  $10\ \text{kg}$ . The container is placed on a plane inclined at  $30^\circ$  to the horizontal. If the coefficient of sliding friction between the container and the plane is  $0.3$ , determine the angle of the water surface relative to the horizontal.
- \*3.107 If the container of Problem 3.106 slides without friction, determine the angle of the water surface relative to the horizontal. What is the slope of the free surface for the same acceleration up the plane?
- \*3.108 Gas centrifuges are used in one process to produce enriched uranium for nuclear fuel rods. The maximum peripheral speed of a gas centrifuge is limited by stress considerations to about  $300\ \text{m/s}$ . Assume a gas centrifuge containing uranium hexafluoride gas, with molecular mass  $M_m = 352$ , and ideal gas behavior. Develop an expression for the ratio of maximum pressure to pressure at the centrifuge axis. Evaluate the pressure ratio for a gas temperature of  $325^\circ\text{C}$ .

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- \*3.109 A pail, 1 ft in diameter and 1 ft deep, weighs 3 lbf and contains 8 in. of water. The pail is swung in a vertical circle of 3 ft radius at a speed of 15 ft/s. Assume the water moves as a rigid body. At the instant when the pail is at the top of its trajectory, compute the tension in the string and the pressure on the bottom of the pail from the water.
- \*3.110 A partially full can of soft drink is placed at the outer edge of a child's merry-go-round, located  $R = 1.5$  m from the axis of rotation. The can diameter and height are  $D = 65$  mm and  $H = 120$  mm. The can is half-full of soda, with specific gravity  $SG = 1.06$ . Evaluate the slope of the liquid surface in the can if the merry-go-round spins at 0.3 revolution per second. Calculate the spin rate at which the can would spill, assuming no slippage between the can bottom and the merry-go-round. Would the can most likely spill or slide off the merry-go-round?
- \*3.111 When a water polo ball is submerged below the surface in a swimming pool and released from rest, it is observed to pop out of the water. How would you expect the height to which it rises above the water to vary with depth of submersion below the surface? Would you expect the same results for a beach ball? For a table-tennis ball?
- \*3.112 The analysis of Problem 3.106 suggests that it may be possible to determine the coefficient of sliding friction between two surfaces by measuring the slope of the free surface in a liquid-filled container sliding down an inclined surface. Investigate the feasibility of this idea.
- \*3.113 Cast iron or steel molds are used in a horizontal-spindle machine to make tubular castings such as liners and tubes. A charge of molten metal is poured into the spinning mold. The radial acceleration permits nearly uniformly thick wall sections to form. A steel liner, of length  $L = 2$  m, outer radius  $r_o = 0.15$  m, and inner radius  $r_i = 0.10$  m, is to be formed by this process. To attain nearly uniform thickness, the magnitude of the minimum radial acceleration should be  $10g$ . Determine (a) the required angular velocity and (b) the maximum and minimum pressures on the surface of the mold.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

# BASIC EQUATIONS IN INTEGRAL FORM FOR A CONTROL VOLUME

We begin our study of fluids in motion by developing the basic equations in integral form for application to control volumes. Why the control volume formulation (i.e., fixed region) rather than the system (i.e., fixed mass) formulation? There are two basic reasons. First, it is extremely difficult to identify and follow the same mass of fluid at all times, as must be done to apply the system formulation. Second, we are often not interested in the motion of a given mass of fluid, but rather in the effect of the fluid motion on some device or structure (such as a wing section or a pipe elbow). Thus it is more convenient to apply the basic laws to a defined volume in space, using a control volume analysis.

The basic laws for a system are familiar to you from your earlier studies in physics, mechanics, and thermodynamics. We need to obtain mathematical expressions for these laws valid for a control volume, even though the laws actually apply to matter (i.e., to a system). This will involve deriving the mathematics that converts a system expression to an equivalent one for a control volume. Instead of deriving this conversion for each of the laws, we will do it once in general form, and then apply it to each law in turn.

---

## 4-1 BASIC LAWS FOR A SYSTEM

The basic laws for a system are summarized briefly; it turns out that we will need each of the basic equations for a system to be written as a rate equation.

### Conservation of Mass

Since a system is, by definition, an arbitrary collection of matter of fixed identity, a system is composed of the same quantity of matter at all times. Conservation of mass requires that the mass,  $M$ , of the system be constant. On a rate basis, we have

$$\left. \frac{dM}{dt} \right)_{\text{system}} = 0 \quad (4.1a)$$

where

$$M_{\text{system}} = \int_{M(\text{system})} dm = \int_{V(\text{system})} \rho dV \quad (4.1b)$$



### Newton's Second Law

For a system moving relative to an inertial reference frame, Newton's second law states that the sum of all external forces acting on the system is equal to the time rate of change of linear momentum of the system,

$$\bar{F} = \left. \frac{d\bar{P}}{dt} \right)_{\text{system}} \quad (4.2a)$$

where the linear momentum of the system is given by

$$\bar{P}_{\text{system}} = \int_{M(\text{system})} \bar{V} dm = \int_{\Psi(\text{system})} \bar{V} \rho d\Psi \quad (4.2b)$$

### The Angular-Momentum Principle

The angular-momentum principle for a system states that the rate of change of angular momentum is equal to the sum of all torques acting on the system,

$$\bar{T} = \left. \frac{d\bar{H}}{dt} \right)_{\text{system}} \quad (4.3a)$$

where the angular momentum of the system is given by

$$\bar{H}_{\text{system}} = \int_{M(\text{system})} \bar{r} \times \bar{V} dm = \int_{\Psi(\text{system})} \bar{r} \times \bar{V} \rho d\Psi \quad (4.3b)$$

Torque can be produced by surface and body forces, and also by shafts that cross the system boundary,

$$\bar{T} = \bar{r} \times \bar{F}_s + \int_{M(\text{system})} \bar{r} \times \bar{g} dm + \bar{T}_{\text{shaft}} \quad (4.3c)$$

### The First Law of Thermodynamics

The first law of thermodynamics is a statement of conservation of energy for a system,

$$\delta Q - \delta W = dE$$

The equation can be written in rate form as

$$\dot{Q} - \dot{W} = \left. \frac{dE}{dt} \right)_{\text{system}} \quad (4.4a)$$

where the total energy of the system is given by

$$E_{\text{system}} = \int_{M(\text{system})} e dm = \int_{\Psi(\text{system})} e \rho d\Psi \quad (4.4b)$$

and

$$e = u + \frac{V^2}{2} + gz \quad (4.4c)$$

In Eq. 4.4a,  $\dot{Q}$  (the rate of heat transfer) is positive when heat is added to the system from the surroundings;  $\dot{W}$  (the rate of work) is positive when work is done by the system on its surroundings. In Eq. 4.4c,  $u$  is the specific internal energy,  $V$  the speed, and  $z$  the height (relative to a convenient datum) of a particle of substance having mass  $dm$ .

### The Second Law of Thermodynamics

If an amount of heat,  $\delta Q$ , is transferred to a system at temperature  $T$ , the second law of thermodynamics states that the change in entropy,  $dS$ , of the system satisfies

$$dS \geq \frac{\delta Q}{T}$$

On a rate basis we can write

$$\left. \frac{dS}{dt} \right)_{\text{system}} \geq \frac{1}{T} \dot{Q} \quad (4.5a)$$

where the total entropy of the system is given by

$$S_{\text{system}} = \int_{M(\text{system})} s \, dm = \int_{\Psi(\text{system})} s \rho \, d\Psi \quad (4.5b)$$

## 4-2 RELATION OF SYSTEM DERIVATIVES TO THE CONTROL VOLUME FORMULATION

In the previous section we summarized the basic equations for a system. We found that, when written on a rate basis, each equation involved the time derivative of an extensive property of the system—the mass (Eq. 4.1a), linear momentum (Eq. 4.2a), angular momentum (Eq. 4.3a), energy (Eq. 4.4a), or entropy (Eq. 4.5a) of the system. These are the equations we wish to convert to equivalent control volume equations. Let us use the symbol  $N$  to represent any one of these system extensive properties: more informally, we can think of  $N$  as the amount of “stuff” (mass, linear momentum, angular momentum, energy, or entropy) of the system. The corresponding intensive property (extensive property per unit mass) will be designated by  $\eta$ . Thus

$$N_{\text{system}} = \int_{M(\text{system})} \eta \, dm = \int_{\Psi(\text{system})} \eta \rho \, d\Psi \quad (4.6)$$

Comparing Eq. 4.6 with Eqs. 4.1b, 4.2b, 4.3b, 4.4b, and 4.5b, we see that if:

$$\begin{aligned} N = M, & \quad \text{then } \eta = 1 \\ N = \bar{P}, & \quad \text{then } \eta = \bar{V} \\ N = \bar{H}, & \quad \text{then } \eta = \bar{r} \times \bar{V} \\ N = E, & \quad \text{then } \eta = e \\ N = S, & \quad \text{then } \eta = s \end{aligned}$$

How can we derive a control volume description from a system description of a fluid flow? Before specifically answering this question, we can describe the derivation in general terms. We imagine selecting an arbitrary piece of the flowing fluid at some time  $t_0$ , as shown in Fig. 4.1a—we could imagine dyeing this piece of fluid, say, blue. This initial shape of the fluid system is chosen as our control volume, which is fixed in space relative to coordinates  $xyz$ . After an infinitesimal time  $\Delta t$  the system will have moved (probably changing shape as it does so) to a new location, as shown in Fig. 4.1b. The laws we discussed above apply to this piece of fluid—for example, its mass will be constant (Eq. 4.1a). By examining the geometry of the system/control volume pair at  $t = t_0$  and at  $t = t_0 + \Delta t$ , we will be able to obtain control volume formulations of the basic laws.



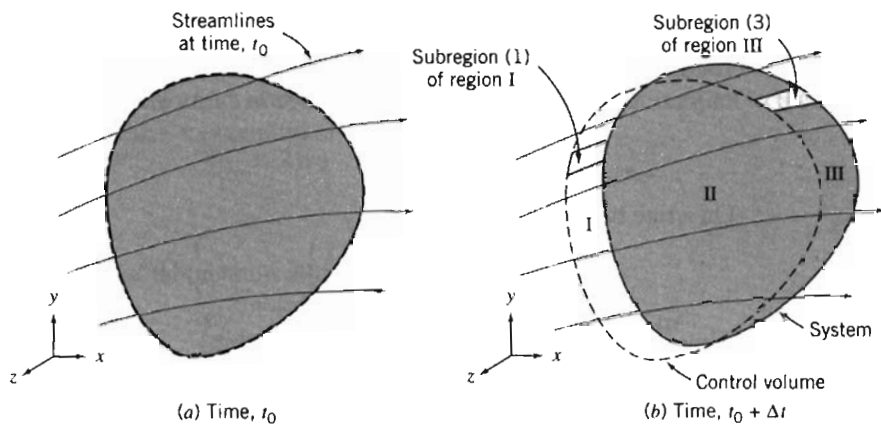


Fig. 4.1 System and control volume configuration.

### Derivation

From Fig. 4.1 we see that the system, which was entirely within the control volume at time  $t_0$ , is partially out of the control volume at time  $t_0 + \Delta t$ . In fact, three regions can be identified. These are: regions I and II, which together make up the control volume, and region III, which, with region II, is the location of the system at time  $t_0 + \Delta t$ .

Recall that our objective is to relate the rate of change of any arbitrary extensive property,  $N$ , of the system to quantities associated with the control volume. From the definition of a derivative, the rate of change of  $N_{\text{system}}$  is given by

$$\left. \frac{dN}{dt} \right)_{\text{system}} \equiv \lim_{\Delta t \rightarrow 0} \frac{N_s)_{t_0 + \Delta t} - N_s)_{t_0}}{\Delta t} \quad (4.7)$$

For convenience, subscript  $s$  has been used to denote the system in the definition of a derivative in Eq. 4.7.

From the geometry of Fig. 4.1,

$$N_s)_{t_0 + \Delta t} = (N_{\text{II}} + N_{\text{III}})_{t_0 + \Delta t} = (N_{\text{CV}} - N_{\text{I}} + N_{\text{III}})_{t_0 + \Delta t}$$

and

$$N_s)_{t_0} = (N_{\text{CV}})_{t_0}$$

Substituting into the definition of the system derivative, Eq. 4.7, we obtain

$$\left. \frac{dN}{dt} \right)_s = \lim_{\Delta t \rightarrow 0} \frac{(N_{\text{CV}} - N_{\text{I}} + N_{\text{III}})_{t_0 + \Delta t} - N_{\text{CV}})_{t_0}}{\Delta t}$$

Since the limit of a sum is equal to the sum of the limits, we can write

$$\left. \frac{dN}{dt} \right)_s = \lim_{\Delta t \rightarrow 0} \frac{N_{\text{CV}})_{t_0 + \Delta t} - N_{\text{CV}})_{t_0}}{\Delta t} + \lim_{\Delta t \rightarrow 0} \frac{N_{\text{III}})_{t_0 + \Delta t}}{\Delta t} - \lim_{\Delta t \rightarrow 0} \frac{N_{\text{I}})_{t_0 + \Delta t}}{\Delta t} \quad (4.8)$$

①
②
③

Our task now is to evaluate each of the three terms in Eq. 4.8.

Term ① in Eq. 4.8 simplifies to

$$\lim_{\Delta t \rightarrow 0} \frac{N_{\text{CV}})_{t_0 + \Delta t} - N_{\text{CV}})_{t_0}}{\Delta t} = \frac{\partial N_{\text{CV}}}{\partial t} = \frac{\partial}{\partial t} \int_{\text{CV}} \eta \rho dV \quad (4.9a)$$

To evaluate term ② we first develop an expression for  $N_{\text{III}})_{t_0 + \Delta t}$  by looking at the enlarged view of a typical subregion (subregion (3)) of region III shown in Fig. 4.2. The

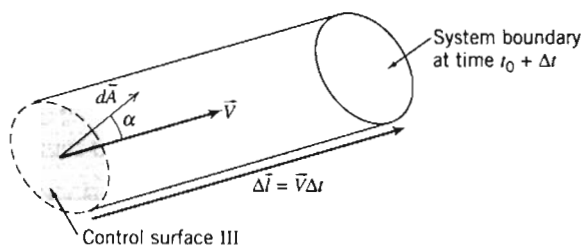


Fig. 4.2 Enlarged view of subregion (3) from Fig. 4.1.

vector area element  $d\vec{A}$  of the control surface has magnitude  $dA$ , and its direction is the *outward* normal of the area element. In general, the velocity vector  $\vec{V}$  will be at some angle  $\alpha$  with respect to  $d\vec{A}$ .

For this subregion we have

$$dN_{\text{III}})_{t_0+\Delta t} = (\eta\rho d\mathcal{V})_{t_0+\Delta t}$$

We need to obtain an expression for the volume  $d\mathcal{V}$  of this cylindrical element. The vector length of the cylinder is given by  $\Delta\vec{l} = \vec{V}\Delta t$ . The volume of a prismatic cylinder, whose area  $d\vec{A}$  is at an angle  $\alpha$  to its length  $\Delta\vec{l}$ , is given by  $d\mathcal{V} = \Delta l dA \cos \alpha = \Delta\vec{l} \cdot d\vec{A} = \vec{V} \cdot d\vec{A}\Delta t$ . Hence, for subregion (3) we can write

$$dN_{\text{III}})_{t_0+\Delta t} = \eta\rho\vec{V} \cdot d\vec{A}\Delta t$$

Then, for the entire region III we can integrate and for term ② in Eq. 4.8 obtain

$$\lim_{\Delta t \rightarrow 0} \frac{N_{\text{III}})_{t_0+\Delta t}}{\Delta t} = \lim_{\Delta t \rightarrow 0} \frac{\int_{\text{CS}_{\text{III}}} dN_{\text{III}})_{t_0+\Delta t}}{\Delta t} = \lim_{\Delta t \rightarrow 0} \frac{\int_{\text{CS}_{\text{III}}} \eta\rho\vec{V} \cdot d\vec{A}\Delta t}{\Delta t} = \int_{\text{CS}_{\text{III}}} \eta\rho\vec{V} \cdot d\vec{A} \quad (4.9b)$$

We can perform a similar analysis for subregion (1) of region I, and obtain for term ③ in Eq. 4.8

$$\lim_{\Delta t \rightarrow 0} \frac{N_{\text{I}})_{t_0+\Delta t}}{\Delta t} = -\int_{\text{CS}_{\text{I}}} \eta\rho\vec{V} \cdot d\vec{A} \quad (4.9c)$$

Why the minus sign in Eq. 4.9c? Term ③ in Eq. 4.8 is a measure of the amount of extensive property  $N$  (the amount of “stuff”) that was in region I, and must be a positive number (e.g., we cannot have “negative matter”). However, for subregion (1), the velocity vector acts *into* the control volume, but the area normal *always* (by convention) points *outwards* (angle  $\alpha > \pi/2$ ). Hence, the scalar product in Eq. 4.9c will be negative, requiring the additional negative sign to produce a positive result.

This concept of the sign of the scalar product is illustrated in Fig. 4.3 for (a) the general case of an inlet or exit, (b) an exit velocity parallel to the surface normal, and (c) an inlet velocity parallel to the surface normal. Cases (b) and (c) are obviously convenient special cases of (a); the value of the cosine in case (a) automatically generates the correct sign of either an inlet or an exit.

We can finally use Eqs. 4.9a, 4.9b, and 4.9c in Eq. 4.8 to obtain

$$\left. \frac{dN}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{\text{CV}} \eta\rho d\mathcal{V} + \int_{\text{CS}_{\text{I}}} \eta\rho\vec{V} \cdot d\vec{A} + \int_{\text{CS}_{\text{III}}} \eta\rho\vec{V} \cdot d\vec{A}$$

and the two last integrals can be combined because  $\text{CS}_{\text{I}}$  and  $\text{CS}_{\text{III}}$  constitute the entire control surface,

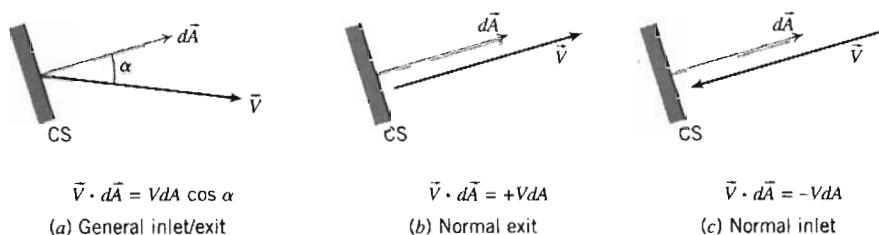


Fig. 4.3 Evaluating the scalar product.

$$\left. \frac{dN}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{\text{CV}} \eta \rho d\mathcal{V} + \int_{\text{CS}} \eta \rho \vec{V} \cdot d\vec{A} \quad (4.10)$$

Equation 4.10 is the relation we set out to obtain. It is the fundamental relation between the rate of change of any arbitrary extensive property,  $N$ , of a system and the variations of this property associated with a control volume. Some authors refer to Eq. 4.10 as the *Reynolds Transport Theorem*.

### Physical Interpretation

We have taken several pages to derive Eq. 4.10. Recall that our objective was to obtain a general relation between the rate of change of any arbitrary extensive property,  $N$ , of a system and variations of this property associated with the control volume. The main reason for deriving it was to reduce the algebra required to obtain the control volume formulations of each of the basic equations. Because we consider the equation itself to be “basic” we repeat it to emphasize its importance:

---


$$\left. \frac{dN}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{\text{CV}} \eta \rho d\mathcal{V} + \int_{\text{CS}} \eta \rho \vec{V} \cdot d\vec{A} \quad (4.10)$$


---

It is important to recall that in deriving Eq. 4.10, the limiting process (taking the limit as  $\Delta t \rightarrow 0$ ) ensured that the relation is valid at the instant when the system and the control volume coincide. In using Eq. 4.10 to go from the system formulations of the basic laws to the control volume formulations, we recognize that Eq. 4.10 relates the rate of change of any extensive property,  $N$ , of a system to variations of this property associated with a control volume at the instant when the system and the control volume coincide; this is true since, in the limit as  $\Delta t \rightarrow 0$ , the system and the control volume occupy the same volume and have the same boundaries.

Before using Eq. 4.10 to develop control volume formulations of the basic laws, let us make sure we understand each of the terms and symbols in the equation:

- |   |  |
|---|--|
| $\left. \frac{dN}{dt} \right)_{\text{system}}$                        | is the rate of change of any arbitrary extensive property (of the amount of “stuff”, e.g., mass, energy) of the system.      |
| $\frac{\partial}{\partial t} \int_{\text{CV}} \eta \rho d\mathcal{V}$ | is the time rate of change of arbitrary extensive property $N$ within the control volume.                                    |
| :   | $\eta$ is the intensive property corresponding to $N$ ; $\eta = N$ per unit mass.  |
| :   | $\rho d\mathcal{V}$ is an element of mass contained in the control volume.   |
| :   | $\int_{\text{CV}} \eta \rho d\mathcal{V}$ is the total amount of extensive property $N$ contained within the control volume. |

- $\int_{CS} \eta \rho \vec{V} \cdot d\vec{A}$  is the net rate of flux of extensive property  $N$  out through the control surface.
- :  $\rho \vec{V} \cdot d\vec{A}$  is the rate of mass flux through area element  $d\vec{A}$  per unit time.
- :  $\eta \rho \vec{V} \cdot d\vec{A}$  is the rate of flux of extensive property  $N$  through area  $d\vec{A}$ .

An additional point should be made about Eq. 4.10. Velocity  $\vec{V}$  is measured relative to the surface of the control volume. In developing Eq. 4.10, we considered a control volume fixed relative to coordinate system  $xyz$ . Since the velocity field was specified relative to the same reference coordinates, it follows that velocity  $\vec{V}$  is measured relative to the control volume.

We shall further emphasize this point in deriving the control volume formulation of each of the basic laws. In each case, we begin with the familiar system formulation and use Eq. 4.10 to relate system derivatives to the time rates of change associated with a fixed control volume at the instant when the system and the control volume coincide.<sup>1</sup>

### 4-3 CONSERVATION OF MASS

The first physical principle to which we apply this conversion from a system to a control volume description is the mass conservation principle: The mass of the system remains constant,

$$\left. \frac{dM}{dt} \right)_{\text{system}} = 0 \quad (4.1a)$$

where

$$M_{\text{system}} = \int_{M(\text{system})} dm = \int_{\Psi(\text{system})} \rho d\Psi \quad (4.1b)$$

The system and control volume formulations are related by Eq. 4.10,

$$\left. \frac{dN}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{CV} \eta \rho d\Psi + \int_{CS} \eta \rho \vec{V} \cdot d\vec{A} \quad (4.10)$$

where

$$N_{\text{system}} = \int_{M(\text{system})} \eta dm = \int_{\Psi(\text{system})} \eta \rho d\Psi \quad (4.6)$$

To derive the control volume formulation of conservation of mass, we set

$$N = M \quad \text{and} \quad \eta = 1$$

With this substitution, we obtain

$$\left. \frac{dM}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{CV} \rho d\Psi + \int_{CS} \rho \vec{V} \cdot d\vec{A} \quad (4.11)$$

<sup>1</sup> Equation 4.10 has been derived for a control volume fixed in space relative to coordinates  $xyz$ . For the case of a *deformable* control volume, whose shape varies with time, Eq. 4.10 may be applied provided that the velocity,  $\vec{V}$ , in the flux integral is measured *relative* to the local control surface through which the flux occurs.

Comparing Eqs. 4.1a and 4.11, we arrive (after rearranging) at the control volume formulation of the conservation of mass:

$$\frac{\partial}{\partial t} \int_{CV} \rho d\mathcal{V} + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

In Eq. 4.12 the first term represents the rate of change of mass within the control volume; the second term represents the net rate of mass flux out through the control surface. Equation 4.12 indicates that the rate of change of mass in the control volume plus the net outflow is zero. The mass conservation equation is also called the *continuity equation*. In common-sense terms, the rate of increase of mass in the control volume is due to the net inflow of mass:

$$\begin{aligned} \text{Rate of increase} &= \text{Net influx of} \\ \text{of mass in CV} &= \text{mass} \\ \frac{\partial}{\partial t} \int_{CV} \rho d\mathcal{V} &= - \int_{CS} \rho \vec{V} \cdot d\vec{A} \end{aligned}$$

In using Eq. 4.12, care should be taken in evaluating the scalar product  $\vec{V} \cdot d\vec{A} = VdA \cos \alpha$ : It could be positive (outflow,  $\alpha < \pi/2$ ), negative (inflow,  $\alpha > \pi/2$ ), or even zero ( $\alpha = \pi/2$ ). Recall that Fig. 4.3 illustrates the general case as well as the convenient cases  $\alpha = 0$  and  $\alpha = \pi$ .

### Special Cases

In special cases it is possible to simplify Eq. 4.12. Consider first the case of an incompressible fluid, in which density remains constant. When  $\rho$  is constant, it is not a function of space or time. Consequently, for *incompressible fluids*, Eq. 4.12 may be written as

$$\rho \frac{\partial}{\partial t} \int_{CV} d\mathcal{V} + \rho \int_{CS} \vec{V} \cdot d\vec{A} = 0$$

The integral of  $d\mathcal{V}$  over the control volume is simply the volume of the control volume. Thus, on dividing through by  $\rho$ , we write

$$\frac{\partial \mathcal{V}}{\partial t} + \int_{CS} \vec{V} \cdot d\vec{A} = 0$$

For a nondeformable control volume of fixed size and shape,  $\mathcal{V} = \text{constant}$ . The conservation of mass for incompressible flow through a fixed control volume becomes

$$\int_{CS} \vec{V} \cdot d\vec{A} = 0 \quad (4.13)$$

Note that we have not assumed the flow to be steady in reducing Eq. 4.12 to the form 4.13. We have only imposed the restriction of incompressible fluid. Thus Eq. 4.13 is a statement of conservation of mass for flow of an incompressible fluid that may be steady or unsteady.

The dimensions of the integrand in Eq. 4.13 are  $L^3/t$ . The integral of  $\vec{V} \cdot d\vec{A}$  over a section of the control surface is commonly called the *volume flow rate* or *volume*

rate of flow. Thus, for incompressible flow, the volume flow rate into a fixed control volume must be equal to the volume flow rate out of the control volume. The volume flow rate  $Q$ , through a section of a control surface of area  $A$ , is given by

$$Q = \int_A \vec{V} \cdot d\vec{A} \quad (4.14a)$$

The average velocity magnitude,  $\bar{V}$ , at a section is defined as

$$\bar{V} = \frac{Q}{A} = \frac{1}{A} \int_A \vec{V} \cdot d\vec{A} \quad (4.14b)$$

Consider now the general case of *steady, compressible flow* through a fixed control volume. Since the flow is steady, this means that at most  $\rho = \rho(x, y, z)$ . By definition, no fluid property varies with time in a steady flow. Consequently, the first term of Eq. 4.12 must be zero and, hence, for steady flow, the statement of conservation of mass reduces to

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.15)$$

Thus, for steady flow, the mass flow rate into a control volume must be equal to the mass flow rate out of the control volume.

As we noted in our previous discussion of velocity fields in Section 2-2, the idealization of uniform flow at a section frequently provides an adequate flow model. Uniform flow at a section implies the velocity is constant across the entire area at a section. When the density also is constant at a section, the flux integral in Eq. 4.12 may be replaced by a product. Thus, when we have uniform flow through some area  $\vec{A}$  of the control volume


$$\int_A \rho \vec{V} \cdot d\vec{A} = \rho \vec{V} \cdot \vec{A}$$

where once again we remember that the sign of the scalar product will be positive for outflow, negative for inflow.

We will now look at three Example Problems to illustrate some features of the various forms of the conservation of mass equation for a control volume. Example Problem 4.1 involves a problem in which we have uniform flow at each section, Example Problem 4.2 involves a problem in which we do not have uniform flow at a location, and Example Problem 4.3 involves a problem in which we have unsteady flow.

### EXAMPLE 4.1 Mass Flow at a Pipe Junction

Consider the steady flow in a water pipe joint shown in the diagram. The areas are:  $A_1 = 0.2 \text{ m}^2$ ,  $A_2 = 0.2 \text{ m}^2$ , and  $A_3 = 0.15 \text{ m}^2$ . In addition, fluid is lost out of a hole at (4), estimated at a rate of  $0.1 \text{ m}^3/\text{s}$ . The average speeds at sections (1) and (3) are  $V_1 = 5 \text{ m/s}$  and  $V_3 = 12 \text{ m/s}$ , respectively. Find the velocity at section (2).

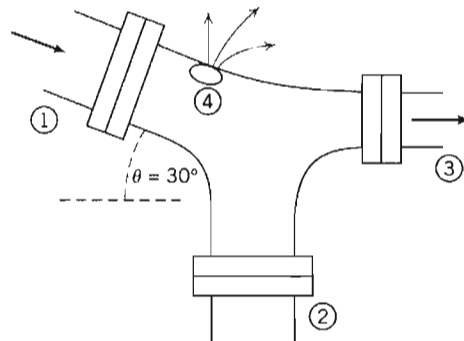




**EXAMPLE PROBLEM 4.1****GIVEN:** Steady flow of water through the device.

$$A_1 = 0.2 \text{ m}^2 \quad A_2 = 0.2 \text{ m}^2 \quad A_3 = 0.15 \text{ m}^2$$

$$V_1 = 5 \text{ m/s} \quad V_3 = 12 \text{ m/s} \quad \rho = 999 \text{ kg/m}^3$$

Volume flow rate at ④ =  $0.1 \text{ m}^3/\text{s}$ **FIND:** Velocity at section ②.**SOLUTION:**

Choose a fixed control volume as shown. Make an assumption that the flow at section ② is outwards, and label the diagram accordingly (if this assumption is incorrect our final result will tell us).

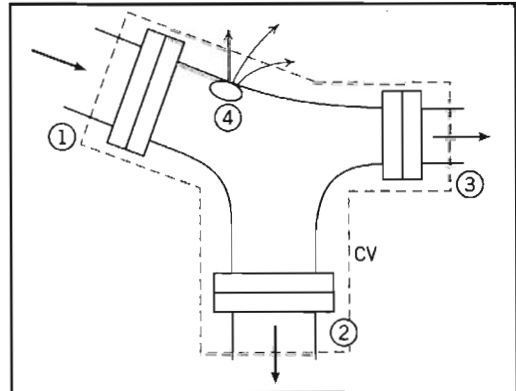

Governing equation:

The general control volume equation is Eq. 4.12, but we can go immediately to Eq. 4.13 because of assumption (2),

$$\int_{\text{CS}} \vec{V} \cdot d\vec{A} = 0$$

- Assumptions: (1) Steady flow (given).  
 (2) Incompressible flow.  
 (3) Uniform properties at each section.


Assumption (3) (and use of Eq. 4.14a for the leak) leads to

$$\vec{V}_1 \cdot \vec{A}_1 + \vec{V}_2 \cdot \vec{A}_2 + \vec{V}_3 \cdot \vec{A}_3 + Q_4 = 0 \quad (1)$$

where  $Q_4$  is the flow rate out of the leak.


Let us examine the first three terms in Eq. 1 in light of the discussion of Fig. 4.3, and the directions of the velocity vectors:

$$\vec{V}_1 \cdot \vec{A}_1 = -V_1 A_1$$

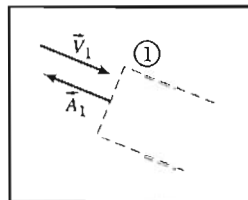


{ Sign of  $\vec{V}_1 \cdot \vec{A}_1$  is  
negative at surface ① }

$$\vec{V}_2 \cdot \vec{A}_2 = +V_2 A_2$$

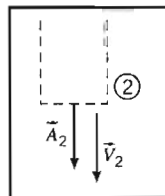

{ Sign of  $\vec{V}_2 \cdot \vec{A}_2$  is  
positive at surface ② }

$$\vec{V}_3 \cdot \vec{A}_3 = +V_3 A_3$$

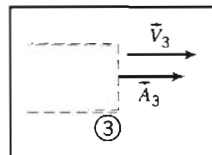

{ Sign of  $\vec{V}_3 \cdot \vec{A}_3$  is  
positive at surface ③ }

Using these results in Eq. 1,

$$-V_1A_1 + V_2A_2 + V_3A_3 + Q_4 = 0$$

or

$$V_2 = \frac{V_1A_1 - V_3A_3 - Q_4}{A_2} = \frac{\frac{5 \text{ m}}{\text{s}} \times 0.2 \text{ m}^2 - \frac{12 \text{ m}}{\text{s}} \times 0.15 \text{ m}^2 - 0.1 \frac{\text{m}^3}{\text{s}}}{0.2 \text{ m}^2} = -4.5 \text{ m/s} \leftarrow V_2$$


Recall that  $V_2$  represents the magnitude of the velocity, which we assumed was outwards from the control volume. The fact that  $V_2$  is negative means that in fact we have an *inflow* at location ②—our initial assumption was invalid.

This problem demonstrates use of the sign convention for evaluating  $\int_A \vec{v} \cdot d\vec{A}$ . In particular, the area normal is *always* drawn *outwards* from the control surface.

### EXAMPLE 4.2 Mass Flow Rate in Boundary Layer

The fluid in direct contact with a stationary solid boundary has zero velocity; there is no slip at the boundary. Thus the flow over a flat plate adheres to the plate surface and forms a boundary layer, as depicted below. The flow ahead of the plate is uniform with velocity,  $\vec{V} = U\hat{i}$ ;  $U = 30 \text{ m/s}$ . The velocity distribution within the boundary layer ( $0 \leq y \leq \delta$ ) along  $cd$  is approximated as  $u/U = 2(y/\delta) - (y/\delta)^2$ .

The boundary-layer thickness at location  $d$  is  $\delta = 5 \text{ mm}$ . The fluid is air with density  $\rho = 1.24 \text{ kg/m}^3$ . Assuming the plate width perpendicular to the paper to be  $w = 0.6 \text{ m}$ , calculate the mass flow rate across surface  $bc$  of control volume  $abcd$ .

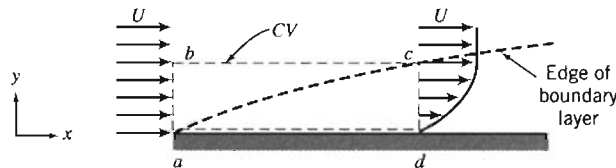

### EXAMPLE PROBLEM 4.2

**GIVEN:** Steady, incompressible flow over a flat plate,  $\rho = 1.24 \text{ kg/m}^3$ . Width of plate,  $w = 0.6 \text{ m}$ . Velocity ahead of plate is uniform:  $\vec{V} = U\hat{i}$ ,  $U = 30 \text{ m/s}$ .

At  $x = x_d$ :


$$\delta = 5 \text{ mm}$$

$$\frac{u}{U} = 2\left(\frac{y}{\delta}\right) - \left(\frac{y}{\delta}\right)^2$$

**FIND:** Mass flow rate across surface  $bc$ .

**SOLUTION:**

The fixed control volume is shown by the dashed lines.

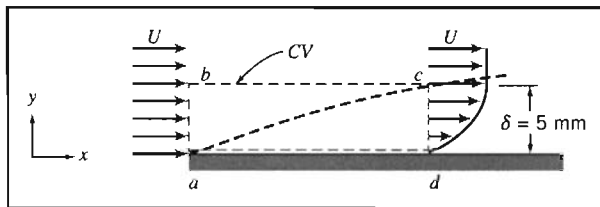

Governing equation:

The general control volume equation is Eq. 4.12, but we can go immediately to Eq. 4.15 because of assumption (1),

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = 0$$

- Assumptions: (1) Steady flow (given).  
 (2) Incompressible flow (given).  
 (3) Two-dimensional flow, given properties are independent of  $z$ .

Assuming that there is no flow in the  $z$  direction, then

(no flow  
across  $da$ )

$$\int_{A_{ab}} \rho \vec{V} \cdot d\vec{A} + \int_{A_{bc}} \rho \vec{V} \cdot d\vec{A} + \int_{A_{cd}} \rho \vec{V} \cdot d\vec{A} + \int_{A_{da}} \rho \vec{V} \cdot d\vec{A} = 0$$


$$\therefore \dot{m}_{bc} = \int_{A_{bc}} \rho \vec{V} \cdot d\vec{A} = - \int_{A_{ab}} \rho \vec{V} \cdot d\vec{A} - \int_{A_{cd}} \rho \vec{V} \cdot d\vec{A} \quad (1)$$

We need to evaluate the integrals on the right side of the equation.

For depth  $w$  in the  $z$  direction, we obtain

$$\int_{A_{ab}} \rho \vec{V} \cdot d\vec{A} = - \int_{A_{ab}} \rho u dA = - \int_{y_a}^{y_b} \rho u w dy$$

$$= - \int_0^\delta \rho u w dy = - \int_0^\delta \rho U w dy$$

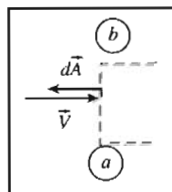


$\left\{ \begin{array}{l} \vec{V} \cdot d\vec{A} \text{ is negative} \\ dA = w dy \end{array} \right\}$   
 $\{u = U \text{ over area } ab\}$

$$\int_{A_{ab}} \rho \vec{V} \cdot d\vec{A} = - [\rho U w y]_0^\delta = -\rho U w \delta$$

$$\int_{A_{cd}} \rho \vec{V} \cdot d\vec{A} = \int_{A_{cd}} \rho u dA = \int_{y_d}^{y_c} \rho u w dy$$

$$= \int_0^\delta \rho u w dy = \int_0^\delta \rho w U \left[ 2 \left( \frac{y}{\delta} \right) - \left( \frac{y}{\delta} \right)^2 \right] dy$$

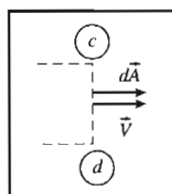

$\left\{ \begin{array}{l} \vec{V} \cdot d\vec{A} \text{ is positive} \\ dA = w dy \end{array} \right\}$

$$\int_{A_{cd}} \rho \vec{V} \cdot d\vec{A} = \rho w U \left[ \frac{y^2}{\delta} - \frac{y^3}{3\delta^2} \right]_0^\delta = \rho w U \delta \left[ 1 - \frac{1}{3} \right] = \frac{2\rho U w \delta}{3}$$

Substituting into Eq. 1, we obtain

$$\therefore \dot{m}_{bc} = \rho U w \delta - \frac{2\rho U w \delta}{3} = \frac{\rho U w \delta}{3}$$

$$= \frac{1}{3} \times 1.24 \frac{\text{kg}}{\text{m}^3} \times 30 \frac{\text{m}}{\text{s}} \times 0.6 \text{ m} \times 5 \text{ mm} \times \frac{\text{m}}{1000 \text{ mm}}$$

$$\dot{m}_{bc} = 0.0372 \text{ kg/s} \quad \left\{ \begin{array}{l} \text{Positive sign indicates flow} \\ \text{out across surface } bc. \end{array} \right\} \quad \dot{m}_b$$

This problem demonstrates use of the conservation of mass equation when we have nonuniform flow at a section.

### EXAMPLE 4.3 Density Change in Venting Tank

A tank of  $0.05 \text{ m}^3$  volume contains air at  $800 \text{ kPa}$  (absolute) and  $15^\circ\text{C}$ . At  $t = 0$ , air begins escaping from the tank through a valve with a flow area of  $65 \text{ mm}^2$ . The air

passing through the valve has a speed of 300 m/s and a density of  $6 \text{ kg/m}^3$ . Determine the instantaneous rate of change of density in the tank at  $t = 0$ .


### EXAMPLE PROBLEM 4.3

**GIVEN:** Tank of volume  $\Psi = 0.05 \text{ m}^3$  contains air at  $p = 800 \text{ kPa}$  (absolute),  $T = 15^\circ\text{C}$ . At  $t = 0$ , air escapes through a valve. Air leaves with speed  $V = 300 \text{ m/s}$  and density  $\rho = 6 \text{ kg/m}^3$  through area  $A = 65 \text{ mm}^2$ .

**FIND:** Rate of change of air density in the tank at  $t = 0$ .

**SOLUTION:**

Choose a fixed control volume as shown by the dashed line.

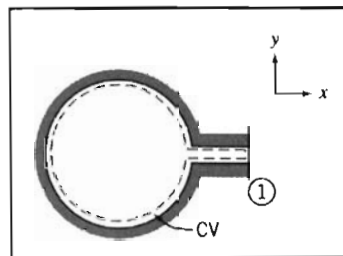

$$\text{Governing equation: } \frac{\partial}{\partial t} \int_{\text{CV}} \rho d\Psi + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0$$

Assumptions: (1) Properties in the tank are uniform, but time-dependent.  
(2) Uniform flow at section ①.

Since properties are assumed uniform in the tank at any instant, we can take  $\rho$  out from within the integral of the first term,

$$\frac{\partial}{\partial t} \left[ \rho_{\text{CV}} \int_{\text{CV}} d\Psi \right] + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0$$

Now,  $\int_{\text{CV}} d\Psi = \Psi$ , and hence


$$\frac{\partial}{\partial t} (\rho\Psi)_{\text{CV}} + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0$$

The only place where mass crosses the boundary of the control volume is at surface ①. Hence

$$\int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = \int_{A_1} \rho \vec{V} \cdot d\vec{A} \quad \text{and} \quad \frac{\partial}{\partial t} (\rho\Psi) + \int_{A_1} \rho \vec{V} \cdot d\vec{A} = 0$$

At surface ① the sign of  $\rho \vec{V} \cdot d\vec{A}$  is positive, so

$$\frac{\partial}{\partial t} (\rho\Psi) + \int_{A_1} \rho V dA = 0$$



Since flow is assumed uniform over surface ①, then

$$\frac{\partial}{\partial t} (\rho\Psi) + \rho_1 V_1 A_1 = 0 \quad \text{or} \quad \frac{\partial}{\partial t} (\rho\Psi) = -\rho_1 V_1 A_1$$

Since the volume,  $\Psi$ , of the tank is not a function of time,

$$\Psi \frac{\partial \rho}{\partial t} = -\rho_1 V_1 A_1$$

and

$$\frac{\partial \rho}{\partial t} = -\frac{\rho_1 V_1 A_1}{\Psi}$$

At  $t = 0$ ,

$$\frac{\partial \rho}{\partial t} = -\frac{6 \text{ kg}}{\text{m}^3} \times \frac{300 \text{ m}}{\text{s}} \times \frac{65 \text{ mm}^2}{0.05 \text{ m}^3} \times \frac{1}{10^6 \text{ mm}^2}$$



$$\frac{\partial \rho}{\partial t} = -2.34 \text{ (kg/m}^3\text{)/s} \quad \left\{ \text{The density is decreasing.} \right\} \quad \frac{\partial \rho}{\partial t}$$

This problem demonstrates use of the conservation of mass equation for unsteady flow problems.

#### 4-4 MOMENTUM EQUATION FOR INERTIAL CONTROL VOLUME

We wish to develop a mathematical formulation of Newton's second law suitable for application to a control volume. In this section our derivation will be restricted to an inertial control volume fixed in space relative to coordinate system  $xyz$  that is not accelerating relative to stationary reference frame  $XYZ$ .

In deriving the control volume form of Newton's second law, the procedure is analogous to the procedure followed in deriving the mathematical form of the conservation of mass for a control volume. We begin with the mathematical formulation for a system and then use Eq. 4.10 to go from the system to the control volume formulation.

Recall that Newton's second law for a system moving relative to an inertial coordinate system was given by Eq. 4.2a as

$$\vec{F} = \left. \frac{d\vec{P}}{dt} \right)_{\text{system}} \quad (4.2a)$$

where the linear momentum of the system is given by

$$\vec{P}_{\text{system}} = \int_{M(\text{system})} \vec{V} dm = \int_{\Psi(\text{system})} \vec{V} \rho d\Psi \quad (4.2b)$$

and the resultant force,  $\vec{F}$ , includes all surface and body forces acting on the system,

$$\vec{F} = \vec{F}_S + \vec{F}_B$$

The system and control volume formulations are related using Eq. 4.10,

$$\left. \frac{dN}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{CV} \eta \rho d\Psi + \int_{CS} \eta \rho \vec{V} \cdot d\vec{A} \quad (4.10)$$

To derive the control volume formulation of Newton's second law, we set

$$N = \vec{P} \quad \text{and} \quad \eta = \vec{V}$$

From Eq. 4.10, with this substitution, we obtain

$$\left. \frac{d\vec{P}}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{CV} \vec{V} \rho d\Psi + \int_{CS} \vec{V} \rho \vec{V} \cdot d\vec{A} \quad (4.16)$$

From Eq. 4.2a

$$\left. \frac{d\vec{P}}{dt} \right)_{\text{system}} = \vec{F}_{\text{on system}} \quad (4.2a)$$

Since, in deriving Eq. 4.10, the system and the control volume coincided at  $t_0$ , then

$$\vec{F})_{\text{on system}} = \vec{F})_{\text{on control volume}}$$

In light of this, Eqs. 4.2a and 4.16 may be combined to yield the control volume formulation of Newton's second law for a nonaccelerating control volume

$$\vec{F} = \vec{F}_S + \vec{F}_B = \frac{\partial}{\partial t} \int_{CV} \vec{V} \rho dV + \int_{CS} \vec{V} \rho \vec{V} \cdot d\vec{A} \quad (4.17)$$

This equation states that the sum of all forces (surface and body forces) acting on a nonaccelerating control volume is equal to the sum of the rate of change of momentum inside the control volume and the net rate of flux of momentum out through the control surface.

The derivation of the momentum equation for a control volume was straightforward. Application of this basic equation to the solution of problems will not be difficult if we exercise care in using the equation.

In using any basic equation for a control volume analysis, the first step must be to draw the boundaries of the control volume and label appropriate coordinate directions. In Eq. 4.17, the force,  $\vec{F}$ , represents all forces acting on the control volume. It includes both surface forces and body forces. As in the case of the free-body diagram of basic mechanics, all forces (and moments) acting on the control volume should be shown so that they can be systematically accounted for in the application of the basic equations. If we denote the body force per unit mass as  $\vec{B}$ , then

$$\vec{F}_B = \int \vec{B} dm = \int_{CV} \vec{B} \rho dV$$

When the force of gravity is the only body force, then the body force per unit mass is  $\vec{g}$ . The surface force due to pressure is given by

$$\vec{F}_S = \int_A -p d\vec{A}$$

Note that these surface forces always act *onto* the control surface ( $d\vec{A}$  points outwards, and the negative sign reverses this direction). The nature of the forces acting on the control volume undoubtedly will influence the choice of control volume boundaries.

All velocities,  $\vec{V}$ , in Eq. 4.17 are measured relative to the control volume. The momentum flux,  $\vec{V} \rho \vec{V} \cdot d\vec{A}$ , through an element of the control surface area,  $d\vec{A}$ , is a vector. As we previously discussed (refer to Fig. 4.3), the sign of the scalar product,  $\rho \vec{V} \cdot d\vec{A}$ , depends on the direction of the velocity vector,  $\vec{V}$ , relative to the area vector,  $d\vec{A}$ . The signs of the components of the velocity,  $\vec{V}$ , depend on the coordinate system chosen.

The momentum equation is a vector equation. As with all vector equations, it may be written as three scalar component equations. The scalar components of Eq. 4.17, relative to an  $xyz$  coordinate system, are

$$F_x = F_{S_x} + F_{B_x} = \frac{\partial}{\partial t} \int_{CV} u \rho dV + \int_{CS} u \rho \vec{V} \cdot d\vec{A} \quad (4.18a)$$

$$F_y = F_{S_y} + F_{B_y} = \frac{\partial}{\partial t} \int_{CV} v \rho dV + \int_{CS} v \rho \vec{V} \cdot d\vec{A} \quad (4.18b)$$

$$F_z = F_{S_z} + F_{B_z} = \frac{\partial}{\partial t} \int_{CV} w \rho dV + \int_{CS} w \rho \vec{V} \cdot d\vec{A} \quad (4.18c)$$

Note that, as we found for the mass conservation equation (Eq. 4.12), the control surface integrals in Eq. 4.17 and Eqs. 4.18 can be replaced with simple algebraic expressions when we have uniform flow at a each inlet or exit, and that for steady flow the first term on the right side is zero.


In Eq. 4.17 and Eqs. 4.18 we must be careful in evaluating the signs of the control surface integrands:

1. The sign of  $\rho \vec{V} \cdot d\vec{A}$  is determined as per our discussion of Fig. 4.3—outflows are positive, inflows are negative.
2. The sign of the velocity components  $u$ ,  $v$ , and  $w$  must be carefully evaluated based on the sketch of the control volume and choice of coordinate system—unknown velocity directions are selected arbitrarily (the mathematics will indicate the validity of the assumption).

We will now look at five Example Problems to illustrate some features of the various forms of the momentum equation for a control volume. Example Problem 4.4 demonstrates how intelligent choice of the control volume can simplify analysis of a problem, Example Problem 4.5 involves a problem in which we have significant body forces, Example Problem 4.6 explains how to simplify surface force evaluations by working in gage pressures, Example Problem 4.7 involves nonuniform surface forces, and Example Problem 4.8 involves a problem in which we have unsteady flow.

### EXAMPLE 4.4 Choice of Control Volume for Momentum Analysis

Water from a stationary nozzle strikes a flat plate as shown. The water leaves the nozzle at 15 m/s; the nozzle area is 0.01 m<sup>2</sup>. Assuming the water is directed normal to the plate, and flows along the plate, determine the horizontal force on the support.

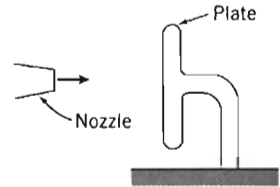

#### EXAMPLE PROBLEM 4.4

**GIVEN:** Water from a stationary nozzle is directed normal to the plate; subsequent flow is parallel to plate.




$$\text{Jet velocity, } \vec{V} = 15 \hat{i} \text{ m/s}$$

$$\text{Nozzle area, } A_n = 0.01 \text{ m}^2$$

**FIND:** Horizontal force on the support.

**SOLUTION:**

We chose a coordinate system in defining the problem above. We must now choose a suitable control volume. Two possible choices are shown by the dashed lines below.

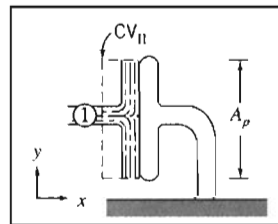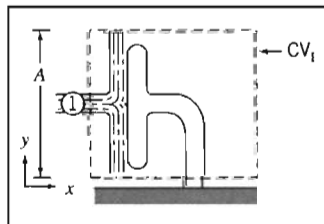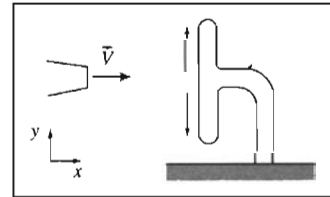

In both cases, water from the nozzle crosses the control surface through area  $A_1$  (assumed equal to the nozzle area) and is assumed to leave the control volume tangent to the plate surface in the  $+y$  or  $-y$  direction. Before trying to decide which is the "best" control volume to use, let us write the governing equations.

$$\bar{F} = \bar{F}_S + \bar{F}_B = \frac{\partial}{\partial t} \int_{CV} \bar{V} \rho d\Psi + \int_{CS} \bar{V} \rho \bar{V} \cdot d\bar{A} \quad \text{and} \quad \frac{\partial}{\partial t} \int_{CV} \rho d\Psi + \int_{CS} \rho \bar{V} \cdot d\bar{A} = 0$$

- Assumptions: (1) Steady flow.  
 (2) Incompressible flow.  
 (3) Uniform flow at each section where fluid crosses the CV boundaries.

Regardless of our choice of control volume, the flow is steady and the basic equations become

$$\bar{F} = \bar{F}_S + \bar{F}_B = \int_{CS} \bar{V} \rho \bar{V} \cdot d\bar{A} \quad \text{and} \quad \int_{CS} \rho \bar{V} \cdot d\bar{A} = 0$$

Evaluating the momentum flux term will lead to the same result for both control volumes. We should choose the control volume that allows the most straightforward evaluation of the forces.

Remember in applying the momentum equation that the force,  $\bar{F}$ , represents all forces acting on the control volume.

Let us solve the problem using each of the control volumes.

**CV<sub>I</sub>**

The control volume has been selected so that the area of the left surface is equal to the area of the right surface. Denote this area by  $A$ .

The control volume cuts through the support. We denote the components of the reaction force of the support on the control volume as  $R_x$  and  $R_y$  and assume both to be positive. (The force of the control volume on the support is equal and opposite to  $R_x$  and  $R_y$ .)  $M_z$  is the reaction moment (about the  $z$  axis) from the support on the control volume.

Atmospheric pressure acts on all surfaces of the control volume. Note that *the pressure in a free jet is ambient*, i.e., in this case atmospheric. (The distributed force due to atmospheric pressure has been shown on the vertical faces only.)

The body force on the control volume is denoted as  $W$ .

Since we are looking for the horizontal force, we write the  $x$  component of the steady flow momentum equation

$$F_{S_x} + F_{B_x} = \int_{CS} u \rho \bar{V} \cdot d\bar{A}$$

There are no body forces in the  $x$  direction, so  $F_{B_x} = 0$ , and

$$F_{S_x} = \int_{CS} u \rho \bar{V} \cdot d\bar{A}$$

To evaluate  $F_{S_x}$ , we must include all surface forces acting on the control volume


$F_{S_x} =$	$p_{atm}A$	-	$p_{atm}A$	+	$R_x$
	force due to atmospheric pressure acts to right (positive direction) on left surface		force due to atmospheric pressure acts to left (negative direction) on right surface		force of support on control volume (assumed positive)

Consequently,  $F_{S_x} = R_x$ , and

$$R_x = \int_{CS} u \rho \bar{V} \cdot d\bar{A} = \int_{A_1} u \rho \bar{V} \cdot d\bar{A} \quad \left\{ \begin{array}{l} \text{For mass crossing top and bottom} \\ \text{surfaces, } u = 0. \end{array} \right.$$

$$= \int_{A_1} u(-\rho V_1 dA_1) \quad \left\{ \begin{array}{l} \text{At } \textcircled{1}, \rho \bar{V} \cdot d\bar{A} = -\rho V_1 dA_1, \text{ since direction} \\ \text{of } \bar{V}_1 \text{ and } d\bar{A}_1 \text{ are } 180^\circ \text{ apart.} \end{array} \right.$$

$$R_x = -u_1 \rho V_1 A_1 \quad \left\{ \begin{array}{l} \text{(properties uniform over } A_1) \end{array} \right.$$

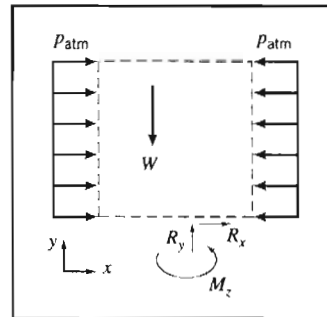



$$R_x = -\frac{15 \text{ m}}{\text{s}} \times \frac{999 \text{ kg}}{\text{m}^3} \times \frac{15 \text{ m}}{\text{s}} \times 0.01 \text{ m}^2 \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \quad \{u_1 = 15 \text{ m/s}\}$$

$$R_x = -2.25 \text{ kN} \quad \{R_x \text{ acts opposite to positive direction assumed.}\}$$


The horizontal force on the support is

$$K_x = -R_x = 2.25 \text{ kN} \quad \leftarrow \{ \text{force on support acts to the right} \} \quad K_x$$

### CV<sub>II</sub> with Horizontal Forces Shown

The control volume has been selected so the areas of the left surface and of the right surface are equal to the area of the plate. Denote this area by  $A_p$ .

The control volume is in contact with the plate over the entire plate surface. We denote the horizontal reaction force from the plate on the control volume as  $B_x$  (and assume it to be positive).

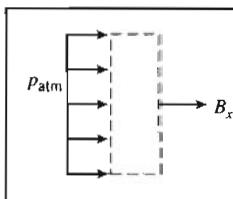

Atmospheric pressure acts on the left surface of the control volume (and on the two horizontal surfaces). The body force on this control volume has no component in the  $x$  direction. Then the  $x$  component of the momentum equation,

$$F_{S_x} = \int_{CS} u \rho \vec{V} \cdot d\vec{A}$$


yields

$$F_{S_x} = p_{\text{atm}} A_p + B_x = \int_{A_1} u \rho \vec{V} \cdot d\vec{A} = \int_{A_1} u (-\rho V_1 dA) = -2.25 \text{ kN}$$

Then

$$B_x = -p_{\text{atm}} A_p - 2.25 \text{ kN}$$

To determine the net force on the plate, we need a free-body diagram of the plate:

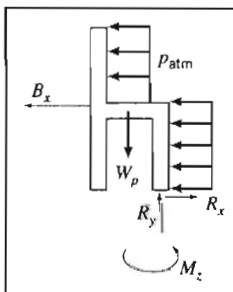

$$\begin{aligned} \sum F_x = 0 &= -B_x - p_{\text{atm}} A_p + R_x \\ R_x &= p_{\text{atm}} A_p + B_x \\ R_x &= p_{\text{atm}} A_p + (-p_{\text{atm}} A_p - 2.25 \text{ kN}) = -2.25 \text{ kN} \end{aligned}$$

Then the horizontal force on the support is  $K_x = -R_x = 2.25 \text{ kN}$ .

Note that the choice of CV<sub>II</sub> resulted in the need for an additional free-body diagram. In general it is advantageous to select the control volume so that the force sought acts explicitly on the control volume.

## Notes:

- ✓ This problem demonstrates how thoughtful choice of the control volume can simplify use of the momentum equation.
- ✓ The analysis would have been greatly simplified if we had worked in gage pressures (see Example Problem 4.6).
- ✓ For this problem the force generated was entirely due to the plate absorbing the jet's horizontal momentum.


**EXAMPLE 4.5 Tank on Scale: Body Force**

A metal container 2 ft high, with an inside cross-sectional area of 1 ft<sup>2</sup>, weighs 5 lbf when empty. The container is placed on a scale and water flows in through an opening in the top and out through the two equal-area openings in the sides, as shown in the diagram. Under steady flow conditions, the height of the water in the tank is  $h = 1.9$  ft. Your boss claims that the scale will read the weight of the volume of water in the tank plus the tank weight, i.e., that we can treat this as a simple statics problem. You disagree, claiming that a fluid flow analysis is required. Who is right, and what does the scale indicate?

$$A_1 = 0.1 \text{ ft}^2$$

$$\vec{V}_1 = -10\hat{j} \text{ ft/s}$$

$$A_2 = A_3 = 0.1 \text{ ft}^2$$

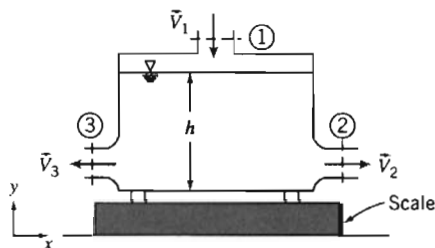**EXAMPLE PROBLEM 4.5****GIVEN:**

Metal container, of height 2 ft and cross-sectional area  $A = 1 \text{ ft}^2$ , weighs 5 lbf when empty. Container rests on scale. Under steady flow conditions water depth is  $h = 1.9$  ft. Water enters vertically at section (1) and leaves horizontally through sections (2) and (3).

$$A_1 = 0.1 \text{ ft}^2$$

$$\vec{V}_1 = -10\hat{j} \text{ ft/s}$$

$$A_2 = A_3 = 0.1 \text{ ft}^2$$

**FIND:** Scale reading.


**SOLUTION:**

Choose a control volume as shown;  $R_y$  is the force of the scale on the control volume (exerted on the control volume through the supports) and is assumed positive.

The weight of the tank is designated  $W_{\text{tank}}$ ; the weight of the water in the tank is  $W_{\text{H}_2\text{O}}$ .

Atmospheric pressure acts uniformly on the entire control surface, and therefore has no net effect on the control volume. Because of this null effect we have not shown the pressure distribution in the diagram.

Governing equations:

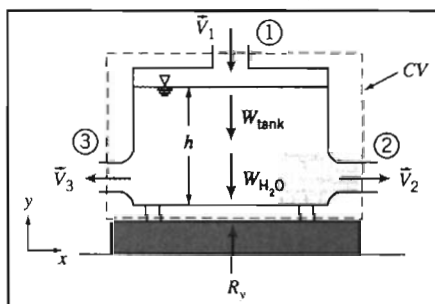

The general control volume momentum and mass conservation equations are Eqs. 4.17 and 4.12, respectively,

$$\begin{aligned} &= 0(1) \\ \vec{F}_s + \vec{F}_b &= \frac{\partial}{\partial t} \int_{CV} \vec{V} \rho dV + \int_{CS} \vec{V} \rho \vec{V} \cdot d\vec{A} \\ &= 0(1) \\ \frac{\partial}{\partial t} \int_{CV} \rho dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} &= 0 \end{aligned}$$

Note that for brevity we usually start with the simplest forms (based on the problem assumptions, e.g., steady flow) of the mass conservation and momentum equations. However, in this problem, for illustration purposes, we start with the most general forms of the equations.

- Assumptions: (1) Steady flow (given).  
 (2) Incompressible flow.  
 (3) Uniform flow at each section where fluid crosses the CV boundaries.

We are only interested in the  $y$  component of the momentum equation

$$\begin{aligned} F_{S_y} + F_{B_y} &= \int_{CS} v \rho \vec{V} \cdot d\vec{A} & (1) \\ F_{S_y} &= R_y & \{ \text{There is no net force due to atmospheric pressure.} \} \\ F_{B_y} &= -W_{\text{tank}} - W_{\text{H}_2\text{O}} & \{ \text{Both body forces act in negative } y \text{ direction.} \} \\ W_{\text{H}_2\text{O}} &= \rho g \Psi = \gamma Ah \end{aligned}$$

$$\begin{aligned} \int_{CS} v \rho \vec{V} \cdot d\vec{A} &= \int_{A_1} v \rho \vec{V} \cdot d\vec{A} = \int_{A_1} v (-\rho V_1 dA_1) & \left\{ \begin{array}{l} \vec{V} \cdot d\vec{A} \text{ is negative at } \textcircled{1} \\ v = 0 \text{ at sections } \textcircled{2} \text{ and } \textcircled{3} \end{array} \right\} \\ &= v_1 (-\rho V_1 A_1) & \left\{ \begin{array}{l} \text{We are assuming uniform} \\ \text{properties at } \textcircled{1} \end{array} \right\} \end{aligned}$$

Using these results in Eq. 1 gives

$$R_y - W_{\text{tank}} - \gamma Ah = v_1 (-\rho V_1 A_1)$$

Note that  $v_1$  is the  $y$  component of the velocity, so that  $v_1 = -V_1$ , where we recall that  $V_1 = 10$  m/s is the magnitude of velocity  $\vec{V}_1$ . Hence, solving for  $R_y$ ,

$$\begin{aligned} R_y &= W_{\text{tank}} + \gamma Ah + \rho V_1^2 A_1 \\ &= 5 \text{ lbf} + 62.4 \frac{\text{lbf}}{\text{ft}^3} \times 1 \text{ ft}^2 \times 1.9 \text{ ft} + 1.94 \frac{\text{slug}}{\text{ft}^3} \times 100 \frac{\text{ft}^2}{\text{s}^2} \times 0.1 \text{ ft}^2 \times \frac{\text{lbf} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}} \\ &= 5 \text{ lbf} + 118.6 \text{ lbf} + 19.4 \text{ lbf} \end{aligned}$$


$$R_y = 143 \text{ lbf} \longleftarrow R_y$$

Note that this is the force of the scale on the control volume; it is also the reading, on the scale. We can see that the scale reading is due to: the tank weight (5 lbf), the weight of water instantaneously in the tank (118.6 lbf), and the force involved in absorbing the downward momentum of the fluid at section  $\textcircled{1}$  (19.4 lbf). Hence your boss is wrong—neglecting the momentum results in an error of almost 15%.

This problem illustrates use of the momentum equation including significant body forces.

**EXAMPLE 4.6 Flow through Elbow: Use of Gage Pressures**

Water flows steadily through the 90° reducing elbow shown in the diagram. At the inlet to the elbow, the absolute pressure is 220 kPa and the cross-sectional area is 0.01 m<sup>2</sup>. At the outlet, the cross-sectional area is 0.0025 m<sup>2</sup> and the velocity is 16 m/s. The elbow discharges to the atmosphere. Determine the force required to hold the elbow in place.

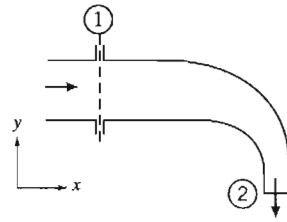
**EXAMPLE PROBLEM 4.6**

**GIVEN:** Steady flow of water through 90° reducing elbow.


$$p_1 = 220 \text{ kPa (abs)} \quad A_1 = 0.01 \text{ m}^2 \quad \vec{V}_2 = -16 \hat{j} \text{ m/s} \quad A_2 = 0.0025 \text{ m}^2$$

**FIND:** Force required to hold elbow in place.

**SOLUTION:**

Choose a fixed control volume as shown. Note that we have several surface force computations:  $p_1$  on area  $A_1$  and  $p_{\text{atm}}$  everywhere else. The exit at section ② is to a free jet, and so at ambient (i.e., atmospheric) pressure. We can use a simplification here: If we subtract  $p_{\text{atm}}$  from the entire surface (a null effect as far as forces are concerned) we can work in gage pressures, as shown.

Note that since the elbow is anchored to the supply line, in addition to the reaction forces  $R_x$  and  $R_y$  (shown), there would also be a reaction moment (not shown).

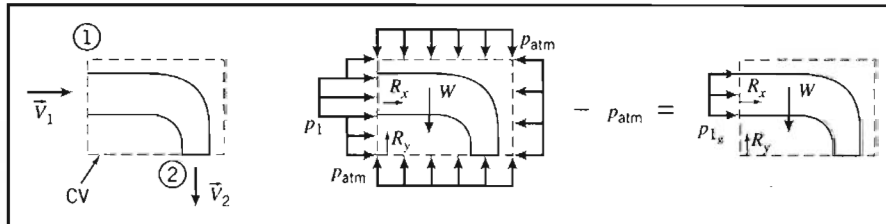

$$\begin{aligned} \text{Governing equations:} \quad \vec{F} &= \vec{F}_S + \vec{F}_B = \frac{\partial}{\partial t} \int_{\text{CV}} \vec{V} \rho \, d\mathcal{V} + \int_{\text{CS}} \vec{V} \rho \vec{V} \cdot d\vec{A} \\ &= 0(4) \\ &\frac{\partial}{\partial t} \int_{\text{CV}} \rho \, d\mathcal{V} + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0 \end{aligned}$$

- Assumptions:**
- (1) Uniform flow at each section.
  - (2) Atmospheric pressure,  $p_{\text{atm}} = 101 \text{ kPa (abs)}$ .
  - (3) Incompressible flow.
  - (4) Steady flow (given).
  - (5) Neglect weight of elbow and water in elbow.

Once again we started with the most general form of the governing equations. Writing the  $x$  component of the momentum equation results in

$$F_{S_x} = \int_{\text{CS}} u \rho \vec{V} \cdot d\vec{A} = \int_{A_1} u \rho \vec{V} \cdot d\vec{A} \quad \left\{ F_{B_x} = 0 \text{ and } u_2 = 0 \right\}$$

so

$$p_{1g} A_1 + R_x = \int_{A_1} u \rho \vec{V} \cdot d\vec{A}$$

$$R_x = -p_{1g} A_1 + \int_{A_1} u \rho \vec{V} \cdot d\vec{A}$$

$$= -p_{1g} A_1 + u_1 (-\rho V_1 A_1)$$

$$R_x = -p_{1g} A_1 - \rho V_1^2 A_1$$

Note that  $u_1$  is the  $x$  component of the velocity, so that  $u_1 = V_1$ . To find  $V_1$ , use the mass conservation equation:

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = \int_{A_1} \rho \vec{V} \cdot d\vec{A} + \int_{A_2} \rho \vec{V} \cdot d\vec{A} = 0$$

$$\therefore (-\rho V_1 A_1) + (\rho V_2 A_2) = 0$$

and

$$V_1 = V_2 \frac{A_2}{A_1} = \frac{16 \text{ m}}{\text{s}} \times \frac{0.0025}{0.01} = 4 \text{ m/s}$$

We can now compute  $R_x$

$$R_x = -p_{1g} A_1 - \rho V_1^2 A_1$$

$$= -1.19 \times 10^5 \frac{\text{N}}{\text{m}^2} \times 0.01 \text{ m}^2 - 999 \frac{\text{kg}}{\text{m}^3} \times \frac{16 \text{ m}^2}{\text{s}^2} \times 0.01 \text{ m}^2 \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}}$$

$$R_x = -1.35 \text{ kN} \leftarrow \text{-----} R_x$$

Writing the  $y$  component of the momentum equation gives

$$F_{S_y} + F_{B_y} = R_y + F_{B_y} = \int_{CS} v \rho \vec{V} \cdot d\vec{A} = \int_{A_2} v \rho \vec{V} \cdot d\vec{A} \quad \{v_1 = 0\}$$

or

$$R_y = -F_{B_y} + \int_{A_2} v \rho \vec{V} \cdot d\vec{A}$$

$$= -F_{B_y} + v_2 (\rho V_2 A_2)$$

$$R_y = -F_{B_y} - \rho V_2^2 A_2$$

Note that  $v_2$  is the  $y$  component of the velocity, so that  $v_2 = -V_2$ , where  $V_2$  is the magnitude of the exit velocity.

Substituting known values

$$R_y = -F_{B_y} - \rho V_2^2 A_2$$

$$= -F_{B_y} - \frac{999 \text{ kg}}{\text{m}^3} \times (16)^2 \frac{\text{m}^2}{\text{s}^2} \times 0.0025 \text{ m}^2 \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}}$$

$$= -F_{B_y} - 639 \text{ N} \leftarrow \text{-----} R_y$$


Neglecting  $F_{B_y}$ , gives

$$R_y = -639 \text{ N} \leftarrow \text{-----} R_y$$

This problem illustrates how using gage pressures simplifies evaluation of the surface forces in the momentum equation.

**EXAMPLE 4.7 Flow under a Sluice Gate: Hydrostatic Pressure Force**

Water in an open channel is held in by a sluice gate. Compare the horizontal force of the water on the gate (a) when the gate is closed and (b) when it is open (assuming steady flow, as shown). Assume the flow at sections ① and ② is incompressible and uniform, and that (because the streamlines are straight there) the pressure distributions are hydrostatic.

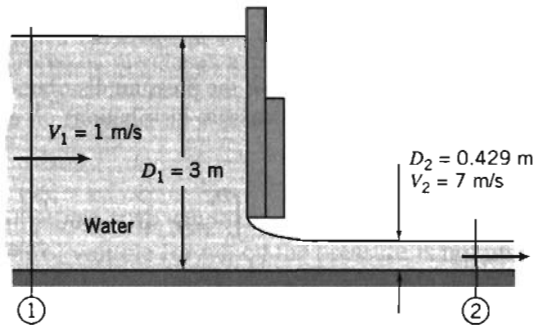
**EXAMPLE PROBLEM 4.7**

**GIVEN:** Flow under sluice gate. Width =  $w$ .

**FIND:** Horizontal force (per unit width) on the closed and open gate.

**SOLUTION:**

Choose a control volume as shown for the open gate. Note that it is much simpler to work in gage pressures, as we learned in Example Problem 4.6.

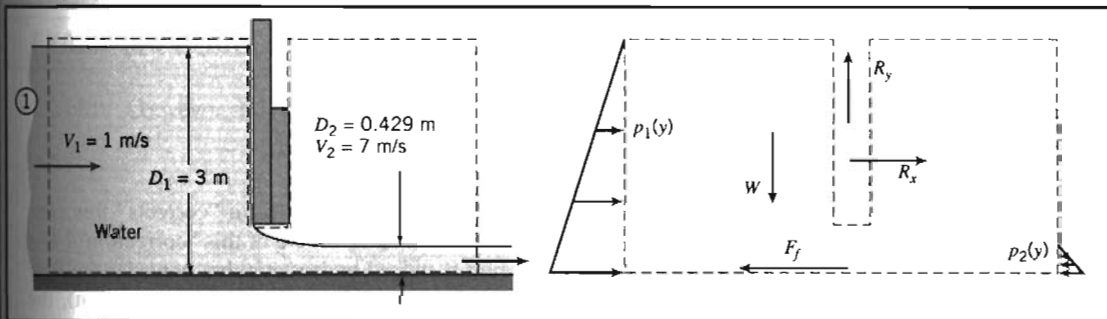

The forces acting on the control volume include:

- Force of gravity  $W$ .
- Friction force  $F_f$ .
- Components  $R_x$  and  $R_y$  of reaction force from gate.
- Hydrostatic pressure distribution on vertical surfaces, assumption (6).
- Pressure distribution  $p_b(x)$  along bottom surface (not shown).

Apply the  $x$  component of the momentum equation.

Governing equation:

$$F_{S_x} + F_{R_x} = \frac{\partial}{\partial t} \int_{CV} u \rho dV + \int_{CS} u \rho \vec{V} \cdot d\vec{A}$$

$$= 0(2) = 0(3)$$



- Assumptions: (1)  $F_f$  negligible (neglect friction on channel bottom).  
 (2)  $F_{B_x} = 0$ .  
 (3) Steady flow.  
 (4) Incompressible flow (given).  
 (5) Uniform flow at each section (given).  
 (6) Hydrostatic pressure distributions at ① and ② (given).

Then

$$F_{S_x} = F_{R_1} + F_{R_2} + R_x = u_1(-\rho V_1 w D_1) + u_2(\rho V_2 w D_2)$$

The surface forces acting on the CV are due to the pressure distributions and the unknown force  $R_x$ . From assumption (6), we can integrate the gage pressure distributions on each side to compute the hydrostatic forces  $F_{R_1}$  and  $F_{R_2}$ ,

$$F_{R_1} = \int_0^{D_1} p_1 dA = w \int_0^{D_1} \rho g y dy = \rho g w \left. \frac{y^2}{2} \right|_0^{D_1} = \frac{1}{2} \rho g w D_1^2$$

where  $y$  is measured downward from the free surface of location ①, and

$$F_{R_2} = \int_0^{D_2} p_2 dA = w \int_0^{D_2} \rho g y dy = \rho g w \left. \frac{y^2}{2} \right|_0^{D_2} = \frac{1}{2} \rho g w D_2^2$$

where  $y$  is measured downward from the free surface of location ②. (Note that we could have used the hydrostatic force equation, Eq. 3.10b, directly to obtain these forces.)

Evaluating  $F_{S_x}$  gives

$$F_{S_x} = R_x + \frac{\rho g w}{2} (D_1^2 - D_2^2)$$

Substituting into the momentum equation, with  $u_1 = V_1$  and  $u_2 = V_2$ , gives

$$R_x + \frac{\rho g w}{2} (D_1^2 - D_2^2) = -\rho V_1^2 w D_1 + \rho V_2^2 w D_2$$

or

$$R_x = \rho w (V_2^2 D_2 - V_1^2 D_1) - \frac{\rho g w}{2} (D_1^2 - D_2^2)$$

The second term on the right is the net hydrostatic force on the gate; the first term “corrects” this (and leads to a smaller net force) for the case when the gate is open. What is the nature of this “correction”? The pressure in the fluid far away from the gate in either direction is indeed hydrostatic, but consider the flow close to the gate: Because we have significant velocity variations here (in magnitude and direction), the pressure distributions deviate significantly from hydrostatic—for example, as the fluid accelerates under the gate there will be a significant pressure drop on the lower left side of the gate. Deriving this pressure field would be a difficult task, but by careful choice of our CV we have avoided having to do so!

We can now compute the horizontal force per unit width,

$$\begin{aligned} \frac{R_x}{w} &= \rho (V_2^2 D_2 - V_1^2 D_1) - \frac{\rho g}{2} (D_1^2 - D_2^2) \\ &= 999 \frac{\text{kg}}{\text{m}^3} \times [(7)^2 (0.429) - (1)^2 (3)] \frac{\text{m}^2}{\text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ &\quad - \frac{1}{2} \times 999 \frac{\text{kg}}{\text{m}^3} \times 9.81 \frac{\text{m}}{\text{s}^2} \times [(3)^2 - (0.429)^2] \text{m}^2 \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ \frac{R_x}{w} &= 18.0 \text{ kN/m} - 43.2 \text{ kN/m} \end{aligned}$$

$$\frac{R_x}{w} = -25.2 \text{ kN/m}$$

$R_x$  is the external force acting on the control volume, applied to the CV by the gate. Therefore, the force of the water on the gate is  $K_x$ , where  $K_x = -R_x$ . Thus,

$$\frac{K_x}{w} = -\frac{R_x}{w} = 25.2 \text{ kN/m} \leftarrow \frac{K_x}{w}$$

This force can be compared to the force on the closed gate of 43.2 kN (obtained from the second term on the right in the equation above, evaluated with  $D_2$  set to zero because for the closed gate there is no fluid on the right of the gate)—the force on the open gate is significantly less as the water accelerates out under the gate.


This problem illustrates the application of the momentum equation to a control volume for which the pressure is not uniform on the control surface.

### EXAMPLE 4.8 Conveyor Belt Filling: Rate of Change of Momentum in Control Volume

A horizontal conveyor belt moving at 3 ft/s receives sand from a hopper. The sand falls vertically from the hopper to the belt at a speed of 5 ft/s and a flow rate of 500 lbm/s (the density of sand is approximately 2700 lbm/cubic yard). The conveyor belt is initially empty but begins to fill with sand. If friction in the drive system and rollers is negligible, find the tension required to pull the belt while the conveyor is filling.

#### EXAMPLE PROBLEM 4.8

**GIVEN:** Conveyor and hopper shown in sketch.

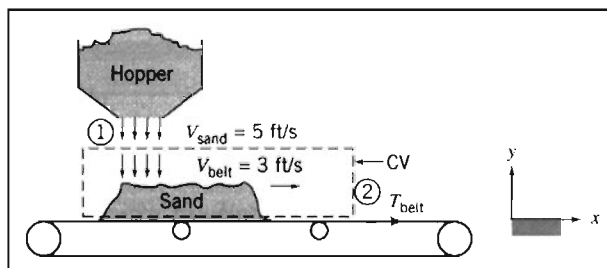

**FIND:**  $T_{\text{belt}}$  at the instant shown.

#### SOLUTION:

Use the control volume and coordinates shown. Apply the  $x$  component of the momentum equation.

Governing equations:

$$F_{S_x} + F_{B_x} = \frac{\partial}{\partial t} \int_{\text{CV}} u \rho \, dV + \int_{\text{CS}} u \rho \vec{V} \cdot d\vec{A} \quad \frac{\partial}{\partial t} \int_{\text{CV}} \rho \, dV + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0$$



- Assumptions: (1)  $F_{S_x} = T_{\text{belt}} = T$ .  
 (2)  $F_{B_x} = 0$ .  
 (3) Uniform flow at section ①.  
 (4) All sand on belt moves with  $V_{\text{belt}} = V_b$ .

Then

$$T = \frac{\partial}{\partial t} \int_{\text{CV}} u \rho d\mathcal{V} + u_1(-\rho V_1 A_1) + u_2(\rho V_2 A_2)$$

Since  $u_1 = 0$ , and there is no flow at section ②,

$$T = \frac{\partial}{\partial t} \int_{\text{CV}} u \rho d\mathcal{V}$$

From assumption (4), inside the CV,  $u = V_b = \text{constant}$ , and hence

$$T = V_b \frac{\partial}{\partial t} \int_{\text{CV}} \rho d\mathcal{V} = V_b \frac{\partial M_s}{\partial t}$$

where  $M_s$  is the mass of sand on the belt (inside the control volume). This result is perhaps not surprising—the tension in the belt is the force required to increase the momentum inside the CV (which is increasing because even though the velocity of the mass in the CV is constant, the mass is not). From the continuity equation,

$$\frac{\partial}{\partial t} \int_{\text{CV}} \rho d\mathcal{V} = \frac{\partial}{\partial t} M_s = - \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = \dot{m}_s = 500 \text{ lbm/s}$$

Then

$$T = V_b \dot{m}_s = \frac{3 \text{ ft}}{\text{s}} \times \frac{500 \text{ lbm}}{\text{s}} \times \frac{\text{slug}}{32.2 \text{ lbm}} \times \frac{\text{lb} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}}$$

$$T = 46.6 \text{ lbf} \leftarrow \text{-----} T$$

This problem illustrates application of the momentum equation to a control volume in which the momentum is changing.

### \*Differential Control Volume Analysis

We have considered a number of examples in which conservation of mass and the momentum equation have been applied to finite control volumes. However, the control volume chosen for analysis need not be finite in size.

Application of the basic equations to a differential control volume leads to differential equations describing the relationships among properties in the flow field. In some cases, the differential equations can be solved to give detailed information about property variations in the flow field. For the case of steady, incompressible, frictionless flow along a streamline, integration of one such differential equation leads to a useful (and famous) relationship among speed, pressure, and elevation in a flow field. This case is presented to illustrate the use of differential control volumes.

\*This section may be omitted without loss of continuity in the text material.

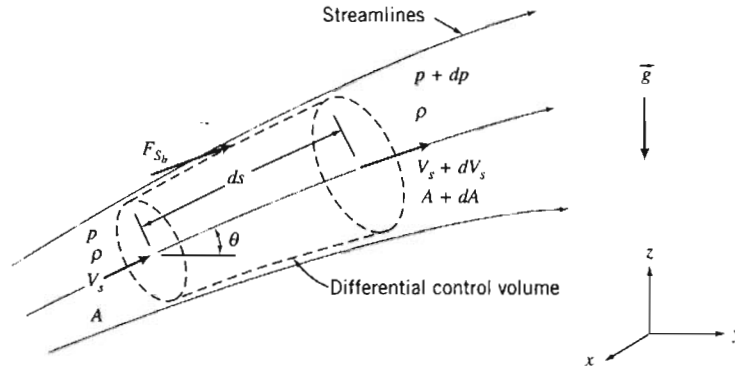


Fig. 4.4 Differential control volume for momentum analysis of flow through a stream tube.

Let us apply the continuity and momentum equations to a steady incompressible flow without friction, as shown in Fig. 4.4. The control volume chosen is fixed in space and bounded by flow streamlines, and is thus an element of a stream tube. The length of the control volume is  $ds$ .

Because the control volume is bounded by streamlines, flow across the bounding surfaces occurs only at the end sections. These are located at coordinates  $s$  and  $s + ds$ , measured along the central streamline.

Properties at the inlet section are assigned arbitrary symbolic values. Properties at the outlet section are assumed to increase by differential amounts. Thus at  $s + ds$ , the flow speed is assumed to be  $V_s + dV_s$ , and so on. The differential changes,  $dp$ ,  $dV_s$ , and  $dA$ , all are assumed to be positive in setting up the problem. (As in a free-body analysis in statics or dynamics, the actual algebraic sign of each differential change will be determined from the results of the analysis.)

Now let us apply the continuity equation and the  $s$  component of the momentum equation to the control volume of Fig. 4.4.

**a. Continuity Equation**

Basic equation: 
$$\frac{d}{dt} \int_{CV} \rho dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \tag{4.12}$$

- Assumptions: (1) Steady flow.  
 (2) No flow across bounding streamlines.  
 (3) Incompressible flow,  $\rho = \text{constant}$ .

Then

$$(-\rho V_s A) + \{\rho(V_s + dV_s)(A + dA)\} = 0$$

so

$$\rho(V_s + dV_s)(A + dA) = \rho V_s A \tag{4.19a}$$

On expanding the left side and simplifying, we obtain

$$V_s dA + A dV_s + dA dV_s = 0$$

But  $dA dV_s$  is a product of differentials, which may be neglected compared with  $V_s dA$  or  $A dV_s$ . Thus

$$V_s dA + A dV_s = 0 \quad (4.19b)$$

### b. Streamwise Component of the Momentum Equation

$$\begin{aligned} &= 0(1) \\ \text{Basic equation: } F_{S_s} + F_{B_s} &= \frac{\partial}{\partial t} \int_{CV} u_s \rho dV + \int_{CS} u_s \rho \vec{V} \cdot d\vec{A} \end{aligned} \quad (4.20)$$

Assumption: (4) No friction, so  $F_{S_b}$  is due to pressure forces only.

The surface force (due only to pressure) will have three terms:

$$F_{S_s} = pA - (p + dp)(A + dA) + \left(p + \frac{dp}{2}\right) dA \quad (4.21a)$$

The first and second terms in Eq. 4.21a are the pressure forces on the end faces of the control surface. The third term is  $F_{S_b}$ , the pressure force acting in the  $s$  direction on the bounding stream surface of the control volume. Its magnitude is the product of the average pressure acting on the stream surface,  $p + \frac{1}{2} dp$ , times the area component of the stream surface in the  $s$  direction,  $dA$ . Equation 4.21a simplifies to

$$F_{S_s} = -A dp - \frac{1}{2} dp dA \quad (4.21b)$$

The body force component in the  $s$  direction is

$$F_{B_s} = \rho g_s dV = \rho(-g \sin \theta) \left(A + \frac{dA}{2}\right) ds$$

But  $\sin \theta ds = dz$ , so that

$$F_{B_s} = -\rho g \left(A + \frac{dA}{2}\right) dz \quad (4.21c)$$

The momentum flux will be

$$\int_{CS} u_s \rho \vec{V} \cdot d\vec{A} = V_s(-\rho V_s A) + (V_s + dV_s) \left\{ \rho (V_s + dV_s)(A + dA) \right\}$$

since there is no mass flux across the bounding stream surfaces. The mass flux factors in parentheses and braces are equal from continuity, Eq. 4.19a, so

$$\int_{CS} u_s \rho \vec{V} \cdot d\vec{A} = V_s(-\rho V_s A) + (V_s + dV_s)(\rho V_s A) = \rho V_s A dV_s \quad (4.22)$$

Substituting Eqs. 4.21b, 4.21c, and 4.22 into Eq. 4.20 (the momentum equation) gives

$$-A dp - \frac{1}{2} dp dA - \rho g A dz - \frac{1}{2} \rho g dA dz = \rho V_s A dV_s$$

Dividing by  $\rho A$  and noting that products of differentials are negligible compared with the remaining terms, we obtain

$$-\frac{dp}{\rho} - g dz = V_s dV_s = d\left(\frac{V_s^2}{2}\right)$$

or

$$\frac{dp}{\rho} + d\left(\frac{V_s^2}{2}\right) + g dz = 0 \quad (4.23)$$

For incompressible flow, this equation may be integrated to obtain

$$\frac{p}{\rho} + \frac{V_s^2}{2} + gz = \text{constant}$$

or, dropping subscript  $s$ ,

---


$$\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant} \quad (4.24)$$


---

This equation is subject to the restrictions:

1. Steady flow.
2. No friction.
3. Flow along a streamline.
4. Incompressible flow.

By applying the momentum equation to an infinitesimal stream tube control volume, for steady incompressible flow without friction, we have derived a relation among pressure, speed, and elevation. This relationship is very powerful and useful. It also makes a lot of sense. Imagine, for example, a horizontal frictionless flow. The only horizontal force a fluid particle in this flow can experience is that due to a net pressure force. Hence, the only way such a particle could accelerate (i.e., increase its velocity) is by moving from a higher to a lower pressure region; an increase in velocity correlates with a decrease in pressure (and vice versa). This trend is what is indicated in Eq. 4.24: For  $z = \text{constant}$ , if  $V$  increases  $p$  must decrease (and vice versa) in order that the left side of the equation remains constant.

Equation 4.24 has many practical applications. For example, it could have been used to evaluate the pressure at the inlet of the reducing elbow analyzed in Example Problem 4.6 or to determine the velocity of water leaving the sluice gate of Example Problem 4.7. In both of these flow situations the restrictions required to derive Eq. 4.24 are reasonable idealizations of the actual flow behavior. The restrictions must be emphasized heavily because they do not always form a realistic model for flow behavior; consequently, they must be justified carefully each time Eq. 4.24 is applied.

Equation 4.24 is a form of the *Bernoulli equation*. It will be derived again in detail in Chapter 6 because it is such a useful tool for flow analysis and because an alternative derivation will give added insight into the need for care in applying the equation.

### EXAMPLE 4.9 Nozzle Flow: Application of Bernoulli Equation

Water flows steadily through a horizontal nozzle, discharging to the atmosphere. At the nozzle inlet the diameter is  $D_1$ ; at the nozzle outlet the diameter is  $D_2$ . Derive an


expression for the minimum gage pressure required at the nozzle inlet to produce a given volume flow rate,  $Q$ . Evaluate the inlet gage pressure if  $D_1 = 3.0$  in.,  $D_2 = 1.0$  in., and the desired flow rate is  $0.7$  ft<sup>3</sup>/s.

**EXAMPLE PROBLEM 4.9**

**GIVEN:** Steady flow of water through a horizontal nozzle, discharging to the atmosphere.

$$D_1 = 3.0 \text{ in.} \quad D_2 = 1.0 \text{ in.} \quad p_2 = p_{\text{atm}}$$

**FIND:** (a)  $p_{1g}$  as a function of volume flow rate,  $Q$ .  
(b)  $p_{1g}$  for  $Q = 0.7$  ft<sup>3</sup>/s.

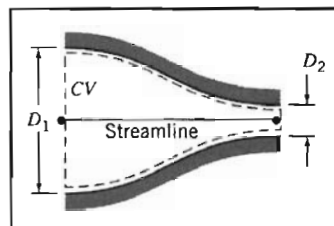

**SOLUTION:**

Governing equations:

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

$$= 0(1)$$

$$\frac{\partial}{\partial t} \int_{CV} \rho dV + \int_{CS} \vec{V} \cdot d\vec{A} = 0$$

- Assumptions: (1) Steady flow (given).  
(2) Incompressible flow.  
(3) Frictionless flow.  
(4) Flow along a streamline.  
(5)  $z_1 = z_2$ .  
(6) Uniform flow at sections ① and ②.

Apply the Bernoulli equation along a streamline between points ① and ② to evaluate  $p_1$ . Then

$$p_{1g} = p_1 - p_{\text{atm}} = p_1 - p_2 = \frac{\rho}{2} (V_2^2 - V_1^2) = \frac{\rho}{2} V_1^2 \left[ \left( \frac{V_2}{V_1} \right)^2 - 1 \right]$$

Apply the continuity equation

$$(-\rho V_1 A_1) + (\rho V_2 A_2) = 0 \quad \text{or} \quad V_1 A_1 = V_2 A_2 = Q$$

so that

$$\frac{V_2}{V_1} = \frac{A_1}{A_2} \quad \text{and} \quad V_1 = \frac{Q}{A_1}$$

Then

$$p_{1g} = \frac{\rho Q^2}{2A_1^2} \left[ \left( \frac{A_1}{A_2} \right)^2 - 1 \right]$$

Since  $A = \pi D^2/4$ , then

$$p_{1g} = \frac{8\rho Q^2}{\pi^2 D_1^4} \left[ \left( \frac{D_1}{D_2} \right)^4 - 1 \right] \longleftarrow p_{1g}$$

(Note that for a given nozzle the pressure required is proportional to the square of the flow rate—not surprising since we have used Eq. 4.24, which shows that  $p \sim V^2 \sim Q^2$ .) With  $D_1 = 3.0$  in.,  $D_2 = 1.0$  in., and  $\rho = 1.94$  slug/ft<sup>3</sup>,

$$p_{1g} = \frac{8}{\pi^2} \times 1.94 \frac{\text{slug}}{\text{ft}^3} \times \frac{1}{(3)^4 \text{ in.}^4} \times Q^2 [(3.0)^4 - 1] \frac{\text{lb} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}} \times \frac{144 \text{ in.}^2}{\text{ft}^2}$$

$$p_{1g} = 224 Q^2 \frac{\text{lb} \cdot \text{s}^2}{\text{in.}^2 \cdot \text{ft}^6}$$

With  $Q = 0.7 \text{ ft}^3/\text{s}$ , then  $p_{1g} = 110 \text{ lb}/\text{in.}^2$  ←  $p_{1g}$

This problem illustrates application of the Bernoulli equation to a flow where the restrictions of steady, incompressible, frictionless flow along a streamline are reasonable.

### Control Volume Moving with Constant Velocity

In the preceding problems, which illustrate applications of the momentum equation to inertial control volumes, we have considered only stationary control volumes. Suppose we have a control volume moving at constant speed. We can set up two coordinate systems:  $XYZ$ , our original stationary (and therefore inertial) coordinates, and  $xyz$ , coordinates attached to the control volume (also inertial because the control volume is not accelerating with respect to  $XYZ$ ).

Equation 4.10, which expresses system derivatives in terms of control volume variables, is valid for any motion of coordinate system  $xyz$  (fixed to the control volume), provided that all velocities are measured *relative* to the control volume. To emphasize this point, we rewrite Eq. 4.10 as

$$\left. \frac{dN}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{\text{CV}} \eta \rho d\mathcal{V} + \int_{\text{CS}} \eta \rho \vec{V}_{xyz} \cdot d\vec{A} \quad (4.25)$$

Since all velocities must be measured relative to the control volume, in using this equation to obtain the momentum equation for an inertial control volume from the system formulation, we must set

$$N = \vec{P}_{xyz} \quad \text{and} \quad \eta = \vec{V}_{xyz}$$

The control volume equation is then written as


$$\vec{F} = \vec{F}_s + \vec{F}_B = \frac{\partial}{\partial t} \int_{\text{CV}} \vec{V}_{xyz} \rho d\mathcal{V} + \int_{\text{CS}} \vec{V}_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A} \quad (4.26)$$

Equation 4.26 is the formulation of Newton's second law applied to any inertial control volume (stationary or moving with a constant velocity). It is identical to Eq. 4.17 except that we have included subscript  $xyz$  to emphasize that velocities must be measured relative to the control volume. (It is helpful to imagine that the velocities are those that would be seen by an observer moving with the control volume.) Example Problem 4.10 illustrates the use of Eq. 4.26 for a control volume moving at constant velocity.

### EXAMPLE 4.10 Vane Moving with Constant Velocity

The sketch shows a vane with a turning angle of  $60^\circ$ . The vane moves at constant speed,  $U = 10 \text{ m/s}$ , and receives a jet of water that leaves a stationary nozzle with

speed  $V = 30$  m/s. The nozzle has an exit area of  $0.003$  m<sup>2</sup>. Determine the force components that act on the vane.

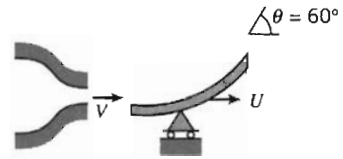

### EXAMPLE PROBLEM 4.10


**GIVEN:** Vane, with turning angle  $\theta = 60^\circ$ , moves with constant velocity,  $\vec{U} = 10\hat{i}$  m/s. Water from a constant area nozzle,  $A = 0.003$  m<sup>2</sup>, with velocity  $\vec{V} = 30\hat{i}$  m/s, flows over the vane as shown.

**FIND:** Force components acting on the vane.

#### SOLUTION:

Select a control volume moving with the vane at constant velocity,  $\vec{U}$ , as shown by the dashed lines.  $R_x$  and  $R_y$  are the components of force required to maintain the velocity of the control volume at  $10\hat{i}$  m/s.

The control volume is inertial, since it is not accelerating ( $U = \text{constant}$ ). Remember that all velocities must be measured relative to the control volume in applying the basic equations.

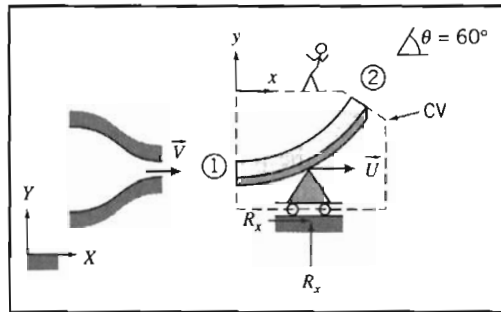

Governing equations:

$$\vec{F}_S + \vec{F}_B = \frac{\partial}{\partial t} \int_{CV} \vec{V}_{xyz} \rho dV + \int_{CS} \vec{V}_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A}$$

$$\frac{\partial}{\partial t} \int_{CV} \rho dV + \int_{CS} \rho \vec{V}_{xyz} \cdot d\vec{A} = 0$$

- Assumptions: (1) Flow is steady relative to the vane.  
 (2) Magnitude of relative velocity along the vane is constant:  $|\vec{V}_1| = |\vec{V}_2| = V - U$ .  
 (3) Properties are uniform at sections ① and ②.  
 (4)  $F_{B_x} = 0$ .  
 (5) Incompressible flow.

The  $x$  component of the momentum equation is

$$= 0(4) = 0(1)$$

$$F_{S_x} + F_{B_x} = \frac{\partial}{\partial t} \int_{CV} u_{xyz} \rho dV + \int_{CS} u_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A}$$

There is no net pressure force, since  $p_{\text{atm}}$  acts on all sides of the CV. Thus

$$R_x = \int_{A_1} u(-\rho V dA) + \int_{A_2} u(\rho V dA) = +u_1(-\rho V_1 A_1) + u_2(\rho V_2 A_2)$$

(All velocities are measured relative to  $xyz$ .) From the continuity equation

$$\int_{A_1} (-\rho V dA) + \int_{A_2} (\rho V dA) = (-\rho V_1 A_1) + (\rho V_2 A_2) = 0$$

or

$$\rho V_1 A_1 = \rho V_2 A_2$$

Therefore,

$$R_x = (u_2 - u_1)(\rho V_1 A_1)$$

All velocities must be measured relative to the CV, so we note that

$$\begin{aligned} V_1 &= V - U & V_2 &= V - U \\ u_1 &= V - U & u_2 &= (V - U)\cos\theta \end{aligned}$$

Substituting yields

$$\begin{aligned} R_x &= [(V - U)\cos\theta - (V - U)](\rho(V - U)A_1) = (V - U)(\cos\theta - 1)[\rho(V - U)A_1] \\ &= (30 - 10) \frac{\text{m}}{\text{s}} \times (0.50 - 1) \times \left( 999 \frac{\text{kg}}{\text{m}^3} (30 - 10) \frac{\text{m}}{\text{s}} \times 0.003 \text{m}^2 \right) \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \end{aligned}$$

$$R_x = -599 \text{ N } \{ \text{to the left} \}$$

Writing the  $y$  component of the momentum equation, we obtain

$$\begin{aligned} &= 0(1) \\ F_{S_y} + F_{B_y} &= \frac{\partial}{\partial t} \int_{CV} v_{xyz} \rho dV + \int_{CS} v_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A} \end{aligned}$$

Denoting the mass of the CV as  $M$  gives

$$\begin{aligned} R_y - Mg &= \int_{CS} v \rho \vec{V} \cdot d\vec{A} = \int_{A_2} v \rho \vec{V} \cdot d\vec{A} & \{v_1 = 0\} & \left\{ \begin{array}{l} \text{All velocities are} \\ \text{measured relative to} \\ \text{xyz.} \end{array} \right. \\ &= \int_{A_2} v (\rho V dA) = v_2 (\rho V_2 A_2) = v_2 (\rho V_1 A_1) & & \{ \text{Recall } \rho V_2 A_2 = \rho V_1 A_1 \} \\ &= (V - U) \sin\theta [\rho(V - U)A_1] \\ &= (30 - 10) \frac{\text{m}}{\text{s}} \times (0.866) \times \left( 999 \frac{\text{kg}}{\text{m}^3} (30 - 10) \frac{\text{m}}{\text{s}} \times 0.003 \text{m}^2 \right) \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \end{aligned}$$

$$R_y - Mg = 1.04 \text{ kN } \{ \text{upward} \}$$

Thus the vertical force is

$$R_y = 1.04 \text{ kN} + Mg \quad \{ \text{upward} \}$$

Then the net force on the vane (neglecting the weight of the vane and water within the CV) is

$$\vec{R} = -0.599\hat{i} + 1.04\hat{j} \text{ kN} \leftarrow \vec{R}$$

This problem illustrates how to evaluate the momentum equation for a control volume in constant velocity motion by evaluating all velocities relative to the control volume.

## 4-5 MOMENTUM EQUATION FOR CONTROL VOLUME WITH RECTILINEAR ACCELERATION

For an inertial control volume (having no acceleration relative to a stationary frame of reference), the appropriate formulation of Newton's second law is given by Eq. 4.26,

$$\vec{F} = \vec{F}_S + \vec{F}_B = \frac{\partial}{\partial t} \int_{CV} \vec{V}_{xyz} \rho dV + \int_{CS} \vec{V}_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A} \quad (4.26)$$

Not all control volumes are inertial; for example, a rocket must accelerate if it is to get off the ground. Since we are interested in analyzing control volumes that may





accelerate relative to inertial coordinates, it is logical to ask whether Eq. 4.26 can be used for an accelerating control volume. To answer this question, let us briefly review the two major elements used in developing Eq. 4.26.

First, in relating the system derivatives to the control volume formulation (Eq. 4.25 or 4.10), the flow field,  $\vec{V}(x, y, z, t)$ , was specified relative to the control volume's coordinates  $x, y,$  and  $z$ . No restriction was placed on the motion of the  $xyz$  reference frame. Consequently, Eq. 4.25 (or Eq. 4.10) is valid at any instant for any arbitrary motion of the coordinates  $x, y,$  and  $z$  provided that all velocities in the equation are measured relative to the control volume.

Second, the system equation

$$\vec{F} = \left. \frac{d\vec{P}}{dt} \right)_{\text{system}} \quad (4.2a)$$

where the linear momentum of the system is given by

$$\vec{P}_{\text{system}} = \int_{M(\text{system})} \vec{V} dm = \int_{V(\text{system})} \vec{V} \rho dV \quad (4.2b)$$

is valid only for velocities measured relative to an inertial reference frame. Thus, if we denote the inertial reference frame by  $XYZ$ , then Newton's second law states that

$$\vec{F} = \left. \frac{d\vec{P}_{XYZ}}{dt} \right)_{\text{system}} \quad (4.27)$$

Since the time derivatives of  $\vec{P}_{XYZ}$  and  $\vec{P}_{xyz}$  are not equal when the control volume reference frame  $xyz$  is accelerating relative to the inertial reference frame, Eq. 4.26 is not valid for an accelerating control volume.

To develop the momentum equation for a linearly accelerating control volume, it is necessary to relate  $\vec{P}_{XYZ}$  of the system to  $\vec{P}_{xyz}$  of the system. The system derivative  $d\vec{P}_{xyz}/dt$  can then be related to control volume variables through Eq. 4.25. We begin by writing Newton's second law for a system, remembering that the acceleration must be measured relative to an inertial reference frame that we have designated  $XYZ$ . We write

$$\vec{F} = \left. \frac{d\vec{P}_{XYZ}}{dt} \right)_{\text{system}} = \frac{d}{dt} \int_{M(\text{system})} \vec{V}_{XYZ} dm = \int_{M(\text{system})} \frac{d\vec{V}_{XYZ}}{dt} dm \quad (4.28)$$

The velocities with respect to the inertial ( $XYZ$ ) and the control volume coordinates ( $xyz$ ) are related by the relative-motion equation

$$\vec{V}_{XYZ} = \vec{V}_{xyz} + \vec{V}_{rf} \quad (4.29)$$

where  $\vec{V}_{rf}$  is the velocity of the control volume reference frame.

Since we are assuming the motion of  $xyz$  is pure translation, without rotation, relative to inertial reference frame  $XYZ$ , then

$$\frac{d\vec{V}_{XYZ}}{dt} = \vec{a}_{XYZ} = \frac{d\vec{V}_{xyz}}{dt} + \frac{d\vec{V}_{rf}}{dt} = \vec{a}_{xyz} + \vec{a}_{rf} \quad (4.30)$$

where

$\vec{a}_{XYZ}$  is the rectilinear acceleration of the system relative to inertial reference frame  $XYZ$ ,

$\vec{a}_{xyz}$  is the rectilinear acceleration of the system relative to noninertial reference frame  $xyz$  (i.e., relative to the control volume), and

$\bar{a}_{rf}$  is the rectilinear acceleration of noninertial reference frame  $xyz$  (i.e., of the control volume) relative to inertial frame  $XYZ$ .

Substituting from Eq. 4.30 into Eq. 4.28 gives

$$\bar{F} = \int_{M(\text{system})} \bar{a}_{rf} dm + \int_{M(\text{system})} \frac{d\bar{V}_{xyz}}{dt} dm$$

or

$$\bar{F} - \int_{M(\text{system})} \bar{a}_{rf} dm = \left. \frac{d\bar{P}_{xyz}}{dt} \right)_{\text{system}} \quad (4.31a)$$

where the linear momentum of the system is given by

$$\bar{P}_{xyz})_{\text{system}} = \int_{M(\text{system})} \bar{V}_{xyz} dm = \int_{\mathcal{V}(\text{system})} \bar{V}_{xyz} \rho d\mathcal{V} \quad (4.31b)$$

and the force,  $\bar{F}$ , includes all surface and body forces acting on the system.

To derive the control volume formulation of Newton's second law, we set

$$N = \bar{P}_{xyz} \quad \text{and} \quad \eta = \bar{V}_{xyz}$$

From Eq. 4.25, with this substitution, we obtain

$$\left. \frac{d\bar{P}_{xyz}}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{CV} \bar{V}_{xyz} \rho d\mathcal{V} + \int_{CS} \bar{V}_{xyz} \rho \bar{V}_{xyz} \cdot d\bar{A} \quad (4.32)$$

Combining Eq. 4.31a (the linear momentum equation for the system) and Eq. 4.32 (the system-control volume conversion), and recognizing that at time  $t_0$  the system and control volume coincide, Newton's second law for a control volume accelerating, without rotation, relative to an inertial reference frame is

$$\bar{F} - \int_{CV} \bar{a}_{rf} \rho d\mathcal{V} = \frac{\partial}{\partial t} \int_{CV} \bar{V}_{xyz} \rho d\mathcal{V} + \int_{CS} \bar{V}_{xyz} \rho \bar{V}_{xyz} \cdot d\bar{A}$$

Since  $\bar{F} = \bar{F}_S + \bar{F}_B$ , this equation becomes

$$\bar{F}_S + \bar{F}_B - \int_{CV} \bar{a}_{rf} \rho d\mathcal{V} = \frac{\partial}{\partial t} \int_{CV} \bar{V}_{xyz} \rho d\mathcal{V} + \int_{CS} \bar{V}_{xyz} \rho \bar{V}_{xyz} \cdot d\bar{A} \quad (4.33)$$

Comparing this momentum equation for a control volume with rectilinear acceleration to that for a nonaccelerating control volume, Eq. 4.26, we see that the only difference is the presence of one additional term in Eq. 4.33. When the control volume is not accelerating relative to inertial reference frame  $XYZ$ , then  $\bar{a}_{rf} = 0$ , and Eq. 4.33 reduces to Eq. 4.26.

The precautions concerning the use of Eq. 4.26 also apply to the use of Eq. 4.33. Before attempting to apply either equation, one must draw the boundaries of the control volume and label appropriate coordinate directions. For an accelerating control volume, one must label two coordinate systems: one ( $xyz$ ) on the control volume and the other ( $XYZ$ ) an inertial reference frame.

In Eq. 4.33,  $\bar{F}_S$  represents all surface forces acting on the control volume. Since the mass within the control volume may vary with time, both the remaining terms on the left side of the equation may be functions of time. Furthermore, the acceleration,

$\bar{a}_{rf}$ , of the reference frame  $xyz$  relative to an inertial frame will in general be a function of time.

All velocities in Eq. 4.33 are measured relative to the control volume. The momentum flux,  $\bar{V}_{xyz} \rho \bar{V}_{xyz} \cdot d\bar{A}$ , through an element of the control surface area,  $d\bar{A}$ , is a vector. As we saw for the nonaccelerating control volume, the sign of the scalar product,  $\rho \bar{V}_{xyz} \cdot d\bar{A}$ , depends on the direction of the velocity vector,  $\bar{V}_{xyz}$ , relative to the area vector,  $d\bar{A}$ .

The momentum equation is a vector equation. As with all vector equations, it may be written as three scalar component equations. The scalar components of Eq. 4.33 are

$$F_{S_x} + F_{B_x} - \int_{CV} a_{rf_x} \rho d\Psi = \frac{\partial}{\partial t} \int_{CV} u_{xyz} \rho d\Psi + \int_{CS} u_{xyz} \rho \bar{V}_{xyz} \cdot d\bar{A} \quad (4.34a)$$

$$F_{S_y} + F_{B_y} - \int_{CV} a_{rf_y} \rho d\Psi = \frac{\partial}{\partial t} \int_{CV} v_{xyz} \rho d\Psi + \int_{CS} v_{xyz} \rho \bar{V}_{xyz} \cdot d\bar{A} \quad (4.34b)$$

$$F_{S_z} + F_{B_z} - \int_{CV} a_{rf_z} \rho d\Psi = \frac{\partial}{\partial t} \int_{CV} w_{xyz} \rho d\Psi + \int_{CS} w_{xyz} \rho \bar{V}_{xyz} \cdot d\bar{A} \quad (4.34c)$$


We will consider two applications of the linearly accelerating control volume: Example Problem 4.11 will analyze an accelerating control volume in which the mass contained in the control volume is constant; Example Problem 4.12 will analyze an accelerating control volume in which the mass contained varies with time.

### EXAMPLE 4.11 Vane Moving with Rectilinear Acceleration

A vane, with turning angle  $\theta = 60^\circ$ , is attached to a cart. The cart and vane, of mass  $M = 75$  kg, roll on a level track. Friction and air resistance may be neglected. The vane receives a jet of water, which leaves a stationary nozzle horizontally at  $V = 35$  m/s. The nozzle exit area is  $A = 0.003$  m<sup>2</sup>. Determine the velocity of the cart as a function of time and plot the results.

#### EXAMPLE PROBLEM 4.11

**GIVEN:** Vane and cart as sketched, with  $M = 75$  kg.

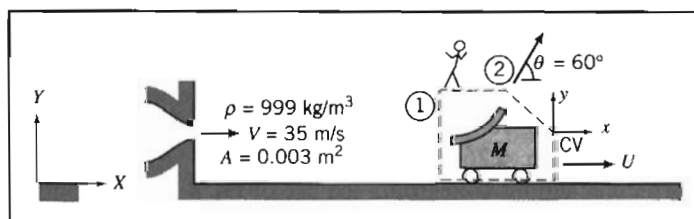

**FIND:**  $U(t)$  and plot results.

#### SOLUTION:

Choose the control volume and coordinate systems shown for the analysis. Note that  $XY$  is a fixed frame, while frame  $xy$  moves with the cart. Apply the  $x$  component of the momentum equation.

$$\text{Governing equation: } \overset{= 0(1) = 0(2)}{\cancel{F_{S_x}} + \cancel{F_{B_x}} - \int_{CV} a_{rx} \rho dV} = \overset{= 0(4)}{\frac{\partial}{\partial t} \int_{CV} u_{xyz} \rho dV} + \int_{CS} u_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A}$$

- Assumptions: (1)  $F_{S_x} = 0$ , since no resistance is present.  
 (2)  $F_{B_x} = 0$ .  
 (3) Neglect the mass of water in contact with the vane compared to the cart mass.  
 (4) Neglect rate of change of momentum of liquid inside the CV.

$$\frac{\partial}{\partial t} \int_{CV} u_{xyz} \rho dV \approx 0$$

- (5) Uniform flow at sections ① and ②.  
 (6) Speed of water stream is not slowed by friction on the vane, so  $|\vec{V}_{xyz1}| = |\vec{V}_{xyz2}|$ .  
 (7)  $A_2 = A_1 = A$ .

Then, dropping subscripts  $rf$  and  $xyz$  for clarity (but remembering that all velocities are measured relative to the moving coordinates of the control volume),

$$\begin{aligned} -\int_{CV} a_x \rho dV &= u_1(-\rho V_1 A_1) + u_2(\rho V_2 A_2) \\ &= (V - U)\{-\rho(V - U)A\} + (V - U) \cos \theta \{\rho(V - U)A\} \\ &= -\rho(V - U)^2 A + \rho(V - U)^2 A \cos \theta \end{aligned}$$

For the left side of this equation we have

$$-\int_{CV} a_x \rho dV = -a_x M_{CV} = -a_x M = -\frac{dU}{dt} M$$

so that

$$-M \frac{dU}{dt} = -\rho(V - U)^2 A + \rho(V - U)^2 A \cos \theta$$

or

$$M \frac{dU}{dt} = (1 - \cos \theta) \rho (V - U)^2 A$$

Separating variables, we obtain

$$\frac{dU}{(V - U)^2} = \frac{(1 - \cos \theta) \rho A}{M} dt = b dt \quad \text{where } b = \frac{(1 - \cos \theta) \rho A}{M}$$

Note that since  $V = \text{constant}$ ,  $dU = -d(V - U)$ . Integrating between limits  $U = 0$  at  $t = 0$ , and  $U = U$  at  $t = t$ ,

$$\int_0^U \frac{dU}{(V - U)^2} = \int_0^U \frac{-d(V - U)}{(V - U)^2} = \left[ \frac{1}{(V - U)} \right]_0^U = \int_0^t b dt = bt$$

or

$$\frac{1}{(V - U)} - \frac{1}{V} = \frac{U}{V(V - U)} = bt$$

Solving for  $U$ , we obtain

$$\frac{U}{V} = \frac{Vbt}{1 + Vbt}$$

Evaluating  $Vb$  gives


$$Vb = V \frac{(1 - \cos \theta)\rho A}{M}$$

$$Vb = \frac{35 \text{ m}}{\text{s}} \times \frac{(1 - 0.5)}{75 \text{ kg}} \times \frac{999 \text{ kg}}{\text{m}^3} \times 0.003 \text{ m}^2 = 0.699 \text{ s}^{-1}$$

Thus

$$\frac{U}{V} = \frac{0.699t}{1 + 0.699t} \quad \leftarrow \text{(t in seconds)} \quad U(t)$$

Plot:

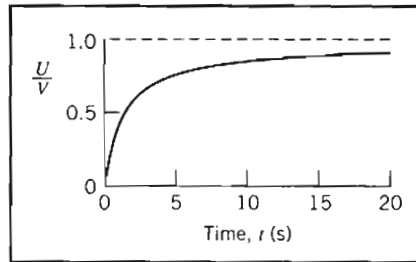

The graph was generated from an *Excel* workbook. This workbook is interactive: It allows one to see the effect of different values of  $\rho$ ,  $A$ ,  $M$ , and  $\theta$  on  $U/V$  against time  $t$ , and also to determine the time taken for the cart to reach, for example, 95% of jet speed.

### EXAMPLE 4.12 Rocket Directed Vertically

A small rocket, with an initial mass of 400 kg, is to be launched vertically. Upon ignition the rocket consumes fuel at the rate of 5 kg/s and ejects gas at atmospheric pressure with a speed of 3500 m/s relative to the rocket. Determine the initial acceleration of the rocket and the rocket speed after 10 s, if air resistance is neglected.


### EXAMPLE PROBLEM 4.12

**GIVEN:** Small rocket accelerates vertically from rest.  
 Initial mass,  $M_0 = 400 \text{ kg}$ .  
 Air resistance may be neglected.  
 Rate of fuel consumption,  $\dot{m}_e = 5 \text{ kg/s}$ .  
 Exhaust velocity,  $V_e = 3500 \text{ m/s}$ , relative to rocket, leaving at atmospheric pressure.

**FIND:** (a) Initial acceleration of the rocket.  
 (b) Rocket velocity after 10 s.

**SOLUTION:**

Choose a control volume as shown by dashed lines. Because the control volume is accelerating, define inertial coordinate system  $XY$  and coordinate system  $xy$  attached to the CV. Apply the  $y$  component of the momentum equation.

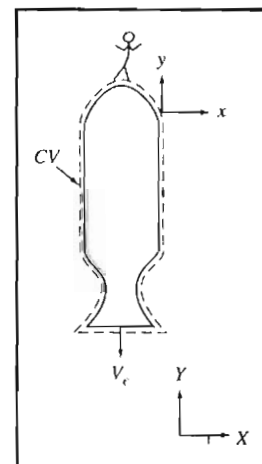

$$\text{Governing equation: } F_{S_y} + F_{B_y} - \int_{CV} a_{rf_y} \rho d\mathcal{V} = \frac{\partial}{\partial t} \int_{CV} v_{xyz} \rho d\mathcal{V} + \int_{CS} v_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A}$$

- Assumptions: (1) Atmospheric pressure acts on all surfaces of the CV; since air resistance is neglected,  $F_{S_y} = 0$ .  
 (2) Gravity is the only body force;  $g$  is constant.  
 (3) Flow leaving the rocket is uniform, and  $V_e$  is constant.

Under these assumptions the momentum equation reduces to

$$F_{B_y} - \int_{CV} a_{rf_y} \rho d\mathcal{V} = \frac{\partial}{\partial t} \int_{CV} v_{xyz} \rho d\mathcal{V} + \int_{CS} v_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A} \quad (1)$$

(A)                      (B)                      (C)                      (D)

Let us look at the equation term by term:

$$(A) \quad F_{B_y} = - \int_{CV} g \rho d\mathcal{V} = -g \int_{CV} \rho d\mathcal{V} = -gM_{CV} \quad \{\text{since } g \text{ is constant}\}$$

The mass of the CV will be a function of time because mass is leaving the CV at rate  $\dot{m}_e$ . To determine  $M_{CV}$  as a function of time, we use the conservation of mass equation

$$\frac{\partial}{\partial t} \int_{CV} \rho d\mathcal{V} + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0$$

Then

$$\frac{\partial}{\partial t} \int_{CV} \rho d\mathcal{V} = - \int_{CS} \rho \vec{V} \cdot d\vec{A} = - \int_{CS} (\rho V_{xyz} dA) = -\dot{m}_e$$

The minus sign indicates that the mass of the CV is decreasing with time. Since the mass of the CV is only a function of time, we can write

$$\frac{dM_{CV}}{dt} = -\dot{m}_e$$

To find the mass of the CV at any time,  $t$ , we integrate

$$\int_{M_0}^M dM_{CV} = - \int_0^t \dot{m}_e dt \quad \text{where at } t = 0, M_{CV} = M_0, \text{ and at } t = t, M_{CV} = M$$

Then,  $M - M_0 = -\dot{m}_e t$ , or  $M = M_0 - \dot{m}_e t$ .

Substituting the expression for  $M$  into term (A), we obtain

$$F_{B_y} = - \int_{CV} g \rho d\mathcal{V} = -gM_{CV} = -g(M_0 - \dot{m}_e t)$$

$$(B) \quad - \int_{CV} a_{rf_y} \rho d\mathcal{V}$$

The acceleration,  $a_{rf_y}$ , of the CV is that seen by an observer in the  $XY$  coordinate system. Thus  $a_{rf_y}$  is not a function of the coordinates  $xyz$ , and

$$- \int_{CV} a_{rf_y} \rho d\mathcal{V} = -a_{rf_y} \int_{CV} \rho d\mathcal{V} = -a_{rf_y} M_{CV} = -a_{rf_y} (M_0 - \dot{m}_e t)$$

$$(C) \quad \frac{\partial}{\partial t} \int_{CV} v_{xyz} \rho d\mathcal{V}$$

This is the time rate of change of the  $y$  momentum of the fluid in the control volume measured relative to the control volume.

Even though the  $y$  momentum of the fluid inside the CV, measured relative to the CV, is a large number, it does not change appreciably with time. To see this, we must recognize that:

- (1) The unburned fuel and the rocket structure have zero momentum relative to the rocket.
- (2) The velocity of the gas at the nozzle exit remains constant with time as does the velocity at various points in the nozzle.

Consequently, it is reasonable to assume that

$$\frac{\partial}{\partial t} \int_{CV} v_{xyz} \rho \, dV \approx 0$$

$$\textcircled{D} \quad \int_{CS} v_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A} = \int_{CS} v_{xyz} (\rho V_{xyz} \, dA) = -V_e \int_{CS} (\rho V_{xyz} \, dA)$$

The velocity  $v_{xyz}$  (relative to the control volume) is  $-V_e$  (it is in the negative  $y$  direction), and is a constant, so was taken outside the integral. The remaining integral is simply the mass flow rate at the exit (positive because flow is out of the control volume),

$$\int_{CS} (\rho V_{xyz} \, dA) = \dot{m}_e$$

and so

$$\int_{CS} v_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A} = -V_e \dot{m}_e$$

Substituting terms  $\textcircled{A}$  through  $\textcircled{D}$  into Eq. 1, we obtain

$$-g(M_0 - \dot{m}_e t) - a_{rf_y}(M_0 - \dot{m}_e t) = -V_e \dot{m}_e$$

or

$$a_{rf_y} = \frac{V_e \dot{m}_e}{M_0 - \dot{m}_e t} - g \quad (2)$$

At time  $t = 0$ ,

$$a_{rf_y} \Big|_{t=0} = \frac{V_e \dot{m}_e}{M_0} - g = \frac{3500 \, \text{m}}{\text{s}} \times \frac{5 \, \text{kg}}{\text{s}} \times \frac{1}{400 \, \text{kg}} - 9.81 \, \frac{\text{m}}{\text{s}^2}$$

$$a_{rf_y} \Big|_{t=0} = 33.9 \, \text{m/s}^2 \longleftarrow a_{rf_y} \Big|_{t=0}$$

The acceleration of the CV is by definition

$$a_{rf_y} = \frac{dV_{CV}}{dt}$$

Substituting from Eq. 2,

$$\frac{dV_{CV}}{dt} = \frac{V_e \dot{m}_e}{M_0 - \dot{m}_e t} - g$$

Separating variables and integrating gives

$$V_{CV} = \int_0^{V_{CV}} dV_{CV} = \int_0^t \frac{V_e \dot{m}_e \, dt}{M_0 - \dot{m}_e t} - \int_0^t g \, dt = -V_e \ln \left[ \frac{M_0 - \dot{m}_e t}{M_0} \right] - gt$$

At  $t = 10 \, \text{s}$ ,

$$V_{CV} = -\frac{3500 \, \text{m}}{\text{s}} \times \ln \left[ \frac{350 \, \text{kg}}{400 \, \text{kg}} \right] - 9.81 \, \frac{\text{m}}{\text{s}^2} \times 10 \, \text{s}$$

$$V_{CV} = 369 \, \text{m/s} \longleftarrow V_{CV} \Big|_{t=10 \, \text{s}}$$

The position vector,  $\vec{r}$ , locates each mass or volume element of the system with respect to the coordinate system. The torque,  $\vec{T}$ , applied to a system may be written

$$\vec{T} = \vec{r} \times \vec{F}_s + \int_{M(\text{system})} \vec{r} \times \vec{g} \, dm + \vec{T}_{\text{shaft}} \quad (4.3c)$$

where  $\vec{F}_s$  is the surface force exerted on the system.

The relation between the system and fixed control volume formulations is

$$\left. \frac{dN}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{CV} \eta \rho \, dV + \int_{CS} \eta \rho \vec{V} \cdot d\vec{A} \quad (4.10)$$

where

$$N_{\text{system}} = \int_{M(\text{system})} \eta \, dm$$

If we set  $N = \vec{H}$ , then  $\eta = \vec{r} \times \vec{V}$ , and

$$\left. \frac{d\vec{H}}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{CV} \vec{r} \times \vec{V} \rho \, dV + \int_{CS} \vec{r} \times \vec{V} \rho \vec{V} \cdot d\vec{A} \quad (4.45)$$

Combining Eqs. 4.3a, 4.3c, and 4.45, we obtain

$$\vec{r} \times \vec{F}_s + \int_{M(\text{system})} \vec{r} \times \vec{g} \, dm + \vec{T}_{\text{shaft}} = \frac{\partial}{\partial t} \int_{CV} \vec{r} \times \vec{V} \rho \, dV + \int_{CS} \vec{r} \times \vec{V} \rho \vec{V} \cdot d\vec{A}$$

Since the system and control volume coincide at time  $t_0$ ,

$$\vec{T} = \vec{T}_{CV}$$

and

$$\vec{r} \times \vec{F}_s + \int_{CV} \vec{r} \times \vec{g} \rho \, dV + \vec{T}_{\text{shaft}} = \frac{\partial}{\partial t} \int_{CV} \vec{r} \times \vec{V} \rho \, dV + \int_{CS} \vec{r} \times \vec{V} \rho \vec{V} \cdot d\vec{A} \quad (4.46)$$

Equation 4.46 is a general formulation of the angular-momentum principle for an inertial control volume. The left side of the equation is an expression for all the torques that act on the control volume. Terms on the right express the rate of change of angular momentum within the control volume and the net rate of flux of angular momentum from the control volume. All velocities in Eq. 4.46 are measured relative to the fixed control volume.


For analysis of rotating machinery, Eq. 4.46 is often used in scalar form by considering only the component directed along the axis of rotation. This application is illustrated in Chapter 10.

The application of Eq. 4.46 to the analysis of a simple lawn sprinkler is illustrated in Example Problem 4.14. This same problem is considered in Example Problem 4.15 (on the CD) using the angular-momentum principle expressed in terms of a *rotating* control volume.

#### EXAMPLE 4.14 Lawn Sprinkler: Analysis Using Fixed Control Volume

A small lawn sprinkler is shown in the sketch below. At an inlet gage pressure of 20 kPa, the total volume flow rate of water through the sprinkler is 7.5 liters per minute and it rotates at 30 rpm. The diameter of each jet is 4 mm. Calculate the jet speed relative to each sprinkler nozzle. Evaluate the friction torque at the sprinkler pivot.

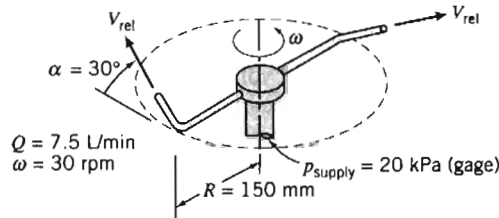


**EXAMPLE PROBLEM 4.14**

**GIVEN:** Small lawn sprinkler as shown.

**FIND:** (a) Jet speed relative to each nozzle.  
(b) Friction torque at pivot.

**SOLUTION:**

Apply continuity and angular momentum equations using fixed control volume enclosing sprinkler arms.

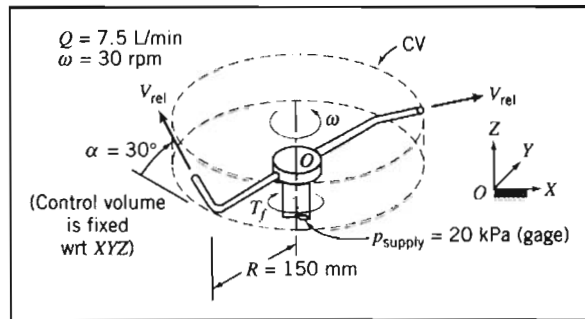

Governing equations:

$$\frac{\partial}{\partial t} \int_{CV} \rho dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0$$

$$\vec{r} \times \vec{F}_s + \int_{CV} \vec{r} \times \vec{g} \rho dV + \vec{T}_{shaft} = \frac{\partial}{\partial t} \int_{CV} \vec{r} \times \vec{V} \rho dV + \int_{CS} \vec{r} \times \vec{V} \rho \vec{V} \cdot d\vec{A} \quad (1)$$

where all velocities are measured relative to the inertial coordinates XYZ.

- Assumptions: (1) Incompressible flow.  
(2) Uniform flow at each section.  
(3)  $\vec{\omega} = \text{constant}$ .

From continuity, the jet speed relative to the nozzle is given by

$$\begin{aligned} V_{rel} &= \frac{Q}{2A_{jet}} = \frac{Q}{2} \frac{4}{\pi D_{jet}^2} \\ &= \frac{1}{2} \times \frac{7.5 \text{ L}}{\text{min}} \times \frac{4}{\pi (4)^2 \text{ mm}^2} \times \frac{\text{m}^3}{1000 \text{ L}} \times \frac{10^6 \text{ mm}^2}{\text{m}^2} \times \frac{\text{min}}{60 \text{ s}} \\ V_{rel} &= 4.97 \text{ m/s} \end{aligned}$$


Consider terms in the angular momentum equation separately. Since atmospheric pressure acts on the entire control surface, and the pressure force at the inlet causes no moment about  $O$ ,  $\vec{r} \times \vec{F}_s = 0$ . The moments of the body (i.e., gravity) forces in the two arms are equal and opposite and hence the second term on the left side of the equation is zero. The only external torque acting on the CV is friction in the pivot. It opposes the motion, so

$$\vec{T}_{shaft} = -T_f \hat{K} \quad (2)$$

Our next task is to determine the two angular momentum terms on the right side of Eq. 1. Consider the unsteady term: This is the rate of change of angular momentum in the control volume. It is clear that although the position  $\vec{r}$  and velocity  $\vec{V}$  of fluid particles are functions of time in XYZ coordinates, because



the sprinkler rotates at constant speed the control volume angular momentum is constant in  $XYZ$  coordinates, so this term is zero; however, as an exercise in manipulating vector quantities, let us derive this result. Before we can evaluate the control volume integral, we need to develop expressions for the instantaneous position vector,  $\vec{r}$ , and velocity vector,  $\vec{V}$  (measured relative to the fixed coordinate system  $XYZ$ ) of each element of fluid in the control volume.

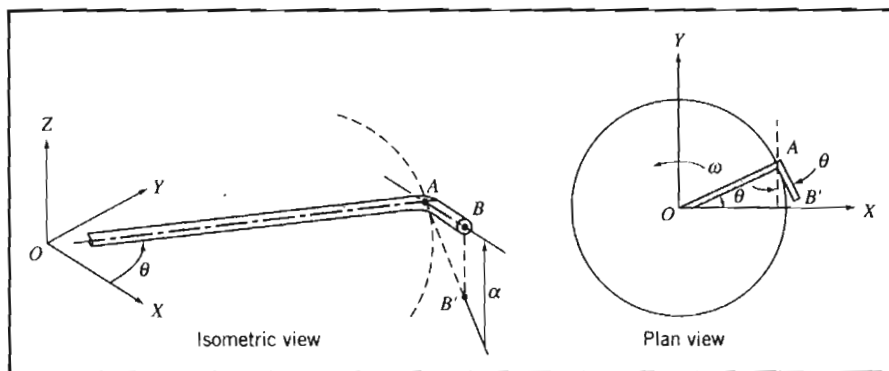

$OA$  lies in the  $XY$  plane;  $AB$  is inclined at angle  $\alpha$  to the  $XY$  plane; point  $B'$  is the projection of point  $B$  on the  $XY$  plane.

We assume that the length,  $L$ , of the tip  $AB$  is small compared with the length,  $R$ , of the horizontal arm  $OA$ . Consequently we neglect the angular momentum of the fluid in the tips compared with the angular momentum in the horizontal arms.

Consider flow in the horizontal tube  $OA$  of length  $R$ . Denote the radial distance from  $O$  by  $r$ . At any point in the tube the fluid velocity relative to fixed coordinates  $XYZ$  is the sum of the velocity relative to the tube  $\vec{V}_t$  and the tangential velocity  $\vec{\omega} \times \vec{r}$ . Thus

$$\vec{V} = \hat{I}(V_t \cos \theta - r\omega \sin \theta) + \hat{J}(V_t \sin \theta + r\omega \cos \theta)$$

(Note that  $\theta$  is a function of time.) The position vector is

$$\vec{r} = \hat{I}r \cos \theta + \hat{J}r \sin \theta$$

and

$$\vec{r} \times \vec{V} = \hat{K}(r^2 \omega \cos^2 \theta + r^2 \omega \sin^2 \theta) = \hat{K}r^2 \omega$$

Then


$$\int_{V_{OA}} \vec{r} \times \vec{V} \rho \, dV = \int_0^R \hat{K}r^2 \omega \rho A \, dr = \hat{K} \frac{R^3 \omega}{3} \rho A$$

and

$$\frac{\partial}{\partial t} \int_{V_{OA}} \vec{r} \times \vec{V} \rho \, dV = \frac{\partial}{\partial t} \left[ \hat{K} \frac{R^3 \omega}{3} \rho A \right] = 0 \quad (3)$$

where  $A$  is the cross-sectional area of the horizontal tube. Identical results are obtained for the other horizontal tube in the control volume. We have confirmed our insight that the angular momentum within the control volume does not change with time.

Now we need to evaluate the second term on the right, the flux of momentum across the control surface. There are three surfaces through which we have mass and therefore momentum flux: the supply line (for which  $\vec{r} \times \vec{V} = 0$  because  $\vec{r} = 0$ ) and the two nozzles. Consider the nozzle at the end of branch  $OAB$ . For  $L \ll R$ , we have

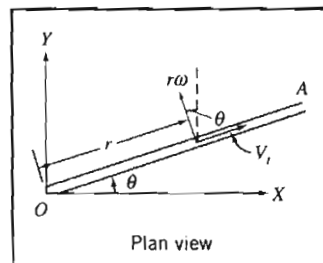

$$\vec{r}_{\text{jet}} = \vec{r}_B \approx \vec{r}|_{r=R} = (\hat{I}r \cos \theta + \hat{J}r \sin \theta)|_{r=R} = \hat{I}R \cos \theta + \hat{J}R \sin \theta$$

and for the instantaneous jet velocity  $\vec{V}_j$  we have

$$\vec{V}_j = \vec{V}_{\text{rel}} + \vec{V}_{\text{tip}} = \hat{I}V_{\text{rel}} \cos \alpha \sin \theta - \hat{J}V_{\text{rel}} \cos \alpha \cos \theta + \hat{K}V_{\text{rel}} \sin \alpha - \hat{I}\omega R \sin \theta + \hat{J}\omega R \cos \theta$$

$$\vec{V}_j = \hat{I}(V_{\text{rel}} \cos \alpha - \omega R) \sin \theta - \hat{J}(V_{\text{rel}} \cos \alpha - \omega R) \cos \theta + \hat{K}V_{\text{rel}} \sin \alpha$$

$$\vec{r}_B \times \vec{V}_j = \hat{I}RV_{\text{rel}} \sin \alpha \sin \theta - \hat{J}RV_{\text{rel}} \sin \alpha \cos \theta - \hat{K}R(V_{\text{rel}} \cos \alpha - \omega R)(\sin^2 \theta + \cos^2 \theta)$$

$$\vec{r}_B \times \vec{V}_j = \hat{I}RV_{\text{rel}} \sin \alpha \sin \theta - \hat{J}RV_{\text{rel}} \sin \alpha \cos \theta - \hat{K}R(V_{\text{rel}} \cos \alpha - \omega R)$$

The flux integral evaluated for flow crossing the control surface at location  $B$  is then

$$\int_{\text{CS}} \vec{r} \times \vec{V}_j \rho \vec{V} \cdot d\vec{A} = [\hat{I}RV_{\text{rel}} \sin \alpha \sin \theta - \hat{J}RV_{\text{rel}} \sin \alpha \cos \theta - \hat{K}R(V_{\text{rel}} \cos \alpha - \omega R)] \rho \frac{Q}{2}$$

The velocity and radius vectors for flow in the left arm must be described in terms of the same unit vectors used for the right arm. In the left arm the  $\hat{I}$  and  $\hat{J}$  components of the cross product are of opposite sign, since  $\sin(\theta + \pi) = -\sin(\theta)$  and  $\cos(\theta + \pi) = -\cos(\theta)$ . Thus for the complete CV,

$$\int_{\text{CS}} \vec{r} \times \vec{V}_j \rho \vec{V} \cdot d\vec{A} = -\hat{K}R(V_{\text{rel}} \cos \alpha - \omega R)\rho Q \quad (4)$$

Substituting terms (2), (3), and (4) into Eq. 1, we obtain

$$-T_f \hat{K} = -\hat{K}R(V_{\text{rel}} \cos \alpha - \omega R)\rho Q$$

or

$$T_f = R(V_{\text{rel}} \cos \alpha - \omega R)\rho Q$$

This expression indicates that when the sprinkler runs at constant speed the friction torque at the sprinkler pivot just balances the torque generated by the angular momentum of the two jets.

From the data given,

$$\omega R = 30 \frac{\text{rev}}{\text{min}} \times 150 \text{ mm} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{\text{m}}{1000 \text{ mm}} = 0.471 \text{ m/s}$$

Substituting gives

$$T_f = 150 \text{ mm} \times \left( 4.97 \frac{\text{m}}{\text{s}} \times \cos 30^\circ - 0.471 \frac{\text{m}}{\text{s}} \right) 999 \frac{\text{kg}}{\text{m}^3} \times 7.5 \frac{\text{L}}{\text{min}} \\ \times \frac{\text{m}^3}{1000 \text{ L}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{\text{N} \cdot \text{s}^3}{\text{kg} \cdot \text{m}} \times \frac{\text{m}}{1000 \text{ mm}}$$

$$T_f = 0.0718 \text{ N} \cdot \text{m} \longleftarrow T_f$$

This problem illustrates use of the angular momentum principle for an inertial control volume. Note that in this example the fluid particle position vector  $\vec{r}$  and velocity vector  $\vec{V}$  are time-dependent (through  $\theta$ ) in  $XYZ$  coordinates. This problem will be solved again using a noninertial (rotating)  $xyz$  coordinate system in Example Problem 4.15 (on the CD).

## Equation for Rotating Control Volume (CD-ROM)

## 4-8 THE FIRST LAW OF THERMODYNAMICS

The first law of thermodynamics is a statement of conservation of energy. Recall that the system formulation of the first law was

$$\dot{Q} - \dot{W} = \left. \frac{dE}{dt} \right)_{\text{system}} \quad (4.4a)$$

where the total energy of the system is given by

$$E_{\text{system}} = \int_{M(\text{system})} e \, dm = \int_{\mathcal{V}(\text{system})} e \rho \, d\mathcal{V} \quad (4.4b)$$

and

$$e = u + \frac{V^2}{2} + gz$$

In Eq. 4.4a, the rate of heat transfer,  $\dot{Q}$ , is positive when heat is added to the system from the surroundings; the rate of work,  $\dot{W}$ , is positive when work is done by the system on its surroundings.

To derive the control volume formulation of the first law of thermodynamics, we set

$$N = E \quad \text{and} \quad \eta = e$$

in Eq. 4.10 and obtain

$$\left. \frac{dE}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho \, d\mathcal{V} + \int_{\text{CS}} e \rho \vec{V} \cdot d\vec{A} \quad (4.53)$$

Since the system and the control volume coincide at  $t_0$ ,

$$[\dot{Q} - \dot{W}]_{\text{system}} = [\dot{Q} - \dot{W}]_{\text{control volume}}$$

In light of this, Eqs. 4.4a and 4.53 yield the control volume form of the first law of thermodynamics,

$$\dot{Q} - \dot{W} = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho \, d\mathcal{V} + \int_{\text{CS}} e \rho \vec{V} \cdot d\vec{A} \quad (4.54)$$

where

$$e = u + \frac{V^2}{2} + gz$$

Note that for steady flow the first term on the right side of Eq. 4.54 is zero.

Is Eq. 4.54 the form of the first law used in thermodynamics? Even for steady flow, Eq. 4.54 is not quite the same form used in applying the first law to control volume problems. To obtain a formulation suitable and convenient for problem solutions, let us take a closer look at the work term,  $\dot{W}$ .

### Rate of Work Done by a Control Volume

The term  $\dot{W}$  in Eq. 4.54 has a positive numerical value when work is done by the control volume on the surroundings. The rate of work done on the control volume is of opposite sign to the work done by the control volume.

The rate of work done by the control volume is conveniently subdivided into four classifications,

$$\dot{W} = \dot{W}_s + \dot{W}_{\text{normal}} + \dot{W}_{\text{shear}} + \dot{W}_{\text{other}}$$

Let us consider these separately:

### 1. Shaft Work

We shall designate shaft work  $W_s$  and hence the rate of work transferred out through the control surface by shaft work is designated  $\dot{W}_s$ . Examples of shaft work are the work produced by the steam turbine (positive shaft work) of a power plant, and the work input required to run the compressor of a refrigerator (negative shaft work).

### 2. Work Done by Normal Stresses at the Control Surface

Recall that work requires a force to act through a distance. Thus, when a force,  $\vec{F}$ , acts through an infinitesimal displacement,  $d\vec{s}$ , the work done is given by

$$\delta W = \vec{F} \cdot d\vec{s}$$

To obtain the rate at which work is done by the force, divide by the time increment,  $\Delta t$ , and take the limit as  $\Delta t \rightarrow 0$ . Thus the rate of work done by the force,  $\vec{F}$ , is

$$\dot{W} = \lim_{\Delta t \rightarrow 0} \frac{\delta W}{\Delta t} = \lim_{\Delta t \rightarrow 0} \frac{\vec{F} \cdot d\vec{s}}{\Delta t} \quad \text{or} \quad \dot{W} = \vec{F} \cdot \vec{V}$$

We can use this to compute the rate of work done by the normal and shear stresses. Consider the segment of control surface shown in Fig. 4.6. For an elementary area  $d\vec{A}$  we can write an expression for the normal stress force  $d\vec{F}_{\text{normal}}$ : It will be given by the normal stress  $\sigma_{nn}$  multiplied by the vector area element  $d\vec{A}$  (normal to the control surface).

Hence the rate of work done on the area element is

$$d\vec{F}_{\text{normal}} \cdot \vec{V} = \sigma_{nn} d\vec{A} \cdot \vec{V}$$

Since the work out across the boundaries of the control volume is the negative of the work done on the control volume, the total rate of work out of the control volume due to normal stresses is

$$\dot{W}_{\text{normal}} = -\int_{\text{CS}} \sigma_{nn} d\vec{A} \cdot \vec{V} = -\int_{\text{CS}} \sigma_{nn} \vec{V} \cdot d\vec{A}$$

### 3. Work Done by Shear Stresses at the Control Surface

Just as work is done by the normal stresses at the boundaries of the control volume, so may work be done by the shear stresses.

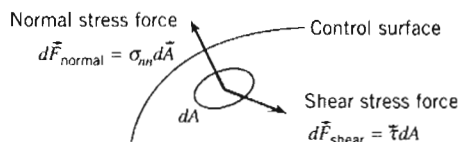


Fig. 4.6 Normal and shear stress forces.

As shown in Fig. 4.6, the shear force acting on an element of area of the control surface is given by

$$d\vec{F}_{\text{shear}} = \vec{\tau} dA$$

where the shear stress vector,  $\vec{\tau}$ , is the shear stress acting in some direction in the plane of  $dA$ .

The rate of work done on the entire control surface by shear stresses is given by

$$\int_{\text{CS}} \vec{\tau} dA \cdot \vec{V} = \int_{\text{CS}} \vec{\tau} \cdot \vec{V} dA$$

Since the work out across the boundaries of the control volume is the negative of the work done on the control volume, the rate of work out of the control volume due to shear stresses is given by

$$\dot{W}_{\text{shear}} = - \int_{\text{CS}} \vec{\tau} \cdot \vec{V} dA$$

This integral is better expressed as three terms

$$\begin{aligned} \dot{W}_{\text{shear}} &= - \int_{\text{CS}} \vec{\tau} \cdot \vec{V} dA \\ &= - \int_{A(\text{shafts})} \vec{\tau} \cdot \vec{V} dA - \int_{A(\text{solid surface})} \vec{\tau} \cdot \vec{V} dA - \int_{A(\text{ports})} \vec{\tau} \cdot \vec{V} dA \end{aligned}$$

We have already accounted for the first term, since we included  $\dot{W}_s$  previously. At solid surfaces,  $\vec{V} = 0$ , so the second term is zero (for a fixed control volume). Thus,

$$\dot{W}_{\text{shear}} = - \int_{A(\text{ports})} \vec{\tau} \cdot \vec{V} dA$$

This last term can be made zero by proper choice of control surfaces. If we choose a control surface that cuts across each port perpendicular to the flow, then  $d\vec{A}$  is parallel to  $\vec{V}$ . Since  $\vec{\tau}$  is in the plane of  $dA$ ,  $\vec{\tau}$  is perpendicular to  $\vec{V}$ . Thus, for a control surface perpendicular to  $\vec{V}$ ,

$$\vec{\tau} \cdot \vec{V} = 0 \quad \text{and} \quad \dot{W}_{\text{shear}} = 0$$

#### 4. Other Work

Electrical energy could be added to the control volume. Also electromagnetic energy, e.g., in radar or laser beams, could be absorbed. In most problems, such contributions will be absent, but we should note them in our general formulation.

With all of the terms in  $\dot{W}$  evaluated, we obtain

$$\dot{W} = \dot{W}_s - \int_{\text{CS}} \sigma_{nm} \vec{V} \cdot d\vec{A} + \dot{W}_{\text{shear}} + \dot{W}_{\text{other}} \quad (4.55)$$

#### Control Volume Equation

Substituting the expression for  $\dot{W}$  from Eq. 4.55 into Eq. 4.54 gives

$$\dot{Q} - \dot{W}_s + \int_{\text{CS}} \sigma_{nm} \vec{V} \cdot d\vec{A} - \dot{W}_{\text{shear}} - \dot{W}_{\text{other}} = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho dV + \int_{\text{CS}} e \rho \vec{V} \cdot d\vec{A}$$

Rearranging this equation, we obtain

$$\dot{Q} - \dot{W}_s - \dot{W}_{\text{shear}} - \dot{W}_{\text{other}} = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho d\mathcal{V} + \int_{\text{CS}} e \rho \vec{V} \cdot d\vec{A} - \int_{\text{CS}} \sigma_{nn} \vec{V} \cdot d\vec{A}$$

Since  $\rho = 1/v$ , where  $v$  is *specific volume*, then

$$\int_{\text{CS}} \sigma_{nn} \vec{V} \cdot d\vec{A} = \int_{\text{CS}} \sigma_{nn} v \rho \vec{V} \cdot d\vec{A}$$

Hence

$$\dot{Q} - \dot{W}_s - \dot{W}_{\text{shear}} - \dot{W}_{\text{other}} = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho d\mathcal{V} + \int_{\text{CS}} (e - \sigma_{nn} v) \rho \vec{V} \cdot d\vec{A}$$

Viscous effects can make the normal stress,  $\sigma_{nn}$ , different from the negative of the thermodynamic pressure,  $-p$ . However, for most flows of common engineering interest,  $\sigma_{nn} \approx -p$ . Then

$$\dot{Q} - \dot{W}_s - \dot{W}_{\text{shear}} - \dot{W}_{\text{other}} = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho d\mathcal{V} + \int_{\text{CS}} (e + pv) \rho \vec{V} \cdot d\vec{A}$$

Finally, substituting  $e = u + V^2/2 + gz$  into the last term, we obtain the familiar form of the first law for a control volume,

$$\dot{Q} - \dot{W}_s - \dot{W}_{\text{shear}} - \dot{W}_{\text{other}} = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho d\mathcal{V} + \int_{\text{CS}} \left( u + pv + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A} \quad (4.56)$$

Each work term in Eq. 4.56 represents the rate of work done by the control volume on the surroundings. Note that in thermodynamics, for convenience, the combination  $u + pv$  (the fluid internal energy plus what is often called the “flow work”) is usually replaced with enthalpy,  $h \equiv u + pv$  (this is one of the reasons  $h$  was invented).

### EXAMPLE 4.16 Compressor: First Law Analysis

Air at 14.7 psia, 70°F, enters a compressor with negligible velocity and is discharged at 50 psia, 100°F through a pipe with 1 ft<sup>2</sup> area. The flow rate is 20 lbm/s. The power input to the compressor is 600 hp. Determine the rate of heat transfer.


#### EXAMPLE PROBLEM 4.16

**GIVEN:** Air enters a compressor at ① and leaves at ② with conditions as shown. The air flow rate is 20 lbm/s and the power input to the compressor is 600 hp.

**FIND:** Rate of heat transfer.

**SOLUTION:**

Governing equations:

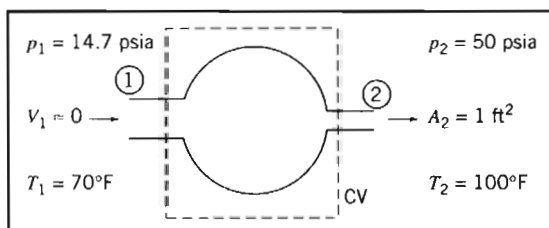

$$\begin{aligned}
 &= 0(1) \\
 &\frac{\partial}{\partial t} \int_{CV} \rho \, dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \\
 &= 0(4) = 0(1) \\
 \dot{Q} - \dot{W}_s - \dot{W}_{\text{shear}} &= \frac{\partial}{\partial t} \int_{CV} e \rho \, dV + \int_{CS} \left( u + pv + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A}
 \end{aligned}$$

- Assumptions: (1) Steady flow  
 (2) Properties uniform over inlet and outlet sections.  
 (3) Treat air as an ideal gas,  $p = \rho RT$ .  
 (4) Area of CV at ① and ② perpendicular to velocity, thus  $\dot{W}_{\text{shear}} = 0$ .  
 (5)  $z_1 = z_2$ .  
 (6) Inlet kinetic energy is negligible.

Under the assumptions listed, the first law becomes

$$\begin{aligned}
 \dot{Q} - \dot{W}_s &= \int_{CV} \left( u + pv + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A} \\
 \dot{Q} - \dot{W}_s &= \int_{CS} \left( h + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A}
 \end{aligned}$$

or

$$\dot{Q} = \dot{W}_s + \int_{CS} \left( h + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A}$$

For uniform properties, assumption (2), we can write

$$\begin{aligned}
 &\approx 0(6) \\
 \dot{Q} = \dot{W}_s + \left( h_1 + \frac{V_1^2}{2} + gz_1 \right) (-\rho_1 V_1 A_1) + \left( h_2 + \frac{V_2^2}{2} + gz_2 \right) (\rho_2 V_2 A_2)
 \end{aligned}$$

For steady flow, from conservation of mass,

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = 0$$

Therefore,  $-(\rho_1 V_1 A_1) + (\rho_2 V_2 A_2) = 0$ , or  $\rho_1 V_1 A_1 = \rho_2 V_2 A_2 = \dot{m}$ . Hence we can write

$$\begin{aligned}
 &= 0(5) \\
 \dot{Q} = \dot{W}_s + \dot{m} \left[ (h_2 - h_1) + \frac{V_2^2}{2} + g(z_2 - z_1) \right]
 \end{aligned}$$

Assume that air behaves as an ideal gas with constant  $c_p$ . Then  $h_2 - h_1 = c_p(T_2 - T_1)$ , and

$$\dot{Q} = \dot{W}_s + \dot{m} \left[ c_p(T_2 - T_1) + \frac{V_2^2}{2} \right]$$

From continuity  $V_2 = \dot{m}/\rho_2 A_2$ . Since  $p_2 = \rho_2 RT_2$ ,

$$V_2 = \frac{\dot{m}}{A_2} \frac{RT_2}{p_2} = \frac{20 \text{ lbm}}{\text{s}} \times \frac{1}{1 \text{ ft}^2} \times \frac{53.3 \text{ ft} \cdot \text{lbf}}{\text{lbm} \cdot ^\circ\text{R}} \times \frac{560^\circ\text{R}}{50 \text{ lbf}} \times \frac{\text{in.}^2}{144 \text{ in.}^2}$$

$$V_2 = 82.9 \text{ ft/s}$$

$$\dot{Q} = \dot{W}_s + \dot{m} c_p (T_2 - T_1) + \dot{m} \frac{V_2^2}{2}$$



Note that power input is to the CV, so  $\dot{W}_s = -600$  hp, and

$$\begin{aligned}\dot{Q} = & -600 \text{ hp} \times \frac{550 \text{ ft} \cdot \text{lbf}}{\text{hp} \cdot \text{s}} \times \frac{\text{Btu}}{778 \text{ ft} \cdot \text{lbf}} + \frac{20 \text{ lbm}}{\text{s}} \times 0.24 \frac{\text{Btu}}{\text{lbm} \cdot ^\circ\text{R}} \times 30^\circ\text{R} \\ & + \frac{20 \text{ lbm}}{\text{s}} \times \frac{(82.9)^2 \text{ ft}^2}{2 \text{ s}^2} \times \frac{\text{slug}}{32.2 \text{ lbm}} \times \frac{\text{Btu}}{778 \text{ ft} \cdot \text{lbf}} \times \frac{\text{lbf} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}}\end{aligned}$$

$$\dot{Q} = -277 \text{ Btu/s} \leftarrow \text{(heat rejection)} \dot{Q}$$

This problem illustrates use of the first law of thermodynamics for a control volume. It is also an example of the care that must be taken with unit conversions for mass, energy, and power.

### EXAMPLE 4.17 Tank Filling: First Law Analysis

A tank of  $0.1 \text{ m}^3$  volume is connected to a high-pressure air line; both line and tank are initially at a uniform temperature of  $20^\circ\text{C}$ . The initial tank gage pressure is  $100 \text{ kPa}$ . The absolute line pressure is  $2.0 \text{ MPa}$ ; the line is large enough so that its temperature and pressure may be assumed constant. The tank temperature is monitored by a fast-response thermocouple. At the instant after the valve is opened, the tank temperature rises at the rate of  $0.05^\circ\text{C/s}$ . Determine the instantaneous flow rate of air into the tank if heat transfer is neglected.


### EXAMPLE PROBLEM 4.17

**GIVEN:** Air supply pipe and tank as shown. At  $t = 0^+$ ,  $\partial T/\partial t = 0.05^\circ\text{C/s}$ .

**FIND:**  $\dot{m}$  at  $t = 0^+$ .

**SOLUTION:**

Choose CV shown, apply energy equation.

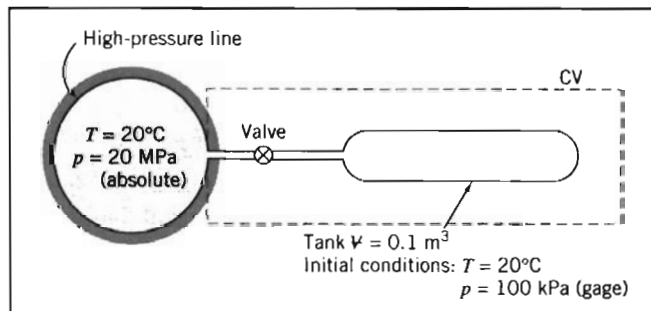

$$\begin{aligned} &= 0(1) = 0(2) = 0(3) = 0(4) \\ \text{Governing equation: } \cancel{\dot{Q}} - \cancel{\dot{W}_s} - \cancel{\dot{W}_{\text{shear}}} - \cancel{\dot{W}_{\text{other}}} &= \frac{\partial}{\partial t} \int_{\text{CV}} e \rho dV + \int_{\text{CS}} (e + pv) \rho \vec{V} \cdot d\vec{A} \\ &= 0(5) = 0(6) \\ e &= u + \frac{V^2}{2} + gz \end{aligned}$$

- Assumptions: (1)  $\dot{Q} = 0$  (given).  
 (2)  $\dot{W}_s = 0$ .  
 (3)  $\dot{W}_{\text{shear}} = 0$ .  
 (4)  $\dot{W}_{\text{other}} = 0$ .  
 (5) Velocities in line and tank are small.  
 (6) Neglect potential energy.  
 (7) Uniform flow at tank inlet.  
 (8) Properties uniform in tank.  
 (9) Ideal gas,  $p = \rho RT$ ,  $du = c_v dT$ .

Then

$$\frac{\partial}{\partial t} \int_{\text{CV}} u \rho dV + (u + pv)|_{\text{line}} (-\rho VA) = 0$$

This expresses the fact that the gain in energy in the tank is due to influx of fluid energy (in the form of enthalpy  $h = u + pv$ ) from the line. We are interested in the initial instant, when  $T$  is uniform at  $20^\circ\text{C}$ , so  $u_{\text{tank}} = u_{\text{line}} = u$ , the internal energy at  $T$ ; also,  $pv_{\text{line}} = RT_{\text{line}} = RT$ , and

$$\frac{\partial}{\partial t} \int_{\text{CV}} u \rho dV + (u + RT)(-\rho VA) = 0$$

Since tank properties are uniform,  $\partial/\partial t$  may be replaced by  $d/dt$ , and

$$\frac{d}{dt}(uM) = (u + RT)\dot{m}$$

(where  $M$  is the instantaneous mass in the tank and  $\dot{m} = \rho VA$  is the mass flow rate), or

$$u \frac{dM}{dt} + M \frac{du}{dt} = u\dot{m} + RT\dot{m} \quad (1)$$

The term  $dM/dt$  may be evaluated from continuity:

$$\text{Governing equation: } \frac{\partial}{\partial t} \int_{\text{CV}} \rho dV + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0$$

$$\frac{dM}{dt} + (-\rho VA) = 0 \quad \text{or} \quad \frac{dM}{dt} = \dot{m}$$

Substituting in Eq. 1 gives

$$u\dot{m} + Mc_v \frac{dT}{dt} = u\dot{m} + RT\dot{m}$$

or

$$\dot{m} = \frac{Mc_v (dT/dt)}{RT} = \frac{\rho V c_v (dT/dt)}{RT} \quad (2)$$

But at  $t = 0$ ,  $p_{\text{tank}} = 100 \text{ kPa}$  (gage), and

$$\rho = \rho_{\text{tank}} = \frac{p_{\text{tank}}}{RT} = \frac{(1.00 + 1.01)10^5 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{293 \text{ K}} = 2.39 \text{ kg/m}^3$$

Substituting into Eq. 2, we obtain

$$\dot{m} = \frac{2.39 \text{ kg}}{\text{m}^3} \times 0.1 \text{ m}^3 \times \frac{717 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times \frac{0.05 \text{ K}}{\text{s}} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{293 \text{ K}} \times \frac{1000 \text{ g}}{\text{kg}}$$

$$\dot{m} = 0.102 \text{ g/s} \quad \leftarrow \quad \dot{m}$$

This problem illustrates use of the first law of thermodynamics for a control volume. It is also an example of the care that must be taken with unit conversions for mass, energy, and power.

## 4-9 THE SECOND LAW OF THERMODYNAMICS

Recall that the system formulation of the second law is

$$\left. \frac{dS}{dt} \right)_{\text{system}} \geq \frac{1}{T} \dot{Q} \quad (4.5a)$$

where the total entropy of the system is given by

$$S_{\text{system}} = \int_{M(\text{system})} s \, dm = \int_{\mathcal{V}(\text{system})} s \rho \, d\mathcal{V} \quad (4.5b)$$

To derive the control volume formulation of the second law of thermodynamics, we set

$$N = S \quad \text{and} \quad \eta = s$$

in Eq. 4.10 and obtain

$$\left. \frac{dS}{dt} \right)_{\text{system}} = \frac{\partial}{\partial t} \int_{\text{CV}} s \rho \, d\mathcal{V} + \int_{\text{CS}} s \rho \vec{V} \cdot d\vec{A} \quad (4.57)$$

The system and the control volume coincide at  $t_0$ ; thus in Eq. 4.5a,

$$\left. \frac{1}{T} \dot{Q} \right)_{\text{system}} = \left. \frac{1}{T} \dot{Q} \right)_{\text{CV}} = \int_{\text{CS}} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA$$

In light of this, Eqs. 4.5a and 4.57 yield the control volume formulation of the second law of thermodynamics

$$\frac{\partial}{\partial t} \int_{\text{CV}} s \rho \, d\mathcal{V} + \int_{\text{CS}} s \rho \vec{V} \cdot d\vec{A} \geq \int_{\text{CS}} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \quad (4.58)$$

In Eq. 4.58, the factor  $(\dot{Q}/A)$  represents the heat flux per unit area into the control volume through the area element  $dA$ . To evaluate the term

$$\int_{\text{CS}} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA$$



both the local heat flux,  $(\dot{Q}/A)$ , and local temperature,  $T$ , must be known for each area element of the control surface.

## 4-10 SUMMARY

In this chapter we wrote the basic laws for a system: mass conservation (or continuity), Newton's second law, the angular-momentum equation, the first law of thermodynamics, and the second law of thermodynamics. We then developed an equation (sometimes called the Reynolds Transport Theorem) for relating system formulations to control volume formulations. Using this we derived control volume forms of:

- ✓ The mass conservation equation (sometimes called the continuity equation).
- ✓ Newton's second law (in other words, a momentum equation) for:
  - An inertial control volume.
  - A control volume with rectilinear acceleration.
  - \*A control volume with arbitrary acceleration (on the CD).
- ✓ \*The angular-momentum equation for:
  - A fixed control volume.
  - A rotating control volume (on the CD).
- ✓ The first law of thermodynamics (or energy equation).
- ✓ The second law of thermodynamics.

We discussed the physical meaning of each term appearing in these control volume equations, and used the equations for the solution of a variety of flow problems. In particular, we used a differential control volume\* to derive a famous equation in fluid mechanics—the Bernoulli equation—and while doing so learned about the restrictions on its use in solving problems.

## PROBLEMS

- 4.1 In order to cool a six-pack as quickly as possible, it is placed in a freezer for a period of 1 hr. If the room temperature is 25°C and the cooled beverage is at a final temperature of 5°C, determine the change in specific entropy of the beverage.
- 4.2 A mass of 3 kg falls freely a distance of 5 m before contacting a spring attached to the ground. If the spring stiffness is 400 N/m, what is the maximum spring compression?
- 4.3 A fully loaded Boeing 777-200 jet transport aircraft weighs 715,000 lbf. The pilot brings the 2 engines to full takeoff thrust of 102,000 lbf each before releasing the brakes. Neglecting aerodynamic and rolling resistance, estimate the minimum runway length and time needed to reach a takeoff speed of 140 mph. Assume engine thrust remains constant during ground roll.
- 4.4 A police investigation of tire marks showed that a car traveling along a straight level street had skidded to a stop for a total distance of 50 m after the brakes were applied.

\* These topics apply to a section that may be omitted without loss of continuity in the text material.


The coefficient of friction between tires and pavement is estimated to be  $\mu = 0.6$ . What was the probable minimum speed of the car when the brakes were applied?

- 4.5 A small steel ball of radius  $r$ , placed atop a much larger sphere of radius  $R$ , begins to roll under the influence of gravity. Rolling resistance and air resistance are negligible. As the speed of the ball increases, it leaves the surface of the sphere and becomes a projectile. Determine the location at which the ball loses contact with the sphere.
- 4.6 Air at  $20^\circ\text{C}$  and an absolute pressure of 1 atm is compressed adiabatically, without friction, to an absolute pressure of 3 atm. Determine the internal energy change.
- 4.7 The average rate of heat loss from a person to the surroundings when not actively working is about 300 Btu/hr. Suppose that in an auditorium with volume of approximately  $1.2 \times 10^7 \text{ ft}^3$ , containing 6000 people, the ventilation system fails. How much does the internal energy of the air in the auditorium increase during the first 15 min after the ventilation system fails? Considering the auditorium and people as a system, and assuming no heat transfer to the surroundings, how much does the internal energy of the system change? How do you account for the fact that the temperature of the air increases? Estimate the rate of temperature rise under these conditions.
- 4.8 In an experiment with a can of soda, it took 3 hr to cool from an initial temperature of  $25^\circ\text{C}$  to  $10^\circ\text{C}$  in a  $5^\circ\text{C}$  refrigerator. If the can is now taken from the refrigerator and placed in a room at  $20^\circ\text{C}$ , how long will the can take to reach  $15^\circ\text{C}$ ? You may assume that for both processes the heat transfer is modeled by  $\dot{Q} \approx -k(T - T_{\text{amb}})$ , where  $T$  is the can temperature,  $T_{\text{amb}}$  is the ambient temperature, and  $k$  is a heat transfer coefficient.




- 4.9 The mass of an aluminum beverage can is 20 g. Its diameter and height are 65 and 120 mm, respectively. When full, the can contains 354 milliliters of soft drink with  $\text{SG} = 1.05$ . Evaluate the height of the center of gravity of the can as a function of liquid level. At what level would the can be least likely to tip over when subjected to a steady lateral acceleration? Calculate the minimum coefficient of static friction for which the full can would tip rather than slide on a horizontal surface. Plot the minimum coefficient of static friction for which the can would tip rather than slide on a horizontal surface as a function of beverage level in the can.
- 4.10 The velocity field in the region shown is given by  $\vec{V} = az\hat{j} + b\hat{k}$ , where  $a = 10 \text{ s}^{-1}$  and  $b = 5 \text{ m/s}$ . For the  $1 \text{ m} \times 1 \text{ m}$  triangular control volume (depth  $w = 1 \text{ m}$  perpendicular to the diagram), an element of area ① may be represented by  $w(-dz\hat{j} + dy\hat{k})$  and an element of area ② by  $w dz\hat{j}$ .

- (a) Find an expression for  $\vec{V} \cdot d\vec{A}_1$ .
- (b) Evaluate  $\int_{A_1} \vec{V} \cdot d\vec{A}_1$ .
- (c) Find an expression for  $\vec{V} \cdot d\vec{A}_2$ .
- (d) Find an expression for  $\vec{V}(\vec{V} \cdot d\vec{A}_2)$ .
- (e) Evaluate  $\int_{A_2} \vec{V}(\vec{V} \cdot d\vec{A}_2)$ .

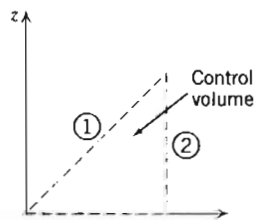


P4.10

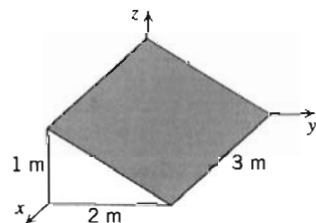


P4.11

- 4.11 The shaded area shown is in a flow where the velocity field is given by  $\vec{V} = ax\hat{i} - by\hat{j}$ ;  $a = b = 1 \text{ s}^{-1}$ , and the coordinates are measured in meters. Evaluate the volume flow rate and the momentum flux through the shaded area.
- 4.12 Obtain expressions for the volume flow rate and the momentum flux through cross section ① of the control volume shown in the diagram.

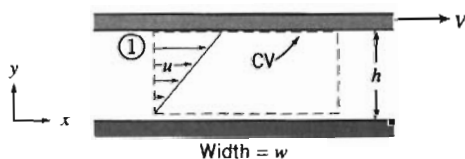

P4.12

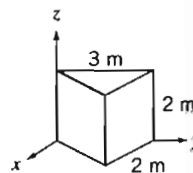


P4.13

- 4.13 The area shown shaded is in a flow where the velocity field is given by  $\vec{V} = -ax\hat{i} + by\hat{j} + c\hat{k}$ ;  $a = b = 1 \text{ s}^{-1}$  and  $c = 1 \text{ m/s}$ . Write a vector expression for an element of the shaded area. Evaluate the integrals  $\int \vec{V} \cdot d\vec{A}$  and  $\int \vec{V}(\vec{V} \cdot d\vec{A})$  over the shaded area.
- 4.14 The velocity distribution for laminar flow in a long circular tube of radius  $R$  is given by the one-dimensional expression,


$$\vec{V} = u\hat{i} = u_{\max} \left[ 1 - \left( \frac{r}{R} \right)^2 \right] \hat{i}$$

For this profile obtain expressions for the volume flow rate and the momentum flux through a section normal to the pipe axis.

- 4.15 For the flow of Problem 4.12, obtain an expression for the kinetic energy flux,  $\int (V^2/2) \rho \vec{V} \cdot d\vec{A}$ , through cross section ① of the control volume shown.
- 4.16 For the flow of Problem 4.14, obtain an expression for the kinetic energy flux,  $\int (V^2/2) \rho \vec{V} \cdot d\vec{A}$ , through a section normal to the pipe axis.
- 4.17 Consider steady, incompressible flow through the device shown. Determine the magnitude and direction of the volume flow rate through port 3.

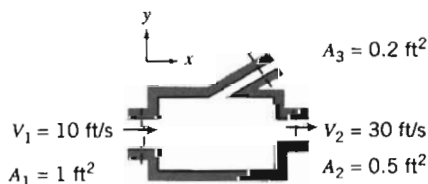


P4.17

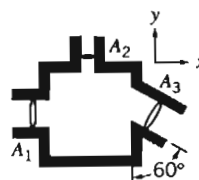


P4.18

- 4.18 Fluid with  $1050 \text{ kg/m}^3$  density is flowing steadily through the rectangular box shown. Given  $A_1 = 0.05 \text{ m}^2$ ,  $A_2 = 0.01 \text{ m}^2$ ,  $A_3 = 0.06 \text{ m}^2$ ,  $\vec{V}_1 = 4\hat{i} \text{ m/s}$ , and  $\vec{V}_2 = 8\hat{j} \text{ m/s}$ , determine velocity  $\vec{V}_3$ .
- 4.19 In the incompressible flow through the device shown, velocities may be considered uniform over the inlet and outlet sections. The following conditions are known:  $A_1 = 0.1 \text{ m}^2$ ,  $A_2 = 0.2 \text{ m}^2$ ,  $A_3 = 0.15 \text{ m}^2$ ,  $V_1 = 10e^{-i\theta} \text{ m/s}$ , and  $V_2 = 2 \cos(2\pi t)$

m/s (t in seconds). Obtain an expression for the velocity at section ③, and plot  $V_3$  as a function of time. At what instant does  $V_3$  first become zero? What is the total mean volumetric flow at section ③?

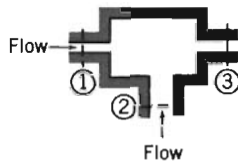

P4.19

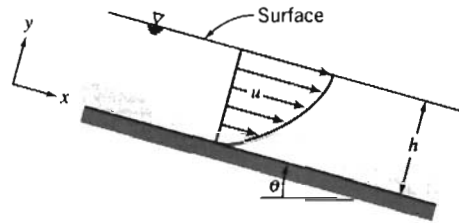

P4.20

- 4.20 Oil flows steadily in a thin layer down an inclined plane. The velocity profile is

$$u = \frac{\rho g \sin \theta}{\mu} \left[ hy - \frac{y^2}{2} \right]$$

Express the mass flow rate per unit width in terms of  $\rho$ ,  $\mu$ ,  $g$ ,  $\theta$ , and  $h$ .

- 4.21 Water enters a wide, flat channel of height  $2h$  with a uniform velocity of 5 m/s. At the channel outlet the velocity distribution is given by

$$\frac{u}{u_{\max}} = 1 - \left( \frac{y}{h} \right)^2$$

where  $y$  is measured from the centerline of the channel. Determine the exit centerline velocity,  $u_{\max}$ .

- 4.22 Incompressible fluid flows steadily through a plane diverging channel. At the inlet, of height  $H$ , the flow is uniform with magnitude  $V_1$ . At the outlet, of height  $2H$ , the velocity profile is


$$V_2 = V_m \cos \left( \frac{\pi y}{2H} \right)$$

where  $y$  is measured from the channel centerline. Express  $V_m$  in terms of  $V_1$ .

- 4.23 Water flows steadily through a pipe of length  $L$  and radius  $R = 3$  in. Calculate the uniform inlet velocity,  $U$ , if the velocity distribution across the outlet is given by

$$u = u_{\max} \left[ 1 - \frac{r^2}{R^2} \right]$$

and  $u_{\max} = 10$  ft/s.

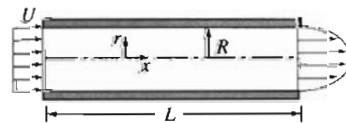


P4.23


- 4.24 The velocity profile for laminar flow in an annulus is given by

$$u(r) = -\frac{\Delta p}{4\mu L} \left[ R_o^2 - r^2 + \frac{R_o^2 - R_i^2}{\ln(R_i/R_o)} \ln \frac{R_o}{r} \right]$$

where  $\Delta p/L = -10$  kPa/m is the pressure gradient,  $\mu$  is the viscosity (SAE 10 oil at 20°C), and  $R_o = 5$  mm and  $R_i = 1$  mm are the outer and inner radii. Find the volume flow rate, the average velocity, and the maximum velocity. Plot the velocity distribution.

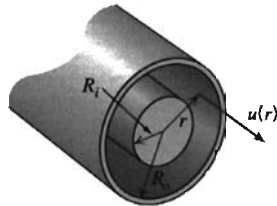


P4.24

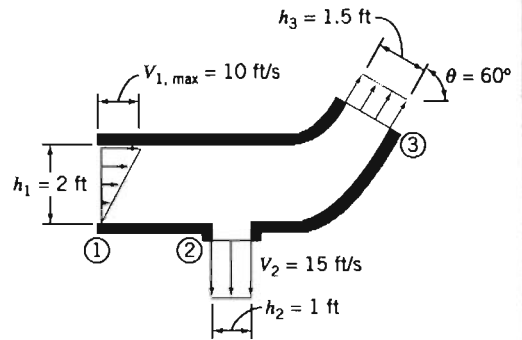

P4.25

- 4.25 A two-dimensional reducing bend has a linear velocity profile at section ①. The flow is uniform at sections ② and ③. The fluid is incompressible and the flow is steady. Find the magnitude and direction of the uniform velocity at section ③.
- 4.26 Water enters a two-dimensional, square channel of constant width,  $h = 75.5$  mm, with uniform velocity,  $U$ . The channel makes a  $90^\circ$  bend that distorts the flow to produce the linear velocity profile shown at the exit, with  $v_{\max} = 2v_{\min}$ . Evaluate  $v_{\min}$ , if  $U = 7.5$  m/s.

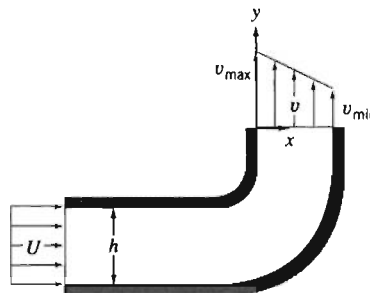


P4.26, 4.78

- 4.27 A porous round tube with  $D = 60$  mm carries water. The inlet velocity is uniform with  $V_1 = 7.0$  m/s. Water flows radially and axisymmetrically outward through the porous walls with velocity distribution

$$v = V_0 \left[ 1 - \left( \frac{x}{L} \right)^2 \right]$$

where  $V_0 = 0.03$  m/s and  $L = 0.950$  m. Calculate the mass flow rate inside the tube at  $x = L$ .

- 4.28 A hydraulic accumulator is designed to reduce pressure pulsations in a machine tool hydraulic system. For the instant shown, determine the rate at which the accumulator gains or loses hydraulic oil.

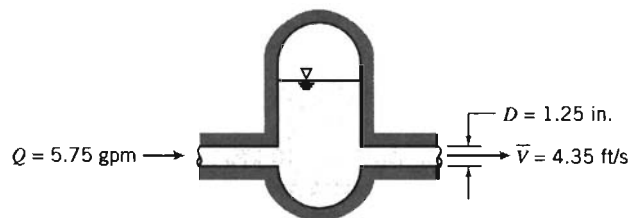

P4.28




- 4.29 A tank of  $0.5 \text{ m}^3$  volume contains compressed air. A valve is opened and air escapes with a velocity of  $300 \text{ m/s}$  through an opening of  $130 \text{ mm}^2$  area. Air temperature passing through the opening is  $-15^\circ\text{C}$  and the absolute pressure is  $350 \text{ kPa}$ . Find the rate of change of density of the air in the tank at this moment.
- 4.30 Viscous liquid from a circular tank,  $D = 300 \text{ mm}$  in diameter, drains through a long circular tube of radius  $R = 50 \text{ mm}$ . The velocity profile at the tube discharge is

$$u = u_{\max} \left[ 1 - \left( \frac{r}{R} \right)^2 \right]$$

Show that the average speed of flow in the drain tube is  $\bar{V} = \frac{1}{2} u_{\max}$ . Evaluate the rate of change of liquid level in the tank at the instant when  $u_{\max} = 0.155 \text{ m/s}$ .

- 4.31 A rectangular tank used to supply water for a Reynolds flow experiment is  $230 \text{ mm}$  deep. Its width and length are  $W = 150 \text{ mm}$  and  $L = 230 \text{ mm}$ . Water flows from the outlet tube (inside diameter  $D = 6.35 \text{ mm}$ ) at Reynolds number  $Re = 2000$ , when the tank is half full. The supply valve is closed. Find the rate of change of water level in the tank at this instant.
- 4.32 Air enters a tank through an area of  $0.2 \text{ ft}^2$  with a velocity of  $15 \text{ ft/s}$  and a density of  $0.03 \text{ slug/ft}^3$ . Air leaves with a velocity of  $5 \text{ ft/s}$  and a density equal to that in the tank. The initial density of the air in the tank is  $0.02 \text{ slug/ft}^3$ . The total tank volume is  $20 \text{ ft}^3$  and the exit area is  $0.4 \text{ ft}^2$ . Find the initial rate of change of density in the tank.
- 4.33 A cylindrical tank,  $0.3 \text{ m}$  in diameter, drains through a hole in its bottom. At the instant when the water depth is  $0.6 \text{ m}$ , the flow rate from the tank is observed to be  $4 \text{ kg/s}$ . Determine the rate of change of water level at this instant.

- 4.34 A home water filter container as shown is initially completely empty. The upper chamber is now filled to a depth of  $80 \text{ mm}$  with water. How long will it take the lower chamber water level to just touch the bottom of the filter? How long will it take for the water level in the lower chamber to reach  $50 \text{ mm}$ ? Note that both water surfaces are at atmospheric pressure, and the filter material itself can be assumed to take up none of the volume. Plot the lower chamber water level as a function of time. For the filter, the flow rate is given by  $Q = kH$  where  $k = 2 \times 10^{-4} \text{ m}^2/\text{s}$  and  $H$  (m) is the net hydrostatic head across the filter.

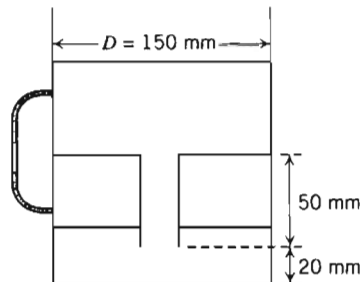

P4.34

- 4.35 A recent TV news story about lowering Lake Shafer near Monticello, Indiana, by increasing the discharge through the dam that impounds the lake, gave the following information for flow through the dam:

Normal flow rate	290 cfs
Flow rate during draining of lake	2000 cfs


(The flow rate during draining was stated to be equivalent to  $16,000 \text{ gal/s}$ .) The announcer also said that during draining the lake level was expected to fall at the rate of

1 ft every 8 hr. Calculate the actual flow rate during draining in gal/s. Estimate the surface area of the lake.

- 4.36 A cylindrical tank, of diameter  $D = 50$  mm, drains through an opening,  $d = 5$  mm, in the bottom of the tank. The speed of the liquid leaving the tank is approximately  $V = \sqrt{2gy}$ , where  $y$  is the height from the tank bottom to the free surface. If the tank is initially filled with water to  $y_0 = 0.4$  m, determine the water depth at  $t = 12$  s. Plot  $y/y_0$  versus  $t$  with  $y_0$  as a parameter for  $0.1 \leq y_0 \leq 1$  m. Plot  $y/y_0$  versus  $t$  with  $D/d$  as a parameter for  $2 \leq D/d \leq 10$  and  $y_0 = 0.4$  m.
- 4.37 For the conditions of Problem 4.36, estimate the time required to drain the tank to depth  $y = 20$  mm. Plot time to drain the tank as a function of  $y/y_0$  for  $0.1 \leq y_0 \leq 1$  m with  $d/D$  as a parameter for  $0.1 \leq d/D \leq 0.5$ .
- 4.38 A conical flask contains water to height  $H = 36.8$  mm, where the flask diameter is  $D = 29.4$  mm. Water drains out through a smoothly rounded hole of diameter  $d = 7.35$  mm at the apex of the cone. The flow speed at the exit is approximately  $V = (2gy)^{1/2}$ , where  $y$  is the height of the liquid free surface above the hole. A stream of water flows into the top of the flask at constant volume flow rate,  $Q = 3.75 \times 10^{-7}$  m<sup>3</sup>/hr. Find the volume flow rate from the bottom of the flask. Evaluate the direction and rate of change of water surface level in the flask at this instant.
- 4.39 A conical funnel of half-angle  $\theta = 15^\circ$ , with maximum diameter  $D = 70$  mm and height  $H$ , drains through a hole (diameter  $d = 3.12$  mm) in its bottom. The speed of the liquid leaving the funnel is approximately  $V = (2gy)^{1/2}$ , where  $y$  is the height of the liquid free surface above the hole. Find the rate of change of surface level in the funnel at the instant when  $y = H/2$ .
- 4.40 Water flows steadily past a porous flat plate. Constant suction is applied along the porous section. The velocity profile at section  $cd$  is


$$\frac{u}{U_\infty} = 3 \left[ \frac{y}{\delta} \right] - 2 \left[ \frac{y}{\delta} \right]^{1.5}$$

Evaluate the mass flow rate across section  $bc$ .

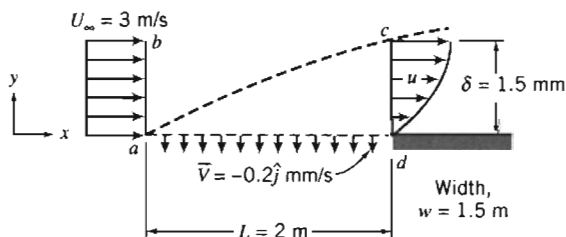


P4.40, 4.41

- 4.41 Consider incompressible steady flow of standard air in a boundary layer on the length of porous surface shown. Assume the boundary layer at the downstream end of the surface has an approximately parabolic velocity profile,  $u/U_\infty = 2(y/\delta) - (y/\delta)^2$ . Uniform suction is applied along the porous surface, as shown. Calculate the volume flow rate across surface  $cd$ , through the porous suction surface, and across surface  $bc$ .
- 4.42 A tank of fixed volume contains brine with initial density,  $\rho_i$ , greater than water. Pure water enters the tank steadily and mixes thoroughly with the brine in the tank. The liquid level in the tank remains constant. Derive expressions for (a) the rate of change of density of the liquid mixture in the tank and (b) the time required for the density to reach the value  $\rho_f$ , where  $\rho_i > \rho_f > \rho_{H_2O}$ .

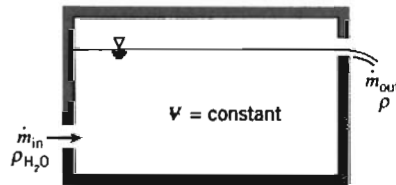

P4.42


- 4.43 A conical funnel of half-angle  $\theta$  drains through a small hole of diameter  $d$  at the vertex. The speed of the liquid leaving the funnel is approximately  $V = \sqrt{2gy}$ , where  $y$  is the height of the liquid free surface above the hole. The funnel initially is filled to height  $y_0$ . Obtain an expression for the time,  $t$ , required to drain the funnel. Express the result in terms of the initial volume,  $V_0$ , of liquid in the funnel and the initial volume flow rate,  $Q_0 = A\sqrt{2gy_0} = AV_0$ . If the hole diameter is  $d = 5$  mm, plot the time to drain the funnel as a function of  $y_0$  over the range  $0.1 \leq y_0 \leq 1$  m with angle  $\theta$  as a parameter for  $15^\circ \leq \theta \leq 45^\circ$ .
- 4.44 Over time, air seeps through pores in the rubber of high-pressure bicycle tires. The saying is that a tire loses pressure at the rate of "a pound [1 psi] a day." The true rate of pressure loss is not constant; instead, the instantaneous leakage mass flow rate is proportional to the air density in the tire and to the gage pressure in the tire,  $\dot{m} \propto \rho p$ . Because the leakage rate is slow, air in the tire is nearly isothermal. Consider a tire that initially is inflated to 0.7 MPa (gage). Assume the initial rate of pressure loss is 1 psi per day. Estimate how long it will take for the pressure to drop to 500 kPa. How accurate is "a pound a day" over the entire 30 day period? Plot the pressure as a function of time over the 30 day period. Show the rule-of-thumb results for comparison.
- 4.45 Evaluate the net rate of flux of momentum out through the control surface of Problem 4.18.
- 4.46 For the conditions of Problem 4.21, evaluate the ratio of the  $x$ -direction momentum flux at the channel outlet to that at the inlet.
- 4.47 For the conditions of Problem 4.23, evaluate the ratio of the  $x$ -direction momentum flux at the pipe outlet to that at the inlet.
- 4.48 Evaluate the net momentum flux through the bend of Problem 4.25, if the depth normal to the diagram is  $w = 3$  ft.
- 4.49 Evaluate the net momentum flux through the channel of Problem 4.26. Would you expect the outlet pressure to be higher, lower, or the same as the inlet pressure? Why?
- 4.50 Find the force required to hold the plug in place at the exit of the water pipe. The flow rate is  $1.5 \text{ m}^3/\text{s}$ , and the upstream pressure is 3.5 MPa.

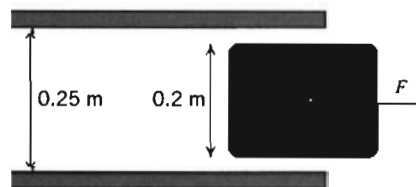


P4.50

- 4.51 A large tank of height  $h = 1$  m and diameter  $D = 0.6$  m is affixed to a cart as shown. Water issues from the tank through a nozzle of diameter  $d = 10$  mm. The speed of the liquid leaving the tank is approximately  $V = \sqrt{2gy}$  where  $y$  is the height from the

nozzle to the free surface. Determine the tension in the wire when  $y = 0.8$  m. Plot the tension in the wire as a function of water depth for  $0 \leq y \leq 0.8$  m.

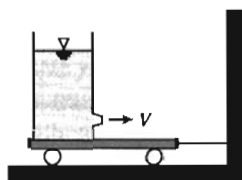


P4.51

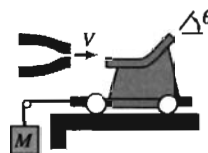


P4.52

- 4.52 A jet of water issuing from a stationary nozzle at 15 m/s ( $A_j = 0.05$  m<sup>2</sup>) strikes a turning vane mounted on a cart as shown. The vane turns the jet through angle  $\theta = 50^\circ$ . Determine the value of  $M$  required to hold the cart stationary. If the vane angle  $\theta$  is adjustable, plot the mass,  $M$ , needed to hold the cart stationary versus  $\theta$  for  $0 \leq \theta \leq 180^\circ$ .
- 4.53 A vertical plate has a sharp-edged orifice at its center. A water jet of speed  $V$  strikes the plate concentrically. Obtain an expression for the external force needed to hold the plate in place, if the jet leaving the orifice also has speed  $V$ . Evaluate the force for  $V = 5$  m/s,  $D = 100$  mm, and  $d = 25$  mm. Plot the required force as a function of diameter ratio for a suitable range of diameter  $d$ .

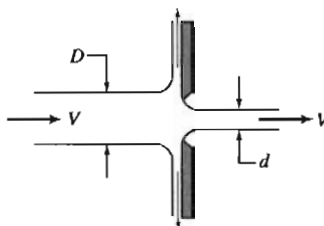


P4.53

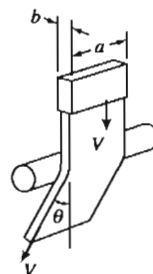


P4.54

- 4.54 A circular cylinder inserted across a stream of flowing water deflects the stream through angle  $\theta$ , as shown. (This is termed the "Coanda effect.") For  $a = 0.5$  in.,  $b = 0.1$  in.,  $V = 10$  ft/s, and  $\theta = 20^\circ$ , determine the horizontal component of the force on the cylinder caused by the flowing water.
- 4.55 A farmer purchases 675 kg of bulk grain from the local co-op. The grain is loaded into his pickup truck from a hopper with an outlet diameter of 0.3 m. The loading operator determines the payload by observing the indicated gross mass of the truck as a function of time. The grain flow from the hopper ( $\dot{m} = 40$  kg/s) is terminated when the indicated scale reading reaches the desired gross mass. If the grain density is  $600$  kg/m<sup>3</sup>, determine the true payload.
- 4.56 Water flows steadily through a fire hose and nozzle. The hose is 75 mm inside diameter, and the nozzle tip is 25 mm i.d.; water gage pressure in the hose is 510 kPa, and the stream leaving the nozzle is uniform. The exit speed and pressure are 32 m/s and atmospheric, respectively. Find the force transmitted by the coupling between the nozzle and hose. Indicate whether the coupling is in tension or compression.
- 4.57 A shallow circular dish has a sharp-edged orifice at its center. A water jet, of speed  $V$ , strikes the dish concentrically. Obtain an expression for the external force needed to hold the dish in place if the jet issuing from the orifice also has speed  $V$ . Evaluate the force for  $V = 5$  m/s,  $D = 100$  mm, and  $d = 20$  mm. Plot the required force as a function of the angle  $\theta$  ( $0 \leq \theta \leq 90^\circ$ ) with diameter ratio as a parameter for a suitable range of diameter  $d$ .

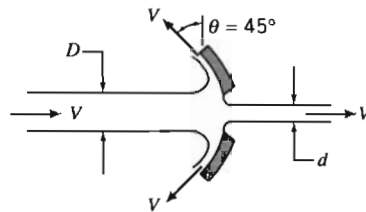


P4.57

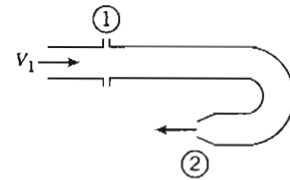


P4.58

- 4.58 Water is flowing steadily through the 180° elbow shown. At the inlet to the elbow the gage pressure is 96 kPa. The water discharges to atmospheric pressure. Assume properties are uniform over the inlet and outlet areas:  $A_1 = 2600 \text{ mm}^2$ ,  $A_2 = 650 \text{ mm}^2$ , and  $V_1 = 3.05 \text{ m/s}$ . Find the horizontal component of force required to hold the elbow in place.
- 4.59 A 180° elbow takes in water at an average velocity of 1 m/s and a pressure of 400 kPa (gage) at the inlet, where the diameter is 0.25 m. The exit pressure is 50 kPa, and the diameter is 0.05 m. What is the force required to hold the elbow in place?
- 4.60 Water flows steadily through the nozzle shown, discharging to atmosphere. Calculate the horizontal component of force in the flanged joint. Indicate whether the joint is in tension or compression.

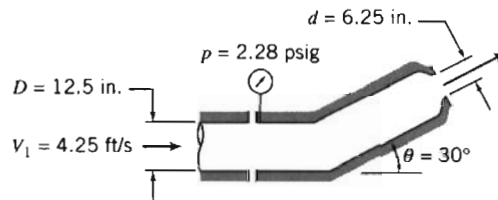


P4.60

- 4.61 Assume the bend of Problem 4.26 is a segment of a larger channel and lies in a horizontal plane. The inlet pressure is 170 kPa (abs), and the outlet pressure is 130 kPa (abs). Find the force required to hold the bend in place.
- 4.62 A flat plate orifice of 50 mm diameter is located at the end of a 100 mm diameter pipe. Water flows through the pipe and orifice at  $0.05 \text{ m}^3/\text{s}$ . The diameter of the water jet downstream from the orifice is 35 mm. Calculate the external force required to hold the orifice in place. Neglect friction on the pipe wall.

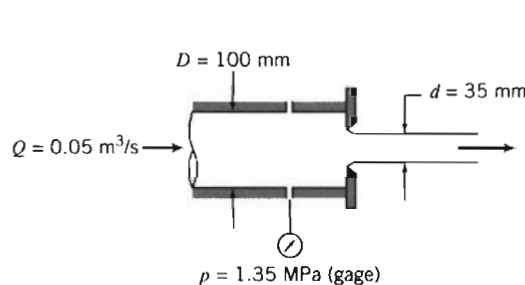

P4.62

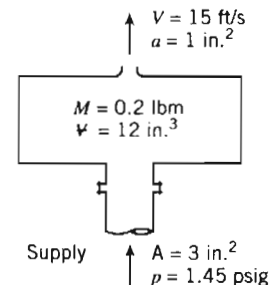


P4.63


- 4.63 A spray system is shown in the diagram. Water is supplied at  $p = 1.45 \text{ psig}$ , through the flanged opening of area  $A = 3 \text{ in.}^2$ . The water leaves in a steady free jet at atmospheric pressure. The jet area and speed are  $a = 1.0 \text{ in.}^2$  and  $V = 15 \text{ ft/s}$ . The mass of the spray system is 0.2 lbm and it contains  $\Psi = 12 \text{ in.}^3$  of water. Find the force exerted on the supply pipe by the spray system.



- 4.64 The nozzle shown discharges a sheet of water through a  $180^\circ$  arc. The water speed is  $15 \text{ m/s}$  and the jet thickness is  $30 \text{ mm}$  at a radial distance of  $0.3 \text{ m}$  from the centerline of the supply pipe. Find (a) the volume flow rate of water in the jet sheet and (b) the  $y$  component of force required to hold the nozzle in place.

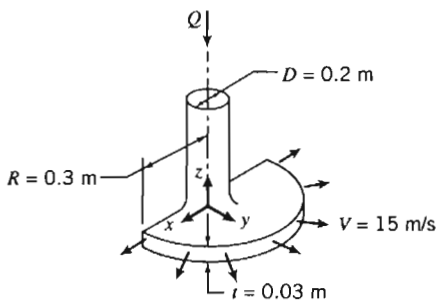

P4.64

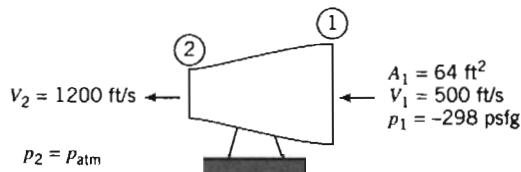


P4.65

- 4.65 A typical jet engine test stand installation is shown, together with some test data. Fuel enters the top of the engine vertically at a rate equal to 2 percent of the mass flow rate of the inlet air. For the given conditions, compute the air flow rate through the engine and estimate the thrust.
- 4.66 At rated thrust, a liquid-fueled rocket motor consumes  $180 \text{ lbm/s}$  of nitric acid as oxidizer and  $70 \text{ lbm/s}$  of aniline as fuel. Flow leaves axially at  $6000 \text{ ft/s}$  relative to the nozzle and at  $16.5 \text{ psia}$ . The nozzle exit diameter is  $D = 2 \text{ ft}$ . Calculate the thrust produced by the motor on a test stand at standard sea-level pressure.


- 4.67 Consider flow through the sudden expansion shown. If the flow is incompressible and friction is neglected, show that the pressure rise,  $\Delta p = p_2 - p_1$ , is given by

$$\frac{\Delta p}{\frac{1}{2} \rho \bar{V}_1^2} = 2 \left( \frac{d}{D} \right)^2 \left[ 1 - \left( \frac{d}{D} \right)^2 \right]$$

Plot the nondimensional pressure rise versus diameter ratio to determine the optimum value of  $d/D$  and the corresponding value of the nondimensional pressure rise. *Hint:* Assume the pressure is uniform and equal to  $p_1$  on the vertical surface of the expansion.

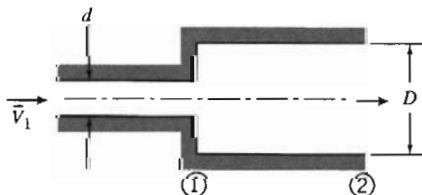


P4.67

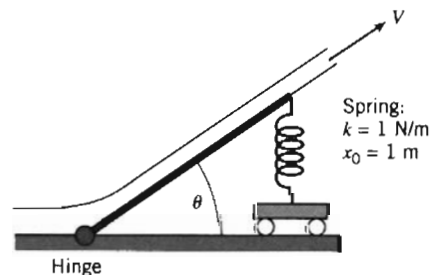


P4.68

- 4.68 A free jet of water with constant cross-section area  $0.005 \text{ m}^2$  is deflected by a hinged plate of length  $2 \text{ m}$  supported by a spring with spring constant  $k = 1 \text{ N/m}$  and uncompressed length  $x_0 = 1 \text{ m}$ . Find and plot the deflection angle  $\theta$  as a function of jet speed  $V$ . What jet speed has a deflection of  $10^\circ$ ?

- 4.69 A conical spray head is shown. The fluid is water and the exit stream is uniform. Evaluate (a) the thickness of the spray sheet at 400 mm radius and (b) the axial force exerted by the spray head on the supply pipe.

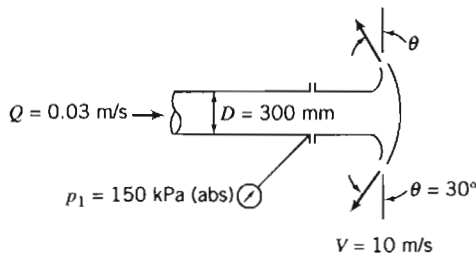


P4.69

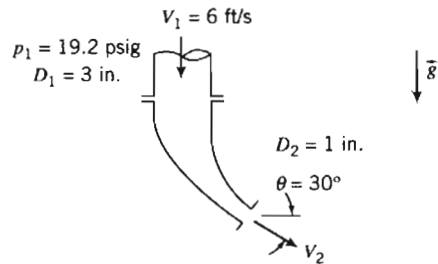

P4.70


- 4.70 A curved nozzle assembly that discharges to the atmosphere is shown. The nozzle weighs 10 lbf and its internal volume is 150 in.<sup>3</sup> The fluid is water. Determine the reaction force exerted by the nozzle on the coupling to the inlet pipe.

- 4.71 A reducer in a piping system is shown. The internal volume of the reducer is 0.2 m<sup>3</sup> and its mass is 25 kg. Evaluate the total force that must be provided by the surrounding pipes to support the reducer. The fluid is gasoline.

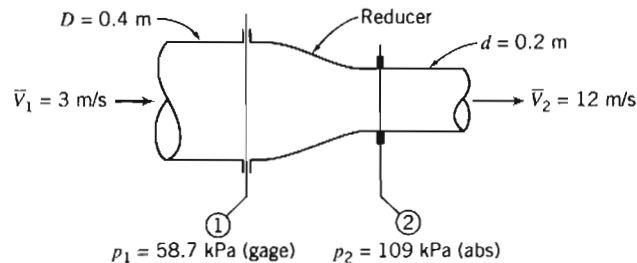


P4.71

- 4.72 A water jet pump has jet area 0.01 m<sup>2</sup> and jet speed 30 m/s. The jet is within a secondary stream of water having speed  $V_s = 3$  m/s. The total area of the duct (the sum of the jet and secondary stream areas) is 0.075 m<sup>2</sup>. The water is thoroughly mixed and leaves the jet pump in a uniform stream. The pressures of the jet and secondary stream are the same at the pump inlet. Determine the speed at the pump exit and the pressure rise,  $p_2 - p_1$ .

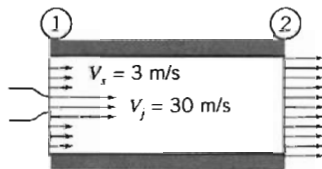


P4.72

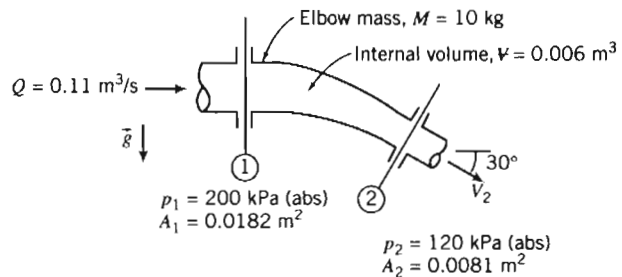

P4.73


- 4.73 A 30° reducing elbow is shown. The fluid is water. Evaluate the components of force that must be provided by the adjacent pipes to keep the elbow from moving.

- 4.74 A monotube boiler consists of a 20 ft length of tubing with 0.375 in. inside diameter. Water enters at the rate of 0.3 lbm/s at 500 psia. Steam leaves at 400 psig with 0.024 slug/ft<sup>3</sup> density. Find the magnitude and direction of the force exerted by the flowing fluid on the tube.
- 4.75 A gas flows steadily through a heated porous pipe of constant 0.2 m<sup>2</sup> cross-sectional area. At the pipe inlet, the absolute pressure is 340 kPa, the density is 5.1 kg/m<sup>3</sup>, and the mean velocity is 152 m/s. The fluid passing through the porous wall leaves in a direction normal to the pipe axis, and the total flow rate through the porous wall is 29.2 kg/s. At the pipe outlet, the absolute pressure is 280 kPa and the density is 2.6 kg/m<sup>3</sup>. Determine the axial force of the fluid on the pipe.
- 4.76 Consider the steady adiabatic flow of air through a long straight pipe with 0.5 ft<sup>2</sup> cross-sectional area. At the inlet, the air is at 30 psia, 140°F, and has a velocity of 500 ft/s. At the exit, the air is at 11.3 psia and has a velocity of 985 ft/s. Calculate the axial force of the air on the pipe. (Be sure to make the direction clear.)
- 4.77 Water is discharged from a narrow slot in a 150 mm diameter pipe. The resulting horizontal two-dimensional jet is 1 m long and 15 mm thick, but of nonuniform velocity. The pressure at the inlet section is 30 kPa (gage). Calculate (a) the volume flow rate at the inlet section and (b) the forces required at the coupling to hold the spray pipe in place. Neglect the mass of the pipe and the water it contains.

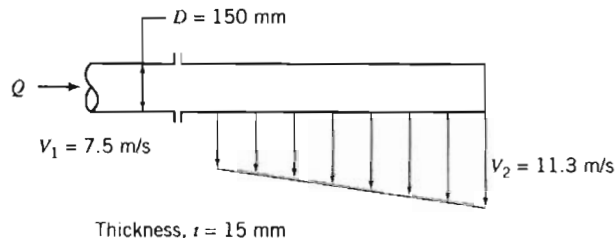


P4.77

- 4.78 Water flows steadily through the square bend of Problem 4.26. Flow at the inlet is at  $p_1 = 185$  kPa (abs). Flow at the exit is nonuniform, vertical, and at atmospheric pressure. The mass of the channel structure is  $M_c = 2.05$  kg; the internal volume of the channel is  $\Psi = 0.00355$  m<sup>3</sup>. Evaluate the force exerted by the channel assembly on the supply duct.
- 4.79 A nozzle for a spray system is designed to produce a flat radial sheet of water. The sheet leaves the nozzle at  $V_2 = 10$  m/s, covers 180° of arc, and has thickness  $t = 1.5$  mm. The nozzle discharge radius is  $R = 50$  mm. The water supply pipe is 35 mm in diameter and the inlet pressure is  $p_1 = 150$  kPa (abs). Evaluate the axial force exerted by the spray nozzle on the coupling.

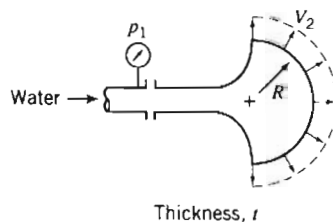

P4.79

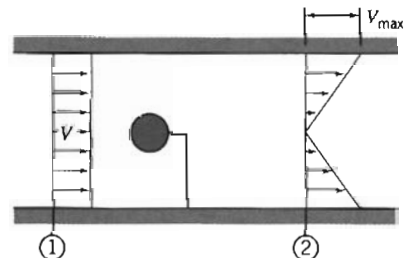

P4.80

- 4.80 A small round object is tested in a 1 m diameter wind tunnel. The pressure is uniform across sections ① and ②. The upstream pressure is 20 mm H<sub>2</sub>O (gage), the



downstream pressure is 10 mm H<sub>2</sub>O (gage), and the mean air speed is 10 m/s. The velocity profile at section ② is linear; it varies from zero at the tunnel centerline to a maximum at the tunnel wall. Calculate (a) the mass flow rate in the wind tunnel, (b) the maximum velocity at section ②, and (c) the drag of the object and its supporting vane. Neglect viscous resistance at the tunnel wall.

- 4.81 The horizontal velocity in the wake behind an object in an air stream of velocity  $U$  is given by

$$u(r) = U \left[ 1 - \cos^2 \left( \frac{\pi r}{2} \right) \right] \quad |r| \leq 1$$


$$u(r) = U \quad |r| > 1$$

where  $r$  is the non-dimensional radial coordinate, measured perpendicular to the flow. Find an expression for the drag on the object.

- 4.82 An incompressible fluid flows steadily in the entrance region of a two-dimensional channel of height  $2h$ . The uniform velocity at the channel entrance is  $U_1 = 20$  ft/s. The velocity distribution at a section downstream is

$$\frac{u}{u_{\max}} = 1 - \left[ \frac{y}{h} \right]^2$$


Evaluate the maximum velocity at the downstream section. Calculate the pressure drop that would exist in the channel if viscous friction at the walls could be neglected.

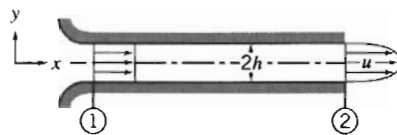

$$U_1 = 20 \text{ ft/s}$$

$$\rho = 0.00238 \text{ slug/ft}^3$$

P4.82

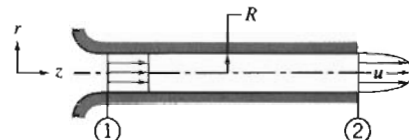

$$U_1 = 30 \text{ ft/s}$$

$$\rho = 0.075 \text{ lbm/ft}^3$$

P4.83

- 4.83 An incompressible fluid flows steadily in the entrance region of a circular tube of radius  $R$ . The uniform velocity at the tube entrance is  $U_1 = 30$  ft/s. The velocity distribution at a section downstream is


$$\frac{u}{u_{\max}} = 1 - \left[ \frac{r}{R} \right]^2$$

Evaluate the maximum velocity at the downstream section. Calculate the pressure drop that would exist in the tube if viscous friction at the walls could be neglected.

- 4.84 Air enters a duct, of diameter  $D = 25.0$  mm, through a well-rounded inlet with uniform speed,  $U_1 = 0.870$  m/s. At a downstream section where  $L = 2.25$  m, the fully developed velocity profile is

$$\frac{u(r)}{U_c} = 1 - \left( \frac{r}{R} \right)^2$$

The pressure drop between these sections is  $p_1 - p_2 = 1.92$  N/m<sup>2</sup>. Find the total force of friction exerted by the tube on the air.

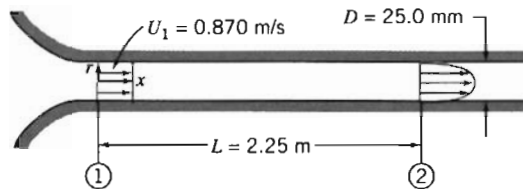

P4.84

- 4.85 Air at standard conditions flows along a flat plate. The undisturbed freestream speed is  $U_0 = 10$  m/s. At  $L = 145$  mm downstream from the leading edge of the plate, the boundary-layer thickness is  $\delta = 2.3$  mm. The velocity profile at this location is

$$\frac{u}{U_0} = \frac{3}{2} \frac{y}{\delta} - \frac{1}{2} \left[ \frac{y}{\delta} \right]^3$$

Calculate the horizontal component of force per unit width required to hold the plate stationary.

- 4.86 Consider the incompressible flow of fluid in a boundary layer as depicted in Example Problem 4.2. Show that the friction drag force of the fluid on the surface is given by


$$F_f = \int_0^{\delta} \rho u(U - u)w dy$$

Evaluate the drag force for the conditions of Example Problem 4.2.


- 4.87 Air at standard conditions flows along a flat plate. The undisturbed freestream speed is  $U_0 = 30$  m/s. At  $L = 0.3$  m downstream from the leading edge of the plate, the boundary-layer thickness is  $\delta = 1.5$  mm. The velocity profile at this location is approximated as  $u/U_0 = y/\delta$ . Calculate the horizontal component of force per unit width required to hold the plate stationary.



- 4.88 A sharp-edged splitter plate inserted part way into a flat stream of flowing water produces the flow pattern shown. Analyze the situation to evaluate  $\theta$  as a function of  $\alpha$ , where  $0 \leq \alpha < 0.5$ . Evaluate the force needed to hold the splitter plate in place. (Neglect any friction force between the water stream and the splitter plate.) Plot both  $\theta$  and  $R_x$  as functions of  $\alpha$ .

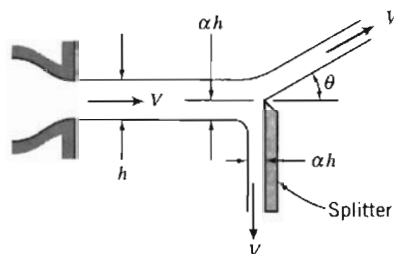

P4.88

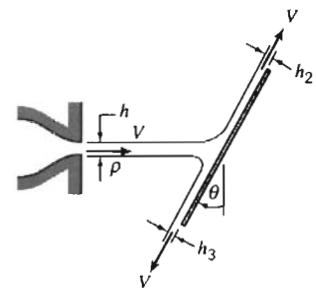


P4.89




- 4.89 When a plane liquid jet strikes an inclined flat plate, it splits into two streams of equal speed but unequal thickness. For frictionless flow there can be no tangential force on the plate surface. Use this assumption to develop an expression for  $h_2/h$  as a function of plate angle,  $\theta$ . Plot your results and comment on the limiting cases,  $\theta = 0$  and  $\theta = 90^\circ$ .

- 4.90 Gases leaving the propulsion nozzle of a rocket are modeled as flowing radially outward from a point upstream from the nozzle throat. Assume the speed of the exit flow,  $V_e$ , has constant magnitude. Develop an expression for the axial thrust,  $T_a$ , developed by flow leaving the nozzle exit plane. Compare your result to the one-dimensional approximation,  $T = \dot{m} V_e$ . Evaluate the percent error for  $\alpha = 15^\circ$ . Plot the percent error versus  $\alpha$  for  $0 \leq \alpha \leq 22.5^\circ$ .

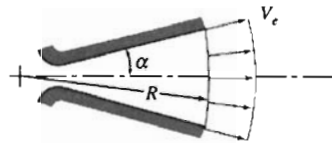


P4.90

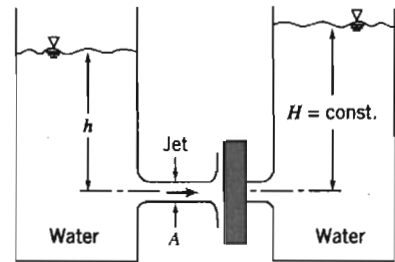

P4.91


- \*4.91 Two large tanks containing water have small smoothly contoured orifices of equal area. A jet of liquid issues from the left tank. Assume the flow is uniform and unaffected by friction. The jet impinges on a vertical flat plate covering the opening of the right tank. Determine the minimum value for the height,  $h$ , required to keep the plate in place over the opening of the right tank.
- \*4.92 A horizontal axisymmetric jet of air with 10 mm diameter strikes a stationary vertical disk of 200 mm diameter. The jet speed is 75 m/s at the nozzle exit. A manometer is connected to the center of the disk. Calculate (a) the deflection,  $h$ , if the manometer liquid has  $SG = 1.75$  and (b) the force exerted by the jet on the disk.

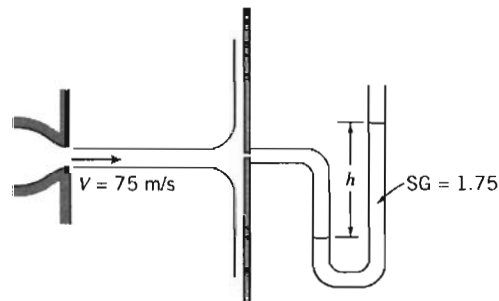


P4.92

- \*4.93 A uniform jet of water leaves a 15 mm diameter nozzle and flows directly downward. The jet speed at the nozzle exit plane is 2.5 m/s. The jet impinges on a horizontal disk and flows radially outward in a flat sheet. Obtain a general expression for the velocity the liquid stream would reach at the level of the disk. Develop an expression for the force required to hold the disk stationary, neglecting the mass of the disk and water sheet. Evaluate for  $h = 3$  m.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

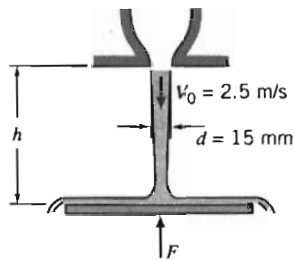


P4.93

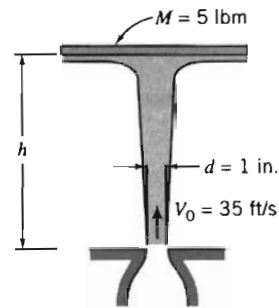


P4.94

- \*4.94 A 5 lbm disk is constrained horizontally but is free to move vertically. The disk is struck from below by a vertical jet of water. The speed and diameter of the water jet are 35 ft/s and 1 in. at the nozzle exit. Obtain a general expression for the speed of the water jet as a function of height,  $h$ . Find the height to which the disk will rise and remain stationary.
- \*4.95 A stream of air at standard conditions from a 2 in. diameter nozzle strikes a curved vane as shown. A stagnation tube connected to a water-filled U-tube manometer is located in the nozzle exit plane. Calculate the speed of the air leaving the nozzle. Estimate the horizontal component of force exerted on the vane by the jet. Comment on each assumption used to solve this problem.

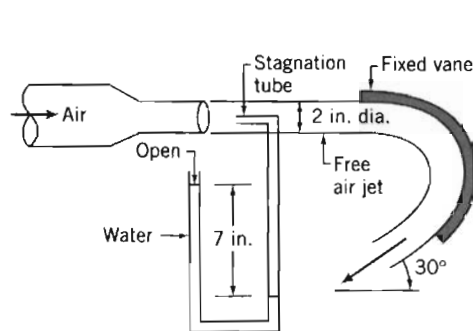

P4.95

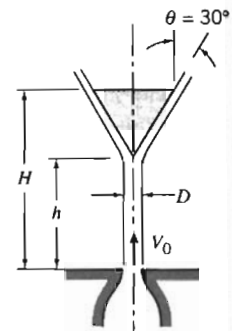


P4.96

- \*4.96 Water from a jet of diameter  $D$  is used to support the cone-shaped object shown. Derive an expression for the combined mass of the cone and water,  $M$ , that can be supported by the jet, in terms of parameters associated with a suitably chosen control volume. Use your expression to calculate  $M$  when  $V_0 = 10$  m/s,  $H = 1$  m,  $h = 0.8$  m,  $D = 50$  mm, and  $\theta = 30^\circ$ . Estimate the mass of water in the control volume.
- \*4.97 A venturi meter installed along a water pipe consists of a convergent section, a constant-area throat, and a divergent section. The pipe diameter is  $D = 100$  mm and the throat diameter is  $d = 40$  mm. Find the net fluid force acting on the convergent section if the water pressure in the pipe is 600 kPa (gage) and the average velocity is 5 m/s. For this analysis neglect viscous effects.
- \*4.98 A plane nozzle discharges vertically downward to atmosphere. The nozzle is supplied with a steady flow of water. A stationary, inclined, flat plate, located beneath the nozzle, is struck by the water stream. The water stream divides and flows along


\* These problems require material from sections that may be omitted without loss of continuity in the text material.

the inclined plate; the two streams leaving the plate are of *unequal* thickness. Frictional effects are negligible in the nozzle and in the flow along the plate surface. Evaluate the minimum gage pressure required at the nozzle inlet. Calculate the magnitude and direction of the force exerted by the water stream on the inclined plate. Sketch the pressure distribution along the surface of the plate. Explain why the pressure distribution is shaped the way you sketched it.

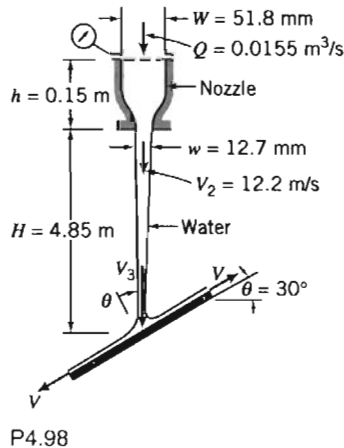


- \*4.99 In ancient Egypt, circular vessels filled with water sometimes were used as crude clocks. The vessels were shaped in such a way that, as water drained from the bottom, the surface level dropped at constant rate,  $s$ . Assume that water drains from a small hole of area  $A$ . Find an expression for the radius of the vessel,  $r$ , as a function of the water level,  $h$ . Obtain an expression for the volume of water needed so that the clock will operate for  $n$  hours.
- \*4.100 A stream of incompressible liquid moving at low speed leaves a nozzle pointed directly downward. Assume the speed at any cross section is uniform and neglect viscous effects. The speed and area of the jet at the nozzle exit are  $V_0$  and  $A_0$ , respectively. Apply conservation of mass and the momentum equation to a differential control volume of length  $dz$  in the flow direction. Derive expressions for the variations of jet speed and area as functions of  $z$ . Evaluate the distance at which the jet area is half its original value. (Take the origin of coordinates at the nozzle exit.)
- \*4.101 A stream of incompressible liquid moving at low speed leaves a nozzle pointed directly upward. Assume the speed at any cross section is uniform and neglect viscous effects. The speed and area of the jet at the nozzle exit are  $V_0$  and  $A_0$ , respectively. Apply conservation of mass and the momentum equation to a differential control volume of length  $dz$  in the flow direction. Derive expressions for the variations of jet speed and area as functions of  $z$ . Evaluate the vertical distance required to reduce the jet speed to zero. (Take the origin of coordinates at the nozzle exit.)
- \*4.102 Incompressible fluid of negligible viscosity is pumped, at total volume flow rate  $Q$ , through a porous surface into the small gap between closely spaced parallel plates as shown. The fluid has only horizontal motion in the gap. Assume uniform flow across any vertical section. Obtain an expression for the pressure variation as a function of  $x$ . *Hint:* Apply conservation of mass and the momentum equation to a differential control volume of thickness  $dx$ , located at position  $x$ .

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

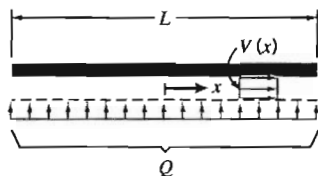


P4.102

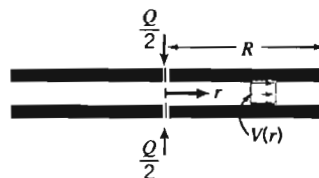

P4.103


- \*4.103 Incompressible liquid of negligible viscosity is pumped, at total volume flow rate  $Q$ , through two small holes into the narrow gap between closely spaced parallel disks as shown. The liquid flowing away from the holes has only radial motion. Assume uniform flow across any vertical section and discharge to atmospheric pressure at  $r = R$ . Obtain an expression for the pressure variation and plot as a function of radius. *Hint:* Apply conservation of mass and the momentum equation to a differential control volume of thickness  $dr$  located at radius  $r$ .
- \*4.104 Liquid falls vertically into a short horizontal rectangular open channel of width  $b$ . The total volume flow rate,  $Q$ , is distributed uniformly over area  $bL$ . Neglect viscous effects. Obtain an expression for  $h_1$  in terms of  $h_2$ ,  $Q$ , and  $b$ . *Hint:* Choose a control volume with outer boundary located at  $x = L$ . Sketch the surface profile,  $h(x)$ . *Hint:* Use a differential control volume of width  $dx$ .

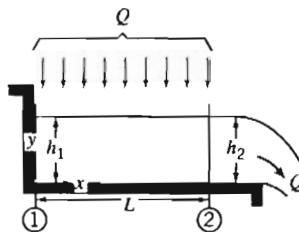


P4.104

- \*4.105 The narrow gap between two closely spaced circular plates initially is filled with incompressible liquid. At  $t = 0$  the upper plate begins to move downward toward the lower plate with constant speed,  $V_0$ , causing the liquid to be squeezed from the narrow gap. Neglecting viscous effects and assuming uniform flow in the radial direction, develop an expression for the velocity field between the parallel plates. *Hint:* Apply conservation of mass to a control volume with outer surface located at radius  $r$ . Note that even though the speed of the upper plate is constant, the flow is unsteady.
- \*4.106 Design a clepsydra (Egyptian water clock)—a vessel from which water drains by gravity through a hole in the bottom and which indicates time by the level of the remaining water. Specify the dimensions of the vessel and the size of the drain hole; indicate the amount of water needed to fill the vessel and the interval at which it must be filled. Plot the vessel radius as a function of elevation.
- 4.107 A jet of water is directed against a vane, which could be a blade in a turbine or in any other piece of hydraulic machinery. The water leaves the stationary 50 mm diameter nozzle with a speed of 20 m/s and enters the vane tangent to the surface at A. The inside surface of the vane at B makes angle  $\theta = 150^\circ$  with the  $x$  direction. Compute the force that must be applied to maintain the vane speed constant at  $U = 5$  m/s.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

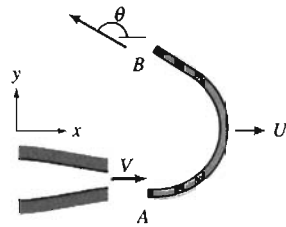


P4.107

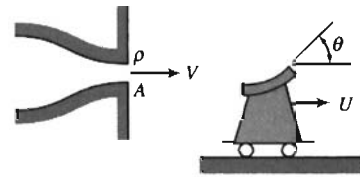

P4.108, 4.110, 4.113, 4.125, 4.152


- 4.108 Water from a stationary nozzle impinges on a moving vane with turning angle  $\theta = 120^\circ$ . The vane moves away from the nozzle with constant speed,  $U = 30$  ft/s, and receives a jet that leaves the nozzle with speed  $V = 100$  ft/s. The nozzle has an exit area of  $0.04$  ft<sup>2</sup>. Find the force that must be applied to maintain the vane speed constant.
- 4.109 A jet boat takes in water at a constant volumetric rate  $Q$  through side vents and ejects it at a high jet speed  $V_j$  at the rear. A variable-area exit orifice controls the jet speed. The drag on the boat is given by  $F_{\text{drag}} \approx kV^2$ , where  $V$  is the boat speed. Find an expression for the steady speed  $V$ . If a jet speed  $V_j = 25$  m/s produces a boat speed of  $10$  m/s, what jet speed will be required to double the boat speed?
- 4.110 A jet of oil ( $SG = 0.8$ ) strikes a curved blade that turns the fluid through angle  $\theta = 180^\circ$ . The jet area is  $1200$  mm<sup>2</sup> and its speed relative to the stationary nozzle is  $20$  m/s. The blade moves toward the nozzle at  $10$  m/s. Determine the force that must be applied to maintain the blade speed constant.
- 4.111 The circular dish, whose cross section is shown, has an outside diameter of  $0.20$  m. A water jet with speed of  $35$  m/s strikes the dish concentrically. The dish moves to the left at  $15$  m/s. The jet diameter is  $20$  mm. The dish has a hole at its center that allows a stream of water  $10$  mm in diameter to pass through without resistance. The remainder of the jet is deflected and flows along the dish. Calculate the force required to maintain the dish motion.

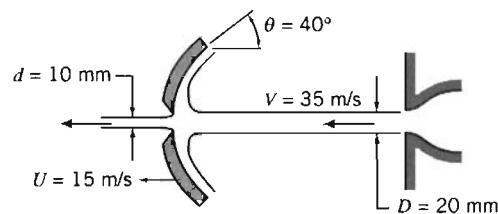


P4.111

- 4.112 The Canadair CL-215T amphibious aircraft is specially designed to fight fires. It is the only production aircraft that can scoop water— $1620$  gallons in  $12$  seconds—from any lake, river, or ocean. Determine the added thrust required during water scooping, as a function of aircraft speed, for a reasonable range of speeds.
- 4.113 Consider a single vane, with turning angle  $\theta$ , moving horizontally at constant speed,  $U$ , under the influence of an impinging jet as in Problem 4.108. The absolute speed of the jet is  $V$ . Obtain general expressions for the resultant force and power that the vane could produce. Show that the power is maximized when  $U = V/3$ .
- 4.114 The circular dish, whose cross section is shown, has an outside diameter of  $0.15$  m. A water jet strikes the dish concentrically and then flows outward along the surface of the dish. The jet speed is  $45$  m/s and the dish moves to the left at  $10$  m/s. Find the thickness of the jet sheet at a radius of  $75$  mm from the jet axis. What horizontal force on the dish is required to maintain this motion?



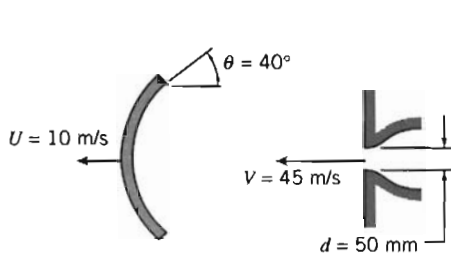


P4.114

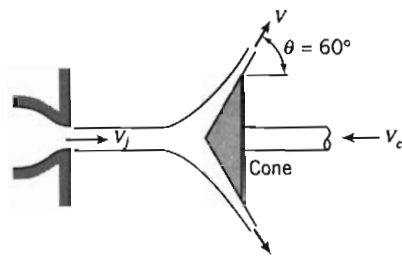


P4.115

- 4.115 Water, in a 100 mm diameter jet with speed of 30 m/s to the right, is deflected by a cone that moves to the left at 15 m/s. Determine (a) the thickness of the jet sheet at a radius of 200 mm and (b) the external horizontal force needed to move the cone.
- 4.116 Consider a series of turning vanes struck by a continuous jet of water that leaves a 50 mm diameter nozzle at constant speed,  $V = 86.6$  m/s. The vanes move with constant speed,  $U = 50$  m/s. Note that all the mass flow leaving the jet crosses the vanes. The curvature of the vanes is described by angles  $\theta_1 = 30^\circ$  and  $\theta_2 = 45^\circ$ , as shown. Evaluate the nozzle angle,  $\alpha$ , required to ensure that the jet enters tangent to the leading edge of each vane. Calculate the force that must be applied to maintain the vane speed constant.

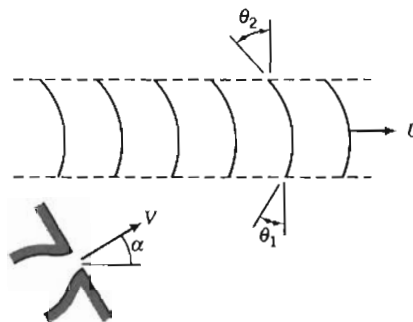

P4.116, 4.117, 4.163


- 4.117 Consider again the moving multiple-vane system described in Problem 4.116. Assuming that a way could be found to make  $\alpha$  nearly zero (and thus,  $\theta_1$  nearly  $90^\circ$ ), evaluate the vane speed,  $U$ , that would result in maximum power output from the moving vane system.
- 4.118 A steady jet of water is used to propel a small cart along a horizontal track as shown. Total resistance to motion of the cart assembly is given by  $F_D = kU^2$ , where  $k = 0.92 \text{ N} \cdot \text{s}^2/\text{m}^2$ . Evaluate the acceleration of the cart at the instant when its speed is  $U = 10$  m/s.

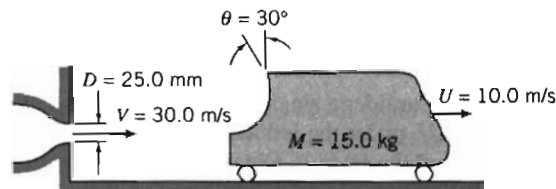

P4.118, 4.120, 4.124, 4.163


- 4.119 A plane jet of water strikes a splitter vane and divides into two flat streams as shown. Find the mass flow rate ratio,  $\dot{m}_2/\dot{m}_3$ , required to produce zero net vertical force on the splitter vane. Determine the horizontal force that must be applied under these conditions to maintain the vane motion at steady speed.



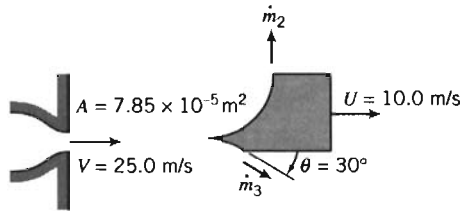


P4.119

- 4.120 The hydraulic catapult of Problem 4.118 is accelerated by a jet of water that strikes the curved vane. The cart moves along a level track with negligible resistance. At any time its speed is  $U$ . Calculate the time required to accelerate the cart from rest to  $U = V/2$ .
- 4.121 A vane/slider assembly moves under the influence of a liquid jet as shown. The coefficient of kinetic friction for motion of the slider along the surface is  $\mu_k = 0.30$ . Calculate the terminal speed of the slider.

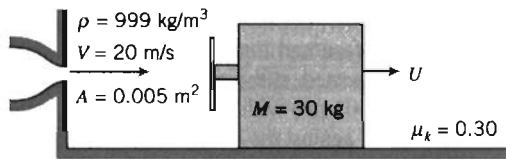


P4.121, 4.122, 4.132, 4.133

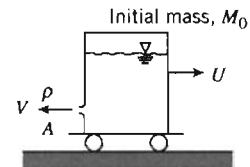


P4.123, 4.164

- 4.122 For the vane/slider problem of Problem 4.121, find and plot expressions for the acceleration, speed, and position of the slider as a function of time.
- 4.123 A cart is propelled by a liquid jet issuing horizontally from a tank as shown. The track is horizontal; resistance to motion may be neglected. The tank is pressurized so that the jet speed may be considered constant. Obtain a general expression for the speed of the cart as it accelerates from rest. If  $M_0 = 100$  kg,  $\rho = 999$  kg/m<sup>3</sup>, and  $A = 0.005$  m<sup>2</sup>, find the jet speed  $V$  required for the cart to reach a speed of 1.5 m/s after 30 seconds. For this condition, plot the cart speed  $U$  as a function of time. Plot the cart speed after 30 seconds as a function of jet speed.
- 4.124 If the cart of Problem 4.118 is released at  $t = 0$ , when would you expect the acceleration to be maximum? Sketch what you would expect for the curve of acceleration versus time. What value of  $\theta$  would maximize the acceleration at any time? Why? Will the cart speed ever equal the jet speed? Explain briefly.
- 4.125 The acceleration of the vane/cart assembly of Problem 4.108 is to be controlled as it accelerates from rest by changing the vane angle,  $\theta$ . A constant acceleration,  $a = 1.5$  m/s<sup>2</sup>, is desired. The water jet leaves the nozzle of area  $A = 0.025$  m<sup>2</sup>, with speed  $V = 15$  m/s. The vane/cart assembly has a mass of 55 kg; neglect friction. Determine  $\theta$  at  $t = 5$  s. Plot  $\theta(t)$  for the given constant acceleration over a suitable range of  $t$ .
- 4.126 The wheeled cart shown rolls with negligible resistance. The cart is to accelerate to the right at a constant rate of 2 m/s<sup>2</sup>. This is to be accomplished by “programming” the water jet area,  $A(t)$ , that reaches the cart. The jet speed remains constant at 10 m/s. Obtain an expression for  $A(t)$  required to produce the motion. Sketch the area variation for  $t \leq 4$  s. Evaluate the jet area at  $t = 2$  s.

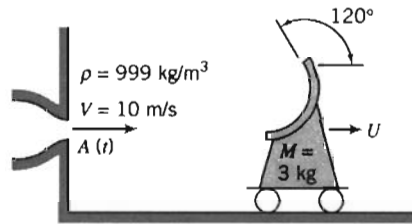


P4.126

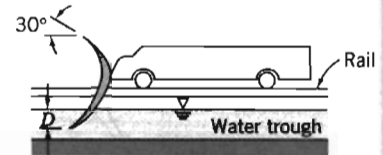


P4.127, P4.128

- 4.127 A rocket sled, weighing 10,000 lbf and traveling 600 mph, is to be braked by lowering a scoop into a water trough. The scoop is 6 in. wide. Determine the time required (after lowering the scoop to a depth of 3 in. into the water) to bring the sled to a speed of 20 mph. Plot the sled speed as a function of time.
- 4.128 A rocket sled is to be slowed from an initial speed of 300 m/s by lowering a scoop into a water trough. The scoop is 0.3 m wide; it deflects the water through  $150^\circ$ . The trough is 800 m long. The mass of the sled is 8000 kg. At the initial speed it experiences an aerodynamic drag force of 90 kN. The aerodynamic force is proportional to the square of the sled speed. It is desired to slow the sled to 100 m/s. Determine the depth  $D$  to which the scoop must be lowered into the water.
- 4.129 Starting from rest, the cart shown is propelled by a hydraulic catapult (liquid jet). The jet strikes the curved surface and makes a  $180^\circ$  turn, leaving horizontally. Air and rolling resistance may be neglected. If the mass of the cart is 100 kg and the jet of water leaves the nozzle (of area  $0.001 \text{ m}^2$ ) with a speed of 35 m/s, determine the speed of the cart 5 s after the jet is directed against the cart. Plot the cart speed as a function of time.



P4.129, 4.130, 4.153


- 4.130 Consider the jet and cart of Problem 4.129 again, but include an aerodynamic drag force proportional to the square of cart speed,  $F_D = kU^2$ , with  $k = 2.0 \text{ N} \cdot \text{s}^2/\text{m}^2$ . Derive an expression for the cart acceleration as a function of cart speed and other given parameters. Evaluate the acceleration of the cart at  $U = 10 \text{ m/s}$ . What fraction is this speed of the terminal speed of the cart?
- 4.131 A small cart that carries a single turning vane rolls on a level track. The cart mass is  $M = 10.5 \text{ kg}$  and its initial speed is  $U_0 = 12.5 \text{ m/s}$ . At  $t = 0$ , the vane is struck by an opposing jet of water, as shown. Neglect any external forces due to air or rolling resistance. Determine the time and distance needed for the liquid jet to bring the cart to rest. Plot the cart speed (nondimensionalized on  $U_0$ ) and the distance traveled as functions of time.

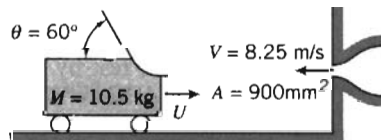

P4.131


- 4.132 Solve Problem 4.121 if the vane and slider ride on a film of oil instead of sliding in contact with the surface. Assume motion resistance is proportional to speed,  $F_R = kU$ , with  $k = 7.5 \text{ N} \cdot \text{s}/\text{m}$ .
- 4.133 For the vane/slider problem of Problem 4.132, find and plot expressions for the acceleration, speed, and position of the slider as functions of time. (Consider numerical integration.)

- 4.134 A rectangular block of mass  $M$ , with vertical faces, rolls without resistance along a smooth horizontal plane as shown. The block travels initially at speed  $U_0$ . At  $t = 0$  the block is struck by a liquid jet and its speed begins to slow. Obtain an algebraic expression for the acceleration of the block for  $t > 0$ . Solve the equation to determine the time at which  $U = 0$ .

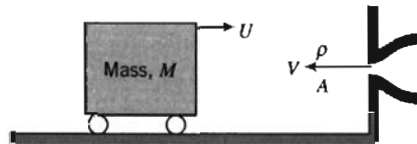


P4.134, 4.135

- 4.135 If  $M = 100$  kg,  $\rho = 999$  kg/m<sup>3</sup>, and  $A = 0.01$  m<sup>2</sup>, find the jet speed  $V$  required for the cart to be brought to rest after one second if the initial speed of the cart is  $U_0 = 5$  m/s. For this condition, plot the speed  $U$  and position  $x$  of the cart as functions of time. What is the maximum value of  $x$ , and how long does the cart take to return to its initial position?
- 4.136 A rectangular block of mass  $M$ , with vertical faces, rolls on a horizontal surface between two opposing jets as shown. At  $t = 0$  the block is set into motion at speed  $U_0$ . Subsequently, it moves without friction parallel to the jet axes with speed  $U(t)$ . Neglect the mass of any liquid adhering to the block compared with  $M$ . Obtain general expressions for the acceleration of the block,  $a(t)$ , and the block speed,  $U(t)$ .

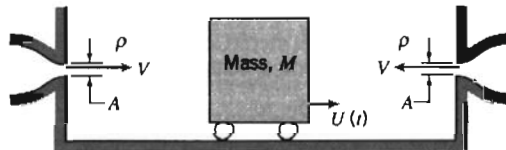



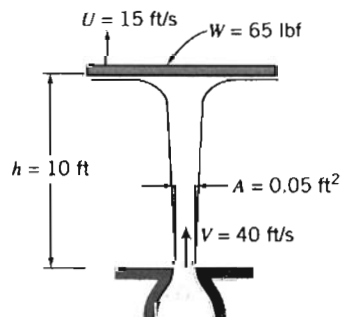

P4.136, 4.137

- 4.137 Consider the statement and diagram of Problem 4.136. Assume that at  $t = 0$ , when the block is at  $x = 0$ , it is set into motion at speed  $U_0 = 10$  m/s, to the right. Calculate the time required to reduce the block speed to  $U = 0.5$  m/s, and the block position at that instant.
- \*4.138 A vertical jet of water impinges on a horizontal disk as shown. The disk assembly weighs 65 lbf. When the disk is 10 ft above the nozzle exit, it is moving upward at  $U = 15$  ft/s. Compute the vertical acceleration of the disk at this instant.




P4.138, 4.139, 4.160

\* This problem requires material from sections that may be omitted without loss of continuity in the text material.


-  \*4.139 A vertical jet of water leaves a 75 mm diameter nozzle. The jet impinges on a horizontal disk (see Problem 4.138). The disk is constrained horizontally but is free to move vertically. The mass of the disk is 35 kg. Plot disk mass versus flow rate to determine the water flow rate required to suspend the disk 3 m above the jet exit plane.
-  4.140 A manned space capsule travels in level flight above the Earth's atmosphere at initial speed  $U_0 = 8.00$  km/s. The capsule is to be slowed by a retro-rocket to  $U = 5.00$  km/s in preparation for a reentry maneuver. The initial mass of the capsule is  $M_0 = 1600$  kg. The rocket consumes fuel at  $\dot{m} = 8.0$  kg/s, and exhaust gases leave at  $V_e = 3000$  m/s relative to the capsule and at negligible pressure. Evaluate the duration of the retro-rocket firing needed to accomplish this. Plot the final speed as a function of firing duration for a time range  $\pm 10\%$  of this firing time.
-  4.141 A rocket sled traveling on a horizontal track is slowed by a retro-rocket fired in the direction of travel. The initial speed of the sled is  $U_0 = 500$  m/s. The initial mass of the sled is  $M_0 = 1500$  kg. The retro-rocket consumes fuel at the rate of 7.75 kg/s, and the exhaust gases leave the nozzle at atmospheric pressure and a speed of 2500 m/s relative to the rocket. The retro-rocket fires for 20 s. Neglect aerodynamic drag and rolling resistance. Obtain and plot an algebraic expression for sled speed  $U$  as a function of firing time. Calculate the sled speed at the end of retro-rocket firing.
- 4.142 A rocket sled accelerates from rest on a level track with negligible air and rolling resistances. The initial mass of the sled is  $M_0 = 600$  kg. The rocket initially contains 150 kg of fuel. The rocket motor burns fuel at constant rate  $\dot{m} = 15$  kg/s. Exhaust gases leave the rocket nozzle uniformly and axially at  $V_e = 2900$  m/s relative to the nozzle, and the pressure is atmospheric. Find the maximum speed reached by the rocket sled. Calculate the maximum acceleration of the sled during the run.
- 4.143 A rocket sled with initial mass of 2000 lbm is to be accelerated on a level track. The rocket motor burns fuel at constant rate  $\dot{m} = 30$  lbm/s. The rocket exhaust flow is uniform and axial. Gases leave the nozzle at 9000 ft/s relative to the nozzle, and the pressure is atmospheric. Determine the minimum mass of rocket fuel needed to propel the sled to a speed of 600 mph before burnout occurs. As a first approximation, neglect resistance forces.
-  4.144 A rocket sled has an initial mass of 4 metric tons, including 1 ton of fuel. The motion resistance in the track on which the sled rides and that of the air total  $kU$ , where  $k$  is 75 N · s/m, and  $U$  is the speed of the sled in m/s. The exit speed of the exhaust gas relative to the rocket is 1500 m/s, and the exit pressure is atmospheric. The rocket burns fuel at the rate of 75 kg/s. Compute the speed of the sled after 10 s. Plot the sled speed and acceleration as functions of time. Find the maximum speed.
- 4.145 A rocket motor is used to accelerate a kinetic energy weapon to a speed of 1.8 km/s in horizontal flight. The exit stream leaves the nozzle axially and at atmospheric pressure with a speed of 3000 m/s relative to the rocket. The rocket motor ignites upon release of the weapon from an aircraft flying horizontally at  $U_0 = 300$  m/s. Neglecting air resistance, obtain an algebraic expression for the speed reached by the weapon in level flight. Determine the minimum fraction of the initial mass of the weapon that must be fuel to accomplish the desired acceleration.
- 4.146 A rocket sled with initial mass of 3 metric tons, including 1 ton of fuel, rests on a level section of track. At  $t = 0$ , the solid fuel of the rocket is ignited and the rocket burns fuel at the rate of 75 kg/s. The exit speed of the exhaust gas relative to the rocket is 2500 m/s, and the pressure is atmospheric. Neglecting friction and air resistance, calculate the acceleration and speed of the sled at  $t = 10$  s.

\* This problem requires material from sections that may be omitted without loss of continuity in the text material.

- 4.147 A daredevil considering a record attempt—for the world’s longest motorcycle jump—asks for your consulting help: He must reach 875 km/hr (from a standing start on horizontal ground) to make the jump, so he needs rocket propulsion. The total mass of the motorcycle, the rocket motor without fuel, and the rider is 375 kg. Gases leave the rocket nozzle horizontally, at atmospheric pressure, with a speed of 2510 m/s. Evaluate the minimum amount of rocket fuel needed to accelerate the motorcycle and rider to the required speed.
- 4.148 A large two-stage liquid rocket with mass of 30,000 kg is to be launched from a sea-level launch pad. The main engine burns liquid hydrogen and liquid oxygen in a stoichiometric mixture at 2450 kg/s. The thrust nozzle has an exit diameter of 2.6 m. The exhaust gases exit the nozzle at 2270 m/s and an exit plane pressure of 66 kPa absolute. Calculate the acceleration of the rocket at liftoff. Obtain an expression for speed as a function of time, neglecting air resistance.
- 4.149 A “home-made” solid propellant rocket has an initial mass of 20 lbm; 15 lbm of this is fuel. The rocket is directed vertically upward from rest, burns fuel at a constant rate of 0.5 lbm/s, and ejects exhaust gas at a speed of 6500 ft/s relative to the rocket. Assume that the pressure at the exit is atmospheric and that air resistance may be neglected. Calculate the rocket speed after 20 s and the distance traveled by the rocket in 20 s. Plot the rocket speed and the distance traveled as functions of time.
- 4.150 Neglecting air resistance, what speed would a vertically directed rocket attain in 10 s if it starts from rest, has initial mass of 200 kg, burns 10 kg/s, and ejects gas at atmospheric pressure with a speed of 2900 m/s relative to the rocket? Plot the rocket speed as a function of time.
- 4.151 Inflate a toy balloon with air and release it. Watch as the balloon darts about the room. Explain what causes the phenomenon you see.
- 4.152 The vane/cart assembly of mass  $M = 30$  kg, shown in Problem 4.108, is driven by a water jet. The water leaves the stationary nozzle of area  $A = 0.02$  m<sup>2</sup>, with a speed of 20 m/s. The coefficient of kinetic friction between the assembly and the surface is 0.10. Plot the terminal speed of the assembly as a function of vane turning angle,  $\theta$ , for  $0 \leq \theta \leq \pi/2$ . At what angle does the assembly begin to move if the coefficient of static friction is 0.15?
- 4.153 Consider the vehicle shown in Problem 4.129. Starting from rest, it is propelled by a hydraulic catapult (liquid jet). The jet strikes the curved surface and makes a 180° turn, leaving horizontally. Air and rolling resistance may be neglected. Using the notation shown, obtain an equation for the acceleration of the vehicle at any time and determine the time required for the vehicle to reach  $U = V/2$ .
- 4.154 The moving tank shown is to be slowed by lowering a scoop to pick up water from a trough. The initial mass and speed of the tank and its contents are  $M_0$  and  $U_0$ , respectively. Neglect external forces due to pressure or friction and assume that the track is horizontal. Apply the continuity and momentum equations to show that at any instant  $U = U_0 M_0 / M$ . Obtain a general expression for  $U/U_0$  as a function of time.

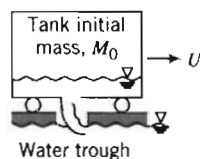


P4.154

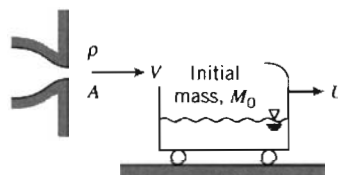


P4.155

- 4.155 The tank shown rolls with negligible resistance along a horizontal track. It is to be accelerated from rest by a liquid jet that strikes the vane and is deflected into the tank. The initial mass of the tank is  $M_0$ . Use the continuity and momentum equations to show that at any instant the mass of the vehicle and liquid contents is  $M = M_0 V / (V - U)$ . Obtain a general expression for  $U/V$  as a function of time.
- 4.156 A small rocket motor is used to power a "jet pack" device to lift a single astronaut above the Earth's surface. The rocket motor produces a uniform exhaust jet with constant speed,  $V_e = 2940$  m/s. The total initial mass of the astronaut and the jet pack is  $M_0 = 130$  kg. Of this, 40 kg is fuel for the rocket motor. Develop an algebraic expression for the variable fuel mass flow rate required to keep the jet pack and astronaut hovering in a fixed position above the ground. Calculate the maximum hover time aloft before the fuel supply is expended.
- 4.157 A model solid propellant rocket has a mass of 69.6 g, of which 12.5 g is fuel. The rocket produces 1.3 lbf of thrust for a duration of 1.7 s. For these conditions, calculate the maximum speed and height attainable in the absence of air resistance. Plot the rocket speed and the distance traveled as functions of time.
- \*4.158 Several toy manufacturers sell water "rockets" that consist of plastic tanks to be partially filled with water and then pressurized with air. Upon release, the compressed air forces water out of the nozzle rapidly, propelling the rocket. You are asked to help specify optimum conditions for this water-jet propulsion system. To simplify the analysis, consider horizontal motion only. Perform the analysis and design needed to define the acceleration performance of the compressed air/water-propelled rocket. Identify the fraction of tank volume that initially should be filled with compressed air to achieve optimum performance (i.e., maximum speed from the water charge). Describe the effect of varying the initial air pressure in the tank.



P4.158

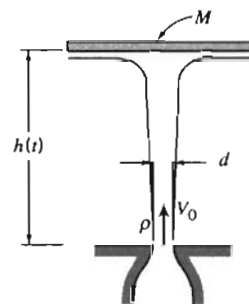


P4.159

- \*4.159 A disk, of mass  $M$ , is constrained horizontally but is free to move vertically. A jet of water strikes the disk from below. The jet leaves the nozzle at initial speed  $V_0$ . Obtain a differential equation for the disk height,  $h(t)$ , above the jet exit plane if the disk is released from large height,  $H$ . Assume that when the disk reaches equilibrium, its height above the jet exit plane is  $h_0$ . Sketch  $h(t)$  for the disk released at  $t = 0$  from  $H > h_0$ . Explain why the sketch is as you show it.
- 4.160 Consider the configuration of the vertical jet impinging on a horizontal disk shown in Problem 4.138. Assume the disk is released from rest at an initial height of 10 ft above the jet exit plane. Solve for the subsequent motion of this disk. Identify the steady-state height of the disk.


\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- 4.161 A small solid-fuel rocket motor is fired on a test stand. The combustion chamber is circular, with 100 mm diameter. Fuel, of density  $1660 \text{ kg/m}^3$ , burns uniformly at the rate of 12.7 mm/s. Measurements show that the exhaust gases leave the rocket at ambient pressure, at a speed of 2750 m/s. The absolute pressure and temperature in the combustion chamber are 7.0 MPa and 3610 K, respectively. Treat the combustion products as an ideal gas with molecular mass of 25.8. Evaluate the rate of change of mass and of linear momentum within the rocket motor. Express the rate of change of linear momentum within the motor as a percentage of the motor thrust.
- \*4.162 A classroom demonstration of linear momentum is planned, using a water-jet propulsion system for a cart traveling on a horizontal linear air track. The track is 5 m long, and the cart mass is 155 g. The objective of the design is to obtain the best performance for the cart, using 1 L of water contained in an open cylindrical tank made from plastic sheet with density of  $0.0819 \text{ g/cm}^2$ . For stability, the maximum height of the water tank cannot exceed 0.5 m. The diameter of the smoothly rounded water jet may not exceed 10 percent of the tank diameter. Determine the best dimensions for the tank and the water jet by modeling the system performance. Plot acceleration, velocity, and distance as functions of time. Find the optimum dimensions of the water tank and jet opening from the tank. Discuss the limitations on your analysis. Discuss how the assumptions affect the predicted performance of the cart. Would the actual performance of the cart be better or worse than predicted? Why? What factors account for the difference(s)?
- \*4.163 The capability of the Aircraft Landing Loads and Traction Facility at NASA's Langley Research Center is to be upgraded. The facility consists of a rail-mounted carriage propelled by a jet of water issuing from a pressurized tank. (The setup is identical in concept to the hydraulic catapult of Problem 4.118.) Specifications require accelerating the carriage with 49,000 kg mass to a speed of 220 knots in a distance of 122 m. (The vane turning angle is  $170^\circ$ .) Identify a range of water jet sizes and speeds needed to accomplish this performance. Specify the recommended operating pressure for the water-jet system and determine the shape and estimated size of tankage to contain the pressurized water.
- \*4.164 Analyze the design and optimize the performance of a cart propelled along a horizontal track by a water jet that issues under gravity from an open cylindrical tank carried on board the cart. (A water-jet-propelled cart is shown in the diagram for Problem 4.123.) Neglect any change in slope of the liquid free surface in the tank during acceleration. Analyze the motion of the cart along a horizontal track, assuming it starts from rest and begins to accelerate when water starts to flow from the jet. Derive algebraic equations or solve numerically for the acceleration and speed of the cart as functions of time. Present results as plots of acceleration and speed versus time, neglecting the mass of the tank. Determine the dimensions of a tank of minimum mass required to accelerate the cart from rest along a horizontal track to a specified speed in a specified time interval.
- \*4.165 The  $90^\circ$  reducing elbow of Example Problem 4.6 discharges to atmosphere. Section ② is located 0.3 m to the right of Section ①. Estimate the moment exerted by the flange on the elbow.
- \*4.166 A large irrigation sprinkler unit, mounted on a cart, discharges water with a speed of 40 m/s at an angle of  $30^\circ$  to the horizontal. The 50 mm diameter nozzle is 3 m above the ground. The mass of the sprinkler and cart is  $M = 350 \text{ kg}$ . Calculate the magnitude of the moment that tends to overturn the cart. What value of  $V$  will cause impending motion? What will be the nature of the impending motion? What is the effect of the angle of jet inclination on the results? For the case of impending motion, plot the jet velocity as a function of the angle of jet inclination over an appropriate range of the angles.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

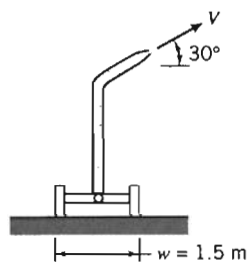


P4.166

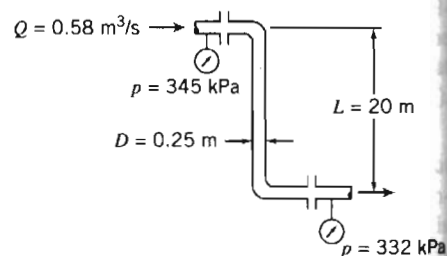


P4.167,

- \*4.167** Crude oil ( $SG = 0.95$ ) from a tanker dock flows through a pipe of 0.25 m diameter in the configuration shown. The flow rate is  $0.58 \text{ m}^3/\text{s}$ , and the gage pressures are shown in the diagram. Determine the force and torque that are exerted by the pipe assembly on its supports.
- \*4.168** The simplified lawn sprinkler shown rotates in the horizontal plane. At the center pivot,  $Q = 4.5 \text{ gpm}$  of water enters vertically. Water discharges in the horizontal plane from each jet. If the pivot is frictionless, calculate the torque needed to keep the sprinkler from rotating. Neglecting the inertia of the sprinkler itself, calculate the angular acceleration that results when the torque is removed.

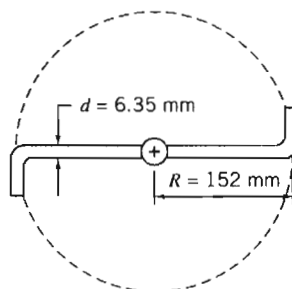

P4.168, 4.169, 4.170

- \*4.169** Consider the sprinkler of Problem 4.168 again. Derive a differential equation for the angular speed of the sprinkler as a function of time. Evaluate its steady-state speed of rotation, if there is no friction in the pivot.
- \*4.170** Repeat Problem 4.169, but assume a constant retarding torque in the pivot of  $0.045 \text{ ft} \cdot \text{lbf}$ .
- 4.171** Water flows in a uniform flow out of the 5 mm slots of the rotating spray system as shown. The flow rate is  $15 \text{ kg/s}$ . Find the torque required to hold the system stationary, and the steady-state speed of rotation after it is released.

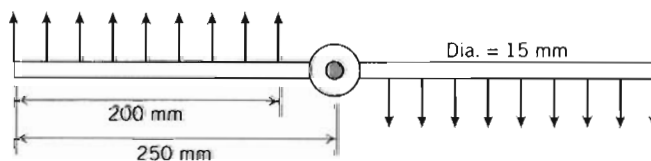

P4.171, 4.172


- 4.172** If the same flow rate in the rotating spray system of Problem 4.171 is not uniform but instead varies linearly from a maximum at the outer radius to zero at a point 50 mm

\* These problems require material from sections that may be omitted without loss of continuity in the text material.



from the axis, find the torque required to hold it stationary, and the steady-state speed of rotation.


- \*4.173** The lawn sprinkler shown is supplied with water at a rate of 68 L/min. Neglecting friction in the pivot, determine the steady-state angular speed for  $\theta = 30^\circ$ . Plot the steady-state angular speed of the sprinkler for  $0 \leq \theta \leq 90^\circ$ .

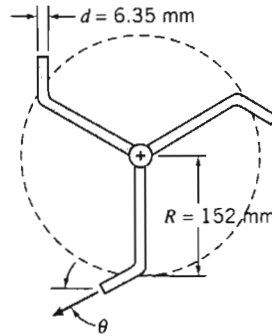


P4.173



- \*4.174** A single tube carrying water rotates at constant angular speed, as shown. Water is pumped through the tube at volume flow rate  $Q = 13.8$  L/min. Find the torque that must be applied to maintain the steady rotation of the tube using two methods of analysis: (a) a rotating control volume and (b) a fixed control volume.

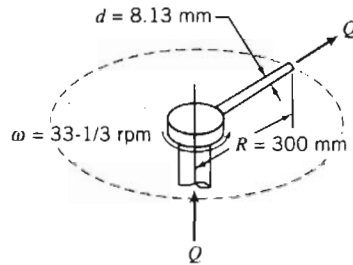

P4.174

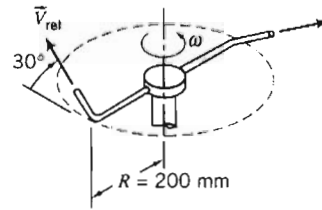


P4.175, 4.176, 4.177

- \*4.175** A small lawn sprinkler is shown. The sprinkler operates at a gage pressure of 140 kPa. The total flow rate of water through the sprinkler is 4 L/min. Each jet discharges at 17 m/s (relative to the sprinkler arm) in a direction inclined  $30^\circ$  above the horizontal. The sprinkler rotates about a vertical axis. Friction in the bearing causes a torque of  $0.18 \text{ N} \cdot \text{m}$  opposing rotation. Evaluate the torque required to hold the sprinkler stationary.
- \*4.176** In Problem 4.175, calculate the initial acceleration of the sprinkler from rest if no external torque is applied and the moment of inertia of the sprinkler head is  $0.1 \text{ kg} \cdot \text{m}^2$  when filled with water.
- \*4.177** A small lawn sprinkler is shown (Problem 4.175). The sprinkler operates at an inlet gage pressure of 140 kPa. The total flow rate of water through the sprinkler is 4.0 L/min. Each jet discharges at 17 m/s (relative to the sprinkler arm) in a direction inclined  $30^\circ$  above the horizontal. The sprinkler rotates about a vertical axis. Friction in the bearing causes a torque of  $0.18 \text{ N} \cdot \text{m}$  opposing rotation. Determine the steady speed of rotation of the sprinkler and the approximate area covered by the spray.
- \*4.178** When a garden hose is used to fill a bucket, water in the bucket may develop a swirling motion. Why does this happen? How could the amount of swirl be calculated approximately?


\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- \*4.179 Water flows at the rate of  $0.15 \text{ m}^3/\text{s}$  through a nozzle assembly that rotates steadily at 30 rpm. The arm and nozzle masses are negligible compared with the water inside. Determine the torque required to drive the device and the reaction torques at the flange.

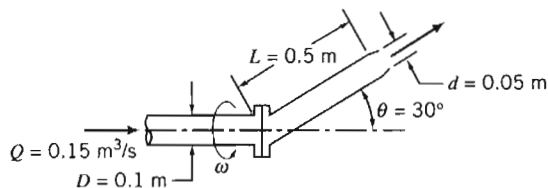


P4.179

- 4.180 A pipe branches symmetrically into two legs of length  $L$ , and the whole system rotates with angular speed  $\omega$  around its axis of symmetry. Each branch is inclined at angle  $\alpha$  to the axis of rotation. Liquid enters the pipe steadily, with zero angular momentum, at volume flow rate  $Q$ . The pipe diameter,  $D$ , is much smaller than  $L$ . Obtain an expression for the external torque required to turn the pipe. What additional torque would be required to impart angular acceleration  $\dot{\omega}$ ?

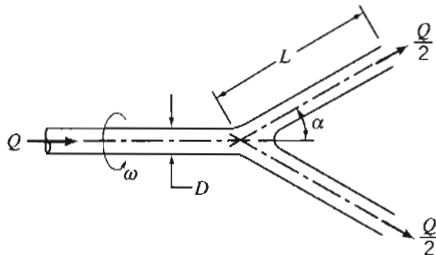

P4.180

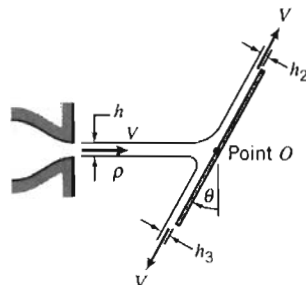

P4.181

- \*4.181 Liquid in a thin sheet, of width  $w$  and thickness  $h$ , flows from a slot and strikes a stationary inclined flat plate, as shown. Experiments show that the resultant force of the liquid jet on the plate does not act through point  $O$ , where the jet centerline intersects the plate. Determine the magnitude and line of application of the resultant force as functions of  $\theta$ . Evaluate the equilibrium angle of the plate if the resultant force is applied at point  $O$ . Neglect any viscous effects.




- \*4.182 For the rotating sprinkler of Example Problem 4.14, what value of  $\alpha$  will produce the maximum rotational speed? What angle will provide the maximum area of coverage by the spray? Draw a velocity diagram (using an  $r, \theta, z$  coordinate system) to indicate the absolute velocity of the water jet leaving the nozzle. What governs the steady rotational speed of the sprinkler? Does the rotational speed of the sprinkler affect the area covered by the spray? How would you estimate the area? For fixed  $\alpha$ , what might be done to increase or decrease the area covered by the spray?

- 4.183 Air at standard conditions enters a compressor at 75 m/s and leaves at an absolute pressure and temperature of 200 kPa and 345 K, respectively, and speed  $V = 125 \text{ m/s}$ . The flow rate is 1 kg/s. The cooling water circulating around the compressor casing removes 18 kJ/kg of air. Determine the power required by the compressor.


- 4.184 Compressed air is stored in a pressure bottle with a volume of  $10 \text{ ft}^3$ , at 3000 psia and  $140^\circ\text{F}$ . At a certain instant a valve is opened and mass flows from the bottle at  $\dot{m} = 0.105 \text{ lbm/s}$ . Find the rate of change of temperature in the bottle at this instant.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- 4.185 A centrifugal water pump with a 4 in. diameter inlet and a 4 in. diameter discharge pipe has a flow rate of 300 gpm. The inlet pressure is 8 in. Hg vacuum and the exit pressure is 35 psig. The inlet and outlet sections are located at the same elevation. The measured power input is 9.1 hp. Determine the pump efficiency.
- 4.186 Air enters a compressor at 14 psia, 80°F with negligible speed and is discharged at 70 psia, 500°F with a speed of 500 ft/s. If the power input is 3200 hp and the flow rate is 20 lbm/s, determine the rate of heat transfer.
- 4.187 A turbine is supplied with 0.6 m<sup>3</sup>/s of water from a 0.3 m diameter pipe; the discharge pipe has a 0.4 m diameter. Determine the pressure drop across the turbine if it delivers 60 kW.
- 4.188 Air is drawn from the atmosphere into a turbomachine. At the exit, conditions are 500 kPa (gage) and 130°C. The exit speed is 100 m/s and the mass flow rate is 0.8 kg/s. Flow is steady and there is no heat transfer. Compute the shaft work interaction with the surroundings.
- 4.189 A pump draws water from a reservoir through a 150 mm diameter suction pipe and delivers it to a 75 mm diameter discharge pipe. The end of the suction pipe is 2 m below the free surface of the reservoir. The pressure gage on the discharge pipe (2 m above the reservoir surface) reads 170 kPa. The average speed in the discharge pipe is 3 m/s. If the pump efficiency is 75 percent, determine the power required to drive it.
- 4.190 All major harbors are equipped with fire boats for extinguishing ship fires. A 75 mm diameter hose is attached to the discharge of a 10 kW pump on such a boat. The nozzle attached to the end of the hose has a diameter of 25 mm. If the nozzle discharge is held 3 m above the surface of the water, determine the volume flow rate through the nozzle, the maximum height to which the water will rise, and the force on the boat if the water jet is directed horizontally over the stern.
- \*4.191 The total mass of the helicopter-type craft shown is 1500 kg. The pressure of the air is atmospheric at the outlet. Assume the flow is steady and one-dimensional. Treat the air as incompressible at standard conditions and calculate, for a hovering position, the speed of the air leaving the craft and the minimum power that must be delivered to the air by the propeller.

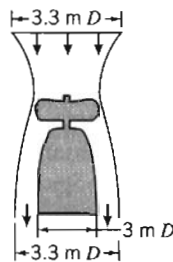

P4.191

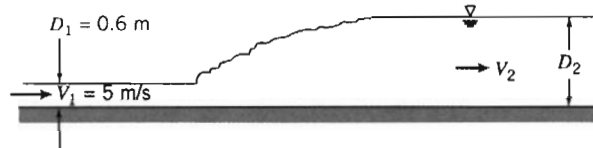

P4.192

- 4.192 Liquid flowing at high speed in a wide, horizontal open channel under some conditions can undergo a hydraulic jump, as shown. For a suitably chosen control volume, the flows entering and leaving the jump may be considered uniform with hydrostatic pressure distributions (see Example Problem 4.7). Consider a channel of width  $w$ , with water flow at  $D_1 = 0.6$  m and  $V_1 = 5$  m/s. Show that in general,  $D_2 = D_1[\sqrt{1 + 8V_1^2/gD_1} - 1]/2$ . Evaluate the change in mechanical energy through the hydraulic jump. If heat transfer to the surroundings is negligible, determine the change in water temperature through the jump.

\* This problem requires material from sections that may be omitted without loss of continuity in the text material.

# INTRODUCTION TO DIFFERENTIAL ANALYSIS OF FLUID MOTION

In Chapter 4, we developed the basic equations in integral form for a control volume. Integral equations are useful when we are interested in the gross behavior of a flow field and its effect on various devices. However, the integral approach does not enable us to obtain detailed point-by-point knowledge of the flow field. For example, the integral approach could provide information on the lift generated by a wing; it could not be used to determine the pressure distribution that produced the lift on the wing.

To obtain detailed knowledge, we must apply the equations of fluid motion in differential form. In this chapter we shall develop differential equations for the conservation of mass and Newton's second law of motion. Since we are interested in formulating differential equations, our analysis will be in terms of infinitesimal systems and control volumes.

---

### 5-1 CONSERVATION OF MASS

In Chapter 2, we developed the field representation of fluid properties. The property fields are defined by continuous functions of the space coordinates and time. The density and velocity fields were related through conservation of mass in integral form in Chapter 4 (Eq. 4.12). In this chapter we shall derive the differential equation for conservation of mass in rectangular and in cylindrical coordinates. In both cases the derivation is carried out by applying conservation of mass to a differential control volume.

#### Rectangular Coordinate System

In rectangular coordinates, the control volume chosen is an infinitesimal cube with sides of length  $dx$ ,  $dy$ ,  $dz$  as shown in Fig. 5.1. The density at the center,  $O$ , of the control volume is assumed to be  $\rho$  and the velocity there is assumed to be  $\vec{V} = \hat{i}u + \hat{j}v + \hat{k}w$ .

To evaluate the properties at each of the six faces of the control surface, we use a Taylor series expansion about point  $O$ . For example, at the right face,

$$\rho \Big|_{x+dx/2} = \rho + \left( \frac{\partial \rho}{\partial x} \right) \frac{dx}{2} + \left( \frac{\partial^2 \rho}{\partial x^2} \right) \frac{1}{2!} \left( \frac{dx}{2} \right)^2 + \dots$$

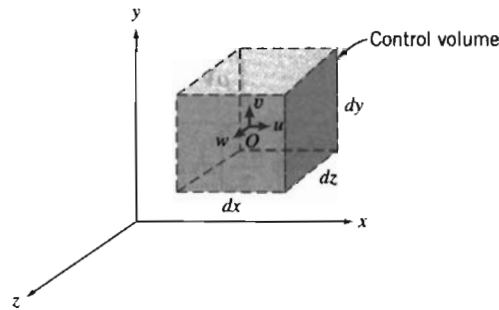


Fig. 5.1 Differential control volume in rectangular coordinates.

Neglecting higher-order terms, we can write

$$\rho \Big|_{x+dx/2} = \rho + \left( \frac{\partial \rho}{\partial x} \right) \frac{dx}{2}$$

and

$$u \Big|_{x+dx/2} = u + \left( \frac{\partial u}{\partial x} \right) \frac{dx}{2}$$

where  $\rho$ ,  $u$ ,  $\frac{\partial \rho}{\partial x}$ , and  $\frac{\partial u}{\partial x}$  are all evaluated at point  $O$ . The corresponding terms at the left face are

$$\rho \Big|_{x-dx/2} = \rho + \left( \frac{\partial \rho}{\partial x} \right) \left( -\frac{dx}{2} \right) = \rho - \left( \frac{\partial \rho}{\partial x} \right) \frac{dx}{2}$$

$$u \Big|_{x-dx/2} = u + \left( \frac{\partial u}{\partial x} \right) \left( -\frac{dx}{2} \right) = u - \left( \frac{\partial u}{\partial x} \right) \frac{dx}{2}$$

A word statement of conservation of mass is

$$\left[ \text{Net rate of mass flux out through the control surface} \right] + \left[ \text{Rate of change of mass inside the control volume} \right] = 0$$

To evaluate the first term in this equation, we must evaluate  $\int_{\text{CS}} \rho \vec{V} \cdot d\vec{A}$ ; we must consider the mass flux through each of the six surfaces of the control surface. The details of this evaluation are shown in Table 5.1. Velocity components at each of the six faces have been assumed to be in the positive coordinate directions and we have used the convention that the area normal is positive outwards on each face. Higher-order terms [e.g.,  $(dx)^2$ ] have been neglected.

We see that the net rate of mass flux out through the control surface is given by

$$\left[ \frac{\partial \rho u}{\partial x} + \frac{\partial \rho v}{\partial y} + \frac{\partial \rho w}{\partial z} \right] dx dy dz$$

The mass inside the control volume at any instant is the product of the mass per unit volume,  $\rho$ , and the volume,  $dx dy dz$ . Thus the rate of change of mass inside the control volume is given by

Table 5.1 Mass Flux through the Control Surface of a Rectangular Differential Control Volume

Surface	$\int \rho \vec{V} \cdot \delta \vec{A}$
Left (-x)	$= - \left[ \rho - \left( \frac{\partial \rho}{\partial x} \right) \frac{dx}{2} \right] \left[ u - \left( \frac{\partial u}{\partial x} \right) \frac{dx}{2} \right] dy dz = -\rho u dy dz + \frac{1}{2} \left[ u \left( \frac{\partial \rho}{\partial x} \right) + \rho \left( \frac{\partial u}{\partial x} \right) \right] dx dy dz$
Right (+x)	$= \left[ \rho + \left( \frac{\partial \rho}{\partial x} \right) \frac{dx}{2} \right] \left[ u + \left( \frac{\partial u}{\partial x} \right) \frac{dx}{2} \right] dy dz = \rho u dy dz + \frac{1}{2} \left[ u \left( \frac{\partial \rho}{\partial x} \right) + \rho \left( \frac{\partial u}{\partial x} \right) \right] dx dy dz$
Bottom (-y)	$= - \left[ \rho - \left( \frac{\partial \rho}{\partial y} \right) \frac{dy}{2} \right] \left[ v - \left( \frac{\partial v}{\partial y} \right) \frac{dy}{2} \right] dx dz = -\rho v dx dz + \frac{1}{2} \left[ v \left( \frac{\partial \rho}{\partial y} \right) + \rho \left( \frac{\partial v}{\partial y} \right) \right] dx dy dz$
Top (+y)	$= \left[ \rho + \left( \frac{\partial \rho}{\partial y} \right) \frac{dy}{2} \right] \left[ v + \left( \frac{\partial v}{\partial y} \right) \frac{dy}{2} \right] dx dz = \rho v dx dz + \frac{1}{2} \left[ v \left( \frac{\partial \rho}{\partial y} \right) + \rho \left( \frac{\partial v}{\partial y} \right) \right] dx dy dz$
Back (-z)	$= - \left[ \rho - \left( \frac{\partial \rho}{\partial z} \right) \frac{dz}{2} \right] \left[ w - \left( \frac{\partial w}{\partial z} \right) \frac{dz}{2} \right] dx dy = -\rho w dx dy + \frac{1}{2} \left[ w \left( \frac{\partial \rho}{\partial z} \right) + \rho \left( \frac{\partial w}{\partial z} \right) \right] dx dy dz$
Front (+z)	$= \left[ \rho + \left( \frac{\partial \rho}{\partial z} \right) \frac{dz}{2} \right] \left[ w + \left( \frac{\partial w}{\partial z} \right) \frac{dz}{2} \right] dx dy = \rho w dx dy + \frac{1}{2} \left[ w \left( \frac{\partial \rho}{\partial z} \right) + \rho \left( \frac{\partial w}{\partial z} \right) \right] dx dy dz$

Then,

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = \left[ \left\{ u \left( \frac{\partial \rho}{\partial x} \right) + \rho \left( \frac{\partial u}{\partial x} \right) \right\} + \left\{ v \left( \frac{\partial \rho}{\partial y} \right) + \rho \left( \frac{\partial v}{\partial y} \right) \right\} + \left\{ w \left( \frac{\partial \rho}{\partial z} \right) + \rho \left( \frac{\partial w}{\partial z} \right) \right\} \right] dx dy dz$$

or

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = \left[ \frac{\partial \rho u}{\partial x} + \frac{\partial \rho v}{\partial y} + \frac{\partial \rho w}{\partial z} \right] dx dy dz$$

$$\frac{\partial \rho}{\partial t} dx dy dz$$

In rectangular coordinates the differential equation for conservation of mass is then

$$\frac{\partial \rho u}{\partial x} + \frac{\partial \rho v}{\partial y} + \frac{\partial \rho w}{\partial z} + \frac{\partial \rho}{\partial t} = 0 \quad (5.1a)$$

Equation 5.1a is frequently called the *continuity equation*.

Since the vector operator,  $\nabla$ , in rectangular coordinates, is given by

$$\nabla = \hat{i} \frac{\partial}{\partial x} + \hat{j} \frac{\partial}{\partial y} + \hat{k} \frac{\partial}{\partial z}$$

then

$$\frac{\partial \rho u}{\partial x} + \frac{\partial \rho v}{\partial y} + \frac{\partial \rho w}{\partial z} = \nabla \cdot \rho \vec{V}$$

(Note that the del operator  $\nabla$  acts on  $\rho$  and  $\vec{V}$ !) and the conservation of mass may be written as

$$\nabla \cdot \rho \vec{V} + \frac{\partial \rho}{\partial t} = 0 \quad (5.1b)$$

Two flow cases for which the differential continuity equation may be simplified are worthy of note.

For an *incompressible* fluid,  $\rho = \text{constant}$ ; density is neither a function of space coordinates nor a function of time. For an incompressible fluid, the continuity equation simplifies to

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} + \frac{\partial w}{\partial z} = \nabla \cdot \vec{V} = 0 \quad (5.1c)$$

Thus the velocity field,  $\vec{V}(x, y, z, t)$ , for incompressible flow must satisfy  $\nabla \cdot \vec{V} = 0$ .

For *steady* flow, all fluid properties are, by definition, independent of time. Thus  $\partial \rho / \partial t = 0$  and at most  $\rho = \rho(x, y, z)$ . For steady flow, the continuity equation can be written as

$$\frac{\partial \rho u}{\partial x} + \frac{\partial \rho v}{\partial y} + \frac{\partial \rho w}{\partial z} = \nabla \cdot \rho \vec{V} = 0 \quad (5.1d)$$

(and remember that the del operator  $\nabla$  acts on  $\rho$  and  $\vec{V}$ ).

### EXAMPLE 5.1 Integration of Two-Dimensional Differential Continuity Equation

For a two-dimensional flow in the  $xy$  plane, the  $x$  component of velocity is given by  $u = Ax$ . Determine a possible  $y$  component for incompressible flow. How many  $y$  components are possible?

#### EXAMPLE PROBLEM 5.1

**GIVEN:** Two-dimensional flow in the  $xy$  plane for which  $u = Ax$ .

**FIND:** (a) Possible  $y$  component for incompressible flow.  
(b) Number of possible  $y$  components.

**SOLUTION:**

Governing equation:  $\nabla \cdot \rho \vec{V} + \frac{\partial \rho}{\partial t} = 0$

For incompressible flow this simplifies to  $\nabla \cdot \vec{V} = 0$ . In rectangular coordinates

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} + \frac{\partial w}{\partial z} = 0$$

For two-dimensional flow in the  $xy$  plane,  $\vec{V} = \vec{V}(x, y)$ . Then partial derivatives with respect to  $z$  are zero, and

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = 0$$

Then

$$\frac{\partial v}{\partial y} = -\frac{\partial u}{\partial x} = -A$$

which gives an expression for the rate of change of  $v$  holding  $x$  constant. This equation can be integrated to obtain an expression for  $v$ . The result is

$$v = \int \frac{\partial v}{\partial y} dy + f(x, t) = -Ay + f(x, t) \quad \leftarrow \text{_____} \quad v$$

{The function of  $x$  and  $t$  appears because we had a partial derivative of  $v$  with respect to  $y$ .}

Any function  $f(x, t)$  is allowable, since  $\frac{\partial}{\partial y} f(x, t) = 0$ . Thus any number of expressions for  $v$  could satisfy the differential continuity equation under the given conditions. The simplest expression for  $v$  would be obtained by setting  $f(x, t) = 0$ . Then  $v = -Ay$ , and

$$\vec{V} = Ax\hat{i} - Ay\hat{j} \quad \leftarrow \text{_____} \quad \vec{V}$$

This problem:

- ✓ Shows use of the differential continuity equation for obtaining information on a flow field.
- ✓ Demonstrates integration of a partial derivative.
- ✓ Proves that the flow originally discussed in Example Problem 2.1 is indeed incompressible.

## EXAMPLE 5.2 Unsteady Differential Continuity Equation

A gas-filled pneumatic strut in an automobile suspension system behaves like a piston-cylinder apparatus. At one instant when the piston is  $L = 0.15$  m away from the closed end of the cylinder, the gas density is uniform at  $\rho = 18$  kg/m<sup>3</sup> and the piston begins to move away from the closed end at  $V = 12$  m/s. The gas velocity is one-dimensional and proportional to distance from the closed end; it varies linearly from zero at the end to  $u = V$  at the piston. Evaluate the rate of change of gas density at this instant. Obtain an expression for the average density as a function of time.

### EXAMPLE PROBLEM 5.2


**GIVEN:** Piston-cylinder as shown.

**FIND:** (a) Rate of change of density.  
(b)  $\rho(t)$ .

**SOLUTION:**

Governing equation:  $\nabla \cdot \rho \vec{V} + \frac{\partial \rho}{\partial t} = 0$

In rectangular coordinates,  $\frac{\partial \rho u}{\partial x} + \frac{\partial \rho v}{\partial y} + \frac{\partial \rho w}{\partial z} + \frac{\partial \rho}{\partial t} = 0$

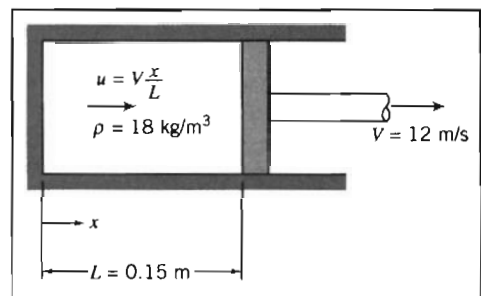



Since  $u = u(x)$ , partial derivatives with respect to  $y$  and  $z$  are zero, and

$$\frac{\partial \rho u}{\partial x} + \frac{\partial \rho}{\partial t} = 0$$

Then

$$\frac{\partial \rho}{\partial t} = -\frac{\partial \rho u}{\partial x} = -\rho \frac{\partial u}{\partial x} - u \frac{\partial \rho}{\partial x}$$

Since  $\rho$  is assumed uniform in the volume,  $\frac{\partial \rho}{\partial x} = 0$ , and  $\frac{\partial \rho}{\partial t} = \frac{d\rho}{dt} = -\rho \frac{\partial u}{\partial x}$ .

Since  $u = V \frac{x}{L}$ ,  $\frac{\partial u}{\partial x} = \frac{V}{L}$ , then  $\frac{d\rho}{dt} = -\rho \frac{V}{L}$ . However, note that  $L = L_0 + Vt$ .

Separate variables and integrate,

$$\int_{\rho_0}^{\rho} \frac{d\rho}{\rho} = -\int_0^t \frac{V}{L} dt = -\int_0^t \frac{V dt}{L_0 + Vt}$$

$$\ln \frac{\rho}{\rho_0} = \ln \frac{L_0}{L_0 + Vt} \quad \text{and} \quad \rho(t) = \rho_0 \left[ \frac{1}{1 + Vt/L_0} \right] \leftarrow \rho(t)$$

At  $t = 0$ ,

$$\frac{\partial \rho}{\partial t} = -\rho_0 \frac{V}{L} = -\frac{18 \text{ kg}}{\text{m}^3} \times \frac{12 \text{ m}}{\text{s}} \times \frac{1}{0.15 \text{ m}} = -1440 \text{ kg}/(\text{m}^3 \cdot \text{s}) \leftarrow \frac{\partial \rho}{\partial t}$$

This problem demonstrates use of the differential continuity equation for obtaining the density variation with time for an unsteady flow.



The density-time graph is shown in an *Excel* workbook. This workbook is interactive: It allows one to see the effect of different values of  $\rho_0$ ,  $L$ , and  $V$  on  $\rho$  versus  $t$ . Also, the time at which the density falls to any prescribed value can be determined.

## Cylindrical Coordinate System

A suitable differential control volume for cylindrical coordinates is shown in Fig. 5.2. The density at the center,  $O$ , of the control volume is assumed to be  $\rho$  and the velocity there is assumed to be  $\vec{V} = \hat{e}_r V_r + \hat{e}_\theta V_\theta + \hat{k} V_z$ , where  $\hat{e}_r$ ,  $\hat{e}_\theta$ , and  $\hat{k}$  are unit vectors in the  $r$ ,  $\theta$ , and  $z$  directions, respectively, and  $V_r$ ,  $V_\theta$ , and  $V_z$  are the velocity components in the  $r$ ,  $\theta$ , and  $z$  directions, respectively. To evaluate  $\int_{CS} \rho \vec{V} \cdot d\vec{A}$ , we must consider the mass flux through each of the six faces of the control surface. The properties at each of the six faces of the control surface are obtained from a Taylor series expansion about point  $O$ . The details of the mass flux evaluation are shown in Table 5.2. Velocity components  $V_r$ ,  $V_\theta$ , and  $V_z$  are all assumed to be in the positive coordinate directions and we have again used the convention that the area normal is positive outwards on each face, and higher-order terms have been neglected.

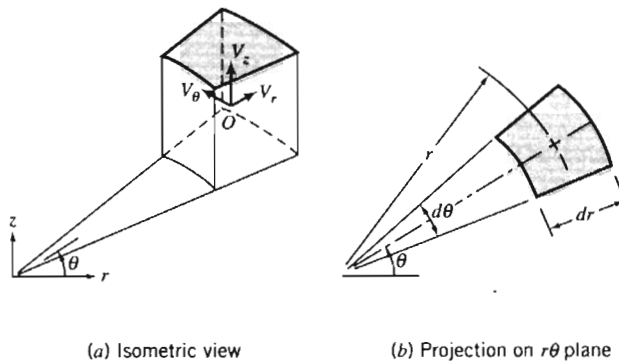


Fig. 5.2 Differential control volume in cylindrical coordinates.

We see that the net rate of mass flux out through the control surface is given by

$$\left[ \rho V_r + r \frac{\partial \rho V_r}{\partial r} + \frac{\partial \rho V_\theta}{\partial \theta} + r \frac{\partial \rho V_z}{\partial z} \right] dr d\theta dz$$

The mass inside the control volume at any instant is the product of the mass per unit volume,  $\rho$ , and the volume,  $r d\theta dr dz$ . Thus the rate of change of mass inside the control volume is given by

$$\frac{\partial \rho}{\partial t} r d\theta dr dz$$

In cylindrical coordinates the differential equation for conservation of mass is then

$$\rho V_r + r \frac{\partial \rho V_r}{\partial r} + \frac{\partial \rho V_\theta}{\partial \theta} + r \frac{\partial \rho V_z}{\partial z} + r \frac{\partial \rho}{\partial t} = 0$$

or

$$\frac{\partial(r\rho V_r)}{\partial r} + \frac{\partial \rho V_\theta}{\partial \theta} + r \frac{\partial \rho V_z}{\partial z} + r \frac{\partial \rho}{\partial t} = 0$$

Dividing by  $r$  gives

---


$$\frac{1}{r} \frac{\partial(r\rho V_r)}{\partial r} + \frac{1}{r} \frac{\partial(\rho V_\theta)}{\partial \theta} + \frac{\partial(\rho V_z)}{\partial z} + \frac{\partial \rho}{\partial t} = 0 \quad (5.2a)$$


---

In cylindrical coordinates the vector operator  $\nabla$  is given by

$$\nabla = \hat{e}_r \frac{\partial}{\partial r} + \hat{e}_\theta \frac{1}{r} \frac{\partial}{\partial \theta} + \hat{k} \frac{\partial}{\partial z} \quad (3.18)$$

Equation 5.2a also may be written<sup>1</sup> in vector notation as

$$\nabla \cdot \rho \vec{V} + \frac{\partial \rho}{\partial t} = 0 \quad (5.1b)$$

<sup>1</sup> To evaluate  $\nabla \cdot \rho \vec{V}$  in cylindrical coordinates, we must remember that

$$\frac{\partial \hat{e}_r}{\partial \theta} = \hat{e}_\theta \quad \text{and} \quad \frac{\partial \hat{e}_\theta}{\partial \theta} = -\hat{e}_r$$

Table 5.2 Mass Flux through the Control Surface of a Cylindrical Differential Control Volume


Surface	$\int \rho \vec{V} \cdot d\vec{A}$
Inside (-r)	$-\left[ \rho + \left( \frac{\partial \rho}{\partial r} \right) \frac{dr}{2} \right] \left[ V_r - \left( \frac{\partial V_r}{\partial r} \right) \frac{dr}{2} \right] \left( r - \frac{dr}{2} \right) d\theta dz = -\rho V_r r d\theta dz + \rho V_r \frac{dr}{2} d\theta dz + V_r \left( \frac{\partial \rho}{\partial r} \right) r \frac{dr}{2} d\theta dz$
Outside (+r)	$\left[ \rho + \left( \frac{\partial \rho}{\partial r} \right) \frac{dr}{2} \right] \left[ V_r + \left( \frac{\partial V_r}{\partial r} \right) \frac{dr}{2} \right] \left( r + \frac{dr}{2} \right) d\theta dz = \rho V_r r d\theta dz + \rho V_r \frac{dr}{2} d\theta dz + \rho \left( \frac{\partial V_r}{\partial r} \right) r \frac{dr}{2} d\theta dz + V_r \left( \frac{\partial \rho}{\partial r} \right) r \frac{dr}{2} d\theta dz$
Front (-\theta)	$-\left[ \rho - \left( \frac{\partial \rho}{\partial \theta} \right) \frac{d\theta}{2} \right] \left[ V_\theta - \left( \frac{\partial V_\theta}{\partial \theta} \right) \frac{d\theta}{2} \right] dr dz = -\rho V_\theta dr dz + \rho \left( \frac{\partial V_\theta}{\partial \theta} \right) \frac{d\theta}{2} dr dz + V_\theta \left( \frac{\partial \rho}{\partial \theta} \right) \frac{d\theta}{2} dr dz$
Back (+\theta)	$\left[ \rho + \left( \frac{\partial \rho}{\partial \theta} \right) \frac{d\theta}{2} \right] \left[ V_\theta + \left( \frac{\partial V_\theta}{\partial \theta} \right) \frac{d\theta}{2} \right] dr dz = \rho V_\theta dr dz + \rho \left( \frac{\partial V_\theta}{\partial \theta} \right) \frac{d\theta}{2} dr dz + V_\theta \left( \frac{\partial \rho}{\partial \theta} \right) \frac{d\theta}{2} dr dz$
Bottom (-z)	$-\left[ \rho - \left( \frac{\partial \rho}{\partial z} \right) \frac{dz}{2} \right] \left[ V_z - \left( \frac{\partial V_z}{\partial z} \right) \frac{dz}{2} \right] r d\theta dr = -\rho V_z r d\theta dr + \rho \left( \frac{\partial V_z}{\partial z} \right) \frac{dz}{2} r d\theta dr + V_z \left( \frac{\partial \rho}{\partial z} \right) \frac{dz}{2} r d\theta dr$
Top (+z)	$\left[ \rho + \left( \frac{\partial \rho}{\partial z} \right) \frac{dz}{2} \right] \left[ V_z + \left( \frac{\partial V_z}{\partial z} \right) \frac{dz}{2} \right] r d\theta dr = \rho V_z r d\theta dr + \rho \left( \frac{\partial V_z}{\partial z} \right) \frac{dz}{2} r d\theta dr + V_z \left( \frac{\partial \rho}{\partial z} \right) \frac{dz}{2} r d\theta dr$

Then,

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = \left[ \rho V_r + r \left\{ \rho \left( \frac{\partial V_r}{\partial r} \right) + V_r \left( \frac{\partial \rho}{\partial r} \right) \right\} + \left\{ \rho \left( \frac{\partial V_\theta}{\partial \theta} \right) + V_\theta \left( \frac{\partial \rho}{\partial \theta} \right) \right\} + r \left\{ \rho \left( \frac{\partial V_z}{\partial z} \right) + V_z \left( \frac{\partial \rho}{\partial z} \right) \right\} \right] dr d\theta dz$$

or

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = \left[ \rho V_r + r \frac{\partial \rho V_r}{\partial r} + \frac{\partial \rho V_\theta}{\partial \theta} + r \frac{\partial \rho V_z}{\partial z} \right] dr d\theta dz$$

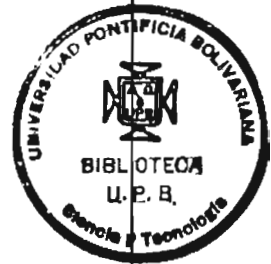

For an *incompressible* fluid,  $\rho = \text{constant}$ , and Eq. 5.2a reduces to

$$\frac{1}{r} \frac{\partial(rV_r)}{\partial r} + \frac{1}{r} \frac{\partial V_\theta}{\partial \theta} + \frac{\partial V_z}{\partial z} = \nabla \cdot \vec{V} = 0 \quad (5.2b)$$

Thus the velocity field,  $\vec{V}(x, y, z, t)$ , for incompressible flow must satisfy  $\nabla \cdot \vec{V} = 0$ . For *steady* flow, Eq. 5.2a reduces to

$$\frac{1}{r} \frac{\partial(r\rho V_r)}{\partial r} + \frac{1}{r} \frac{\partial(\rho V_\theta)}{\partial \theta} + \frac{\partial(\rho V_z)}{\partial z} = \nabla \cdot \rho \vec{V} = 0 \quad (5.2c)$$

(and remember once again that the del operator  $\nabla$  acts on  $\rho$  and  $\vec{V}$ ).

When written in vector form, the differential continuity equation (the mathematical statement of conservation of mass), Eq. 5.1b, may be applied in any coordinate system. We simply substitute the appropriate expression for the vector operator  $\nabla$ . In retrospect, this result is not surprising since mass must be conserved regardless of our choice of coordinate system.

### EXAMPLE 5.3 Differential Continuity Equation in Cylindrical Coordinates

Consider a one-dimensional radial flow in the  $r\theta$  plane, characterized by  $V_r = f(r)$  and  $V_\theta = 0$ . Determine the conditions on  $f(r)$  required for the flow to be incompressible.

#### EXAMPLE PROBLEM 5.3

**GIVEN:** One-dimensional radial flow in the  $r\theta$  plane:  $V_r = f(r)$  and  $V_\theta = 0$ .

**FIND:** Requirements on  $f(r)$  for incompressible flow.

**SOLUTION:**

Governing equation:  $\nabla \cdot \rho \vec{V} + \frac{\partial \rho}{\partial t} = 0$

For incompressible flow in cylindrical coordinates this reduces to Eq. 5.2b,

$$\frac{1}{r} \frac{\partial}{\partial r}(rV_r) + \frac{1}{r} \frac{\partial}{\partial \theta} V_\theta + \frac{\partial V_z}{\partial z} = 0$$

For the given velocity field,  $\vec{V} = \vec{V}(r)$ .  $V_\theta = 0$  and partial derivatives with respect to  $z$  are zero, so

$$\frac{1}{r} \frac{\partial}{\partial r}(rV_r) = 0$$

Integrating with respect to  $r$  gives

$$rV_r = \text{constant}$$

Thus the continuity equation shows that the radial velocity must be  $V_r = f(r) = C/r$  for one-dimensional radial flow of an incompressible fluid. This is not a surprising result: As the fluid moves outwards from the center, the volume flow rate (per unit depth in the  $z$  direction)  $Q = 2\pi rV$  at any radius  $r$  is constant.

## \*5.2 STREAM FUNCTION FOR TWO-DIMENSIONAL INCOMPRESSIBLE FLOW

We have already been introduced to the notion of streamlines in Chapter 2, where we described them as lines tangent to the instantaneous velocity vectors at every point. We can now make a more formal definition of the *stream function*,  $\psi$ . The concept of the stream function allows us to mathematically represent two entities—the velocity components  $u(x, y, t)$  and  $v(x, y, t)$  of a two-dimensional incompressible flow—using a single function  $\psi(x, y, t)$ . The stream function is defined by

$$u \equiv \frac{\partial \psi}{\partial y} \quad \text{and} \quad v \equiv -\frac{\partial \psi}{\partial x} \quad (5.3)$$

Why this definition? Because it guarantees that *any* continuous function  $\psi(x, y, t)$  automatically satisfies the two-dimensional form of the incompressible continuity equation! For two-dimensional, incompressible flow in the  $x$ - $y$  plane, Eq 5.1c becomes

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = 0 \quad (5.4)$$

and

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = \frac{\partial^2 \psi}{\partial x \partial y} - \frac{\partial^2 \psi}{\partial y \partial x} = 0$$

We have previously (in Example Problem 2.1) used the fact that at each point the streamlines are tangent to the instantaneous velocity vectors. This means that

$$\left. \frac{dy}{dx} \right)_{\text{streamline}} = \frac{v}{u}$$

Thus we obtain the equation of a streamline in a two-dimensional flow,

$$u \, dy - v \, dx = 0$$

Substituting for the velocity components,  $u$  and  $v$ , in terms of the stream function,  $\psi$ , from Eq. 5.3, we find that along a streamline,

$$\frac{\partial \psi}{\partial x} \, dx + \frac{\partial \psi}{\partial y} \, dy = 0 \quad (5.5)$$

Since  $\psi = \psi(x, y, t)$ , then at an instant,  $t_0$ ,  $\psi = \psi(x, y, t_0)$ ; at this instant, a change in  $\psi$  may be evaluated as though  $\psi = \psi(x, y)$ . Thus, at any instant,

$$d\psi = \frac{\partial \psi}{\partial x} \, dx + \frac{\partial \psi}{\partial y} \, dy \quad (5.6)$$

Comparing Eqs. 5.5 and 5.6, we see that along an instantaneous streamline,  $d\psi = 0$ ; in other words,  $\psi$  is a constant along a streamline. Hence we can specify individual streamlines by their stream function values:  $\psi = 0, 1, 2$ , etc. What is the significance of the  $\psi$  values? The answer is that they can be used to obtain the volume flow rate

\* This section may be omitted without loss of continuity in the text material.

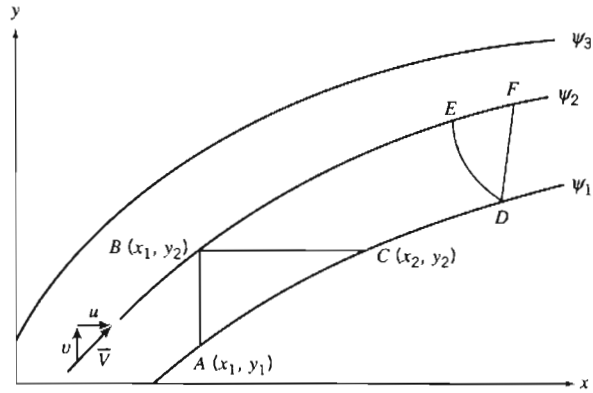


Fig. 5.3 Instantaneous streamlines in a two-dimensional flow.

between any two streamlines. Consider the streamlines shown in Fig. 5.3. We can compute the volume flow rate between streamlines  $\psi_1$  and  $\psi_2$  by using line  $AB$ ,  $BC$ ,  $DE$ , or  $EF$  (recall that there is no flow *across* a streamline).

Let us compute the flow rate by using line  $AB$ , and also by using line  $BC$ .

For a unit depth (dimension perpendicular to the  $xy$  plane), the flow rate across  $AB$  is

$$Q = \int_{y_1}^{y_2} u \, dy = \int_{y_1}^{y_2} \frac{\partial \psi}{\partial y} \, dy$$

But along  $AB$ ,  $x = \text{constant}$ , and (from Eq. 5.6)  $d\psi = \partial\psi/\partial y \, dy$ . Therefore,

$$Q = \int_{y_1}^{y_2} \frac{\partial \psi}{\partial y} \, dy = \int_{\psi_1}^{\psi_2} d\psi = \psi_2 - \psi_1$$

For a unit depth, the flow rate across  $BC$  is

$$Q = \int_{x_1}^{x_2} v \, dx = - \int_{x_1}^{x_2} \frac{\partial \psi}{\partial x} \, dx$$

Along  $BC$ ,  $y = \text{constant}$ , and (from Eq. 5.6)  $d\psi = \partial\psi/\partial x \, dx$ . Therefore,

$$Q = - \int_{x_1}^{x_2} \frac{\partial \psi}{\partial x} \, dx = - \int_{\psi_2}^{\psi_1} d\psi = \psi_2 - \psi_1$$

Thus the volume flow rate (per unit depth) between any two streamlines can be written as the difference between the constant values of  $\psi$  defining the two streamlines.<sup>2</sup> If the streamline through the origin is designated  $\psi = 0$ , then the  $\psi$  value for any other streamline represents the flow between the origin and that streamline. [We are free to select any streamline as the zero streamline because the stream function is

<sup>2</sup> For two-dimensional steady compressible flow in the  $xy$  plane, the stream function,  $\psi$ , is defined such that

$$\rho u \equiv \frac{\partial \psi}{\partial y} \quad \text{and} \quad \rho v \equiv - \frac{\partial \psi}{\partial x}$$

The difference between the constant values of  $\psi$  defining two streamlines is then the mass flow rate (per unit depth) between the two streamlines.

defined as a differential (Eq. 5.3); also, the flow rate will always be given by a *difference* of  $\psi$  values.] Note that because the volume flow between any two streamlines is constant, *the velocity will be relatively high wherever the streamlines are close together, and relatively low wherever the streamlines are far apart*—a very useful concept for “eyeballing” velocity fields to see where we have regions of high or low velocity.

For a two-dimensional, incompressible flow in the  $r\theta$  plane, conservation of mass, Eq. 5.2b, can be written as

$$\frac{\partial(rV_r)}{\partial r} + \frac{\partial V_\theta}{\partial \theta} = 0 \quad (5.7)$$

The stream function,  $\psi(r, \theta, t)$ , then is defined such that

$$V_r \equiv \frac{1}{r} \frac{\partial \psi}{\partial \theta} \quad \text{and} \quad V_\theta \equiv -\frac{\partial \psi}{\partial r} \quad (5.8)$$

With  $\psi$  defined according to Eq. 5.8, the continuity equation, Eq. 5.7, is satisfied exactly.

#### EXAMPLE 5.4 Stream Function for Flow in a Corner

Given the velocity field for the steady, incompressible flow of Example 2.1,  $\vec{V} = Ax\hat{i} - Ay\hat{j}$ , with  $A = 0.3 \text{ s}^{-1}$ , determine the stream function that will yield this velocity field. Plot and interpret the streamline pattern in the first and second quadrants of the  $xy$  plane.

#### EXAMPLE PROBLEM 5.4

**GIVEN:** Velocity field,  $\vec{V} = Ax\hat{i} - Ay\hat{j}$ , with  $A = 0.3 \text{ s}^{-1}$ .

**FIND:** Stream function  $\psi$  and plot in first and second quadrants; interpret the results.

**SOLUTION:**

The flow is incompressible, so the stream function satisfies Eq. 5.3.

From Eq. 5.3,  $u = \frac{\partial \psi}{\partial y}$  and  $v = -\frac{\partial \psi}{\partial x}$ . From the given velocity field,

$$u = Ax = \frac{\partial \psi}{\partial y}$$

Integrating with respect to  $y$  gives

$$\psi = \int \frac{\partial \psi}{\partial y} dy + f(x) = Axy + f(x) \quad (1)$$

where  $f(x)$  is arbitrary. The function  $f(x)$  may be evaluated using the equation for  $v$ . Thus, from Eq. 1,

$$v = -\frac{\partial \psi}{\partial x} = -Ay - \frac{df}{dx} \quad (2)$$

From the given velocity field,  $v = -Ay$ . Comparing this with Eq. 2 shows that  $\frac{df}{dx} = 0$ , or  $f(x) = \text{constant}$ . Therefore, Eq. 1 becomes


$$\psi = Axy + c \longleftarrow \psi$$

Lines of constant  $\psi$  represent streamlines in the flow field. The constant  $c$  may be chosen as any convenient value for plotting purposes. The constant is chosen as zero in order that the streamline through the origin be designated as  $\psi = \psi_1 = 0$ . Then the value for any other streamline represents the flow between the origin and that streamline. With  $c = 0$  and  $A = 0.3 \text{ s}^{-1}$ , then

$$\psi = 0.3xy \quad (\text{m}^3/\text{s}/\text{m})$$

{This equation of a streamline is identical to the result ( $xy = \text{constant}$ ) obtained in Example Problem 2.1.}

Separate plots of the streamlines in the first and second quadrants are presented below. Note that in quadrant 1,  $u > 0$ , so  $\psi$  values are positive. In quadrant 2,  $u < 0$ , so  $\psi$  values are negative.

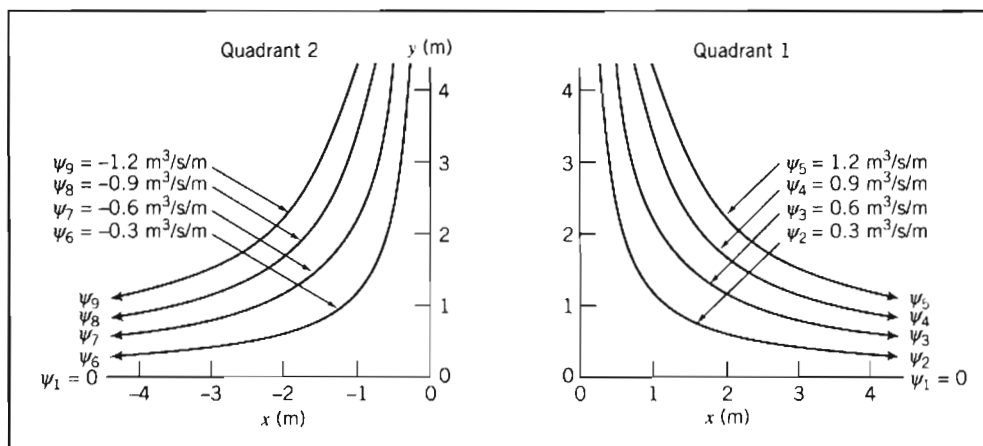

In the first quadrant, since  $u > 0$  and  $v < 0$ , the flow is from left to right and down. The volume flow rate between the streamline  $\psi = \psi_1$  through the origin and the streamline  $\psi = \psi_2$  is

$$Q_{12} = \psi_2 - \psi_1 = 0.3 \text{ m}^3/\text{s}/\text{m}$$

In the second quadrant, since  $u < 0$  and  $v < 0$ , the flow is from right to left and down. The volume flow rate between streamlines  $\psi_7$  and  $\psi_9$  is

$$Q_{79} = \psi_9 - \psi_7 = [-1.2 - (-0.6)] \text{ m}^3/\text{s}/\text{m} = -0.6 \text{ m}^3/\text{s}/\text{m}$$

The negative sign is consistent with flow having  $u < 0$ .

As both the streamline spacing in the graphs and the equation for  $\vec{V}$  indicate, the velocity is smallest near the origin (a "corner").



There is an *Excel* workbook for this problem that can be used to generate streamlines for this and many other stream functions.



### 5-3 MOTION OF A FLUID PARTICLE (KINEMATICS)

Figure 5.4 shows a typical finite fluid element, within which we have selected an infinitesimal particle of mass  $dm$  and initial volume  $dx\,dy\,dz$ , at time  $t$ , and as it (and the infinitesimal particle) may appear after a time interval  $dt$ . The finite element has moved and changed its shape and orientation. Note that while the finite element has quite severe distortion, the infinitesimal particle has changes in shape limited to stretching/shrinking and rotation of the element's sides—this is because we are considering both an infinitesimal time step and particle, so that the sides remain straight. We will examine the infinitesimal particle so that we will eventually obtain results applicable to a point. We can decompose this particle's motion into four components: *translation*, in which the particle moves from one point to another; *rotation* of the particle, which can occur about any or all of the  $x$ ,  $y$  or  $z$  axes; *linear deformation*, in which the particle's sides stretch or contract; and *angular deformation*, in which the angles (which were initially  $90^\circ$  for our particle) between the sides change.

It may seem difficult by looking at Fig. 5.4 to distinguish between rotation and angular deformation of the infinitesimal fluid particle. It is important to do so, because pure rotation involves no deformation but angular deformation does and, as we learned in Chapter 2, fluid deformation generates shear stresses. Figure 5.5 shows the  $xy$  plane motion decomposed into the four components described above, and as we examine each of these four components in turn we will see that we *can* distinguish between rotation and angular deformation.

#### Fluid Translation: Acceleration of a Fluid Particle in a Velocity Field

The translation of a fluid particle is obviously connected with the velocity field  $\vec{V} = \vec{V}(x, y, z, t)$  that we previously discussed in Section 2-2. We will need the acceleration of a fluid particle for use in Newton's second law. It might seem that we could simply compute this as  $\vec{a} = \partial\vec{V}/\partial t$ . This is incorrect, because  $\vec{V}$  is a *field*, i.e., it describes the whole flow and not just the motion of an individual particle. (We can see that this way of computing is incorrect by examining Example Problem 5.4, in which particles are clearly accelerating and decelerating so  $\vec{a} \neq 0$ , but  $\partial\vec{V}/\partial t = 0$ .)

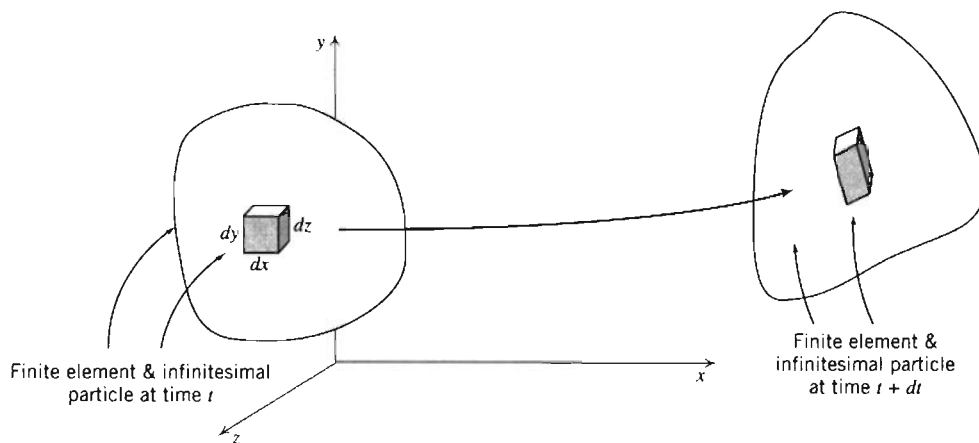


Fig. 5.4 Finite fluid element and infinitesimal particle at times  $t$  and  $t + dt$ .

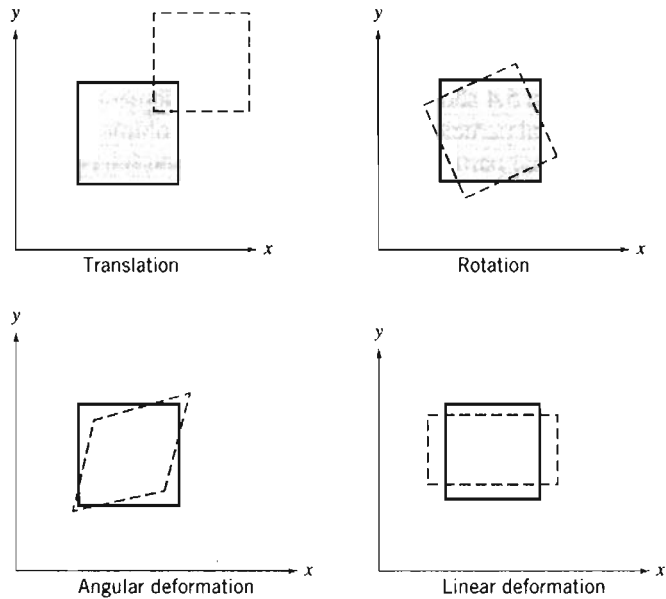


Fig. 5.5 Pictorial representation of the components of fluid motion.

The problem, then, is to retain the field description for fluid properties and obtain an expression for the acceleration of a fluid particle as it moves in a flow field. Stated simply, the problem is:

Given the velocity field,  $\vec{V} = \vec{V}(x, y, z, t)$ , find the acceleration of a fluid particle,  $\vec{a}_p$ .

Consider a particle moving in a velocity field. At time  $t$ , the particle is at the position  $x, y, z$  and has a velocity corresponding to the velocity at that point in space at time  $t$ ,

$$\vec{V}_p|_t = \vec{V}(x, y, z, t)$$

At  $t + dt$ , the particle has moved to a new position, with coordinates  $x + dx, y + dy, z + dz$ , and has a velocity given by

$$\vec{V}_p|_{t+dt} = \vec{V}(x + dx, y + dy, z + dz, t + dt)$$

This is shown pictorially in Fig. 5.6.

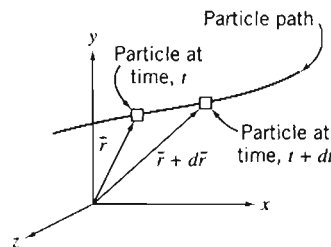


Fig. 5.6 Motion of a particle in a flow field.

The particle velocity at time  $t$  (position  $\vec{r}$ ) is given by  $\vec{V}_p = \vec{V}(x, y, z, t)$ . Then  $d\vec{V}_p$ , the change in the velocity of the particle, in moving from location  $\vec{r}$  to  $\vec{r} + d\vec{r}$ , is given by the chain rule,

$$d\vec{V}_p = \frac{\partial \vec{V}}{\partial x} dx_p + \frac{\partial \vec{V}}{\partial y} dy_p + \frac{\partial \vec{V}}{\partial z} dz_p + \frac{\partial \vec{V}}{\partial t} dt$$

The total acceleration of the particle is given by

$$\vec{a}_p = \frac{d\vec{V}_p}{dt} = \frac{\partial \vec{V}}{\partial x} \frac{dx_p}{dt} + \frac{\partial \vec{V}}{\partial y} \frac{dy_p}{dt} + \frac{\partial \vec{V}}{\partial z} \frac{dz_p}{dt} + \frac{\partial \vec{V}}{\partial t}$$

Since

$$\frac{dx_p}{dt} = u, \quad \frac{dy_p}{dt} = v, \quad \text{and} \quad \frac{dz_p}{dt} = w,$$

we have

$$\vec{a}_p = \frac{d\vec{V}_p}{dt} = u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + w \frac{\partial \vec{V}}{\partial z} + \frac{\partial \vec{V}}{\partial t}$$

To remind us that calculation of the acceleration of a fluid particle in a velocity field requires a special derivative, it is given the symbol  $D\vec{V}/Dt$ . Thus

---


$$\frac{D\vec{V}}{Dt} \equiv \vec{a}_p = u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + w \frac{\partial \vec{V}}{\partial z} + \frac{\partial \vec{V}}{\partial t} \quad (5.9)$$


---

The derivative,  $D\vec{V}/Dt$ , defined by Eq. 5.9, is commonly called the *substantial derivative* to remind us that it is computed for a particle of "substance." It often is called the *material derivative* or *particle derivative*.

From Eq. 5.9 we recognize that a fluid particle moving in a flow field may undergo acceleration for either of two reasons. As an illustration, refer to Example Problem 5.4. This is a steady flow in which particles are *convected* toward the low-velocity region (near the "corner"), and then away to a high-velocity region.<sup>3</sup> If a flow field is unsteady a fluid particle will undergo an additional *local* acceleration, because the velocity field is a function of time.

The physical significance of the terms in Eq. 5.9 is

$$\vec{a}_p = \frac{D\vec{V}}{Dt} = \underbrace{u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + w \frac{\partial \vec{V}}{\partial z}}_{\text{convective acceleration}} + \frac{\partial \vec{V}}{\partial t}_{\text{local acceleration}}$$

total acceleration of a particle

The convective acceleration may be written as a single vector expression using the gradient operator  $\nabla$ . Thus

$$u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + w \frac{\partial \vec{V}}{\partial z} = (\vec{V} \cdot \nabla) \vec{V}$$

<sup>3</sup>Convective accelerations are demonstrated and calculation of total acceleration of a fluid particle is illustrated in the NCFMF video *Eulerian and Lagrangian Descriptions in Fluid Mechanics*.

(We suggest that you check this equality by expanding the right side of the equation using the familiar dot product operation.) Thus Eq. 5.9 may be written as (5.10)

$$\frac{D\vec{V}}{Dt} \equiv \vec{a}_p = (\vec{V} \cdot \nabla) \vec{V} + \frac{\partial \vec{V}}{\partial t}$$

For a *two-dimensional flow*, say  $\vec{V} = \vec{V}(x, y, t)$ , Eq. 5.9 reduces to

$$\frac{D\vec{V}}{Dt} = u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + \frac{\partial \vec{V}}{\partial t}$$

For a *one-dimensional flow*, say  $\vec{V} = \vec{V}(x, t)$ , Eq. 5.9 becomes

$$\frac{D\vec{V}}{Dt} = u \frac{\partial \vec{V}}{\partial x} + \frac{\partial \vec{V}}{\partial t}$$

Finally, for a *steady flow in three dimensions*, Eq. 5.9 becomes

$$\frac{D\vec{V}}{Dt} = u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + w \frac{\partial \vec{V}}{\partial z}$$

which, as we have seen, is not necessarily zero. Thus a fluid particle may undergo a convective acceleration due to its motion, even in a steady velocity field.

Equation 5.9 is a vector equation. As with all vector equations, it may be written in scalar component equations. Relative to an  $xyz$  coordinate system, the scalar components of Eq. 5.9 are written

---


$$a_{x_p} = \frac{Du}{Dt} = u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} + w \frac{\partial u}{\partial z} + \frac{\partial u}{\partial t} \quad (5.11a)$$

$$a_{y_p} = \frac{Dv}{Dt} = u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} + w \frac{\partial v}{\partial z} + \frac{\partial v}{\partial t} \quad (5.11b)$$

$$a_{z_p} = \frac{Dw}{Dt} = u \frac{\partial w}{\partial x} + v \frac{\partial w}{\partial y} + w \frac{\partial w}{\partial z} + \frac{\partial w}{\partial t} \quad (5.11c)$$


---

The components of acceleration in cylindrical coordinates may be obtained from Eq. 5.10 by expressing the velocity,  $\vec{V}$ , in cylindrical coordinates (Section 5-1) and utilizing the appropriate expression (Eq. 3.18) for the vector operator  $\nabla$ . Thus,<sup>4</sup>

---


$$a_{r_p} = V_r \frac{\partial V_r}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_r}{\partial \theta} - \frac{V_\theta^2}{r} + V_z \frac{\partial V_r}{\partial z} + \frac{\partial V_r}{\partial t} \quad (5.12a)$$

$$a_{\theta_p} = V_r \frac{\partial V_\theta}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_\theta}{\partial \theta} + \frac{V_r V_\theta}{r} + V_z \frac{\partial V_\theta}{\partial z} + \frac{\partial V_\theta}{\partial t} \quad (5.12b)$$

$$a_{z_p} = V_r \frac{\partial V_z}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_z}{\partial \theta} + V_z \frac{\partial V_z}{\partial z} + \frac{\partial V_z}{\partial t} \quad (5.12c)$$


---

Equations 5.9, 5.11, and 5.12 are useful for computing the acceleration of a fluid particle anywhere in a flow from the velocity field (a function of  $x, y, z$ , and  $t$ );


<sup>4</sup> In evaluating  $(\vec{V} \cdot \nabla)\vec{V}$ , recall that  $\hat{e}_r$  and  $\hat{e}_\theta$  are functions of  $\theta$  (see footnote 1 on p. 190).

this is the *Eulerian* method of description, the most-used approach in fluid mechanics.

As an alternative (e.g., if we wish to track an individual particle's motion in, for example, pollution studies) we sometimes use the *Lagrangian* description of particle motion, in which the acceleration, position, and velocity of a particle are specified as a function of time only. Both descriptions are illustrated in Example Problem 5.5.

### EXAMPLE 5.5 Particle Acceleration in Eulerian and Lagrangian Descriptions

Consider two-dimensional, steady, incompressible flow through the plane converging channel shown. The velocity on the horizontal centerline ( $x$  axis) is given by  $\vec{V} = V_1[1 + (x/L)]\hat{i}$ . Find the acceleration for a particle moving along that centerline. If we use the method of description of particle mechanics, the position of the particle, located at  $x = 0$  at time  $t = 0$ , will be a function of time,  $x_p = f(t)$ . Obtain the expression for  $f(t)$  and then, by taking the second derivative of the function with respect to time, obtain an expression for the  $x$  component of the particle acceleration.

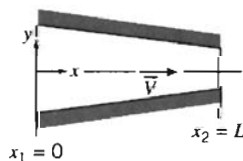


#### EXAMPLE PROBLEM 5.5

**GIVEN:** Steady, two-dimensional, incompressible flow through the converging channel shown.

$$\vec{V} = V_1 \left( 1 + \frac{x}{L} \right) \hat{i} \quad \text{on } x \text{ axis}$$

- FIND:**
- The acceleration of a particle moving along the  $x$  axis.
  - For the particle located at  $x = 0$  at  $t = 0$ , an expression for its
    - position,  $x_p$ , as a function of time.
    - $x$  component of acceleration,  $a_{x_p}$ , as a function of time.

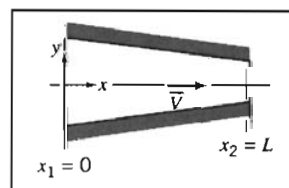

**SOLUTION:**

The acceleration of a particle moving in a velocity field is given by

$$\frac{D\vec{V}}{Dt} = u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + w \frac{\partial \vec{V}}{\partial z} + \frac{\partial \vec{V}}{\partial t}$$

The  $x$  component of acceleration of a particle is given by

$$\frac{Du}{Dt} = u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} + w \frac{\partial u}{\partial z} + \frac{\partial u}{\partial t}$$

For any particle on the  $x$  axis,  $v = w = 0$ , and  $u = V_1 \left( 1 + \frac{x}{L} \right)$ .

Therefore,  $\frac{Du}{Dt} = u \frac{\partial u}{\partial x} = V_1 \left( 1 + \frac{x}{L} \right) \frac{V_1}{L} = \frac{V_1^2}{L} \left( 1 + \frac{x}{L} \right)$   $\frac{Du}{Dt}$



{ To determine the acceleration of a particle at any point along the centerline of the channel, we }  
 { merely substitute the present location of the particle into the above result. }

In the second part of this problem we are interested in following a single particle, namely the one located at  $x = 0$  at  $t = 0$ , as it flows along the channel centerline.

The  $x$  coordinate that locates this particle will be a function of time,  $x_p = f(t)$ . Furthermore,  $u_p = df/dt$  will be a function of time. The particle will have the velocity corresponding to its location in the velocity field. At  $t = 0$ , the particle is at  $x = 0$ , and its velocity is  $u_p = V_1$ . At some later time,  $t$ , the particle will reach the exit,  $x = L$ ; at that time it will have velocity  $u_p = 2V_1$ . To find the expression for  $x_p = f(t)$ , we write

$$u_p = \frac{dx_p}{dt} = \frac{df}{dt} = V_1 \left( 1 + \frac{x}{L} \right) = V_1 \left( 1 + \frac{f}{L} \right)$$

Separating variables gives

$$\frac{df}{(1 + f/L)} = V_1 dt$$

Since at  $t = 0$ , the particle in question was located at  $x = 0$ , and at a later time  $t$ , this particle is located at  $x_p = f$ ,

$$\int_0^f \frac{df}{(1 + f/L)} = \int_0^t V_1 dt \quad \text{and} \quad L \ln \left( 1 + \frac{f}{L} \right) = V_1 t$$

Then,  $\ln \left( 1 + \frac{f}{L} \right) = \frac{V_1 t}{L}$ , or  $1 + \frac{f}{L} = e^{V_1 t/L}$

and

$$f = L[e^{V_1 t/L} - 1]$$

Then the position of the particle, located at  $x = 0$  at  $t = 0$ , is given as a function of time by

$$x_p = f(t) = L[e^{V_1 t/L} - 1] \quad \leftarrow x_p$$

The  $x$  component of acceleration of this particle is then

$$a_{x_p} = \frac{d^2 x_p}{dt^2} = \frac{d^2 f}{dt^2} = \frac{V_1^2}{L} e^{V_1 t/L} \quad \leftarrow a_{x_p}$$

We now have two different ways of expressing the acceleration of the particle that was located at  $x = 0$  at  $t = 0$ . Note that although the flow field is steady, when we follow a particular particle, its position and acceleration (and velocity) are functions of time.

We check to see that both expressions for acceleration give the same results:

$$a_{x_p} = \frac{V_1^2}{L} e^{V_1 t/L}$$

$$a_{x_p} = \frac{Du}{Dt} = \frac{V_1^2}{L} \left( 1 + \frac{x}{L} \right)$$

(a) At  $t = 0$ ,  $x_p = 0$

At  $t = 0$ , the particle is at  $x = 0$

$$a_{x_p} = \frac{V_1^2}{L} e^0 = \frac{V_1^2}{L} \quad \leftarrow \text{(a)}$$

$$\frac{Du}{Dt} = \frac{V_1^2}{L} (1 + 0) = \frac{V_1^2}{L} \quad \leftarrow \text{(a)}$$

Check.

(b) When  $x_p = \frac{L}{2}$ ,  $t = t_1$ ,

At  $x = 0.5L$

$$x_p = \frac{L}{2} = L[e^{V_1 t_1/L} - 1]$$

$$\frac{Du}{Dt} = \frac{V_1^2}{L} (1 + 0.5)$$

Therefore,  $e^{V_1 t_1/L} = 1.5$ , and

$$\frac{Du}{Dt} = \frac{1.5V_1^2}{L} \quad \leftarrow \text{(b)}$$

Check.

$$a_{x_p} = \frac{V_1^2}{L} e^{V_1 t_1/L}$$

$$a_{x_p} = \frac{V_1^2}{L} (1.5) = \frac{1.5V_1^2}{L} \longleftarrow \text{(b)}$$

(c) When  $x_p = L$ ,  $t = t_2$ ,

$$x_p = L = L[e^{V_1 t_2/L} - 1]$$

Therefore,  $e^{V_1 t_2/L} = 2$ , and

$$a_{x_p} = \frac{V_1^2}{L} e^{V_1 t_2/L}$$

$$a_{x_p} = \frac{V_1^2}{L} (2) = \frac{2V_1^2}{L} \longleftarrow \text{(c)}$$

At  $x = L$

$$\frac{Du}{Dt} = \frac{V_1^2}{L} (1 + 1)$$

$$\frac{Du}{Dt} = \frac{2V_1^2}{L} \longleftarrow \text{(c)}$$

Check.

This problem illustrates use of the Eulerian and Lagrangian descriptions of the motion of a fluid particle.

### Fluid Rotation

A fluid particle moving in a general three-dimensional flow field may rotate about all three coordinate axes. Thus particle rotation is a vector quantity and, in general,

$$\vec{\omega} = \hat{i}\omega_x + \hat{j}\omega_y + \hat{k}\omega_z$$

where  $\omega_x$  is the rotation about the  $x$  axis,  $\omega_y$  is the rotation about the  $y$  axis, and  $\omega_z$  is the rotation about the  $z$  axis. The positive sense of rotation is given by the right-hand rule.

We now see how we can extract the rotation component of the particle motion. Consider the  $xy$  plane view of the particle at time  $t$ . The left and lower sides of the particle are given by the two perpendicular line segments  $oa$  and  $ob$  of lengths  $\Delta x$  and  $\Delta y$ , respectively, shown in Fig. 5.7a. In general, after an interval  $\Delta t$  the particle will have translated to some new position, and also have rotated and deformed. A possible instantaneous orientation of the lines at time  $t + \Delta t$  is shown in Fig. 5.7b. Edge  $oa$  has rotated some angle  $\Delta\alpha$  counterclockwise (e.g.,  $6^\circ$ ) and edge  $ob$  has rotated some angle  $\Delta\beta$  clockwise (e.g.,  $4^\circ$ ). These rotations are caused partly by the particle rotating as a rigid body, and partly by the fact that the particle is undergoing an angular deformation.

It makes sense that we define the *rotation* of the particle about the  $z$  axis as the average of the angular motions of edges  $oa$  and  $ob$ . Computing this we obtain  $\frac{1}{2}(\Delta\alpha - \Delta\beta)$  (e.g.,  $\frac{1}{2}(6^\circ - 4^\circ) = 1^\circ$ ) *counterclockwise*, as shown in Fig. 5.7c (counterclockwise is considered positive because of the right-hand rule). This means that the total *angular deformation* of the particle must be given by the sum of the two equal angular deformations  $\frac{1}{2}(\Delta\alpha + \Delta\beta)$  (e.g.,  $\frac{1}{2}(6^\circ + 4^\circ) = 5^\circ$ ), as shown in Fig. 5.7d. Why *must* the two angular deformations be equal? The answer is that when the deformation of Fig. 5.7d is combined with the rotation of Fig. 5.7c we must obtain our original motion, Fig. 5.7b! For example, the angular motion of edge  $oa$ ,  $\Delta\alpha$  (e.g.,  $6^\circ$  counterclockwise) is obtained by

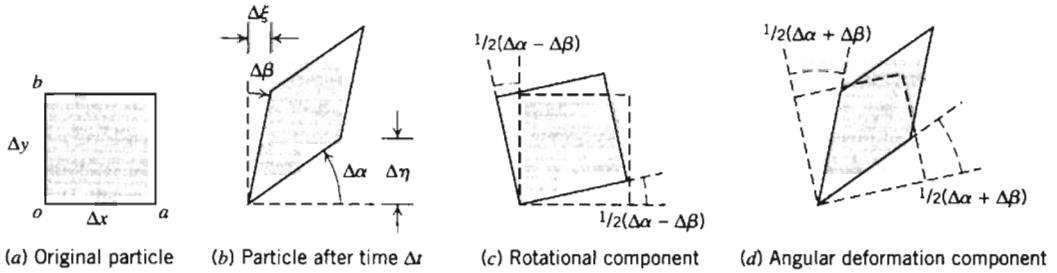


Fig. 5.7 Rotation and angular deformation of perpendicular line segments in a two-dimensional flow.

adding a pure rotation  $\frac{1}{2}(\Delta\alpha - \Delta\beta)$  (e.g.,  $1^\circ$ ), and a deformation  $\frac{1}{2}(\Delta\alpha + \Delta\beta)$  (e.g.,  $5^\circ$ ). (As an exercise, you can verify that the motion of edge  $ob$  can be similarly obtained.)

We need to convert these angular measures to quantities obtainable from the flow field. To do this, we recognize that (for small angles)  $\Delta\alpha = \Delta\eta/\Delta x$ , and  $\Delta\beta = \Delta\xi/\Delta y$ . But  $\Delta\xi$  arises because, if in interval  $\Delta t$  point  $o$  moves horizontally distance  $u\Delta t$ , then point  $b$  will have moved distance  $(u + \frac{\partial u}{\partial y}\Delta y)\Delta t$  (using a Taylor series expansion). Likewise,  $\Delta\eta$  arises because, if in interval  $\Delta t$  point  $o$  moves vertically distance  $v\Delta t$ , then point  $a$  will have moved distance  $(v + \frac{\partial v}{\partial x}\Delta x)\Delta t$ . Hence,

$$\Delta\xi = \left(u + \frac{\partial u}{\partial y}\Delta y\right)\Delta t - u\Delta t = \frac{\partial u}{\partial y}\Delta y\Delta t$$

and

$$\Delta\eta = \left(v + \frac{\partial v}{\partial x}\Delta x\right)\Delta t - v\Delta t = \frac{\partial v}{\partial x}\Delta x\Delta t$$

We can now compute the angular velocity of the particle about the  $z$  axis,  $\omega_z$ , by combining all these results:

$$\begin{aligned}\omega_z &= \lim_{\Delta t \rightarrow 0} \frac{\frac{1}{2}(\Delta\alpha - \Delta\beta)}{\Delta t} = \lim_{\Delta t \rightarrow 0} \frac{\frac{1}{2}\left(\frac{\Delta\eta}{\Delta x} - \frac{\Delta\xi}{\Delta y}\right)}{\Delta t} = \lim_{\Delta t \rightarrow 0} \frac{\frac{1}{2}\left(\frac{\partial v}{\partial x}\frac{\Delta x}{\Delta x}\Delta t - \frac{\partial u}{\partial y}\frac{\Delta y}{\Delta y}\Delta t\right)}{\Delta t} \\ \omega_z &= \frac{1}{2}\left(\frac{\partial v}{\partial x} - \frac{\partial u}{\partial y}\right)\end{aligned}$$

By considering the rotation of pairs of perpendicular line segments in the  $yz$  and  $xz$  planes, one can show similarly that

$$\omega_x = \frac{1}{2}\left(\frac{\partial w}{\partial y} - \frac{\partial v}{\partial z}\right) \quad \text{and} \quad \omega_y = \frac{1}{2}\left(\frac{\partial u}{\partial z} - \frac{\partial w}{\partial x}\right)$$

Then  $\vec{\omega} = \hat{i}\omega_x + \hat{j}\omega_y + \hat{k}\omega_z$  becomes

$$\vec{\omega} = \frac{1}{2}\left[\hat{i}\left(\frac{\partial w}{\partial y} - \frac{\partial v}{\partial z}\right) + \hat{j}\left(\frac{\partial u}{\partial z} - \frac{\partial w}{\partial x}\right) + \hat{k}\left(\frac{\partial v}{\partial x} - \frac{\partial u}{\partial y}\right)\right] \quad (5.13)$$

We recognize the term in the square brackets as

$$\text{curl } \vec{V} = \nabla \times \vec{V}$$

Then, in vector notation, we can write



$$\bar{\omega} = \frac{1}{2} \nabla \times \bar{V} \quad (5.14)$$

It is worth noting here that we should not confuse rotation of a fluid particle with flow consisting of circular streamlines, or *vortex* flow. As we will see in Example Problem 5.6, in such a flow the particles *could* rotate as they move in a circular motion, but they do not have to!

When might we expect to have a flow in which the particles rotate as they move ( $\bar{\omega} \neq 0$ )? One possibility is that we start out with a flow in which (for whatever reason) the particles already have rotation. On the other hand, if we assumed the particles are not initially rotating, particles will only begin to rotate if they experience a torque caused by surface shear stresses; the particle body forces and normal (pressure) forces may accelerate and deform the particle, but cannot generate a torque. We can conclude that rotation of fluid particles will *always* occur for flows in which we have shear stresses. We have already learned in Chapter 2 that shear stresses are present whenever we have a viscous fluid that is experiencing angular deformation (shearing). Hence we conclude that rotation of fluid particles only occurs in viscous flows<sup>5</sup> (unless the particles are initially rotating, as in Example Problem 3.10).

Flows for which no particle rotation occurs are called *irrotational* flows. Although no real flow is truly irrotational (all fluids have viscosity), it turns out that many flows can be successfully studied by assuming they are inviscid and irrotational, because viscous effects are often negligible.<sup>6</sup> As we discussed in Chapter 1, and will again in Chapter 6, much of aerodynamics theory assumes inviscid flow. We just need to be aware that in any flow there will always be regions (e.g., the boundary layer for flow over a wing) in which viscous effects cannot be ignored.

The factor of  $\frac{1}{2}$  can be eliminated from Eq. 5.14 by defining the *vorticity*,  $\bar{\zeta}$ , to be twice the rotation,

$$\bar{\zeta} \equiv 2\bar{\omega} = \nabla \times \bar{V} \quad (5.15)$$

The vorticity is a measure of the rotation of a fluid element as it moves in the flow field. In cylindrical coordinates the vorticity is<sup>7</sup>

$$\nabla \times \bar{V} = \hat{e}_r \left( \frac{1}{r} \frac{\partial V_z}{\partial \theta} - \frac{\partial V_\theta}{\partial z} \right) + \hat{e}_\theta \left( \frac{\partial V_r}{\partial z} - \frac{\partial V_z}{\partial r} \right) + \hat{k} \left( \frac{1}{r} \frac{\partial r V_\theta}{\partial r} - \frac{1}{r} \frac{\partial V_r}{\partial \theta} \right) \quad (5.16)$$

The *circulation*,  $\Gamma$  (which we will revisit in Example Problem 6.12), is defined as the line integral of the tangential velocity component about any closed curve fixed in the flow,

$$\Gamma = \oint_c \bar{V} \cdot d\bar{s} \quad (5.17)$$

where  $d\bar{s}$  is an elemental vector tangent to the curve and having length  $ds$  of the element of arc; a positive sense corresponds to a counterclockwise path of integration around the curve. We can develop a relationship between circulation and vorticity by considering the rectangular circuit shown in Fig. 5.8, where, the velocity components at  $o$  are assumed to be  $(u, v)$ , and the velocities along segments  $bc$  and  $ac$  can be derived using Taylor series approximations.

<sup>5</sup> A rigorous proof using the complete equations of motion for a fluid particle is given in [1], pp. 142–145.

<sup>6</sup> Examples of rotational and irrotational motion are shown in the NCFMF video *Vorticity*.

<sup>7</sup> In carrying out the curl operation, recall that  $\hat{e}_r$  and  $\hat{e}_\theta$  are functions of  $\theta$  (see footnote 1 on p. 190).

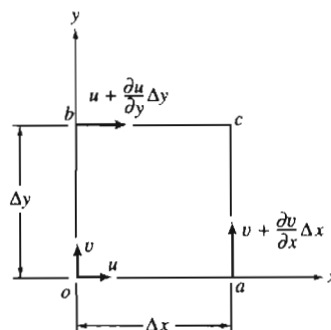


Fig. 5.8 Velocity components on the boundaries of a fluid element.

For the closed curve  $oacb$ ,

$$\Delta\Gamma = u\Delta x + \left(v + \frac{\partial v}{\partial x}\Delta x\right)\Delta y - \left(u + \frac{\partial u}{\partial y}\Delta y\right)\Delta x - v\Delta y$$

$$\Delta\Gamma = \left(\frac{\partial v}{\partial x} - \frac{\partial u}{\partial y}\right)\Delta x\Delta y$$

$$\Delta\Gamma = 2\omega_z\Delta x\Delta y$$

Then,

$$\Gamma = \oint_c \vec{V} \cdot d\vec{s} = \int_A 2\omega_z dA = \int_A (\nabla \times \vec{V})_z dA \quad (5.18)$$

Equation 5.18 is a statement of the Stokes Theorem in two dimensions. Thus the circulation around a closed contour is equal to the total vorticity enclosed within it.

### EXAMPLE 5.6 Free and Forced Vortex Flows

Consider flow fields with purely tangential motion (circular streamlines):  $V_r = 0$  and  $V_\theta = f(r)$ . Evaluate the rotation, vorticity, and circulation for rigid-body rotation, a *forced vortex*. Show that it is possible to choose  $f(r)$  so that flow is irrotational, i.e., to produce a *free vortex*.

#### EXAMPLE PROBLEM 5.6

**GIVEN:** Flow fields with tangential motion,  $V_r = 0$  and  $V_\theta = f(r)$ .

**FIND:** (a) Rotation, vorticity, and circulation for rigid-body motion (a *forced vortex*).  
(b)  $V_\theta = f(r)$  for irrotational motion (a *free vortex*).

**SOLUTION:**

Governing equation: 
$$\vec{\zeta} = 2\vec{\omega} = \nabla \times \vec{V} \quad (5.15)$$

For motion in the  $r\theta$  plane, the only components of rotation and vorticity are in the  $z$  direction,

$$\zeta_z = 2\omega_z = \frac{1}{r} \frac{\partial r V_\theta}{\partial r} - \frac{1}{r} \frac{\partial V_r}{\partial \theta}$$

Because  $V_r = 0$  everywhere in these fields, this reduces to  $\zeta_z = 2\omega_z = \frac{1}{r} \frac{\partial r V_\theta}{\partial r}$ .

- (a) For rigid-body rotation,
- $V_\theta = \omega r$
- .

$$\text{Then } \omega_z = \frac{1}{2} \frac{1}{r} \frac{\partial r V_\theta}{\partial r} = \frac{1}{2} \frac{1}{r} \frac{\partial}{\partial r} \omega r^2 = \frac{1}{2r} (2\omega r) = \omega \quad \text{and} \quad \zeta_z = 2\omega.$$

$$\text{The circulation is } \Gamma = \oint_C \vec{V} \cdot d\vec{s} = \int_A 2\omega_z dA. \quad (5.18)$$

Since  $\omega_z = \omega = \text{constant}$ , the circulation about any closed contour is given by  $\Gamma = 2\omega A$ , where  $A$  is the area enclosed by the contour. Thus for rigid-body motion (a forced vortex), the rotation and vorticity are constants; the circulation depends on the area enclosed by the contour.


- (b) For irrotational flow,
- $\frac{1}{r} \frac{\partial}{\partial r} r V_\theta = 0$
- . Integrating, we find

$$r V_\theta = \text{constant} \quad \text{or} \quad V_\theta = f(r) = \frac{C}{r}$$

For this flow, the origin is a singular point where  $V_\theta \rightarrow \infty$ . The circulation for any contour enclosing the origin is

$$\Gamma = \oint_C \vec{V} \cdot d\vec{s} = \int_0^{2\pi} \frac{C}{r} r d\theta = 2\pi C$$

The circulation around any contour *not* enclosing the singular point at the origin is zero. Streamlines for the two vortex flows are shown below, along with the location and orientation at different instants of a cross marked in the fluid that was initially at the 12 o'clock position. For the rigid-body motion (which occurs, for example, at the eye of a tornado, creating the "dead" region at the very center), the cross rotates as it moves in a circular motion; also, the streamlines are closer together as we move away from the origin. For the irrotational motion (which occurs, for example, outside the eye of a tornado—in such a large region viscous effects are negligible), the cross does not rotate as it moves in a circular motion; also, the streamlines are farther apart as we move away from the origin.

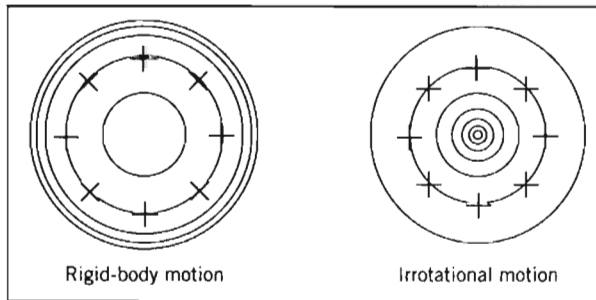

## Fluid Deformation

### a. Angular Deformation

As we discussed earlier (and as shown in Fig. 5.7d), the *angular deformation* of a particle is given by the sum of the two angular deformations, or in other words by  $(\Delta\alpha + \Delta\beta)$ .

We also recall that  $\Delta\alpha = \Delta\eta/\Delta x$ ,  $\Delta\beta = \Delta\xi/\Delta y$ , and  $\Delta\xi$  and  $\Delta\eta$  are given by

$$\Delta\xi = \left( u + \frac{\partial u}{\partial y} \Delta y \right) \Delta t - u \Delta t = \frac{\partial u}{\partial y} \Delta y \Delta t$$

and

$$\Delta\eta = \left( v + \frac{\partial v}{\partial x} \Delta x \right) \Delta t - v \Delta t = \frac{\partial v}{\partial x} \Delta x \Delta t$$

We can now compute the rate of angular deformation of the particle in the  $xy$  plane by combining these results,

$$\begin{aligned} \text{Rate of angular deformation in } xy \text{ plane} &= \lim_{\Delta t \rightarrow 0} \frac{(\Delta\alpha + \Delta\beta)}{\Delta t} = \lim_{\Delta t \rightarrow 0} \frac{\left( \frac{\Delta\eta}{\Delta x} + \frac{\Delta\xi}{\Delta y} \right)}{\Delta t} \\ \text{Rate of angular deformation in } xy \text{ plane} &= \lim_{\Delta t \rightarrow 0} \frac{\left( \frac{\partial v}{\partial x} \frac{\Delta x}{\Delta x} \Delta t + \frac{\partial u}{\partial y} \frac{\Delta y}{\Delta y} \Delta t \right)}{\Delta t} = \left( \frac{\partial v}{\partial x} + \frac{\partial u}{\partial y} \right) \quad (5.19a) \end{aligned}$$

Similar expressions can be written for the rate of angular deformation of the particle in the  $yz$  and  $zx$  planes,

$$\text{Rate of angular deformation in } yz \text{ plane} = \left( \frac{\partial w}{\partial y} + \frac{\partial v}{\partial z} \right) \quad (5.19b)$$

$$\text{Rate of angular deformation in } zx \text{ plane} = \left( \frac{\partial w}{\partial x} + \frac{\partial u}{\partial z} \right) \quad (5.19c)$$

We saw in Chapter 2 that for one-dimensional laminar Newtonian flow the shear stress is given by the rate of deformation ( $du/dy$ ) of the fluid particle,


$$\tau_{yx} = \mu \frac{du}{dy} \quad (2.10)$$

We will see shortly that we can generalize Eq. 2.10 to the case of three-dimensional laminar flow; this will lead to expressions for three-dimensional shear stresses involving the three rates of angular deformation given above. (Eq. 2.10 is a special case of Eq. 5.19a.)

The concepts of rotation and deformation are treated at length in the NCFMF video *Deformation of Continuous Media*. Calculation of angular deformation is illustrated for a simple flow field in Example Problem 5.7.

### EXAMPLE 5.7 Rotation in Viscometric Flow

A viscometric flow in the narrow gap between large parallel plates is shown. The velocity field in the narrow gap is given by  $\vec{V} = U(y/h)\hat{i}$ , where  $U = 4$  mm/s and  $h = 4$  mm. At  $t = 0$  line segments  $ac$  and  $bd$  are marked in the fluid to form a cross as shown. Evaluate the positions of the marked points at  $t = 1.5$  s and sketch for comparison. Calculate the rate of angular deformation and the rate of rotation of a fluid particle in this velocity field. Comment on your results.

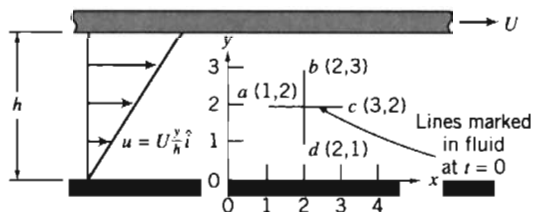

**EXAMPLE PROBLEM 5.7**

**GIVEN:** Velocity field,  $\vec{v} = U \frac{y}{h} \hat{i}$ ;  $U = 4$  mm/s, and  $h = 4$  mm. Fluid particles marked at  $t = 0$  to form cross as shown.


**FIND:** (a) Positions of points  $a'$ ,  $b'$ ,  $c'$ , and  $d'$  at  $t = 1.5$  s; plot.  
 (b) Rate of angular deformation.  
 (c) Rate of rotation of a fluid particle.  
 (d) Significance of these results.

**SOLUTION:**

For the given flow field  $v = 0$ , so there is no vertical motion. The velocity of each point stays constant, so  $\Delta x = u\Delta t$  for each point. At point  $b$ ,  $u = 3$  mm/s, so

$$\Delta x_b = \frac{3 \text{ mm}}{\text{s}} \times 1.5 \text{ s} = 4.5 \text{ mm}$$

Similarly, points  $a$  and  $c$  each move 3 mm, and point  $d$  moves 1.5 mm. The plot at  $t = 1.5$  s is

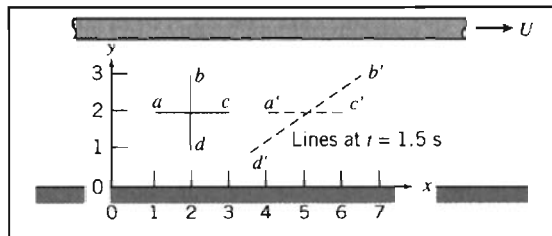

The rate of angular deformation is

$$\frac{\partial u}{\partial y} + \frac{\partial v}{\partial x} = U \frac{1}{h} + 0 = \frac{U}{h} = \frac{4 \text{ mm}}{\text{s}} \times \frac{1}{4 \text{ mm}} = 1 \text{ s}^{-1}$$

The rate of rotation is

$$\omega_z = \frac{1}{2} \left( \frac{\partial v}{\partial x} - \frac{\partial u}{\partial y} \right) = \frac{1}{2} \left( 0 - \frac{U}{h} \right) = -\frac{1}{2} \times \frac{4 \text{ mm}}{\text{s}} \times \frac{1}{4 \text{ mm}} = -0.5 \text{ s}^{-1}$$

In this problem we have a viscous flow, and hence should have expected both angular deformation and particle rotation.

**b. Linear Deformation**

During linear deformation, the shape of the fluid element, described by the angles at its vertices, remains unchanged, since all right angles continue to be right angles (see Fig. 5.5). The element will change length in the  $x$  direction only if  $\partial u/\partial x$  is other than zero. Similarly, a change in the  $y$  dimension requires a nonzero value of  $\partial v/\partial y$  and a change in the  $z$  dimension requires a nonzero value of  $\partial w/\partial z$ . These quantities represent the components of longitudinal rates of strain in the  $x$ ,  $y$ , and  $z$  directions, respectively.

Changes in length of the sides may produce changes in volume of the element. The rate of local instantaneous *volume dilation* is given by

$$\text{Volume dilation rate} = \frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} + \frac{\partial w}{\partial z} = \nabla \cdot \vec{V} \quad (5.20)$$


For incompressible flow, the rate of volume dilation is zero (Eq. 5.1c).

The velocity field  $\vec{V} = Ax\hat{i} - Ay\hat{j}$  represents flow in a “corner,” as shown in Example Problem 5.4, where  $A = 0.3 \text{ s}^{-1}$  and the coordinates are measured in meters. A square is marked in the fluid as shown at  $t = 0$ . Evaluate the new positions of the four corner points when point  $a$  has moved to  $x = \frac{3}{2} \text{ m}$  after  $\tau$  seconds. Evaluate the rates of linear deformation in the  $x$  and  $y$  directions. Compare area  $a'b'c'd'$  at  $t = \tau$  with area  $abcd$  at  $t = 0$ . Comment on the significance of this result.

$$\vec{V} = Ax\hat{i} - Ay\hat{j}; A = 0.3 \text{ s}^{-1}, x \text{ and } y \text{ in meters.}$$

Position of square at  $t = \tau$  when  $a$  is at  $a'$  at  $x = \frac{3}{2} \text{ m}$ .

Rates of linear deformation.  
Area  $a'b'c'd'$  compared with area  $abcd$ .  
Significance of the results.

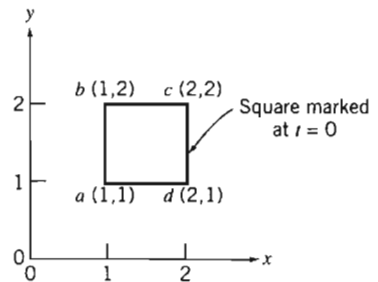

First we must find  $\tau$ , so we must follow a fluid particle using a Lagrangian description. Thus

$$u = \frac{dx_p}{dt} = Ax_p, \quad \frac{dx}{x} = A dt, \text{ so } \int_{x_0}^x \frac{dx}{x} = \int_0^\tau A dt \quad \text{and} \quad \ln \frac{x}{x_0} = A\tau$$

$$\tau = \frac{\ln x/x_0}{A} = \frac{\ln(\frac{3}{2})}{0.3 \text{ s}^{-1}} = 1.35 \text{ s}$$


In the  $y$  direction

$$v = \frac{dy_p}{dt} = -Ay_p, \quad \frac{dy}{y} = -A dt, \quad \frac{y}{y_0} = e^{-A\tau}$$

The point coordinates at  $\tau$  are:

The plot is:

Point	$t = 0$	$t = \tau$
$a$	(1, 1)	( $\frac{3}{2}$ , $\frac{2}{3}$ )
$b$	(1, 2)	( $\frac{3}{2}$ , $\frac{4}{3}$ )
$c$	(2, 2)	(3, $\frac{4}{3}$ )
$d$	(2, 1)	(3, $\frac{2}{3}$ )

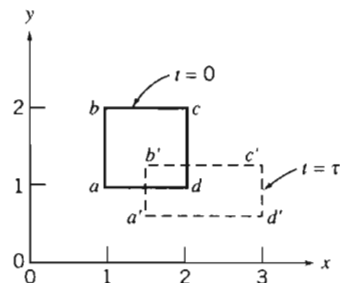

The rates of linear deformation are:

$$\frac{\partial u}{\partial x} = \frac{\partial}{\partial x} Ax = A = 0.3 \text{ s}^{-1} \quad \text{in the } x \text{ direction}$$

$$\frac{\partial v}{\partial y} = \frac{\partial}{\partial y} (-Ay) = -A = -0.3 \text{ s}^{-1} \quad \text{in the } y \text{ direction}$$

The rate of volume dilation is

$$\nabla \cdot \vec{V} = \frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = A - A = 0$$

Area  $abcd = 1 \text{ m}^2$  and area  $a'b'c'd' = (3 - \frac{3}{2})(\frac{4}{3} - \frac{2}{3}) = 1 \text{ m}^2$ .

Notes:

- ✓ Parallel planes remain parallel; there is linear deformation but no angular deformation.
- ✓ The flow is irrotational ( $\partial v/\partial x + \partial u/\partial y = 0$ ).
- ✓ Volume is conserved because the two rates of linear deformation are equal and opposite.
- ✓ The NCFMF video *Flow Visualization* uses hydrogen bubble time-streak markers to demonstrate experimentally that the area of a marked fluid square is conserved in two-dimensional incompressible flow.



The *Excel* workbook for this problem shows an animation of this motion.



We have shown in this section that the velocity field contains all information needed to determine the acceleration, rotation, angular deformation, and linear deformation of a fluid particle in a flow field.

## 5-4 MOMENTUM EQUATION

A dynamic equation describing fluid motion may be obtained by applying Newton's second law to a particle. To derive the differential form of the momentum equation, we shall apply Newton's second law to an infinitesimal fluid particle of mass  $dm$ .

Recall that Newton's second law for a finite system is given by

$$\vec{F} = \frac{d\vec{P}}{dt} \Bigg|_{\text{system}} \quad (4.2a)$$

where the linear momentum,  $\vec{P}$ , of the system is given by

$$\vec{P}_{\text{system}} = \int_{\text{mass(system)}} \vec{V} dm \quad (4.2b)$$

Then, for an infinitesimal system of mass  $dm$ , Newton's second law can be written

$$d\vec{F} = dm \frac{d\vec{V}}{dt} \Bigg|_{\text{system}} \quad (5.21)$$

Having obtained an expression for the acceleration of a fluid element of mass  $dm$ , moving in a velocity field (Eq. 5.9), we can write Newton's second law as the vector equation

$$d\vec{F} = dm \frac{D\vec{V}}{Dt} = dm \left[ u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + w \frac{\partial \vec{V}}{\partial z} + \frac{\partial \vec{V}}{\partial t} \right] \quad (5.22)$$

We now need to obtain a suitable formulation for the force,  $d\vec{F}$ , or its components,  $dF_x$ ,  $dF_y$ , and  $dF_z$ , acting on the element.

### Forces Acting on a Fluid Particle

Recall that the forces acting on a fluid element may be classified as body forces and surface forces; surface forces include both normal forces and tangential (shear) forces.

We shall consider the  $x$  component of the force acting on a differential element of mass  $dm$  and volume  $dV = dx dy dz$ . Only those stresses that act in the  $x$  direction will give rise to surface forces in the  $x$  direction. If the stresses at the center of the differential element are taken to be  $\sigma_{xx}$ ,  $\tau_{yx}$ , and  $\tau_{zx}$ , then the stresses acting in the  $x$  direction on all faces of the element (obtained by a Taylor series expansion about the center of the element) are as shown in Fig. 5.9.

To obtain the net surface force in the  $x$  direction,  $dF_{S_x}$ , we must sum the forces in the  $x$  direction. Thus,

$$\begin{aligned} dF_{S_x} = & \left( \sigma_{xx} + \frac{\partial \sigma_{xx}}{\partial x} \frac{dx}{2} \right) dy dz - \left( \sigma_{xx} - \frac{\partial \sigma_{xx}}{\partial x} \frac{dx}{2} \right) dy dz \\ & + \left( \tau_{yx} + \frac{\partial \tau_{yx}}{\partial y} \frac{dy}{2} \right) dx dz - \left( \tau_{yx} - \frac{\partial \tau_{yx}}{\partial y} \frac{dy}{2} \right) dx dz \\ & + \left( \tau_{zx} + \frac{\partial \tau_{zx}}{\partial z} \frac{dz}{2} \right) dx dy - \left( \tau_{zx} - \frac{\partial \tau_{zx}}{\partial z} \frac{dz}{2} \right) dx dy \end{aligned}$$

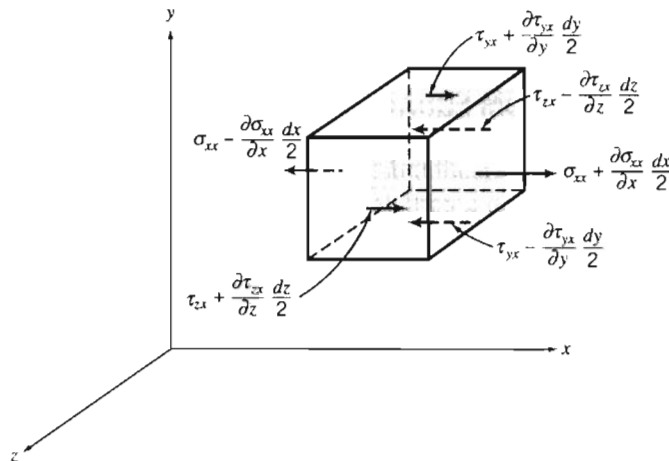


Fig. 5.9 Stresses in the  $x$  direction on an element of fluid.



On simplifying, we obtain

$$dF_{S_x} = \left( \frac{\partial \sigma_{xx}}{\partial x} + \frac{\partial \tau_{yx}}{\partial y} + \frac{\partial \tau_{zx}}{\partial z} \right) dx dy dz$$

When the force of gravity is the only body force acting, then the body force per unit mass is  $\vec{g}$ . The net force in the  $x$  direction,  $dF_x$ , is given by

$$dF_x = dF_{B_x} + dF_{S_x} = \left( \rho g_x + \frac{\partial \sigma_{xx}}{\partial x} + \frac{\partial \tau_{yx}}{\partial y} + \frac{\partial \tau_{zx}}{\partial z} \right) dx dy dz \quad (5.23a)$$

We can derive similar expressions for the force components in the  $y$  and  $z$  directions:

$$dF_y = dF_{B_y} + dF_{S_y} = \left( \rho g_y + \frac{\partial \tau_{xy}}{\partial x} + \frac{\partial \sigma_{yy}}{\partial y} + \frac{\partial \tau_{zy}}{\partial z} \right) dx dy dz \quad (5.23b)$$

$$dF_z = dF_{B_z} + dF_{S_z} = \left( \rho g_z + \frac{\partial \tau_{xz}}{\partial x} + \frac{\partial \tau_{yz}}{\partial y} + \frac{\partial \sigma_{zz}}{\partial z} \right) dx dy dz \quad (5.23c)$$

### Differential Momentum Equation

We have now formulated expressions for the components,  $dF_x$ ,  $dF_y$ , and  $dF_z$ , of the force,  $d\vec{F}$ , acting on the element of mass  $dm$ . If we substitute these expressions (Eqs. 5.23) for the force components into the  $x$ ,  $y$ , and  $z$  components of Eq. 5.22, we obtain the differential equations of motion,

$$\rho g_x + \frac{\partial \sigma_{xx}}{\partial x} + \frac{\partial \tau_{yx}}{\partial y} + \frac{\partial \tau_{zx}}{\partial z} = \rho \left( \frac{\partial u}{\partial t} + u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} + w \frac{\partial u}{\partial z} \right) \quad (5.24a)$$

$$\rho g_y + \frac{\partial \tau_{xy}}{\partial x} + \frac{\partial \sigma_{yy}}{\partial y} + \frac{\partial \tau_{zy}}{\partial z} = \rho \left( \frac{\partial v}{\partial t} + u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} + w \frac{\partial v}{\partial z} \right) \quad (5.24b)$$

$$\rho g_z + \frac{\partial \tau_{xz}}{\partial x} + \frac{\partial \tau_{yz}}{\partial y} + \frac{\partial \sigma_{zz}}{\partial z} = \rho \left( \frac{\partial w}{\partial t} + u \frac{\partial w}{\partial x} + v \frac{\partial w}{\partial y} + w \frac{\partial w}{\partial z} \right) \quad (5.24c)$$

Equations 5.24 are the differential equations of motion for any fluid satisfying the continuum assumption. Before the equations can be used to solve for  $u$ ,  $v$ , and  $w$ , suitable expressions for the stresses must be obtained in terms of the velocity and pressure fields.

### Newtonian Fluid: Navier–Stokes Equations

For a Newtonian fluid the viscous stress is directly proportional to the rate of shearing strain (angular deformation rate). We saw in Chapter 2 that for one-dimensional laminar Newtonian flow the shear stress is proportional to the rate of angular deformation:  $\tau_{yx} = \mu du/dy$  (Eq. 2.10). For a three-dimensional flow the situation is a bit more complicated (among other things we need to use the more complicated expressions for rate of angular deformation, Eq. 5.19). The stresses may be expressed in terms of velocity gradients and fluid properties in rectangular coordinates as follows:<sup>8</sup>

<sup>8</sup>The derivation of these results is beyond the scope of this book. Detailed derivations may be found in References 2, 3, and 4.

$$\tau_{xy} = \tau_{yx} = \mu \left( \frac{\partial v}{\partial x} + \frac{\partial u}{\partial y} \right) \quad (5.25a)$$

$$\tau_{yz} = \tau_{zy} = \mu \left( \frac{\partial w}{\partial y} + \frac{\partial v}{\partial z} \right) \quad (5.25b)$$

$$\tau_{zx} = \tau_{xz} = \mu \left( \frac{\partial u}{\partial z} + \frac{\partial w}{\partial x} \right) \quad (5.25c)$$

$$\sigma_{xx} = -p - \frac{2}{3} \mu \nabla \cdot \vec{V} + 2\mu \frac{\partial u}{\partial x} \quad (5.25d)$$

$$\sigma_{yy} = -p - \frac{2}{3} \mu \nabla \cdot \vec{V} + 2\mu \frac{\partial v}{\partial y} \quad (5.25e)$$

$$\sigma_{zz} = -p - \frac{2}{3} \mu \nabla \cdot \vec{V} + 2\mu \frac{\partial w}{\partial z} \quad (5.25f)$$

where  $p$  is the local thermodynamic pressure.<sup>9</sup> Thermodynamic pressure is related to the density and temperature by the thermodynamic relation usually called the equation of state.

If these expressions for the stresses are introduced into the differential equations of motion (Eqs. 5.24), we obtain

$$\begin{aligned} \rho \frac{Du}{Dt} = \rho g_x - \frac{\partial p}{\partial x} + \frac{\partial}{\partial x} \left[ \mu \left( 2 \frac{\partial u}{\partial x} - \frac{2}{3} \nabla \cdot \vec{V} \right) \right] + \frac{\partial}{\partial y} \left[ \mu \left( \frac{\partial u}{\partial y} + \frac{\partial v}{\partial x} \right) \right] \\ + \frac{\partial}{\partial z} \left[ \mu \left( \frac{\partial w}{\partial x} + \frac{\partial u}{\partial z} \right) \right] \end{aligned} \quad (5.26a)$$

$$\begin{aligned} \rho \frac{Dv}{Dt} = \rho g_y - \frac{\partial p}{\partial y} + \frac{\partial}{\partial x} \left[ \mu \left( \frac{\partial u}{\partial y} + \frac{\partial v}{\partial x} \right) \right] + \frac{\partial}{\partial y} \left[ \mu \left( 2 \frac{\partial v}{\partial y} - \frac{2}{3} \nabla \cdot \vec{V} \right) \right] \\ + \frac{\partial}{\partial z} \left[ \mu \left( \frac{\partial v}{\partial z} + \frac{\partial w}{\partial y} \right) \right] \end{aligned} \quad (5.26b)$$

$$\begin{aligned} \rho \frac{Dw}{Dt} = \rho g_z - \frac{\partial p}{\partial z} + \frac{\partial}{\partial x} \left[ \mu \left( \frac{\partial w}{\partial x} + \frac{\partial u}{\partial z} \right) \right] + \frac{\partial}{\partial y} \left[ \mu \left( \frac{\partial v}{\partial z} + \frac{\partial w}{\partial y} \right) \right] \\ + \frac{\partial}{\partial z} \left[ \mu \left( 2 \frac{\partial w}{\partial z} - \frac{2}{3} \nabla \cdot \vec{V} \right) \right] \end{aligned} \quad (5.26c)$$

These equations of motion are called the *Navier–Stokes* equations. The equations are greatly simplified when applied to *incompressible flow with constant viscosity*. Under these conditions the equations reduce to

<sup>9</sup>Reference 5 discusses the relation between the thermodynamic pressure and the average pressure defined as  $p = -(\sigma_{xx} + \sigma_{yy} + \sigma_{zz})/3$ .

$$\rho \left( \frac{\partial u}{\partial t} + u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} + w \frac{\partial u}{\partial z} \right) = \rho g_x - \frac{\partial p}{\partial x} + \mu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} + \frac{\partial^2 u}{\partial z^2} \right) \quad (5.27a)$$

$$\rho \left( \frac{\partial v}{\partial t} + u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} + w \frac{\partial v}{\partial z} \right) = \rho g_y - \frac{\partial p}{\partial y} + \mu \left( \frac{\partial^2 v}{\partial x^2} + \frac{\partial^2 v}{\partial y^2} + \frac{\partial^2 v}{\partial z^2} \right) \quad (5.27b)$$

$$\rho \left( \frac{\partial w}{\partial t} + u \frac{\partial w}{\partial x} + v \frac{\partial w}{\partial y} + w \frac{\partial w}{\partial z} \right) = \rho g_z - \frac{\partial p}{\partial z} + \mu \left( \frac{\partial^2 w}{\partial x^2} + \frac{\partial^2 w}{\partial y^2} + \frac{\partial^2 w}{\partial z^2} \right) \quad (5.27c)$$

This form of the Navier-Stokes equations is probably (next to the Bernoulli equation) the most famous set of equations in fluid mechanics, and has been widely studied. These equations, with the continuity equation (Eq. 5.1c), form a set of four coupled nonlinear partial differential equations for  $u$ ,  $v$ ,  $w$  and  $p$ . Solutions to these equations have been obtained for many special cases [3], but only for the simplest of geometries and initial or boundary conditions, for which many of the terms in the equations can be set to zero. We will solve the equations for such a simple problem in Example Problem 5.9.

The Navier-Stokes equations for constant density and viscosity are given in cylindrical coordinates in Appendix B; they have also been derived for spherical coordinates [3]. We will apply the cylindrical coordinate form in solving Example Problem 5.10.

In recent years computational fluid dynamics (CFD) computer applications (such as *Fluent* [6] and *STAR-CD* [7]) have been developed for analyzing the Navier-Stokes equations for more complicated, real-world problems.

For the case of frictionless flow ( $\mu = 0$ ) the equations of motion (Eqs. 5.26 or Eqs. 5.27) reduce to *Euler's equation*,

$$\rho \frac{D\vec{V}}{Dt} = \rho \vec{g} - \nabla p$$

We shall consider the case of frictionless flow in Chapter 6.

### EXAMPLE 5.9 Analysis of Fully Developed Laminar Flow down an Inclined Plane Surface

A liquid flows down an inclined plane surface in a steady, fully developed laminar film of thickness  $h$ . Simplify the continuity and Navier-Stokes equations to model this flow field. Obtain expressions for the liquid velocity profile, the shear stress distribution, the volume flow rate, and the average velocity. Relate the liquid film thickness to the volume flow rate per unit depth of surface normal to the flow. Calculate the volume flow rate in a film of water  $h = 1$  mm thick, flowing on a surface  $b = 1$  m wide, inclined at  $\theta = 15^\circ$  to the horizontal.

#### EXAMPLE PROBLEM 5.9


**GIVEN:** Liquid flow down an inclined plane surface in a steady, fully developed laminar film of thickness  $h$ .

**FIND:** (a) Continuity and Navier-Stokes equations simplified to model this flow field.  
(b) Velocity profile.  
(c) Shear stress distribution.

- (d) Volume flow rate per unit depth of surface normal to diagram.  
 (e) Average flow velocity.  
 (f) Film thickness in terms of volume flow rate per unit depth of surface normal to diagram.  
 (g) Volume flow rate in a film of water 1 mm thick on a surface 1 m wide, inclined at  $15^\circ$  to the horizontal.

**SOLUTION:**

The geometry and coordinate system used to model the flow field are shown. (It is convenient to align one coordinate with the flow down the plane surface.)

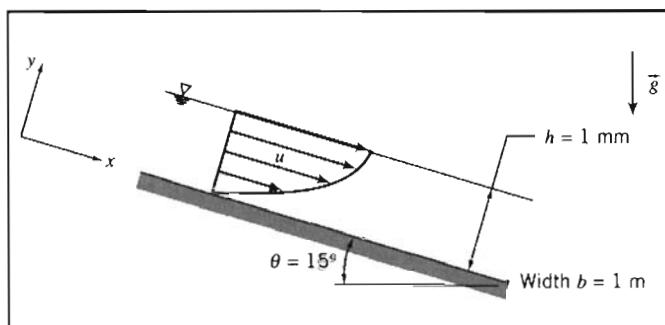

Governing equations written for incompressible flow with constant viscosity are

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} + \frac{\partial w}{\partial z} = 0 \quad (5.1c)$$

$$\rho \left( \frac{\partial u}{\partial t} + u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} + w \frac{\partial u}{\partial z} \right) = \rho g_x - \frac{\partial p}{\partial x} + \mu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} + \frac{\partial^2 u}{\partial z^2} \right) \quad (5.27a)$$

$$\rho \left( \frac{\partial v}{\partial t} + u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} + w \frac{\partial v}{\partial z} \right) = \rho g_y - \frac{\partial p}{\partial y} + \mu \left( \frac{\partial^2 v}{\partial x^2} + \frac{\partial^2 v}{\partial y^2} + \frac{\partial^2 v}{\partial z^2} \right) \quad (5.27b)$$

$$\rho \left( \frac{\partial w}{\partial t} + u \frac{\partial w}{\partial x} + v \frac{\partial w}{\partial y} + w \frac{\partial w}{\partial z} \right) = \rho g_z - \frac{\partial p}{\partial z} + \mu \left( \frac{\partial^2 w}{\partial x^2} + \frac{\partial^2 w}{\partial y^2} + \frac{\partial^2 w}{\partial z^2} \right) \quad (5.27c)$$

The terms canceled to simplify the basic equations are keyed by number to the assumptions listed below. The assumptions are discussed in the order in which they are applied to simplify the equations.

- Assumptions: (1) Steady flow (given).  
 (2) Incompressible flow;  $\rho = \text{constant}$ .  
 (3) No flow or variation of properties in the  $z$  direction;  $w = 0$  and  $\partial/\partial z = 0$ .  
 (4) Fully developed flow, so no properties vary in the  $x$  direction;  $\partial/\partial x = 0$ .

Assumption (1) eliminates time variations in any fluid property.

Assumption (2) eliminates space variations in density.

Assumption (3) states that there is no  $z$  component of velocity and no property variations in the  $z$  direction. All terms in the  $z$  component of the Navier–Stokes equation cancel.

After assumption (4) is applied, the continuity equation reduces to  $\partial v/\partial y = 0$ . Assumptions (3) and (4) also indicate that  $\partial v/\partial z = 0$  and  $\partial v/\partial x = 0$ . Therefore  $v$  must be constant. Since  $v$  is zero at the solid surface, then  $v$  must be zero everywhere.

The fact that  $v = 0$  reduces the Navier–Stokes equations further, as indicated by (5). The final simplified equations are

$$0 = \rho g_x + \mu \frac{\partial^2 u}{\partial y^2} \quad (1)$$

$$0 = \rho g_y - \frac{\partial p}{\partial y} \quad (2)$$

Since  $\partial u / \partial z = 0$  (assumption 3) and  $\partial u / \partial x = 0$  (assumption 4), then  $u$  is at most a function of  $y$ , and  $\partial^2 u / \partial y^2 = d^2 u / dy^2$ , and from Eq. 1, then

$$\frac{d^2 u}{dy^2} = -\frac{\rho g_x}{\mu} = -\rho g \frac{\sin \theta}{\mu}$$

Integrating,

$$\frac{du}{dy} = -\rho g \frac{\sin \theta}{\mu} y + c_1 \quad (3)$$

and integrating again,

$$u = -\rho g \frac{\sin \theta}{\mu} \frac{y^2}{2} + c_1 y + c_2 \quad (4)$$

The boundary conditions needed to evaluate the constants are the no-slip condition at the solid surface ( $u = 0$  at  $y = 0$ ) and the zero-shear-stress condition at the liquid free surface ( $du/dy = 0$  at  $y = h$ ).

Evaluating Eq. 4 at  $y = 0$  gives  $c_2 = 0$ . From Eq. 3 at  $y = h$ ,

$$0 = -\rho g \frac{\sin \theta}{\mu} h + c_1$$

or

$$c_1 = \rho g \frac{\sin \theta}{\mu} h$$

Substituting into Eq. 4 we obtain the velocity profile

$$u = -\rho g \frac{\sin \theta}{\mu} \frac{y^2}{2} + \rho g \frac{\sin \theta}{\mu} h y$$

or

$$u = \rho g \frac{\sin \theta}{\mu} \left( h y - \frac{y^2}{2} \right) \quad u(y)$$

The shear stress distribution is (from Eq. 5.25a after setting  $\partial v / \partial x$  to zero, or alternatively, for one-dimensional flow, from Eq. 2.10)

$$\tau_{yx} = \mu \frac{du}{dy} = \rho g \sin \theta (h - y) \quad \tau_{yx}(y)$$

The shear stress in the fluid reaches its maximum value at the wall ( $y = 0$ ); as we expect, it is zero at the free surface ( $y = h$ ). At the wall the shear stress  $\tau_{yx}$  is positive but the surface normal for the fluid is in the negative  $y$  direction; hence the shear force acts in the negative  $x$  direction, and just balances the  $x$  component of the body force acting on the fluid. The volume flow rate is

$$Q = \int_A u \, dA = \int_0^h u \, b \, dy$$

where  $b$  is the surface width in the  $z$  direction. Substituting,

$$Q = \int_0^h \frac{\rho g \sin \theta}{\mu} \left( hy - \frac{y^2}{2} \right) b \, dy = \frac{\rho g \sin \theta b}{\mu} \left[ \frac{hy^2}{2} - \frac{y^3}{6} \right]_0^h$$

$$Q = \frac{\rho g \sin \theta b}{\mu} \frac{h^3}{3} \quad \leftarrow (5) Q$$

The average flow velocity is  $\bar{V} = Q/A = Q/bh$ . Thus

$$\bar{V} = \frac{Q}{bh} = \frac{\rho g \sin \theta}{\mu} \frac{h^2}{3} \quad \leftarrow \bar{V}$$

Solving for film thickness gives

$$h = \left[ \frac{3\mu Q}{\rho g \sin \theta b} \right]^{1/3} \quad \leftarrow (6) h$$

A film of water  $h = 1$  mm thick on a plane  $b = 1$  m wide, inclined at  $\theta = 15^\circ$ , would carry

$$Q = \frac{999 \text{ kg}}{\text{m}^3} \times \frac{9.81 \text{ m}}{\text{s}^2} \times \sin(15^\circ) \times 1 \text{ m} \times \frac{\text{m} \cdot \text{s}}{1.00 \times 10^{-3} \text{ kg}} \\ \times \frac{(0.001)^3 \text{ m}^3}{3} \times \frac{1000 \text{ L}}{\text{m}^3}$$

$$Q = 0.846 \text{ L/s} \quad \leftarrow Q$$

Notes:

- ✓ This problem illustrates how the full Navier-Stokes equations (Eqs. 5.27) can sometimes be reduced to a set of solvable equations (Eqs. 1 and 2 in this problem).
- ✓ After integration of the simplified equations, boundary (or initial) conditions are used to complete the solution.
- ✓ Once the velocity field is obtained, other useful quantities (e.g., shear stress, volume flow rate) can be found.
- ✓ Equations (5) and (6) show that even for fairly simple problems the results can be quite complicated: The depth of the flow depends in a nonlinear way on flow rate ( $h \propto Q^{1/3}$ ).

### EXAMPLE 5.10 Analysis of Laminar Viscometric Flow between Coaxial Cylinders

A viscous liquid fills the annular gap between vertical concentric cylinders. The inner cylinder is stationary, and the outer cylinder rotates at constant speed. The flow is laminar. Simplify the continuity, Navier–Stokes, and tangential shear stress equations to model this flow field. Obtain expressions for the liquid velocity profile and the shear stress distribution. Compare the shear stress at the surface of the inner cylinder with that computed from a planar approximation obtained by “unwrapping” the annulus into a plane and assuming a linear velocity profile across the gap. Determine the ratio of cylinder radii for which the planar approximation predicts the correct shear stress at the surface of the inner cylinder within 1 percent.


**EXAMPLE PROBLEM 5.10**

**GIVEN:** Laminar viscometric flow of liquid in annular gap between vertical concentric cylinders. The inner cylinder is stationary, and the outer cylinder rotates at constant speed.

- FIND:**
- Continuity and Navier–Stokes equations simplified to model this flow field.
  - Velocity profile in the annular gap.
  - Shear stress distribution in the annular gap.
  - Shear stress at the surface of the inner cylinder.
  - Comparison with “planar” approximation for constant shear stress in the narrow gap between cylinders.
  - Ratio of cylinder radii for which the planar approximation predicts shear stress within 1 percent of the correct value.

**SOLUTION:**

The geometry and coordinate system used to model the flow field are shown. (The  $z$  coordinate is directed vertically upward; as a consequence,  $g_r = g_\theta = 0$  and  $g_z = -g$ .)

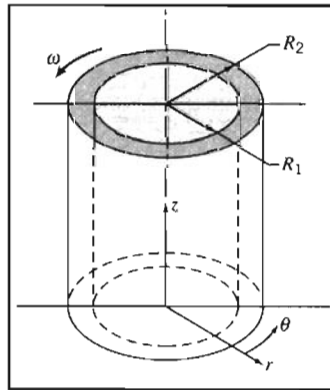

The continuity, Navier–Stokes, and tangential shear stress equations (from Appendix B) written for incompressible flow with constant viscosity are

$$\frac{1}{r} \frac{\partial}{\partial r} (rv_r) + \frac{1}{r} \frac{\partial}{\partial \theta} (v_\theta) + \frac{\partial}{\partial z} (v_z) = 0 \quad (\text{B.1})$$

$r$  component:

$$\begin{aligned} & \rho \left( \frac{\partial v_r}{\partial t} + v_r \frac{\partial v_r}{\partial r} + \frac{v_\theta}{r} \frac{\partial v_r}{\partial \theta} - \frac{v_\theta^2}{r} + v_z \frac{\partial v_r}{\partial z} \right) \\ &= \rho g_r - \frac{\partial p}{\partial r} + \mu \left\{ \frac{\partial}{\partial r} \left( \frac{1}{r} \frac{\partial}{\partial r} [rv_r] \right) + \frac{1}{r^2} \frac{\partial^2 v_r}{\partial \theta^2} - \frac{2}{r^2} \frac{\partial v_\theta}{\partial \theta} + \frac{\partial^2 v_r}{\partial z^2} \right\} \end{aligned} \quad (\text{B.3a})$$

$\theta$  component:

$$\begin{aligned} & \rho \left( \frac{\partial v_\theta}{\partial t} + v_r \frac{\partial v_\theta}{\partial r} + \frac{v_\theta}{r} \frac{\partial v_\theta}{\partial \theta} + \frac{v_r v_\theta}{r} + v_z \frac{\partial v_\theta}{\partial z} \right) \\ &= \rho g_\theta - \frac{1}{r} \frac{\partial p}{\partial \theta} + \mu \left\{ \frac{\partial}{\partial r} \left( \frac{1}{r} \frac{\partial}{\partial r} [rv_\theta] \right) + \frac{1}{r^2} \frac{\partial^2 v_\theta}{\partial \theta^2} + \frac{2}{r^2} \frac{\partial v_r}{\partial \theta} + \frac{\partial^2 v_\theta}{\partial z^2} \right\} \end{aligned} \quad (\text{B.3b})$$

$z$  component:

$$\rho \left( \cancel{\frac{\partial v_z}{\partial t}}^1 + v_r \cancel{\frac{\partial v_z}{\partial r}}^5 + \frac{v_\theta}{r} \cancel{\frac{\partial v_z}{\partial \theta}}^4 + v_z \cancel{\frac{\partial v_z}{\partial z}}^3 \right) = \rho g_z - \frac{\partial p}{\partial z} + \mu \left\{ \frac{1}{r} \frac{\partial}{\partial r} \left( r \cancel{\frac{\partial v_z}{\partial r}}^3 \right) + \frac{1}{r^2} \cancel{\frac{\partial^2 v_z}{\partial \theta^2}}^3 + \cancel{\frac{\partial^2 v_z}{\partial z^2}}^3 \right\} \quad (\text{B.3c})$$

$$\tau_{r\theta} = \mu \left[ r \frac{\partial}{\partial r} \left( \frac{v_\theta}{r} \right) + \frac{1}{r} \cancel{\frac{\partial v_r}{\partial \theta}}^4 \right] \quad (\text{B.2})$$

The terms canceled to simplify the basic equations are keyed by number to the assumptions listed below. The assumptions are discussed in the order in which they are applied to simplify the equations.

- Assumptions: (1) Steady flow; angular speed of outer cylinder is constant.  
 (2) Incompressible flow;  $\rho = \text{constant}$ .  
 (3) No flow or variation of properties in the  $z$  direction;  $v_z = 0$  and  $\partial/\partial z = 0$ .  
 (4) Circumferentially symmetric flow, so properties do not vary with  $\theta$ , and  $\partial/\partial \theta = 0$ .

Assumption (1) eliminates time variations in fluid properties.

Assumption (2) eliminates space variations in density.

Assumption (3) causes all terms in the  $z$  component of the Navier–Stokes equation to cancel, except for the hydrostatic pressure distribution.

After assumptions (3) and (4) are applied, the continuity equation reduces to

$$\frac{1}{r} \frac{\partial}{\partial r} (rv_r) = 0$$

Because  $\partial/\partial \theta = 0$  and  $\partial/\partial z = 0$  by assumptions (3) and (4), then

$$rv_r = \text{constant}$$

Since  $v_r$  is zero at the solid surface of each cylinder, then  $v_r$  must be zero everywhere.

The fact that  $v_r = 0$  reduces the Navier–Stokes equations further, as indicated by cancellations (5). The final equations reduce to

$$-\rho \frac{v_\theta^2}{r} = -\frac{\partial p}{\partial r}$$

$$0 = \mu \left\{ \frac{\partial}{\partial r} \left( \frac{1}{r} \frac{\partial}{\partial r} [rv_\theta] \right) \right\}$$

But since  $\partial/\partial \theta = 0$  and  $\partial/\partial z = 0$  by assumptions (3) and (4), then  $v_\theta$  is a function of radius only, and

$$\frac{d}{dr} \left( \frac{1}{r} \frac{d}{dr} [rv_\theta] \right) = 0$$

Integrating once,

$$\frac{1}{r} \frac{d}{dr} [rv_\theta] = c_1$$

or

$$\frac{d}{dr} [rv_\theta] = c_1 r$$

Integrating again,

$$rv_\theta = c_1 \frac{r^2}{2} + c_2 \quad \text{or} \quad v_\theta = c_1 \frac{r}{2} + c_2 \frac{1}{r}$$

Two boundary conditions are needed to evaluate constants  $c_1$  and  $c_2$ . The boundary conditions are



$$\begin{aligned} v_\theta &= \omega R_2 & \text{at} & \quad r = R_2 & \text{and} \\ v_\theta &= 0 & \text{at} & \quad r = R_1 \end{aligned}$$

Substituting

$$\begin{aligned} \omega R_2 &= c_1 \frac{R_2}{2} + c_2 \frac{1}{R_2} \\ 0 &= c_1 \frac{R_1}{2} + c_2 \frac{1}{R_1} \end{aligned}$$

After considerable algebra

$$c_1 = \frac{2\omega}{1 - \left(\frac{R_1}{R_2}\right)^2} \quad \text{and} \quad c_2 = \frac{-\omega R_1^2}{1 - \left(\frac{R_1}{R_2}\right)^2}$$

Substituting into the expression for  $v_\theta$ ,

$$v_\theta = \frac{\omega r}{1 - \left(\frac{R_1}{R_2}\right)^2} - \frac{\omega R_1^2/r}{1 - \left(\frac{R_1}{R_2}\right)^2} = \frac{\omega R_1}{1 - \left(\frac{R_1}{R_2}\right)^2} \left[ \frac{r}{R_1} - \frac{R_1}{r} \right] \quad \leftarrow v_\theta(r)$$

The shear stress distribution is

$$\tau_{r\theta} = \mu r \frac{d}{dr} \left( \frac{v_\theta}{r} \right) = \mu r \frac{d}{dr} \left\{ \frac{\omega R_1}{1 - \left(\frac{R_1}{R_2}\right)^2} \left[ \frac{1}{R_1} - \frac{R_1}{r^2} \right] \right\} = \mu r \frac{\omega R_1}{1 - \left(\frac{R_1}{R_2}\right)^2} (-2) \left( -\frac{R_1}{r^3} \right)$$


$$\tau_{r\theta} = \mu \frac{2\omega R_1^2}{1 - \left(\frac{R_1}{R_2}\right)^2} \frac{1}{r^2} \quad \leftarrow \tau_{r\theta}$$

At the surface of the inner cylinder,  $r = R_1$ , so

$$\tau_{\text{surface}} = \mu \frac{2\omega}{1 - \left(\frac{R_1}{R_2}\right)^2} \quad \leftarrow \tau_{\text{surface}}$$

For a "planar" gap

$$\tau_{\text{planar}} = \mu \frac{\Delta v}{\Delta y} = \mu \frac{\omega R_2}{R_2 - R_1}$$

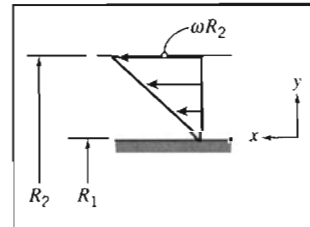

$$\tau_{\text{planar}} = \mu \frac{\omega}{1 - \frac{R_1}{R_2}} \quad \leftarrow \tau_{\text{planar}}$$

Factoring the denominator of the exact expression for shear stress at the surface gives

$$\tau_{\text{surface}} = \mu \frac{2\omega}{\left(1 - \frac{R_1}{R_2}\right) \left(1 + \frac{R_1}{R_2}\right)} = \mu \frac{\omega}{1 - \frac{R_1}{R_2}} \cdot \frac{2}{1 + \frac{R_1}{R_2}}$$



Thus

$$\frac{\tau_{\text{surface}}}{\tau_{\text{planar}}} = \frac{2}{1 + \frac{R_1}{R_2}}$$

For 1 percent accuracy,

$$1.01 = \frac{2}{1 + \frac{R_1}{R_2}}$$

or

$$\frac{R_1}{R_2} = \frac{1}{1.01} (2 - 1.01) = 0.980 \longleftarrow \frac{R_1}{R_2}$$

The accuracy criterion is met when the gap width is less than 2 percent of the cylinder radius.

**Notes:**

- ✓ This problem illustrates how the full Navier–Stokes equations in cylindrical coordinates (Eqs. B.1 to B.3) can sometimes be reduced to a set of solvable equations.
- ✓ As in Example Problem 5.9, after integration of the simplified equations, boundary (or initial) conditions are used to complete the solution.
- ✓ Once the velocity field is obtained, other useful quantities (in this problem, shear stress) can be found.



The *Excel* workbook for this problem compares the viscometer and linear velocity profiles. It also allows one to derive the appropriate value of the viscometer outer radius to meet a prescribed accuracy of the planar approximation. We will discuss the concentric cylinder–infinite parallel plates approximation again in Chapter 8.

## 5-5 SUMMARY

In this chapter we have:

- ✓ Derived the differential form of the conservation of mass (continuity) equation in vector form as well as in rectangular and cylindrical coordinates.
- ✓ \*Defined the stream function  $\psi$  for a two-dimensional incompressible flow and learned how to derive the velocity components from it, as well as to find  $\psi$  from the velocity field.
- ✓ Learned how to obtain the total, local, and convective accelerations of a fluid particle from the velocity field.
- ✓ Presented examples of fluid particle translation and rotation, and both linear and angular deformation.
- ✓ Defined vorticity and circulation of a flow.

\* This topic applies to a section that may be omitted without loss of continuity in the text material.

- ✓ Derived, and solved for simple cases, the Navier–Stokes equations, and discussed the physical meaning of each term.

We have also explored such ideas as how to determine whether a flow is incompressible by using the velocity field and, given one velocity component of a two-dimensional incompressible flow field, how to derive the other velocity component.

In this chapter we studied the effects of viscous stresses on fluid particle deformation and rotation; in the next chapter we examine flows for which viscous effects are negligible.

## REFERENCES

1. Li, W. H., and S. H. Lam, *Principles of Fluid Mechanics*. Reading, MA: Addison-Wesley, 1964.
2. Daily, J. W., and D. R. F. Harleman, *Fluid Dynamics*. Reading, MA: Addison-Wesley, 1966.
3. Schlichting, H., *Boundary-Layer Theory*, 7th ed. New York: McGraw-Hill, 1979.
4. White, F. M., *Viscous Fluid Flow*, 2nd ed. New York: McGraw-Hill, 1991.
5. Sabersky, R. H., A. J. Acosta, E. G. Hauptmann, and E. M. Gates, *Fluid Flow—A First Course in Fluid Mechanics*, 4th ed. New Jersey: Prentice Hall, 1999.
6. *Fluent*. Fluent Incorporated, Centerra Resources Park, 10 Cavendish Court, Lebanon, NH 03766 ([www.fluent.com](http://www.fluent.com)).
7. *STAR-CD*. Adapco, 60 Broadhollow Road, Melville, NY 11747 ([www.cd-adapco.com](http://www.cd-adapco.com)).

## PROBLEMS

- 5.1 Which of the following sets of equations represent possible two-dimensional incompressible flow cases?
 

(a) $u = 2x^2 + y^2 - x^2y$ $v = x^3 + x(y^2 - 2y)$	(b) $u = 2xy - x^2 + y$ ; $v = 2xy - y^2 + x^2$
(c) $u = xt + 2y$ ; $v = xt^2 - yt$	(d) $u = (x + 2y)xt$ ; $v = -(2x + y)yt$
- 5.2 Which of the following sets of equations represent possible two-dimensional incompressible flow cases?
 

(a) $u = -x + y$ ; $v = x - y^2$	(b) $u = x + 2y$ ; $v = x^2 - y$
(c) $u = 4x^2 - y$ ; $v = x - y^2$	(d) $u = xt + 2y$ ; $v = x^2 - yt$
(e) $u = xt^2$ ; $v = xyt + y^2$	
- 5.3 The three components of velocity in a velocity field are given by  $u = Ax + By + Cz$ ,  $v = Dx + Ey + Fz$ , and  $w = Gx + Hy + Jz$ . Determine the relationship among the coefficients  $A$  through  $J$  that is necessary if this is to be a possible incompressible flow field.
- 5.4 Which of the following sets of equations represent possible three-dimensional incompressible flow cases?
 

(a) $u = x + y + z^2$ ; $v = x - y + z$ ; $w = 2xy + y^2 + 4$	(b) $u = xyz$ ; $v = -xyz$ ; $w = (z^2/2)(xt^2 - yt)$
(c) $u = y^2 + 2xz$ ; $v = -2yz + x^2yz$ ; $w = \frac{1}{2}x^2z^2 + x^3y^4$	
- 5.5 For a flow in the  $xy$  plane, the  $x$  component of velocity is given by  $u = Ax(y - B)$ , where  $A = 3 \text{ m}^{-1} \cdot \text{s}^{-1}$ ,  $B = 2 \text{ m}$ , and  $x$  and  $y$  are measured in meters. Find a possible

$y$  component for steady, incompressible flow. Is it also valid for unsteady, incompressible flow? Why? How many  $y$  components are possible?

- 5.6 For a flow in the  $xy$  plane, the  $y$  component of velocity is given by  $v = y^2 - 2x + 2y$ . Determine a possible  $x$  component for steady, incompressible flow. Is it also valid for unsteady, incompressible flow? Why? How many possible  $x$  components are there?
- 5.7 The  $x$  component of velocity in a steady, incompressible flow field in the  $xy$  plane is  $u = A/x$ , where  $A = 2 \text{ m}^2/\text{s}$ , and  $x$  is measured in meters. Find the simplest  $y$  component of velocity for this flow field.
- 5.8 The  $y$  component of velocity in a steady, incompressible flow field in the  $xy$  plane is  $v = Ay^2/x^2$ , where  $A = 2 \text{ m/s}$  and  $x$  and  $y$  are measured in meters. Find the simplest  $x$  component of velocity for this flow field.
- 5.9 The  $x$  component of velocity in a steady incompressible flow field in the  $xy$  plane is  $u = Ax/(x^2 + y^2)$ , where  $A = 10 \text{ m}^2/\text{s}$ , and  $x$  and  $y$  are measured in meters. Find the simplest  $y$  component of velocity for this flow field.
- 5.10 A crude approximation for the  $x$  component of velocity in an incompressible laminar boundary layer is a linear variation from  $u = 0$  at the surface ( $y = 0$ ) to the freestream velocity,  $U$ , at the boundary-layer edge ( $y = \delta$ ). The equation for the profile is  $u = Uy/\delta$ , where  $\delta = cx^{1/2}$  and  $c$  is a constant. Show that the simplest expression for the  $y$  component of velocity is  $v = uy/4x$ . Evaluate the maximum value of the ratio  $v/U$ , at a location where  $x = 0.5 \text{ m}$  and  $\delta = 5 \text{ mm}$ .

- 5.11 A useful approximation for the  $x$  component of velocity in an incompressible laminar boundary layer is a sinusoidal variation from  $u = 0$  at the surface ( $y = 0$ ) to the freestream velocity,  $U$ , at the edge of the boundary layer ( $y = \delta$ ). The equation for the profile is  $u = U \sin(\pi y/2\delta)$ , where  $\delta = cx^{1/2}$  and  $c$  is a constant. Show that the simplest expression for the  $y$  component of velocity is

$$\frac{v}{U} = \frac{1}{\pi} \frac{\delta}{x} \left[ \cos\left(\frac{\pi y}{2\delta}\right) + \left(\frac{\pi y}{2\delta}\right) \sin\left(\frac{\pi y}{2\delta}\right) - 1 \right]$$

Plot  $u/U$  and  $v/U$  versus  $y/\delta$ , and find the location of the maximum value of the ratio  $v/U$ . Evaluate the ratio where  $x = 0.5 \text{ m}$  and  $\delta = 5 \text{ mm}$ .

- 5.12 A useful approximation for the  $x$  component of velocity in an incompressible laminar boundary layer is a parabolic variation from  $u = 0$  at the surface ( $y = 0$ ) to the freestream velocity,  $U$ , at the edge of the boundary layer ( $y = \delta$ ). The equation for the profile is  $u/U = 2(y/\delta) - (y/\delta)^2$ , where  $\delta = cx^{1/2}$  and  $c$  is a constant. Show that the simplest expression for the  $y$  component of velocity is

$$\frac{v}{U} = \frac{\delta}{x} \left[ \frac{1}{2} \left(\frac{y}{\delta}\right)^2 - \frac{1}{3} \left(\frac{y}{\delta}\right)^3 \right]$$

Plot  $v/U$  versus  $y/\delta$  to find the location of the maximum value of the ratio  $v/U$ . Evaluate the ratio where  $\delta = 5 \text{ mm}$  and  $x = 0.5 \text{ m}$ .

- 5.13 A useful approximation for the  $x$  component of velocity in an incompressible laminar boundary layer is a cubic variation from  $u = 0$  at the surface ( $y = 0$ ) to the freestream velocity,  $U$ , at the edge of the boundary layer ( $y = \delta$ ). The equation for the profile is  $u/U = \frac{3}{2}(y/\delta) - \frac{1}{2}(y/\delta)^3$ , where  $\delta = cx^{1/2}$  and  $c$  is a constant. Derive the simplest expression for  $v/U$ , the  $y$  component of velocity ratio. Plot  $u/U$  and  $v/U$  versus  $y/\delta$ , and find the location of the maximum value of the ratio  $v/U$ . Evaluate the ratio where  $\delta = 5 \text{ mm}$  and  $x = 0.5 \text{ m}$ .

- 5.14 The  $y$  component of velocity in a steady, incompressible flow field in the  $xy$  plane is  $v = -Bxy^3$ , where  $B = 0.2 \text{ m}^{-3} \cdot \text{s}^{-1}$ , and  $x$  and  $y$  are measured in meters. Find the simplest  $x$  component of velocity for this flow field. Find the equation of the streamlines for this flow. Plot the streamlines through points (1, 4) and (2, 4).

- 5.15 For a flow in the  $xy$  plane, the  $x$  component of velocity is given by  $u = Ax^2y^2$ , where  $A = 0.3 \text{ m}^{-3} \cdot \text{s}^{-1}$ , and  $x$  and  $y$  are measured in meters. Find a possible  $y$  component for steady, incompressible flow. Is it also valid for unsteady, incompressible flow? Why? How many possible  $y$  components are there? Determine the equation of the streamline for the simplest  $y$  component of velocity. Plot the streamlines through points (1, 4) and (2, 4).
- 5.16 Derive the differential form of conservation of mass in rectangular coordinates by expanding the *products* of density and the velocity components,  $\rho u$ ,  $\rho v$ , and  $\rho w$ , in a Taylor series about a point  $O$ . Show that the result is identical to Eq. 5.1a.
- 5.17 Consider a water stream from a jet of an oscillating lawn sprinkler. Describe the corresponding pathline and streakline.
- 5.18 Consider a water stream from a nozzle attached to a rotating lawn sprinkler. Describe the corresponding pathline and streakline.
- 5.19 Which of the following sets of equations represent possible incompressible flow cases?  
 (a)  $V_r = U \cos \theta$ ;  $V_\theta = -U \sin \theta$   
 (b)  $V_r = -q/2\pi r$ ;  $V_\theta = K/2\pi r$   
 (c)  $V_r = U \cos \theta [1 - (a/r)^2]$ ;  $V_\theta = -U \sin \theta [1 + (a/r)^2]$
- 5.20 For an incompressible flow in the  $r\theta$  plane, the  $\theta$  component of velocity is given as  $V_\theta = -A \sin \theta/r^2$ . Determine a possible  $r$  component of velocity. How many possible  $r$  components are there?
- 5.21 A viscous liquid is sheared between two parallel disks of radius  $R$ , one of which rotates while the other is fixed. The velocity field is purely tangential, and the velocity varies linearly with  $z$  from  $V_\theta = 0$  at  $z = 0$  (the fixed disk) to the velocity of the rotating disk at its surface ( $z = h$ ). Derive an expression for the velocity field between the disks.
- 5.22 A velocity field in cylindrical coordinates is given as  $\vec{V} = \hat{e}_r A/r + \hat{e}_\theta B/r$ , where  $A$  and  $B$  are constants with dimensions of  $\text{m}^2/\text{s}$ . Does this represent a possible incompressible flow? Sketch the streamline that passes through the point  $r_0 = 1 \text{ m}$ ,  $\theta = 90^\circ$  if  $A = B = 1 \text{ m}^2/\text{s}$ , if  $A = 1 \text{ m}^2/\text{s}$  and  $B = 0$ , and if  $B = 1 \text{ m}^2/\text{s}$  and  $A = 0$ .
- 5.23 Evaluate  $\nabla \cdot \rho \vec{V}$  in cylindrical coordinates. Use the definition of  $\nabla$  in cylindrical coordinates. Substitute the velocity vector and perform the indicated operations, using the hint in footnote 1 on page 190. Collect terms and simplify; show that the result is identical to Eq. 5.2c.
- \*5.24 The velocity field for the viscometric flow of Example Problem 5.7 is  $\vec{V} = U(y/h)\hat{i}$ . Find the stream function for this flow. Locate the streamline that divides the total flow rate into two equal parts.
- \*5.25 Determine the family of stream functions  $\psi$  that will yield the velocity field  $\vec{V} = (x + 2y)\hat{i} + (x^2 - y)\hat{j}$ .
- \*5.26 Does the velocity field of Problem 5.22 represent a possible incompressible flow case? If so, evaluate and sketch the stream function for the flow. If not, evaluate the rate of change of density in the flow field.
- \*5.27 The stream function for a certain incompressible flow field is given by the expression  $\psi = -Ur \sin \theta + q\theta/2\pi$ . Obtain an expression for the velocity field. Find the stagnation point(s) where  $|\vec{V}| = 0$ , and show that  $\psi = 0$  there.
- \*5.28 Consider a flow with velocity components  $u = 0$ ,  $v = -y^3 - 4z$ , and  $w = 3y^2z$ .  
 (a) Is this a one-, two-, or three-dimensional flow?  
 (b) Demonstrate whether this is an incompressible or compressible flow.  
 (c) If possible, derive a stream function for this flow.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.


- \*5.29 An incompressible frictionless flow field is specified by the stream function  $\psi = -2Ax - 5Ay$ , where  $A = 1$  m/s, and  $x$  and  $y$  are coordinates in meters. Sketch the streamlines  $\psi = 0$  and  $\psi = 5$ . Indicate the direction of the velocity vector at the point  $(0, 0)$  on the sketch. Determine the magnitude of the flow rate between the streamlines passing through the points  $(2, 2)$  and  $(4, 1)$ .
- \*5.30 In a parallel one-dimensional flow in the positive  $x$  direction, the velocity varies linearly from zero at  $y = 0$  to 100 ft/s at  $y = 5$  ft. Determine an expression for the stream function,  $\psi$ . Also determine the  $y$  coordinate above which the volume flow rate is half the total between  $y = 0$  and  $y = 5$  ft.
- \*5.31 A linear velocity profile was used to model flow in a laminar incompressible boundary layer in Problem 5.10. Derive the stream function for this flow field. Locate streamlines at one-quarter and one-half the total volume flow rate in the boundary layer.
- \*5.32 Derive the stream function that represents the sinusoidal approximation used to model the  $x$  component of velocity for the boundary layer of Problem 5.11. Locate streamlines at one-quarter and one-half the total volume flow rate in the boundary layer.
- \*5.33 A parabolic velocity profile was used to model flow in a laminar incompressible boundary layer in Problem 5.12. Derive the stream function for this flow field. Locate streamlines at one-quarter and one-half the total volume flow rate in the boundary layer.
- 5.34 A cubic velocity profile was used to model flow in a laminar incompressible boundary layer in Problem 5.13. Derive the stream function for this flow field. Locate streamlines at one-quarter and one-half the total volume flow rate in the boundary layer.
- \*5.35 Example Problem 5.6 showed that the velocity field for a free vortex in the  $r\theta$  plane is  $\vec{V} = \hat{e}_\theta Cr$ . Find the stream function for this flow. Evaluate the volume flow rate per unit depth between  $r_1 = 0.10$  m and  $r_2 = 0.12$  m, if  $C = 0.5$  m<sup>2</sup>/s. Sketch the velocity profile along a line of constant  $\theta$ . Check the flow rate calculated from the stream function by integrating the velocity profile along this line.
- \*5.36 A rigid-body motion was modeled in Example Problem 5.6 by the velocity field  $\vec{V} = r\omega\hat{e}_\theta$ . Find the stream function for this flow. Evaluate the volume flow rate per unit depth between  $r_1 = 0.10$  m and  $r_2 = 0.12$  m, if  $\omega = 0.5$  rad/s. Sketch the velocity profile along a line of constant  $\theta$ . Check the flow rate calculated from the stream function by integrating the velocity profile along this line.
- 5.37 Consider the velocity field  $\vec{V} = A(x^2 + 2xy)\hat{i} - A(2xy + y^2)\hat{j}$  in the  $xy$  plane, where  $A = 0.25$  m<sup>-1</sup> · s<sup>-1</sup>, and the coordinates are measured in meters. Is this a possible incompressible flow field? Calculate the acceleration of a fluid particle at point  $(x, y) = (2, 1)$ .
- 5.38 Consider the flow field given by  $\vec{V} = xy^2\hat{i} - \frac{1}{3}y^3\hat{j} + xy\hat{k}$ . Determine (a) the number of dimensions of the flow, (b) if it is a possible incompressible flow, and (c) the acceleration of a fluid particle at point  $(x, y, z) = (1, 2, 3)$ .
- 5.39 Consider the flow field given by  $\vec{V} = ax^2y\hat{i} - by\hat{j} + cz^2\hat{k}$ , where  $a = 1$  m<sup>-2</sup> · s<sup>-1</sup>,  $b = 3$  s<sup>-1</sup>, and  $c = 2$  m<sup>-1</sup> · s<sup>-1</sup>. Determine (a) the number of dimensions of the flow, (b) if it is a possible incompressible flow, and (c) the acceleration of a fluid particle at point  $(x, y, z) = (3, 1, 2)$ .
- 5.40 The velocity field within a laminar boundary layer is approximated by the expression

$$\vec{V} = \frac{AUy}{x^{1/2}}\hat{i} + \frac{AUy^2}{4x^{3/2}}\hat{j}$$

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

In this expression,  $A = 141 \text{ m}^{-1/2}$ , and  $U = 0.240 \text{ m/s}$  is the freestream velocity. Show that this velocity field represents a possible incompressible flow. Calculate the acceleration of a fluid particle at point  $(x, y) = (0.5 \text{ m}, 5 \text{ mm})$ . Determine the slope of the streamline through the point.

- 5.41 The  $x$  component of velocity in a steady, incompressible flow field in the  $xy$  plane is  $u = A/x^2$ , where  $A = 2 \text{ m}^3/\text{s}$  and  $x$  is measured in meters. Find the simplest  $y$  component of velocity for this flow field. Evaluate the acceleration of a fluid particle at point  $(x, y) = (1, 3)$ .
- 5.42 The  $y$  component of velocity in a two-dimensional, incompressible flow field is given by  $v = -Axy$ , where  $v$  is in  $\text{m/s}$ ,  $x$  and  $y$  are in meters, and  $A$  is a dimensional constant. There is no velocity component or variation in the  $z$  direction. Determine the dimensions of the constant,  $A$ . Find the simplest  $x$  component of velocity in this flow field. Calculate the acceleration of a fluid particle at point  $(x, y) = (1, 2)$ .
- 5.43 Consider the velocity field  $\vec{V} = Ax/(x^2 + y^2)\hat{i} + Ay/(x^2 + y^2)\hat{j}$  in the  $xy$  plane, where  $A = 10 \text{ m}^2/\text{s}$ , and  $x$  and  $y$  are measured in meters. Is this an incompressible flow field? Derive an expression for the fluid acceleration. Evaluate the velocity and acceleration along the  $x$  axis, the  $y$  axis, and along a line defined by  $y = x$ . What can you conclude about this flow field?
- 5.44 An incompressible liquid with negligible viscosity flows steadily through a horizontal pipe of constant diameter. In a porous section of length  $L = 0.3 \text{ m}$ , liquid is removed at a constant rate per unit length, so the uniform axial velocity in the pipe is  $u(x) = U(1 - x/2L)$ , where  $U = 5 \text{ m/s}$ . Develop an expression for the acceleration of a fluid particle along the centerline of the porous section.
- 5.45 Solve Problem 4.103 to show that the radial velocity in the narrow gap is  $V_r = Q/2\pi rh$ . Derive an expression for the acceleration of a fluid particle in the gap.
- 5.46 Consider the low-speed flow of air between parallel disks as shown. Assume that the flow is incompressible and inviscid, and that the velocity is purely radial and uniform at any section. The flow speed is  $V = 15 \text{ m/s}$  at  $R = 75 \text{ mm}$ . Simplify the continuity equation to a form applicable to this flow field. Show that a general expression for the velocity field is  $\vec{V} = V(R/r)\hat{e}_r$ , for  $r_i \leq r \leq R$ . Calculate the acceleration of a fluid particle at the locations  $r = r_i$  and  $r = R$ .

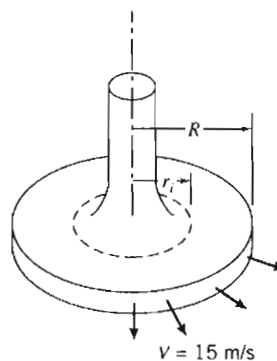

P5.46


- 5.47 The temperature,  $T$ , in a long tunnel is known to vary approximately as  $T = T_0 - \alpha e^{-\beta x} \sin(2\pi x/\tau)$ , where  $T_0$ ,  $\alpha$ ,  $L$ , and  $\tau$  are constants, and  $x$  is measured from the entrance. A particle moves into the tunnel with a constant speed,  $U$ . Obtain an expression for the rate of change of temperature experienced by the particle. What are the dimensions of this expression?

- 5.48 As an aircraft flies through a cold front, an on-board instrument indicates that ambient temperature drops at the rate of  $0.5^\circ\text{F}$  per minute. Other instruments show an air speed of 300 knots and a 3500 ft/min rate of climb. The front is stationary and vertically uniform. Compute the rate of change of temperature with respect to horizontal distance through the cold front.
- 5.49 An aircraft flies due North at 300 mph ground speed. Its rate of climb is 3000 ft/min. The vertical temperature gradient is  $-3^\circ\text{F}$  per 1000 ft of altitude. The ground temperature varies with position through a cold front, falling at the rate of  $1^\circ\text{F}$  per mile. Compute the rate of temperature change shown by a recorder on board the aircraft.
- 5.50 After a rainfall the sediment concentration at a certain point in a river increases at the rate of 100 parts per million (ppm) per hour. In addition, the sediment concentration increases with distance downstream as a result of influx from tributary streams; this rate of increase is 50 ppm per mile. At this point the stream flows at 0.5 mph. A boat is used to survey the sediment concentration. The operator is amazed to find three different apparent rates of change of sediment concentration when the boat travels upstream, drifts with the current, or travels downstream. Explain physically why the different rates are observed. If the speed of the boat is 2.5 mph, compute the three rates of change.
- 5.51 Expand  $(\vec{V} \cdot \nabla)\vec{V}$  in rectangular coordinates by direct substitution of the velocity vector to obtain the convective acceleration of a fluid particle. Verify the results given in Eqs. 5.11.
- 5.52 A steady, two-dimensional velocity field is given by  $\vec{V} = Ax\hat{i} - Ay\hat{j}$ , where  $A = 1\text{ s}^{-1}$ . Show that the streamlines for this flow are rectangular hyperbolas,  $xy = C$ . Obtain a general expression for the acceleration of a fluid particle in this velocity field. Calculate the acceleration of fluid particles at the points  $(x, y) = (\frac{1}{2}, 2), (1, 1),$  and  $(2, \frac{1}{2})$ , where  $x$  and  $y$  are measured in meters. Plot streamlines that correspond to  $C = 0, 1,$  and  $2\text{ m}^2$  and show the acceleration vectors on the streamline plot.
- 5.53 A velocity field is represented by the expression  $\vec{V} = (Ax - B)\hat{i} + Cy\hat{j} + Dt\hat{k}$ , where  $A = 2\text{ s}^{-1}, B = 4\text{ m} \cdot \text{s}^{-1}, D = 5\text{ m} \cdot \text{s}^{-2}$ , and the coordinates are measured in meters. Determine the proper value for  $C$  if the flow field is to be incompressible. Calculate the acceleration of a fluid particle located at point  $(x, y) = (3, 2)$ . Plot a few flow streamlines in the  $xy$  plane.
- 5.54 A velocity field is represented by the expression  $\vec{V} = (Ax - B)\hat{i} - Ay\hat{j}$ , where  $A = 0.2\text{ s}^{-1}, B = 0.6\text{ m} \cdot \text{s}^{-1}$ , and the coordinates are expressed in meters. Obtain a general expression for the acceleration of a fluid particle in this velocity field. Calculate the acceleration of fluid particles at points  $(x, y) = (0, \frac{4}{3}), (1, 2),$  and  $(2, 4)$ . Plot a few streamlines in the  $xy$  plane. Show the acceleration vectors on the streamline plot.
- 5.55 Show that the velocity field of Problem 2.12 represents a possible incompressible flow field. Determine and plot the streamline passing through point  $(x, y) = (2, 4)$  at  $t = 1.5\text{ s}$ . For the particle at the same point and time, show on the plot the velocity vector and the vectors representing the local, convective, and total accelerations.
- 5.56 A linear approximate velocity profile was used in Problem 5.10 to model a laminar incompressible boundary layer on a flat plate. For this profile, obtain expressions for the  $x$  and  $y$  components of acceleration of a fluid particle in the boundary layer. Locate the maximum magnitudes of the  $x$  and  $y$  accelerations. Compute the ratio of the maximum  $x$  magnitude to the maximum  $y$  magnitude for the flow conditions of Problem 5.10.
- 5.57 A sinusoidal approximate velocity profile was used in Problem 5.11 to model flow in a laminar incompressible boundary layer on a flat plate. For this profile, obtain an expression for the  $x$  and  $y$  components of acceleration of a fluid particle in the boundary layer. Plot  $a_x$  and  $a_y$  at location  $x = 1\text{ m}$ , where  $\delta = 1\text{ mm}$ , for a flow with  $U = 5\text{ m/s}$ . Find the maxima of  $a_x$  and  $a_y$  at this  $x$  location.




- 5.58 A parabolic approximate velocity profile was used in Problem 5.12 to model flow in a laminar incompressible boundary layer on a flat plate. For this profile, find the  $x$  component of acceleration,  $a_x$ , of a fluid particle within the boundary layer. Plot  $a_x$  at location  $x = 1$  m, where  $\delta = 1$  mm, for a flow with  $U = 5$  m/s. Find the maximum value of  $a_x$  at this  $x$  location.

- 5.59 Air flows into the narrow gap, of height  $h$ , between closely spaced parallel plates through a porous surface as shown. Use a control volume, with outer surface located at position  $x$ , to show that the uniform velocity in the  $x$  direction is  $u = v_0 x/h$ . Find an expression for the velocity component in the  $y$  direction. Evaluate the acceleration of a fluid particle in the gap.

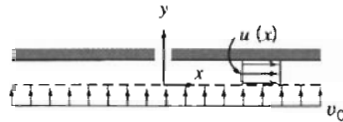

P5.59



P5.60


- 5.60 Air flows into the narrow gap, of height  $h$ , between closely spaced parallel disks through a porous surface as shown. Use a control volume, with outer surface located at position  $r$ , to show that the uniform velocity in the  $r$  direction is  $V = v_0 r/2h$ . Find an expression for the velocity component in the  $z$  direction ( $v_0 \ll V$ ). Evaluate the components of acceleration for a fluid particle in the gap.

- 5.61 The velocity field for steady inviscid flow from left to right over a circular cylinder, of radius  $R$ , is given by


$$\vec{V} = U \cos \theta \left[ 1 - \left( \frac{R}{r} \right)^2 \right] \hat{e}_r - U \sin \theta \left[ 1 + \left( \frac{R}{r} \right)^2 \right] \hat{e}_\theta$$

Obtain expressions for the acceleration of a fluid particle moving along the stagnation streamline ( $\theta = \pi$ ) and for the acceleration along the cylinder surface ( $r = R$ ). Plot  $a_r$  as a function of  $r/R$  for  $\theta = \pi$ , and as a function of  $\theta$  for  $r = R$ ; plot  $a_\theta$  as a function of  $\theta$  for  $r = R$ . Comment on the plots. Determine the locations at which these accelerations reach maximum and minimum values.

- 5.62 Consider the incompressible flow of a fluid through a nozzle as shown. The area of the nozzle is given by  $A = A_0(1 - bx)$  and the inlet velocity varies according to  $U = U_0(1 - e^{-\lambda t})$ , where  $A_0 = 0.5$  m<sup>2</sup>,  $L = 5$  m,  $b = 0.1$  m<sup>-1</sup>,  $\lambda = 0.2$  s<sup>-1</sup>, and  $U_0 = 5$  m/s. Find and plot the acceleration on the centerline, with time as a parameter.

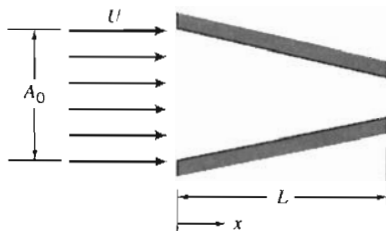

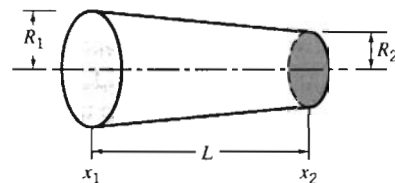

P5.62



P5.63

- 5.63 Consider the one-dimensional, incompressible flow through the circular channel shown. The velocity at section ① is given by  $U = U_0 + U_1 \sin \omega t$ , where  $U_0 = 20$  m/s,

$U_1 = 2$  m/s, and  $\omega = 0.3$  rad/s. The channel dimensions are  $L = 1$  m,  $R_1 = 0.2$  m, and  $R_2 = 0.1$  m. Determine the particle acceleration at the channel exit. Plot the results as a function of time over a complete cycle. On the same plot, show the acceleration at the channel exit if the channel is constant area, rather than convergent, and explain the difference between the curves.

- 5.64 Consider again the steady, two-dimensional velocity field of Problem 5.52. Obtain expressions for the particle coordinates,  $x_p = f_1(t)$  and  $y_p = f_2(t)$ , as functions of time and the initial particle position,  $(x_0, y_0)$  at  $t = 0$ . Determine the time required for a particle to travel from initial position,  $(x_0, y_0) = (\frac{1}{2}, 2)$ , to positions  $(x, y) = (1, 1)$  and  $(2, \frac{1}{2})$ . Compare the particle accelerations determined by differentiating  $f_1(t)$  and  $f_2(t)$  with those obtained in Problem 5.52.
- 5.65 Expand  $(\vec{V} \cdot \nabla) \vec{V}$  in cylindrical coordinates by direct substitution of the velocity vector to obtain the convective acceleration of a fluid particle. (Recall the hint in footnote 1 on page 190.) Verify the results given in Eqs. 5.12.
- 5.66 A flow is represented by the velocity field  $\vec{V} = 10x\hat{i} - 10y\hat{j} + 30\hat{k}$ . Determine if the field is (a) a possible incompressible flow and (b) irrotational.
- 5.67 Which, if any, of the flow fields of Problem 5.2 are irrotational?
- 5.68 Consider again the sinusoidal velocity profile used to model the  $x$  component of velocity for a boundary layer in Problem 5.11. Neglect the vertical component of velocity. Evaluate the circulation around the contour bounded by  $x = 0.4$  m,  $x = 0.6$  m,  $y = 0$ , and  $y = 8$  mm. What would be the results of this evaluation if it were performed 0.2 m further downstream? Assume  $U = 0.5$  m/s.
- 5.69 Consider the velocity field for flow in a rectangular "corner,"  $\vec{V} = Ax\hat{i} - Ay\hat{j}$ , with  $A = 0.3$  s $^{-1}$ , as in Example Problem 5.8. Evaluate the circulation about the unit square of Example Problem 5.8.
- 5.70 Consider the two-dimensional flow field in which  $u = Axy$  and  $v = By^2$ , where  $A = 1$  m $^{-1} \cdot$  s $^{-1}$ ,  $B = -\frac{1}{2}$  m $^{-1} \cdot$  s $^{-1}$ , and the coordinates are measured in meters. Show that the velocity field represents a possible incompressible flow. Determine the rotation at point  $(x, y) = (1, 1)$ . Evaluate the circulation about the "curve" bounded by  $y = 0$ ,  $x = 1$ ,  $y = 1$ , and  $x = 0$ .
- \*5.71 Consider the flow field represented by the stream function  $\psi = (q/2\pi) \tan^{-1}(y/x)$ , where  $q = \text{constant}$ . Is this a possible two-dimensional, incompressible flow? Is the flow irrotational?
- \*5.72 Consider a flow field represented by the stream function  $\psi = -A/2(x^2 + y^2)$ , where  $A = \text{constant}$ . Is this a possible two-dimensional incompressible flow? Is the flow irrotational?
- \*5.73 Consider a velocity field for motion parallel to the  $x$  axis with constant shear. The shear rate is  $du/dy = A$ , where  $A = 0.1$  s $^{-1}$ . Obtain an expression for the velocity field,  $\vec{V}$ . Calculate the rate of rotation. Evaluate the stream function for this flow field.
-  \*5.74 Consider the velocity field given by  $\vec{V} = Axy\hat{i} + By^2\hat{j}$ , where  $A = 4$  m $^{-1} \cdot$  s $^{-1}$ ,  $B = -2$  m $^{-1} \cdot$  s $^{-1}$ , and the coordinates are measured in meters. Determine the fluid rotation. Evaluate the circulation about the "curve" bounded by  $y = 0$ ,  $x = 1$ ,  $y = 1$ , and  $x = 0$ . Obtain an expression for the stream function. Plot several streamlines in the first quadrant.
-  \*5.75 A flow field is represented by the stream function  $\psi = x^2 - y^2$ . Find the corresponding velocity field. Show that this flow field is irrotational. Plot several streamlines and illustrate the velocity field.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- \*5.76 Consider the flow represented by the velocity field  $\vec{V} = (Ay + B)\hat{i} + Ax\hat{j}$ , where  $A = 6 \text{ s}^{-1}$ ,  $B = 3 \text{ m} \cdot \text{s}^{-1}$ , and the coordinates are measured in meters. Obtain an expression for the stream function. Plot several streamlines (including the stagnation streamline) in the first quadrant. Evaluate the circulation about the "curve" bounded by  $y = 0$ ,  $x = 1$ ,  $y = 1$ , and  $x = 0$ .

- \*5.77 Consider the flow field represented by the stream function  $\psi = Axy + Ay^2$ , where  $A = 1 \text{ s}^{-1}$ . Show that this represents a possible incompressible flow field. Evaluate the rotation of the flow. Plot a few streamlines in the upper half plane.

- 5.78 Consider again the viscometric flow of Example Problem 5.7. Evaluate the average rate of rotation of a pair of perpendicular line segments oriented at  $\pm 45^\circ$  from the  $x$  axis. Show that this is the same as in the example.

- \*5.79 The velocity field near the core of a tornado can be approximated as

$$\vec{V} = -\frac{q}{2\pi r} \hat{e}_r + \frac{K}{2\pi r} \hat{e}_\theta$$

Is this an irrotational flow field? Obtain the stream function for this flow.

- 5.80 Consider the pressure-driven flow between stationary parallel plates separated by distance  $b$ . Coordinate  $y$  is measured from the bottom plate. The velocity field is given by  $u = U(y/b)[1 - (y/b)]$ . Obtain an expression for the circulation about a closed contour of height  $h$  and length  $L$ . Evaluate when  $h = b/2$  and when  $h = b$ . Show that the same result is obtained from the area integral of the Stokes Theorem (Eq. 5.18).
- 5.81 The velocity profile for fully developed flow in a circular tube is  $V_z = V_{\max}[1 - (r/R)^2]$ . Evaluate the rates of linear and angular deformation for this flow. Obtain an expression for the vorticity vector,  $\vec{\zeta}$ .
- 5.82 Consider the pressure-driven flow between stationary parallel plates separated by distance  $2b$ . Coordinate  $y$  is measured from the channel centerline. The velocity field is given by  $u = u_{\max}[1 - (y/b)^2]$ . Evaluate the rates of linear and angular deformation. Obtain an expression for the vorticity vector,  $\vec{\zeta}$ . Find the location where the vorticity is a maximum.
- 5.83 A linear velocity profile was used to model flow in a laminar incompressible boundary layer in Problem 5.10. Express the rotation of a fluid particle. Locate the maximum rate of rotation. Express the rate of angular deformation for a fluid particle. Locate the maximum rate of angular deformation. Express the rates of linear deformation for a fluid particle. Locate the maximum rates of linear deformation. Express the shear force per unit volume in the  $x$  direction. Locate the maximum shear force per unit volume; interpret this result.
- 5.84 The  $x$  component of velocity in a laminar boundary layer in water is approximated as  $u = U \sin(\pi y/2\delta)$ , where  $U = 3 \text{ m/s}$  and  $\delta = 2 \text{ mm}$ . The  $y$  component of velocity is much smaller than  $u$ . Obtain an expression for the net shear force per unit volume in the  $x$  direction on a fluid element. Calculate its maximum value for this flow.
- 5.85 Problem 4.23 gave the velocity profile for fully developed laminar flow in a circular tube as  $u = u_{\max}[1 - (r/R)^2]$ . Obtain an expression for the shear force per unit volume in the  $x$  direction for this flow. Evaluate its maximum value for the conditions of Problem 4.23.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.



# INCOMPRESSIBLE INVISCID FLOW

In Chapter 5 we devoted a great deal of effort to deriving the differential equations (Eqs. 5.24) that describe the behavior of any fluid satisfying the continuum assumption. We also saw how these equations reduced to various particular forms—the most well known being the Navier–Stokes equations for an incompressible, constant viscosity fluid (Eqs. 5.27). Although Eqs. 5.27 describe the behavior of common fluids (e.g., water, air, lubricating oil) for a wide range of problems, as we discussed in Chapter 5, they are unsolvable analytically except for the simplest of geometries and flows. For example, even using the equations to predict the motion of your coffee as you slowly stir it would require the use of an advanced computational fluid dynamics computer application, and the prediction would take a lot longer to compute than the actual stirring! In this chapter, instead of the Navier–Stokes equations, we will study Euler’s equation, which applies to an inviscid fluid. Although truly inviscid fluids do not exist, many flow problems (especially in aerodynamics) can be successfully analyzed with the approximation that  $\mu = 0$ .

---

## 6-1 MOMENTUM EQUATION FOR FRICTIONLESS FLOW: EULER’S EQUATION

Euler’s equation (obtained from Eqs. 5.27 after neglecting the viscous terms) is

$$\rho \frac{D\vec{V}}{Dt} = \rho \vec{g} - \nabla p \quad (6.1)$$

This equation states that for an inviscid fluid the change in momentum of a fluid particle is caused by the body force (assumed to be gravity only) and the net pressure force. For convenience we recall that the material derivative is

$$\frac{D\vec{V}}{Dt} = \frac{\partial \vec{V}}{\partial t} + (\vec{V} \cdot \nabla) \vec{V} \quad (5.10)$$

In this chapter we will apply Eq. 6.1 to the solution of incompressible, inviscid flow problems. In addition to Eq. 6.1 we have the incompressible form of the mass conservation equation,

$$\nabla \cdot \vec{V} = 0 \quad (5.1e)$$

Equation 6.1 expressed in rectangular coordinates is

$$\rho \left( \frac{\partial u}{\partial t} + u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} + w \frac{\partial u}{\partial z} \right) = \rho g_x - \frac{\partial p}{\partial x} \quad (6.2a)$$

$$\rho \left( \frac{\partial v}{\partial t} + u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} + w \frac{\partial v}{\partial z} \right) = \rho g_y - \frac{\partial p}{\partial y} \quad (6.2b)$$

$$\rho \left( \frac{\partial w}{\partial t} + u \frac{\partial w}{\partial x} + v \frac{\partial w}{\partial y} + w \frac{\partial w}{\partial z} \right) = \rho g_z - \frac{\partial p}{\partial z} \quad (6.2c)$$

If the  $z$  axis is assumed vertical, then  $g_x = 0$ ,  $g_y = 0$ , and  $g_z = -g$ , so  $\vec{g} = -\rho g \hat{k}$ .

In cylindrical coordinates, the equations in component form, with gravity the only body force, are

$$\rho a_r = \rho \left( \frac{\partial V_r}{\partial t} + V_r \frac{\partial V_r}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_r}{\partial \theta} + V_z \frac{\partial V_r}{\partial z} - \frac{V_\theta^2}{r} \right) = \rho g_r - \frac{\partial p}{\partial r} \quad (6.3a)$$

$$\rho a_\theta = \rho \left( \frac{\partial V_\theta}{\partial t} + V_r \frac{\partial V_\theta}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_\theta}{\partial \theta} + V_z \frac{\partial V_\theta}{\partial z} + \frac{V_r V_\theta}{r} \right) = \rho g_\theta - \frac{1}{r} \frac{\partial p}{\partial \theta} \quad (6.3b)$$

$$\rho a_z = \rho \left( \frac{\partial V_z}{\partial t} + V_r \frac{\partial V_z}{\partial r} + \frac{V_\theta}{r} \frac{\partial V_z}{\partial \theta} + V_z \frac{\partial V_z}{\partial z} \right) = \rho g_z - \frac{\partial p}{\partial z} \quad (6.3c)$$

If the  $z$  axis is directed vertically upward, then  $g_r = g_\theta = 0$  and  $g_z = -g$ .

Equations 6.1, 6.2, and 6.3 apply to problems in which there are no viscous stresses. Before continuing with the main topic of this chapter (inviscid flow), let's consider for a moment when we have no viscous stresses, other than when  $\mu = 0$ . We recall from previous discussions that, in general, viscous stresses are present when we have fluid deformation (in fact this is how we initially defined a fluid); when we have no fluid deformation, i.e., when we have *rigid-body* motion, no viscous stresses will be present, even if  $\mu \neq 0$ . Hence Euler's equations apply to rigid-body motions as well as to inviscid flows. We discussed rigid-body motion in detail in Section 3.7 as a special case of fluid statics. As an exercise, you can show that Euler's equations can be used to solve Example Problems 3.9 and 3.10.

## 6-2 EULER'S EQUATIONS IN STREAMLINE COORDINATES

In Chapters 2 and 5 we pointed out that streamlines, drawn tangent to the velocity vectors at every point in the flow field, provide a convenient graphical representation. In steady flow a fluid particle will move along a streamline because, for steady flow, pathlines and streamlines coincide. Thus, in describing the motion of a fluid particle in a steady flow, the distance along a streamline is a logical coordinate to use in writing the equations of motion. "Streamline coordinates" also may be used to describe unsteady flow. Streamlines in unsteady flow give a graphical representation of the instantaneous velocity field.

For simplicity, consider the flow in the  $yz$  plane shown in Fig. 6.1. We wish to write the equations of motion in terms of the coordinate  $s$ , distance along a streamline, and the coordinate  $n$ , distance normal to the streamline. The pressure at the center of

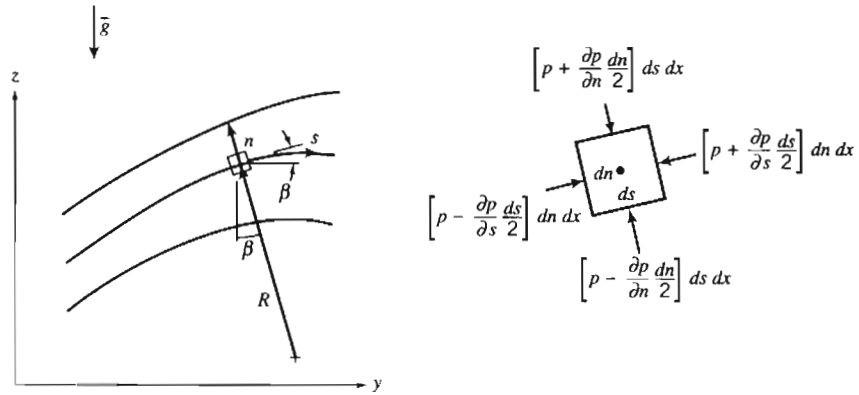


Fig. 6.1 Fluid particle moving along a streamline.

the fluid element is  $p$ . If we apply Newton's second law in the streamwise (the  $s$ ) direction to the fluid element of volume  $ds dn dx$ , then neglecting viscous forces we obtain

$$\left(p - \frac{\partial p}{\partial s} \frac{ds}{2}\right) dn dx - \left(p + \frac{\partial p}{\partial s} \frac{ds}{2}\right) dn dx - \rho g \sin \beta ds dn dx = \rho a_s ds dn dx$$

where  $\beta$  is the angle between the tangent to the streamline and the horizontal, and  $a_s$  is the acceleration of the fluid particle along the streamline. Simplifying the equation, we obtain

$$-\frac{\partial p}{\partial s} - \rho g \sin \beta = \rho a_s$$

Since  $\sin \beta = \partial z / \partial s$ , we can write

$$-\frac{1}{\rho} \frac{\partial p}{\partial s} - g \frac{\partial z}{\partial s} = a_s$$

Along any streamline  $V = V(s, t)$ , and the material or total acceleration of a fluid particle in the streamwise direction is given by

$$a_s = \frac{DV}{Dt} = \frac{\partial V}{\partial t} + V \frac{\partial V}{\partial s}$$

Euler's equation in the streamwise direction with the  $z$  axis directed vertically upward is then

$$-\frac{1}{\rho} \frac{\partial p}{\partial s} - g \frac{\partial z}{\partial s} = \frac{\partial V}{\partial t} + V \frac{\partial V}{\partial s} \quad (6.4a)$$

For steady flow, and neglecting body forces, Euler's equation in the streamwise direction reduces to

$$\frac{1}{\rho} \frac{\partial p}{\partial s} = -V \frac{\partial V}{\partial s} \quad (6.4b)$$

which indicates that *a decrease in velocity is accompanied by an increase in pressure and conversely.*<sup>1</sup> This makes sense: The only force experienced by the particle is the

<sup>1</sup> The relationship between variations in pressure and velocity in the streamwise direction for steady incompressible inviscid flow is illustrated in the NCFMF video *Pressure Fields and Fluid Acceleration*.

net pressure force, so the particle accelerates toward low-pressure regions and decelerates when approaching high-pressure regions.

To obtain Euler's equation in a direction normal to the streamlines, we apply Newton's second law in the  $n$  direction to the fluid element. Again, neglecting viscous forces, we obtain

$$\left(p - \frac{\partial p}{\partial n} \frac{dn}{2}\right) ds dx - \left(p + \frac{\partial p}{\partial n} \frac{dn}{2}\right) ds dx - \rho g \cos \beta dn dx ds = \rho a_n dn dx ds$$

where  $\beta$  is the angle between the  $n$  direction and the vertical, and  $a_n$  is the acceleration of the fluid particle in the  $n$  direction. Simplifying the equation, we obtain

$$-\frac{\partial p}{\partial n} - \rho g \cos \beta = \rho a_n$$

Since  $\cos \beta = \partial z / \partial n$ , we write

$$-\frac{1}{\rho} \frac{\partial p}{\partial n} - g \frac{\partial z}{\partial n} = a_n$$

The normal acceleration of the fluid element is toward the center of curvature of the streamline, in the minus  $n$  direction; thus in the coordinate system of Fig. 6.1, the familiar centripetal acceleration is written

$$a_n = \frac{-V^2}{R}$$

for steady flow, where  $R$  is the radius of curvature of the streamline. Then, Euler's equation normal to the streamline is written for steady flow as

$$\frac{1}{\rho} \frac{\partial p}{\partial n} + g \frac{\partial z}{\partial n} = \frac{V^2}{R} \quad (6.5a)$$

For steady flow in a horizontal plane, Euler's equation normal to a streamline becomes

$$\frac{1}{\rho} \frac{\partial p}{\partial n} = \frac{V^2}{R} \quad (6.5b)$$

Equation 6.5b indicates that *pressure increases in the direction outward from the center of curvature of the streamlines.*<sup>2</sup> This also makes sense: Because the only force experienced by the particle is the net pressure force, the pressure field creates the centripetal acceleration. In regions where the streamlines are straight, the radius of curvature,  $R$ , is infinite so *there is no pressure variation normal to straight streamlines.*

### EXAMPLE 6.1 Flow in a Bend

The flow rate of air at standard conditions in a flat duct is to be determined by installing pressure taps across a bend. The duct is 0.3 m deep and 0.1 m wide. The inner radius of the bend is 0.25 m. If the measured pressure difference between the taps is 40 mm of water, compute the approximate flow rate.

<sup>2</sup>The effect of streamline curvature on the pressure gradient normal to a streamline is illustrated in the NCFMF video *Pressure Fields and Fluid Acceleration*.

**EXAMPLE PROBLEM 6.1****GIVEN:** Flow through duct bend as shown.

$$p_2 - p_1 = \rho_{\text{H}_2\text{O}} g \Delta h$$

where  $\Delta h = 40 \text{ mm H}_2\text{O}$ . Air is at STP.**FIND:** Volume flow rate,  $Q$ .**SOLUTION:**Apply Euler's  $n$  component equation across flow streamlines.

$$\text{Governing equation: } \frac{\partial p}{\partial r} = \frac{\rho V^2}{r}$$

- Assumptions (1) Frictionless flow.  
 (2) Incompressible flow.  
 (3) Uniform flow at measurement section.

For this flow,  $p = p(r)$ , so

$$\frac{\partial p}{\partial r} = \frac{dp}{dr} = \frac{\rho V^2}{r}$$

or

$$dp = \rho V^2 \frac{dr}{r}$$

Integrating gives

$$p_2 - p_1 = \rho V^2 \ln r \Big|_{r_1}^{r_2} = \rho V^2 \ln \frac{r_2}{r_1}$$

and hence

$$V = \left[ \frac{p_2 - p_1}{\rho \ln(r_2/r_1)} \right]^{1/2}$$

But  $\Delta p = p_2 - p_1 = \rho_{\text{H}_2\text{O}} g \Delta h$ , so  $V = \left[ \frac{\rho_{\text{H}_2\text{O}} g \Delta h}{\rho \ln(r_2/r_1)} \right]^{1/2}$ 


Substituting numerical values,

$$V = \left[ \frac{999 \frac{\text{kg}}{\text{m}^3} \times 9.81 \frac{\text{m}}{\text{s}^2} \times 0.04 \text{ m}}{1.23 \text{ kg} \times \ln(0.35 \text{ m}/0.25 \text{ m})} \right]^{1/2} = 30.8 \text{ m/s}$$

For uniform flow

$$Q = VA = 30.8 \frac{\text{m}}{\text{s}} \times 0.1 \text{ m} \times 0.3 \text{ m}$$

$$Q = 0.924 \text{ m}^3/\text{s} \quad \leftarrow Q$$

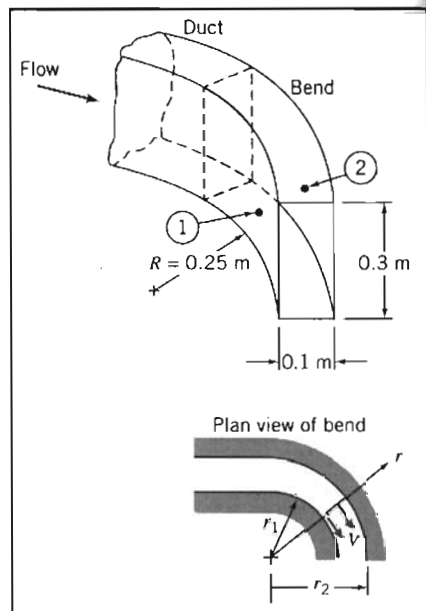



In this problem we assumed that the velocity is uniform across the section. In fact, the velocity in the bend approximates a free vortex (irrotational) profile in which  $V \propto 1/r$  (where  $r$  is the radius) instead of  $V = \text{const}$ . Hence, this flow-measurement device could only be used to obtain approximate values of the flow rate.

### 6-3 BERNOULLI EQUATION—INTEGRATION OF EULER'S EQUATION ALONG A STREAMLINE FOR STEADY FLOW

Compared to the viscous-flow equivalents, the momentum or Euler's equation for incompressible, inviscid flow (Eqs. 6.1) is simpler mathematically, but solution (in conjunction with the mass conservation equation, Eq. 5.1c) still presents formidable difficulties in all but the most basic flow problems. One convenient approach for a steady flow is to integrate Euler's equation along a streamline. We will do this below using two different mathematical approaches, and each will result in the Bernoulli equation. Recall that in Section 4-4 we derived the Bernoulli equation by starting with a differential control volume; these two additional derivations will give us more insight into the restrictions inherent in use of the Bernoulli equation.

#### Derivation Using Streamline Coordinates

Euler's equation for steady flow along a streamline (from Eq. 6.4a) is

$$-\frac{1}{\rho} \frac{\partial p}{\partial s} - g \frac{\partial z}{\partial s} = V \frac{\partial V}{\partial s} \quad (6.6)$$

If a fluid particle moves a distance,  $ds$ , along a streamline, then

$$\frac{\partial p}{\partial s} ds = dp \quad (\text{the change in pressure along } s)$$

$$\frac{\partial z}{\partial s} ds = dz \quad (\text{the change in elevation along } s)$$

$$\frac{\partial V}{\partial s} ds = dV \quad (\text{the change in speed along } s)$$

Thus, after multiplying Eq. 6.6 by  $ds$ , we can write

$$-\frac{dp}{\rho} - g dz = V dV \quad \text{or} \quad \frac{dp}{\rho} + V dV + g dz = 0 \quad (\text{along } s)$$

Integration of this equation gives

$$\int \frac{dp}{\rho} + \frac{V^2}{2} + gz = \text{constant} \quad (\text{along } s) \quad (6.7)$$

Before Eq. 6.7 can be applied, we must specify the relation between pressure and density. For the special case of incompressible flow,  $\rho = \text{constant}$ , and Eq. 6.7 becomes the Bernoulli equation,

$$\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant} \quad (6.8)$$

- Restrictions:
- (1) Steady flow.
  - (2) Incompressible flow.
  - (3) Frictionless flow.
  - (4) Flow along a streamline.

The Bernoulli equation is a powerful and useful equation because it relates pressure changes to velocity and elevation changes along a streamline. However, it gives correct results only when applied to a flow situation where all four of the restrictions are reasonable. Keep the restrictions firmly in mind whenever you consider using the Bernoulli equation. (In general, the Bernoulli constant in Eq. 6.8 has different values along different streamlines.<sup>3</sup>)

### \*Derivation Using Rectangular Coordinates

The vector form of Euler's equation, Eq. 6.1, also can be integrated along a streamline. We shall restrict the derivation to steady flow; thus, the end result of our effort should be Eq. 6.7.

For steady flow, Euler's equation in rectangular coordinates can be expressed as

$$\frac{D\vec{V}}{Dt} = u \frac{\partial \vec{V}}{\partial x} + v \frac{\partial \vec{V}}{\partial y} + w \frac{\partial \vec{V}}{\partial z} = (\vec{V} \cdot \nabla)\vec{V} = -\frac{1}{\rho} \nabla p - g\hat{k} \quad (6.9)$$

For steady flow the velocity field is given by  $\vec{V} = \vec{V}(x, y, z)$ . The streamlines are lines drawn in the flow field tangent to the velocity vector at every point. Recall again that for steady flow, streamlines, pathlines, and streaklines coincide. The motion of a particle along a streamline is governed by Eq. 6.9. During time interval  $dt$  the particle has vector displacement  $d\vec{s}$  along the streamline.

If we take the dot product of the terms in Eq. 6.9 with displacement  $d\vec{s}$  along the streamline, we obtain a scalar equation relating pressure, speed, and elevation along the streamline. Taking the dot product of  $d\vec{s}$  with Eq. 6.9 gives

$$(\vec{V} \cdot \nabla)\vec{V} \cdot d\vec{s} = -\frac{1}{\rho} \nabla p \cdot d\vec{s} - g\hat{k} \cdot d\vec{s} \quad (6.10)$$

where

$$d\vec{s} = dx\hat{i} + dy\hat{j} + dz\hat{k} \quad (\text{along } s)$$

Now we evaluate each of the three terms in Eq. 6.10, starting on the right,

$$\begin{aligned} -\frac{1}{\rho} \nabla p \cdot d\vec{s} &= -\frac{1}{\rho} \left[ \hat{i} \frac{\partial p}{\partial x} + \hat{j} \frac{\partial p}{\partial y} + \hat{k} \frac{\partial p}{\partial z} \right] \cdot [dx\hat{i} + dy\hat{j} + dz\hat{k}] \\ &= -\frac{1}{\rho} \left[ \frac{\partial p}{\partial x} dx + \frac{\partial p}{\partial y} dy + \frac{\partial p}{\partial z} dz \right] \quad (\text{along } s) \\ -\frac{1}{\rho} \nabla p \cdot d\vec{s} &= -\frac{1}{\rho} dp \quad (\text{along } s) \end{aligned}$$

<sup>3</sup> For the case of irrotational flow, the constant has a single value throughout the entire flow field (Section 6-7).

\*This section may be omitted without loss of continuity in the text material.

and

$$\begin{aligned} -g\hat{k} \cdot d\vec{s} &= -g\hat{k} \cdot [dx\hat{i} + dy\hat{j} + dz\hat{k}] \\ &= -g dz \quad (\text{along } s) \end{aligned}$$

Using a vector identity,<sup>4</sup> we can write the third term as

$$\begin{aligned} (\vec{V} \cdot \nabla)\vec{V} \cdot d\vec{s} &= \left[ \frac{1}{2} \nabla(\vec{V} \cdot \vec{V}) - \vec{V} \times (\nabla \times \vec{V}) \right] \cdot d\vec{s} \\ &= \left\{ \frac{1}{2} \nabla(\vec{V} \cdot \vec{V}) \right\} \cdot d\vec{s} - \left\{ \vec{V} \times (\nabla \times \vec{V}) \right\} \cdot d\vec{s} \end{aligned}$$

The last term on the right side of this equation is zero, since  $\vec{V}$  is parallel to  $d\vec{s}$ . Consequently,

$$\begin{aligned} (\vec{V} \cdot \nabla)\vec{V} \cdot d\vec{s} &= \frac{1}{2} \nabla(\vec{V} \cdot \vec{V}) \cdot d\vec{s} = \frac{1}{2} \nabla(V^2) \cdot d\vec{s} \quad (\text{along } s) \\ &= \frac{1}{2} \left[ \hat{i} \frac{\partial V^2}{\partial x} + \hat{j} \frac{\partial V^2}{\partial y} + \hat{k} \frac{\partial V^2}{\partial z} \right] \cdot [dx\hat{i} + dy\hat{j} + dz\hat{k}] \\ &= \frac{1}{2} \left[ \frac{\partial V^2}{\partial x} dx + \frac{\partial V^2}{\partial y} dy + \frac{\partial V^2}{\partial z} dz \right] \\ (\vec{V} \cdot \nabla)\vec{V} \cdot d\vec{s} &= \frac{1}{2} d(V^2) \quad (\text{along } s) \end{aligned}$$

Substituting these three terms into Eq. 6.10 yields

$$\frac{dp}{\rho} + \frac{1}{2} d(V^2) + g dz = 0 \quad (\text{along } s)$$

Integrating this equation, we obtain

$$\int \frac{dp}{\rho} + \frac{V^2}{2} + gz = \text{constant} \quad (\text{along } s)$$

If the density is constant, we obtain the Bernoulli equation

$$\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant}$$

As expected, we see that the last two equations are identical to Eqs. 6.7 and 6.8 derived previously using streamline coordinates. The Bernoulli equation, derived using rectangular coordinates, is still subject to the restrictions: (1) steady flow, (2) incompressible flow, (3) frictionless flow, and (4) flow along a streamline.

### Static, Stagnation, and Dynamic Pressures

The pressure,  $p$ , which we have used in deriving the Bernoulli equation, Eq. 6.8, is the thermodynamic pressure; it is commonly called the *static pressure*. The static pressure is the pressure seen by the fluid particle as it moves (so it is something of a misnomer!)—

<sup>4</sup>The vector identity

$$(\vec{V} \cdot \nabla)\vec{V} = \frac{1}{2} \nabla(\vec{V} \cdot \vec{V}) - \vec{V} \times (\nabla \times \vec{V})$$

may be verified by expanding each side into components.

we also have the stagnation and dynamic pressures, which we will define shortly. How do we measure the pressure in a fluid in motion?

In Section 6-2 we showed that there is no pressure variation normal to straight streamlines. This fact makes it possible to measure the static pressure in a flowing fluid using a wall pressure “tap,” placed in a region where the flow streamlines are straight, as shown in Fig. 6.2a. The pressure tap is a small hole, drilled carefully in the wall, with its axis perpendicular to the surface. If the hole is perpendicular to the duct wall and free from burrs, accurate measurements of static pressure can be made by connecting the tap to a suitable pressure-measuring instrument [1].

In a fluid stream far from a wall, or where streamlines are curved, accurate static pressure measurements can be made by careful use of a static pressure probe, shown in Fig. 6.2b. Such probes must be designed so that the measuring holes are placed correctly with respect to the probe tip and stem to avoid erroneous results [2]. In use, the measuring section must be aligned with the local flow direction.

Static pressure probes, such as that shown in Fig 6.2b, and in a variety of other forms, are available commercially in sizes as small as 1.5 mm ( $\frac{1}{16}$  in.) in diameter [3].

The *stagnation pressure* is obtained when a flowing fluid is decelerated to zero speed by a frictionless process. For incompressible flow, the Bernoulli equation can be used to relate changes in speed and pressure along a streamline for such a process. Neglecting elevation differences, Eq. 6.8 becomes

$$\frac{p}{\rho} + \frac{V^2}{2} = \text{constant}$$

If the static pressure is  $p$  at a point in the flow where the speed is  $V$ , then the stagnation pressure,  $p_0$ , where the stagnation speed,  $V_0$ , is zero, may be computed from

$$\frac{p_0}{\rho} + \frac{V_0^2}{2} = \frac{p}{\rho} + \frac{V^2}{2}$$

or

$$p_0 = p + \frac{1}{2} \rho V^2 \quad (6.11)$$

Equation 6.11 is a mathematical statement of the definition of stagnation pressure, valid for incompressible flow. The term  $\frac{1}{2} \rho V^2$  generally is called the *dynamic pressure*. Equation 6.11 states that the stagnation (or *total*) pressure equals the static pressure plus the dynamic pressure. One way to picture the three pressures is to imagine you are standing in a steady wind holding up your hand: The static pressure will be atmospheric pressure; the larger pressure you feel at the center of your hand will be the stagnation pressure; and the buildup of pressure will be the dynamic pressure.

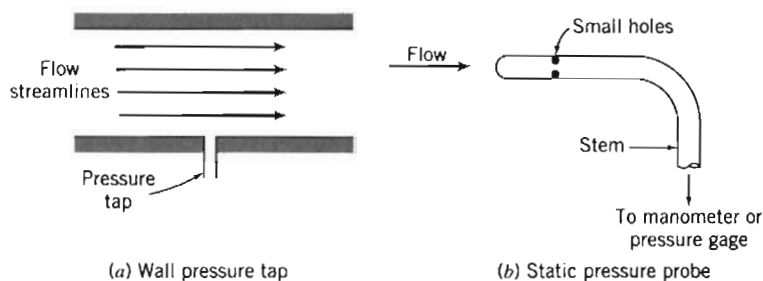


Fig. 6.2 Measurement of static pressure.

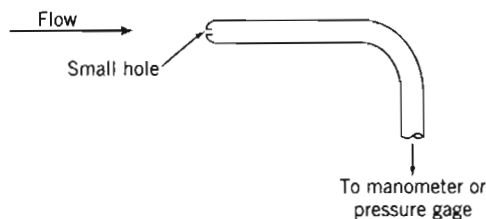


Fig. 6.3 Measurement of stagnation pressure.



Solving Eq. 6.11 for the speed,

$$V = \sqrt{\frac{2(p_0 - p)}{\rho}} \quad (6.12)$$

Thus, if the stagnation pressure and the static pressure could be measured at a point, Eq. 6.12 would give the local flow speed.

Stagnation pressure is measured in the laboratory using a probe with a hole that faces directly upstream as shown in Fig. 6.3. Such a probe is called a stagnation pressure probe, or pitot (pronounced *pea-toe*) tube. Again, the measuring section must be aligned with the local flow direction.

We have seen that static pressure at a point can be measured with a static pressure tap or probe (Fig. 6.2). If we knew the stagnation pressure at the same point, then the flow speed could be computed from Eq. 6.12. Two possible experimental setups are shown in Fig. 6.4.

In Fig. 6.4a, the static pressure corresponding to point A is read from the wall static pressure tap. The stagnation pressure is measured directly at A by the total head tube, as shown. (The stem of the total head tube is placed downstream from the measurement location to minimize disturbance of the local flow.)

Two probes often are combined, as in the pitot-static tube shown in Fig. 6.4b. The inner tube is used to measure the stagnation pressure at point B, while the static pressure at C is sensed using the small holes in the outer tube. In flow fields where the static pressure variation in the streamwise direction is small, the pitot-static tube may be used to infer the speed at point B in the flow by assuming  $p_B = p_C$  and using Eq. 6.12. (Note that when  $p_B \neq p_C$ , this procedure will give erroneous results.)

Remember that the Bernoulli equation applies only for incompressible flow (Mach number  $M \leq 0.3$ ). The definition and calculation of the stagnation pressure for compressible flow will be discussed in Section 11-3.

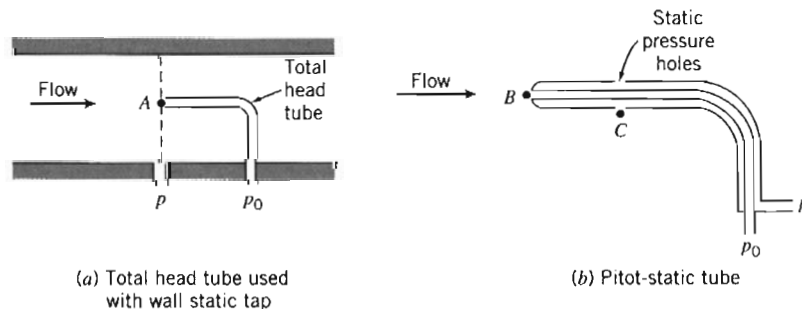


Fig. 6.4 Simultaneous measurement of stagnation and static pressures.

### EXAMPLE 6.2 Pitot Tube

A pitot tube is inserted in an air flow (at STP) to measure the flow speed. The tube is inserted so that it points upstream into the flow and the pressure sensed by the tube is

the stagnation pressure. The static pressure is measured at the same location in the flow, using a wall pressure tap. If the pressure difference is 30 mm of mercury, determine the flow speed.

### EXAMPLE PROBLEM 6.2

**GIVEN:** A pitot tube inserted in a flow as shown. The flowing fluid is air and the manometer liquid is mercury.

**FIND:** The flow speed.

**SOLUTION:**

Governing equation:  $\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant}$

- Assumptions: (1) Steady flow.  
 (2) Incompressible flow.  
 (3) Flow along a streamline.  
 (4) Frictionless deceleration along stagnation streamline.

Writing Bernoulli's equation along the stagnation streamline (with  $\Delta z = 0$ ) yields

$$\frac{p_0}{\rho} = \frac{p}{\rho} + \frac{V^2}{2}$$

$p_0$  is the stagnation pressure at the tube opening where the speed has been reduced, without friction, to zero. Solving for  $V$  gives

$$V = \sqrt{\frac{2(p_0 - p)}{\rho_{\text{air}}}}$$


From the diagram,

$$p_0 - p = \rho_{\text{Hg}} g h = \rho_{\text{H}_2\text{O}} g h (SG_{\text{Hg}})$$

and

$$\begin{aligned} V &= \sqrt{\frac{2\rho_{\text{H}_2\text{O}} g h (SG_{\text{Hg}})}{\rho_{\text{air}}}} \\ &= \sqrt{2 \times 1000 \frac{\text{kg}}{\text{m}^3} \times 9.81 \frac{\text{m}}{\text{s}^2} \times 30 \text{ mm} \times 13.6 \times \frac{\text{m}^3}{1.23 \text{ kg}} \times \frac{\text{m}}{1000 \text{ mm}}} \\ V &= 80.8 \text{ m/s} \end{aligned}$$

At  $T = 20^\circ\text{C}$ , the speed of sound in air is 343 m/s. Hence,  $M = 0.236$  and the assumption of incompressible flow is valid.

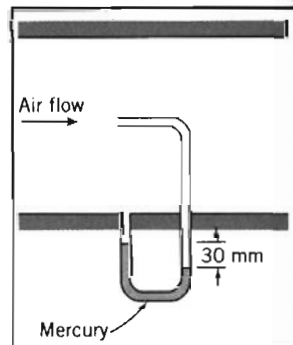

This problem illustrates use of a pitot tube to determine flow speed. Pitot (or pitot-static) tubes are often placed on the exterior of aircraft to indicate air speed relative to the aircraft, and hence aircraft speed relative to the air.

### Applications

The Bernoulli equation can be applied between any two points on a streamline provided that the other three restrictions are satisfied. The result is

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2 \quad (6.13)$$

where subscripts 1 and 2 represent any two points on a streamline. Applications of Eqs. 6.8 and 6.13 to typical flow problems are illustrated in Example Problems 6.3 through 6.5.

In some situations, the flow appears unsteady from one reference frame, but steady from another, which translates with the flow. Since the Bernoulli equation was derived by integrating Newton's second law for a fluid particle, it can be applied in any inertial reference frame (see the discussion of translating frames in Section 4-4). The procedure is illustrated in Example Problem 6.6.

### EXAMPLE 6.3 Nozzle Flow

Air flows steadily at low speed through a horizontal *nozzle* (by definition a device for accelerating a flow), discharging to atmosphere. The area at the nozzle inlet is  $0.1 \text{ m}^2$ . At the nozzle exit, the area is  $0.02 \text{ m}^2$ . Determine the gage pressure required at the nozzle inlet to produce an outlet speed of  $50 \text{ m/s}$ .

#### EXAMPLE PROBLEM 6.3

**GIVEN:** Flow through a nozzle, as shown.

**FIND:**  $p_1 - p_{\text{atm}}$ .

**SOLUTION:**

Governing equations:

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

$$= 0(1)$$


$$\frac{\partial}{\partial t} \int_{\text{CV}} \rho dV + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0$$

- Assumptions:
- (1) Steady flow.
  - (2) Incompressible flow.
  - (3) Frictionless flow.
  - (4) Flow along a streamline.
  - (5)  $z_1 = z_2$ .
  - (6) Uniform flow at sections ① and ②.

The maximum speed of  $50 \text{ m/s}$  is well below  $100 \text{ m/s}$ , which corresponds to Mach number  $M \approx 0.3$  in standard air. Hence, the flow may be treated as incompressible.

Apply the Bernoulli equation along a streamline between points ① and ② to evaluate  $p_1$ . Then

$$p_1 - p_{\text{atm}} = p_1 - p_2 = \frac{\rho}{2} (V_2^2 - V_1^2)$$

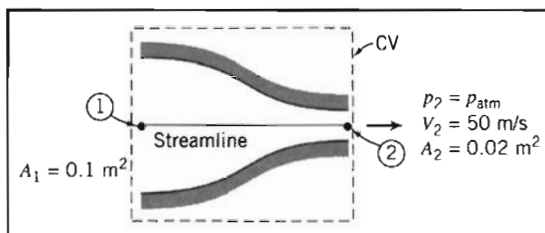

Apply the continuity equation to determine  $V_1$ ,

$$(-\rho V_1 A_1) + (\rho V_2 A_2) = 0 \quad \text{or} \quad V_1 A_1 = V_2 A_2$$

so that

$$V_1 = V_2 \frac{A_2}{A_1} = 50 \frac{\text{m}}{\text{s}} \times \frac{0.02 \text{ m}^2}{0.1 \text{ m}^2} = 10 \text{ m/s}$$

For air at standard conditions,  $\rho = 1.23 \text{ kg/m}^3$ . Then

$$\begin{aligned} p_1 - p_{\text{atm}} &= \frac{\rho}{2} (V_2^2 - V_1^2) \\ &= \frac{1}{2} \times 1.23 \frac{\text{kg}}{\text{m}^3} \left[ (50)^2 \frac{\text{m}^2}{\text{s}^2} - (10)^2 \frac{\text{m}^2}{\text{s}^2} \right] \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \end{aligned}$$

$$p_1 - p_{\text{atm}} = 1.48 \text{ kPa} \leftarrow$$

$$p_1 - p_2$$

**Notes:**

- ✓ This problem illustrates a typical application of the Bernoulli equation.
- ✓ The streamlines must be straight at the inlet and exit in order to have uniform pressures at those locations.

### EXAMPLE 6.4 Flow through a Siphon

A U-tube acts as a water siphon. The bend in the tube is 1 m above the water surface; the tube outlet is 7 m below the water surface. The water issues from the bottom of the siphon as a free jet at atmospheric pressure. Determine (after listing the necessary assumptions) the speed of the free jet and the minimum absolute pressure of the water in the bend.

#### EXAMPLE PROBLEM 6.4


**GIVEN:** Water flowing through a siphon as shown.

**FIND:** (a) Speed of water leaving as a free jet.  
(b) Pressure at point (A) in the flow.

**SOLUTION:**

Governing equation:  $\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant}$

- Assumptions:
- (1) Neglect friction.
  - (2) Steady flow.
  - (3) Incompressible flow.
  - (4) Flow along a streamline.
  - (5) Reservoir is large compared with pipe.

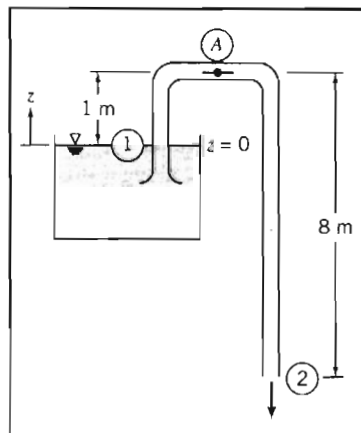



Apply the Bernoulli equation between points ① and ②.

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

Since  $\text{area}_{\text{reservoir}} \gg \text{area}_{\text{pipe}}$ , then  $V_1 \approx 0$ . Also  $p_1 = p_2 = p_{\text{atm}}$ , so

$$gz_1 = \frac{V_2^2}{2} + gz_2 \quad \text{and} \quad V_2^2 = 2g(z_1 - z_2)$$

$$V_2 = \sqrt{2g(z_1 - z_2)} = \sqrt{2 \times 9.81 \frac{\text{m}}{\text{s}^2} \times 7 \text{ m}} = 11.7 \text{ m/s} \leftarrow V_2$$

To determine the pressure at location ③, we write the Bernoulli equation between ① and ③.

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_A}{\rho} + \frac{V_A^2}{2} + gz_A$$

Again  $V_1 \approx 0$  and from conservation of mass  $V_A = V_2$ . Hence

$$\begin{aligned} \frac{p_A}{\rho} &= \frac{p_1}{\rho} + gz_1 - \frac{V_2^2}{2} - gz_A = \frac{p_1}{\rho} + g(z_1 - z_A) - \frac{V_2^2}{2} \\ p_A &= p_1 + \rho g(z_1 - z_A) - \rho \frac{V_2^2}{2} \\ &= 1.01 \times 10^5 \frac{\text{N}}{\text{m}^2} + 999 \frac{\text{kg}}{\text{m}^3} \times 9.81 \frac{\text{m}}{\text{s}^2} \times (-1 \text{ m}) \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ &\quad - \frac{1}{2} \times 999 \frac{\text{kg}}{\text{m}^3} \times (11.7)^2 \frac{\text{m}^2}{\text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ p_A &= 22.8 \text{ kPa (abs) or } -78.5 \text{ kPa (gage)} \leftarrow p_A \end{aligned}$$

**Notes:**


- ✓ This problem illustrates an application of the Bernoulli equation that includes elevation changes.
- ✓ Always take care when neglecting friction in any internal flow. In this problem, neglecting friction is reasonable if the pipe is smooth-surfaced and is relatively short. In Chapter 8 we will study frictional effects in internal flows.

### EXAMPLE 6.5 Flow under a Sluice Gate

Water flows under a sluice gate on a horizontal bed at the inlet to a flume. Upstream from the gate, the water depth is 1.5 ft and the speed is negligible. At the vena contracta downstream from the gate, the flow streamlines are straight and the depth is 2 in. Determine the flow speed downstream from the gate and the discharge in cubic feet per second per foot of width.

**EXAMPLE PROBLEM 6.5****GIVEN:** Flow of water under a sluice gate.**FIND:** (a)  $V_2$ .  
(b)  $Q$  in  $\text{ft}^3/\text{s}/\text{ft}$  of width.**SOLUTION:**

Under the assumptions listed below, the flow satisfies all conditions necessary to apply the Bernoulli equation. The question is, what streamline do we use?

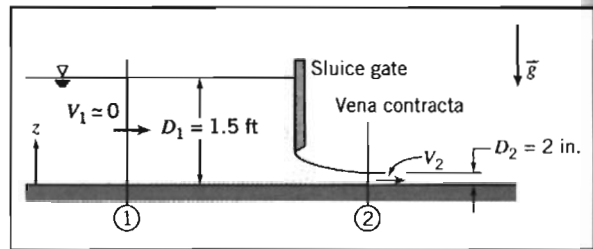

Governing equation: 
$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

- Assumptions:
- (1) Steady flow.
  - (2) Incompressible flow.
  - (3) Frictionless flow.
  - (4) Flow along a streamline.
  - (5) Uniform flow at each section.
  - (6) Hydrostatic pressure distribution.

If we consider the streamline that runs along the bottom of the channel ( $z = 0$ ), because of assumption 6 the pressures at ① and ② are

$$p_1 = p_{\text{atm}} + \rho g D_1 \quad \text{and} \quad p_2 = p_{\text{atm}} + \rho g D_2$$

so that the Bernoulli equation for this streamline is

$$\frac{(p_{\text{atm}} + \rho g D_1)}{\rho} + \frac{V_1^2}{2} = \frac{(p_{\text{atm}} + \rho g D_2)}{\rho} + \frac{V_2^2}{2}$$

or

$$\frac{V_1^2}{2} + g D_1 = \frac{V_2^2}{2} + g D_2 \quad (1)$$

On the other hand, consider the streamline that runs along the free surface on both sides of the gate. For this streamline

$$\frac{p_{\text{atm}}}{\rho} + \frac{V_1^2}{2} + g D_1 = \frac{p_{\text{atm}}}{\rho} + \frac{V_2^2}{2} + g D_2$$

or

$$\frac{V_1^2}{2} + g D_1 = \frac{V_2^2}{2} + g D_2 \quad (1)$$

We have arrived at the same equation (Eq. 1) for the streamline at the bottom and the streamline at the free surface, implying the Bernoulli constant is the same for both streamlines. We will see in Section 6-6 that this flow is one of a family of flows for which this is the case. Solving for  $V_2$  yields

$$V_2 = \sqrt{2g(D_1 - D_2) + V_1^2}$$

But  $V_1^2 \approx 0$ , so

$$V_2 = \sqrt{2g(D_1 - D_2)} = \sqrt{2 \times 32.2 \frac{\text{ft}}{\text{s}^2} \left( 1.5 \text{ ft} - 2 \text{ in.} \times \frac{\text{ft}}{12 \text{ in.}} \right)}$$

$$V_2 = 9.27 \text{ ft/s} \leftarrow \frac{V_2}{\quad}$$

For uniform flow,  $Q = VA = VDw$ , or

$$\frac{Q}{w} = VD = V_2 D_2 = 9.27 \frac{\text{ft}}{\text{s}} \times 2 \text{ in.} \times \frac{\text{ft}}{12 \text{ in.}} = 1.55 \text{ ft}^2/\text{s}$$


$$\frac{Q}{w} = 1.55 \text{ ft}^3/\text{s}/\text{foot of width} \leftarrow \frac{Q}{w}$$

### EXAMPLE 6.6 Bernoulli Equation in Translating Reference Frame

A light plane flies at 150 km/hr in standard air at an altitude of 1000 m. Determine the stagnation pressure at the leading edge of the wing. At a certain point close to the wing, the air speed *relative* to the wing is 60 m/s. Compute the pressure at this point.

#### EXAMPLE PROBLEM 6.6


**GIVEN:** Aircraft in flight at 150 km/hr at 1000 m altitude in standard air.

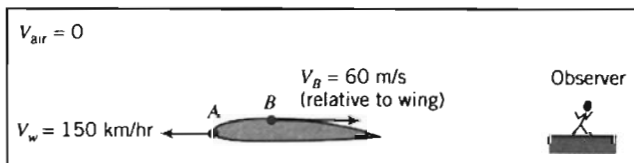

**FIND:** Stagnation pressure,  $p_{0,A}$ , at point A and static pressure,  $p_B$ , at point B.

#### SOLUTION:

Flow is unsteady when observed from a fixed frame, that is, by an observer on the ground. However, an observer *on* the wing sees the following steady flow:

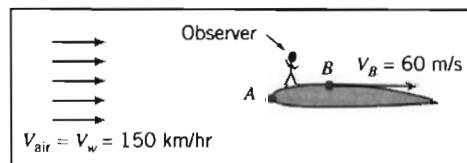

At  $z = 1000 \text{ m}$  in standard air, the temperature is 281 K and the speed of sound is 336 m/s. Hence at point B,  $M_B = V_B/c = 0.178$ . This is less than 0.3, so the flow may be treated as incompressible. Thus the Bernoulli equation can be applied along a streamline in the moving observer's inertial reference frame.

Governing equation: 
$$\frac{p_{\text{air}}}{\rho} + \frac{V_{\text{air}}^2}{2} + gz_{\text{air}} = \frac{p_A}{\rho} + \frac{V_A^2}{2} + gz_A = \frac{p_B}{\rho} + \frac{V_B^2}{2} + gz_B$$

- Assumptions: (1) Steady flow.  
 (2) Incompressible flow ( $V < 100$  m/s).  
 (3) Frictionless flow.  
 (4) Flow along a streamline.  
 (5) Neglect  $\Delta z$ .

Values for pressure and density may be found from Table A.3. Thus, at 1000 m,  $p/p_{SL} = 0.8870$  and  $\rho/\rho_{SL} = 0.9075$ . Consequently,

$$p = 0.8870 p_{SL} = 0.8870 \times \frac{1.01 \times 10^5 \text{ N}}{\text{m}^2} = 8.96 \times 10^4 \text{ N/m}^2$$

and

$$\rho = 0.9075 \rho_{SL} = 0.9075 \times \frac{1.23 \text{ kg}}{\text{m}^3} = 1.12 \text{ kg/m}^3$$

Since the speed is  $V_A = 0$  at the stagnation point,

$$\begin{aligned} p_{0A} &= p_{\text{air}} + \frac{1}{2} \rho V_{\text{air}}^2 \\ &= 8.96 \times 10^4 \frac{\text{N}}{\text{m}^2} + \frac{1}{2} \times 1.12 \frac{\text{kg}}{\text{m}^3} \left( 150 \frac{\text{km}}{\text{hr}} \times \frac{1000 \text{ m}}{\text{km}} \times \frac{\text{hr}}{3600 \text{ s}} \right)^2 \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ p_{0A} &= 90.6 \text{ kPa (abs)} \end{aligned}$$

Solving for the static pressure at  $B$ , we obtain

$$\begin{aligned} p_B &= p_{\text{air}} + \frac{1}{2} \rho (V_{\text{air}}^2 - V_B^2) \\ p_B &= 8.96 \times 10^4 \frac{\text{N}}{\text{m}^2} + \frac{1}{2} \times 1.12 \frac{\text{kg}}{\text{m}^3} \left[ \left( 150 \frac{\text{km}}{\text{hr}} \times \frac{1000 \text{ m}}{\text{km}} \times \frac{\text{hr}}{3600 \text{ s}} \right)^2 - (60)^2 \frac{\text{m}^2}{\text{s}^2} \right] \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ p_B &= 88.6 \text{ kPa (abs)} \end{aligned}$$

### Cautions on Use of the Bernoulli Equation

In Example Problems 6.3 through 6.6, we have seen several situations where the Bernoulli equation may be applied because the restrictions on its use led to a reasonable flow model. However, in some situations you might be tempted to apply the Bernoulli equation where the restrictions are not satisfied. Some subtle cases that violate the restrictions are discussed briefly in this section.

Example Problem 6.3 examined flow in a nozzle. In a *subsonic nozzle* (a converging section) the pressure drops, accelerating a flow. Because the pressure drops and the walls of the nozzle converge, there is no flow separation from the walls and the boundary layer remains thin. In addition, a nozzle is usually relatively short so frictional effects are not significant. All of this leads to the conclusion that the Bernoulli equation is suitable for use for subsonic nozzles.

Sometimes we need to decelerate a flow. This can be accomplished using a *subsonic diffuser* (a diverging section), or by using a sudden expansion (e.g., from a pipe into a reservoir). In these devices the flow decelerates because of an adverse pressure

gradient. As we discussed in Section 2-6, an adverse pressure gradient tends to lead to rapid growth of the boundary layer and its separation.<sup>5</sup> Hence, we should be careful in applying the Bernoulli equation in such devices—at best, it will be an approximation. Because of area blockage caused by boundary-layer growth, pressure rise in actual diffusers always is less than that predicted for inviscid one-dimensional flow.

The Bernoulli equation was a reasonable model for the siphon of Example Problem 6.4 because the entrance was well rounded, the bends were gentle, and the overall length was short. Flow separation, which can occur at inlets with sharp corners and in abrupt bends, causes the flow to depart from that predicted by a one-dimensional model and the Bernoulli equation. Frictional effects would not be negligible if the tube were long.

Example Problem 6.5 presented an open-channel flow analogous to that in a nozzle, for which the Bernoulli equation is a good flow model. The hydraulic jump<sup>6</sup> is an example of an open-channel flow with adverse pressure gradient. Flow through a hydraulic jump is mixed violently, making it impossible to identify streamlines. Thus the Bernoulli equation cannot be used to model flow through a hydraulic jump.

The Bernoulli equation cannot be applied *through* a machine such as a propeller, pump, turbine, or windmill. The equation was derived by integrating along a stream tube (Section 4-4) or a streamline (Section 6-3) in the absence of moving surfaces such as blades or vanes. It is impossible to have locally steady flow or to identify streamlines during flow through a machine. Hence, while the Bernoulli equation may be applied between points *before* a machine, or between points *after* a machine (assuming its restrictions are satisfied), it cannot be applied *through* the machine. (In effect, a machine will change the value of the Bernoulli constant.)

Finally, compressibility must be considered for flow of gases. Density changes caused by dynamic compression due to motion may be neglected for engineering purposes if the local Mach number remains below about  $M \approx 0.3$ , as noted in Example Problems 6.3 and 6.6. Temperature changes can cause significant changes in density of a gas, even for low-speed flow. Thus the Bernoulli equation could not be applied to air flow through a heating element (e.g., of a hand-held hair dryer) where temperature changes are significant.

## 6-4 THE BERNOULLI EQUATION INTERPRETED AS AN ENERGY EQUATION

The Bernoulli equation, Eq. 6.8, was obtained by integrating Euler's equation along a streamline for steady, incompressible, frictionless flow. Thus Eq. 6.8 was derived from the momentum equation for a fluid particle.

An equation identical in form to Eq. 6.8 (although requiring very different restrictions) may be obtained from the first law of thermodynamics. Our objective in this section is to reduce the energy equation to the form of the Bernoulli equation given by Eq. 6.8. Having arrived at this form, we then compare the restrictions on the two equations to help us understand more clearly the restrictions on the use of Eq. 6.8.

Consider steady flow in the absence of shear forces. We choose a control volume bounded by streamlines along its periphery. Such a boundary, shown in Fig. 6.5, often is called a *stream tube*.

<sup>5</sup> See the NCFMF video *Flow Visualization*.

<sup>6</sup> See the NCFMF videos *Waves in Fluids* and *Stratified Flow* for examples of this behavior.

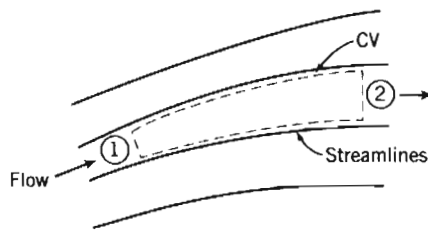


Fig. 6.5 Flow through a stream tube.

Basic equation:

$$\begin{aligned}
 &= 0(1) = 0(2) = 0(3) = 0(4) \\
 \dot{Q} - \cancel{\dot{W}_s} - \cancel{\dot{W}_{\text{shear}}} - \cancel{\dot{W}_{\text{other}}} &= \frac{\partial}{\partial t} \int_{\text{CV}} e \rho \, dV + \int_{\text{CS}} (e + pv) \rho \vec{V} \cdot d\vec{A} \quad (4.56) \\
 e &= u + \frac{V^2}{2} + gz
 \end{aligned}$$

- Restrictions: (1)  $\dot{W}_s = 0$ .  
 (2)  $\dot{W}_{\text{shear}} = 0$ .  
 (3)  $\dot{W}_{\text{other}} = 0$ .  
 (4) Steady flow.  
 (5) Uniform flow and properties at each section.

(Remember that here  $v$  represents the specific volume, and  $u$  represents the specific internal energy, not velocity!) Under these restrictions, Eq. 4.56 becomes

$$\left( u_1 + p_1 v_1 + \frac{V_1^2}{2} + gz_1 \right) (-\rho_1 V_1 A_1) + \left( u_2 + p_2 v_2 + \frac{V_2^2}{2} + gz_2 \right) (\rho_2 V_2 A_2) - \dot{Q} = 0$$

But from continuity under these restrictions,

$$\begin{aligned}
 &= 0(4) \\
 \frac{\partial}{\partial t} \int_{\text{CV}} \rho \, dV + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} &= 0
 \end{aligned}$$

or

$$(-\rho_1 V_1 A_1) + (\rho_2 V_2 A_2) = 0$$

That is,

$$\dot{m} = \rho_1 V_1 A_1 = \rho_2 V_2 A_2$$

Also

$$\dot{Q} = \frac{\delta Q}{dt} = \frac{\delta Q}{dm} \frac{dm}{dt} = \frac{\delta Q}{dm} \dot{m}$$

Thus, from the energy equation,

$$\left[ \left( p_2 v_2 + \frac{V_2^2}{2} + gz_2 \right) - \left( p_1 v_1 + \frac{V_1^2}{2} + gz_1 \right) \right] \dot{m} + \left( u_2 - u_1 - \frac{\delta Q}{dm} \right) \dot{m} = 0$$

or

$$p_1 v_1 + \frac{V_1^2}{2} + gz_1 = p_2 v_2 + \frac{V_2^2}{2} + gz_2 + \left( u_2 - u_1 - \frac{\delta Q}{dm} \right)$$

Under the additional assumption (6) of incompressible flow,  $v_1 = v_2 = 1/\rho$  and hence

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2 + \left( u_2 - u_1 - \frac{\delta Q}{dm} \right) \quad (6.14)$$

Equation 6.14 would reduce to the Bernoulli equation if the term in parentheses were zero. Thus, under the further restriction,

$$(7) \quad (u_2 - u_1 - \delta Q/dm) = 0$$

the energy equation reduces to

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

or

$$\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant} \quad (6.15)$$

Equation 6.15 is identical in form to the Bernoulli equation, Eq. 6.8. The Bernoulli equation was derived from momentum considerations (Newton's second law), and is valid for steady, incompressible, frictionless flow along a streamline. Equation 6.15 was obtained by applying the first law of thermodynamics to a stream tube control volume, subject to restrictions 1 through 7 above. Thus the Bernoulli equation (Eq. 6.8) and the identical form of the energy equation (Eq. 6.15) were developed from entirely different models, coming from entirely different basic concepts, and involving different restrictions.

Note that restriction 7 was necessary to obtain the Bernoulli equation from the first law of thermodynamics. This restriction can be satisfied if  $\delta Q/dm$  is zero (there is no heat transfer to the fluid) and  $u_2 = u_1$  (there is no change in the internal thermal energy of the fluid). The restriction also is satisfied if  $(u_2 - u_1)$  and  $\delta Q/dm$  are nonzero provided that the two terms are equal. That this is true for incompressible frictionless flow is shown in Example Problem 6.7.

### EXAMPLE 6.7 Internal Energy and Heat Transfer in Frictionless Incompressible Flow

Consider frictionless, incompressible flow with heat transfer. Show that

$$u_2 - u_1 = \frac{\delta Q}{dm}$$

#### EXAMPLE PROBLEM 6.7

**GIVEN:** Frictionless, incompressible flow with heat transfer.

**SHOW:**  $u_2 - u_1 = \frac{\delta Q}{dm}$ .



**SOLUTION:**

In general, internal energy can be expressed as  $u = u(T, v)$ . For incompressible flow,  $v = \text{constant}$ , and  $u = u(T)$ . Thus the thermodynamic state of the fluid is determined by the single thermodynamic property,  $T$ . For any process, the internal energy change,  $u_2 - u_1$ , depends only on the temperatures at the end states.

From the Gibbs equation,  $Tds = du + p dv$ , valid for a pure substance undergoing any process, we obtain

$$Tds = du$$

for incompressible flow, since  $dv = 0$ . Since the internal energy change,  $du$ , between specified end states, is independent of the process, we take a reversible process, for which  $Tds = d(\delta Q/dm) = du$ . Therefore,

$$u_2 - u_1 = \frac{\delta Q}{dm} \leftarrow$$

For the special case considered in this section, it is true that the first law of thermodynamics reduces to the Bernoulli equation. Each term in Eq. 6.15 has dimensions of energy per unit mass (we sometimes refer to the three terms in the equation as the “pressure” energy, kinetic energy, and potential energy per unit mass of the fluid). It is not surprising that Eq. 6.15 contains energy terms—after all, we used the first law of thermodynamics in deriving it. How did we end up with the same energy-like terms in the Bernoulli equation, which we derived from the momentum equation? The answer is because we integrated the momentum equation (which involves force terms) along a streamline (which involves distance), and by doing so ended up with work or energy terms (work being defined as force times distance): The work of gravity and pressure forces leads to a kinetic energy change (which came from integrating momentum over distance). In this context, we can think of the Bernoulli equation as a *mechanical energy balance*—the mechanical energy (“pressure” plus potential plus kinetic) will be constant. We must always bear in mind that for the Bernoulli equation to be valid along a streamline requires an incompressible inviscid flow, in addition to steady flow. If we had density changes they would continuously allow conversion of any or all of the mechanical energy forms to internal thermal energy, and vice versa. Friction always converts mechanical energy to thermal energy (appearing either as a gain of internal thermal energy or as heat generation, or both). In the absence of density changes and friction, the mechanisms linking the mechanical and internal thermal energy do not exist, and restriction 7 holds—any internal thermal energy changes will result only from a heat transfer process and be independent of the fluid mechanics, and the thermodynamic and mechanical energies will be uncoupled.

In summary, when the conditions are satisfied for the Bernoulli equation to be valid, we can consider separately the mechanical energy and the internal thermal energy of a fluid particle (this is illustrated in Example Problem 6.8); when they are not satisfied, there will be an interaction between these energies, the Bernoulli equation becomes invalid, and we must use the full first law of thermodynamics.

**EXAMPLE 6.8 Frictionless Flow with Heat Transfer**


Water flows steadily from a large open reservoir through a short length of pipe and a nozzle with cross-sectional area  $A = 0.864 \text{ in.}^2$ . A well-insulated 10 kW heater surrounds the pipe. Find the temperature rise of the water.



**EXAMPLE PROBLEM 6.8**

**GIVEN:** Water flows from a large reservoir through the system shown and discharges to atmospheric pressure. The heater is 10 kW;  $A_4 = 0.864 \text{ in.}^2$

**FIND:** The temperature rise of the water between points ① and ②.

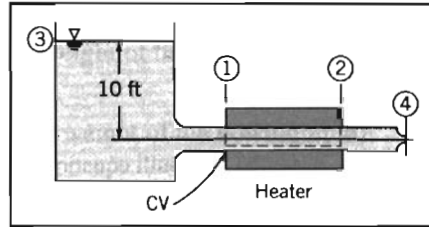

**SOLUTION:**

Governing equations:  $\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant}$

$$\begin{aligned}
 &= 0(1) \\
 &\frac{\partial}{\partial t} \int_{CV} \rho dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \\
 &= 0(4) = 0(4) = 0(1) \\
 &\dot{Q} - \dot{W}_s - \dot{W}_{\text{shear}} = \frac{\partial}{\partial t} \int_{CV} e \rho dV + \int_{CS} \left( u + pv + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A}
 \end{aligned}$$

- Assumptions: (1) Steady flow.  
 (2) Frictionless flow.  
 (3) Incompressible flow.  
 (4) No shaft work, no shear work.  
 (5) Flow along a streamline.

Under the assumptions listed, the first law of thermodynamics for the CV shown becomes

$$\begin{aligned}
 \dot{Q} &= \int_{CS} \left( u + pv + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A} \\
 &= \int_{A_1} \left( u + pv + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A} + \int_{A_2} \left( u + pv + \frac{V^2}{2} + gz \right) \rho \vec{V} \cdot d\vec{A}
 \end{aligned}$$

For uniform properties at ① and ②

$$\dot{Q} = -(\rho V_1 A_1) \left( u_1 + p_1 v + \frac{V_1^2}{2} + gz_1 \right) + (\rho V_2 A_2) \left( u_2 + p_2 v + \frac{V_2^2}{2} + gz_2 \right)$$

From conservation of mass,  $\rho V_1 A_1 = \rho V_2 A_2 = \dot{m}$ , so

$$\dot{Q} = \dot{m} \left[ u_2 - u_1 + \left( \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2 \right) - \left( \frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 \right) \right]$$

For frictionless, incompressible, steady flow, along a streamline,

$$\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant}$$

Therefore,

$$\dot{Q} = \dot{m}(u_2 - u_1)$$

Since, for an incompressible fluid,  $u_2 - u_1 = c(T_2 - T_1)$ , then

$$T_2 - T_1 = \frac{\dot{Q}}{\dot{m}c}$$

From continuity,

$$\dot{m} = \rho V_4 A_4$$

To find  $V_4$ , write the Bernoulli equation between the free surface at (3) and point (4).

$$\frac{p_3}{\rho} + \frac{V_3^2}{2} + gz_3 = \frac{p_4}{\rho} + \frac{V_4^2}{2} + gz_4$$

Since  $p_3 = p_4$  and  $V_3 \approx 0$ , then

$$V_4 = \sqrt{2g(z_3 - z_4)} = \sqrt{2 \times 32.2 \frac{\text{ft}}{\text{s}^2} \times 10 \text{ ft}} = 25.4 \text{ ft/s}$$

and

$$\dot{m} = \rho V_4 A_4 = 1.94 \frac{\text{slug}}{\text{ft}^3} \times 25.4 \frac{\text{ft}}{\text{s}} \times 0.864 \text{ in.}^2 \times \frac{\text{ft}^2}{144 \text{ in.}^2} = 0.296 \text{ slug/s}$$

Assuming no heat loss to the surroundings, we obtain

$$T_2 - T_1 = \frac{\dot{Q}}{\dot{m}c} = 10 \text{ kW} \times \frac{3413 \text{ Btu}}{\text{kW} \cdot \text{hr}} \times \frac{\text{hr}}{3600 \text{ s}} \times \frac{\text{s}}{0.296 \text{ slug}} \times \frac{\text{slug}}{32.2 \text{ lbm}} \times \frac{\text{lbm} \cdot \text{R}}{1 \text{ Btu}}$$

$$T_2 - T_1 = 0.995 \text{ }^\circ\text{R} \leftarrow T_2 - T_1$$

This problem illustrates that:

- ✓ In general, the first law of thermodynamics and the Bernoulli equation are independent equations.
- ✓ For an incompressible, inviscid flow the internal thermal energy is only changed by a heat transfer process, and is independent of the fluid mechanics.

## 6-5 ENERGY GRADE LINE AND HYDRAULIC GRADE LINE

For steady, frictionless, incompressible flow along a streamline, we have shown that the first law of thermodynamics reduces to the Bernoulli equation. From Eq. 6.15 we conclude that there is no loss of mechanical energy in such a flow.

Often it is convenient to represent the mechanical energy level of a flow graphically. The energy equation in the form of Eq. 6.15 suggests such a representation. Dividing Eq. 6.15 by  $g$ , we obtain

$$\frac{p}{\rho g} + \frac{V^2}{2g} + z = H = \text{constant} \quad (6.16)$$

Each term in Eq. 6.16 has dimensions of length, or "head" of flowing fluid. The individual terms are

$\frac{p}{\rho g}$ ,	the head due to local static pressure (“pressure” energy per unit weight of the flowing fluid)
$\frac{v^2}{2g}$ ,	the head due to local dynamic pressure (kinetic energy per unit weight of flowing fluid)
$z$ ,	the elevation head (potential energy per unit weight of the flowing fluid)
$H$ ,	the total head for the flow (total mechanical energy per unit weight of the flowing fluid)

The *energy grade line* (EGL) represents the total head height. As shown by Eq. 6.16, the EGL height remains constant for frictionless flow when no work is done on or by the flowing liquid, although the individual static pressure, dynamic pressure, and elevation heads may vary. We recall from Section 6-3 that a pitot-static tube placed in the flow measures the stagnation pressure (static plus dynamic), and it will obviously be installed at the local height  $z$  of the flow; hence, the height of the liquid in a column attached to the tube will equal the sum of the three heads in Eq. 6.16. This height directly indicates the value of  $H$ , or the EGL.

The *hydraulic grade line* (HGL) height represents the sum of the elevation and static pressure heads,  $z + p/\rho g$ . In a static pressure tap attached to the flow conduit, liquid would rise to the HGL height. For open-channel flow, the HGL is at the liquid free surface.

The difference in heights between the EGL and the HGL represents the dynamic (velocity) head,  $V^2/2g$ . The relationship among the EGL, HGL, and velocity head is illustrated schematically in Fig. 6.6 for frictionless flow from a tank through a pipe with a reducer.

Static taps and total head tubes connected to manometers are shown schematically in Fig. 6.6. The *static taps* give readings corresponding to the *HGL height*. The *total head tubes* give readings corresponding to the *EGL height*.

The total head of the flow shown in Fig. 6.6 is obtained by applying Eq. 6.16 at point ①, the free surface in the large reservoir. There the velocity is negligible and the pressure is atmospheric (zero gage). Thus total head is equal to  $z_1$ . This defines the height of the energy grade line, which remains constant for this flow, since there is no friction or work.

The velocity head increases from zero to  $V_2^2/2g$  as the liquid accelerates into the first section of constant-diameter tube. Hence, since the EGL height is constant the HGL must decrease in height. When the velocity becomes constant, the HGL height stays constant.

The velocity increases again in the reducer between sections ② and ③. As the velocity head increases, the HGL height drops. When the velocity becomes constant between sections ③ and ④, the HGL stays constant at a lower height.

At the free discharge at section ④, the static head is zero (gage). There the HGL height is equal to  $z_4$ . As shown, the velocity head is  $V_4^2/2g$ . The sum of the HGL height and velocity head equals the EGL height. (The static head is negative between sections ③ and ④ because the pipe centerline is above the HGL.)

The effects of friction on a flow will be discussed in detail in Chapter 8. The effect of friction is to convert mechanical energy to internal thermal energy. Thus *friction reduces the total head* of the flowing fluid, causing a gradual reduction in the EGL height.

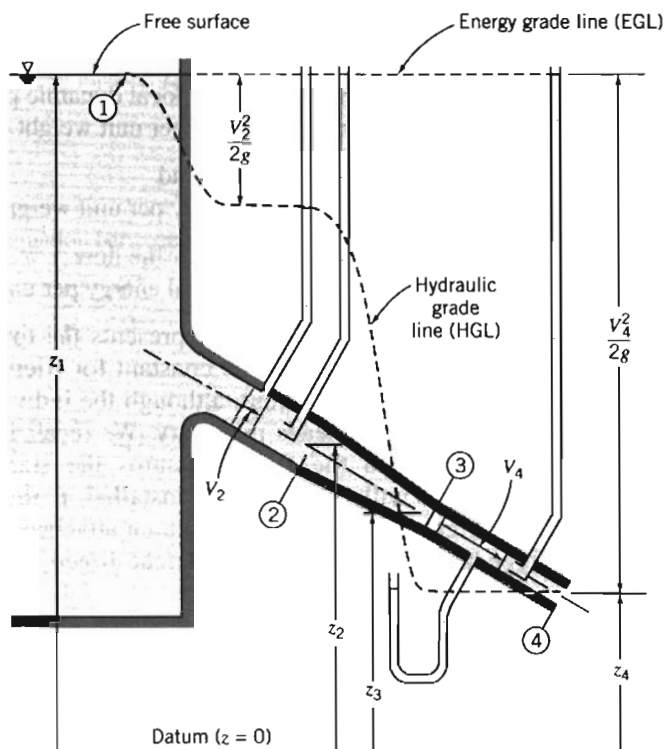


Fig. 6.6 Energy and hydraulic grade lines for frictionless flow.

Work addition to the fluid, for example as delivered by a pump, increases the EGL height. The effect of work interactions with a flow will be discussed in Chapters 8 and 10.

## 6-6 UNSTEADY BERNOULLI EQUATION—INTEGRATION OF EULER'S EQUATION ALONG A STREAMLINE (CD-ROM)

## 6-7 IRROTATIONAL FLOW (CD-ROM)

## 6-8 SUMMARY

In this chapter we have:

- ✓ Derived Euler's equations in vector form and in rectangular, cylindrical, and streamline coordinates.
- ✓ Obtained Bernoulli's equation by integrating Euler's equation along a steady-flow streamline, and discussed its restrictions. We have also seen how for a steady, incompressible flow through a stream tube the first law of thermodynamics reduces to the Bernoulli equation if certain restrictions apply.

- ✓ Defined the static, dynamic, and stagnation (or total) pressures.
- ✓ Defined the energy and hydraulic grade lines.
- ✓ \*Derived an unsteady flow Bernoulli equation, and discussed its restrictions.
- ✓ \*Observed that for an irrotational flow that is steady and incompressible, the Bernoulli equation applies between *any* two points in the flow.
- ✓ \*Defined the velocity potential  $\phi$  and discussed its restrictions.

\*We have also explored in detail two-dimensional, incompressible and irrotational flows, and learned that for these flows: the stream function  $\psi$  and the velocity potential  $\phi$  satisfy Laplace's equation;  $\psi$  and  $\phi$  can be derived from the velocity components, and vice versa, and the iso-lines of the stream function  $\psi$  and the velocity potential  $\phi$  are orthogonal. We explored for such flows how to combine potential flows to generate various flow patterns, and how to determine the pressure distribution and lift and drag on, for example, a cylindrical shape.

---

## REFERENCES

1. Shaw, R., "The Influence of Hole Dimensions on Static Pressure Measurements," *J. Fluid Mech.*, 7, Part 4, April 1960, pp. 550–564.
2. Chue, S. H., "Pressure Probes for Fluid Measurement," *Progress in Aerospace Science*, 16, 2, 1975, pp. 147–223.
3. United Sensor Corporation, 3 Northern Blvd., Amherst, NH 03031.
4. Robertson, J. M., *Hydrodynamics in Theory and Application*. Englewood Cliffs, NJ: Prentice-Hall, 1965.
5. Streeter, V. L., *Fluid Dynamics*. New York: McGraw-Hill, 1948.
6. Vallentine, H. R., *Applied Hydrodynamics*. London: Butterworths, 1959.
7. Lamb, H., *Hydrodynamics*. New York: Dover, 1945.
8. Milne-Thomson, L. M., *Theoretical Hydrodynamics*, 4th ed. New York: Macmillan, 1960.
9. Karamcheti, K., *Principles of Ideal-Fluid Aerodynamics*. New York: Wiley, 1966.
10. Kirchhoff, R. H., *Potential Flows: Computer Graphic Solutions*. New York: Marcel Dekker, 1985.
11. Rouse, H., and S. Ince, *History of Hydraulics*. New York: Dover, 1957.
12. Kuethe, A. M., and C.-Y. Chow, *Foundations of Aerodynamics: Bases of Aerodynamic Design*, 4th ed. New York: Wiley, 1986.
13. *Fluent*. Fluent Incorporated, Centerra Resources Park, 10 Cavendish Court, Lebanon, NH 03766 ([www.fluent.com](http://www.fluent.com)).
14. *STAR-CD*. Adapco, 60 Broadhollow Road, Melville, NY 11747 ([www.cd-adapco.com](http://www.cd-adapco.com)).

---

## PROBLEMS


- 6.1 Consider the flow field with velocity given by  $\vec{V} = Axy\hat{i} - By^2\hat{j}$ ;  $A = 10 \text{ ft}^{-1} \cdot \text{s}^{-1}$ ,  $B = 1 \text{ ft}^{-1} \cdot \text{s}^{-1}$ ; the coordinates are measured in feet. The density is  $2 \text{ slug/ft}^3$ , and gravity acts in the negative  $y$  direction. Calculate the acceleration of a fluid particle and the pressure gradient at point  $(x, y) = (1, 1)$ .

\*These topics apply to sections that may be omitted without loss of continuity in the text material.

- 6.2 An incompressible frictionless flow field is given by  $\vec{V} = (Ax - By)\hat{i} - Ay\hat{j}$ , where  $A = 2 \text{ s}^{-1}$ ,  $B = 1 \text{ s}^{-1}$ , and the coordinates are measured in meters. Find the magnitude and direction of the acceleration of a fluid particle at point  $(x, y) = (1, 1)$ . Find the pressure gradient at the same point, if  $\vec{g} = -g\hat{j}$  and the fluid is water.
- 6.3 A horizontal flow of water is described by the velocity field  $\vec{V} = (Ax + Bt)\hat{i} + (-Ay + Bt)\hat{j}$ , where  $A = 5 \text{ s}^{-1}$ ,  $B = 10 \text{ ft} \cdot \text{s}^{-2}$ ,  $x$  and  $y$  are in feet, and  $t$  is in seconds. Find expressions for the local acceleration, the convective acceleration, and the total acceleration. Evaluate these at point  $(2, 2)$  at  $t = 5$  seconds. Evaluate  $\nabla p$  at the same point and time.
- 6.4 Consider the flow field with velocity given by  $\vec{V} = (Axy - Bx^2)\hat{i} + (Axy - By^2)\hat{j}$ , where  $A = 2 \text{ ft}^{-1} \cdot \text{s}^{-1}$ ,  $B = 1 \text{ ft}^{-1} \cdot \text{s}^{-1}$ , and the coordinates are measured in feet. The density is  $2 \text{ slug/ft}^3$  and gravity acts in the negative  $y$  direction. Determine the acceleration of a fluid particle and the pressure gradient at point  $(x, y) = (1, 1)$ .
- 6.5 A velocity field in a fluid with density of  $1500 \text{ kg/m}^3$  is given by  $\vec{V} = (Ax - By)t\hat{i} - (Ay + Bx)t\hat{j}$ , where  $A = 1 \text{ s}^{-2}$ ,  $B = 2 \text{ s}^{-2}$ ,  $x$  and  $y$  are in meters, and  $t$  is in seconds. Body forces are negligible. Evaluate  $\nabla p$  at point  $(x, y) = (1, 2)$  at  $t = 1 \text{ s}$ .
- 6.6 Consider the flow field with velocity given by  $\vec{V} = Ax \sin(2\pi\omega t)\hat{i} - Ay \sin(2\pi\omega t)\hat{j}$ , where  $A = 2 \text{ s}^{-1}$  and  $\omega = 1 \text{ s}^{-1}$ . The fluid density is  $2 \text{ kg/m}^3$ . Find expressions for the local acceleration, the convective acceleration, and the total acceleration. Evaluate these at point  $(1, 1)$  at  $t = 0, 0.5$  and  $1$  seconds. Evaluate  $\nabla p$  at the same point and times.
- 6.7 The velocity field for a plane source located distance  $h = 1 \text{ m}$  above an infinite wall aligned along the  $x$  axis is given by

$$\vec{V} = \frac{q}{2\pi[x^2 + (y-h)^2]}[x\hat{i} + (y-h)\hat{j}] + \frac{q}{2\pi[x^2 + (y+h)^2]}[x\hat{i} + (y+h)\hat{j}]$$

where  $q = 2 \text{ m}^3/\text{s}/\text{m}$ . The fluid density is  $1000 \text{ kg/m}^3$  and body forces are negligible. Derive expressions for the velocity and acceleration of a fluid particle that moves along the wall, and plot from  $x = 0$  to  $x = +10h$ . Verify that the velocity and acceleration normal to the wall are zero. Plot the pressure gradient  $\partial p/\partial x$  along the wall. Is the pressure gradient along the wall adverse (does it oppose fluid motion) or not?

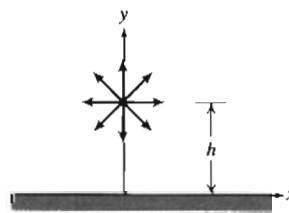

P6.7


- 6.8 The  $y$  component of velocity in an incompressible flow field is given by  $v = Ay$ , where  $A = 2 \text{ s}^{-1}$  and the coordinates are measured in meters. The pressure at point  $(x, y) = (0, 0)$  is  $p_0 = 190 \text{ kPa}$  (gage). The density is  $\rho = 1.50 \text{ kg/m}^3$  and the  $z$  axis is vertical. Evaluate the simplest possible  $x$  component of velocity. Calculate the fluid acceleration and determine the pressure gradient at point  $(x, y) = (2, 1)$ . Find the pressure distribution along the positive  $x$  axis.
- 6.9 The velocity distribution in a two-dimensional steady flow field in the  $xy$  plane is  $\vec{V} = (Ax - B)\hat{i} + (C - Ay)\hat{j}$ , where  $A = 2 \text{ s}^{-1}$ ,  $B = 5 \text{ m} \cdot \text{s}^{-1}$ , and  $C = 3 \text{ m} \cdot \text{s}^{-1}$ ; the coordinates are measured in meters, and the body force distribution is  $\vec{g} = -g\hat{k}$ . Does the velocity field represent the flow of an incompressible fluid? Find the

stagnation point of the flow field. Obtain an expression for the pressure gradient in the flow field. Evaluate the difference in pressure between point  $(x, y) = (1, 3)$  and the origin, if the density is  $1.2 \text{ kg/m}^3$ .

- 6.10 In a frictionless, incompressible flow, the velocity field in m/s and the body force are given by  $\vec{V} = Ax\hat{i} - Ay\hat{j}$  and  $\vec{g} = -g\hat{k}$ ; the coordinates are measured in meters. The pressure is  $p_0$  at point  $(x, y, z) = (0, 0, 0)$ . Obtain an expression for the pressure field,  $p(x, y, z)$ .
- 6.11 An incompressible liquid with density of  $900 \text{ kg/m}^3$  and negligible viscosity flows steadily through a horizontal pipe of constant diameter. In a porous section of length  $L = 0.3 \text{ m}$ , liquid is removed at a constant rate per unit length so that the uniform axial velocity in the pipe is  $u(x) = U(1 - x/2L)$ , where  $U = 5 \text{ m/s}$ . Develop expressions for the acceleration of a fluid particle along the centerline of the porous section and for the pressure gradient along the centerline. Evaluate the outlet pressure if the pressure at the inlet to the porous section is  $35 \text{ kPa}$  (gage).
- 6.12 For the flow of Problem 4.103 show that the uniform radial velocity is  $V_r = Q/2\pi rh$ . Obtain expressions for the  $r$  component of acceleration of a fluid particle in the gap and for the pressure variation as a function of radial distance from the central holes.
- 6.13 The velocity field for a plane vortex sink is given by  $\vec{V} = -\frac{q}{2\pi r}\hat{e}_r + \frac{K}{2\pi r}\hat{e}_\theta$ , where  $q = 2 \text{ m}^3/\text{s/m}$  and  $K = 1 \text{ m}^3/\text{s/m}$ . The fluid density is  $1000 \text{ kg/m}^3$ . Find the acceleration at  $(1, 0)$ ,  $(1, \pi/2)$  and  $(2, 0)$ . Evaluate  $\nabla p$  under the same conditions.
- 6.14 An incompressible, inviscid fluid flows into a horizontal round tube through its porous wall. The tube is closed at the left end and the flow discharges from the tube to the atmosphere at the right end. For simplicity, consider the  $x$  component of velocity in the tube uniform across any cross-section. The density of the fluid is  $\rho$ , the tube diameter and length are  $D$  and  $L$  respectively, and the uniform inflow velocity is  $v_0$ . The flow is steady. Obtain an algebraic expression for the  $x$  component of acceleration of a fluid particle located at position  $x$ , in terms of  $v_0$ ,  $x$ , and  $D$ . Find an expression for the pressure gradient,  $\partial p/\partial x$ , at position  $x$ . Integrate to obtain an expression for the gage pressure at  $x = 0$ .
- 6.15 A diffuser for an incompressible, inviscid fluid of density  $\rho = 1000 \text{ kg/m}^3$  consists of a diverging section of pipe. At the inlet the diameter is  $D_i = 0.25 \text{ m}$ , and at the outlet the diameter is  $D_o = 0.75 \text{ m}$ . The diffuser length is  $L = 1 \text{ m}$ , and the diameter increases linearly with distance  $x$  along the diffuser. Derive and plot the acceleration of a fluid particle, assuming uniform flow at each section, if the speed at the inlet is  $V_i = 5 \text{ m/s}$ . Plot the pressure gradient through the diffuser, and find its maximum value. If the pressure gradient must be no greater than  $25 \text{ kPa/m}$ , how long would the diffuser have to be?
- 6.16 A nozzle for an incompressible, inviscid fluid of density  $\rho = 1000 \text{ kg/m}^3$  consists of a converging section of pipe. At the inlet the diameter is  $D_i = 100 \text{ mm}$ , and at the outlet the diameter is  $D_o = 20 \text{ mm}$ . The nozzle length is  $L = 500 \text{ mm}$ , and the diameter decreases linearly with distance  $x$  along the nozzle. Derive and plot the acceleration of a fluid particle, assuming uniform flow at each section, if the speed at the inlet is  $V_i = 1 \text{ m/s}$ . Plot the pressure gradient through the nozzle, and find its maximum absolute value. If the pressure gradient must be no greater than  $5 \text{ MPa/m}$  in absolute value, how long would the nozzle have to be?
- 6.17 Consider the flow of Problem 5.46. Evaluate the magnitude and direction of the net pressure force that acts on the upper plate between  $r_i$  and  $R$ , if  $r_i = R/2$ .
- 6.18 Consider again the flow field of Problem 5.59. Assume the flow is incompressible with  $\rho = 1.23 \text{ kg/m}^3$  and friction is negligible. Further assume the vertical air flow


velocity is  $v_0 = 15$  mm/s, the half-width of the cavity is  $L = 22$  mm, and its height is  $h = 1.2$  mm. Calculate the pressure gradient at  $(x, y) = (L, h)$ . Obtain an equation for the flow streamlines in the cavity.

- 6.19 A rectangular microcircuit "chip" floats on a thin layer of air,  $h = 0.5$  mm thick, above a porous surface. The chip width is  $b = 20$  mm, as shown. Its length,  $L$ , is very long in the direction perpendicular to the diagram. There is no flow in the  $z$  direction. Assume flow in the  $x$  direction in the gap under the chip is uniform. Flow is incompressible and frictional effects may be neglected. Use a suitably chosen control volume to show that  $U(x) = qx/h$  in the gap. Find a general expression for the acceleration of a fluid particle in the gap. Evaluate the maximum acceleration. Obtain an expression for the pressure gradient  $\partial p/\partial x$  and sketch the pressure distribution under the chip. Show  $p_{\text{atm}}$  on your sketch. Is the net pressure force on the chip directed upward or downward? Explain. For the conditions shown, with  $q = 0.06$  m<sup>3</sup>/s/m, estimate the mass per unit length of the chip.

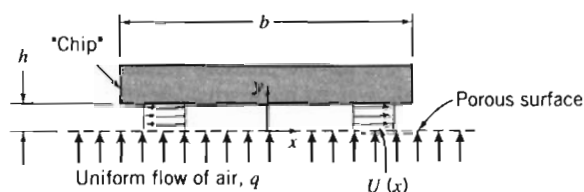

P6.19


- 6.20 A liquid layer separates two plane surfaces as shown. The lower surface is stationary; the upper surface moves downward at constant speed  $V$ . The moving surface has width  $w$ , perpendicular to the plane of the diagram, and  $w \gg L$ . The incompressible liquid layer, of density  $\rho$ , is squeezed from between the surfaces. Assume the flow is uniform at any cross-section and neglect viscosity as a first approximation. Use a suitably chosen control volume to show that  $u = Vx/b$  within the gap, where  $b = b_0 - Vt$ . Obtain an algebraic expression for the acceleration of a fluid particle located at  $x$ . Determine the pressure gradient,  $\partial p/\partial x$ , in the liquid layer. Find the pressure distribution,  $p(x)$ . Obtain an expression for the net pressure force that acts on the upper (moving) flat surface.

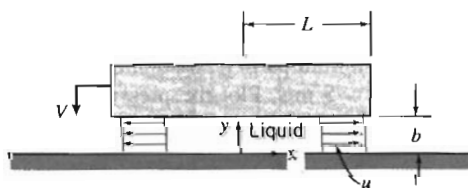


P6.20

- 6.21 Heavy weights can be moved with relative ease on air cushions by using a load pallet as shown. Air is supplied from the plenum through porous surface  $AB$ . It enters the gap vertically at uniform speed,  $q$ . Once in the gap, all air flows in the positive  $x$  direction (there is no flow across the plane at  $x = 0$ ). Assume air flow in the gap is incompressible and uniform at each cross section, with speed  $u(x)$ , as shown in the enlarged view. Although the gap is narrow ( $h \ll L$ ), neglect frictional effects as a first approximation. Use a suitably chosen control volume to show that  $u(x) = qx/h$  in the gap. Calculate the acceleration of a fluid particle in the gap. Evaluate the pressure gradient,  $\partial p/\partial x$ , and sketch the pressure distribution within the gap. Be sure to indicate the pressure at  $x = L$ .





P6.21

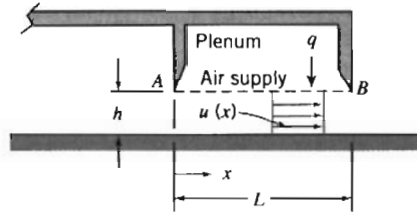


- 6.22 Air at 20 psia and 100°F flows around a smooth corner at the inlet to a diffuser. The air speed is 150 ft/s, and the radius of curvature of the streamlines is 3 in. Determine the magnitude of the centripetal acceleration experienced by a fluid particle rounding the corner. Express your answer in gs. Evaluate the pressure gradient,  $\partial p/\partial r$ .
- 6.23 Steady, frictionless, and incompressible flow from right to left over a stationary circular cylinder of radius  $a$  is given by the velocity field


$$\vec{V} = U \left[ \left( \frac{a}{r} \right)^2 - 1 \right] \cos \theta \hat{e}_r + U \left[ \left( \frac{a}{r} \right)^2 + 1 \right] \sin \theta \hat{e}_\theta$$

Consider flow along the streamline forming the cylinder surface,  $r = a$ . Express the components of the pressure gradient in terms of angle  $\theta$ . Plot speed  $V$  as a function of  $r$  along the radial line  $\theta = \pi/2$  for  $r > a$ .

- 6.24 To model the velocity distribution in the curved inlet section of a wind tunnel, the radius of curvature of the streamlines is expressed as  $R = LR_0/2y$ . As a first approximation, assume the air speed along each streamline is  $V = 20$  m/s. Evaluate the pressure change from  $y = 0$  to the tunnel wall at  $y = L/2$ , if  $L = 150$  mm and  $R_0 = 0.6$  m.

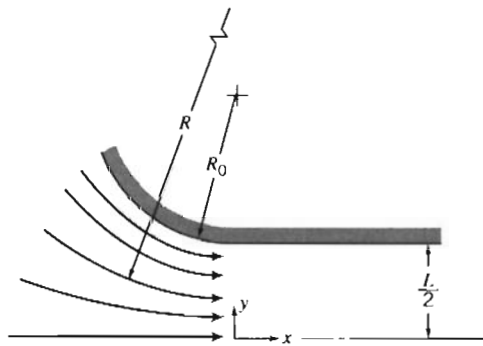


P6.24

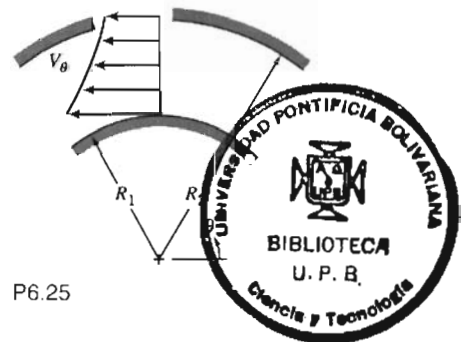

P6.25

- 6.25 The radial variation of velocity at the midsection of the 180° bend shown is given by  $rV_\theta = \text{constant}$ . The cross section of the bend is square. Assume that the velocity is not a function of  $z$ . Derive an equation for the pressure difference between the outside and the inside of the bend. Express your answer in terms of the mass flow rate, the fluid density, the geometric parameters  $R_1$  and  $R_2$ , and the depth of the bend,  $h = R_2 - R_1$ .

- 6.26 The velocity field in a two-dimensional, steady, inviscid flow field in the horizontal  $xy$  plane is given by  $\vec{V} = (Ax + B)\hat{i} - Ay\hat{j}$ , where  $A = 1 \text{ s}^{-1}$  and  $B = 2 \text{ m/s}$ ;  $x$  and  $y$  are measured in meters. Show that streamlines for this flow are given by  $(x + B/A)y = \text{constant}$ . Plot streamlines passing through points  $(x, y) = (1, 1)$ ,  $(1, 2)$ , and  $(2, 2)$ . At point  $(x, y) = (1, 2)$ , evaluate and plot the acceleration vector and the velocity vector.

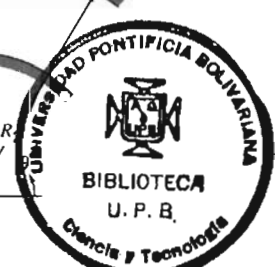


Find the component of acceleration along the streamline at the same point; express it as a vector. Evaluate the pressure gradient along the streamline at the same point if the fluid is air. What statement, if any, can you make about the relative value of the pressure at points (1, 1) and (2, 2)?

- 6.27 A velocity field is given by  $\vec{V} = Ax y \hat{i} + B y^2 \hat{j}$ ;  $A = 0.2 \text{ m}^{-1} \cdot \text{s}^{-1}$ ,  $B$  is a constant, and the coordinates are measured in meters. Determine the value and units for  $B$  if this velocity field is to represent an incompressible flow. Calculate the acceleration of a fluid particle at point  $(x, y) = (2, 1)$ . Evaluate the component of particle acceleration normal to the velocity vector at this point.
- 6.28 The  $x$  component of velocity in a two-dimensional, incompressible flow field is given by  $u = Ax^2$ ; the coordinates are measured in feet and  $A = 1 \text{ ft}^{-1} \cdot \text{s}^{-1}$ . There is no velocity component or variation in the  $z$  direction. Calculate the acceleration of a fluid particle at point  $(x, y) = (1, 2)$ . Estimate the radius of curvature of the streamline passing through this point. Plot the streamline and show both the velocity vector and the acceleration vector on the plot.
- 6.29 The  $x$  component of velocity in a two-dimensional, incompressible flow field is given by  $u = Axy$ ; the coordinates are measured in meters and  $A = 2 \text{ m}^{-1} \cdot \text{s}^{-1}$ . There is no velocity component or variation in the  $z$  direction. Calculate the acceleration of a fluid particle at point  $(x, y) = (2, 1)$ . Estimate the radius of curvature of the streamline passing through this point. Plot the streamline and show both the velocity vector and the acceleration vector on the plot.
- 6.30 The  $y$  component of velocity in a two-dimensional incompressible flow field is given by  $v = -Axy$ , where  $v$  is in m/s, the coordinates are measured in meters, and  $A = 1 \text{ m}^{-1} \cdot \text{s}^{-1}$ . There is no velocity component or variation in the  $z$  direction. Calculate the acceleration of a fluid particle at point  $(x, y) = (1, 2)$ . Estimate the radius of curvature of the streamline passing through this point. Plot the streamline and show both the velocity vector and the acceleration vector on the plot.
- 6.31 The  $x$  component of velocity in a two-dimensional incompressible flow field is given by  $u = -\frac{\Lambda(x^2 - y^2)}{(x^2 + y^2)^2}$ , where  $u$  is in m/s, the coordinates are measured in meters, and  $\Lambda = 2 \text{ m}^3 \cdot \text{s}^{-1}$ . Show that the simplest form of the  $y$  component of velocity is given by  $v = -\frac{2\Lambda xy}{(x^2 + y^2)^2}$ . There is no velocity component or variation in the  $z$  direction. Calculate the acceleration of fluid particles at points  $(x, y) = (0, 1)$ ,  $(0, 2)$  and  $(0, 3)$ . Estimate the radius of curvature of the streamlines passing through these points. What does the relation among the three points and their radii of curvature suggest to you about the flow field? Verify this by plotting these streamlines. [Hint: You will need to use an integrating factor.]
- 6.32 Consider the velocity field  $\vec{V} = Ax^2 \hat{i} - Bxy \hat{j}$ ;  $A = 2 \text{ m}^{-1} \cdot \text{s}^{-1}$ ,  $B = 4 \text{ m}^{-1} \cdot \text{s}^{-1}$ , and the coordinates are measured in meters. Show that this is a possible incompressible flow. Obtain the equation of the streamline through point  $(x, y) = (1, 2)$ . Derive an algebraic expression for the acceleration of a fluid particle. Estimate the radius of curvature of the streamline at  $(x, y) = (1, 2)$ .
- 6.33 Water flows at a speed of 3 m/s. Calculate the dynamic pressure of this flow. Express your answer in millimeters of mercury.
- 6.34 Calculate the dynamic pressure that corresponds to a speed of 100 km/hr in standard air. Express your answer in millimeters of water.
- 6.35 You present your open hand out of the window of an automobile perpendicular to the airflow. Assuming for simplicity that the air pressure on the entire front surface is stagnation pressure (with respect to automobile coordinates), with atmospheric pressure

on the rear surface, estimate the net force on your hand when driving at (a) 30 mph and (b) 60 mph. Do these results roughly correspond with your experience? Do the simplifications tend to make the calculated force an over- or underestimate?

- 6.36 A jet of air from a nozzle is blown at right angles against a wall in which a pressure tap is located. A manometer connected to the tap shows a head of 0.14 in. of mercury above atmospheric. Determine the approximate speed of the air leaving the nozzle if it is at 40°F and 14.7 psia.
- 6.37 A pitot-static tube is used to measure the speed of air at standard conditions at a point in a flow. To ensure that the flow may be assumed incompressible for calculations of engineering accuracy, the speed is to be maintained at 100 m/s or less. Determine the manometer deflection, in millimeters of water, that corresponds to the maximum desirable speed.
- 6.38 Maintenance work on high-pressure hydraulic systems requires special precautions. A small leak can result in a high-speed jet of hydraulic fluid that can penetrate the skin and cause serious injury (therefore troubleshooters are cautioned to use a piece of paper or cardboard, *not a finger*, to search for leaks). Calculate and plot the jet speed of a leak versus system pressure, for pressures up to 40 MPa (gage). Explain how a high-speed jet of hydraulic fluid can cause injury.
- 6.39 The inlet contraction and test section of a laboratory wind tunnel are shown. The air speed in the test section is  $U = 22.5$  m/s. A total-head tube pointed upstream indicates that the stagnation pressure on the test section centerline is 6.0 mm of water below atmospheric. The corrected barometric pressure and temperature in the laboratory are 99.1 kPa (abs) and 23°C. Evaluate the dynamic pressure on the centerline of the wind tunnel test section. Compute the static pressure at the same point. Qualitatively compare the static pressure at the tunnel wall with that at the centerline. Explain why the two may not be identical.

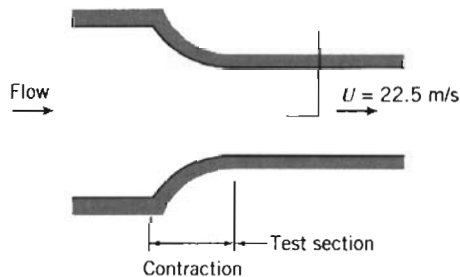


P6.39



- 6.40 An open-circuit wind tunnel draws in air from the atmosphere through a well-contoured nozzle. In the test section, where the flow is straight and nearly uniform, a static pressure tap is drilled into the tunnel wall. A manometer connected to the tap shows that static pressure within the tunnel is 45 mm of water below atmospheric. Assume that the air is incompressible, and at 25°C, 100 kPa (abs). Calculate the air speed in the wind-tunnel test section.
- 6.41 The wheeled cart shown in Problem 4.108 rolls with negligible resistance. The cart is to accelerate to the right. The jet speed is  $V = 40$  m/s. The jet area remains constant at  $A = 25$  mm<sup>2</sup>. Neglect viscous forces between the water and vane. When the cart attains speed  $U = 15$  m/s, calculate the stagnation pressure of the water leaving the nozzle with respect to a fixed observer, the stagnation pressure of the water jet leaving the nozzle with respect to an observer on the vane, the absolute velocity of the jet leaving the vane with respect to a fixed observer, and the stagnation pressure of the jet leaving the vane with respect to a fixed observer. How would viscous forces affect

the latter stagnation pressure, i.e., would viscous forces increase, decrease, or leave unchanged this stagnation pressure? Justify your answer.

- 6.42 Water flows steadily up the vertical 0.1 m diameter pipe and out the nozzle, which is 0.05 m in diameter, discharging to atmospheric pressure. The stream velocity at the nozzle exit must be 20 m/s. Calculate the minimum gage pressure required at section ①. If the device were inverted, what would be the required minimum pressure at section ① to maintain the nozzle exit velocity at 20 m/s?

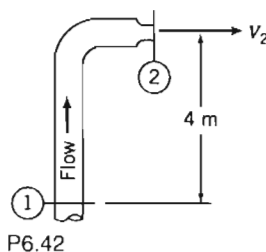

- 6.43 Water flows in a circular duct. At one section the diameter is 0.3 m, the static pressure is 260 kPa (gage), the velocity is 3 m/s, and the elevation is 10 m above ground level. At a section downstream at ground level, the duct diameter is 0.15 m. Find the gage pressure at the downstream section if frictional effects may be neglected.
- 6.44 The water flow rate through the siphon is  $0.02 \text{ m}^3/\text{s}$ , its temperature is  $20^\circ\text{C}$ , and the pipe diameter is 50 mm. Compute the maximum allowable height,  $h$ , so that the pressure at point A is above the vapor pressure of the water.

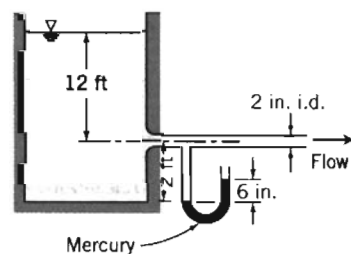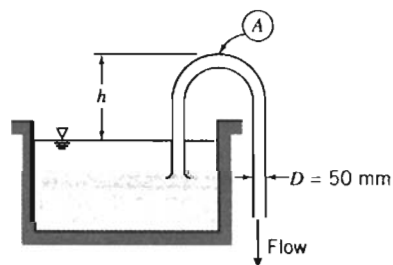

- 6.45 Water flows from a very large tank through a 2 in. diameter tube. The dark liquid in the manometer is mercury. Estimate the velocity in the pipe and the rate of discharge from the tank.
- 6.46 A stream of liquid moving at low speed leaves a nozzle pointed directly downward. The velocity may be considered uniform across the nozzle exit and the effects of friction may be ignored. At the nozzle exit, located at elevation  $z_0$ , the jet velocity and area are  $V_0$  and  $A_0$ , respectively. Determine the variation of jet area with elevation.
- 6.47 In a laboratory experiment, water flows radially outward at moderate speed through the space between circular plane parallel disks. The perimeter of the disks is open to the atmosphere. The disks have diameter  $D = 150 \text{ mm}$  and the spacing between the disks is  $h = 0.8 \text{ mm}$ . The measured mass flow rate of water is  $\dot{m} = 305 \text{ g/s}$ . Assuming frictionless flow in the space between the disks, estimate the theoretical static pressure between the disks at radius  $r = 50 \text{ mm}$ . In the laboratory situation, where

some friction is present, would the pressure measured at the same location be above or below the theoretical value? Why?


- 6.48 Consider steady, frictionless, incompressible flow of air over the wing of an airplane. The air approaching the wing is at 10 psia, 40°F, and has a speed of 200 ft/s relative to the wing. At a certain point in the flow, the pressure is  $-0.40$  psi (gage). Calculate the speed of the air relative to the wing at this point.
- 6.49 A fire nozzle is coupled to the end of a hose with inside diameter  $D = 75$  mm. The nozzle is contoured smoothly and has outlet diameter  $d = 25$  mm. The design inlet pressure for the nozzle is  $p_1 = 689$  kPa (gage). Evaluate the maximum flow rate the nozzle could deliver.
- 6.50 A mercury barometer is carried in a car on a day when there is no wind. The temperature is 20°C and the corrected barometer height is 761 mm of mercury. One window is open slightly as the car travels at 105 km/hr. The barometer reading in the moving car is 5 mm lower than when the car is stationary. Explain what is happening. Calculate the local speed of the air flowing past the window, *relative to* the automobile.
- 6.51 An Indianapolis racing car travels at 98.3 m/s along a straightaway. The team engineer wishes to locate an air inlet on the body of the car to obtain cooling air for the driver's suit. The plan is to place the inlet at a location where the air speed is 25.5 m/s along the surface of the car. Calculate the static pressure at the proposed inlet location. Express the pressure rise above ambient as a fraction of the freestream dynamic pressure.
- 6.52 Steady, frictionless, and incompressible flow from left to right over a stationary circular cylinder, of radius  $a$ , is represented by the velocity field

$$\vec{V} = U \left[ 1 - \left( \frac{a}{r} \right)^2 \right] \cos \theta \hat{e}_r - U \left[ 1 + \left( \frac{a}{r} \right)^2 \right] \sin \theta \hat{e}_\theta$$

Obtain an expression for the pressure distribution along the streamline forming the cylinder surface,  $r = a$ . Determine the locations where the static pressure on the cylinder is equal to the freestream static pressure.


- 6.53 The velocity field for a plane source at a distance  $h$  above an infinite wall aligned along the  $x$  axis was given in Problem 6.7. Using the data from that problem, plot the pressure distribution along the wall from  $x = -10h$  to  $x = +10h$  (assume the pressure at infinity is atmospheric). Find the net force on the wall if the pressure on the lower surface is atmospheric. Does the force tend to pull the wall towards the source, or push it away?
- 6.54 The velocity field for a plane doublet is given in Table 6.1 (page S-27 on the CD). If  $\Lambda = 3 \text{ m}^3 \cdot \text{s}^{-1}$ , the fluid density is  $\rho = 1.5 \text{ kg/m}^3$ , and the pressure at infinity is 100 kPa, plot the pressure along the  $x$  axis from  $x = -2.0$  m to  $-0.5$  m and  $x = 0.5$  m to 2.0 m.
- 6.55 A fire nozzle is coupled to the end of a hose with inside diameter  $D = 3.0$  in. The nozzle is smoothly contoured and its outlet diameter is  $d = 1.0$  in. The nozzle is designed to operate at an inlet water pressure of 100 psig. Determine the design flow rate of the nozzle. (Express your answer in gpm.) Evaluate the axial force required to hold the nozzle in place. Indicate whether the hose coupling is in tension or compression.
- 6.56 A smoothly contoured nozzle, with outlet diameter  $d = 20$  mm, is coupled to a straight pipe by means of flanges. Water flows in the pipe, of diameter  $D = 50$  mm, and the nozzle discharges to the atmosphere. For steady flow and neglecting the effects of viscosity, find the volume flow rate in the pipe corresponding to a calculated axial force of 45.5 N needed to keep the nozzle attached to the pipe.

- 6.57 Water flows steadily through a 3.25 in. diameter pipe and discharges through a 1.25 in. diameter nozzle to atmospheric pressure. The flow rate is 24.5 gpm. Calculate the minimum static pressure required in the pipe to produce this flow rate. Evaluate the axial force of the nozzle assembly on the pipe flange.
- 6.58 Water flows steadily through the reducing elbow shown. The elbow is smooth and short, and the flow accelerates, so the effect of friction is small. The volume flow rate is  $Q = 1.27 \text{ L/s}$ . The elbow is in a horizontal plane. Estimate the gage pressure at section ①. Calculate the  $x$  component of the force exerted by the reducing elbow on the supply pipe.

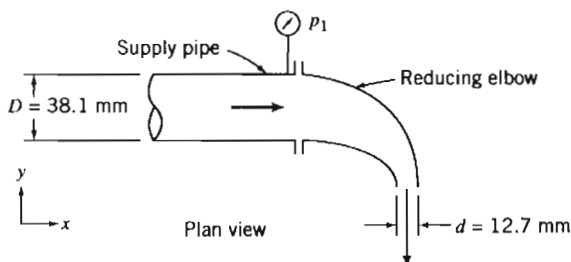


P6.58

- 6.59 A water jet is directed upward from a well-designed nozzle of area  $A_1 = 600 \text{ mm}^2$ ; the exit jet speed is  $V_1 = 6.3 \text{ m/s}$ . The flow is steady and the liquid stream does not break up. Point ② is located  $H = 1.55 \text{ m}$  above the nozzle exit plane. Determine the velocity in the undisturbed jet at point ②. Calculate the pressure that would be sensed by a stagnation tube located there. Evaluate the force that would be exerted on a flat plate placed normal to the stream at point ②. Sketch the pressure distribution on the plate.
- 6.60 An object, with a flat horizontal lower surface, moves downward into the jet of the spray system of Problem 4.63 with speed  $U = 5 \text{ ft/s}$ . Determine the minimum supply pressure needed to produce the jet leaving the spray system at  $V = 15 \text{ ft/s}$ . Calculate the maximum pressure exerted by the liquid jet on the flat object at the instant when the object is  $h = 1.5 \text{ ft}$  above the jet exit. Estimate the force of the water jet on the flat object.
- 6.61 Water flows out of a kitchen faucet of 0.5 in. diameter at the rate of 2 gpm. The bottom of the sink is 18 in. below the faucet outlet. Will the cross-sectional area of the fluid stream increase, decrease, or remain constant between the faucet outlet and the bottom of the sink? Explain briefly. Obtain an expression for the stream cross section as a function of distance  $y$  above the sink bottom. If a plate is held directly under the faucet, how will the force required to hold the plate in a horizontal position vary with height above the sink? Explain briefly.
- 6.62 An old magic trick uses an empty thread spool and a playing card. The playing card is placed against the bottom of the spool. Contrary to intuition, when one blows downward through the central hole in the spool, the card is not blown away. Instead it is "sucked" up against the spool. Explain.
- 6.63 The tank, of diameter  $D$ , has a well-rounded nozzle with diameter  $d$ . At  $t = 0$ , the water level is at height  $h_0$ . Develop an expression for dimensionless water height,  $h/h_0$ , at any later time. For  $D/d = 10$ , plot  $h/h_0$  as a function of time with  $h_0$  as a parameter for  $0.1 \leq h_0 \leq 1 \text{ m}$ . For  $h_0 = 1 \text{ m}$ , plot  $h/h_0$  as a function of time with  $D/d$  as a parameter for  $2 \leq D/d \leq 10$ .

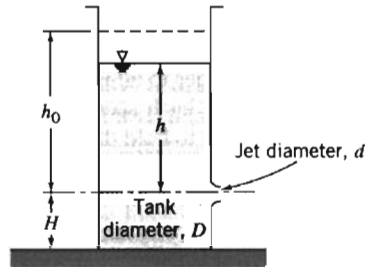

P6.63

- 6.64 The water level in a large tank is maintained at height  $H$  above the surrounding level terrain. A rounded nozzle placed in the side of the tank discharges a horizontal jet. Neglecting friction, determine the height  $h$  at which the orifice should be placed so the water strikes the ground at the maximum horizontal distance  $X$  from the tank. Plot jet speed  $V$  and distance  $X$  as functions of  $h$  ( $0 < h < H$ ).
- 6.65 A horizontal axisymmetric jet of air with 10 mm diameter strikes a stationary vertical disk of 200 mm diameter. The jet speed is 75 m/s at the nozzle exit. A manometer is connected to the center of the disk. Calculate (a) the deflection, if the manometer liquid has  $SG = 1.75$ , (b) the force exerted by the jet on the disk, and (c) the force exerted on the disk if it is assumed that the stagnation pressure acts on the entire forward surface of the disk. Sketch the streamline pattern and the distribution of pressure on the face of the disk.
- 6.66 The flow over a Quonset hut may be approximated by the velocity distribution of Problem 6.52 with  $0 \leq \theta \leq \pi$ . During a storm the wind speed reaches 100 km/hr; the outside temperature is  $5^\circ\text{C}$ . A barometer inside the hut reads 720 mm of mercury; pressure  $p_\infty$  is also 720 mm Hg. The hut has a diameter of 6 m and a length of 18 m. Determine the net force tending to lift the hut off its foundation.

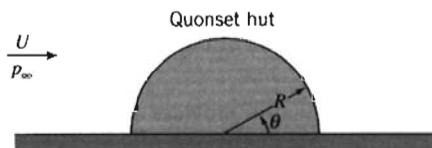


P6.66

- 6.67 Many recreation facilities use inflatable “bubble” structures. A tennis bubble to enclose four courts is shaped roughly as a circular semicylinder with a diameter of 30 m and a length of 70 m. The blowers used to inflate the structure can maintain the air pressure inside the bubble at 10 mm of water above ambient pressure. The bubble is subjected to a wind that blows at 60 km/hr in a direction perpendicular to the axis of the semicylindrical shape. Using polar coordinates, with angle  $\theta$  measured from the ground on the upwind side of the structure, the resulting pressure distribution may be expressed as

$$\frac{p - p_\infty}{\frac{1}{2} \rho V_w^2} = 1 - 4 \sin^2 \theta$$


where  $p$  is the pressure at the surface,  $p_\infty$  the atmospheric pressure, and  $V_w$  the wind speed. Determine the net vertical force exerted on the structure.

- 6.68 Water flows at low speed through a circular tube with inside diameter of 50 mm. A smoothly contoured body of 40 mm diameter is held in the end of the tube where the water discharges to atmosphere. Neglect frictional effects and assume uniform velocity profiles at each section. Determine the pressure measured by the gage and the force required to hold the body.

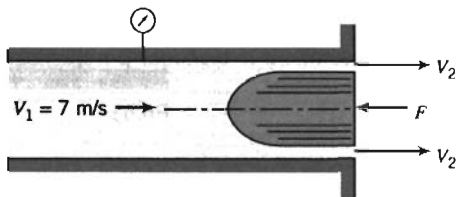

P6.68


- 6.69 High-pressure air forces a stream of water from a tiny, rounded orifice, of area  $A$ , in a tank. The pressure is high enough that gravity may be neglected. The air expands slowly, so that the expansion may be considered isothermal. The initial volume of air in the tank is  $V_0$ . At later instants the volume of air is  $V(t)$ ; the total volume of the tank is  $V_t$ . Obtain an algebraic expression for the mass flow rate of water leaving the tank. Find an algebraic expression for the rate of change in mass of the water inside the tank. Develop an ordinary differential equation and solve for the water mass in the tank at any instant. If  $V_0 = 5 \text{ m}^3$ ,  $V_t = 10 \text{ m}^3$ ,  $A = 25 \text{ mm}^2$ , and  $p_0 = 1 \text{ MPa}$ , plot the water mass in the tank versus time for the first forty minutes.
- 6.70 Repeat Problem 6.69 assuming the air expands so rapidly that the expansion may be treated as adiabatic.
- 6.71 Describe the pressure distribution on the exterior of a multistory building in a steady wind. Identify the locations of the maximum and minimum pressures on the outside of the building. Discuss the effect of these pressures on infiltration of outside air into the building.
- 6.72 Imagine a garden hose with a stream of water flowing out through a nozzle. Explain why the end of the hose may be unstable when held a half meter or so from the nozzle end.
- 6.73 An aspirator provides suction by using a stream of water flowing through a venturi. Analyze the shape and dimensions of such a device. Comment on any limitations on its use.
- 6.74 A tank with a *reentrant* orifice called a *Borda mouthpiece* is shown. The fluid is inviscid and incompressible. The reentrant orifice essentially eliminates flow along the tank walls, so the pressure there is nearly hydrostatic. Calculate the *contraction coefficient*,  $C_c = A_j/A_0$ . *Hint*: Equate the unbalanced hydrostatic pressure force and momentum flux from the jet.

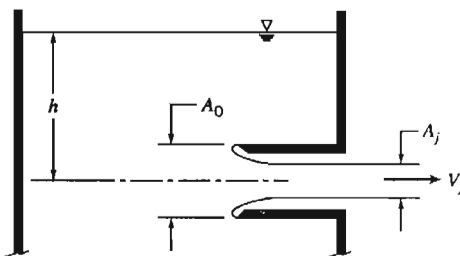

P6.74




- 6.75 Carefully sketch the energy grade lines (EGL) and hydraulic grade lines (HGL) for the system shown in Fig. 6.6 if the pipe is horizontal (i.e., the outlet is at the base of the reservoir), and a water turbine (extracting energy) is located at point ②, or at point ③. In Chapter 8 we will investigate the effects of friction on internal flows. Can you anticipate and sketch the effect of friction on the EGL and HGL for the two cases?
- 6.76 Carefully sketch the energy grade lines (EGL) and hydraulic grade lines (HGL) for the system shown in Fig. 6.6 if a pump (adding energy to the fluid) is located at point ②, or at point ③, such that flow is *into* the reservoir. In Chapter 8 we will investigate the effects of friction on internal flows. Can you anticipate and sketch the effect of friction on the EGL and HGL for the two cases?
- \*6.77 Compressed air is used to accelerate water from a tube. Neglect the velocity in the reservoir and assume the flow in the tube is uniform at any section. At a particular instant, it is known that  $V = 2 \text{ m/s}$  and  $dV/dt = 2.50 \text{ m/s}^2$ . The cross-sectional area of the tube is  $A = 0.02 \text{ m}^2$ . Determine the pressure in the tank at this instant.

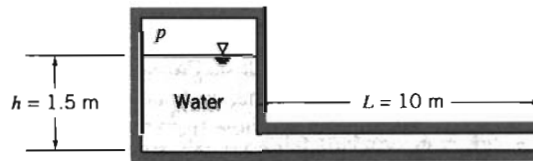

P6.77, 6.78, 6.81


- \*6.78 If the water in the pipe in Problem 6.77 is initially at rest and the air pressure is 20 kPa (gage), what will be the initial acceleration of the water in the pipe?
- \*6.79 Consider the reservoir and disk flow system with the reservoir level maintained constant. Flow between the disks is started from rest at  $t = 0$ . Evaluate the rate of change of volume flow rate at  $t = 0$ , if  $r_1 = 50 \text{ mm}$ .

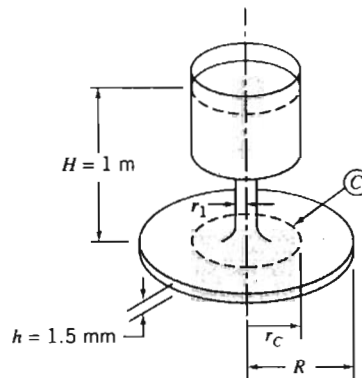

P6.79

- \*6.80 Apply the unsteady Bernoulli equation to the U-tube manometer of constant diameter shown. Assume that the manometer is initially deflected and then released. Obtain a differential equation for  $l$  as a function of time.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

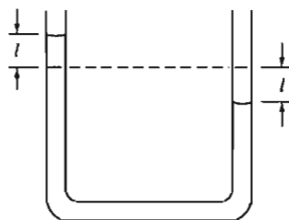

P6.80

- \*6.81 If the water in the pipe of Problem 6.77 is initially at rest, and the air pressure is maintained at 10 kPa (gage), derive a differential equation for the velocity  $V$  in the pipe as a function of time, integrate, and plot  $V$  versus  $t$  for  $t = 0$  to 5 s.
- \*6.82 Two circular disks, of radius  $R$ , are separated by distance  $b$ . The upper disk moves toward the lower one at constant speed  $V$ . The space between the disks is filled with a frictionless, incompressible fluid, which is squeezed out as the disks come together. Assume that, at any radial section, the velocity is uniform across the gap width  $b$ . However, note that  $b$  is a function of time. The pressure surrounding the disks is atmospheric. Determine the gage pressure at  $r = 0$ .
- \*6.83 Consider the tank of Problem 4.36. Using the Bernoulli equation for unsteady flow along a streamline, evaluate the minimum diameter ratio,  $D/d$ , required to justify the assumption that flow from the tank is quasi-steady.
- \*6.84 Determine whether the Bernoulli equation can be applied between different radii for the vortex flow fields (a)  $\vec{V} = \omega r \hat{e}_\theta$  and (b)  $\vec{V} = \hat{e}_\theta K/2\pi r$ .
- \*6.85 Consider the flow represented by the stream function  $\psi = Ax^2y$ , where  $A$  is a dimensional constant equal to  $2.5 \text{ m}^{-1} \cdot \text{s}^{-1}$ . The density is  $2.45 \text{ slug/ft}^3$ . Is the flow rotational? Can the pressure difference between points  $(x, y) = (1, 4)$  and  $(2, 1)$  be evaluated? If so, calculate it, and if not, explain why.
- \*6.86 The velocity field for a two-dimensional flow is  $\vec{V} = (Ax - By)t\hat{i} - (Bx + Ay)t\hat{j}$ , where  $A = 1 \text{ s}^{-2}$ ,  $B = 2 \text{ s}^{-2}$ ,  $t$  is in seconds, and the coordinates are measured in meters. Is this a possible incompressible flow? Is the flow steady or unsteady? Show that the flow is irrotational and derive an expression for the velocity potential.
- \*6.87 The flow field for a plane source at a distance  $h$  above an infinite wall aligned along the  $x$  axis is given by

$$\vec{V} = \frac{q}{2\pi[x^2 + (y-h)^2]}[x\hat{i} + (y-h)\hat{j}] + \frac{q}{2\pi[x^2 + (y+h)^2]}[x\hat{i} + (y+h)\hat{j}]$$

where  $q$  is the strength of the source. The flow is irrotational and incompressible. Derive the stream function and velocity potential. By choosing suitable values for  $q$  and  $h$ , plot the streamlines and lines of constant velocity potential. (Hint: Use the *Excel* workbook of Example Problem 6.10.)

- \*6.88 Using Table 6.1, find the stream function and velocity potential for a plane source, of strength  $q$ , near a  $90^\circ$  corner. The source is equidistant  $h$  from each of the two infinite planes that make up the corner. Find the velocity distribution along one of the planes, assuming  $p = p_0$  at infinity. By choosing suitable values for  $q$  and  $h$ , plot the streamlines and lines of constant velocity potential. (Hint: Use the *Excel* workbook of Example Problem 6.10.)

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- \*6.89 Using Table 6.1, find the stream function and velocity potential for a plane vortex, of strength  $K$ , near a  $90^\circ$  corner. The vortex is equidistant  $h$  from each of the two infinite planes that make up the corner. Find the velocity distribution along one of the planes, assuming  $p = p_0$  at infinity. By choosing suitable values for  $K$  and  $h$ , plot the streamlines and lines of constant velocity potential. (Hint: Use the *Excel* workbook of Example Problem 6.10.)
- \*6.90 The stream function of a flow field is  $\psi = Ax^2y - By^3$ , where  $A = 1 \text{ m}^{-1} \cdot \text{s}^{-1}$ ,  $B = \frac{1}{3} \text{ m}^{-1} \cdot \text{s}^{-1}$ , and the coordinates are measured in meters. Find an expression for the velocity potential.
- \*6.91 A flow field is represented by the stream function  $\psi = x^2 - y^2$ . Find the corresponding velocity field. Show that this flow field is irrotational and obtain the potential function.
- \*6.92 Consider the flow field represented by the potential function  $\phi = x^2 - y^2$ . Verify that this is an incompressible flow and obtain the corresponding stream function.
- \*6.93 Consider the flow field represented by the potential function  $\phi = Ax^2 + Bxy - Ay^2$ . Verify that this is an incompressible flow and determine the corresponding stream function.
- \*6.94 Consider the flow field represented by the velocity potential  $\phi = Ax + Bx^2 - By^2$ , where  $A = 1 \text{ m} \cdot \text{s}^{-1}$ ,  $B = 1 \text{ s}^{-1}$ , and the coordinates are measured in meters. Obtain expressions for the velocity field and the stream function. Calculate the pressure difference between the origin and point  $(x, y) = (1, 2)$ .
- \*6.95 A flow field is represented by the potential function  $\phi = Ay^3 - Bx^2y$ , where  $A = \frac{1}{3} \text{ m}^{-1} \cdot \text{s}^{-1}$ ,  $B = 1 \text{ m}^{-1} \cdot \text{s}^{-1}$ , and the coordinates are measured in meters. Obtain an expression for the magnitude of the velocity vector. Find the stream function for the flow. Plot the streamlines and potential lines, and visually verify that they are orthogonal. (Hint: Use the *Excel* workbook of Example Problem 6.10.)
- \*6.96 An incompressible flow field is characterized by the stream function  $\psi = 3Ax^2y - Ay^3$ , where  $A = 1 \text{ m}^{-1} \cdot \text{s}^{-1}$ . Show that this flow field is irrotational. Derive the velocity potential for the flow. Plot the streamlines and potential lines, and visually verify that they are orthogonal. (Hint: Use the *Excel* workbook of Example Problem 6.10.)
- \*6.97 The velocity distribution in a two-dimensional, steady, inviscid flow field in the  $xy$  plane is  $\vec{V} = (Ax + B)\hat{i} + (C - Ay)\hat{j}$ , where  $A = 3 \text{ s}^{-1}$ ,  $B = 6 \text{ m/s}$ ,  $C = 4 \text{ m/s}$ , and the coordinates are measured in meters. The body force distribution is  $\vec{B} = -g\hat{k}$  and the density is  $825 \text{ kg/m}^3$ . Does this represent a possible incompressible flow field? Plot a few streamlines in the upper half plane. Find the stagnation point(s) of the flow field. Is the flow irrotational? If so, obtain the potential function. Evaluate the pressure difference between the origin and point  $(x, y, z) = (2, 2, 2)$ .
- \*6.98 A certain irrotational flow field in the  $xy$  plane has the stream function  $\psi = Bxy$ , where  $B = 0.25 \text{ s}^{-1}$ , and the coordinates are measured in meters. Determine the rate of flow between points  $(x, y) = (2, 2)$  and  $(3, 3)$ . Find the velocity potential for this flow. Plot the streamlines and potential lines, and visually verify that they are orthogonal. (Hint: Use the *Excel* workbook of Example Problem 6.10.)
- \*6.99 Consider the flow past a circular cylinder, of radius  $a$ , used in Example Problem 6.11. Show that  $V_r = 0$  along the lines  $(r, \theta) = (r, \pm\pi/2)$ . Plot  $V_\theta/U$  versus radius for  $r \geq a$ , along the line  $(r, \theta) = (r, \pi/2)$ . Find the distance beyond which the influence of the cylinder is less than 1 percent of  $U$ .
- \*6.100 Consider flow around a circular cylinder with freestream velocity from right to left and a counterclockwise free vortex. Show that the lift force on the cylinder can be expressed as  $F_L = -\rho U\Gamma$ , as illustrated in Example Problem 6.12.




\* These problems require material from sections that may be omitted without loss of continuity in the text material.



- \*6.101 A crude model of a tornado is formed by combining a sink, of strength  $q = 2800 \text{ m}^2/\text{s}$ , and a free vortex, of strength  $K = 5600 \text{ m}^2/\text{s}$ . Obtain the stream function and velocity potential for this flow field. Estimate the radius beyond which the flow may be treated as incompressible. Find the gage pressure at that radius.
- \*6.102 A source and a sink with strengths of equal magnitude,  $q = 3\pi \text{ m}^2/\text{s}$ , are placed on the  $x$  axis at  $x = -a$  and  $x = a$ , respectively. A uniform flow, with speed  $U = 20 \text{ m/s}$ , in the positive  $x$  direction, is added to obtain the flow past a Rankine body. Obtain the stream function, velocity potential, and velocity field for the combined flow. Find the value of  $\psi = \text{constant}$  on the stagnation streamline. Locate the stagnation points if  $a = 0.3 \text{ m}$ .
- \*6.103 Consider again the flow past a Rankine body of Problem 6.102. The half-width,  $h$ , of the body in the  $y$  direction is given by the transcendental equation

$$\frac{h}{a} = \cot\left(\frac{\pi U h}{q}\right)$$

Evaluate the half-width,  $h$ . Find the local velocity and the pressure at points  $(x, y) = (0, \pm h)$ . Assume the fluid density is that of standard air.

-  \*6.104 A flow field is formed by combining a uniform flow in the positive  $x$  direction, with  $U = 10 \text{ m/s}$ , and a counterclockwise vortex, with strength  $K = 16\pi \text{ m}^2/\text{s}$ , located at the origin. Obtain the stream function, velocity potential, and velocity field for the combined flow. Locate the stagnation point(s) for the flow. Plot the streamlines and potential lines. (Hint: Use the *Excel* workbook of Example Problem 6.10.)
-  \*6.105 Consider the flow field formed by combining a uniform flow in the positive  $x$  direction and a source located at the origin. Obtain expressions for the stream function, velocity potential, and velocity field for the combined flow. If  $U = 25 \text{ m/s}$ , determine the source strength if the stagnation point is located at  $x = -1 \text{ m}$ . Plot the streamlines and potential lines. (Hint: Use the *Excel* workbook of Example Problem 6.10.)
-  \*6.106 Consider the flow field formed by combining a uniform flow in the positive  $x$  direction and a source located at the origin. Let  $U = 30 \text{ m/s}$  and  $q = 150 \text{ m}^2/\text{s}$ . Plot the ratio of the local velocity to the freestream velocity as a function of  $\theta$  along the stagnation streamline. Locate the points on the stagnation streamline where the velocity reaches its maximum value. Find the gage pressure there if the fluid density is  $1.2 \text{ kg/m}^3$ .
- \*6.107 Consider the flow field formed by combining a uniform flow in the positive  $x$  direction with a sink located at the origin. Let  $U = 50 \text{ m/s}$  and  $q = 90 \text{ m}^2/\text{s}$ . Use a suitably chosen control volume to evaluate the net force per unit depth needed to hold in place (in standard air) the surface shape formed by the stagnation streamline.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

# DIMENSIONAL ANALYSIS AND SIMILITUDE

A few years ago an article in *Scientific American* [1] discussed the speed at which dinosaurs may have been able to run. The only data available on these creatures was the fossil record—the most pertinent data being the dinosaurs' average leg length  $l$  and stride  $s$ . Could these data be used to extract the dinosaurs' speed? Comparing data on  $l$  and  $s$  and the speed of quadrupeds (e.g., horses, dogs) and bipeds (e.g., humans) led to no insight until it was realized that if one plotted the ratio  $s/l$  against  $V^2/gl$  (where  $V$  is the measured speed of the animal and  $g$  is the acceleration of gravity) the data for most animals fell approximately on one curve! Hence, by using the dinosaurs' value of  $s/l$ , a corresponding value of  $V^2/gl$  could be interpolated from the curve, leading to an estimate for  $V$  of dinosaurs. Based on this, in contrast to *Jurassic Park*, it seems likely that humans could easily outrun *Tyrannosaurus*! How did the author come up with these two groupings of parameters? Another question: Virtually all engineering or scientific journal articles present data in terms of what at first may seem like strange groupings of parameters: Why do they do this? A third question: In previous chapters we have mentioned that a flow will be essentially incompressible if the Mach number  $M \equiv V/c$  ( $c$  is the speed of sound) is less than a certain value, and that we can neglect viscous effects in most of a flow if the Reynolds number  $Re = \rho VL/\mu$  ( $V$  and  $L$  are the typical or "characteristic" velocity and size scale of the flow) is "large." How did we obtain these groupings, and why do their values have such powerful predictive power? A final question: If we put a 3/8-scale model of an automobile in a wind tunnel at 60 mph, and measure a drag of 6 lbf, this predicts that the drag on the full-size automobile at the same speed will be about 42 lbf. How do we know this, and what are the rules for modeling?

We will attempt to answer questions such as these in this chapter; the answers have to do with the method of *dimensional analysis*. This is a technique for gaining insight into fluid flows (in fact into many engineering or scientific phenomena) before we do either extensive theoretical analysis or experimentation; it also enables us to extract trends from data that would otherwise remain disorganized and incoherent. It is important to successfully be able to do experimental work in fluid mechanics because it is often difficult to obtain the mathematical solution to a problem—as we discussed when we derived the Navier-Stokes equations in Chapter 5.

---

### 7-1 NONDIMENSIONALIZING THE BASIC DIFFERENTIAL EQUATIONS

Before describing dimensional analysis let us see what we can learn from our previous analytical descriptions of fluid flow. Consider, for example, a steady incompressible two-dimensional flow of a Newtonian fluid with constant viscosity (already quite a

list of assumptions!). The mass conservation equation (Eq. 5.1c) becomes

$$\frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} = 0 \quad (7.1)$$

and the Navier-Stokes equations (Eqs. 5.27) reduce to

$$\rho \left( u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} \right) = -\frac{\partial p}{\partial x} + \mu \left( \frac{\partial^2 u}{\partial x^2} + \frac{\partial^2 u}{\partial y^2} \right) \quad (7.2)$$

and

$$\rho \left( u \frac{\partial v}{\partial x} + v \frac{\partial v}{\partial y} \right) = -\rho g - \frac{\partial p}{\partial y} + \mu \left( \frac{\partial^2 v}{\partial x^2} + \frac{\partial^2 v}{\partial y^2} \right) \quad (7.3)$$

As we discussed in Section 5-4, these equations form a set of coupled nonlinear partial differential equations for  $u$ ,  $v$ , and  $p$ , and are difficult to solve for most flows. Equation 7.1 has dimensions of 1/time, and Eqs. 7.2 and 7.3 have dimensions of force/volume. Let us see what happens when we convert them into dimensionless equations. (Even if you did not study Section 5-4 you will be able to understand the following material.)

To nondimensionalize these equations, divide all lengths by a reference length,  $L$ , and all velocities by a reference velocity,  $V_\infty$ , which usually is taken as the freestream velocity. Make the pressure nondimensional by dividing by  $\rho V_\infty^2$  (twice the freestream dynamic pressure). Denoting nondimensional quantities with asterisks, we obtain

$$x^* = \frac{x}{L}, \quad y^* = \frac{y}{L}, \quad u^* = \frac{u}{V_\infty}, \quad v^* = \frac{v}{V_\infty} \quad \text{and} \quad p^* = \frac{p}{\rho V_\infty^2} \quad (7.4)$$

To illustrate the procedure for nondimensionalizing the equations, consider two typical terms in the equations,

$$u \frac{\partial u}{\partial x} = V_\infty \left( \frac{u}{V_\infty} \right) \frac{\partial (u/V_\infty)V_\infty}{\partial (x/L)L} = \frac{V_\infty^2}{L} u^* \frac{\partial u^*}{\partial x^*}$$

and

$$\frac{\partial^2 u}{\partial y^2} = \frac{\partial}{\partial y} \left( \frac{\partial u}{\partial y} \right) = \frac{\partial}{\partial (y/L)L} \left[ \frac{\partial (u/V_\infty)V_\infty}{\partial (y/L)L} \right] = \frac{V_\infty}{L^2} \frac{\partial^2 u^*}{\partial y^{*2}}$$

By following this procedure, Eqs. 7.1, 7.2, and 7.3 can be written

$$\frac{V_\infty}{L} \frac{\partial u^*}{\partial x^*} + \frac{V_\infty}{L} \frac{\partial v^*}{\partial y^*} = 0 \quad (7.5)$$

$$\frac{\rho V_\infty^2}{L} \left( u^* \frac{\partial u^*}{\partial x^*} + v^* \frac{\partial u^*}{\partial y^*} \right) = -\frac{\rho V_\infty^2}{L} \frac{\partial p^*}{\partial x^*} + \frac{\mu V_\infty}{L^2} \left( \frac{\partial^2 u^*}{\partial x^{*2}} + \frac{\partial^2 u^*}{\partial y^{*2}} \right) \quad (7.6)$$

$$\frac{\rho V_\infty^2}{L} \left( u^* \frac{\partial v^*}{\partial x^*} + v^* \frac{\partial v^*}{\partial y^*} \right) = -\rho g - \frac{\rho V_\infty^2}{L} \frac{\partial p^*}{\partial y^*} + \frac{\mu V_\infty}{L^2} \left( \frac{\partial^2 v^*}{\partial x^{*2}} + \frac{\partial^2 v^*}{\partial y^{*2}} \right) \quad (7.7)$$

Dividing Eq. 7.5 by  $V_\infty/L$  and Eqs. 7.6 and 7.7 by  $\rho V_\infty^2/L$  gives

$$\frac{\partial u^*}{\partial x^*} + \frac{\partial v^*}{\partial y^*} = 0 \quad (7.8)$$

$$u^* \frac{\partial u^*}{\partial x^*} + v^* \frac{\partial u^*}{\partial y^*} = -\frac{\partial p^*}{\partial x^*} + \frac{\mu}{\rho V_\infty L} \left( \frac{\partial^2 u^*}{\partial x^{*2}} + \frac{\partial^2 u^*}{\partial y^{*2}} \right) \quad (7.9)$$

$$u^* \frac{\partial v^*}{\partial x^*} + v^* \frac{\partial v^*}{\partial y^*} = -\frac{gL}{V_\infty^2} - \frac{\partial p^*}{\partial y^*} + \frac{\mu}{\rho V_\infty L} \left( \frac{\partial^2 v^*}{\partial x^{*2}} + \frac{\partial^2 v^*}{\partial y^{*2}} \right) \quad (7.10)$$

Equations 7.8, 7.9, and 7.10 are the nondimensional forms of our original equations (Eqs. 7.1, 7.2, 7.3). As such, we can think about their solution (with appropriate boundary conditions) as an exercise in applied mathematics. Equation 7.9 contains a dimensionless coefficient  $\mu/\rho V_\infty L$  (which we recognize as the inverse of the Reynolds number) in front of the second-order (viscous) terms; Eq. 7.10 contains this and another dimensionless coefficient,  $gL/V_\infty^2$  (which we will discuss shortly) for the gravity force term. We recall from the theory of differential equations that the mathematical form of the solution of such equations is very sensitive to the values of the coefficients in the equations (e.g., certain second-order partial differential equations can be elliptical, parabolic, or hyperbolic depending on coefficient values).

These equations tell us that the solution, and hence the actual flow pattern they describe, depends on the values of the two coefficients. For example, if  $\mu/\rho V_\infty L$  is very small (i.e., we have a high Reynolds number), the second-order differentials, representing viscous forces, can be neglected, at least in most of the flow, and we end up with a form of Euler's equations (Eqs. 6.2). We say "in most of the flow" because we have already learned that in reality for this case we will have a boundary layer in which there is significant effect of viscosity; in addition, from a mathematical point of view, it is always dangerous to neglect higher-order derivatives, even if their coefficients are small, because reduction to a lower-order equation means we lose a boundary condition (specifically the no-slip condition). We can predict that if  $\mu/\rho V_\infty L$  is large or small, then viscous forces will be significant or not, respectively; if  $gL/V_\infty^2$  is large or small, we can predict that gravity forces will be significant or not, respectively. We can thus gain insight even before attempting a solution! Note that for completeness, we would have to apply the same nondimensionalizing approach to the boundary conditions of the problem, which often introduce further dimensionless coefficients.

Writing nondimensional forms of the governing equations, then, can yield insight into the underlying physical phenomena, and indicate which forces are dominant. If we had two geometrically similar but different scale flows satisfying Eqs. 7.8, 7.9, and 7.10 (for example, a model and a prototype), the equations would only yield the same mathematical results if the two flows had the same values for the two coefficients (i.e., had the same relative importance of gravity, viscous, and inertia forces). This nondimensional form of the equations is also the starting point in numerical methods, which is very often the only way of obtaining their solution. Additional derivations and examples of establishing similitude from the governing equations of a problem are presented in [2] and [3].

We will now see how the method of dimensional analysis can also be used to find appropriate dimensionless groupings of physical parameters. As we have mentioned, using dimensionless groupings is very useful for experimental measurements, and is usable even when an analytical description is not available or cannot be completely analyzed. Dimensional analysis is a procedure for obtaining dimensionless groups for a flow problem, even in the absence of analytical equations.

## 7-2 NATURE OF DIMENSIONAL ANALYSIS

Most phenomena in fluid mechanics depend in a complex way on geometric and flow parameters. For example, consider the drag force on a stationary smooth sphere immersed in a uniform stream. What experiments must be conducted to determine the

drag force on the sphere? To answer this question, we must specify the parameters that are important in determining the drag force. Clearly, we would expect the drag force to depend on the size of the sphere (characterized by the diameter,  $D$ ), the fluid velocity,  $V$ , and the fluid viscosity,  $\mu$ . In addition, the density of the fluid,  $\rho$ , also might be important. Representing the drag force by  $F$ , we can write the symbolic equation

$$F = f(D, V, \rho, \mu)$$

Although we may have neglected parameters on which the drag force depends, such as surface roughness (or may have included parameters on which it does not depend), we have formulated the problem of determining the drag force for a stationary sphere in terms of quantities that are both controllable and measurable in the laboratory.

We could set up an experimental procedure for finding the dependence of  $F$  on  $V$ ,  $D$ ,  $\rho$ , and  $\mu$ . To see how the drag,  $F$ , is affected by fluid velocity,  $V$ , we could place a sphere in a wind tunnel and measure  $F$  for a range of  $V$  values. We could then run more tests in which we explore the effect on  $F$  of sphere diameter,  $D$ , by using different diameter spheres. We are already generating a lot of data: If we ran the wind tunnel at 10 different speeds, for 10 different sphere sizes, we'd have 100 data points. We could present these results on one graph (e.g., we could plot 10 curves of  $F$  vs.  $V$ , one for each sphere size), but acquiring the data would already be time consuming: If we assume each run takes  $\frac{1}{2}$  hour, we have already accumulated 50 hours of work! We still wouldn't be finished—we would have to book time using, say, a water tank, where we could repeat all these runs for a different value of  $\rho$  and of  $\mu$ . In principle, we would next have to search out a way to use other fluids to be able to do experiments for a range of  $\rho$  and  $\mu$  values (say, 10 of each). At the end of the day (actually, at the end of about  $2\frac{1}{2}$  years of 40-hour weeks!) we would have performed about  $10^4$  tests. Then we would have to try and make sense of the data: How do we plot, say, curves of  $F$  vs.  $V$ , with  $D$ ,  $\rho$ , and  $\mu$  all being parameters? This is a daunting task, even for such a seemingly simple phenomenon as the drag on a sphere!

Fortunately we do not have to do all this work. As we will see in Example Problem 7.1, all the data for drag on a smooth sphere can be plotted as a single relationship between two nondimensional parameters in the form

$$\frac{F}{\rho V^2 D^2} = f\left(\frac{\rho V D}{\mu}\right)$$

The form of the function still must be determined experimentally. However, rather than needing to conduct  $10^4$  experiments, we could establish the nature of the function as accurately with only 10 tests. The time saved in performing only 10 rather than  $10^4$  tests is obvious. Even more important is the greater experimental convenience. No longer must we find fluids with 10 different values of density and viscosity. Nor must we make 10 spheres of different diameters. Instead, only the parameter  $\rho V D / \mu$  must be varied. This can be accomplished simply by changing the velocity, for example.

Figure 7.1 shows some classic data for flow over a sphere (the factors  $\frac{1}{2}$  and  $\pi/4$  have been added to the denominator of the parameter on the left to make it take the form of a commonly used nondimensional group, the drag coefficient,  $C_D$ , that we will discuss in detail in Chapter 9). If we performed the experiments as outlined above our results would fall on the same curve, within experimental error. The data points represent results obtained by various workers for several different fluids and spheres. Note that we end up with a curve that can be used to obtain the drag force on a very wide range of sphere/fluid combinations. For example, it could be used to obtain the drag on a hot-air balloon due to a crosswind, or on a red-blood cell (assuming it could be modeled as a sphere) as it moves through the aorta—in either case, given the fluid ( $\rho$  and  $\mu$ ), the flow



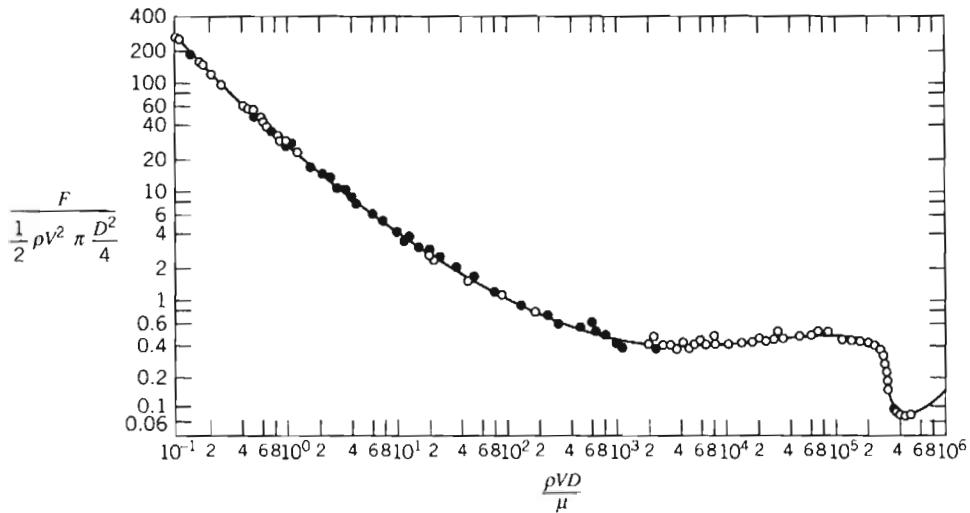


Fig. 7.1 Experimentally derived relation between the nondimensional parameters [4].

speed  $V$ , and the sphere diameter  $D$ , we could compute a value for  $\rho V D / \mu$ , then read the corresponding value for  $C_D$ , and finally compute the drag force  $F$ .

In Section 7-3 we introduce the *Buckingham Pi* theorem, a formalized procedure for deducing the dimensionless groups appropriate for a given fluid mechanics or other engineering problem. The theorem may at first seem a little abstract, but as subsequent sections illustrate, it is a very practical and useful approach.

The Buckingham Pi theorem is a statement of the relation between a function expressed in terms of dimensional parameters and a related function expressed in terms of nondimensional parameters. The Buckingham Pi theorem allows us to develop the important nondimensional parameters quickly and easily.

### 7-3 BUCKINGHAM PI THEOREM

Given a physical problem in which the dependent parameter is a function of  $n - 1$  independent parameters, we may express the relationship among the variables in functional form as

$$q_1 = f(q_2, q_3, \dots, q_n)$$

where  $q_1$  is the dependent parameter, and  $q_2, q_3, \dots, q_n$  are the  $n - 1$  independent parameters. Mathematically, we can express the functional relationship in the equivalent form

$$g(q_1, q_2, \dots, q_n) = 0$$

where  $g$  is an unspecified function, different from  $f$ . For the drag on a sphere we wrote the symbolic equation

$$F = f(D, V, \rho, \mu)$$

We could just as well have written

$$g(F, D, V, \rho, \mu) = 0$$

The Buckingham Pi theorem [5] states that: Given a relation among  $n$  parameters of the form

$$g(q_1, q_2, \dots, q_n) = 0$$

the  $n$  parameters may be grouped into  $n - m$  independent dimensionless ratios, or  $\Pi$  parameters, expressible in functional form by

$$G(\Pi_1, \Pi_2, \dots, \Pi_{n-m}) = 0$$

or

$$\Pi_1 = G_1(\Pi_2, \Pi_3, \dots, \Pi_{n-m})$$

The number  $m$  is usually,<sup>1</sup> but not always, equal to the minimum number,  $r$ , of independent dimensions required to specify the dimensions of all the parameters,  $q_1, q_2, \dots, q_n$ .

The theorem does not predict the functional form of  $G$  or  $G_1$ . The functional relation among the independent dimensionless  $\Pi$  parameters must be determined experimentally.

The  $n - m$  dimensionless  $\Pi$  parameters obtained from the procedure are independent. A  $\Pi$  parameter is not independent if it can be formed from a product or quotient of the other parameters of the problem. For example, if

$$\Pi_5 = \frac{2\Pi_1}{\Pi_2\Pi_3} \quad \text{or} \quad \Pi_6 = \frac{\Pi_1^{3/4}}{\Pi_3^2}$$

then neither  $\Pi_5$  nor  $\Pi_6$  is independent of the other dimensionless parameters.

Several methods for determining the dimensionless parameters are available. A detailed procedure is presented in the next section.

## 7-4 DETERMINING THE $\Pi$ GROUPS

Regardless of the method to be used to determine the dimensionless parameters, one begins by listing all dimensional parameters that are known (or believed) to affect the given flow phenomenon. Some experience admittedly is helpful in compiling the list. Students, who do not have this experience, often are troubled by the need to apply engineering judgment in an apparent massive dose. However, it is difficult to go wrong if a generous selection of parameters is made.

If you suspect that a phenomenon depends on a given parameter, include it. If your suspicion is correct, experiments will show that the parameter must be included to get consistent results. If the parameter is extraneous, an extra  $\Pi$  parameter may result, but experiments will later show that it may be eliminated from consideration. Therefore, do not be afraid to include *all* the parameters that you feel are important.

The six steps listed below outline a recommended procedure for determining the  $\Pi$  parameters:

- Step 1.** *List all the dimensional parameters involved.* (Let  $n$  be the number of parameters.) If the pertinent parameters are not all included, a relation may be obtained, but it will not give the complete story. If parameters that actually have no effect on the physical phenomenon are included, either the process of dimensional analysis will show that these do not enter the relation sought, or one or more dimensionless groups will be obtained that experiments will show to be extraneous.
- Step 2.** *Select a set of fundamental (primary) dimensions, e.g.,  $MLt$  or  $FLt$ .* (Note that for heat transfer problems you may also need  $T$  for temperature, and in electrical systems,  $q$  for charge.)

<sup>1</sup>See Example Problem 7.3.

- Step 3.** List the dimensions of all parameters in terms of primary dimensions. (Let  $r$  be the number of primary dimensions.) Either force or mass may be selected as a primary dimension.
- Step 4.** Select a set of  $r$  dimensional parameters that includes all the primary dimensions. These parameters will all be combined with each of the remaining parameters, one of those at a time, and so will be called repeating parameters. No repeating parameter should have dimensions that are a power of the dimensions of another repeating parameter; for example, do not include both a length ( $L$ ) and a moment of inertia of an area ( $L^4$ ) as repeating parameters. The repeating parameters chosen may appear in all the dimensionless groups obtained; consequently, do *not* include the dependent parameter among those selected in this step.
- Step 5.** Set up dimensional equations, combining the parameters selected in Step 4 with each of the other parameters in turn, to form dimensionless groups. (There will be  $n - m$  equations.) Solve the dimensional equations to obtain the  $n - m$  dimensionless groups.
- Step 6.** Check to see that each group obtained is dimensionless. If mass was initially selected as a primary dimension, it is wise to check the groups using force as a primary dimension, or vice versa.

The functional relationship among the  $\Pi$  parameters must be determined experimentally. The detailed procedure for determining the dimensionless  $\Pi$  parameters is illustrated in Example Problems 7.1 and 7.2.

### EXAMPLE 7.1 Drag Force on a Smooth Sphere

As noted in Section 7-2, the drag force,  $F$ , on a smooth sphere depends on the relative velocity,  $V$ , the sphere diameter,  $D$ , the fluid density,  $\rho$ , and the fluid viscosity,  $\mu$ . Obtain a set of dimensionless groups that can be used to correlate experimental data.

#### EXAMPLE PROBLEM 7.1

**GIVEN:**  $F = f(\rho, V, D, \mu)$  for a smooth sphere.

**FIND:** An appropriate set of dimensionless groups.

**SOLUTION:**

(Circled numbers refer to steps in the procedure for determining dimensionless  $\Pi$  parameters.)

①  $F \quad V \quad D \quad \rho \quad \mu \quad n = 5$  dimensional parameters

② Select primary dimensions  $M, L$ , and  $t$ .

③  $F \quad V \quad D \quad \rho \quad \mu$   
 $\frac{ML}{t^2} \quad \frac{L}{t} \quad L \quad \frac{M}{L^3} \quad \frac{M}{Lt} \quad r = 3$  primary dimensions

④ Select repeating parameters  $\rho, V, D$ .  $m = r = 3$  repeating parameters

⑤ Then  $n - m = 2$  dimensionless groups will result. Setting up dimensional equations, we obtain

$$\Pi_1 = \rho^a V^b D^c F \quad \text{and} \quad \left(\frac{M}{L^3}\right)^a \left(\frac{L}{t}\right)^b (L)^c \left(\frac{ML}{t^2}\right) = M^0 L^0 t^0$$

Equating the exponents of  $M$ ,  $L$ , and  $t$  results in

$$\left. \begin{array}{l} M: \quad a + 1 = 0 \\ L: \quad -3a + b + c + 1 = 0 \\ t: \quad -b - 2 = 0 \end{array} \right\} \begin{array}{l} a = -1 \\ c = -2 \\ b = -2 \end{array} \quad \text{Therefore, } \Pi_1 = \frac{F}{\rho V^2 D^2}$$

Similarly,

$$\Pi_2 = \rho^d V^e D^f \mu \quad \text{and} \quad \left(\frac{M}{L^3}\right)^d \left(\frac{L}{t}\right)^e (L)^f \left(\frac{M}{Lt}\right) = M^0 L^0 t^0$$

$$\left. \begin{array}{l} M: \quad d + 1 = 0 \\ L: \quad -3d + e + f - 1 = 0 \\ t: \quad -e - 1 = 0 \end{array} \right\} \begin{array}{l} d = -1 \\ f = -1 \\ e = -1 \end{array} \quad \text{Therefore, } \Pi_2 = \frac{\mu}{\rho V D}$$

⑥ Check using  $F$ ,  $L$ ,  $t$  dimensions

$$[\Pi_1] = \left[ \frac{F}{\rho V^2 D^2} \right] \quad \text{and} \quad F \frac{L^4}{F t^2} \left(\frac{t}{L}\right)^2 \frac{1}{L^2} = 1$$

where [ ] means “has dimensions of,” and

$$[\Pi_2] = \left[ \frac{\mu}{\rho V D} \right] \quad \text{and} \quad \frac{F t}{L^2} \frac{L^4}{F t^2} \frac{t}{L} \frac{1}{L} = 1$$

The functional relationship is  $\Pi_1 = f(\Pi_2)$ , or

$$\frac{F}{\rho V^2 D^2} = f\left(\frac{\mu}{\rho V D}\right)$$

as noted before. The form of the function,  $f$ , must be determined experimentally (see Fig. 7.1).



The *Excel* workbook for this Example Problem is convenient for computing the values of  $a$ ,  $b$ , and  $c$  for this and other problems.

## EXAMPLE 7.2 Pressure Drop in Pipe Flow

The pressure drop,  $\Delta p$ , for steady, incompressible viscous flow through a straight horizontal pipe depends on the pipe length,  $l$ , the average velocity,  $\bar{V}$ , the fluid viscosity,  $\mu$ , the pipe diameter,  $D$ , the fluid density,  $\rho$ , and the average “roughness” height,  $e$ . Determine a set of dimensionless groups that can be used to correlate data.

### EXAMPLE PROBLEM 7.2

**GIVEN:**  $\Delta p = f(\rho, \bar{V}, D, l, \mu, e)$  for flow in a circular pipe.

**FIND:** A suitable set of dimensionless groups.

**SOLUTION:**

(Circled numbers refer to steps in the procedure for determining dimensionless  $\Pi$  parameters.)

①  $\Delta p$   $\rho$   $\mu$   $\bar{V}$   $l$   $D$   $e$   $n = 7$  dimensional parameters

② Choose primary dimensions  $M$ ,  $L$ , and  $t$ .

$$\textcircled{3} \quad \Delta p \quad \rho \quad \mu \quad \tilde{V} \quad l \quad D \quad e$$

$$\frac{M}{Lt^2} \quad \frac{M}{L^3} \quad \frac{M}{Lt} \quad \frac{L}{t} \quad L \quad L \quad L \quad r = 3 \text{ primary dimensions}$$

$\textcircled{4}$  Select repeating parameters  $\rho, \tilde{V}, D$ .  $m = r = 3$  repeating parameters

$\textcircled{5}$  Then  $n - m = 4$  dimensionless groups will result. Setting up dimensional equations we have:

$$\Pi_1 = \rho^a \tilde{V}^b D^c \Delta p \quad \text{and}$$

$$\left(\frac{M}{L^3}\right)^a \left(\frac{L}{t}\right)^b (L)^c \left(\frac{M}{Lt^2}\right) = M^0 L^0 t^0$$

$$\left. \begin{array}{l} M: 0 = a + 1 \\ L: 0 = -3a + b + c - 1 \\ t: 0 = -b - 2 \end{array} \right\} \begin{array}{l} a = -1 \\ b = -2 \\ c = 0 \end{array}$$

$$\text{Therefore, } \Pi_1 = \rho^{-1} \tilde{V}^{-2} D^0 \Delta p = \frac{\Delta p}{\rho \tilde{V}^2}$$

$$\Pi_3 = \rho^g \tilde{V}^h D^i l \quad \text{and}$$

$$\left(\frac{M}{L^3}\right)^g \left(\frac{L}{t}\right)^h (L)^i L = M^0 L^0 t^0$$

$$\left. \begin{array}{l} M: 0 = g \\ L: 0 = -3g + h + i + 1 \\ t: 0 = -h \end{array} \right\} \begin{array}{l} g = 0 \\ h = 0 \\ i = -1 \end{array}$$

$$\text{Therefore, } \Pi_3 = \frac{l}{D}$$

$\textcircled{6}$  Check, using  $F, L, t$  dimensions

$$[\Pi_1] = \left[ \frac{\Delta p}{\rho \tilde{V}^2} \right] \quad \text{and} \quad \frac{F}{L^2} \frac{L^4}{Ft^2} \frac{t^2}{L^2} = 1$$

$$[\Pi_2] = \left[ \frac{\mu}{\rho \tilde{V} D} \right] \quad \text{and} \quad \frac{Ft}{L^2} \frac{L^4}{Ft^2} \frac{t}{L} \frac{1}{L} = 1$$

Finally, the functional relationship is

$$\Pi_1 = f(\Pi_2, \Pi_3, \Pi_4)$$

or

$$\frac{\Delta p}{\rho \tilde{V}^2} = f\left(\frac{\mu}{\rho \tilde{V} D}, \frac{l}{D}, \frac{e}{D}\right)$$

$$\Pi_2 = \rho^d \tilde{V}^e D^f \mu \quad \text{and}$$

$$\left(\frac{M}{L^3}\right)^d \left(\frac{L}{t}\right)^e (L)^f \frac{M}{Lt} = M^0 L^0 t^0$$

$$\left. \begin{array}{l} M: 0 = d + 1 \\ L: 0 = -3d + e + f - 1 \\ t: 0 = -e - 1 \end{array} \right\} \begin{array}{l} d = -1 \\ e = -1 \\ f = -1 \end{array}$$

$$\text{Therefore, } \Pi_2 = \frac{\mu}{\rho \tilde{V} D}$$

$$\Pi_4 = \rho^j \tilde{V}^k D^l e \quad \text{and}$$

$$\left(\frac{M}{L^3}\right)^j \left(\frac{L}{t}\right)^k (L)^l L = M^0 L^0 t^0$$

$$\left. \begin{array}{l} M: 0 = j \\ L: 0 = -3j + k + l + 1 \\ t: 0 = -k \end{array} \right\} \begin{array}{l} j = 0 \\ k = 0 \\ l = -1 \end{array}$$

$$\text{Therefore, } \Pi_4 = \frac{e}{D}$$

#### Notes:

- ✓ As we shall see when we study pipe flow in detail in Chapter 8, this relationship correlates the data well.
- ✓ Each  $\Pi$  group is unique (e.g., there is only *one* possible dimensionless grouping of  $\mu, \rho, \tilde{V}$ , and  $D$ ).
- ✓ We can often deduce  $\Pi$  groups by inspection, e.g.,  $l/D$  is the obvious unique grouping of  $l$  with  $\rho, \tilde{V}$ , and  $D$ .



The *Excel* workbook for Example Problem 7.1 is convenient for computing the values of  $a, b$ , and  $c$  for this problem.



The procedure outlined above, where  $m$  is taken equal to  $r$  (the fewest independent dimensions required to specify the dimensions of all parameters involved), almost always produces the correct number of dimensionless  $\Pi$  parameters. In a few cases, trouble arises because the number of primary dimensions differs when variables are expressed in terms of different systems of dimensions. The value of  $m$  can be established with certainty by determining the rank of the dimensional matrix; that rank is  $m$ . For completeness, this procedure is illustrated in Example Problem 7.3.

The  $n - m$  dimensionless groups obtained from the procedure are independent but not unique. If a different set of repeating parameters is chosen, different groups result. The repeating parameters chosen may appear in all the dimensionless groups obtained. Based on experience, viscosity should appear in only one dimensionless parameter. Therefore  $\mu$  should *not* be chosen as a repeating parameter.

Choosing density  $\rho$ , with dimensions  $M/L^3$ , velocity  $V$ , with dimensions  $L/T$ , and characteristic length  $L$ , with dimension  $L$ , as repeating parameters generally leads to a set of dimensionless parameters that are suitable for correlating a wide range of experimental data. This is not surprising if one recognizes that inertia forces are important in most fluid mechanics problems. From Newton's second law,  $F = ma$ ; the mass can be written as  $m = \rho V$  and, since volume has dimensions of  $L^3$ ,  $m \propto \rho L^3$ . The acceleration can be written as  $a = dv/dt = v dv/ds$ , and hence  $a \propto V^2/L$ . Thus the inertia force,  $F$ , is proportional to  $\rho V^2 L^2$ .

If  $n - m = 1$ , then a single dimensionless  $\Pi$  parameter is obtained. In this case, the Buckingham Pi theorem indicates that the single  $\Pi$  parameter must be a constant.

### EXAMPLE 7.3 Capillary Effect: Use of Dimensional Matrix

When a small tube is dipped into a pool of liquid, surface tension causes a meniscus to form at the free surface, which is elevated or depressed depending on the contact angle at the liquid-solid-gas interface. Experiments indicate that the magnitude of this capillary effect,  $\Delta h$ , is a function of the tube diameter,  $D$ , liquid specific weight,  $\gamma$ , and surface tension,  $\sigma$ . Determine the number of independent  $\Pi$  parameters that can be formed and obtain a set.

#### EXAMPLE PROBLEM 7.3

**GIVEN:**  $\Delta h = f(D, \gamma, \sigma)$

**FIND:** (a) Number of independent  $\Pi$  parameters.  
(b) One set of  $\Pi$  parameters.

**SOLUTION:**

(Circled numbers refer to steps in the procedure for determining dimensionless  $\Pi$  parameters.)


①  $\Delta h \quad D \quad \gamma \quad \sigma \quad n = 4$  dimensional parameters

② Choose primary dimensions (use both  $M, L, t$  and  $F, L, t$  dimensions to illustrate the problem in determining  $m$ ).

③ (a)  $M, L, t$

$$\begin{array}{cccc} \Delta h & D & \gamma & \sigma \\ L & L & \frac{M}{L^2 t^2} & \frac{M}{t^2} \end{array}$$

$r = 3$  primary dimensions

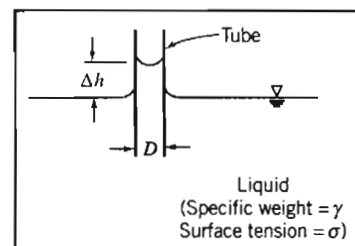

(b)  $F, L, t$

$$\begin{array}{cccc} \Delta h & D & \gamma & \sigma \\ L & L & \frac{F}{L^3} & \frac{F}{L} \end{array}$$

$r = 2$  primary dimensions

Thus for each set of primary dimensions we ask, "Is  $m$  equal to  $r$ ?" Let us check each dimensional matrix to find out. The dimensional matrices are

$$\begin{array}{c|cccc} & \Delta h & D & \gamma & \sigma \\ \hline M & 0 & 0 & 1 & 1 \\ L & 1 & 1 & -2 & 0 \\ t & 0 & 0 & -2 & -2 \end{array}$$

$$\begin{array}{c|cccc} & \Delta h & D & \gamma & \sigma \\ \hline F & 0 & 0 & 1 & 1 \\ L & 1 & 1 & -3 & -1 \end{array}$$

The rank of a matrix is equal to the order of its largest nonzero determinant.

$$\begin{vmatrix} 0 & 1 & 1 \\ 1 & -2 & 0 \\ 0 & -2 & -2 \end{vmatrix} = 0 - (1)(-2) + (1)(-2) = 0$$

$$\begin{vmatrix} -2 & 0 \\ -2 & -2 \end{vmatrix} = 4 \neq 0 \quad \therefore m = 2$$

$m \neq r$

④  $m = 2$ . Choose  $D, \gamma$  as repeating parameters.

⑤  $n - m = 2$  dimensionless groups will result.

$$\Pi_1 = D^a \gamma^b \Delta h \quad \text{and}$$

$$(L)^a \left( \frac{M}{L^2 t^2} \right)^b (L) = M^0 L^0 t^0$$

$$\left. \begin{array}{l} M: b + 0 = 0 \\ L: a - 2b + 1 = 0 \\ t: -2b + 0 = 0 \end{array} \right\} \begin{array}{l} b = 0 \\ a = -1 \end{array}$$

Therefore,  $\Pi_1 = \frac{\Delta h}{D}$

$$\Pi_2 = D^c \gamma^d \sigma \quad \text{and}$$

$$(L)^c \left( \frac{M}{L^2 t^2} \right)^d \frac{M}{t^2} = M^0 L^0 t^0$$

$$\left. \begin{array}{l} M: d + 1 = 0 \\ L: c - 2d = 0 \\ t: -2d - 2 = 0 \end{array} \right\} \begin{array}{l} d = -1 \\ c = -2 \end{array}$$

Therefore,  $\Pi_2 = \frac{\sigma}{D^2 \gamma}$

⑥ Check, using  $F, L, t$  dimensions

$$[\Pi_1] = \left[ \frac{\Delta h}{D} \right] \quad \text{and} \quad \frac{L}{L} = 1$$

$$[\Pi_2] = \left[ \frac{\sigma}{D^2 \gamma} \right] \quad \text{and} \quad \frac{F}{L} \frac{1}{L^2} \frac{L^3}{F} = 1$$

$$\begin{vmatrix} 1 & 1 \\ -3 & -1 \end{vmatrix} = -1 + 3 = 2 \neq 0$$

$$\therefore m = 2$$

$m = r$

$m = 2$ . Choose  $D, \gamma$  as repeating parameters.

$n - m = 2$  dimensionless groups will result.

$$\Pi_1 = D^e \gamma^f \Delta h \quad \text{and}$$

$$(L)^e \left( \frac{F}{L^3} \right)^f L = F^0 L^0 t^0$$

$$\left. \begin{array}{l} F: f = 0 \\ L: e - 3f + 1 = 0 \end{array} \right\} \quad e = -1$$

Therefore,  $\Pi_1 = \frac{\Delta h}{D}$

$$\Pi_2 = D^g \gamma^h \sigma \quad \text{and}$$

$$(L)^g \left( \frac{F}{L^3} \right)^h \frac{F}{L} = F^0 L^0 t^0$$

$$\left. \begin{array}{l} F: h + 1 = 0 \\ L: g - 3h - 1 = 0 \end{array} \right\} \begin{array}{l} h = -1 \\ g = -2 \end{array}$$

Therefore,  $\Pi_2 = \frac{\sigma}{D^2 \gamma}$

Check, using  $M, L, t$  dimensions

$$[\Pi_1] = \left[ \frac{\Delta h}{D} \right] \quad \text{and} \quad \frac{L}{L} = 1$$

$$[\Pi_2] = \left[ \frac{\sigma}{D^2 \gamma} \right] \quad \text{and} \quad \frac{M}{t^2} \frac{1}{L^2} \frac{L^2 t^2}{M} = 1$$

Therefore, both systems of dimensions yield the same dimensionless  $\Pi$  parameters. The predicted functional relationship is

$$\Pi_1 = f(\Pi_2) \quad \text{or} \quad \frac{\Delta h}{D} = f\left( \frac{\sigma}{D^2 \gamma} \right)$$

## Notes:

- ✓ This result is reasonable on physical grounds. The fluid is static; we would not expect time to be an important dimension.
- ✓ We analyzed this problem in Example Problem 2.3, where we found that  $\Delta h = 4\sigma\cos(\theta)/\rho gD$  ( $\theta$  is the contact angle). Hence  $\Delta h/D$  is *directly proportional* to  $\sigma/D^2\gamma$ .
- ✓ The purpose of this problem is to illustrate use of the dimensional matrix to determine the required number of repeating parameters.

## 7-5 SIGNIFICANT DIMENSIONLESS GROUPS IN FLUID MECHANICS

Over the years, several hundred different dimensionless groups that are important in engineering have been identified. Following tradition, each such group has been given the name of a prominent scientist or engineer, usually the one who pioneered its use. Several are so fundamental and occur so frequently in fluid mechanics that we should take time to learn their definitions. Understanding their physical significance also gives insight into the phenomena we study.

Forces encountered in flowing fluids include those due to inertia, viscosity, pressure, gravity, surface tension, and compressibility. The ratio of any two forces will be dimensionless. We have previously shown that the inertia force is proportional to  $\rho V^2 L^2$ . To facilitate forming ratios of forces, we can express each of the remaining forces as follows:

$$\text{Viscous force} = \tau A = \mu \frac{du}{dy} A \propto \mu \frac{V}{L} L^2 = \mu VL$$

$$\text{Pressure force} = (\Delta p)A \propto (\Delta p)L^2$$

$$\text{Gravity force} = mg \propto \rho L^3$$

$$\text{Surface tension force} = \sigma L$$

$$\text{Compressibility force} = E_v A \propto E_v L^2$$

Inertia forces are important in most fluid mechanics problems. The ratio of the inertia force to each of the other forces listed above leads to five fundamental dimensionless groups encountered in fluid mechanics.

In the 1880s, Osborne Reynolds, the British engineer, studied the transition between laminar and turbulent flow regimes in a tube. He discovered that the parameter (later named after him)

$$Re = \frac{\rho \bar{V}D}{\mu} = \frac{\bar{V}D}{\nu}$$

is a criterion by which the flow regime may be determined. Later experiments have shown that the *Reynolds number* is a key parameter for other flow cases as well. Thus, in general,

$$Re = \frac{\rho VL}{\mu} = \frac{VL}{\nu}$$



where  $L$  is a characteristic length descriptive of the flow field geometry. The Reynolds number is the ratio of inertia forces to viscous forces. Flows with "large" Reynolds number generally are turbulent. Flows in which the inertia forces are "small" compared with the viscous forces are characteristically laminar flows.

In aerodynamic and other model testing, it is convenient to present pressure data in dimensionless form. The ratio

$$Eu = \frac{\Delta p}{\frac{1}{2} \rho V^2}$$

is formed, where  $\Delta p$  is the local pressure minus the freestream pressure, and  $\rho$  and  $V$  are properties of the freestream flow. This ratio has been named after Leonhard Euler, the Swiss mathematician who did much early analytical work in fluid mechanics. Euler is credited with being the first to recognize the role of pressure in fluid motion; the Euler equations of Chapter 6 demonstrate this role. The *Euler number* is the ratio of pressure forces to inertia forces. (The factor  $\frac{1}{2}$  is introduced into the denominator to give the dynamic pressure.) The Euler number is often called the *pressure coefficient*,  $C_p$ .

In the study of cavitation phenomena, the pressure difference,  $\Delta p$ , is taken as  $\Delta p = p - p_v$ , where  $p$  is the pressure in the liquid stream, and  $p_v$  is the liquid vapor pressure at the test temperature. Combining these with  $\rho$  and  $V$  in the stream yields the dimensionless parameter called the *cavitation number*,

$$Ca = \frac{p - p_v}{\frac{1}{2} \rho V^2}$$

The smaller the cavitation number, the more likely cavitation is to occur. This is usually an unwanted phenomenon.

William Froude was a British naval architect. Together with his son, Robert Edmund Froude, he discovered that the parameter

$$Fr = \frac{V}{\sqrt{gL}}$$

was significant for flows with free surface effects. Squaring the *Froude number* gives

$$Fr^2 = \frac{V^2}{gL} = \frac{\rho V^2 L^2}{\rho g L^3}$$

which may be interpreted as the ratio of inertia forces to gravity forces. The length,  $L$ , is a characteristic length descriptive of the flow field. In the case of open-channel flow, the characteristic length is the water depth; Froude numbers less than unity indicate subcritical flow and values greater than unity indicate supercritical flow.

The *Weber number* is the ratio of inertia forces to surface tension forces. It may be written

$$We = \frac{\rho V^2 L}{\sigma}$$

The value of the Weber number is indicative of the existence of, and frequency of, capillary waves at a free surface.

In the 1870s, the Austrian physicist Ernst Mach introduced the parameter

$$M = \frac{V}{c}$$

where  $V$  is the flow speed and  $c$  is the local sonic speed. Analysis and experiments have shown that the *Mach number* is a key parameter that characterizes compressibility effects in a flow. The Mach number may be written

$$M = \frac{V}{c} = \frac{V}{\sqrt{\frac{dp}{d\rho}}} = \frac{V}{\sqrt{\frac{E_v}{\rho}}} \quad \text{or} \quad M^2 = \frac{\rho V^2 L^2}{E_v L^2}$$

which may be interpreted as a ratio of inertia forces to forces due to compressibility. For truly incompressible flow (and note that under some conditions even liquids are quite compressible),  $c = \infty$  so that  $M = 0$ .

## 7-6 FLOW SIMILARITY AND MODEL STUDIES

To be useful, a model test must yield data that can be scaled to obtain the forces, moments, and dynamic loads that would exist on the full-scale prototype. What conditions must be met to ensure the similarity of model and prototype flows?

Perhaps the most obvious requirement is that the model and prototype must be geometrically similar. *Geometric similarity* requires that the model and prototype be the same shape, and that all linear dimensions of the model be related to corresponding dimensions of the prototype by a constant scale factor.

A second requirement is that the model and prototype flows must be *kinematically similar*. Two flows are kinematically similar when the velocities at corresponding points are in the same direction and differ only by a constant scale factor. Thus two flows that are kinematically similar also have streamline patterns related by a constant scale factor. Since the boundaries form the bounding streamlines, flows that are kinematically similar must be geometrically similar.

In principle, in order to model the performance in an infinite flow field correctly, kinematic similarity would require that a wind tunnel of infinite cross-section be used to obtain data for drag on an object. In practice, this restriction may be relaxed considerably, permitting use of equipment of reasonable size.

Kinematic similarity requires that the regimes of flow be the same for model and prototype. If compressibility or cavitation effects, which may change even the qualitative patterns of flow, are not present in the prototype flow, they must be avoided in the model flow.

When two flows have force distributions such that identical types of forces are parallel and are related in magnitude by a constant scale factor at all corresponding points, the flows are *dynamically similar*.

The requirements for dynamic similarity are the most restrictive. Kinematic similarity requires geometric similarity; kinematic similarity is a necessary, but not sufficient, requirement for dynamic similarity.

To establish the conditions required for complete dynamic similarity, all forces that are important in the flow situation must be considered. Thus the effects of viscous forces, of pressure forces, of surface tension forces, and so on, must be considered. Test conditions must be established such that all important forces are related by the same scale factor between model and prototype flows. When dynamic similarity exists, data measured in a model flow may be related quantitatively to conditions in

the prototype flow. What, then, are the conditions that ensure dynamic similarity between model and prototype flows?

The Buckingham Pi theorem may be used to obtain the governing dimensionless groups for a flow phenomenon; to achieve dynamic similarity between geometrically similar flows, we must make sure that each independent dimensionless group has the same value in the model and in the prototype. Then not only will the forces have the same relative importance, but also the dependent dimensionless group will have the same value in the model and prototype.

For example, in considering the drag force on a sphere in Example Problem 7.1, we began with

$$F = f(D, V, \rho, \mu)$$

The Buckingham Pi theorem predicted the functional relation

$$\frac{F}{\rho V^2 D^2} = f_1\left(\frac{\rho V D}{\mu}\right)$$

In Section 7-5 we showed that the dimensionless parameters can be viewed as ratios of forces. Thus, in considering a model flow and a prototype flow about a sphere (the flows are geometrically similar), the flows also will be dynamically similar if the value of the independent parameter,  $\rho V D / \mu$ , is duplicated between model and prototype, i.e., if

$$\left(\frac{\rho V D}{\mu}\right)_{\text{model}} = \left(\frac{\rho V D}{\mu}\right)_{\text{prototype}}$$

Furthermore, if

$$Re_{\text{model}} = Re_{\text{prototype}}$$

then the value of the dependent parameter,  $F / \rho V^2 D^2$ , will be duplicated between model and prototype, i.e.,


$$\left(\frac{F}{\rho V^2 D^2}\right)_{\text{model}} = \left(\frac{F}{\rho V^2 D^2}\right)_{\text{prototype}}$$

and the results determined from the model study can be used to predict the drag on the full-scale prototype.

The actual force on the object caused by the fluid is not the same in both cases, but the value of its dimensionless group is. The two tests can be run using different fluids, if desired, as long as the Reynolds numbers are matched. For experimental convenience, test data can be measured in a wind tunnel in air and the results used to predict drag in water, as illustrated in Example Problem 7.4.

#### EXAMPLE 7.4 Similarity: Drag of a Sonar Transducer

The drag of a sonar transducer is to be predicted, based on wind tunnel test data. The prototype, a 1 ft diameter sphere, is to be towed at 5 knots (nautical miles per hour) in seawater at 5°C. The model is 6 in. in diameter. Determine the required test speed in air. If the drag of the model at these test conditions is 5.58 lbf, estimate the drag of the prototype.

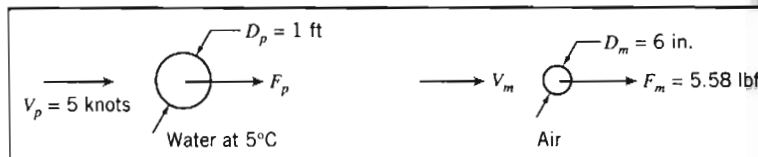**EXAMPLE PROBLEM 7.4****GIVEN:** Sonar transducer to be tested in a wind tunnel.**FIND:** (a)  $V_m$   
(b)  $F_p$ .**SOLUTION:**

Since the prototype operates in water and the model test is to be performed in air, useful results can be expected only if cavitation effects are absent in the prototype flow and compressibility effects are absent from the model test. Under these conditions,

$$\frac{F}{\rho V^2 D^2} = f\left(\frac{\rho V D}{\mu}\right)$$

and the test should be run at

$$Re_{\text{model}} = Re_{\text{prototype}}$$

to ensure dynamic similarity. For seawater at 5°C,  $\rho = 1.99 \text{ slug/ft}^3$  and  $\nu \approx 1.69 \times 10^{-5} \text{ ft}^2/\text{s}$ . At prototype conditions,

$$V_p = \frac{5 \text{ nmi}}{\text{hr}} \times \frac{6080 \text{ ft}}{\text{nmi}} \times \frac{\text{hr}}{3600 \text{ s}} = 8.44 \text{ ft/s}$$

$$Re_p = \frac{V_p D_p}{\nu_p} = \frac{8.44 \text{ ft}}{\text{s}} \times \frac{1 \text{ ft}}{1.69 \times 10^{-5} \text{ ft}^2} = 4.99 \times 10^5$$

The model test conditions must duplicate this Reynolds number. Thus

$$Re_m = \frac{V_m D_m}{\nu_m} = 4.99 \times 10^5$$

For air at STP,  $\rho = 0.00238 \text{ slug/ft}^3$  and  $\nu = 1.57 \times 10^{-4} \text{ ft}^2/\text{s}$ . The wind tunnel must be operated at

$$V_m = Re_m \frac{\nu_m}{D_m} = 4.99 \times 10^5 \times \frac{1.57 \times 10^{-4} \text{ ft}^2}{\text{s}} \times \frac{1}{0.5 \text{ ft}}$$

$$V_m = 157 \text{ ft/s} \leftarrow V_m$$

This speed is low enough to neglect compressibility effects.

At these test conditions, the model and prototype flows are dynamically similar. Hence

$$\left(\frac{F}{\rho V^2 D^2}\right)_m = \left(\frac{F}{\rho V^2 D^2}\right)_p$$

and

$$F_p = F_m \frac{\rho_p}{\rho_m} \frac{V_p^2}{V_m^2} \frac{D_p^2}{D_m^2} = 5.58 \text{ lbf} \times \frac{1.99}{0.00238} \times \frac{(8.44)^2}{(157)^2} \times \frac{1}{(0.5)^2}$$

$$F_p = 53.9 \text{ lbf} \leftarrow F_p$$

If cavitation were expected—if the sonar probe were operated at high speed near the free surface of the seawater—then useful results could not be obtained from a model test in air.

This problem:

- ✓ Demonstrates the calculation of prototype values from model test data.
- ✓ “Reinvented the wheel”: the results for drag on a smooth sphere are very well known, so we did not need to do a model experiment but instead could have simply read from the graph of Fig. 7.1 the value of  $C_D = F_p / \left( \frac{1}{2} \rho V_p^2 \frac{\pi}{4} D_p^2 \right) \approx 1$  corresponding to a Reynolds number of  $4.99 \times 10^5$ . Then  $F_p \approx 54$  lbf can easily be computed. We will have more to say on drag coefficients in Chapter 9.

### Incomplete Similarity

We have shown that to achieve complete dynamic similarity between geometrically similar flows, it is necessary to duplicate the values of the independent dimensionless groups; by so doing the value of the dependent parameter is then duplicated.

In the simplified situation of Example Problem 7.4, duplicating the Reynolds number value between model and prototype ensured dynamically similar flows. Testing in air allowed the Reynolds number to be duplicated exactly (this also could have been accomplished in a water tunnel for this situation). The drag force on a sphere actually depends on the nature of the boundary-layer flow. Therefore, geometric similarity requires that the relative surface roughness of the model and prototype be the same. This means that relative roughness also is a parameter that must be duplicated between model and prototype situations. If we assume that the model was constructed carefully, measured values of drag from model tests could be scaled to predict drag for the operating conditions of the prototype.

In many model studies, to achieve dynamic similarity requires duplication of several dimensionless groups. In some cases, complete dynamic similarity between model and prototype may not be attainable. Determining the drag force (resistance) of a surface ship is an example of such a situation. Resistance on a surface ship arises from skin friction on the hull (viscous forces) and surface wave resistance (gravity forces). Complete dynamic similarity requires that both Reynolds and Froude numbers be duplicated between model and prototype.

In general it is not possible to predict wave resistance analytically, so it must be modeled. This requires that

$$Fr_m = \frac{V_m}{(gL_m)^{1/2}} = Fr_p = \frac{V_p}{(gL_p)^{1/2}}$$

To match Froude numbers between model and prototype therefore requires a velocity ratio of

$$\frac{V_m}{V_p} = \left( \frac{L_m}{L_p} \right)^{1/2}$$

to ensure dynamically similar surface wave patterns.

Hence for any model length scale, matching the Froude numbers determines the velocity ratio. Only the kinematic viscosity can then be varied to match Reynolds

numbers. Thus

$$Re_m = \frac{V_m L_m}{\nu_m} = Re_p = \frac{V_p L_p}{\nu_p}$$

leads to the condition that


$$\frac{\nu_m}{\nu_p} = \frac{V_m}{V_p} \frac{L_m}{L_p}$$

If we use the velocity ratio obtained from matching the Froude numbers, equality of Reynolds numbers leads to a kinematic viscosity ratio requirement of

$$\frac{\nu_m}{\nu_p} = \left( \frac{L_m}{L_p} \right)^{1/2} \frac{L_m}{L_p} = \left( \frac{L_m}{L_p} \right)^{3/2}$$

If  $L_m/L_p$  equals  $\frac{1}{100}$  (a typical length scale for ship model tests), then  $\nu_m/\nu_p$  must be  $\frac{1}{1000}$ . Figure A.3 shows that mercury is the only liquid with kinematic viscosity less than that of water. However, it is only about an order of magnitude less, so the kinematic viscosity ratio required to duplicate Reynolds numbers cannot be attained.

We conclude that it is impossible in practice for this model/prototype scale of  $\frac{1}{100}$  to satisfy both the Reynolds number and Froude number criteria; at best we will be able to satisfy only one of them. In addition, water is the only practical fluid for most model tests of free-surface flows. To obtain complete dynamic similarity then would require a full-scale test. However, all is not lost: Model studies do provide useful information even though complete similarity cannot be obtained. As an example, Fig. 7.2 shows data from a test of a 1:80 scale model of a ship conducted at the U.S. Naval Academy Hydromechanics Laboratory. The plot displays “resistance coefficient” data versus Froude number. The square points are calculated from values of

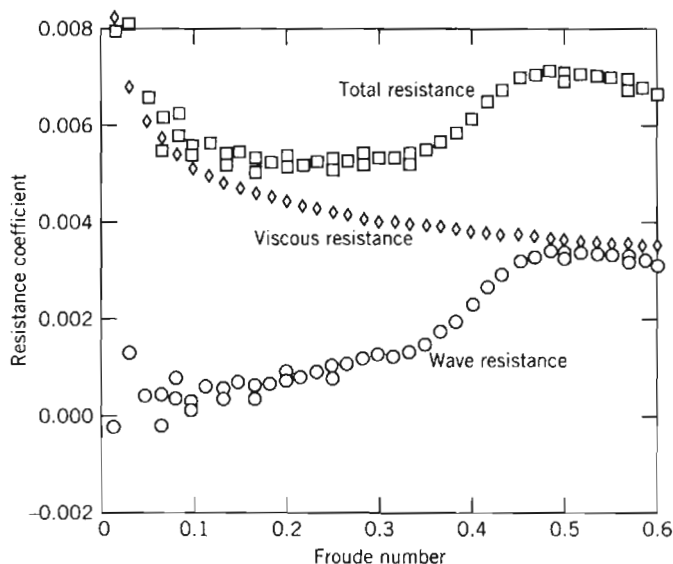

**Fig. 7.2** Data from test of 1:80 scale model of U.S. Navy guided missile frigate *Oliver Hazard Perry* (FFG-7). (Data from U.S. Naval Academy Hydromechanics Laboratory, courtesy of Professor Bruce Johnson.)


total resistance measured in the test. We would like to obtain the corresponding total resistance curve for the full-scale ship.

If you think about it, we can *only* measure the total drag (the square data points). The total drag is due to both wave resistance (dependent on the Froude number) and friction resistance (dependent on the Reynolds number). We *cannot* use the total drag curve of Fig. 7.2 for the full-scale ship because, as we have discussed above, we can never set up the model conditions so that its Reynolds number *and* Froude number match those of the full-scale ship. Nevertheless, we would like to extract from Fig. 7.2 the corresponding total drag curve for the full-scale ship. In many experimental situations we need to use a creative “trick” to come up with a solution. In this case, the experimenters used boundary-layer theory (which we discuss in Chapter 9) to *predict* the viscous resistance component of the model (shown as diamonds in Fig. 7.2); then they estimated the wave resistance (not obtainable from theory) by simply subtracting this theoretical viscous resistance from the experimental total resistance, point by point (shown as circles in Fig. 7.2).

Using this clever idea (typical of the kind of experimental and analytical approaches experimentalists need to employ), Fig. 7.2 therefore gives the wave resistance of the model as a function of Froude number. It is *also* valid for the full-scale ship, because wave resistance depends only on the Froude number! We can now build a graph similar to Fig. 7.2 valid for the full-scale ship: Simply compute from boundary-layer theory the viscous resistance of the full-scale ship and add this to the wave resistance values, point by point. The result is shown in Fig. 7.3. The wave resistance points are identical to those in Fig. 7.2; the viscous resistance points are computed from theory (and are different from those of Fig. 7.2); and the total resistance curve for the full-scale ship is finally obtained.

In this example, incomplete modeling was overcome by using analytical computations; the model experiments modeled the Froude number, but not the Reynolds number.

Because the Reynolds number cannot be matched for model tests of surface ships, the boundary-layer behavior is not the same for model and prototype. The

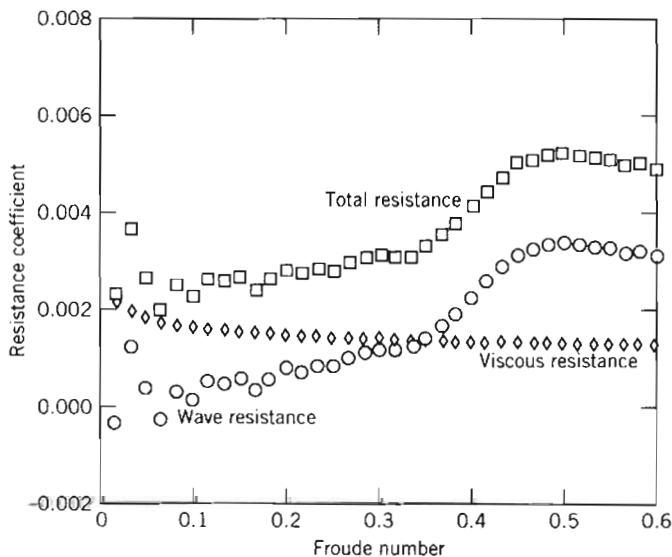

**Fig. 7.3** Resistance of full-scale ship predicted from model test results. (Data from U.S. Naval Academy Hydromechanics Laboratory, courtesy of Professor Bruce Johnson.)



model Reynolds number is only  $(L_m/L_p)^{3/2}$  as large as the prototype value, so the extent of laminar flow in the boundary layer on the model is too large by a corresponding factor. The method just described assumes that boundary-layer behavior can be scaled. To make this possible, the model boundary layer is “tripped” or “stimulated” to become turbulent at a location that corresponds to the behavior on the full-scale vessel. “Studs” were used to stimulate the boundary layer for the model test results shown in Fig. 7.2.

A correction sometimes is added to the full-scale coefficients calculated from model test data. This correction accounts for roughness, waviness, and unevenness that inevitably are more pronounced on the full-scale ship than on the model. Comparisons between predictions from model tests and measurements made in full-scale trials suggest an overall accuracy within  $\pm 5$  percent [6].

The Froude number is an important parameter in the modeling of rivers and harbors. In these situations it is not practical to obtain complete similarity. Use of a reasonable model scale would lead to extremely small water depths. Viscous forces and surface tension forces would have much larger relative effects in the model flow than in the prototype. Consequently, different length scales are used for the vertical and horizontal directions. Viscous forces in the deeper model flow are increased using artificial roughness elements.

Emphasis on fuel economy has made reduction of aerodynamic drag important for automobiles, trucks, and buses. Most work on development of low-drag configurations is done using model tests. Traditionally, automobile models have been built to  $\frac{3}{8}$  scale, at which a model of a full-size automobile has a frontal area of about  $0.3 \text{ m}^2$ . Thus testing can be done in a wind tunnel with test section area of  $6 \text{ m}^2$  or larger. At  $\frac{3}{8}$  scale, a wind speed of about 150 mph is needed to model a prototype automobile traveling at the legal speed limit. Thus there is no problem with compressibility effects, but the scale models are expensive and time-consuming to build.

A large wind tunnel (test section dimensions are 5.4 m high, 10.4 m wide, and 21.3 m long; maximum air speed is 250 km/hr with the tunnel empty) is used by General Motors to test full-scale automobiles at highway speeds. The large test section allows use of production autos or of full-scale clay mockups of proposed auto body styles. Many other vehicle manufacturers are using comparable facilities; Fig. 7.4 shows a full-size sedan under test in the Volvo wind tunnel. The relatively low speed permits flow visualization using tufts or “smoke” streams.<sup>2</sup> Using full-size “models,” stylists and engineers can work together to achieve optimum results.

It is harder to achieve dynamic similarity in tests of trucks and buses; models must be made to smaller scale than those for automobiles.<sup>3</sup> A large scale for truck and bus testing is 1:8. To achieve complete dynamic similarity by matching Reynolds numbers at this scale would require a test speed of 440 mph. This would introduce unwanted compressibility effects, and model and prototype flows would not be kinematically similar. Fortunately, trucks and buses are “bluff” objects. Experiments show that above a certain Reynolds number, their nondimensional drag becomes independent of Reynolds number [9]. Although similarity is not complete, measured

<sup>2</sup> A mixture of liquid nitrogen and steam may be used to produce “smoke” streaklines that evaporate and do not clog the fine mesh screens used to reduce the turbulence level in a wind tunnel. Streaklines may be made to appear “colored” in photos by placing a filter over the camera lens. This and other techniques for flow visualization are detailed in [7] and [8].

<sup>3</sup> The vehicle length is particularly important in tests at large yaw angles to simulate crosswind behavior. Tunnel blockage considerations limit the acceptable model size. See [9] for recommended practices.





Fig. 7.4 Full-scale automobile under test in Volvo wind tunnel, using smoke streaklines for flow visualization. (Photograph courtesy of Volvo Cars of North America, Inc.)

test data can be scaled to predict prototype drag forces. The procedure is illustrated in Example Problem 7.5.

For additional details on techniques and applications of dimensional analysis consult [10–13].

### EXAMPLE 7.5 Incomplete Similarity: Aerodynamic Drag on a Bus

The following wind tunnel test data from a 1:16 scale model of a bus are available:

Air Speed (m/s)	18.0	21.8	26.0	30.1	35.0	38.5	40.9	44.1	46.7
Drag Force (N)	3.10	4.41	6.09	7.97	10.7	12.9	14.7	16.9	18.9

Using the properties of standard air, calculate and plot the dimensionless aerodynamic drag coefficient,

$$C_D = \frac{F_D}{\frac{1}{2} \rho V^2 A}$$

versus Reynolds number  $Re = \rho V w / \mu$ , where  $w$  is model width. Find the minimum test speed above which  $C_D$  remains constant. Estimate the aerodynamic drag force and power requirement for the prototype vehicle at 100 km/hr. (The width and frontal area of the prototype are 8 ft and 84 ft<sup>2</sup>, respectively.)

**EXAMPLE PROBLEM 7.5**

**GIVEN:** Data from a wind tunnel test of a model bus. Prototype dimensions are width of 8 ft and frontal area of 84 ft<sup>2</sup>. Model scale is 1:16. Standard air is the test fluid.

- FIND:** (a) Aerodynamic drag coefficient,  $C_D = F_D / \frac{1}{2} \rho V^2 A$ , versus Reynolds number,  $Re = \rho V w / \mu$ ; plot.  
 (b) Speed above which  $C_D$  is constant.  
 (c) Estimated aerodynamic drag force and power required for the full-scale vehicle at 100 km/hr.

**SOLUTION:**

The model width is

$$w_m = \frac{1}{16} w_p = \frac{1}{16} \times 8 \text{ ft} \times \frac{0.3048 \text{ m}}{\text{ft}} = 0.152 \text{ m}$$

The model area is

$$A_m = \left(\frac{1}{16}\right)^2 A_p = \left(\frac{1}{16}\right)^2 \times 84 \text{ ft}^2 \times \frac{(0.305)^2 \text{ m}^2}{\text{ft}^2} = 0.0305 \text{ m}^2$$


The aerodynamic drag coefficient may be calculated as

$$\begin{aligned} C_D &= \frac{F_D}{\frac{1}{2} \rho V^2 A} \\ &= 2 \times F_D (\text{N}) \times \frac{\text{m}^3}{1.23 \text{ kg}} \times \frac{\text{s}^2}{(V)^2 \text{ m}^2} \times \frac{1}{0.0305 \text{ m}^2} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \\ C_D &= \frac{53.3 F_D (\text{N})}{[V(\text{m/s})]^2} \end{aligned}$$

The Reynolds number may be calculated as

$$\begin{aligned} Re &= \frac{\rho V w}{\mu} = \frac{V w}{\nu} = \frac{V \text{ m}}{\text{s}} \times 0.152 \text{ m} \times \frac{\text{s}}{1.46 \times 10^{-5} \text{ m}^2} \\ Re &= 1.04 \times 10^4 V(\text{m/s}) \end{aligned}$$

The calculated values are plotted in the following figure:

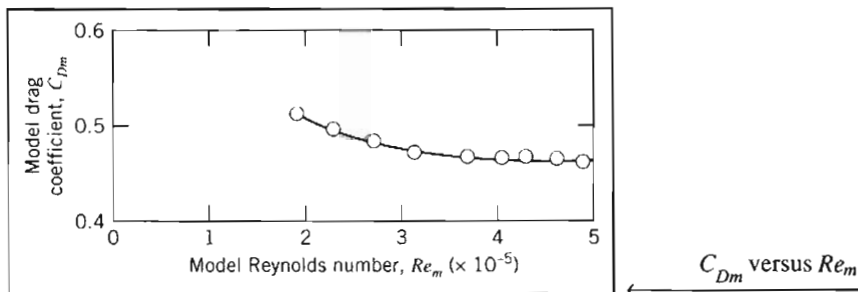

The plot shows that the model drag coefficient becomes constant at  $C_{Dm} \approx 0.46$  above  $Re_m = 4 \times 10^5$ , which corresponds to an air speed of approximately 40 m/s. Since the drag coefficient is independent of Reynolds number above  $Re \approx 4 \times 10^5$ , then for the prototype vehicle ( $Re \approx 4.5 \times 10^6$ ),  $C_D \approx 0.46$ . The drag force on the full-scale vehicle is

$$F_{Dp} = C_D \frac{1}{2} \rho V_p^2 A_p$$

$$= \frac{0.46}{2} \times \frac{1.23 \text{ kg}}{\text{m}^3} \left( 100 \frac{\text{km}}{\text{hr}} \times \frac{1000 \text{ m}}{\text{km}} \times \frac{\text{hr}}{3600 \text{ s}} \right)^2 \times 84 \text{ ft}^2 \times (0.305)^2 \frac{\text{m}^2}{\text{ft}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}}$$

$$F_{Dp} = 1.71 \text{ kN} \quad \leftarrow \quad F_{Dp}$$

The corresponding power required to overcome aerodynamic drag is

$$\mathcal{P}_p = F_{Dp} V_p$$

$$= 1.71 \times 10^3 \text{ N} \times 100 \frac{\text{km}}{\text{hr}} \times \frac{1000 \text{ m}}{\text{km}} \times \frac{\text{hr}}{3600 \text{ s}} \times \frac{\text{W} \cdot \text{s}}{\text{N} \cdot \text{m}}$$

$$\mathcal{P}_p = 47.5 \text{ kW} \quad \leftarrow \quad \mathcal{P}_p$$

This problem illustrates a common phenomenon in aerodynamics: Above a certain minimum Reynolds number the drag coefficient of an object usually approaches a constant—that is, becomes independent of the Reynolds number. Hence, in these situations we do not have to match the Reynolds numbers of the model and prototype in order for them to have the same drag coefficient—a considerable advantage. However, the SAE *Recommended Practices* [9] suggests  $Re \geq 2 \times 10^6$  for truck and bus testing.

### Scaling with Multiple Dependent Parameters

In some situations of practical importance there may be more than one dependent parameter. In such cases, dimensionless groups must be formed separately for each dependent parameter.

As an example, consider a typical centrifugal pump. The detailed flow pattern within a pump changes with volume flow rate and speed; these changes affect the pump's performance. Performance parameters of interest include the pressure rise (or head) developed, the power input required, and the machine efficiency, measured under specific operating conditions.<sup>4</sup> Performance curves are generated by varying an independent parameter such as the volume flow rate. Thus the independent variables are volume flow rate, angular speed, impeller diameter, and fluid properties. Dependent variables are the several performance quantities of interest.

Finding dimensionless parameters begins from the symbolic equations for the dependence of head,  $h$  (energy per unit mass,  $L^2/t^2$ ), and power,  $\mathcal{P}$ , on the independent parameters, given by

$$h = g_1(Q, \rho, \omega, D, \mu)$$

and

$$\mathcal{P} = g_2(Q, \rho, \omega, D, \mu)$$

<sup>4</sup>Efficiency is defined as the ratio of power delivered to the fluid divided by input power,  $\eta = \mathcal{P}/\mathcal{P}_{in}$ . For incompressible flow, we will see in Chapter 8 that the energy equation reduces to  $\mathcal{P} = \rho Q h$  (when "head"  $h$  is expressed as energy per unit mass) or to  $\mathcal{P} = \rho g Q H$  (when head  $H$  is expressed as energy per unit weight).

Straightforward use of the Pi theorem gives the dimensionless *head coefficient* and *power coefficient* as

$$\frac{h}{\omega^2 D^2} = f_1\left(\frac{Q}{\omega D^3}, \frac{\rho \omega D^2}{\mu}\right) \quad (7.11)$$

and

$$\frac{\mathcal{P}}{\rho \omega^3 D^5} = f_2\left(\frac{Q}{\omega D^3}, \frac{\rho \omega D^2}{\mu}\right) \quad (7.12)$$

The dimensionless parameter  $Q/\omega D^3$  in these equations is called the *flow coefficient*. The dimensionless parameter  $\rho \omega D^2/\mu$  ( $\propto \rho V D/\mu$ ) is a form of Reynolds number.

Head and power in a pump are developed by inertia forces. Both the flow pattern within a pump and the pump performance change with volume flow rate and speed of rotation. Performance is difficult to predict analytically except at the design point of the pump, so it is measured experimentally. Typical characteristic curves plotted from experimental data for a centrifugal pump tested at constant speed are shown in Fig. 7.5 as functions of volume flow rate. The head, power, and efficiency curves in Fig. 7.5 are faired through points calculated from measured data. Maximum efficiency usually occurs at the design point.

Complete similarity in pump performance tests would require identical flow coefficients and Reynolds numbers. In practice, it has been found that viscous effects are relatively unimportant when two geometrically similar machines operate under "similar" flow conditions. Thus, from Eqs. 7.11 and 7.12, when

$$\frac{Q_1}{\omega_1 D_1^3} = \frac{Q_2}{\omega_2 D_2^3} \quad (7.13)$$

it follows that

$$\frac{h_1}{\omega_1^2 D_1^2} = \frac{h_2}{\omega_2^2 D_2^2} \quad (7.14)$$

and

$$\frac{\mathcal{P}_1}{\rho_1 \omega_1^3 D_1^5} = \frac{\mathcal{P}_2}{\rho_2 \omega_2^3 D_2^5} \quad (7.15)$$

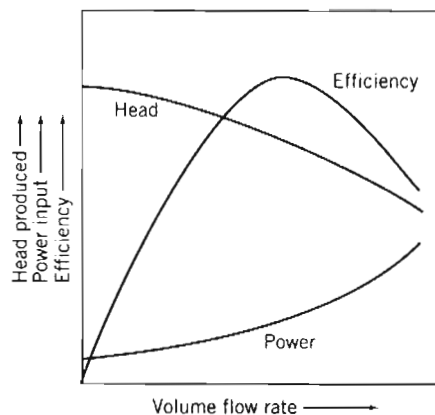


Fig 7.5 Typical characteristic curves for centrifugal pump tested at constant speed.

The empirical observation that viscous effects are unimportant under similar flow conditions allows use of Eqs. 7.13 through 7.15 to scale the performance characteristics of machines to different operating conditions, as either the speed or diameter is changed. These useful scaling relationships are known as pump or fan “laws.” If operating conditions for one machine are known, operating conditions for any geometrically similar machine can be found by changing  $D$  and  $\omega$  according to Eqs. 7.13 through 7.15. (More details on dimensional analysis, design, and performance curves for fluid machinery are presented in Chapter 10.)

Another useful pump parameter can be obtained by eliminating the machine diameter from Eqs. 7.13 and 7.14. If we designate  $\Pi_1 = Q/\omega D^3$  and  $\Pi_2 = h/\omega^2 D^2$ , then the ratio  $\Pi_1^{1/2}/\Pi_2^{3/4}$  is another dimensionless parameter; this parameter is the *specific speed*,  $N_s$ ,

$$N_s = \frac{\omega Q^{1/2}}{h^{3/4}} \quad (7.16a)$$

The specific speed, as defined in Eq. 7.16a, is a dimensionless parameter (provided that the head,  $h$ , is expressed as energy per unit mass). You may think of specific speed as the speed required for a machine to produce unit head at unit volume flow rate. A constant specific speed describes all operating conditions of geometrically similar machines with similar flow conditions.

Although specific speed is a dimensionless parameter, it is common practice to use a convenient but inconsistent set of units in specifying the variables  $\omega$  and  $Q$ , and to use the energy per unit weight  $H$  in place of energy per unit mass  $h$  in Eq. 7.16a. When this is done the specific speed,

$$N_{s_{cu}} = \frac{\omega Q^{1/2}}{H^{3/4}} \quad (7.16b)$$

is not a unitless parameter and its magnitude depends on the units used to calculate it. Customary units used in U.S. engineering practice for pumps are rpm for  $\omega$ , gpm for  $Q$ , and feet (energy per unit weight) for  $H$ . In these customary U.S. units, “low” specific speed means  $500 < N_{s_{cu}} < 4000$  and “high” means  $10,000 < N_{s_{cu}} < 15,000$ . Example Problem 7.6 illustrates use of the pump scaling laws and specific speed parameter. More details of specific speed calculations and additional examples of applications to fluid machinery are presented in Chapter 10.

### EXAMPLE 7.6 Pump “Laws”

A centrifugal pump has an efficiency of 80 percent at its design-point specific speed of 2000 (units of rpm, gpm, and feet). The impeller diameter is 8 in. At design-point flow conditions, the volume flow rate is 300 gpm of water at 1170 rpm. To obtain a higher flow rate, the pump is to be fitted with a 1750 rpm motor. Use the pump “laws” to find the design-point performance characteristics of the pump at the higher speed. Show that the specific speed remains constant for the higher operating speed. Determine the motor size required.

#### EXAMPLE PROBLEM 7.6

**GIVEN:** Centrifugal pump with design specific speed of 2000 (in rpm, gpm, and feet units). Impeller diameter is  $D = 8$  in. At the pump’s design-point flow conditions,  $\omega = 1170$  rpm and  $Q = 300$  gpm, with water.

**FIND:** (a) Performance characteristics, (b) specific speed, and (c) motor size required, for similar flow conditions at 1750 rpm.

**SOLUTION:**

From pump "laws,"  $Q/\omega D^3 = \text{constant}$ , so

$$Q_2 = Q_1 \frac{\omega_2}{\omega_1} \left( \frac{D_2}{D_1} \right)^3 = 300 \text{ gpm} \left( \frac{1750}{1170} \right) (1)^3 = 449 \text{ gpm} \leftarrow Q_2$$

The pump head is not specified at  $\omega_1 = 1170$  rpm, but it can be calculated from the specific speed,  $N_{s_{cu}} = 2000$ . Using the given units and the definition of  $N_{s_{cu}}$ ,

$$N_{s_{cu}} = \frac{\omega Q^{1/2}}{H^{3/4}} \quad \text{so} \quad H_1 = \left( \frac{\omega_1 Q_1^{1/2}}{N_{s_{cu}}} \right)^{4/3} = 21.9 \text{ ft}$$

Then  $H/\omega^2 D^2 = \text{constant}$ , so

$$H_2 = H_1 \left( \frac{\omega_2}{\omega_1} \right)^2 \left( \frac{D_2}{D_1} \right)^2 = 21.9 \text{ ft} \left( \frac{1750}{1170} \right)^2 (1)^2 = 49.0 \text{ ft} \leftarrow H_2$$

The pump output power is  $\mathcal{P}_1 = \rho g Q_1 H_1$ , so at  $\omega_1 = 1170$  rpm,

$$\begin{aligned} \mathcal{P}_1 &= \frac{1.94 \text{ slug}}{\text{ft}^3} \times \frac{32.2 \text{ ft}}{\text{s}^2} \times \frac{300 \text{ gal}}{\text{min}} \times \frac{21.9 \text{ ft}}{7.48 \text{ gal}} \times \frac{\text{ft}^3}{60 \text{ s}} \times \frac{\text{min}}{\text{slug} \cdot \text{ft}} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lbf}} \\ \mathcal{P}_1 &= 1.66 \text{ hp} \end{aligned}$$

But  $\mathcal{P}/\rho \omega^3 D^5 = \text{constant}$ , so

$$\mathcal{P}_2 = \mathcal{P}_1 \left( \frac{\rho_2}{\rho_1} \right) \left( \frac{\omega_2}{\omega_1} \right)^3 \left( \frac{D_2}{D_1} \right)^5 = 1.66 \text{ hp} (1) \left( \frac{1750}{1170} \right)^3 (1)^5 = 5.55 \text{ hp} \leftarrow \mathcal{P}_2$$

The required input power may be calculated as

$$\mathcal{P}_{\text{in}} = \frac{\mathcal{P}_2}{\eta} = \frac{5.55 \text{ hp}}{0.80} = 6.94 \text{ hp} \leftarrow \mathcal{P}_{\text{in}}$$

Thus a 7.5 hp motor (the next larger standard size) probably would be specified.

The specific speed at  $\omega_2 = 1750$  rpm is

$$N_{s_{cu}} = \frac{\omega Q^{1/2}}{H^{3/4}} = \frac{1750(449)^{1/2}}{(49.0)^{3/4}} = 2000 \leftarrow N_{s_{cu}}$$

This problem illustrates application of the pump "laws" and specific speed to scaling of performance data. Pump and fan "laws" are used widely in industry to scale performance curves for families of machines from a single performance curve, and to specify drive speed and power in machine applications.

### Comments on Model Testing

While outlining the procedures involved in model testing, we have tried not to imply that testing is a simple task that automatically gives results that are easily interpreted, accurate, and complete. As in all experimental work, careful planning and execution are

needed to obtain valid results. Models must be constructed carefully and accurately, and they must include sufficient detail in areas critical to the phenomenon being measured. Aerodynamic balances or other force measuring systems must be aligned carefully and calibrated correctly. Mounting methods must be devised that offer adequate rigidity and model motion, yet do not interfere with the phenomenon being measured. References [14–16] are considered the standard sources for details of wind tunnel test techniques. More specialized techniques for water impact testing are described in [17].

Experimental facilities must be designed and constructed carefully. The quality of flow in a wind tunnel must be documented. Flow in the test section should be as nearly uniform as possible (unless the desire is to simulate a special profile such as an atmospheric boundary layer), free from angularity, and with little swirl. If they interfere with measurements, boundary layers on tunnel walls must be removed by suction or energized by blowing. Pressure gradients in a wind tunnel test section may cause erroneous drag-force readings due to pressure variations in the flow direction.

Special facilities are needed for unusual conditions or for special test requirements, especially to achieve large Reynolds numbers. Many facilities are so large or specialized that they cannot be supported by university laboratories or private industry. A few examples include [18–20]:

- National Full-Scale Aerodynamics Complex, NASA, Ames Research Center, Moffett Field, California.
  - Two wind tunnel test sections, powered by a 125,000 hp electric drive system:
    - 40 ft high and 80 ft wide ( $12 \times 24$  m) test section, maximum wind speed of 300 knots.
    - 80 ft high and 120 ft wide ( $24 \times 36$  m) test section, maximum wind speed of 137 knots.
- U.S. Navy, David Taylor Research Center, Carderock, Maryland.
  - High-Speed Towing Basin 2968 ft long, 21 ft wide, and 16 ft deep. Towing carriage can travel at up to 100 knots while measuring drag loads to 8000 lbf and side loads to 2000 lbf.
  - 36 in. variable-pressure water tunnel with 50 knot maximum test speed at pressures between 2 and 60 psia.
  - Anechoic Flow Facility with quiet, low turbulence air flow in 8 ft square by 21 ft long open-jet test section. Flow noise at maximum speed of 200 ft/s is less than that of conversational speech.
- U.S. Army Corps of Engineers, Sausalito, California.
  - San Francisco Bay and Delta Model with slightly more than 1 acre in area, 1:1000 horizontal scale and 1:100 vertical scale, 13,500 gpm of pumping capacity, use of fresh and salt water, and tide simulation.
- NASA, Langley Research Center, Hampton, Virginia.
  - National Transonic Facility (NTF) with cryogenic technology (temperatures as low as  $-300^\circ\text{F}$ ) to reduce gas viscosity, raising Reynolds number by a factor of 6, while halving drive power.

## 7-7 SUMMARY

In this chapter we have:

- ✓ Obtained dimensionless coefficients by nondimensionalizing the governing differential equations of a problem.

- ✓ Stated the Buckingham Pi theorem and used it to determine the independent and dependent dimensionless parameters from the physical parameters of a problem.
- ✓ Defined a number of important dimensionless groups: the Reynolds number, Euler number, cavitation number, Froude number, and Mach number, and discussed their physical significance.

We have also explored some ideas behind modeling: geometric, kinematic, and dynamic similarity, incomplete modeling, and predicting prototype results from model tests.

---

## REFERENCES

1. McNiell, Alexander, R., "How Dinosaurs Ran," *Scientific American*, 264, 4, April 1991, pp. 130–136.
2. Kline, S. J., *Similitude and Approximation Theory*. New York: McGraw-Hill, 1965.
3. Hansen, A. G., *Similarity Analysis of Boundary-Value Problems in Engineering*. Englewood Cliffs, NJ: Prentice-Hall, 1964.
4. Schlichting, H., *Boundary Layer Theory*, 7th ed. New York: McGraw-Hill, 1979.
5. Buckingham, E., "On Physically Similar Systems: Illustrations of the Use of Dimensional Equations," *Physical Review*, 4, 4, 1914, pp. 345–376.
6. Todd, L. H., "Resistance and Propulsion," in *Principles of Naval Architecture*, J. P. Comstock, ed. New York: Society of Naval Architects and Marine Engineers, 1967.
7. "Aerodynamic Flow Visualization Techniques and Procedures." Warrendale, PA: Society of Automotive Engineers, SAE Information Report HS J1566, January 1986.
8. Merzkirch, W., *Flow Visualization*, 2nd ed. New York: Academic Press, 1987.
9. "SAE Wind Tunnel Test Procedure for Trucks and Buses," *Recommended Practice SAE J1252*, Warrendale, PA: Society of Automotive Engineers, 1981.
10. Sedov, L. I., *Similarity and Dimensional Methods in Mechanics*. New York: Academic Press, 1959.
11. Birkhoff, G., *Hydrodynamics—A Study in Logic, Fact, and Similitude*, 2nd ed. Princeton, NJ: Princeton University Press, 1960.
12. Ipsen, D. C., *Units, Dimensions, and Dimensionless Numbers*. New York: McGraw-Hill, 1960.
13. Yalin, M. S., *Theory of Hydraulic Models*. New York: Macmillan, 1971.
14. Pankhurst, R. C., and D. W. Holder, *Wind-Tunnel Technique*. London: Pitman, 1965.
15. Rae, W. H., and A. Pope, *Low-Speed Wind Tunnel Testing*, 2nd ed. New York: Wiley-Interscience, 1984.
16. Pope, A., and K. L. Goin, *High-Speed Wind Tunnel Testing*. New York: Krieger, 1978.
17. Waugh, J. G., and G. W. Stubstad, *Hydroballistics Modeling*. San Diego, CA: U.S. Naval Undersea Center, ca. 1965.
18. Baals, D. W., and W. R. Corliss, *Wind Tunnels of NASA*. Washington, D.C.: National Aeronautics and Space Administration, SP-440, 1981.
19. Vincent, M., "The Naval Ship Research and Development Center." Carderock, MD: Naval Ship Research and Development Center, Report 3039 (Revised), November 1971.
20. Smith, B. E., P. T. Zell, and P. M. Shinoda, "Comparison of Model- and Full-Scale Wind-Tunnel Performance," *Journal of Aircraft*, 27, 3, March 1990, pp. 232–238.



**PROBLEMS**

Many of the Problems in this chapter involve obtaining the  $\Pi$  groups that characterize a problem. The *Excel* workbook used in Example Problem 7.1 is useful for performing the computations involved. To avoid needless duplication, the disk symbol will only be used next to Problems when it has an *additional* benefit (e.g., for graphing).

- 7.1 The propagation speed of small-amplitude surface waves in a region of uniform depth is given by

$$c^2 = \left( \frac{\sigma}{\rho} \frac{2\pi}{\lambda} + \frac{g\lambda}{2\pi} \right) \tanh \frac{2\pi h}{\lambda}$$

where  $h$  is depth of the undisturbed liquid and  $\lambda$  is wavelength. Using  $L$  as a characteristic length and  $V_0$  as a characteristic velocity, obtain the dimensionless groups that characterize the equation.

- 7.2 The slope of the free surface of a steady wave in one-dimensional flow in a shallow liquid layer is described by the equation

$$\frac{\partial h}{\partial x} = -\frac{u}{g} \frac{\partial u}{\partial x}$$

Use a length scale,  $L$ , and a velocity scale,  $V_0$ , to nondimensionalize this equation. Obtain the dimensionless groups that characterize this flow.

- 7.3 One-dimensional unsteady flow in a thin liquid layer is described by the equation

$$\frac{\partial u}{\partial t} + u \frac{\partial u}{\partial x} = -g \frac{\partial h}{\partial x}$$

Use a length scale,  $L$ , and a velocity scale,  $V_0$ , to nondimensionalize this equation. Obtain the dimensionless groups that characterize this flow.

- 7.4 By using order of magnitude analysis, the continuity and Navier-Stokes equations can be simplified to the Prandtl boundary-layer equations. For steady, incompressible, and two-dimensional flow, neglecting gravity, the result is

$$\begin{aligned} \frac{\partial u}{\partial x} + \frac{\partial v}{\partial y} &= 0 \\ u \frac{\partial u}{\partial x} + v \frac{\partial u}{\partial y} &= -\frac{1}{\rho} \frac{\partial p}{\partial x} + \nu \frac{\partial^2 u}{\partial y^2} \end{aligned}$$

Use  $L$  and  $V_0$  as characteristic length and velocity, respectively. Nondimensionalize these equations and identify the similarity parameters that result.

- 7.5 The equation describing motion of fluid in a pipe due to an applied pressure gradient, when the flow starts from rest, is

$$\frac{\partial u}{\partial t} = -\frac{1}{\rho} \frac{\partial p}{\partial x} + \nu \left( \frac{\partial^2 u}{\partial r^2} + \frac{1}{r} \frac{\partial u}{\partial r} \right)$$

Use the average velocity  $\bar{V}$ , pressure drop  $\Delta p$ , pipe length  $L$ , and diameter  $D$  to nondimensionalize this equation. Obtain the dimensionless groups that characterize this flow.

- 7.6 In atmospheric studies the motion of the earth's atmosphere can sometimes be modeled with the equation

$$\frac{D\vec{V}}{Dt} + 2\vec{\Omega} \times \vec{V} = -\frac{1}{\rho} \nabla p$$



where  $\bar{V}$  is the large-scale velocity of the atmosphere across the earth's surface,  $\nabla p$  is the climatic pressure gradient, and  $\bar{\Omega}$  is the earth's angular velocity. What is the meaning of the term  $\bar{\Omega} \times \bar{V}$ ? Use the pressure difference,  $\Delta p$ , and typical length scale,  $L$  (which could, for example, be the magnitude of, and distance between, an atmospheric high and low, respectively), to nondimensionalize this equation. Obtain the dimensionless groups that characterize this flow.


- 7.7 At very low speeds, the drag on an object is independent of fluid density. Thus the drag force,  $F$ , on a small sphere is a function only of speed,  $V$ , fluid viscosity,  $\mu$ , and sphere diameter,  $D$ . Use dimensional analysis to determine how the drag force  $F$  depends on the speed  $V$ .
- 7.8 At relatively high speeds the drag on an object is independent of fluid viscosity. Thus the aerodynamic drag force,  $F$ , on an automobile, is a function only of speed,  $V$ , air density  $\rho$ , and vehicle size, characterized by its frontal area  $A$ . Use dimensional analysis to determine how the drag force  $F$  depends on the speed  $V$ .
- 7.9 Experiments show that the pressure drop for flow through an orifice plate of diameter  $d$  mounted in a length of pipe of diameter  $D$  may be expressed as  $\Delta p = p_1 - p_2 = f(\rho, \mu, \bar{V}, d, D)$ . You are asked to organize some experimental data. Obtain the resulting dimensionless parameters.
- 7.10 The boundary-layer thickness,  $\delta$ , on a smooth flat plate in an incompressible flow without pressure gradients depends on the freestream speed,  $U$ , the fluid density,  $\rho$ , the fluid viscosity,  $\mu$ , and the distance from the leading edge of the plate,  $x$ . Express these variables in dimensionless form.
- 7.11 The wall shear stress,  $\tau_w$ , in a boundary layer depends on distance from the leading edge of the body,  $x$ , the density,  $\rho$ , and viscosity,  $\mu$ , of the fluid, and the freestream speed of the flow,  $U$ . Obtain the dimensionless groups and express the functional relationship among them.
- 7.12 The mean velocity,  $\bar{u}$ , for turbulent flow in a pipe or a boundary layer may be correlated using the wall shear stress,  $\tau_w$ , distance from the wall,  $y$ , and the fluid properties,  $\rho$  and  $\mu$ . Use dimensional analysis to find one dimensionless parameter containing  $\bar{u}$  and one containing  $y$  that are suitable for organizing experimental data. Show that the result may be written

$$\frac{\bar{u}}{u_*} = f\left(\frac{yu_*}{\nu}\right)$$

where  $u_* \equiv (\tau_w/\rho)^{1/2}$  is the *friction velocity*.

- 7.13 The speed,  $V$ , of a free-surface gravity wave in deep water is a function of wavelength,  $\lambda$ , depth,  $D$ , density,  $\rho$ , and acceleration of gravity,  $g$ . Use dimensional analysis to find the functional dependence of  $V$  on the other variables. Express  $V$  in the simplest form possible.
- 7.14 Measurements of the liquid height upstream from an obstruction placed in an open-channel flow can be used to determine volume flow rate. (Such obstructions, designed and calibrated to measure rate of open-channel flow, are called *weirs*.) Assume the volume flow rate,  $Q$ , over a weir is a function of upstream height,  $h$ , gravity,  $g$ , and channel width,  $b$ . Use dimensional analysis to find the functional dependence of  $Q$  on the other variables.
- 7.15 The load-carrying capacity,  $W$ , of a journal bearing is known to depend on its diameter,  $D$ , length,  $l$ , and clearance,  $c$ , in addition to its angular speed,  $\omega$ , and lubricant viscosity,  $\mu$ . Determine the dimensionless parameters that characterize this problem.
- 7.16 Capillary waves are formed on a liquid free surface as a result of surface tension. They have short wavelengths. The speed of a capillary wave depends on surface tension,  $\sigma$ , wavelength,  $\lambda$ , and liquid density,  $\rho$ . Use dimensional analysis to express wave speed as a function of these variables.

- 7.17 The time,  $t$ , for oil to drain out of a viscosity calibration container depends on the fluid viscosity,  $\mu$ , and density,  $\rho$ , the orifice diameter,  $d$ , and gravity,  $g$ . Use dimensional analysis to find the functional dependence of  $t$  on the other variables. Express  $t$  in the simplest possible form.
- 7.18 The power per unit cross-sectional area,  $E$ , transmitted by a sound wave is a function of wave speed,  $V$ , medium density,  $\rho$ , wave amplitude,  $r$ , and wave frequency,  $n$ . Determine, by dimensional analysis, the general form of the expression for  $E$  in terms of the other variables.
- 7.19 The power,  $\mathcal{P}$ , required to drive a fan is believed to depend on fluid density,  $\rho$ , volume flow rate,  $Q$ , impeller diameter,  $D$ , and angular velocity,  $\omega$ . Use dimensional analysis to determine the dependence of  $\mathcal{P}$  on the other variables.
- 7.20 You are asked to find a set of dimensionless parameters to organize data from a laboratory experiment, in which a tank is drained through an orifice from initial liquid level  $h_0$ . The time,  $\tau$ , to drain the tank depends on tank diameter,  $D$ , orifice diameter,  $d$ , acceleration of gravity,  $g$ , liquid density,  $\rho$ , and liquid viscosity,  $\mu$ . How many dimensionless parameters will result? How many repeating variables must be selected to determine the dimensionless parameters? Obtain the  $\Pi$  parameter that contains the viscosity.
- 7.21 In a fluid mechanics laboratory experiment a tank of water, with diameter  $D$ , is drained from initial level  $h_0$ . The smoothly rounded drain hole has diameter  $d$ . Assume the mass flow rate from the tank is a function of  $h$ ,  $D$ ,  $d$ ,  $g$ ,  $\rho$ , and  $\mu$ , where  $g$  is the acceleration of gravity and  $\rho$  and  $\mu$  are fluid properties. Measured data are to be correlated in dimensionless form. Determine the number of dimensionless parameters that will result. Specify the number of repeating parameters that must be selected to determine the dimensionless parameters. Obtain the  $\Pi$  parameter that contains the viscosity.
- 7.22 A continuous belt moving vertically through a bath of viscous liquid drags a layer of liquid, of thickness  $h$ , along with it. The volume flow rate of liquid,  $Q$ , is assumed to depend on  $\mu$ ,  $\rho$ ,  $g$ ,  $h$ , and  $V$ , where  $V$  is the belt speed. Apply dimensional analysis to predict the form of dependence of  $Q$  on the other variables.
- 7.23 Small droplets of liquid are formed when a liquid jet breaks up in spray and fuel injection processes. The resulting droplet diameter,  $d$ , is thought to depend on liquid density, viscosity, and surface tension, as well as jet speed,  $V$ , and diameter,  $D$ . How many dimensionless ratios are required to characterize this process? Determine these ratios.
- 7.24 The diameter,  $d$ , of the dots made by an ink jet printer depends on the ink viscosity  $\mu$ , density  $\rho$ , and surface tension,  $\sigma$ , the nozzle diameter,  $D$ , the distance,  $L$ , of the nozzle from the paper surface, and the ink jet velocity  $V$ . Use dimensional analysis to find the  $\Pi$  parameters that characterize the ink jet's behavior.
- 7.25 The sketch shows an air jet discharging vertically. Experiments show that a ball placed in the jet is suspended in a stable position. The equilibrium height of the ball in the jet is found to depend on  $D$ ,  $d$ ,  $V$ ,  $\rho$ ,  $\mu$ , and  $W$ , where  $W$  is the weight of the ball. Dimensional analysis is suggested to correlate experimental data. Find the  $\Pi$  parameters that characterize this phenomenon.

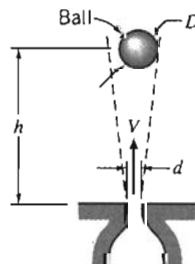


P7.25

- 7.26 The diameter,  $d$ , of bubbles produced by a bubble-making toy depends on the soapy water viscosity  $\mu$ , density  $\rho$ , and surface tension,  $\sigma$ , the ring diameter,  $D$ , and the pressure differential,  $\Delta p$ , generating the bubbles. Use dimensional analysis to find the  $\Pi$  parameters that characterize this phenomenon.
- 7.27 The terminal speed  $V$  of shipping boxes sliding down an incline on a layer of air (injected through numerous pinholes in the incline surface) depends on the box mass,  $m$ , and base area,  $A$ , gravity,  $g$ , the incline angle,  $\theta$ , the air viscosity,  $\mu$ , and the air layer thickness,  $\delta$ . Use dimensional analysis to find the  $\Pi$  parameters that characterize this phenomenon.
- 7.28 The time,  $t$ , for a flywheel, with moment of inertia  $I$ , to reach angular velocity  $\omega$ , from rest, depends on the applied torque,  $T$ , and the following flywheel bearing properties: the oil viscosity  $\mu$ , gap  $\delta$ , diameter  $D$ , and length  $L$ . Use dimensional analysis to find the  $\Pi$  parameters that characterize this phenomenon.
- 7.29 A large tank of liquid under pressure is drained through a smoothly contoured nozzle of area  $A$ . The mass flow rate is thought to depend on nozzle area,  $A$ , liquid density,  $\rho$ , difference in height between the liquid surface and nozzle,  $h$ , tank gage pressure,  $\Delta p$ , and gravitational acceleration,  $g$ . Determine how many independent  $\Pi$  parameters can be formed for this problem. Find the dimensionless parameters. State the functional relationship for the mass flow rate in terms of the dimensionless parameters.
- 7.30 Spin plays an important role in the flight trajectory of golf, Ping-Pong, and tennis balls. Therefore, it is important to know the rate at which spin decreases for a ball in flight. The aerodynamic torque,  $T$ , acting on a ball in flight, is thought to depend on flight speed,  $V$ , air density,  $\rho$ , air viscosity,  $\mu$ , ball diameter,  $D$ , spin rate (angular speed),  $\omega$ , and diameter of the dimples on the ball,  $d$ . Determine the dimensionless parameters that result.
- 7.31 The power loss,  $\mathcal{P}$ , in a journal bearing depends on length,  $l$ , diameter,  $D$ , and clearance,  $c$ , of the bearing, in addition to its angular speed,  $\omega$ . The lubricant viscosity and mean pressure are also important. Obtain the dimensionless parameters that characterize this problem. Determine the functional form of the dependence of  $\mathcal{P}$  on these parameters.
- 7.32 The thrust of a marine propeller is to be measured during "open-water" tests at a variety of angular speeds and forward speeds ("speeds of advance"). The thrust,  $F_T$ , is thought to depend on water density,  $\rho$ , propeller diameter,  $D$ , speed of advance,  $V$ , acceleration of gravity,  $g$ , angular speed,  $\omega$ , pressure in the liquid,  $p$ , and liquid viscosity,  $\mu$ . Develop a set of dimensionless parameters to characterize the performance of the propeller. (One of the resulting parameters,  $gDV^2$ , is known as the *Froude speed of advance*.)
- 7.33 The power,  $\mathcal{P}$ , required to drive a propeller is known to depend on the following variables: freestream speed,  $V$ , propeller diameter,  $D$ , angular speed,  $\omega$ , fluid viscosity,  $\mu$ , fluid density,  $\rho$ , and speed of sound in the fluid,  $c$ . How many dimensionless groups are required to characterize this situation? Obtain these dimensionless groups.
- 7.34 In a fan-assisted convection oven, the heat transfer rate to a roast,  $\dot{Q}$  (energy per unit time), is thought to depend on the specific heat of air,  $c_p$ , temperature difference,  $\Theta$ , a length scale,  $L$ , air density,  $\rho$ , air viscosity,  $\mu$ , and air speed,  $V$ . How many basic dimensions are included in these variables? Determine the number of  $\Pi$  parameters needed to characterize the oven. Evaluate the  $\Pi$  parameters.
- 7.35 The rate  $dT/dt$  at which the temperature  $T$  at the center of a rice kernel falls during a food technology process is critical—too high a value leads to cracking of the kernel, and too low a value makes the process slow and costly. The rate depends on the rice specific heat,  $c$ , thermal conductivity,  $k$ , and size,  $L$ , as well as the cooling air specific heat,  $c_p$ , density,  $\rho$ , viscosity,  $\mu$ , and speed,  $V$ . How many basic dimensions are included in these variables? Determine the  $\Pi$  parameters for this problem.
- 7.36 When a valve is closed suddenly in a pipe with flowing water, a water hammer pressure wave is set up. The very high pressures generated by such waves can damage

the pipe. The maximum pressure,  $p_{\max}$ , generated by water hammer is a function of liquid density,  $\rho$ , initial flow speed,  $U_0$ , and liquid bulk modulus,  $E_v$ . How many dimensionless groups are needed to characterize water hammer? Determine the functional relationship among the variables in terms of the necessary  $\Pi$  groups.

- 7.37 An ocean-going vessel is to be powered by a rotating circular cylinder. Model tests are planned to estimate the power required to rotate the prototype cylinder. A dimensional analysis is needed to scale the power requirements from model test results to the prototype. List the parameters that should be included in the dimensional analysis. Perform a dimensional analysis to identify the important dimensionless groups.
- 7.38 An airship is to operate at 20 m/s in air at standard conditions. A model is constructed to  $\frac{1}{20}$ -scale and tested in a wind tunnel at the same air temperature to determine drag. What criterion should be considered to obtain dynamic similarity? If the model is tested at 75 m/s, what pressure should be used in the wind tunnel? If the model drag force is 250 N, what will be the drag of the prototype?
- 7.39 To match the Reynolds number in an air flow and a water flow using the same size model, which flow will require the higher flow speed? How much higher must it be?
- 7.40 The designers of a large tethered pollution-sampling balloon wish to know what the drag will be on the balloon for the maximum anticipated wind speed of 5 m/s (the air is assumed to be at 20°C). A  $\frac{1}{20}$ -scale model is built for testing in water at 20°C. What water speed is required to model the prototype? At this speed the model drag is measured to be 2 kN. What will be the corresponding drag on the prototype?
- 7.41 Measurements of drag force are made on a model automobile in a towing tank filled with fresh water. The model length scale is  $\frac{1}{5}$  that of the prototype. State the conditions required to ensure dynamic similarity between the model and prototype. Determine the fraction of the prototype speed in air at which the model test should be made in water to ensure dynamically similar conditions. Measurements made at various speeds show that the dimensionless force ratio becomes constant at model test speeds above  $V_m = 4$  m/s. The drag force measured during a test at this speed is  $F_{Dm} = 182$  N. Calculate the drag force expected on the prototype vehicle operating at 90 km/hr in air.
- 7.42 A  $\frac{1}{5}$ -scale model of a torpedo is tested in a wind tunnel to determine the drag force. The prototype operates in water, has 533 mm diameter, and is 6.7 m long. The desired operating speed of the prototype is 28 m/s. To avoid compressibility effects in the wind tunnel, the maximum speed is limited to 110 m/s. However, the pressure in the wind tunnel can be varied while holding the temperature constant at 20°C. At what minimum pressure should the wind tunnel be operated to achieve a dynamically similar test? At dynamically similar test conditions, the drag force on the model is measured as 618 N. Evaluate the drag force expected on the full-scale torpedo.
- 7.43 The drag of an airfoil at zero angle of attack is a function of density, viscosity, and velocity, in addition to a length parameter. A  $\frac{1}{10}$ -scale model of an airfoil was tested in a wind tunnel at a Reynolds number of  $5.5 \times 10^6$ , based on chord length. Test conditions in the wind tunnel air stream were 15°C and 10 atmospheres absolute pressure. The prototype airfoil has a chord length of 2 m, and it is to be flown in air at standard conditions. Determine the speed at which the wind tunnel model was tested, and the corresponding prototype speed.
- 7.44 Consider a smooth sphere, of diameter  $D$ , immersed in a fluid moving with speed  $V$ . The drag force on a 3 m diameter weather balloon in air moving at 1.5 m/s is to be calculated from test data. The test is to be performed in water using a 50 mm diameter model. Under dynamically similar conditions, the model drag force is measured as 3.78 N. Evaluate the model test speed and the drag force expected on the full-scale balloon.
- 7.45 An airplane wing, with chord length of 5 ft and span of 30 ft, is designed to move through standard air at a speed of 230 ft/s. A  $\frac{1}{10}$ -scale model of this wing is to be

- tested in a water tunnel. What speed is necessary in the water tunnel to achieve dynamic similarity? What will be the ratio of forces measured in the model flow to those on the prototype wing?
- 7.46 The fluid dynamic characteristics of a golf ball are to be tested using a model in a wind tunnel. Dependent parameters are the drag force,  $F_D$ , and lift force,  $F_L$ , on the ball. The independent parameters should include angular speed,  $\omega$ , and dimple depth,  $d$ . Determine suitable dimensionless parameters and express the functional dependence among them. A golf pro can hit a ball at  $V = 240$  ft/s and  $\omega = 9000$  rpm. To model these conditions in a wind tunnel with maximum speed of 80 ft/s, what diameter model should be used? How fast must the model rotate? (The diameter of a U.S. golf ball is 1.68 in.)
- 7.47 A model test is performed to determine the flight characteristics of a Frisbee. Dependent parameters are drag force,  $F_D$ , and lift force,  $F_L$ . The independent parameters should include angular speed,  $\omega$ , and roughness height,  $h$ . Determine suitable dimensionless parameters and express the functional dependence among them. The test (using air) on a  $\frac{1}{4}$ -scale model Frisbee is to be geometrically, kinematically, and dynamically similar to the prototype. The prototype values are  $V_p = 20$  ft/s and  $\omega_p = 100$  rpm. What values of  $V_m$  and  $\omega_m$  should be used?
- 7.48 A model hydrofoil is to be tested at 1:20 scale. The test speed is chosen to duplicate the Froude number corresponding to the 60 knot prototype speed. To model cavitation correctly, the cavitation number also must be duplicated. At what ambient pressure must the test be run? Water in the model test basin can be heated to 130°F, compared to 45°F for the prototype.
- 7.49 SAE 10W oil at 80°F flowing in a 1 in. diameter horizontal pipe, at an average speed of 3 ft/s, produces a pressure drop of 65.3 psig over a 500 ft length. Water at 60°F flows through the same pipe under dynamically similar conditions. Using the results of Example Problem 7.2, calculate the average speed of the water flow and the corresponding pressure drop.
- 7.50 A  $\frac{1}{8}$ -scale model of a tractor-trailer rig is tested in a pressurized wind tunnel. The rig width, height, and length are  $W = 0.305$  m,  $H = 0.476$  m, and  $L = 2.48$  m, respectively. At wind speed  $V = 75.0$  m/s, the model drag force is  $F_D = 128$  N. (Air density in the tunnel is  $\rho = 3.23$  kg/m<sup>3</sup>.) Calculate the aerodynamic drag coefficient for the model. Compare the Reynolds numbers for the model test and for the prototype vehicle at 55 mph. Calculate the aerodynamic drag force on the prototype vehicle at a road speed of 55 mph into a headwind of 10 mph.
- 7.51 In some speed ranges, vortices are shed from the rear of bluff cylinders placed across a flow. The vortices alternately leave the top and bottom of the cylinder, as shown, causing an alternating force normal to the freestream velocity. The vortex shedding frequency,  $f$ , is thought to depend on  $\rho$ ,  $d$ ,  $V$ , and  $\mu$ . Use dimensional analysis to develop a functional relationship for  $f$ . Vortex shedding occurs in standard air on two cylinders with a diameter ratio of 2. Determine the velocity ratio for dynamic similarity, and the ratio of vortex shedding frequencies.



P7.51

- 7.52 The aerodynamic behavior of a flying insect is to be investigated in a wind tunnel using a ten-times scale model. If the insect flaps its wings 50 times a second when flying at 1.25 m/s, determine the wind tunnel air speed and wing oscillation frequency required for dynamic similarity. Do you expect that this would be a successful or practical model for generating an easily measurable wing lift? If not, can you

suggest a different fluid (e.g., water, or air at a different pressure and/or temperature) that would produce a better modeling?

- 7.53 A model test of a tractor-trailer rig is performed in a wind tunnel. The drag force,  $F_D$ , is found to depend on frontal area,  $A$ , wind speed,  $V$ , air density,  $\rho$ , and air viscosity,  $\mu$ . The model scale is 1:4; frontal area of the model is  $A = 0.625 \text{ m}^2$ . Obtain a set of dimensionless parameters suitable to characterize the model test results. State the conditions required to obtain dynamic similarity between model and prototype flows. When tested at wind speed  $V = 89.6 \text{ m/s}$ , in standard air, the measured drag force on the model was  $F_D = 2.46 \text{ kN}$ . Assuming dynamic similarity, estimate the aerodynamic drag force on the full-scale vehicle at  $V = 22.4 \text{ m/s}$ . Calculate the power needed to overcome this drag force if there is no wind.
- 7.54 Your favorite professor likes mountain climbing, so there is always a possibility that the professor may fall into a crevasse in some glacier. If that happened today, and the professor was trapped in a slowly moving glacier, you are curious to know whether the professor would reappear at the downstream drop-off of the glacier during this academic year. Assuming ice is a Newtonian fluid with the density of glycerine but a million times as viscous, you decide to build a glycerin model and use dimensional analysis and similarity to estimate when the professor would reappear. Assume the real glacier is 15 m deep and is on a slope that falls 1.5 m in a horizontal distance of 1850 m. Develop the dimensionless parameters and conditions expected to govern dynamic similarity in this problem. If the model professor reappears in the laboratory after 9.6 hours, when should you return to the end of the real glacier to provide help to your favorite professor?
- 7.55 A 1:30 scale model of a submarine is to be tested in a towing tank under two conditions: motion at the free surface and motion far below the free surface. The tests are performed in fresh water. On the surface, the submarine cruises at 20 knots. At what speed should the model be towed to ensure dynamic similarity? Far below the surface, the sub cruises at 0.5 knots. At what speed should the model be towed to ensure dynamic similarity? What must the drag of the model be multiplied by under each condition to give the drag of the full-scale submarine?
- 7.56 An automobile is to travel through standard air at 100 km/hr. To determine the pressure distribution, a  $\frac{1}{5}$ -scale model is to be tested in water. What factors must be considered to ensure kinematic similarity in the tests? Determine the water speed that should be used. What is the corresponding ratio of drag force between prototype and model flows? The lowest pressure coefficient is  $C_p = -1.4$  at the location of the minimum static pressure on the surface. Estimate the minimum tunnel pressure required to avoid cavitation, if the onset of cavitation occurs at a cavitation number of 0.5.
- 7.57 Consider water flow around a circular cylinder, of diameter  $D$  and length  $l$ . In addition to geometry, the drag force is known to depend on liquid speed,  $V$ , density,  $\rho$ , and viscosity,  $\mu$ . Express drag force,  $F_D$ , in dimensionless form as a function of all relevant variables. The static pressure distribution on a circular cylinder, measured in the laboratory, can be expressed in terms of the dimensionless pressure coefficient; the lowest pressure coefficient is  $C_p = -2.4$  at the location of the minimum static pressure on the cylinder surface. Estimate the maximum speed at which a cylinder could be towed in water at atmospheric pressure, without causing cavitation, if the onset of cavitation occurs at a cavitation number of 0.5.
- 7.58 A  $\frac{1}{10}$ -scale model of a tractor-trailer rig is tested in a wind tunnel. The model frontal area is  $A_m = 1.08 \text{ ft}^2$ . When tested at  $V_m = 250 \text{ ft/s}$  in standard air, the measured drag force is  $F_D = 76.3 \text{ lbf}$ . Evaluate the drag coefficient for the model conditions given. Assuming that the drag coefficient is the same for model and prototype, calculate the drag force on a prototype rig at a highway speed of 55 mph. Determine the air speed at which a model should be tested to ensure dynamically similar results if the prototype speed is 55 mph. Is this air speed practical? Why or why not?

- 7.59 It is recommended in [9] that the frontal area of a model be less than 5 percent of the wind tunnel test section area and  $Re = Vw/\nu > 2 \times 10^6$ , where  $w$  is the model width. Further, the model height must be less than 30 percent of the test section height, and the maximum projected width of the model at maximum yaw ( $20^\circ$ ) must be less than 30 percent of the test section width. The maximum air speed should be less than 300 ft/s to avoid compressibility effects. A model of a tractor-trailer rig is to be tested in a wind tunnel that has a test section 1.5 ft high and 2 ft wide. The height, width, and length of the full-scale rig are 13 ft 6 in., 8 ft, and 65 ft, respectively. Evaluate the scale ratio of the largest model that meets the recommended criteria. Assess whether an adequate Reynolds number can be achieved in this test facility.
- 7.60 A circular container, partially filled with water, is rotated about its axis at constant angular speed,  $\omega$ . At any time,  $\tau$ , from the start of rotation, the speed,  $V_\theta$ , at distance  $r$  from the axis of rotation, was found to be a function of  $\tau$ ,  $\omega$ , and the properties of the liquid. Write the dimensionless parameters that characterize this problem. If, in another experiment, honey is rotated in the same cylinder at the same angular speed, determine from your dimensionless parameters whether honey will attain steady motion as quickly as water. Explain why the Reynolds number would not be an important dimensionless parameter in scaling the steady-state motion of liquid in the container.
- 7.61 The power,  $\mathcal{P}$ , required to drive a fan is assumed to depend on fluid density,  $\rho$ , volume flow rate,  $Q$ , impeller diameter,  $D$ , and angular speed,  $\omega$ . If a fan with  $D_1 = 200$  mm delivers  $Q_1 = 0.4$  m<sup>3</sup>/s of air at  $\omega_1 = 2400$  rpm, what volume flow rate could be expected for a geometrically similar fan with  $D_2 = 400$  mm at  $\omega_2 = 1850$  rpm?



- 7.62 Over a certain range of air speeds,  $V$ , the lift,  $F_L$ , produced by a model of a complete aircraft in a wind tunnel depends on the air speed, air density,  $\rho$ , and a characteristic length (the wing base chord length,  $c = 150$  mm). The following experimental data is obtained for air at standard atmospheric conditions:

$V$ (m/s)	10	15	20	25	30	35	40	45	50
$F_L$ (N)	2.2	4.8	8.7	13.3	19.6	26.5	34.5	43.8	54

Plot the lift versus speed curve. By using *Excel* to perform a trendline analysis on this curve, generate and plot data for the lift produced by the prototype, which has a wing base chord length of 5 m, over a speed range of 75 m/s to 250 m/s.

- 7.63 The pressure rise,  $\Delta p$ , of a liquid flowing steadily through a centrifugal pump depends on pump diameter,  $D$ , angular speed of the rotor,  $\omega$ , volume flow rate,  $Q$ , and density,  $\rho$ . The table gives data for the prototype and for a geometrically similar model pump. For conditions corresponding to dynamic similarity between the model and prototype pumps, calculate the missing values in the table.

Variable	Prototype	Model
$\Delta p$		29.3 kPa
$Q$	1.25 m <sup>3</sup> /min	
$\rho$	800 kg/m <sup>3</sup>	999 kg/m <sup>3</sup>
$\omega$	183 rad/s	367 rad/s
$D$	150 mm	50 mm



- 7.64 A centrifugal water pump running at speed  $\omega = 750$  rpm has the following data for flow rate  $Q$  and pressure head  $\Delta p$ :

$Q$ (m <sup>3</sup> /hr)	0	100	150	200	250	300	325	350
$\Delta p$ (kPa)	361	349	328	293	230	145	114	59



The pressure head  $\Delta p$  is a function of flow rate,  $Q$ , and speed,  $\omega$ , and also impeller diameter,  $D$ , and water density,  $\rho$ . Plot the pressure head versus flow rate curve. Find the two  $\Pi$  parameters for this problem, and from the above data plot one against the other. By using *Excel* to perform a trendline analysis on this latter curve, generate and plot data for pressure head versus flow rate for impeller speeds of 500 rpm and 1000 rpm.

- 7.65 An axial-flow pump is required to deliver  $25 \text{ ft}^3/\text{s}$  of water at a head of  $150 \text{ ft} \cdot \text{lbf}/\text{slug}$ . The diameter of the rotor is 1 ft, and it is to be driven at 500 rpm. The prototype is to be modeled on a small test apparatus having a 3 hp, 1000 rpm power supply. For similar performance between the prototype and the model, calculate the head, volume flow rate, and diameter of the model.
- 7.66 Consider again Problem 7.32. Experience shows that for ship-size propellers, viscous effects on scaling are small. Also, when cavitation is not present, the nondimensional parameter containing pressure can be ignored. Assume that torque,  $T$ , and power,  $\mathcal{P}$ , depend on the same parameters as thrust. For conditions under which effects of  $\mu$  and  $p$  can be neglected, derive scaling "laws" for propellers, similar to the pump "laws" of Section 7-6, that relate thrust, torque, and power to the angular speed and diameter of the propeller.
- 7.67 A model propeller 600 mm in diameter is tested in a wind tunnel. Air approaches the propeller at 45 m/s when it rotates at 2000 rpm. The thrust and torque measured under these conditions are 110 N and  $10 \text{ N} \cdot \text{m}$ , respectively. A prototype 10 times as large as the model is to be built. At a dynamically similar operating point, the approach air speed is to be 120 m/s. Calculate the speed, thrust, and torque of the prototype propeller under these conditions, neglecting the effect of viscosity but including density.
- 7.68 Closed-circuit wind tunnels can produce higher speeds than open-circuit tunnels with the same power input because energy is recovered in the diffuser downstream from the test section. The *kinetic energy ratio* is a figure of merit defined as the ratio of the kinetic energy flux in the test section to the drive power. Estimate the kinetic energy ratio for the  $40 \text{ ft} \times 80 \text{ ft}$  wind tunnel at NASA-Ames described on page 299.
- 7.69 A 1:16 model of a bus is tested in a wind tunnel in standard air. The model is 152 mm wide, 200 mm high, and 762 mm long. The measured drag force at 26.5 m/s wind speed is 6.09 N. The longitudinal pressure gradient in the wind tunnel test section is  $-11.8 \text{ N}/\text{m}^2/\text{m}$ . Estimate the correction that should be made to the measured drag force to correct for horizontal buoyancy caused by the pressure gradient in the test section. Calculate the drag coefficient for the model. Evaluate the aerodynamic drag force on the prototype at 100 km/hr on a calm day.
- 7.70 A 1:16 model of a 20 m long truck is tested in a wind tunnel at a speed of 80 m/s, where the axial static pressure gradient is  $-1.2 \text{ mm}$  of water per meter. The frontal area of the prototype is  $10 \text{ m}^2$ . Estimate the horizontal buoyancy correction for this situation. Express the correction as a fraction of the measured  $C_D$ , if  $C_D = 0.85$ .
- 7.71 During a recent stay at a motel, a hanging lamp was observed to oscillate in the air stream from the air conditioning unit. Explain why this might occur.
- 7.72 Frequently one observes a flag on a pole flapping in the wind. Explain why this occurs.
- 7.73 Explore the variation in wave propagation speed given by the equation of Problem 7.1 for a free-surface flow of water. Find the operating depth to minimize the speed of capillary waves (waves with small wavelength, also called ripples). First assume wavelength is much smaller than water depth. Then explore the effect of depth. What depth do you recommend for a water table used to visualize compressible-flow wave phenomena? What is the effect of reducing surface tension by adding a surfactant?

# INTERNAL INCOMPRESSIBLE VISCOUS FLOW

Flows completely bounded by solid surfaces are called internal flows. Thus internal flows include flows through pipes, ducts, nozzles, diffusers, sudden contractions and expansions, valves, and fittings.

Internal flows may be laminar or turbulent. Some laminar flow cases may be solved analytically. In the case of turbulent flow, analytical solutions are not possible, and we must rely heavily on semi-empirical theories and on experimental data. The nature of laminar and turbulent flows was discussed in Section 2-6. For internal flows, the flow regime (laminar or turbulent) is primarily a function of the Reynolds number.

The restriction of incompressible flow limits the consideration of gas flows to those with negligible heat transfer in which the Mach number  $M < 0.3$ ; a value of  $M = 0.3$  in air corresponds to a speed of approximately 100 m/s.

Following a brief introductory section, we consider two cases of fully developed laminar flow of a Newtonian fluid (Part A). In Part B we present experimental data to provide insight into the basic nature of turbulent flows in pipes and ducts and to enable evaluations of the pressure changes that result from incompressible flow in pipes, ducts, and flow systems. The chapter concludes (Part C) with a discussion of flow measurements.

---

### 8-1 INTRODUCTION

As discussed previously in Section 2-6, the pipe flow regime (laminar or turbulent) is determined by the Reynolds number,  $Re = \rho \bar{V} D / \mu$ . One can demonstrate, by the classic Reynolds experiment,<sup>1</sup> the qualitative difference between laminar and turbulent flows. In this experiment water flows from a large reservoir through a clear tube. A thin filament of dye injected at the entrance to the tube allows visual observation of the flow. At low flow rates (low Reynolds numbers) the dye injected into the flow remains in a single filament along the tube; there is little dispersion of dye because the flow is laminar. A laminar flow is one in which the fluid flows in laminae, or layers; there is no macroscopic mixing of adjacent fluid layers.

As the flow rate through the tube is increased, the dye filament eventually becomes unstable and breaks up into a random motion throughout the tube; the line of dye is stretched and twisted into myriad entangled threads, and it quickly disperses throughout the entire flow field. This behavior of turbulent flow is caused by small, high-frequency velocity fluctuations superimposed on the mean motion of a turbulent

<sup>1</sup> This experiment is demonstrated in the NCFMF video *Turbulence*.

flow, as illustrated earlier in Fig. 2.15; the mixing of fluid particles from adjacent layers of fluid results in rapid dispersion of the dye.

Under normal conditions, transition to turbulence occurs at  $Re \approx 2300$  for flow in pipes: For water flow in a 1 in. diameter pipe, this corresponds to an average speed of 0.3 ft/s. With great care to maintain the flow free from disturbances, and with smooth surfaces, experiments have been able to maintain laminar flow in a pipe to a Reynolds number of about 100,000! However, most engineering flow situations are not so carefully controlled, so we will take  $Re \approx 2300$  as our benchmark for transition to turbulence. Transition Reynolds numbers for some other flow situations are given in the Example Problems. Turbulence occurs when the viscous forces in the fluid are unable to damp out random fluctuations in the fluid motion (generated, for example, by roughness of a pipe wall), and the flow becomes chaotic. For example, a high viscosity fluid is able to damp out fluctuations more effectively than a low viscosity fluid and therefore remains laminar even at relatively high flow rates. On the other hand, a high density fluid will generate significant inertia forces due to the random fluctuations in the motion, and this fluid will transition to turbulence at a relatively low flow rate.

Figure 8.1 illustrates laminar flow in the entrance region of a circular pipe. The flow has uniform velocity  $U_0$  at the pipe entrance. Because of the no-slip condition at the wall, we know that the velocity at the wall must be zero along the entire length of the pipe. A boundary layer (Section 2-6) develops along the walls of the channel. The solid surface exerts a retarding shear force on the flow; thus the speed of the fluid in the neighborhood of the surface is reduced. At successive sections along the pipe in this entry region, the effect of the solid surface is felt farther out into the flow.

For incompressible flow, mass conservation requires that, as the speed close to the wall is reduced, the speed in the central frictionless region of the pipe must increase slightly to compensate; for this inviscid central region, then, the pressure (as indicated by the Bernoulli equation) must also drop somewhat. To satisfy conservation of mass for incompressible flow, the average velocity magnitude at any cross section

$$\bar{V} = \frac{1}{A} \int_{\text{Area}} u \, dA$$

must equal  $U_0$ , so

$$\bar{V} = U_0 = \text{constant}$$

Sufficiently far from the pipe entrance, the boundary layer developing on the pipe wall reaches the pipe centerline and the flow becomes entirely viscous. The velocity profile shape then changes slightly after the inviscid core disappears. When the profile shape no longer changes with increasing distance  $x$ , the flow is called *fully developed*. The distance downstream from the entrance to the location at which fully developed

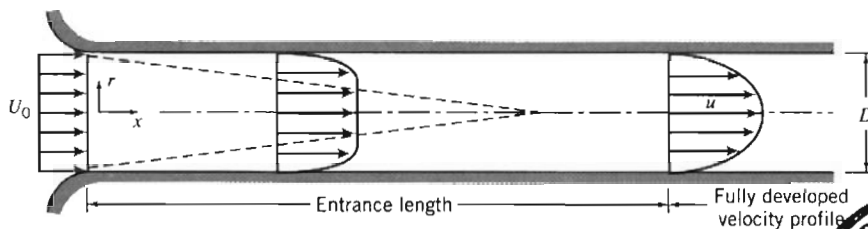


Fig. 8.1 Flow in the entrance region of a pipe.



flow begins is called the *entrance length*. The actual shape of the fully developed velocity profile depends on whether the flow is laminar or turbulent. In Fig. 8.1 the profile is shown qualitatively for a laminar flow. Although the velocity profiles for some fully developed laminar flows can be obtained by simplifying the complete equations of motion from Chapter 5, turbulent flows cannot be so treated.

For laminar flow, the entrance length,  $L$ , is a function of Reynolds number,

$$\frac{L}{D} \approx 0.06 \frac{\rho \bar{V} D}{\mu} \quad (8.1)$$

Laminar flow in a pipe may be expected only for Reynolds numbers less than 2300. Thus the entrance length for laminar pipe flow may be as long as

$$L \approx 0.06 Re D \leq (0.06)(2300) D = 138D$$

or nearly 140 pipe diameters. If the flow is turbulent, enhanced mixing among fluid layers<sup>2</sup> causes more rapid growth of the boundary layer. Experiments show that the mean velocity profile becomes fully developed within 25 to 40 pipe diameters from the entrance. However, the details of the turbulent motion may not be fully developed for 80 or more pipe diameters. Fully developed laminar internal flows are treated in Part A of this chapter. Turbulent flow in pipes and ducts is treated in Part B.

## PART A FULLY DEVELOPED LAMINAR FLOW

In this section we consider a few classic examples of fully developed laminar flows. Our intent is to obtain detailed information about the velocity field because knowledge of the velocity field permits calculation of shear stress, pressure drop, and flow rate.

---

### 8-2 FULLY DEVELOPED LAMINAR FLOW BETWEEN INFINITE PARALLEL PLATES

#### Both Plates Stationary


Fluid in high-pressure hydraulic systems (such as the brake system of an automobile) often leaks through the annular gap between a piston and cylinder. For very small gaps (typically 0.005 mm or less), this flow field may be modeled as flow between infinite parallel plates. To calculate the leakage flow rate, we must first determine the velocity field.

Let us consider the fully developed laminar flow between horizontal infinite parallel plates. The plates are separated by distance  $a$ , as shown in Fig. 8.2. The plates are considered infinite in the  $z$  direction, with no variation of any fluid property in this direction. The flow is also assumed to be steady and incompressible. Before starting our analysis, what do we know about the flow field? For one thing we know that the  $x$  component of velocity must be zero at both the upper and lower plates as a result of the no-slip condition at the wall. The boundary conditions are

$$\begin{aligned} \text{at } y = 0 & \quad u = 0 \\ \text{at } y = a & \quad u = 0 \end{aligned}$$

Since the flow is fully developed, the velocity cannot vary with  $x$  and, hence, depends on  $y$  only, so that  $u = u(y)$ . Furthermore, there is no component of velocity in either the

<sup>2</sup> This mixing is illustrated extremely well in the introductory portion of the NCFMF video *Turbulence*.

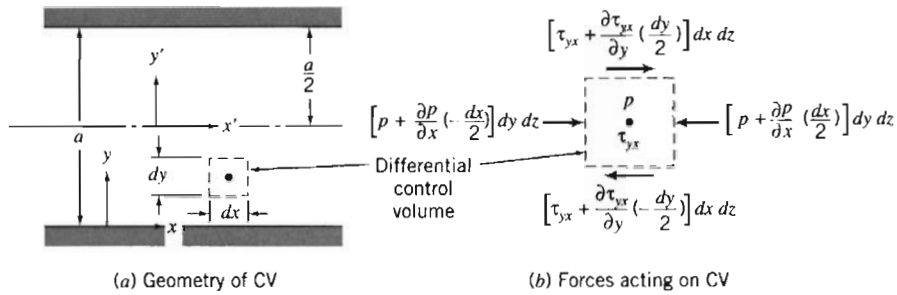

**Fig. 8.2** Control volume for analysis of laminar flow between stationary infinite parallel plates.

$y$  or  $z$  direction ( $v = w = 0$ ). In fact, for fully developed flow only the pressure can and will change (in a manner to be determined from the analysis) in the  $x$  direction.

This is an obvious case for using the Navier-Stokes equations in rectangular coordinates (Eqs. 5.27). Using the above assumptions, these equations can be greatly simplified and then solved using the boundary conditions. In this section we will take a longer route—using a differential control volume—to bring out some important features of the fluid mechanics.

For our analysis we select a differential control volume of size  $dV = dx dy dz$ , and apply the  $x$  component of the momentum equation.

Basic equation:

$$= 0(3) = 0(1)$$

$$F_{S_x} + \cancel{F_{B_x}} = \frac{\partial}{\partial t} \int_{CV} u \rho dV + \int_{CS} u \rho \vec{V} \cdot d\vec{A} \quad (4.18a)$$

- Assumptions: (1) Steady flow (given)  
 (2) Fully developed flow (given)  
 (3)  $F_{B_x} = 0$  (given)

For fully developed flow the velocity is not changing with  $x$ , so the net momentum flux through the control surface is zero. (The momentum flux through the right face of the control surface is equal in magnitude but opposite in sign to the momentum flux through the left face; there is no momentum flux through any of the remaining faces of the control volume.) Since there are no body forces in the  $x$  direction, the momentum equation reduces to

$$F_{S_x} = 0 \quad (8.2)$$

The next step is to sum the forces acting on the control volume in the  $x$  direction. We recognize that normal forces (pressure forces) act on the left and right faces and tangential forces (shear forces) act on the top and bottom faces.

If the pressure at the center of the element is  $p$ , then the pressure force on the left face is

$$dF_L = \left( p - \frac{\partial p}{\partial x} \frac{dx}{2} \right) dy dz$$

and the pressure force on the right face is

$$dF_R = - \left( p + \frac{\partial p}{\partial x} \frac{dx}{2} \right) dy dz$$

If the shear stress at the center of the element is  $\tau_{yx}$ , then the shear force on the bottom face is

$$dF_B = -\left(\tau_{yx} - \frac{d\tau_{yx}}{dy} \frac{dy}{2}\right) dx dz$$

and the shear force on the top face is

$$dF_T = \left(\tau_{yx} + \frac{d\tau_{yx}}{dy} \frac{dy}{2}\right) dx dz$$

Note that in expanding the shear stress,  $\tau_{yx}$ , in a Taylor series about the center of the element, we have used the total derivative rather than a partial derivative. We did this because we recognized that  $\tau_{yx}$  is only a function of  $y$ , since  $u = u(y)$ .

Having formulated the forces acting on each face of the control volume, we substitute them into Eq. 8.2; this equation simplifies to

$$\frac{\partial p}{\partial x} = \frac{d\tau_{yx}}{dy} \quad (8.3)$$

With no change in particle momentum, the net pressure force (which is actually  $-\partial p/\partial x$ ) balances the net friction force (which is actually  $-d\tau_{yx}/dy$ ). Equation 8.3 has an interesting feature: The left side is at most a function of  $x$  only (this follows immediately from writing the  $y$  component of the momentum equation); the right side is at most a function of  $y$  only (because the flow is fully developed). Hence, the only way the equation can be valid for all  $x$  and  $y$  is for each side to in fact be constant:

$$\frac{d\tau_{yx}}{dy} = \frac{\partial p}{\partial x} = \text{constant}$$

Integrating this equation, we obtain

$$\tau_{yx} = \left(\frac{\partial p}{\partial x}\right)y + c_1$$

which indicates that the shear stress varies linearly with  $y$ . We wish to find the velocity distribution. To do so, we need to relate the shear stress to the velocity field. For a Newtonian fluid we can use Eq. 2.10 because we have a one-dimensional flow [or we could have started with the full stress equation (Eq. 5.25a) and simplified],

$$\tau_{yx} = \mu \frac{du}{dy} \quad (2.10)$$

so we get

$$\mu \frac{du}{dy} = \left(\frac{\partial p}{\partial x}\right)y + c_1$$

Integrating again

$$u = \frac{1}{2\mu} \left(\frac{\partial p}{\partial x}\right)y^2 + \frac{c_1}{\mu} y + c_2 \quad (8.4)$$

It is interesting to note that if we had started with the Navier-Stokes equations (Eqs. 5.27) instead of using a differential control volume, after only a few steps (i.e.,

simplifying and integrating twice) we would have obtained Eq. 8.4. To evaluate the constants,  $c_1$  and  $c_2$ , we must apply the boundary conditions. At  $y = 0$ ,  $u = 0$ . Consequently,  $c_2 = 0$ . At  $y = a$ ,  $u = 0$ . Hence

$$0 = \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) a^2 + \frac{c_1}{\mu} a$$

This gives

$$c_1 = -\frac{1}{2} \left( \frac{\partial p}{\partial x} \right) a$$

and hence,

$$u = \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) y^2 - \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) ay = \frac{a^2}{2\mu} \left( \frac{\partial p}{\partial x} \right) \left[ \left( \frac{y}{a} \right)^2 - \left( \frac{y}{a} \right) \right] \quad (8.5)$$

At this point we have the velocity profile. What else can we learn about the flow?

### Shear Stress Distribution

The shear stress distribution is given by

$$\tau_{yx} = \left( \frac{\partial p}{\partial x} \right) y + c_1 = \left( \frac{\partial p}{\partial x} \right) y - \frac{1}{2} \left( \frac{\partial p}{\partial x} \right) a = a \left( \frac{\partial p}{\partial x} \right) \left[ \frac{y}{a} - \frac{1}{2} \right] \quad (8.6a)$$

### Volume Flow Rate

The volume flow rate is given by

$$Q = \int_A \vec{V} \cdot d\vec{A}$$

For a depth  $l$  in the  $z$  direction,

$$Q = \int_0^a ul \, dy \quad \text{or} \quad \frac{Q}{l} = \int_0^a \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) (y^2 - ay) \, dy$$

Thus the volume flow rate per unit depth is given by

$$\frac{Q}{l} = -\frac{1}{12\mu} \left( \frac{\partial p}{\partial x} \right) a^3 \quad (8.6b)$$

### Flow Rate as a Function of Pressure Drop

Since  $\partial p/\partial x$  is constant, the pressure varies linearly with  $x$  and

$$\frac{\partial p}{\partial x} = \frac{p_2 - p_1}{L} = \frac{-\Delta p}{L}$$

Substituting into the expression for volume flow rate gives

$$\frac{Q}{l} = -\frac{1}{12\mu} \left[ \frac{-\Delta p}{L} \right] a^3 = \frac{a^3 \Delta p}{12\mu L} \quad (8.6c)$$

### Average Velocity

The average velocity magnitude,  $\bar{V}$ , is given by

$$\bar{V} = \frac{Q}{A} = -\frac{1}{12\mu} \left( \frac{\partial p}{\partial x} \right) \frac{a^3 l}{la} = -\frac{1}{12\mu} \left( \frac{\partial p}{\partial x} \right) a^2 \quad (8.6d)$$

### Point of Maximum Velocity

To find the point of maximum velocity, we set  $du/dy$  equal to zero and solve for the corresponding  $y$ . From Eq. 8.5

$$\frac{du}{dy} = \frac{a^2}{2\mu} \left( \frac{\partial p}{\partial x} \right) \left[ \frac{2y}{a^2} - \frac{1}{a} \right]$$

Thus,

$$\frac{du}{dy} = 0 \quad \text{at} \quad y = \frac{a}{2}$$

At

$$y = \frac{a}{2}, \quad u = u_{\max} = -\frac{1}{8\mu} \left( \frac{\partial p}{\partial x} \right) a^2 = \frac{3}{2} \bar{V} \quad (8.6e)$$


### Transformation of Coordinates

In deriving the above relations, the origin of coordinates,  $y = 0$ , was taken at the bottom plate. We could just as easily have taken the origin at the centerline of the channel. If we denote the coordinates with origin at the channel centerline as  $x, y'$ , the boundary conditions are  $u = 0$  at  $y' = \pm a/2$ .

To obtain the velocity profile in terms of  $x, y'$ , we substitute  $y = y' + a/2$  into Eq. 8.5. The result is

$$u = \frac{a^2}{2\mu} \left( \frac{\partial p}{\partial x} \right) \left[ \left( \frac{y'}{a} \right)^2 - \frac{1}{4} \right] \quad (8.7)$$

Equation 8.7 shows that the velocity profile for laminar flow between stationary parallel plates is parabolic, as shown in Fig. 8.3.

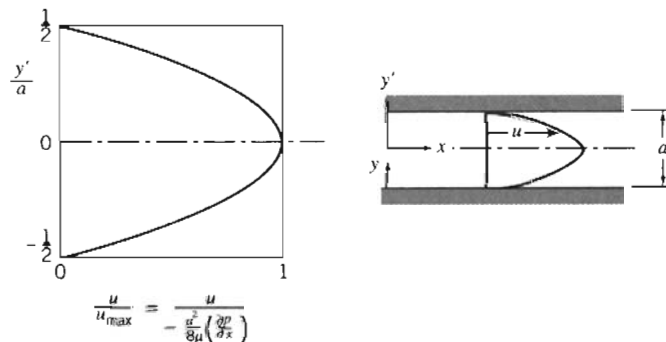

**Fig. 8.3** Dimensionless velocity profile for fully developed laminar flow between infinite parallel plates.



Since all stresses were related to velocity gradients through Newton's law of viscosity, and the additional stresses that arise as a result of turbulent fluctuations have not been accounted for, *all of the results in this section are valid for laminar flow only*. Experiments show that laminar flow between stationary parallel plates becomes turbulent for Reynolds numbers (defined as  $Re = \rho \bar{V} a / \mu$ ) greater than approximately 1400. Consequently, the Reynolds number should be checked after using Eqs. 8.6 to ensure a valid solution.

### EXAMPLE 8.1 Leakage Flow Past a Piston

A hydraulic system operates at a gage pressure of 20 MPa and 55°C. The hydraulic fluid is SAE 10W oil. A control valve consists of a piston 25 mm in diameter, fitted to a cylinder with a mean radial clearance of 0.005 mm. Determine the leakage flow rate if the gage pressure on the low-pressure side of the piston is 1.0 MPa. (The piston is 15 mm long.)

#### EXAMPLE PROBLEM 8.1

**GIVEN:** Flow of hydraulic oil between piston and cylinder, as shown.  
Fluid is SAE 10W oil at 55°C.

**FIND:** Leakage flow rate,  $Q$ .

**SOLUTION:**

The gap width is very small, so the flow may be modeled as flow between parallel plates. Equation 8.6c may be applied.

$$\text{Governing equation: } \frac{Q}{l} = \frac{a^3 \Delta p}{12 \mu L} \quad (8.6c)$$

- Assumptions: (1) Laminar flow.  
(2) Steady flow.  
(3) Incompressible flow.  
(4) Fully developed flow.  
(Note  $L/a = 15/0.005 = 3000!$ )

The plate width,  $l$ , is approximated as  $l = \pi D$ . Thus

$$Q = \frac{\pi D a^3 \Delta p}{12 \mu L}$$

For SAE 10W oil at 55°C,  $\mu = 0.018 \text{ kg}/(\text{m} \cdot \text{s})$ , from Fig. A.2, Appendix A. Thus

$$Q = \frac{\pi}{12} \times 25 \text{ mm} \times (0.005)^3 \text{ mm}^3 \times (20 - 1) 10^6 \frac{\text{N}}{\text{m}^2} \times \frac{\text{m} \cdot \text{s}}{0.018 \text{ kg}} \times \frac{1}{15 \text{ mm}} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2}$$


$$Q = 57.6 \text{ mm}^3/\text{s} \leftarrow \underline{\hspace{15em}} \quad Q$$

To ensure that flow is laminar, we also should check the Reynolds number.

$$\bar{V} = \frac{Q}{A} = \frac{Q}{\pi D a} = \frac{57.6 \text{ mm}^3/\text{s}}{\pi} \times \frac{1}{25 \text{ mm}} \times \frac{1}{0.005 \text{ mm}} \times \frac{1}{10^3 \text{ mm}} = 0.147 \text{ m/s}$$

and

$$Re = \frac{\rho \bar{V} a}{\mu} = \frac{SG \rho_{\text{H}_2\text{O}} \bar{V} a}{\mu}$$

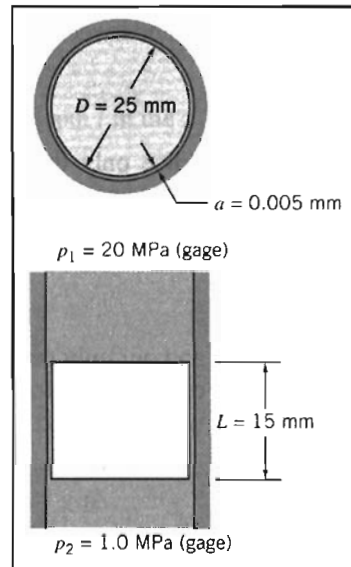

For SAE 10W oil,  $SG = 0.92$ , from Table A.2, Appendix A. Thus

$$Re = 0.92 \times 1000 \frac{\text{kg}}{\text{m}^3} \times 0.147 \frac{\text{m}}{\text{s}} \times 0.005 \text{ mm} \times \frac{\text{m} \cdot \text{s}}{0.018 \text{ kg}} \times \frac{\text{m}}{10^3 \text{ mm}} = 0.0375$$

Thus flow is surely laminar, since  $Re \ll 1400$ .

### Upper Plate Moving with Constant Speed, $U$

A second laminar flow case of practical importance is flow in a journal bearing (a commonly used type of bearing, e.g., the main crankshaft bearings in the engine of an automobile). In such a bearing, an inner cylinder, the journal, rotates inside a stationary member. At light loads, the centers of the two members essentially coincide, and the small clearance gap is symmetric. Since the gap is small, it is reasonable to “unfold” the bearing and to model the flow field as flow between infinite parallel plates.

Let us now consider a case where the upper plate is moving to the right with constant speed,  $U$ , as shown in Fig. 8.4. All we have done in going from a stationary upper plate to a moving upper plate is to change one of the boundary conditions. The boundary conditions for the moving plate case are

$$\begin{aligned} u &= 0 & \text{at} & \quad y = 0 \\ u &= U & \text{at} & \quad y = a \end{aligned}$$

Since only the boundary conditions have changed, there is no need to repeat the entire analysis of the previous section. The analysis leading to Eq. 8.4 is equally valid for the moving plate case. Thus the velocity distribution is given by

$$u = \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) y^2 + \frac{c_1}{\mu} y + c_2 \quad (8.4)$$

and our only task is to evaluate constants  $c_1$  and  $c_2$  by using the appropriate boundary conditions. [Note once again that using the full Navier-Stokes equations (Eqs. 5.27) would have led very quickly to Eq. 8.4.]

At  $y = 0$ ,  $u = 0$ . Consequently,  $c_2 = 0$ .

At  $y = a$ ,  $u = U$ . Consequently,

$$U = \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) a^2 + \frac{c_1}{\mu} a \quad \text{and thus} \quad c_1 = \frac{U\mu}{a} - \frac{1}{2} \left( \frac{\partial p}{\partial x} \right) a$$

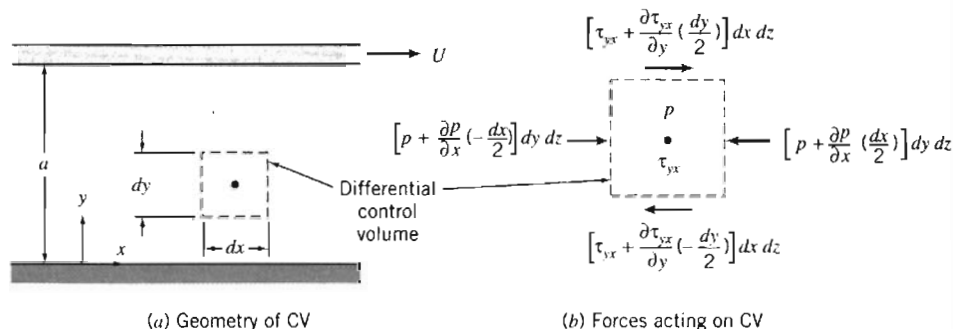


Fig. 8.4 Differential control volume for analysis of laminar flow between infinite parallel plates: upper plate moving with constant speed,  $U$ .

Hence,

$$u = \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) y^2 + \frac{Uy}{a} - \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) ay = \frac{Uy}{a} + \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) (y^2 - ay)$$

$$u = \frac{Uy}{a} + \frac{a^2}{2\mu} \left( \frac{\partial p}{\partial x} \right) \left[ \left( \frac{y}{a} \right)^2 - \left( \frac{y}{a} \right) \right] \quad (8.8)$$

It is reassuring to note that Eq. 8.8 reduces to Eq. 8.5 for a stationary upper plate. From Eq. 8.8, for zero pressure gradient (for  $\partial p/\partial x = 0$ ) the velocity varies linearly with  $y$ . This was the case treated earlier in Chapter 2.

We can obtain additional information about the flow from the velocity distribution of Eq. 8.8.

### Shear Stress Distribution

The shear stress distribution is given by  $\tau_{yx} = \mu(du/dy)$ ,

$$\tau_{yx} = \mu \frac{U}{a} + \frac{a^2}{2} \left( \frac{\partial p}{\partial x} \right) \left[ \frac{2y}{a^2} - \frac{1}{a} \right] = \mu \frac{U}{a} + a \left( \frac{\partial p}{\partial x} \right) \left[ \frac{y}{a} - \frac{1}{2} \right] \quad (8.9a)$$

### Volume Flow Rate

The volume flow rate is given by  $Q = \int_A \vec{V} \cdot d\vec{A}$ . For depth  $l$  in the  $z$  direction

$$Q = \int_0^a ul \, dy \quad \text{or} \quad \frac{Q}{l} = \int_0^a \left[ \frac{Uy}{a} + \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) (y^2 - ay) \right] dy$$

Thus the volume flow rate per unit depth is given by

$$\frac{Q}{l} = \frac{Ua}{2} - \frac{1}{12\mu} \left( \frac{\partial p}{\partial x} \right) a^3 \quad (8.9b)$$

### Average Velocity

The average velocity magnitude,  $\bar{V}$ , is given by

$$\bar{V} = \frac{Q}{A} = l \left[ \frac{Ua}{2} - \frac{1}{12\mu} \left( \frac{\partial p}{\partial x} \right) a^3 \right] / la = \frac{U}{2} - \frac{1}{12\mu} \left( \frac{\partial p}{\partial x} \right) a^2 \quad (8.9c)$$

### Point of Maximum Velocity


To find the point of maximum velocity, we set  $du/dy$  equal to zero and solve for the corresponding  $y$ . From Eq. 8.8

$$\frac{du}{dy} = \frac{U}{a} + \frac{a^2}{2\mu} \left( \frac{\partial p}{\partial x} \right) \left[ \frac{2y}{a^2} - \frac{1}{a} \right] = \frac{U}{a} + \frac{a}{2\mu} \left( \frac{\partial p}{\partial x} \right) \left[ 2 \left( \frac{y}{a} \right) - 1 \right]$$

Thus,

$$\frac{du}{dy} = 0 \quad \text{at} \quad y = \frac{a}{2} - \frac{U/a}{(1/\mu)(\partial p/\partial x)}$$

There is no simple relation between the maximum velocity,  $u_{\max}$ , and the mean velocity,  $\bar{V}$ , for this flow case.

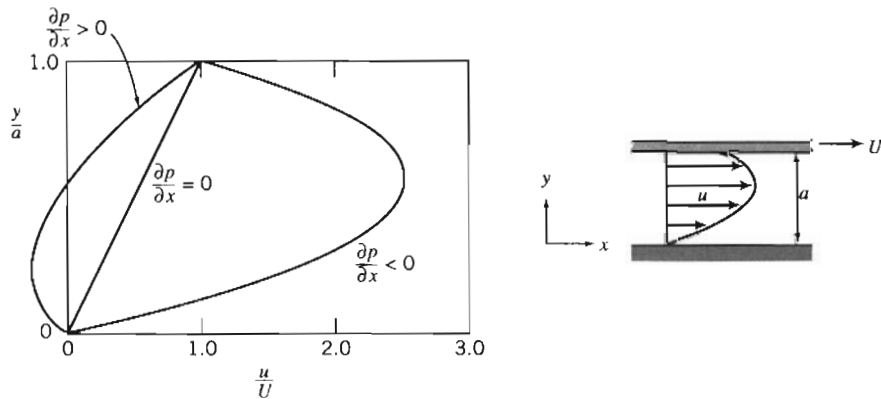

**Fig. 8.5** Dimensionless velocity profile for fully developed laminar flow between infinite parallel plates: upper plate moving with constant speed,  $U$ .

Equation 8.8 suggests that the velocity profile may be treated as a combination of a linear and a parabolic velocity profile; the last term in Eq. 8.8 is identical to that in Eq. 8.5. The result is a family of velocity profiles, depending on  $U$  and  $(1/\mu)(\partial p/\partial x)$ ; three profiles are sketched in Fig. 8.5. (As shown in Fig. 8.5, some reverse flow—flow in the negative  $x$  direction—can occur when  $\partial p/\partial x > 0$ .)

Again, all of the results developed in this section are valid for laminar flow only. Experiments show that this flow becomes turbulent (for  $\partial p/\partial x = 0$ ) at a Reynolds number of approximately 1500, where  $Re = \rho Ua/\mu$  for this flow case. Not much information is available for the case where the pressure gradient is not zero.

### EXAMPLE 8.2 Torque and Power in a Journal Bearing

A crankshaft journal bearing in an automobile engine is lubricated by SAE 30 oil at 210°F. The bearing diameter is 3 in., the diametral clearance is 0.0025 in., and the shaft rotates at 3600 rpm; it is 1.25 in. long. The bearing is under no load, so the clearance is symmetric. Determine the torque required to turn the journal and the power dissipated.



#### EXAMPLE PROBLEM 8.2

**GIVEN:** Journal bearing, as shown. Note that the gap width,  $a$ , is half the diametral clearance. Lubricant is SAE 30 oil at 210°F. Speed is 3600 rpm.

**FIND:** (a) Torque,  $T$ .  
(b) Power dissipated.

**SOLUTION:**

Torque on the journal is caused by viscous shear in the oil film. The gap width is small, so the flow may be modeled as flow between infinite parallel plates:

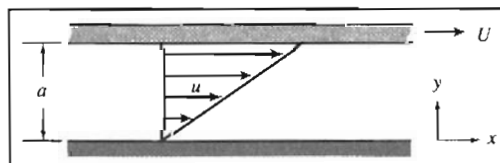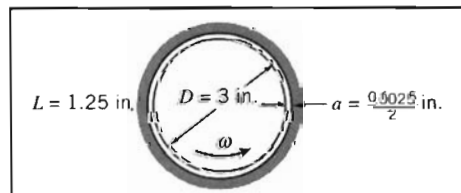

$$\text{Governing equation: } \tau_{yx} = \mu \frac{U}{a} + a \left( \frac{\partial \tau}{\partial x} \right) \left[ \frac{y}{a} - \frac{1}{2} \right] = 0 \quad (8.9a)$$

- Assumptions: (1) Laminar flow.  
 (2) Steady flow.  
 (3) Incompressible flow.  
 (4) Fully developed flow.  
 (5) Infinite width ( $L/a = 1.25/0.00125 = 1000$ , so this is a reasonable assumption).  
 (6)  $\partial p/\partial x = 0$  (flow is symmetric in the actual bearing at no load).

Then

$$\tau_{yx} = \mu \frac{U}{a} = \mu \frac{\omega R}{a} = \mu \frac{\omega D}{2a}$$

For SAE 30 oil at 210°F (99°C),  $\mu = 9.6 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$  ( $2.01 \times 10^{-4} \text{ lbf} \cdot \text{s/ft}^2$ ), from Fig. A.2, Appendix A. Thus,

$$\tau_{yx} = \frac{2.01 \times 10^{-4} \text{ lbf} \cdot \text{s}}{\text{ft}^2} \times \frac{3600 \text{ rev}}{\text{min}} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{3 \text{ in.}}{2} \times \frac{1}{0.00125 \text{ in.}}$$

$$\tau_{yx} = 90.9 \text{ lbf/ft}^2$$

The total shear force is given by the shear stress times the area. It is applied to the journal surface. Therefore, for the torque

$$\begin{aligned} T &= FR = \tau_{yx} \pi DLR = \frac{\pi}{2} \tau_{yx} D^2 L \\ &= \frac{\pi}{2} \times 90.9 \frac{\text{lbf}}{\text{ft}^2} \times (3)^2 \text{ in.}^2 \times \frac{\text{ft}^2}{144 \text{ in.}^2} \times 1.25 \text{ in.} \\ T &= 11.2 \text{ in.} \cdot \text{lbf} \end{aligned}$$

The power dissipated in the bearing is

$$\begin{aligned} \dot{W} &= FU = FR\omega = T\omega \\ &= 11.2 \text{ in.} \cdot \text{lbf} \times \frac{3600 \text{ rev}}{\text{min}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{ft}}{12 \text{ in.}} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lbf}} \\ \dot{W} &= 0.640 \text{ hp} \end{aligned}$$

To ensure laminar flow, check the Reynolds number.

$$Re = \frac{\rho U a}{\mu} = \frac{SG \rho_{\text{H}_2\text{O}} U a}{\mu} = \frac{SG \rho_{\text{H}_2\text{O}} \omega R a}{\mu}$$

Assume, as an approximation, the specific gravity of SAE 30 oil is the same as that of SAE 10W oil. From Table A.2, Appendix A,  $SG = 0.92$ . Thus

$$\begin{aligned} Re &= 0.92 \times \frac{1.94 \text{ slug}}{\text{ft}^3} \times \frac{(3600)2\pi \text{ rad}}{60 \text{ s}} \times 1.5 \text{ in.} \times 0.00125 \text{ in.} \\ &\quad \times \frac{\text{ft}^2}{2.01 \times 10^{-4} \text{ lbf} \cdot \text{s}} \times \frac{\text{ft}^2}{144 \text{ in.}^2} \times \frac{\text{lbf} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}} \end{aligned}$$

$$Re = 43.6$$

Therefore, the flow is laminar, since  $Re \ll 1500$ .



In this problem we approximated the circular-streamline flow in a small annular gap as a linear flow between infinite parallel plates. As we saw in Example Problem 5.10, for the small value of the gap width  $a$  to radius  $R$  ratio  $a/R$  (in this problem  $< 1\%$ ), the error in shear stress is about  $1/2$  of this ratio. Hence, the error introduced is insignificant—much less than the uncertainty associated with obtaining a viscosity for the oil.

We have seen how steady, one-dimensional laminar flows between two plates can be generated by applying a pressure gradient, by moving one plate with respect to the other, or by having both driving mechanisms present. To finish our discussion of this type of flow, Example Problem 8.3 examines a *gravity-driven* steady, one-dimensional laminar flow down a vertical wall. Once again, the direct approach would be to start with the two-dimensional rectangular coordinate form of the Navier-Stokes equations (Eqs. 5.27); instead we will use a differential control volume.

### EXAMPLE 8.3 Laminar Film on a Vertical Wall

A viscous, incompressible, Newtonian liquid flows in steady, laminar flow down a vertical wall. The thickness,  $\delta$ , of the liquid film is constant. Since the liquid free surface is exposed to atmospheric pressure, there is no pressure gradient. For this gravity-driven flow, apply the momentum equation to differential control volume  $dx dy dz$  to derive the velocity distribution in the liquid film.


#### EXAMPLE PROBLEM 8.3

**GIVEN:** Fully developed laminar flow of incompressible, Newtonian liquid down a vertical wall; thickness,  $\delta$ , of the liquid film is constant and  $\partial p/\partial x = 0$ .

**FIND:** Expression for the velocity distribution in the film.

**SOLUTION:**

The  $x$  component of the momentum equation for a control volume is

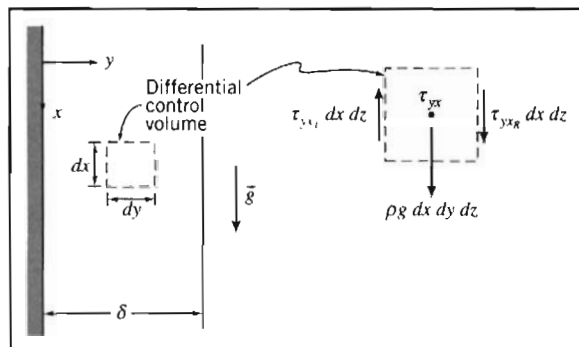

$$F_{S_x} + F_{B_x} = \frac{\partial}{\partial t} \int_{CV} u \rho dV + \int_{CS} u \rho \vec{V} \cdot d\vec{A} \quad (4.18a)$$

Under the conditions given we are dealing with a steady, incompressible, fully developed laminar flow.

For steady flow,  $\frac{\partial}{\partial t} \int_{CV} u \rho dV = 0$

For fully developed flow,  $\int_{CS} u \rho \vec{V} \cdot d\vec{A} = 0$

Thus the momentum equation for the present case reduces to

$$F_{S_x} + F_{B_x} = 0$$

The body force,  $F_{B_x}$ , is given by  $F_{B_x} = \rho g dV = \rho g dx dy dz$ . The only surface forces acting on the differential control volume are shear forces on the vertical surfaces. (Since  $\partial p/\partial x = 0$ , no net pressure forces act on the control volume.)

If the shear stress at the center of the differential control volume is  $\tau_{yx}$ , then,

$$\text{shear stress on left face is } \tau_{yxL} = \left( \tau_{yx} - \frac{d\tau_{yx}}{dy} \frac{dy}{2} \right),$$

and

$$\text{shear stress on right face is } \tau_{yxR} = \left( \tau_{yx} + \frac{d\tau_{yx}}{dy} \frac{dy}{2} \right)$$

The direction of the shear stress vectors is taken consistent with the sign convention of Section 2-3. Thus on the left face, a minus  $y$  surface,  $\tau_{yxL}$  acts upward, and on the right face, a plus  $y$  surface,  $\tau_{yxR}$  acts downward.

The surface forces are obtained by multiplying each shear stress by the area over which it acts. Substituting into  $F_{S_x} + F_{B_x} = 0$ , we obtain

$$-\tau_{yxL} dx dz + \tau_{yxR} dx dz + \rho g dx dy dz = 0$$

or

$$-\left( \tau_{yx} - \frac{d\tau_{yx}}{dy} \frac{dy}{2} \right) dx dz + \left( \tau_{yx} + \frac{d\tau_{yx}}{dy} \frac{dy}{2} \right) dx dz + \rho g dx dy dz = 0$$

Simplifying gives

$$\frac{d\tau_{yx}}{dy} + \rho g = 0 \quad \text{or} \quad \frac{d\tau_{yx}}{dy} = -\rho g$$

Since  $\tau_{yx} = \mu \frac{du}{dy}$  then  $\mu \frac{d^2u}{dy^2} = -\rho g$  and  $\frac{d^2u}{dy^2} = -\frac{\rho g}{\mu}$

Integrating with respect to  $y$  gives

$$\frac{du}{dy} = -\frac{\rho g}{\mu} y + c_1$$

Integrating again, we obtain

$$u = -\frac{\rho g}{\mu} \frac{y^2}{2} + c_1 y + c_2$$

To evaluate constants  $c_1$  and  $c_2$ , we apply appropriate boundary conditions:

- (i)  $y = 0, \quad u = 0$  (no-slip)  
 (ii)  $y = \delta, \quad \frac{du}{dy} = 0$  (neglect air resistance, i.e., assume zero shear stress at free surface)

From boundary condition (i),  $c_2 = 0$

From boundary condition (ii),  $0 = -\frac{\rho g}{\mu} \delta + c_1$  or  $c_1 = \frac{\rho g}{\mu} \delta$

Hence, 
$$u = -\frac{\rho g}{\mu} \frac{y^2}{2} + \frac{\rho g}{\mu} \delta y \quad \text{or} \quad u = \frac{\rho g}{\mu} \delta^2 \left[ \left( \frac{y}{\delta} \right) - \frac{1}{2} \left( \frac{y}{\delta} \right)^2 \right]$$

$u(y)$

Using the velocity profile it can be shown that:

$$\text{the volume flow rate is } Q/l = \frac{\rho g}{3\mu} \delta^3$$

$$\text{the maximum velocity is } U_{\max} = \frac{\rho g}{2\mu} \delta^2$$

$$\text{the average velocity is } \bar{V} = \frac{\rho g}{3\mu} \delta^2$$

Flow in the liquid film is laminar for  $Re = \bar{V}\delta/\nu \leq 1000$  [1].

Notes:

- ✓ This problem is a special case ( $\theta = 90^\circ$ ) of the inclined plate flow analyzed in Example Problem 5.9 that we solved using the Navier-Stokes equations.
- ✓ This problem and Example Problem 5.9 demonstrate that use of the differential control volume approach or the Navier-Stokes equations, leads to the same result.

### 8-3 FULLY DEVELOPED LAMINAR FLOW IN A PIPE

As a final example of fully developed laminar flow, let us consider fully developed laminar flow in a pipe. Here the flow is axisymmetric. Consequently it is most convenient to work in cylindrical coordinates. This is yet another case where we could use the Navier-Stokes equations, this time in cylindrical coordinates (Eqs. B.3). Instead we will again take the longer route—using a differential control volume— to bring out some important features of the fluid mechanics. The development will be very similar to that for parallel plates in the previous section; cylindrical coordinates just make the analysis a little trickier mathematically. Since the flow is axisymmetric, the control volume will be a differential annulus, as shown in Fig. 8.6. The control volume length is  $dx$  and its thickness is  $dr$ .

For a fully developed steady flow, the  $x$  component of the momentum equation (Eq. 4.18a), when applied to the differential control volume, reduces to

$$F_{S_x} = 0$$

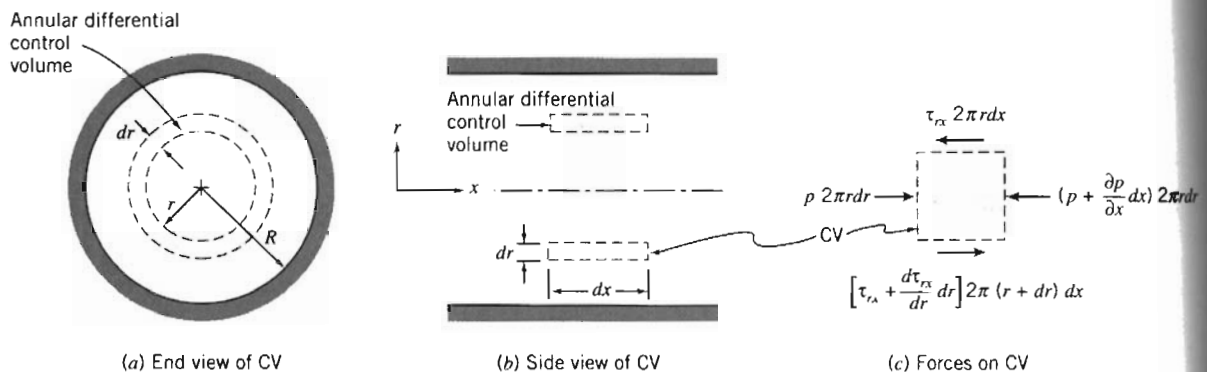


Fig. 8.6 Differential control volume for analysis of fully developed laminar flow in a pipe.



The next step is to sum the forces acting on the control volume in the  $x$  direction. We know that normal forces (pressure forces) act on the left and right ends of the control volume, and that tangential forces (shear forces) act on the inner and outer cylindrical surfaces.

If the pressure at the left face of the control volume is  $p$ , then the pressure force on the left end is

$$dF_L = p2\pi r dr$$

The pressure force on the right end is

$$dF_R = -\left(p + \frac{\partial p}{\partial x} dx\right) 2\pi r dr$$

If the shear stress at the inner surface of the annular control volume is  $\tau_{rx}$ , then the shear force on the inner cylindrical surface is

$$dF_I = -\tau_{rx} 2\pi r dx$$

The shear force on the outer cylindrical surface is

$$dF_O = \left(\tau_{rx} + \frac{d\tau_{rx}}{dr} dr\right) 2\pi(r + dr) dx$$

The sum of the  $x$  components of force acting on the control volume must be zero. This leads to the condition that

$$-\frac{\partial p}{\partial x} 2\pi r dr dx + \tau_{rx} 2\pi dr dx + \frac{d\tau_{rx}}{dr} 2\pi r dr dx = 0$$

Dividing this equation by  $2\pi r dr dx$  and solving for  $\partial p/\partial x$  gives

$$\frac{\partial p}{\partial x} = \frac{\tau_{rx}}{r} + \frac{d\tau_{rx}}{dr} = \frac{1}{r} \frac{d(r\tau_{rx})}{dr}$$

Comparing this to the corresponding equation for parallel plates (Eq. 8.3) shows the mathematical complexity introduced because we have cylindrical coordinates. The left side of the equation is at most a function of  $x$  only (the pressure is uniform at each section); the right side is at most a function of  $r$  only (because the flow is fully developed). Hence, the only way the equation can be valid for all  $x$  and  $r$  is for both sides to in fact be constant:

$$\frac{1}{r} \frac{d(r\tau_{rx})}{dr} = \frac{\partial p}{\partial x} = \text{constant} \quad \text{or} \quad \frac{d(r\tau_{rx})}{dr} = r \frac{\partial p}{\partial x}$$

Integrating this equation, we obtain

$$r\tau_{rx} = \frac{r^2}{2} \left(\frac{\partial p}{\partial x}\right) + c_1$$

or

$$\tau_{rx} = \frac{r}{2} \left(\frac{\partial p}{\partial x}\right) + \frac{c_1}{r} \quad (8.10)$$

Since  $\tau_{rx} = \mu \frac{du}{dr}$ , we have

$$\mu \frac{du}{dr} = \frac{r}{2} \left(\frac{\partial p}{\partial x}\right) + \frac{c_1}{r}$$

and

$$u = \frac{r^2}{4\mu} \left( \frac{\partial p}{\partial x} \right) + \frac{c_1}{\mu} \ln r + c_2 \quad (8.11)$$

We need to evaluate constants  $c_1$  and  $c_2$ . However, we have only the one boundary condition that  $u = 0$  at  $r = R$ . What do we do? Before throwing in the towel, let us look at the solution for the velocity profile given by Eq. 8.11. Although we do not know the velocity at the pipe centerline, we do know from physical considerations that the velocity must be finite at  $r = 0$ . The only way that this can be true is for  $c_1$  to be zero. (We could have also concluded that  $c_1 = 0$  from Eq. 8.10—which would otherwise yield an infinite stress at  $r = 0$ .) Thus, from physical considerations, we conclude that  $c_1 = 0$ , and hence

$$u = \frac{r^2}{4\mu} \left( \frac{\partial p}{\partial x} \right) + c_2$$

The constant,  $c_2$ , is evaluated by using the available boundary condition at the pipe wall: at  $r = R$ ,  $u = 0$ . Consequently,

$$0 = \frac{R^2}{4\mu} \left( \frac{\partial p}{\partial x} \right) + c_2$$

This gives

$$c_2 = -\frac{R^2}{4\mu} \left( \frac{\partial p}{\partial x} \right)$$

and hence

$$u = \frac{r^2}{4\mu} \left( \frac{\partial p}{\partial x} \right) - \frac{R^2}{4\mu} \left( \frac{\partial p}{\partial x} \right) = \frac{1}{4\mu} \left( \frac{\partial p}{\partial x} \right) (r^2 - R^2)$$

or

$$u = -\frac{R^2}{4\mu} \left( \frac{\partial p}{\partial x} \right) \left[ 1 - \left( \frac{r}{R} \right)^2 \right] \quad (8.12)$$

Since we have the velocity profile, we can obtain a number of additional features of the flow.

### Shear Stress Distribution

The shear stress is

$$\tau_{rx} = \mu \frac{du}{dr} = \frac{r}{2} \left( \frac{\partial p}{\partial x} \right) \quad (8.13a)$$

### Volume Flow Rate

The volume flow rate is

$$Q = \int_A \bar{V} \cdot d\bar{A} = \int_0^R u 2\pi r dr = \int_0^R \frac{1}{4\mu} \left( \frac{\partial p}{\partial x} \right) (r^2 - R^2) 2\pi r dr$$

$$Q = -\frac{\pi R^4}{8\mu} \left( \frac{\partial p}{\partial x} \right) \quad (8.13b)$$

### Flow Rate as a Function of Pressure Drop

In fully developed flow, the pressure gradient,  $\partial p/\partial x$ , is constant. Therefore,  $\partial p/\partial x = (p_2 - p_1)/L = -\Delta p/L$ . Substituting into Eq. 8.13b for the volume flow rate gives

$$Q = -\frac{\pi R^4}{8\mu} \left[ \frac{-\Delta p}{L} \right] = \frac{\pi \Delta p R^4}{8\mu L} = \frac{\pi \Delta p D^4}{128\mu L} \quad (8.13c)$$

for laminar flow in a horizontal pipe. Note that  $Q$  is a sensitive function of  $D$ .

### Average Velocity

The average velocity magnitude,  $\bar{V}$ , is given by

$$\bar{V} = \frac{Q}{A} = \frac{Q}{\pi R^2} = -\frac{R^2}{8\mu} \left( \frac{\partial p}{\partial x} \right) \quad (8.13d)$$

### Point of Maximum Velocity

To find the point of maximum velocity, we set  $du/dr$  equal to zero and solve for the corresponding  $r$ . From Eq. 8.12

$$\frac{du}{dr} = \frac{1}{2\mu} \left( \frac{\partial p}{\partial x} \right) r$$

Thus,

$$\frac{du}{dr} = 0 \quad \text{at} \quad r = 0$$

At  $r = 0$ ,

$$u = u_{\max} = U = -\frac{R^2}{4\mu} \left( \frac{\partial p}{\partial x} \right) = 2\bar{V} \quad (8.13e)$$

The velocity profile (Eq. 8.12) may be written in terms of the maximum (centerline) velocity as

$$\frac{u}{U} = 1 - \left( \frac{r}{R} \right)^2 \quad (8.14)$$

The parabolic velocity profile, given by Eq. 8.14 for fully developed laminar pipe flow, was sketched in Fig. 8.1.

## EXAMPLE 8.4 Capillary Viscometer

A simple and accurate viscometer can be made from a length of capillary tubing. If the flow rate and pressure drop are measured, and the tube geometry is known, the viscosity of a Newtonian liquid can be computed from Eq. 8.13c. A test of a certain liquid in a capillary viscometer gave the following data:

Flow rate:	880 mm <sup>3</sup> /s	Tube length:	1 m
Tube diameter:	0.50 mm	Pressure drop:	1.0 MPa

Determine the viscosity of the liquid.

**EXAMPLE PROBLEM 8.4**

**GIVEN:** Flow in a capillary viscometer.  
The flow rate is  $Q = 880 \text{ mm}^3/\text{s}$ .

**FIND:** The fluid viscosity.

**SOLUTION:**

Equation 8.13c may be applied.

Governing equation:

$$Q = \frac{\pi \Delta p D^4}{128 \mu L} \quad (8.13c)$$

- Assumptions: (1) Laminar flow.  
(2) Steady flow.  
(3) Incompressible flow.  
(4) Fully developed flow.  
(5) Horizontal tube.

Then

$$\mu = \frac{\pi \Delta p D^4}{128 L Q} = \frac{\pi}{128} \times 1.0 \times 10^6 \frac{\text{N}}{\text{m}^2} \times (0.50)^4 \text{ mm}^4 \times \frac{\text{s}}{880 \text{ mm}^3} \times \frac{1}{1 \text{ m}} \times \frac{\text{m}}{10^3 \text{ mm}}$$

$$\mu = 1.74 \times 10^{-3} \text{ N} \cdot \text{s}/\text{m}^2 \leftarrow \mu$$

Check the Reynolds number. Assume the fluid density is similar to that of water,  $999 \text{ kg}/\text{m}^3$ . Then

$$\bar{V} = \frac{Q}{A} = \frac{4Q}{\pi D^2} = \frac{4}{\pi} \times \frac{880 \text{ mm}^3/\text{s}}{(0.50)^2 \text{ mm}^2} \times \frac{1}{10^3 \text{ mm}} = 4.48 \text{ m/s}$$


and

$$Re = \frac{\rho \bar{V} D}{\mu} = \frac{999 \text{ kg}}{\text{m}^3} \times \frac{4.48 \text{ m}}{\text{s}} \times \frac{0.50 \text{ mm}}{10^3} \times \frac{\text{m}^2}{1.74 \times 10^{-3} \text{ N} \cdot \text{s}} \times \frac{\text{m}}{10^3 \text{ mm}} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}}$$

$$Re = 1290$$

Consequently, since  $Re < 2300$ , the flow is laminar.

This problem is a little oversimplified. To design a capillary viscometer the entrance length, liquid temperature, and kinetic energy of the flowing liquid would all need to be considered.

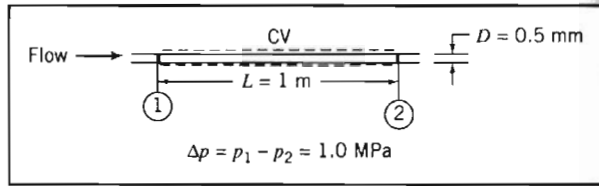**PART B FLOW IN PIPES AND DUCTS**

Our main purpose in this section is to evaluate the pressure changes that result from incompressible flow in pipes, ducts, and flow systems. Assume for a moment frictionless flow. This is unrealistic for duct flow, but is nevertheless useful for seeing what factors affect the pressure. The Bernoulli equation (Eq. 6.8) indicates that the pressure will only change if we have a change in potential or velocity. For example, in a horizontal duct of constant cross-section (constant potential and velocity) the pres-

sure would be constant. If this duct had an increase in area (decrease in velocity), the pressure would increase; for a constant area duct sloping upwards (increasing potential), the pressure would decrease. We now need to see how these trends are modified by the fact that all real duct flows have friction. For example, in a constant area horizontal duct the effect of friction will be to decrease pressure, causing a pressure "loss" compared to the ideal, frictionless flow case. To simplify analysis, the "loss" will be divided into *major losses* (caused by friction in constant-area portions of the system) and *minor losses* (resulting from flow through valves, tees, elbows, and frictional effects in other nonconstant-area portions of the system).

To develop relations for major losses due to friction in constant-area ducts, we shall deal with fully developed flows in which the velocity profile is unvarying in the direction of flow. Our attention will focus on turbulent flows, since the pressure drop for fully developed laminar flow in a pipe can be calculated from the results of Section 8-3. The pressure drop that occurs at the entrance of a pipe will be treated as a minor loss.

Since ducts of circular cross section are most common in engineering applications, the basic analysis will be performed for circular geometries. The results can be extended to other geometries by introducing the hydraulic diameter, which is treated in Section 8-7. (Compressible flow in ducts will be treated in Chapter 12.)

## 8-4 SHEAR STRESS DISTRIBUTION IN FULLY DEVELOPED PIPE FLOW

We consider again fully developed flow in a horizontal circular pipe, except now we may have laminar or turbulent flow. In Section 8-3 we showed that a force balance between friction and pressure forces leads to Eq. 8.10:

$$\tau_{rx} = \frac{r}{2} \left[ \frac{\partial p}{\partial x} \right] + \frac{c_1}{r} \quad (8.10)$$

Because we cannot have infinite stress at the centerline, the constant of integration  $c_1$  must be zero, so


$$\tau_{rx} = \frac{r}{2} \frac{\partial p}{\partial x} \quad (8.15)$$

Equation 8.15 indicates that for both laminar and turbulent fully developed flows the shear stress varies linearly across the pipe, from zero at the centerline to a maximum at the pipe wall. The stress on the wall,  $\tau_w$  (equal and opposite to the stress in the fluid at the wall), is given by

$$\tau_w = -[\tau_{rx}]_{r=R} = -\frac{R}{2} \frac{\partial p}{\partial x} \quad (8.16)$$

For *laminar* flow we used our familiar stress equation  $\tau_{rx} = \mu du/dr$  in Eq. 8.15 to eventually obtain the laminar velocity distribution. This led to a set of usable equations, Eqs. 8.13, for obtaining various flow characteristics; e.g., Eq. 8.13c gave a relationship for the flow rate  $Q$ , a result first obtained experimentally by Jean Louis Poiseuille, a French physician, and independently by Gotthilf H. L. Hagen, a German engineer, in the 1850s [2].

Unfortunately there is no equivalent stress equation for *turbulent* flow, so we cannot replicate the laminar flow analysis to derive turbulent equivalents of Eqs. 8.13. All we can do in this section is indicate some classic semi-empirical results.

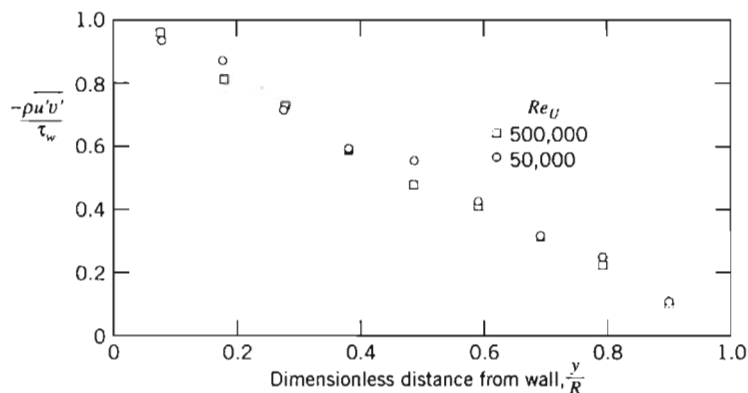

**Fig. 8.7** Turbulent shear stress (Reynolds stress) for fully developed turbulent flow in a pipe. (Data from [5].)

As we discussed in Section 2-6, and illustrated in Fig. 2.15, turbulent flow is represented at each point by the time-mean velocity  $\bar{u}$  plus (for a two-dimensional flow) randomly fluctuating velocity components  $u'$  and  $v'$  in the  $x$  and  $y$  directions (in this context  $y$  is the distance from the pipe wall). These components continuously transfer momentum between adjacent fluid layers, tending to reduce any velocity gradient present. This effect shows up as an apparent stress, first introduced by Osborne Reynolds, and called the *Reynolds stress*.<sup>3</sup> This stress is given by  $-\rho \overline{u'v'}$ , where the overbar indicates a time average. Hence, we find

$$\tau = \tau_{\text{lam}} + \tau_{\text{turb}} = \mu \frac{d\bar{u}}{dy} - \rho \overline{u'v'} \quad (8.17)$$

In Fig. 8.7, experimental measurements of the Reynolds stress for fully developed turbulent pipe flow at two Reynolds numbers are presented;  $Re_U = UD/\nu$ , where  $U$  is the centerline velocity. The turbulent shear stress has been nondimensionalized with the wall shear stress. Since the total shear stress varies linearly across the pipe radius, the data show that turbulent shear is dominant over the center region of the pipe. Close to the wall (not shown in Fig. 8.7), the no-slip condition holds, so not only does the mean velocity  $\bar{u} \rightarrow 0$ , but also the fluctuating velocity components  $u'$  and  $v' \rightarrow 0$  (the wall tends to suppress the fluctuations). Hence, the turbulent stress,  $\tau_{\text{turb}} = -\rho \overline{u'v'} \rightarrow 0$ , as we approach the wall, and is zero at the wall. Since the Reynolds stress is zero at the wall, Eq. 8.17 shows that the wall shear is given by  $\tau_w = \mu(d\bar{u}/dy)_{y=0}$ . In the region very close to the wall, called the *wall layer*, viscous shear is dominant. In the region between the wall layer and the central portion of the pipe both viscous and turbulent shear are important.

## 8-5 TURBULENT VELOCITY PROFILES IN FULLY DEVELOPED PIPE FLOW

Except for flows of very viscous fluids in small diameter ducts, internal flows generally are turbulent. As noted in the discussion of shear stress distribution in fully developed pipe flow (Section 8-4), in turbulent flow there is no universal relationship

<sup>3</sup> The Reynolds stress terms arise from consideration of the complete equations of motion for turbulent flow [4].

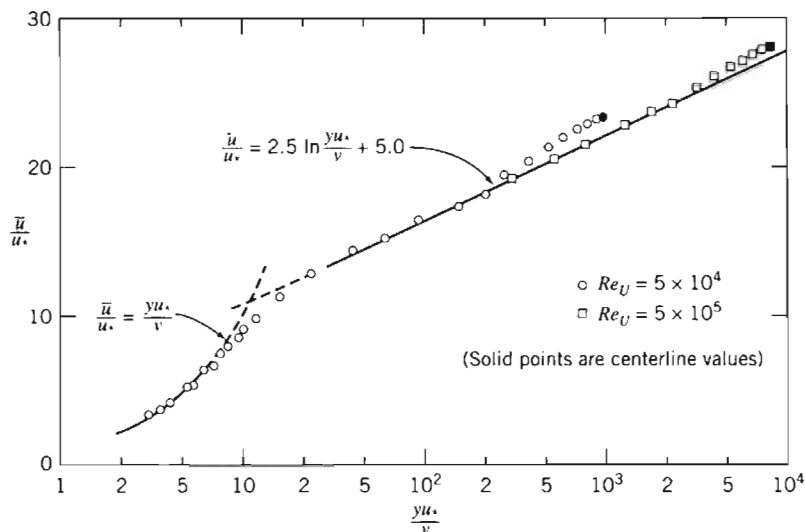


Fig. 8.8 Turbulent velocity profile for fully developed flow in a smooth pipe. (Data from [5].)

between the stress field and the mean velocity field. Thus, for turbulent flows we are forced to rely on experimental data.

Dividing Eq. 8.17 by  $\rho$  gives

$$\frac{\tau}{\rho} = \nu \frac{d\bar{u}}{dy} - \overline{u'v'} \quad (8.18)$$

The term  $\tau/\rho$  arises frequently in the consideration of turbulent flows; it has dimensions of velocity squared. In particular, the quantity  $(\tau_w/\rho)^{1/2}$  is called the *friction velocity* and is denoted by the symbol  $u_*$ .

The velocity profile for fully developed turbulent flow through a smooth pipe is shown in Fig. 8.8. The plot is semilogarithmic;  $\bar{u}/u_*$  is plotted against  $\log(yu_*/\nu)$ . The nondimensional parameters  $\bar{u}/u_*$  and  $yu_*/\nu$  arise from dimensional analysis if one reasons that the velocity in the neighborhood of the wall is determined by the conditions at the wall, the fluid properties, and the distance from the wall. It is simply fortuitous that the dimensionless plot of Fig. 8.8 gives a fairly accurate representation of the velocity profile in a pipe away from the wall; note the small deviations in the region of the pipe centerline.

In the region very close to the wall where viscous shear is dominant, the mean velocity profile follows the linear viscous relation

$$u^+ = \frac{\bar{u}}{u_*} = \frac{yu_*}{\nu} = y^+ \quad (8.19)$$

where  $y$  is distance measured from the wall ( $y = R - r$ ;  $R$  is the pipe radius), and  $\bar{u}$  is mean velocity. Equation 8.19 is valid for  $0 \leq y^+ \leq 5-7$ ; this region is called the *viscous sublayer*.

For values of  $yu_*/\nu > 30$ , the data are quite well represented by the semilogarithmic equation

$$\frac{\bar{u}}{u_*} = 2.5 \ln \frac{yu_*}{\nu} + 5.0 \quad (8.20)$$



In this region both viscous and turbulent shear are important (although turbulent shear is expected to be significantly larger). There is considerable scatter in the numerical constants of Eq. 8.20; the values given represent averages over many experiments [6]. The region between  $y^+ = 5-7$  and  $y^+ = 30$  is referred to as the *transition region*, or *buffer layer*.

If Eq. 8.20 is evaluated at the centerline ( $y = R$  and  $u = U$ ) and the general expression of Eq. 8.20 is subtracted from the equation evaluated at the centerline, we obtain

$$\frac{U - \bar{u}}{u_*} = 2.5 \ln \frac{R}{y} \quad (8.21)$$


where  $U$  is the centerline velocity. Equation 8.21, referred to as the *defect law*, shows that the velocity defect (and hence the general shape of the velocity profile in the neighborhood of the centerline) is a function of the distance ratio only and does not depend on the viscosity of the fluid.

The velocity profile for turbulent flow through a smooth pipe may also be approximated by the empirical *power-law* equation

$$\frac{\bar{u}}{U} = \left(\frac{y}{R}\right)^{1/n} = \left(1 - \frac{r}{R}\right)^{1/n} \quad (8.22)$$


where the exponent,  $n$ , varies with the Reynolds number. In Fig. 8.9 the data of Laufer [5] are shown on a plot of  $\ln y/R$  versus  $\ln \bar{u}/U$ . If the power-law profile were an accurate representation of the data, all data points would fall on a straight line of slope  $n$ . Clearly the data for  $Re_U = 5 \times 10^4$  deviate from the best-fit straight line in the neighborhood of the wall.

The power-law profile is not applicable close to the wall ( $y/R < 0.04$ ). Since the velocity is low in this region, the error in calculating integral quantities such as mass, momentum, and energy fluxes at a section is relatively small. The power-law profile

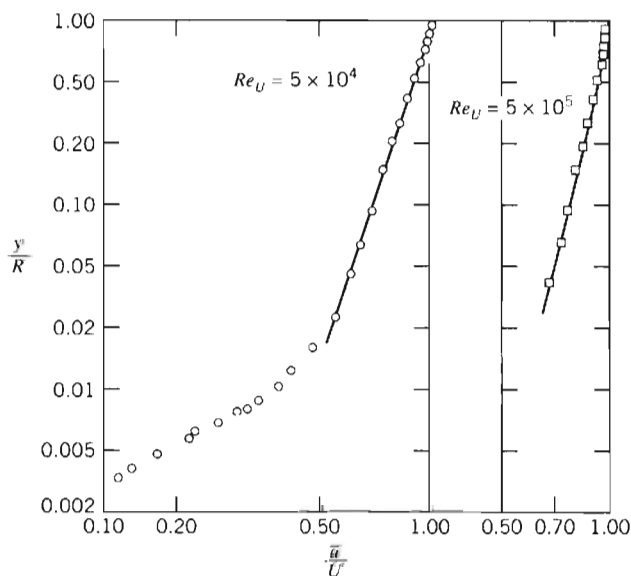

**Fig. 8.9** Power-law velocity profiles for fully developed turbulent flow in a smooth pipe. (Data from [5].)



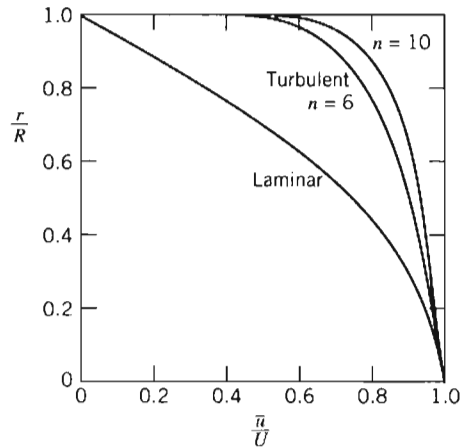

**Fig. 8.10** Velocity profiles for fully developed pipe flow.

gives an infinite velocity gradient at the wall and hence cannot be used in calculations of wall shear stress. Although the profile fits the data close to the centerline, it fails to give zero slope there. Despite these shortcomings, the power-law profile is found to give adequate results in many calculations.

Data from [7] suggest that the variation of power-law exponent  $n$  with Reynolds number (based on pipe diameter,  $D$ , and centerline velocity,  $U$ ) for fully developed flow in smooth pipes is given by

$$n = -1.7 + 1.8 \log Re_U \quad (8.23)$$

for  $Re_U > 2 \times 10^4$ .

Since the average velocity is  $\bar{V} = Q/A$ , and

$$Q = \int_A \bar{V} \cdot d\bar{A}$$

the ratio of the average velocity to the centerline velocity may be calculated for the power-law profiles of Eq. 8.22 assuming the profiles to be valid from wall to centerline. The result is

$$\frac{\bar{V}}{U} = \frac{2n^2}{(n+1)(2n+1)} \quad (8.24)$$

From Eq. 8.24, we see that as  $n$  increases (with increasing Reynolds number) the ratio of the average velocity to the centerline velocity increases; with increasing Reynolds number the velocity profile becomes more blunt or “fuller” (for  $n = 6$ ,  $\bar{V}/U = 0.79$  and for  $n = 10$ ,  $\bar{V}/U = 0.87$ ). As a representative value, 7 often is used for the exponent; this gives rise to the term “a one-seventh power profile” for fully developed turbulent flow.

Velocity profiles for  $n = 6$  and  $n = 10$  are shown in Fig. 8.10. The parabolic profile for fully developed laminar flow is included for comparison. It is clear that the turbulent profile has a much steeper slope near the wall. This is consistent with our discussion leading to Eq. 8.17—the fluctuating velocity components  $u'$  and  $v'$  continuously transfer momentum between adjacent fluid layers, tending to reduce the velocity gradient.

## 8-6 ENERGY CONSIDERATIONS IN PIPE FLOW

Thus far in our discussion of viscous flow, we have derived all results by applying the momentum equation for a control volume. We have, of course, also used the control volume formulation of conservation of mass. Nothing has been said about conservation of energy—the first law of thermodynamics. Additional insight into the nature of the pressure losses in internal viscous flows can be obtained from the energy equation. Consider, for example, steady flow through the piping system, including a reducing elbow, shown in Fig. 8.11. The control volume boundaries are shown as dashed lines. They are normal to the flow at sections ① and ② and coincide with the inside surface of the pipe wall elsewhere.

Basic equation:

$$\dot{Q} - \dot{W}_s - \dot{W}_{\text{shear}} - \dot{W}_{\text{other}} = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho dV + \int_{\text{CS}} (e + pv) \rho \vec{V} \cdot d\vec{A} \quad (4.56)$$


$$e = u + \frac{V^2}{2} + gz$$

- Assumptions: (1)  $\dot{W}_s = 0$ ,  $\dot{W}_{\text{other}} = 0$ .  
 (2)  $\dot{W}_{\text{shear}} = 0$  (although shear stresses are present at the walls of the elbow, the velocities are zero there).  
 (3) Steady flow.  
 (4) Incompressible flow.  
 (5) Internal energy and pressure uniform across sections ① and ②.

Under these assumptions the energy equation reduces to

$$\dot{Q} = \dot{m}(u_2 - u_1) + \dot{m} \left( \frac{p_2}{\rho} - \frac{p_1}{\rho} \right) + \dot{m}g(z_2 - z_1) + \int_{A_2} \frac{V_2^2}{2} \rho V_2 dA_2 - \int_{A_1} \frac{V_1^2}{2} \rho V_1 dA_1 \quad (8.25)$$

Note that we have not assumed the velocity to be uniform at sections ① and ②, since we know that for viscous flows the velocity at a cross-section cannot be uniform. However, it is convenient to introduce the average velocity into Eq. 8.25 so that we can eliminate the integrals. To do this, we define a kinetic energy coefficient.

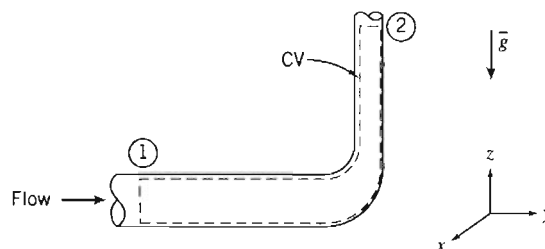

**Fig. 8.11** Control volume and coordinates for energy analysis of flow through a 90° reducing elbow.

### Kinetic Energy Coefficient

The *kinetic energy coefficient*,  $\alpha$ , is defined such that

$$\int_A \frac{V^2}{2} \rho V dA = \alpha \int_A \frac{\bar{V}^2}{2} \rho V dA = \alpha \dot{m} \frac{\bar{V}^2}{2} \quad (8.26a)$$

or

$$\alpha = \frac{\int_A \rho V^3 dA}{\dot{m} \bar{V}^2} \quad (8.26b)$$

We can think of  $\alpha$  as a correction factor that allows us to use the average velocity  $\bar{V}$  to compute the kinetic energy at a cross section. For laminar flow in a pipe (velocity profile given by Eq. 8.12),  $\alpha = 2.0$ .

In turbulent pipe flow, the velocity profile is quite flat, as shown in Fig. 8.10. We can use Eq. 8.26b together with Eqs. 8.22 and 8.24 to determine  $\alpha$ . Substituting the power-law velocity profile of Eq. 8.22 into Eq. 8.26b, we obtain

$$\alpha = \left( \frac{U}{\bar{V}} \right)^3 \frac{2n^2}{(3+n)(3+2n)} \quad (8.27)$$

The value of  $\bar{V}/U$  is given by Eq. 8.24. For  $n = 6$ ,  $\alpha = 1.08$  and for  $n = 10$ ,  $\alpha = 1.03$ . Since the exponent,  $n$ , in the power-law profile is a function of Reynolds number,  $\alpha$  also varies with Reynolds number. Because  $\alpha$  is reasonably close to unity for high Reynolds numbers, and because the change in kinetic energy is usually small compared with the dominant terms in the energy equation, *we shall almost always use the approximation  $\alpha = 1$  in our pipe flow calculations.*

### Head Loss

Using the definition of  $\alpha$ , the energy equation (Eq. 8.25) can be written

$$\dot{Q} = \dot{m}(u_2 - u_1) + \dot{m} \left( \frac{p_2}{\rho} - \frac{p_1}{\rho} \right) + \dot{m}g(z_2 - z_1) + \dot{m} \left( \frac{\alpha_2 \bar{V}_2^2}{2} - \frac{\alpha_1 \bar{V}_1^2}{2} \right)$$

Dividing by the mass flow rate gives

$$\frac{\delta Q}{dm} = u_2 - u_1 + \frac{p_2}{\rho} - \frac{p_1}{\rho} + gz_2 - gz_1 + \frac{\alpha_2 \bar{V}_2^2}{2} - \frac{\alpha_1 \bar{V}_1^2}{2}$$

Rearranging this equation, we write

$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = (u_2 - u_1) - \frac{\delta Q}{dm} \quad (8.28)$$

In Eq. 8.28, the term

$$\left( \frac{p}{\rho} + \alpha \frac{\bar{V}^2}{2} + gz \right)$$

represents the mechanical energy per unit mass at a cross section. The term  $u_2 - u_1 - \delta Q/dm$  is equal to the difference in mechanical energy per unit mass between sections ① and ②. It represents the (irreversible) conversion of mechanical energy at section ① to unwanted thermal energy ( $u_2 - u_1$ ) and loss of energy via heat transfer

( $-\delta Q/dm$ ). We identify this group of terms as the total energy loss per unit mass and designate it by the symbol  $h_{l_r}$ . Then

$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = h_{l_r} \quad (8.29)$$

The dimensions of energy per unit mass  $FL/M$  are equivalent to dimensions of  $L^2/t^2$ . Equation 8.29 is one of the most important and useful equations in fluid mechanics. It enables us to compute the loss of mechanical energy caused by friction between two sections of a pipe. We recall our discussion at the beginning of Part B, where we discussed what would cause the pressure to change. We hypothesized a frictionless flow (i.e., described by the Bernoulli equation, or Eq. 8.29 with  $\alpha = 1$  and  $h_{l_r} = 0$ ) so that the pressure could only change if the velocity changed (if the pipe had a change in diameter), or if the potential changed (if the pipe was not horizontal). Now, with friction, Eq. 8.29 indicates that the pressure will change even for a constant area horizontal pipe—mechanical energy will be continuously changed into thermal energy.

As the empirical science of hydraulics developed during the nineteenth century, it was common practice to express the energy balance in terms of energy per unit *weight* of flowing liquid (e.g., water) rather than energy per unit *mass*, as in Eq. 8.29. When Eq. 8.29 is divided by the acceleration of gravity,  $g$ , we obtain

$$\left( \frac{p_1}{\rho g} + \alpha_1 \frac{\bar{V}_1^2}{2g} + z_1 \right) - \left( \frac{p_2}{\rho g} + \alpha_2 \frac{\bar{V}_2^2}{2g} + z_2 \right) = \frac{h_{l_r}}{g} = H_{l_r} \quad (8.30)$$

Each term in Eq. 8.30 has dimensions of energy per unit weight of flowing fluid. Then the net dimensions of  $H_{l_r} = h_{l_r}/g$  are  $(L^2/t^2)(t^2/L) = L$ , or feet of flowing liquid. Since the term head loss is in common use, we shall use it when referring to either  $H_{l_r}$  (with dimensions of energy per unit weight or length) or  $h_{l_r} = gH_{l_r}$  (with dimensions of energy per unit mass).

Equation 8.29 (or Eq. 8.30) can be used to calculate the pressure difference between any two points in a piping system, provided the head loss,  $h_{l_r}$  (or  $H_{l_r}$ ), can be determined. We shall consider calculation of head loss in the next section.

## 8-7 CALCULATION OF HEAD LOSS

Total head loss,  $h_{l_r}$ , is regarded as the sum of major losses,  $h_l$ , due to frictional effects in fully developed flow in constant-area tubes, and minor losses,  $h_{l_m}$ , resulting from entrances, fittings, area changes, and so on. Consequently, we consider the major and minor losses separately.

### Major Losses: Friction Factor

The energy balance, expressed by Eq. 8.29, can be used to evaluate the major head loss. For fully developed flow through a constant-area pipe,  $h_{l_m} = 0$ , and  $\alpha_1 (\bar{V}_1^2/2) = \alpha_2 (\bar{V}_2^2/2)$ ; Eq. 8.29 reduces to

$$\frac{p_1 - p_2}{\rho} = g(z_2 - z_1) + h_l \quad (8.31)$$

If the pipe is horizontal, then  $z_2 = z_1$  and

$$\frac{p_1 - p_2}{\rho} = \frac{\Delta p}{\rho} = h_f \quad (8.32)$$

Thus the major head loss can be expressed as the pressure loss for fully developed flow through a horizontal pipe of constant area.

Since head loss represents the energy converted by frictional effects from mechanical to thermal energy, head loss for fully developed flow in a constant-area duct depends only on the details of the flow through the duct. Head loss is independent of pipe orientation.

### a. Laminar Flow

In laminar flow, the pressure drop may be computed analytically for fully developed flow in a horizontal pipe. Thus, from Eq. 8.13c,

$$\Delta p = \frac{128\mu L Q}{\pi D^4} = \frac{128\mu L \bar{V}(\pi D^2/4)}{\pi D^4} = 32 \frac{L}{D} \frac{\mu \bar{V}}{D}$$

Substituting in Eq. 8.32 gives

$$h_f = 32 \frac{L}{D} \frac{\mu \bar{V}}{\rho D} = \frac{L}{D} \frac{\bar{V}^2}{2} \left( 64 \frac{\mu}{\rho \bar{V} D} \right) = \left( \frac{64}{Re} \right) \frac{L}{D} \frac{\bar{V}^2}{2} \quad (8.33)$$

(We shall see the reason for writing  $h_f$  in this form shortly.)

### b. Turbulent Flow

In turbulent flow we cannot evaluate the pressure drop analytically; we must resort to experimental results and use dimensional analysis to correlate the experimental data. In fully developed turbulent flow, the pressure drop,  $\Delta p$ , caused by friction in a horizontal constant-area pipe is known to depend on pipe diameter,  $D$ , pipe length,  $L$ , pipe roughness,  $e$ , average flow velocity,  $\bar{V}$ , fluid density,  $\rho$ , and fluid viscosity,  $\mu$ . In functional form

$$\Delta p = \Delta p(D, L, e, \bar{V}, \rho, \mu)$$

We applied dimensional analysis to this problem in Example Problem 7.2. The results were a correlation of the form

$$\frac{\Delta p}{\rho \bar{V}^2} = f \left( \frac{\mu}{\rho \bar{V} D}, \frac{L}{D}, \frac{e}{D} \right)$$

We recognize that  $\mu/\rho \bar{V} D = 1/Re$ , so we could just as well write

$$\frac{\Delta p}{\rho \bar{V}^2} = \phi \left( Re, \frac{L}{D}, \frac{e}{D} \right)$$

Substituting from Eq. 8.32, we see that

$$\frac{h_f}{\bar{V}^2} = \phi \left( Re, \frac{L}{D}, \frac{e}{D} \right)$$

Although dimensional analysis predicts the functional relationship, we must obtain actual values experimentally.

Experiments show that the nondimensional head loss is directly proportional to  $L/D$ . Hence we can write

$$\frac{h_f}{\bar{V}^2} = \frac{L}{D} \phi_1 \left( Re, \frac{e}{D} \right)$$

Since the function,  $\phi_1$ , is still undetermined, it is permissible to introduce a constant into the left side of the above equation. The number  $\frac{1}{2}$  is introduced into the denominator so that the left side of the equation is the ratio of the head loss to the kinetic energy per unit mass of flow. Then

$$\frac{h_l}{\frac{1}{2} \bar{V}^2} = \frac{L}{D} \phi_2 \left( Re, \frac{e}{D} \right)$$

The unknown function,  $\phi_2 (Re, e/D)$ , is defined as the *friction factor*,  $f$ ,

$$f \equiv \phi_2 \left( Re, \frac{e}{D} \right)$$

and

$$h_l = f \frac{L}{D} \frac{\bar{V}^2}{2} \quad (8.34)$$

or

$$H_l = f \frac{L}{D} \frac{\bar{V}^2}{2g} \quad (8.35)$$

The friction factor<sup>4</sup> is determined experimentally. The results, published by L. F. Moody [8], are shown in Fig. 8.12.

To determine head loss for fully developed flow with known conditions, the Reynolds number is evaluated first. Roughness,  $e$ , is obtained from Table 8.1. Then the friction factor,  $f$ , can be read from the appropriate curve in Fig. 8.12, at the known values of  $Re$  and  $e/D$ . Finally, head loss can be found using Eq. 8.34 or Eq. 8.35.

Several features of Fig. 8.12 require some discussion. The friction factor for laminar flow may be obtained by comparing Eqs. 8.33 and 8.34:

$$h_l = \left( \frac{64}{Re} \right) \frac{L}{D} \frac{\bar{V}^2}{2} = f \frac{L}{D} \frac{\bar{V}^2}{2}$$

**Table 8.1** Roughness for Pipes of Common Engineering Materials (Data from [8])

Pipe	Roughness, $e$	
	Feet	Millimeters
Riveted steel	0.003–0.03	0.9–9
Concrete	0.001–0.01	0.3–3
Wood stave	0.0006–0.003	0.2–0.9
Cast iron	0.00085	0.26
Galvanized iron	0.0005	0.15
Asphalted cast iron	0.0004	0.12
Commercial steel or wrought iron	0.00015	0.046
Drawn tubing	0.000005	0.0015

<sup>4</sup> The friction factor defined by Eq. 8.34 is the *Darcy friction factor*. The *Fanning friction factor*, less frequently used, is defined in Problem 8.83.

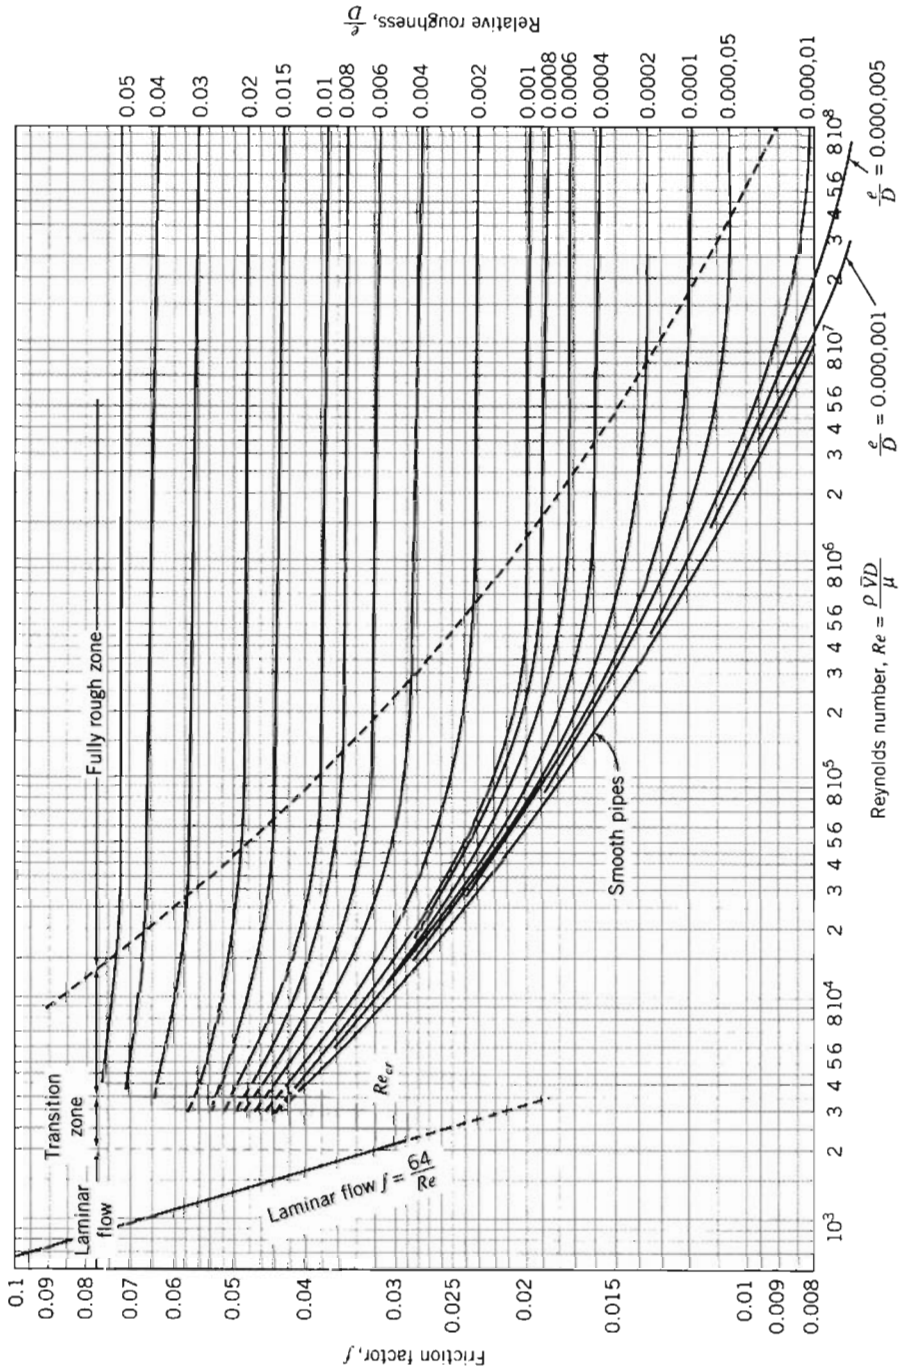


Fig. 8.12 Friction factor for fully developed flow in circular pipes. (Data from [8], used by permission.)

Consequently, for laminar flow

$$f_{\text{laminar}} = \frac{64}{Re} \quad (8.36)$$

Thus, in laminar flow, the friction factor is a function of Reynolds number only; it is independent of roughness. Although we took no notice of roughness in deriving Eq. 8.33, experimental results verify that the friction factor is a function only of Reynolds number in laminar flow.

The Reynolds number in a pipe may be changed most easily by varying the average flow velocity. If the flow in a pipe is originally laminar, increasing the velocity until the critical Reynolds number is reached causes transition to occur; the laminar flow gives way to turbulent flow. The effect of transition on the velocity profile was discussed in Section 8-5. Figure 8.10 shows that the velocity gradient at the tube wall is much larger for turbulent flow than for laminar flow. This change in velocity profile causes the wall shear stress to increase sharply, with the same effect on the friction factor.

As the Reynolds number is increased above the transition value, the velocity profile continues to become fuller, as noted in Section 8-5. For values of relative roughness  $e/D \leq 0.001$ , the friction factor at first tends to follow the smooth pipe curve, along which friction factor is a function of Reynolds number only. However, as the Reynolds number increases, the velocity profile becomes still fuller. The size of the thin viscous sublayer near the tube wall decreases. As roughness elements begin to poke through this layer, the effect of roughness becomes important, and the friction factor becomes a function of both the Reynolds number *and* the relative roughness.

At very large Reynolds number, most of the roughness elements on the tube wall protrude through the viscous sublayer; the drag and, hence, the pressure loss, depend only on the size of the roughness elements. This is termed the “fully rough” flow regime; the friction factor depends only on  $e/D$  in this regime.

For values of relative roughness  $e/D \geq 0.001$ , as the Reynolds number is increased above the transition value, the friction factor is greater than the smooth pipe value. As was the case for lower values of  $e/D$ , the value of Reynolds number at which the flow regime becomes fully rough decreases with increasing relative roughness.

To summarize the preceding discussion, we see that as Reynolds number is increased, the friction factor decreases as long as the flow remains laminar. At transition,  $f$  increases sharply. In the turbulent flow regime, the friction factor decreases gradually and finally levels out at a constant value for large Reynolds number.

Bear in mind that the actual loss of energy is  $h_f$ , (Eq. 8.34), which is proportional to  $f$  and  $\bar{V}^2$ . Hence, for laminar flow  $h_f \propto \bar{V}$  (because  $f = 64/Re$ , and  $Re \propto \bar{V}$ ); for the transition region there is a sudden increase in  $h_f$ ; for the fully rough zone  $h_f \propto \bar{V}^2$  (because  $f \approx \text{const.}$ ), and for the rest of the turbulent region  $h_f$  increases at a rate somewhere between  $\bar{V}$  and  $\bar{V}^2$ . We conclude that the head loss *always* increases with flow rate, and more rapidly when the flow is turbulent.

To avoid having to use a graphical method for obtaining  $f$  for turbulent flows, various mathematical expressions have been fitted to the data. The most widely used formula for friction factor is from Colebrook [9],

$$\frac{1}{f^{0.5}} = -2.0 \log \left( \frac{e/D}{3.7} + \frac{2.51}{Re f^{0.5}} \right) \quad (8.37)$$



Equation 8.37 is implicit in  $f$ , but these days most scientific calculators have an equation-solving feature that can be easily used to find  $f$  for a given roughness ratio  $e/D$  and Reynolds number  $Re$  (and some calculators have the Colebrook equation itself built in!). Certainly a spreadsheet such as *Excel*, or other mathematical computer applications, can also be used. Even without using these automated approaches Eq. 8.37 is not difficult to solve for  $f$ —all we need to do is iterate [the expression is very stable, so almost any guess value (e.g., 0.1, 1, 10) will converge after a few iterations]. Miller [10] suggests that a single iteration will produce a result within 1 percent if the initial estimate is calculated from [11]

$$f_0 = 0.25 \left[ \log \left( \frac{e/D}{3.7} + \frac{5.74}{Re^{0.9}} \right) \right]^{-2}$$

For turbulent flow in smooth pipes, the Blasius correlation, valid for  $Re \leq 10^5$ , is

$$f = \frac{0.316}{Re^{0.25}} \quad (8.38)$$

When this relation is combined with the expression for wall shear stress (Eq. 8.16), the expression for head loss (Eq. 8.32), and the definition of friction factor (Eq. 8.34), a useful expression for the wall shear stress is obtained as

$$\tau_w = 0.0332 \rho \bar{V}^2 \left( \frac{\nu}{R\bar{V}} \right)^{0.25} \quad (8.39)$$

This equation will be used later in our study of turbulent boundary-layer flow over a flat plate (Chapter 9).

All of the  $e$  values given in Table 8.1 are for new pipes, in relatively good condition. Over long periods of service, corrosion takes place and, particularly in hard water areas, lime deposits and rust scale form on pipe walls. Corrosion can weaken pipes, eventually leading to failure. Deposit formation increases wall roughness appreciably, and also decreases the effective diameter. These factors combine to cause  $e/D$  to increase by factors of 5 to 10 for old pipes (see Problem 10.62). An example is shown in Fig. 8.13.

Curves presented in Fig. 8.12 represent average values for data obtained from numerous experiments. The curves should be considered accurate within approximately  $\pm 10$  percent, which is sufficient for many engineering analyses. If more accuracy is needed, actual test data should be used.


### Minor Losses

The flow in a piping system may be required to pass through a variety of fittings, bends, or abrupt changes in area. Additional head losses are encountered, primarily as a result of flow separation. (Energy eventually is dissipated by violent mixing in the separated zones.) These losses will be minor (hence the term *minor losses*) if the piping system includes long lengths of constant-area pipe. Depending on the device, minor losses traditionally are computed in one of two ways, either

$$h_{l,m} = K \frac{\bar{V}^2}{2} \quad (8.40a)$$

where the *loss coefficient*,  $K$ , must be determined experimentally for each situation, or



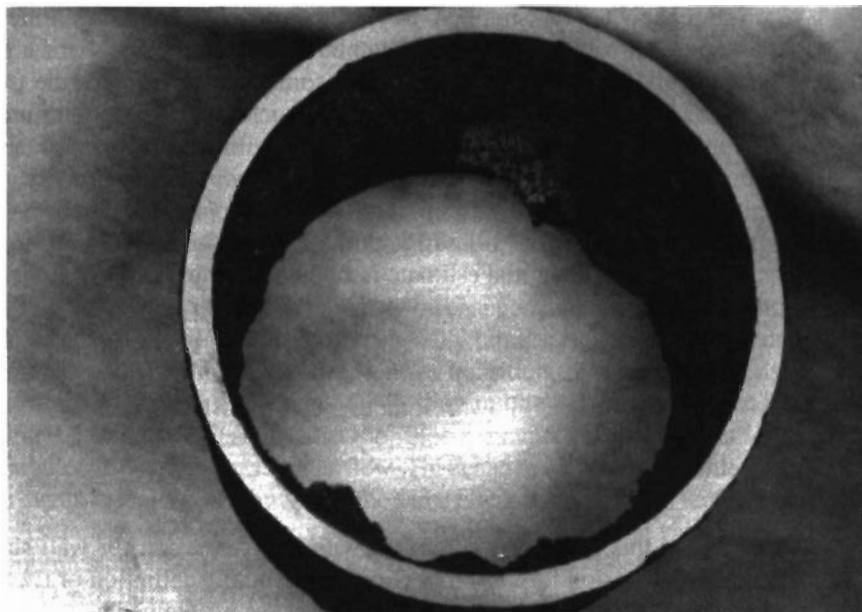

**Fig. 8.13** Pipe section removed after 40 years of service as a water line, showing formation of scale. (Photo courtesy of Alan T. McDonald.)

$$h_{l_m} = f \frac{L_e}{D} \frac{\bar{V}^2}{2} \quad (8.40b)$$

where  $L_e$  is an *equivalent length* of straight pipe.

For flow through pipe bends and fittings, the loss coefficient,  $K$ , is found to vary with pipe size (diameter) in much the same manner as the friction factor,  $f$ , for flow through a straight pipe. Consequently, the equivalent length,  $L_e/D$ , tends toward a constant for different sizes of a given type of fitting.




Experimental data for minor losses are plentiful, but they are scattered among a variety of sources. Different sources may give different values for the same flow configuration. The data presented here should be considered as representative for some commonly encountered situations; in each case the source of the data is identified.

#### a. Inlets and Exits

A poorly designed inlet to a pipe can cause appreciable head loss. If the inlet has sharp corners, flow separation occurs at the corners, and a *vena contracta* is formed. The fluid must accelerate locally to pass through the reduced flow area at the vena contracta. Losses in mechanical energy result from the unconfined mixing as the flow stream decelerates again to fill the pipe. Three basic inlet geometries are shown in Table 8.2. From the table it is clear that the loss coefficient is reduced significantly when the inlet is rounded even slightly. For a well-rounded inlet ( $r/D \geq 0.15$ ) the entrance loss coefficient is almost negligible. Example Problem 8.9 illustrates a procedure for experimentally determining the loss coefficient for a pipe inlet.

The kinetic energy per unit mass,  $\alpha \bar{V}^2/2$ , is completely dissipated by mixing when flow discharges from a duct into a large reservoir or plenum chamber. The situation corresponds to flow through an abrupt expansion with  $AR = 0$  (Fig. 8.14). The minor loss coefficient thus equals  $\alpha$ . No improvement in minor loss coefficient for an

**Table 8.2** Minor Loss Coefficients for Pipe Entrances (Data from [12].)

Entrance Type	Minor Loss Coefficient, $K^a$								
Reentrant 	0.78								
Square-edged 	0.5								
Rounded 	<table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td><math>r/D</math></td> <td>0.02</td> <td>0.06</td> <td><math>\geq 0.15</math></td> </tr> <tr> <td><math>K</math></td> <td>0.28</td> <td>0.15</td> <td>0.04</td> </tr> </table>	$r/D$	0.02	0.06	$\geq 0.15$	$K$	0.28	0.15	0.04
$r/D$	0.02	0.06	$\geq 0.15$						
$K$	0.28	0.15	0.04						

<sup>a</sup> Based on  $h_{l_m} = K(\bar{V}^2/2)$ , where  $\bar{V}$  is the mean velocity in the pipe.

exit is possible; however, addition of a diffuser can reduce  $\bar{V}^2/2$  and therefore  $h_{l_m}$  considerably (see Example Problem 8.10).

### b. Enlargements and Contractions


Minor loss coefficients for sudden expansions and contractions in circular ducts are given in Fig. 8.14. Note that both loss coefficients are based on the larger  $\bar{V}^2/2$ . Thus losses for a sudden expansion are based on  $\bar{V}_1^2/2$ , and those for a contraction are based on  $\bar{V}_2^2/2$ .

Losses caused by area change can be reduced somewhat by installing a nozzle or diffuser between the two sections of straight pipe. Data for nozzles are given in Table 8.3.

Losses in diffusers depend on a number of geometric and flow variables. Diffuser data most commonly are presented in terms of a pressure recovery coefficient,  $C_p$ , defined as the ratio of static pressure rise to inlet dynamic pressure,


$$C_p \equiv \frac{p_2 - p_1}{\frac{1}{2} \rho \bar{V}_1^2} \quad (8.41)$$

This indicates what fraction of the inlet kinetic energy shows up as a pressure rise. It is not difficult to show (using the Bernoulli and continuity equations) that the

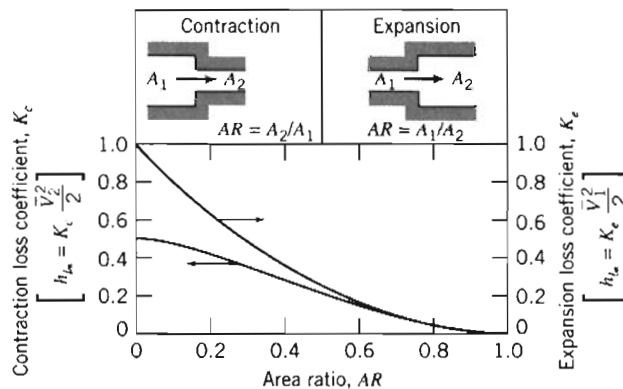

**Fig. 8.14** Loss coefficients for flow through sudden area changes. (Data from [1].)

**Table 8.3** Loss Coefficients ( $K$ ) for Gradual Contractions: Round and Rectangular Ducts (Data from [13].)

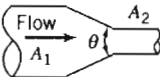
	Included Angle, $\theta$ , Degrees							
	$A_2/A_1$	10	15–40	50–60	90	120	150	180
	0.50	0.05	0.05	0.06	0.12	0.18	0.24	0.26
	0.25	0.05	0.04	0.07	0.17	0.27	0.35	0.41
	0.10	0.05	0.05	0.08	0.19	0.29	0.37	0.43

Note: Coefficients are based on  $h_{l_m} = K(\bar{V}_2^2/2)$ .

ideal (frictionless) pressure recovery coefficient is given by

$$C_{p_i} = 1 - \frac{1}{AR^2} \quad (8.42)$$

where  $AR$  is the area ratio. Hence, the ideal pressure recovery coefficient is a function only of the area ratio. In reality a diffuser typically has turbulent flow, and the static pressure rise in the direction of flow may cause flow separation from the walls if the diffuser is poorly designed; flow pulsations can even occur. For these reasons the actual  $C_p$  will be somewhat less than indicated by Eq. 8.42. For example, data for conical diffusers with fully developed turbulent pipe flow at the inlet are presented in Fig. 8.15 as a function of geometry. Note that more tapered diffusers (small divergence angle  $\phi$  or large dimensionless length  $N/R_1$ ) are more likely to approach the ideal constant value for  $C_p$ . As we make the cone shorter, for a given fixed area ratio we start to see a drop in  $C_p$ —we can consider the cone length at which this starts to happen the optimum length (it is the shortest length for which we obtain the maximum

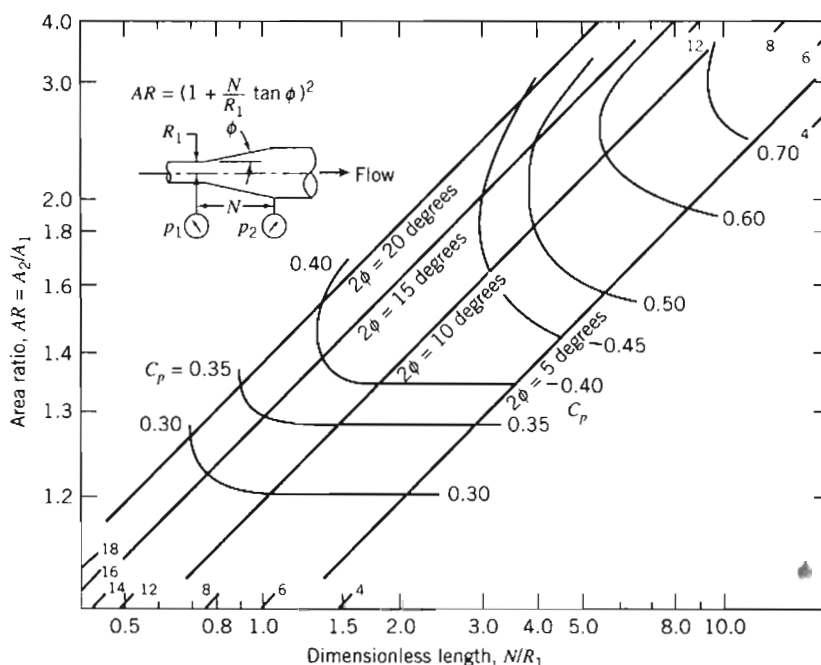

**Fig. 8.15** Pressure recovery for conical diffusers with fully developed turbulent pipe flow at inlet. (Data from [14].)

coefficient for a given area ratio). We can relate  $C_p$  to the head loss. If gravity is neglected, and  $\alpha_1 = \alpha_2 = 1.0$ , Eq. 8.29 reduces to

$$\left[ \frac{p_1}{\rho} + \frac{\bar{V}_1^2}{2} \right] - \left[ \frac{p_2}{\rho} + \frac{\bar{V}_2^2}{2} \right] = h_{l_T} = h_{l_m}$$

Thus,

$$h_{l_m} = \frac{\bar{V}_1^2}{2} - \frac{\bar{V}_2^2}{2} - \frac{p_2 - p_1}{\rho}$$

$$h_{l_m} = \frac{\bar{V}_1^2}{2} \left[ \left( 1 - \frac{\bar{V}_2^2}{\bar{V}_1^2} \right) - \frac{p_2 - p_1}{\frac{1}{2}\rho\bar{V}_1^2} \right] = \frac{\bar{V}_1^2}{2} \left[ \left( 1 - \frac{\bar{V}_2^2}{\bar{V}_1^2} \right) - C_p \right]$$

From continuity,  $A_1\bar{V}_1 = A_2\bar{V}_2$ , so

$$h_{l_m} = \frac{\bar{V}_1^2}{2} \left[ 1 - \left( \frac{A_1}{A_2} \right)^2 - C_p \right]$$

or

$$h_{l_m} = \frac{\bar{V}_1^2}{2} \left[ \left( 1 - \frac{1}{(AR)^2} \right) - C_p \right] \quad (8.43)$$

The frictionless result (Eq. 8.42) is obtained from Eq. 8.43 if  $h_{l_m} = 0$ . We can combine Eqs. 8.42 and 8.43 to obtain an expression for the head loss in terms of the actual and ideal  $C_p$  values:

$$h_{l_m} = (C_{p_i} - C_p) \frac{\bar{V}_1^2}{2} \quad (8.44)$$

Performance maps for plane wall and annular diffusers [15] and for radial diffusers [16] are available in the literature.

Diffuser pressure recovery is essentially independent of Reynolds number for inlet Reynolds numbers greater than  $7.5 \times 10^4$  [17]. Diffuser pressure recovery with uniform inlet flow is somewhat better than that for fully developed inlet flow. Performance maps for plane wall, conical, and annular diffusers for a variety of inlet flow conditions are presented in [18].

Since static pressure rises in the direction of flow in a diffuser, flow may separate from the walls. For some geometries, the outlet flow is distorted. The flow regime behavior of plane wall diffusers is illustrated well in the NCFMF video *Flow Visualization*. For wide angle diffusers, vanes or splitters can be used to suppress stall and improve pressure recovery [19].

### c. Pipe Bends

The head loss of a bend is larger than for fully developed flow through a straight section of equal length. The additional loss is primarily the result of secondary flow,<sup>5</sup> and is represented most conveniently by an equivalent length of straight pipe. The equivalent length depends on the relative radius of curvature of the bend, as shown in Fig. 8.16a for 90° bends. An approximate procedure for computing the resistance of bends with other turning angles is given in [12].

<sup>5</sup> Secondary flows are shown in the NCFMF video *Secondary Flow*.



Fittings in a piping system may have threaded, flanged, or welded connections. For small diameters, threaded joints are most common; large pipe systems frequently have flanged or welded joints.

In practice, insertion losses for fittings and valves vary considerably, depending on the care used in fabricating the pipe system. If burrs from cutting pipe sections are allowed to remain, they cause local flow obstructions, which increase losses appreciably.

Although the losses discussed in this section were termed “minor losses,” they can be a large fraction of the overall system loss. Thus a system for which calculations are to be made must be checked carefully to make sure all losses have been identified and their magnitudes estimated. If calculations are made carefully, the results will be of satisfactory engineering accuracy. You may expect to predict actual losses within  $\pm 10$  percent.

We include here one more device that changes the energy of the fluid—except this time the energy of the fluid will be increased, so it creates a “negative energy loss.”

### Pumps, Fans, and Blowers in Fluid Systems

In many practical flow situations (e.g., the cooling system of an automobile engine, the HVAC system of a building), the driving force for maintaining the flow against friction is a pump (for liquids) or a fan or blower (for gases). Here we will consider pumps, although all the results apply equally to fans and blowers. We generally neglect heat transfer and internal energy changes of the fluid (we will incorporate them later into the definition of the pump efficiency), so the first law of thermodynamics applied across the pump is

$$\dot{W}_{\text{pump}} = \dot{m} \left[ \left( \frac{p}{\rho} + \frac{\bar{V}^2}{2} + gz \right)_{\text{discharge}} - \left( \frac{p}{\rho} + \frac{\bar{V}^2}{2} + gz \right)_{\text{suction}} \right]$$

We can also compute the head  $\Delta h_{\text{pump}}$  (energy/mass) produced by the pump,

$$\Delta h_{\text{pump}} = \frac{\dot{W}_{\text{pump}}}{\dot{m}} = \left( \frac{p}{\rho} + \frac{\bar{V}^2}{2} + gz \right)_{\text{discharge}} - \left( \frac{p}{\rho} + \frac{\bar{V}^2}{2} + gz \right)_{\text{suction}} \quad (8.45)$$

In many cases the inlet and outlet diameters (and therefore velocities) and elevations are the same or negligibly different, so Eq. 8.45 simplifies to

$$\Delta h_{\text{pump}} = \frac{\Delta p_{\text{pump}}}{\rho} \quad (8.46)$$

It is interesting to note that a pump adds energy to the fluid in the form of a gain in pressure—the everyday, invalid perception is that pumps add kinetic energy to the fluid. The idea is that in a pump-pipe system the head produced by the pump (Eq. 8.45 or 8.46) is needed to overcome the head loss for the pipe system. Hence, the flow rate in such a system depends on the pump characteristics and the major and minor losses of the pipe system. We will learn in Chapter 10 that the head produced by a given pump is not constant, but varies with flow rate through the pump, leading to the notion of “matching” a pump to a given system to achieve the desired flow rate.

A useful relation is obtained from Eq. 8.46 if we multiply by  $\dot{m} = \rho Q$  ( $Q$  is the flow rate) and recall that  $\dot{m} \Delta h_{\text{pump}}$  is the power supplied to the fluid,

$$\dot{W}_{\text{pump}} = Q \Delta p_{\text{pump}} \quad (8.47)$$

We can also define the pump efficiency:

$$\eta = \frac{\dot{W}_{\text{pump}}}{\dot{W}_{\text{in}}} \quad (8.48)$$

where  $\dot{W}_{\text{pump}}$  is the power reaching the fluid, and  $\dot{W}_{\text{in}}$  is the power input (usually electrical) to the pump.

We note that, when applying the energy equation (Eq. 8.29) to a pipe system, we may sometimes choose points 1 and 2 so that a pump is included in the system. For these cases we can simply include the head of the pump as a “negative loss”:

$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = h_{l_T} - \Delta h_{\text{pump}} \quad (8.49)$$

### Noncircular Ducts

The empirical correlations for pipe flow also may be used for computations involving noncircular ducts, provided their cross sections are not too exaggerated. Thus ducts of square or rectangular cross section may be treated if the ratio of height to width is less than about 3 or 4.

The correlations for turbulent pipe flow are extended for use with noncircular geometries by introducing the *hydraulic diameter*, defined as

$$D_h \equiv \frac{4A}{P} \quad (8.50)$$

in place of the diameter,  $D$ . In Eq. 8.50,  $A$  is cross-sectional area, and  $P$  is *wetted perimeter*, the length of wall in contact with the flowing fluid at any cross-section. The factor 4 is introduced so that the hydraulic diameter will equal the duct diameter for a circular cross-section. For a circular duct,  $A = \pi D^2/4$  and  $P = \pi D$ , so that

$$D_h = \frac{4A}{P} = \frac{4\left(\frac{\pi}{4}\right)D^2}{\pi D} = D$$

For a rectangular duct of width  $b$  and height  $h$ ,  $A = bh$  and  $P = 2(b + h)$ , so

$$D_h = \frac{4bh}{2(b + h)}$$

If the *aspect ratio*,  $ar$ , is defined as  $ar = h/b$ , then

$$D_h = \frac{2h}{1 + ar}$$

for rectangular ducts. For a square duct,  $ar = 1$  and  $D_h = h$ .

As noted, the hydraulic diameter concept can be applied in the approximate range  $\frac{1}{4} < ar < 4$ . Under these conditions, the correlations for pipe flow give acceptably accurate results for rectangular ducts. Since such ducts are easy and cheap to fabricate from sheet metal, they are commonly used in air conditioning, heating, and ventilating applications. Extensive data on losses for air flow are available (e.g., see [13, 20]).

Losses caused by secondary flows increase rapidly for more extreme geometries, so the correlations are not applicable to wide, flat ducts, or to ducts of triangular



or other irregular shapes. Experimental data must be used when precise design information is required for specific situations.

## 8-8 SOLUTION OF PIPE FLOW PROBLEMS

Section 8-7 provides us with a complete scheme for solving many different pipe flow problems. For convenience we collect together the relevant computing equations.

The *energy equation*, relating the conditions at any two points 1 and 2 for a single-path pipe system, is

$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = h_{l_T} = \Sigma h_l + \Sigma h_{l_m} \quad (8.29)$$

This equation expresses the fact that there will be a loss of mechanical energy ("pressure," kinetic and/or potential) in the pipe. Recall that for turbulent flows  $\alpha \approx 1$ . Note that by judicious choice of points 1 and 2 we can analyze not only the entire pipe system, but also just a certain section of it that we may be interested in. The *total head loss* is given by the sum of the major and minor losses. (Remember that we can also include "negative losses" for any pumps present between points 1 and 2. The relevant form of the energy equation is then Eq. 8.49.)

Each *major loss* is given by

$$h_l = f \frac{L}{D} \frac{\bar{V}^2}{2} \quad (8.34)$$

where the *friction factor* is obtained from

$$f = \frac{64}{Re} \quad \text{for laminar flow } (Re < 2300) \quad (8.36)$$

or

$$\frac{1}{f^{0.5}} = -2.0 \log \left( \frac{e/D}{3.7} + \frac{2.51}{Re f^{0.5}} \right) \quad \text{for turbulent flow } (Re \geq 2300) \quad (8.37)$$

and Eqs. 8.36 and 8.37 are presented graphically in the Moody chart (Fig. 8.12).

Each *minor loss* is given either by

$$h_{l_m} = K \frac{\bar{V}^2}{2} \quad (8.40a)$$

where  $K$  is the device *loss coefficient*, or

$$h_{l_m} = f \frac{L_e}{D} \frac{\bar{V}^2}{2} \quad (8.40b)$$

where  $L_e$  is the additional *equivalent length* of pipe.

We also note that the flow rate  $Q$  is related to the average velocity  $\bar{V}$  at each pipe cross-section by

$$Q = \pi \frac{D^2}{4} \bar{V}$$

We will apply these equations first to single-path systems.

### Single-Path Systems

In single-path pipe problems we generally know the system configuration (type of pipe material and hence pipe roughness, the number and type of elbows, valves, and other fittings, etc., and changes of elevation), as well as the fluid ( $\rho$  and  $\mu$ ) we will be working with. Although not the only possibilities, usually the goal is to determine one of the following:

- (a) The pressure drop  $\Delta p$ , for a given pipe ( $L$  and  $D$ ), and flow rate  $Q$ .
- (b) The pipe length  $L$ , for a given pressure drop  $\Delta p$ , pipe diameter  $D$ , and flow rate  $Q$ .
- (c) The flow rate  $Q$ , for a given pipe ( $L$  and  $D$ ), and pressure drop  $\Delta p$ .
- (d) The pipe diameter  $D$ , for a given pipe length  $L$ , pressure drop  $\Delta p$ , and flow rate  $Q$ .

Each of these cases often arises in real-world situations. For example, case (a) is a necessary step in selecting the correct size pump to maintain the desired flow rate in a system—the pump must be able to produce the system  $\Delta p$  at the specified flow rate  $Q$ . (We will discuss this in more detail in Chapter 10.) Cases (a) and (b) are computationally straightforward; we will see that cases (c) and (d) can be a little tricky to evaluate. We will discuss each case, and present an Example Problem for each. The Example Problems present solutions as you might do them using a calculator, but there is also an *Excel* workbook for each. The advantage of using a computer application such as a spreadsheet is that we do not have to use either the Moody chart (Fig. 8.12) or solve the implicit Colebrook equation (Eq. 8.37) to obtain turbulent friction factors—the application can find them for us! In addition, as we'll see, cases (c) and (d) involve significant iterative calculations that can be avoided by use of a computer application. Finally, once we have a solution using a computer application, engineering “what-ifs” become easy, e.g., if we double the head produced by a pump, how much will the flow rate in a given system increase?

#### a. Find $\Delta p$ for a Given $L$ , $D$ , and $Q$

These types of problems are quite straightforward—the energy equation (Eq. 8.29) has only one unknown. The flow rate leads to the Reynolds number (or numbers if there is a diameter change) and hence the friction factor (or factors) for the flow; tabulated data can be used for minor loss coefficients and equivalent lengths. The energy equation can then be used to directly obtain the pressure drop. Example Problem 8.5 illustrates this type of problem.

#### b. Find $L$ for a Given $\Delta p$ , $D$ , and $Q$

These types of problems are also straightforward—the energy equation (Eq. 8.29) has only one unknown. The flow rate again leads to the Reynolds number and hence the friction factor for the flow. Tabulated data can be used for minor loss coefficients and equivalent lengths. The energy equation can then be rearranged and solved directly for the pipe length. Example Problem 8.6 illustrates this type of problem.

#### c. Find $Q$ for a Given $\Delta p$ , $L$ , and $D$

These types of problems require either manual iteration or use of a computer application such as *Excel*. The unknown flow rate or velocity is needed before the Reynolds number and hence the friction factor can be found. To manually iterate we first solve the energy equation directly for  $\bar{V}$  in terms of known quantities and the unknown friction factor  $f$ . To start the iterative process we make a guess for  $f$  (a good choice is to take a value from the fully turbulent region of the Moody chart because many practical

flows are in this region) and obtain a value for  $\bar{V}$ . Then we can compute a Reynolds number and hence obtain a new value for  $f$ . We repeat the iteration process  $f \rightarrow \bar{V} \rightarrow Re \rightarrow f$  until convergence (usually only two or three iterations are necessary). A much quicker procedure is to use a computer application. For example, spreadsheets (such as *Excel*) have built-in solving features for solving one or more algebraic equations for one or more unknowns. Example Problem 8.7 illustrates this type of problem.

#### d. Find $D$ for a Given $\Delta p$ , $L$ , and $Q$

These types of problems arise, for example, when we have designed a pump-pipe system and wish to choose the best pipe diameter—the best being the minimum diameter (for minimum pipe cost) that will deliver the design flow rate. We need to manually iterate, or use a computer application such as *Excel*. The unknown diameter is needed before the Reynolds number and relative roughness, and hence the friction factor, can be found. To manually iterate we could first solve the energy equation directly for  $D$  in terms of known quantities and the unknown friction factor  $f$ , and then iterate from a starting guess for  $f$  in a similar way to case (c) above:  $f \rightarrow D \rightarrow Re$  and  $e/D \rightarrow f$ . In practice this is a little unwieldy, so instead to manually find a solution we make successive guesses for  $D$  until the corresponding pressure drop  $\Delta p$  (for the given flow rate  $Q$ ) computed from the energy equation matches the design  $\Delta p$ . As in case (c) a much quicker procedure is to use a computer application. For example, spreadsheets (such as *Excel*) have built-in solving features for solving one or more algebraic equations for one or more unknowns. Example Problem 8.8 illustrates this type of problem.

In choosing a pipe size, it is logical to work with diameters that are available commercially. Pipe is manufactured in a limited number of standard sizes. Some data for standard pipe sizes are given in Table 8.5. For data on extra strong or double extra strong pipes, consult a handbook, e.g., [12]. Pipe larger than 12 in. nominal diameter is produced in multiples of 2 in. up to a nominal diameter of 36 in. and in multiples of 6 in. for still larger sizes.

**Table 8.5** Standard Sizes for Carbon Steel, Alloy Steel, and Stainless Steel Pipe (Data from [12].)

Nominal Pipe Size (in.)	Inside Diameter (in.)	Nominal Pipe Size (in.)	Inside Diameter (in.)
$\frac{1}{8}$	0.269	$2\frac{1}{2}$	2.469
$\frac{1}{4}$	0.364	3	3.068
$\frac{3}{8}$	0.493	4	4.026
$\frac{1}{2}$	0.622	5	5.047
$\frac{3}{4}$	0.824	6	6.065
1	1.049	8	7.981
$1\frac{1}{2}$	1.610	10	10.020
2	2.067	12	12.000



#### EXAMPLE 8.5 Pipe Flow from a Reservoir: Pressure Drop Unknown

A 100 m length of smooth horizontal pipe is attached to a large reservoir. What depth,  $d$ , must be maintained in the reservoir to produce a volume flow rate of  $0.01 \text{ m}^3/\text{s}$  of water? The inside diameter of the smooth pipe is 75 mm. The inlet is square-edged and water discharges to the atmosphere.

**EXAMPLE PROBLEM 8.5**

**GIVEN:** Water flow at  $0.01 \text{ m}^3/\text{s}$  through  $75 \text{ mm}$  diameter smooth pipe, with  $L = 100 \text{ m}$ , attached to a constant-level reservoir. Square-edged inlet.

**FIND:** Reservoir depth,  $d$ , to maintain the flow.

**SOLUTION:**

Governing equations:

$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = h_{lr} = h_l + h_{lm} \quad (8.29)$$

where

$$h_l = f \frac{L}{D} \frac{\bar{V}^2}{2} \quad (8.34) \quad \text{and} \quad h_{lm} = K \frac{\bar{V}^2}{2} \quad (8.40a)$$

For the given problem,  $p_1 = p_2 = p_{\text{atm}}$ ,  $\bar{V}_1 \approx 0$ ,  $\bar{V}_2 = \bar{V}$ , and  $\alpha_2 \approx 1.0$ . If  $z_2 = 0$ , then  $z_1 = d$ . Simplifying Eq. 8.29 gives

$$gd - \frac{\bar{V}^2}{2} = f \frac{L}{D} \frac{\bar{V}^2}{2} + K \frac{\bar{V}^2}{2} \quad (1)$$

Then

$$d = \frac{1}{g} \left[ f \frac{L}{D} \frac{\bar{V}^2}{2} + K \frac{\bar{V}^2}{2} + \frac{\bar{V}^2}{2} \right] = \frac{\bar{V}^2}{2g} \left[ f \frac{L}{D} + K + 1 \right]$$

Since  $\bar{V} = \frac{Q}{A} = \frac{4Q}{\pi D^2}$ , then

$$d = \frac{8Q^2}{\pi^2 D^4 g} \left[ f \frac{L}{D} + K + 1 \right]$$

Assuming water at  $20^\circ\text{C}$ ,  $\rho = 999 \text{ kg/m}^3$ , and  $\mu = 1.0 \times 10^{-3} \text{ kg/(m} \cdot \text{s)}$ . Thus

$$Re = \frac{\rho \bar{V} D}{\mu} = \frac{4\rho Q}{\pi \mu D}$$


$$Re = \frac{4}{\pi} \times \frac{999 \text{ kg}}{\text{m}^3} \times \frac{0.01 \text{ m}^3}{\text{s}} \times \frac{\text{m} \cdot \text{s}}{1.0 \times 10^{-3} \text{ kg}} \times \frac{1}{0.075 \text{ m}} = 1.70 \times 10^5$$

For turbulent flow in a smooth pipe, from Eq. 8.37,  $f = 0.0162$ . From Table 8.2,  $K = 0.5$ . Then

$$d = \frac{8Q^2}{\pi^2 D^4 g} \left[ f \frac{L}{D} + K + 1 \right]$$

$$= \frac{8}{\pi^2} \times \frac{(0.01)^2 \text{ m}^6}{\text{s}^2} \times \frac{1}{(0.075)^4 \text{ m}^4} \times \frac{\text{s}^2}{9.81 \text{ m}} \left[ (0.0162) \frac{100 \text{ m}}{0.075 \text{ m}} + 0.5 + 1 \right]$$

$$d = 6.02 \text{ m} \approx 6 \text{ m}$$

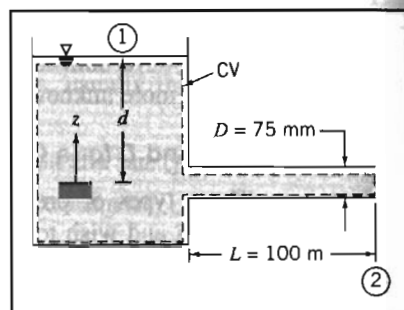

$d$

This problem illustrates the method for manually calculating total head loss.


The *Excel* workbook for this problem automatically computes  $Re$  and  $f$  from the given data. It then solves Eq. 1 directly for depth  $d$  without having to explicitly solve for it first. The workbook can be easily used to see, for example, how  $d$  is affected by changing the diameter  $D$ ; it is easily editable for other case (a) type problems.

### EXAMPLE 8.6 Flow in a Pipeline: Length Unknown

Crude oil flows through a level section of the Alaskan pipeline at a rate of 1.6 million barrels per day (1 barrel = 42 gal). The pipe inside diameter is 48 in.; its roughness is equivalent to galvanized iron. The maximum allowable pressure is 1200 psi; the minimum pressure required to keep dissolved gases in solution in the crude oil is 50 psi. The crude oil has  $SG = 0.93$ ; its viscosity at the pumping temperature of  $140^\circ F$  is  $\mu = 3.5 \times 10^{-4} \text{ lbf} \cdot \text{s/ft}^2$ . For these conditions, determine the maximum possible spacing between pumping stations. If the pump efficiency is 85 percent, determine the power that must be supplied at each pumping station.

### EXAMPLE PROBLEM 8.6

**GIVEN:** Flow of crude oil through horizontal section of Alaskan pipeline.

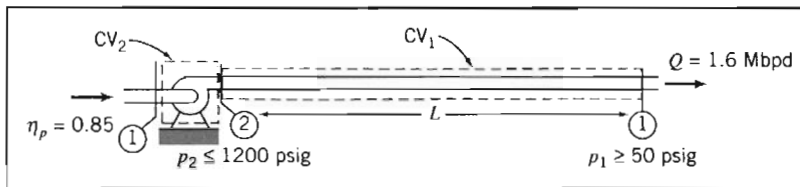

$D = 48 \text{ in.}$  (roughness of galvanized iron),  $SG = 0.93$ ,  $\mu = 3.5 \times 10^{-4} \text{ lbf} \cdot \text{s/ft}^2$

**FIND:** (a) Maximum spacing,  $L$ .  
(b) Power needed at each pump station.

#### SOLUTION:

As shown in the figure, we assume that the Alaskan pipeline is made up of repeating pump-pipe sections. We can draw two control volumes:  $CV_1$ , for the pipe flow (state ② to state ①);  $CV_2$ , for the pump (state ① to state ②).

First we apply the energy equation for steady, incompressible pipe flow to  $CV_1$ .

$$\text{Governing equations: } \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{v}_2^2}{2} + gz_2 \right) - \left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{v}_1^2}{2} + gz_1 \right) = h_{i_T} = h_i + h_{i_m} \quad (8.29)$$

where

$$h_i = f \frac{L}{D} \frac{\bar{v}^2}{2} \quad (8.34) \quad \text{and} \quad h_{i_m} = K \frac{\bar{v}^2}{2} \quad (8.40a)$$

- Assumptions: (1)  $\alpha_1 \bar{V}_1^2 = \alpha_2 \bar{V}_2^2$ .  
 (2) Horizontal pipe,  $z_1 = z_2$ .  
 (3) Neglect minor losses.  
 (4) Constant viscosity.

Then, using CV<sub>1</sub>

$$\Delta p = p_2 - p_1 = f \frac{L}{D} \rho \frac{\bar{V}^2}{2} \quad (1)$$

or

$$L = \frac{2D}{f} \frac{\Delta p}{\rho \bar{V}^2} \quad \text{where } f = f(Re, e/D)$$

$$Q = 1.6 \times 10^6 \frac{\text{bbl}}{\text{day}} \times 42 \frac{\text{gal}}{\text{bbl}} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{day}}{24 \text{ hr}} \times \frac{\text{hr}}{3600 \text{ s}} = 104 \text{ ft}^3/\text{s}$$

so

$$\bar{V} = \frac{Q}{A} = \frac{104 \text{ ft}^3}{\text{s}} \times \frac{4}{\pi(4)^2 \text{ ft}^2} = 8.27 \text{ ft/s}$$

$$Re = \frac{\rho \bar{V} D}{\mu} = (0.93) 1.94 \frac{\text{slug}}{\text{ft}^3} \times \frac{8.27 \text{ ft}}{\text{s}} \times 4 \text{ ft} \times \frac{\text{ft}^2}{3.5 \times 10^{-4} \text{ lbf} \cdot \text{s}} \times \frac{\text{lbf} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}}$$

$$Re = 1.71 \times 10^5$$

From Table 8.1,  $e = 0.0005 \text{ ft}$  and hence  $e/D = 0.00012$ . Then from Eq. 8.37,  $f \approx 0.017$  and thus

$$L = \frac{2}{0.017} \times 4 \text{ ft} \times \frac{(1200 - 50) \text{ lbf}}{\text{in}^2} \times \frac{\text{ft}^3}{(0.93) 1.94 \text{ slug}} \times \frac{\text{s}^2}{(8.27)^2 \text{ ft}^2} \\ \times \frac{144 \text{ in}^2}{\text{ft}^2} \times \frac{\text{slug} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2} = 6.32 \times 10^5 \text{ ft}$$

$$L = 632,000 \text{ ft (120 mi)} \leftarrow \text{-----} L$$

To find the pumping power we can apply the first law of thermodynamics to CV<sub>2</sub>. This control volume consists only of the pump, and we saw in Section 8-7 that this law simplifies to

$$\dot{W}_{\text{pump}} = Q \Delta p_{\text{pump}} \quad (8.47)$$

and the pump efficiency is

$$\eta = \frac{\dot{W}_{\text{pump}}}{\dot{W}_{\text{in}}} \quad (8.48)$$

We recall that  $\dot{W}_{\text{pump}}$  is the power reaching the fluid, and  $\dot{W}_{\text{in}}$  is the power input. Because we have a repeating system the pressure rise through the pump (i.e., from state ① to state ②) equals the pressure drop in the pipe (i.e., from state ② to state ①),

$$\Delta p_{\text{pump}} = \Delta p$$

so that

$$\dot{W}_{\text{pump}} = Q \Delta p_{\text{pump}} = \frac{104 \text{ ft}^3}{\text{s}} \times \frac{(1200 - 50) \text{ lbf}}{\text{in}^2} \times \frac{144 \text{ in}^2}{\text{ft}^2} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lbf}} \approx 31,300 \text{ hp}$$

and the required power input is

$$\dot{W}_{\text{in.}} = \frac{\dot{W}_{\text{pump}}}{\eta} = \frac{31300 \text{ hp}}{0.85} = 36,800 \text{ hp} \leftarrow \dot{W}_{\text{needed}}$$

This problem illustrates the method for manually calculating pipe length  $L$ .

The *Excel* workbook for this problem automatically computes  $Re$  and  $f$  from the given data. It then solves Eq. 1 directly for  $L$  without having to explicitly solve for it first. The workbook can be easily used to see, for example, how the flow rate  $Q$  depends on  $L$ ; it may be edited for other case (b) type problems.

### EXAMPLE 8.7 Flow from a Water Tower: Flow Rate Unknown

A fire protection system is supplied from a water tower and standpipe 80 ft tall. The longest pipe in the system is 600 ft and is made of cast iron about 20 years old. The pipe contains one gate valve; other minor losses may be neglected. The pipe diameter is 4 in. Determine the maximum rate of flow (gpm) through this pipe.


#### EXAMPLE PROBLEM 8.7

**GIVEN:** Fire protection system, as shown.

**FIND:**  $Q$ , gpm.

**SOLUTION:**

Governing equations:

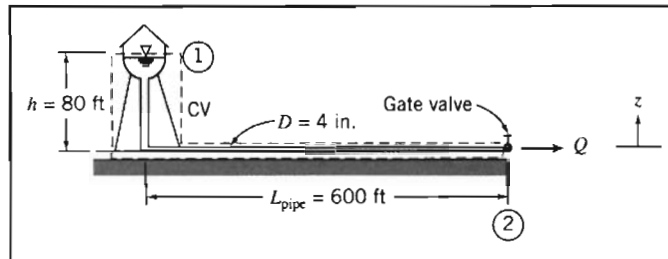

$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = h_{i_T} = h_l + h_{i_m} \quad (8.29)$$

$\approx 0(2)$

where

$$h_l = f \frac{L}{D} \frac{\bar{V}^2}{2} \quad (8.34) \quad \text{and} \quad h_{i_m} = f \frac{L_e}{D} \frac{\bar{V}^2}{2} \quad (8.40b)$$

Assumptions: (1)  $p_1 = p_2 = p_{\text{atm}}$ .  
(2)  $\bar{V}_1 \approx 0$ , and  $\alpha_2 \approx 1.0$ .

Then Eq. 8.29 can be written as

$$g(z_1 - z_2) - \frac{\bar{V}_2^2}{2} = h_{i_T} = f \left( \frac{L}{D} + \frac{L_e}{D} \right) \frac{\bar{V}_2^2}{2} \quad (1)$$

For a fully open gate valve, from Table 8.4,  $L_e/D = 8$ . Thus

$$g(z_1 - z_2) = \frac{\bar{V}_2^2}{2} \left[ f \left( \frac{L}{D} + 8 \right) + 1 \right]$$

To manually iterate, we solve for  $\bar{V}_2$  and obtain

$$\bar{V}_2 = \left[ \frac{2g(z_1 - z_2)}{f(L/D + 8) + 1} \right]^{1/2} \quad (2)$$

To be conservative, assume the standpipe is the same diameter as the horizontal pipe. Then

$$\frac{L}{D} = \frac{600 \text{ ft} + 80 \text{ ft}}{4 \text{ in.}} \times \frac{12 \text{ in.}}{\text{ft}} = 2040$$

Also

$$z_1 - z_2 = h = 80 \text{ ft}$$

To solve Eq. 2 manually we need to iterate. To start, we make an estimate for  $f$  by assuming the flow is fully turbulent (where  $f$  is constant). This value can be obtained from solving Eq. 8.37 using a calculator or from Fig. 8.12. For a large value of  $Re$  (e.g.,  $10^8$ ), and a roughness ratio  $e/D \approx 0.005$  ( $e = 0.00085 \text{ ft}$  for cast iron is obtained from Table 8.1, and doubled to allow for the fact that the pipe is old), we find that  $f \approx 0.03$ . Thus a first iteration for  $\bar{V}_2$  from Eq. 2 is

$$\bar{V}_2 = \left[ 2 \times \frac{32.2 \text{ ft}}{\text{s}^2} \times 80 \text{ ft} \times \frac{1}{0.03(2040 + 8) + 1} \right]^{1/2} = 9.08 \text{ ft/s}$$

Now obtain a new value for  $f$ :

$$Re = \frac{\rho \bar{V} D}{\mu} = \frac{\bar{V} D}{\nu} = \frac{9.08 \text{ ft}}{\text{s}} \times \frac{\text{ft}}{3} \times \frac{\text{s}}{1.21 \times 10^{-5} \text{ ft}^2} = 2.50 \times 10^5$$

For  $e/D = 0.005$ ,  $f = 0.0308$  from Eq. 8.37. Thus we obtain

$$\bar{V}_2 = \left[ 2 \times \frac{32.2 \text{ ft}}{\text{s}^2} \times 80 \text{ ft} \times \frac{1}{0.0308(2040 + 8) + 1} \right]^{1/2} = 8.97 \text{ ft/s}$$

The values we have obtained for  $\bar{V}_2$  (9.08 ft/s and 8.97 ft/s) differ by less than 2%—an acceptable level of accuracy. If this accuracy had not been achieved we would continue iterating until this, or any other accuracy we desired, was achieved (usually only one or two more iterations at most are necessary for reasonable accuracy). Note that instead of starting with a fully rough value for  $f$ , we could have started with a guess value for  $\bar{V}_2$  of, say, 1 ft/s or 10 ft/s. The volume flow rate is

$$Q = \bar{V}_2 A = \bar{V}_2 \frac{\pi D^2}{4} = \frac{8.97 \text{ ft}}{\text{s}} \times \frac{\pi}{4} \left( \frac{1}{3} \right)^2 \text{ ft}^2 \times 7.48 \frac{\text{gal}}{\text{ft}^3} \times 60 \frac{\text{s}}{\text{min}}$$

$$Q = 351 \text{ gpm} \quad \leftarrow Q$$

This problem illustrates the method for manually iterating to calculate flow rate.



The *Excel* workbook for this problem automatically iterates to solve for the flow rate  $Q$ . It solves Eq. 1 without having to obtain the explicit equation (Eq. 2) for  $\bar{V}_2$  (or  $Q$ ) first. The workbook can be easily used to perform numerous “what-ifs” that would be extremely time-consuming to do manually, e.g., to see how  $Q$  is affected by changing the roughness  $e/D$ . For example, it shows that replacing the old cast-iron pipe with a new pipe ( $e/D \approx 0.0025$ ) would increase the flow rate from 351 gpm to about 386 gpm, a 10% increase! The workbook can be modified to solve other case (c) type problems.




**EXAMPLE 8.8 Flow in an Irrigation System: Diameter Unknown**

Spray heads in an agricultural spraying system are to be supplied with water through 500 ft of drawn aluminum tubing from an engine-driven pump. In its most efficient operating range, the pump output is 1500 gpm at a discharge pressure not exceeding 65 psig. For satisfactory operation, the sprinklers must operate at 30 psig or higher pressure. Minor losses and elevation changes may be neglected. Determine the smallest standard pipe size that can be used.

**EXAMPLE PROBLEM 8.8**

**GIVEN:** Water supply system, as shown.

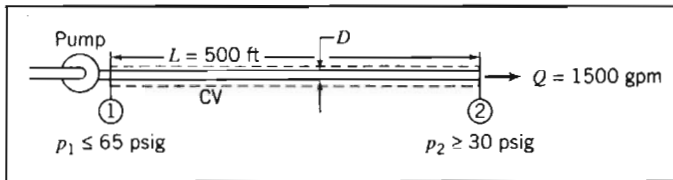

**FIND:** Smallest standard  $D$ .

**SOLUTION:**

$\Delta p$ ,  $L$ , and  $Q$  are known.  $D$  is unknown, so iteration is needed to determine the minimum standard diameter that satisfies the pressure drop constraint at the given flow rate. The maximum allowable pressure drop over the length,  $L$ , is

$$\Delta p_{\max} = p_{1 \max} - p_{2 \min} = (65 - 30) \text{ psi} = 35 \text{ psi}$$

Governing equations: 
$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = h_{i_T} \quad (8.29)$$

$$= 0(3)$$

$$h_{i_T} = h_i + h_{i_f} = f \frac{L}{D} \frac{\bar{V}_2^2}{2}$$

- Assumptions: (1) Steady flow.  
 (2) Incompressible flow.  
 (3)  $h_{i_T} = h_i$ , i.e.,  $h_{i_m} = 0$ .  
 (4)  $z_1 = z_2$ .  
 (5)  $\bar{V}_1 = \bar{V}_2 = \bar{V}$ ;  $\alpha_1 = \alpha_2$ .

Then

$$\Delta p = p_1 - p_2 = f \frac{L}{D} \frac{\rho \bar{V}^2}{2} \quad (1)$$

Equation 1 is difficult to solve for  $D$  because both  $\bar{V}$  and  $f$  depend on  $D$ ! The best approach is to use a computer application such as *Excel* to automatically solve for  $D$ . For completeness here we show the manual iteration procedure. The first step is to express Eq. 1 and the Reynolds number in terms of  $Q$  instead of  $\bar{V}$  ( $Q$  is constant but  $\bar{V}$  varies with  $D$ ). We have  $\bar{V} = Q/A = 4Q/\pi D^2$  so that

$$\Delta p = f \frac{L}{D} \frac{\rho}{2} \left( \frac{4Q}{\pi D^2} \right)^2 = \frac{8fL\rho Q^2}{\pi^2 D^5} \quad (2)$$

The Reynolds number in terms of  $Q$  is

$$Re = \frac{\rho \bar{V} D}{\mu} = \frac{\bar{V} D}{\nu} = \frac{4Q}{\pi D^2} \frac{D}{\nu} = \frac{4Q}{\pi \nu D}$$

Finally,  $Q$  must be converted to cubic feet per second.

$$Q = \frac{1500 \text{ gal}}{\text{min}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{\text{ft}^3}{7.48 \text{ gal}} = 3.34 \text{ ft}^3/\text{s}$$

For an initial guess, take nominal 4 in. (4.026 in. i.d.) pipe:

$$Re = \frac{4Q}{\pi \nu D} = \frac{4}{\pi} \times \frac{3.34 \text{ ft}^3}{\text{s}} \times \frac{\text{s}}{1.21 \times 10^{-5} \text{ ft}^2} \times \frac{1}{4.026 \text{ in.}} \times \frac{12 \text{ in.}}{\text{ft}} = 1.06 \times 10^6$$

For drawn tubing,  $e = 5 \times 10^{-6}$  ft (Table 8.1) and hence  $e/D = 1.5 \times 10^{-5}$ , so  $f \approx 0.012$  (Eq. 8.37), and

$$\begin{aligned} \Delta p &= \frac{8fL\rho Q^2}{\pi^2 D^5} = \frac{8}{\pi^2} \times 0.012 \times 500 \text{ ft} \times 1.94 \frac{\text{slug}}{\text{ft}^3} \times \frac{(3.34)^2 \text{ ft}^6}{\text{s}^2} \\ &\quad \times \frac{1}{(4.026)^5 \text{ in.}^5} \times \frac{1728 \text{ in.}^3}{\text{ft}^3} \times \frac{\text{lb} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}} \\ \Delta p &= 172 \text{ lb} \cdot \text{ft} / \text{in.}^2 > \Delta p_{\max} \end{aligned}$$

Since this pressure drop is too large, try  $D = 6$  in. (actually 6.065 in. i.d.):

$$Re = \frac{4}{\pi} \times \frac{3.34 \text{ ft}^3}{\text{s}} \times \frac{\text{s}}{1.21 \times 10^{-5} \text{ ft}^2} \times \frac{1}{6.065 \text{ in.}} \times \frac{12 \text{ in.}}{\text{ft}} = 6.95 \times 10^5$$

For drawn tubing with  $D = 6$  in.,  $e/D = 1.0 \times 10^{-5}$ , so  $f \approx 0.013$  (Eq. 8.37), and

$$\begin{aligned} \Delta p &= \frac{8}{\pi^2} \times 0.013 \times 500 \text{ ft} \times 1.94 \frac{\text{slug}}{\text{ft}^3} \times \frac{(3.34)^2 \text{ ft}^6}{\text{s}^2} \\ &\quad \times \frac{1}{(6.065)^5 \text{ in.}^5} \times \frac{(12)^3 \text{ in.}^3}{\text{ft}^3} \times \frac{\text{lb} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}} \\ \Delta p &= 24.0 \text{ lb} \cdot \text{ft} / \text{in.}^2 < \Delta p_{\max} \end{aligned}$$

Since this is less than the allowable pressure drop, we should check a 5 in. (nominal) pipe. With an actual i.d. of 5.047 in.,

$$Re = \frac{4}{\pi} \times \frac{3.34 \text{ ft}^3}{\text{s}} \times \frac{\text{s}}{1.21 \times 10^{-5} \text{ ft}^2} \times \frac{1}{5.047 \text{ in.}} \times \frac{12 \text{ in.}}{\text{ft}} = 8.36 \times 10^5$$

For drawn tubing with  $D = 5$  in.,  $e/D = 1.2 \times 10^{-5}$ , so  $f \approx 0.0122$  (Eq. 8.37), and

$$\begin{aligned} \Delta p &= \frac{8}{\pi^2} \times 0.0122 \times 500 \text{ ft} \times 1.94 \frac{\text{slug}}{\text{ft}^3} \times \frac{(3.34)^2 \text{ ft}^6}{\text{s}^2} \\ &\quad \times \frac{1}{(5.047)^5 \text{ in.}^5} \times \frac{(12)^3 \text{ in.}^3}{\text{ft}^3} \times \frac{\text{lb} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}} \\ \Delta p &= 56.4 \text{ lb} \cdot \text{ft} / \text{in.}^2 > \Delta p_{\max} \end{aligned}$$

Thus the criterion for pressure drop is satisfied for a minimum nominal diameter of 6 in. pipe. ←  $D$

This problem illustrates the method for manually iterating to calculate pipe diameter.

The *Excel* workbook for this problem automatically iterates to solve for the exact pipe diameter  $D$  that satisfies Eq. 1, without having to obtain the explicit equation (Eq. 2) for  $D$  first. Then all that needs to be done is to select the smallest standard pipe size that is equal to or greater than this value. For the given data,  $D = 5.58$  in., so the appropriate pipe size is 6 in. The workbook can be used to perform numerous “what-ifs” that would be extremely time-consuming to do manually, e.g., to see how the required  $D$  is affected by changing the pipe length  $L$ . For example, it shows that reducing  $L$  to 250 ft would allow 5 in. (nominal) pipe to be used. The workbook can be modified for solving other case (d) type problems.

We have solved Example Problems 8.7 and 8.8 by iteration (manual, or using *Excel*). Several specialized forms of friction factor versus Reynolds number diagrams have been introduced to solve problems of this type without the need for iteration. For examples of these specialized diagrams, see [21] and [22].

Example Problems 8.9 and 8.10 illustrate the evaluation of minor loss coefficients and the application of a diffuser to reduce exit kinetic energy from a flow system.

### EXAMPLE 8.9 Calculation of Entrance Loss Coefficient

Reference [23] reports results of measurements made to determine entrance losses for flow from a reservoir to a pipe with various degrees of entrance rounding. A copper pipe 10 ft long, with 1.5 in. i.d., was used for the tests. The pipe discharged to atmosphere. For a square-edged entrance, a discharge of  $0.566 \text{ ft}^3/\text{s}$  was measured when the reservoir level was 85.1 ft above the pipe centerline. From these data, evaluate the loss coefficient for a square-edged entrance.

#### EXAMPLE PROBLEM 8.9

**GIVEN:** Pipe with square-edged entrance discharging from reservoir as shown.


**FIND:**  $K_{\text{entrance}}$ .

**SOLUTION:**

Apply the energy equation for steady, incompressible pipe flow.

Governing equations:

$$\frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 = h_{\text{tr}} \approx 0(2) = 0$$

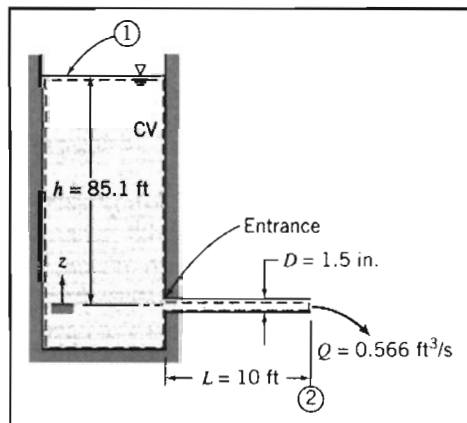

$$h_{l_T} = f \frac{L}{D} \frac{\bar{V}_2^2}{2} + K_{\text{entrance}} \frac{\bar{V}_2^2}{2}$$

Assumptions: (1)  $p_1 = p_2 = p_{\text{atm}}$ .

(2)  $\bar{V}_1 \approx 0$ .

Substituting for  $h_{l_T}$  and dividing by  $g$  gives  $z_1 = h = \alpha_2 \frac{\bar{V}_2^2}{2g} + f \frac{L}{D} \frac{\bar{V}_2^2}{2g} + K_{\text{entrance}} \frac{\bar{V}_2^2}{2g}$

or

$$K_{\text{entrance}} = \frac{2gh}{\bar{V}_2^2} - f \frac{L}{D} - \alpha_2 \quad (1)$$

The average velocity is

$$\begin{aligned} \bar{V}_2 &= \frac{Q}{A} = \frac{4Q}{\pi D^2} \\ \bar{V}_2 &= \frac{4}{\pi} \times \frac{0.566 \text{ ft}^3}{\text{s}} \times \frac{1}{(1.5)^2 \text{ in.}^2} \times \frac{1.44 \text{ in.}^2}{\text{ft}^2} = 46.1 \text{ ft/s} \end{aligned}$$

Assume  $T = 70^\circ\text{F}$ , so  $\nu = 1.05 \times 10^{-5} \text{ ft}^2/\text{s}$  (Table A.7). Then

$$Re = \frac{\bar{V}D}{\nu} = \frac{46.1 \text{ ft}}{\text{s}} \times \frac{1.5 \text{ in.}}{12 \text{ in.}} \times \frac{\text{s}}{1.05 \times 10^{-5} \text{ ft}^2} \times \frac{\text{ft}}{12 \text{ in.}} = 5.49 \times 10^5$$

For drawn tubing,  $e = 5 \times 10^{-6} \text{ ft}$  (Table 8.1), so  $e/D = 0.000,04$  and  $f = 0.0135$  (Eq. 8.37).

In this problem we need to be careful in evaluating the kinetic energy correction factor  $\alpha_2$ , as it is a significant factor in computing  $K_{\text{entrance}}$  from Eq. 1. We recall from Section 8-6 and previous Example Problems that we have usually assumed  $\alpha \approx 1$ , but here we will compute a value from Eq. 8.27:

$$\alpha = \left( \frac{U}{\bar{V}} \right)^3 \frac{2n^2}{(3+n)(3+2n)} \quad (8.27)$$

To use this equation we need values for the turbulent power-law coefficient  $n$  and the ratio of centerline to mean velocity  $U/\bar{V}$ . For  $n$ , from Section 8-5

$$n = -1.7 + 1.8 \log(Re_U) = 8.63 \quad (8.23)$$

where we have used the approximation  $Re_U \approx Re_{\bar{V}}$ . For  $\bar{V}/U$ , we have


$$\frac{\bar{V}}{U} = \frac{2n^2}{(n+1)(2n+1)} = 0.847 \quad (8.24)$$

Using these results in Eq. 8.27 we find  $\alpha = 1.04$ . Substituting into Eq. 1, we obtain

$$\begin{aligned} K_{\text{entrance}} &= 2 \times \frac{32.2 \text{ ft}}{\text{s}^2} \times \frac{85.1 \text{ ft}}{(46.1)^2 \text{ ft}^2} - (0.0135) \frac{10 \text{ ft}}{1.5 \text{ in.}} \times \frac{12 \text{ in.}}{\text{ft}} - 1.04 \\ K_{\text{entrance}} &= 0.459 \end{aligned} \quad \leftarrow K_{\text{entrance}}$$

This coefficient compares favorably with that shown in Table 8.2. The hydraulic and energy grade lines are shown below. The large head loss in a square-edged entrance is due primarily to separation at the sharp inlet corner and formation of a vena contracta immediately downstream from the corner. The effective flow

area reaches a minimum at the vena contracta, so the flow velocity is a maximum there. The flow expands again following the vena contracta to fill the pipe. The uncontrolled expansion following the vena contracta is responsible for most of the head loss. (See Example Problem 8.12.)

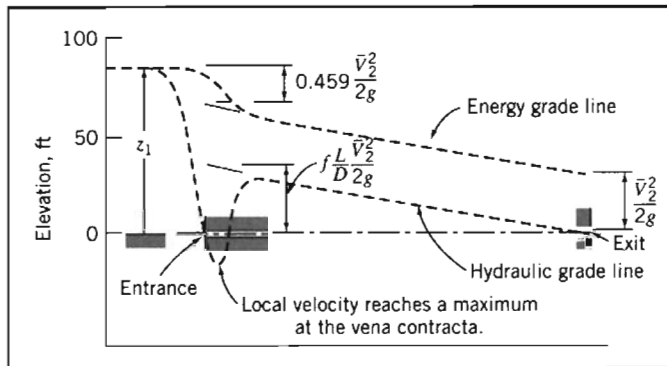

Rounding the inlet corner reduces the extent of separation significantly. This reduces the velocity increase through the vena contracta and consequently reduces the head loss caused by the entrance. A “well-rounded” inlet almost eliminates flow separation; the flow pattern approaches that shown in Fig. 8.1. The added head loss in a well-rounded inlet compared with fully developed flow is the result of higher wall shear stresses in the entrance length.

This problem:


- ✓ Illustrates a method for obtaining the value of a minor loss coefficient from experimental data.
- ✓ Shows how the EGL and HGL lines first introduced in Section 6-5 for inviscid flow are modified by the presence of major and minor losses. The EGL line continuously drops as mechanical energy is consumed—quite sharply when, for example, we have a square-edged entrance loss; the HGL at each location is lower than the EGL by an amount equal to the local dynamic head  $\bar{V}^2/2g$ —at the vena contracta, for example, the HGL experiences a large drop, then recovers.

### EXAMPLE 8.10 Use of Diffuser to Increase Flow Rate

Water rights granted to each citizen by the Emperor of Rome gave permission to attach to the public water main a calibrated, circular, tubular bronze nozzle [24]. Some citizens were clever enough to take unfair advantage of a law that regulated flow rate by such an indirect method. They installed diffusers on the outlets of the nozzles to increase their discharge. Assume the static head available from the main is  $z_0 = 1.5$  m and the nozzle exit diameter is  $D = 25$  mm. (The discharge is to atmospheric pressure.) Determine the increase in flow rate when a diffuser with  $N/R_1 = 3.0$  and  $AR = 2.0$  is attached to the end of the nozzle.

**EXAMPLE PROBLEM 8.10****GIVEN:** Nozzle attached to water main as shown.**FIND:** Increase in discharge when diffuser with  $N/R_1 = 3.0$  and  $AR = 2.0$  is installed.**SOLUTION:**

Apply the energy equation for steady, incompressible pipe flow.

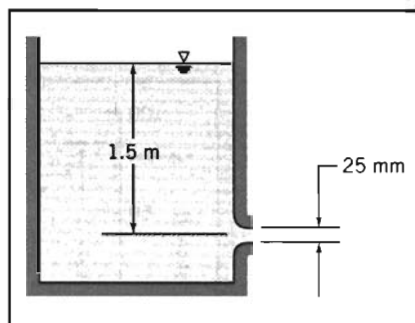

Governing equation: 
$$\frac{p_0}{\rho} + \alpha_0 \frac{\bar{V}_0^2}{2} + gz_0 = \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 + h_{l_T} \quad (8.29)$$

Assumptions: (1)  $\bar{V}_0 \approx 0$ .  
 (2)  $\alpha_1 \approx 1$ .

For the nozzle alone,

$$\frac{p_0}{\rho} + \alpha_0 \frac{\bar{V}_0^2}{2} + gz_0 = \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 + h_{l_T}$$

$\approx 0(1)$                        $\approx 1(2)$                        $= 0$   
 $\nearrow$                        $\nearrow$                        $\nearrow$

$$h_{l_T} = K_{\text{entrance}} \frac{\bar{V}_1^2}{2}$$

Thus

$$gz_0 = \frac{\bar{V}_1^2}{2} + K_{\text{entrance}} \frac{\bar{V}_1^2}{2} = (1 + K_{\text{entrance}}) \frac{\bar{V}_1^2}{2} \quad (1)$$

Solving for the velocity and substituting the value of  $K_{\text{entrance}} \approx 0.04$  (from Table 8.2),

$$\bar{V}_1 = \sqrt{\frac{2gz_0}{1.04}} = \sqrt{\frac{2}{1.04} \times 9.81 \frac{\text{m}}{\text{s}^2} \times 1.5 \text{ m}} = 5.32 \text{ m/s}$$

$$Q = \bar{V}_1 A_1 = \bar{V}_1 \frac{\pi D_1^2}{4} = 5.32 \frac{\text{m}}{\text{s}} \times \frac{\pi}{4} \times (0.025)^2 \text{ m}^2 = 0.00261 \text{ m}^3/\text{s} \leftarrow Q$$

For the nozzle with diffuser attached,


$$\frac{p_0}{\rho} + \alpha_0 \frac{\bar{V}_0^2}{2} + gz_0 = \frac{p_1}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 + h_{l_T}$$

$\approx 0(1)$                        $\approx 1(2)$                        $= 0$   
 $\nearrow$                        $\nearrow$                        $\nearrow$

$$h_{l_T} = K_{\text{entrance}} \frac{\bar{V}_1^2}{2} + K_{\text{diffuser}} \frac{\bar{V}_1^2}{2}$$

or

$$gz_0 = \frac{\bar{V}_2^2}{2} + (K_{\text{entrance}} + K_{\text{diffuser}}) \frac{\bar{V}_1^2}{2} \quad (2)$$

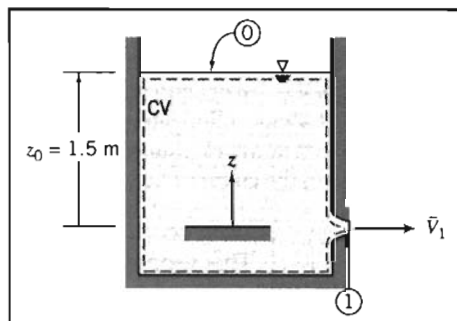

From continuity  $\bar{V}_1 A_1 = \bar{V}_2 A_2$ , so

$$\bar{V}_2 = \bar{V}_1 \frac{A_1}{A_2} = \bar{V}_1 \frac{1}{AR}$$

and Eq. 2 becomes

$$gz_0 = \left[ \frac{1}{(AR)^2} + K_{\text{entrance}} + K_{\text{diffuser}} \right] \frac{\bar{V}_1^2}{2} \quad (3)$$

Figure 8.15 gives data for  $C_p = \frac{p_2 - p_1}{\frac{1}{2} \rho \bar{V}_1^2}$  for diffusers.

To obtain  $K_{\text{diffuser}}$ , apply the energy equation from (1) to (2).

$$\frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + g z_1 = \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + g z_2 + K_{\text{diffuser}} \frac{\bar{V}_1^2}{2}$$

Solving, with  $\alpha_2 \approx 1$ , we obtain

$$K_{\text{diffuser}} = 1 - \frac{\bar{V}_2^2}{\bar{V}_1^2} - \frac{p_2 - p_1}{\frac{1}{2} \rho \bar{V}_1^2} = 1 - \left( \frac{A_1}{A_2} \right)^2 - C_p = 1 - \frac{1}{(AR)^2} - C_p$$

From Fig. 8.15,  $C_p = 0.45$ , so

$$K_{\text{diffuser}} = 1 - \frac{1}{(2.0)^2} - 0.45 = 0.75 - 0.45 = 0.3$$

Solving Eq. 3 for the velocity and substituting the values of  $K_{\text{entrance}}$  and  $K_{\text{diffuser}}$ , we obtain

$$\bar{V}_1^2 = \frac{2gz_0}{0.25 + 0.04 + 0.3}$$

so

$$\bar{V}_1 = \sqrt{\frac{2gz_0}{0.59}} = \sqrt{\frac{2}{0.59} \times 9.81 \frac{\text{m}}{\text{s}^2} \times 1.5 \text{ m}} = 7.06 \text{ m/s}$$

and

$$Q_d = \bar{V}_1 A_1 = \bar{V}_1 \frac{\pi D_1^2}{4} = 7.06 \frac{\text{m}}{\text{s}} \times \frac{\pi}{4} \times (0.025)^2 \text{ m}^2 = 0.00347 \text{ m}^3/\text{s} \leftarrow Q_d$$

The flow rate increase that results from adding the diffuser is

$$\frac{\Delta Q}{Q} = \frac{Q_d - Q}{Q} = \frac{Q_d}{Q} - 1 = \frac{0.00347}{0.00261} - 1 = 0.330 \quad \text{or} \quad 33 \text{ percent} \quad \frac{\Delta Q}{Q}$$


Addition of the diffuser significantly increases the flow rate! There are two ways to explain this.

First, we can sketch the EGL and HGL curves—approximately to scale—as shown below. We can see that, as required, the HGL at the exit is zero for both flows (recall that the HGL is the sum of static pressure and potential heads). However, the pressure rises through the diffuser, so the pressure at the diffuser inlet will be, as shown, quite low (below atmospheric). Hence, with the diffuser, the  $\Delta p$  driving force for the nozzle is much larger than that for the bare nozzle, leading to a much greater velocity, and flow rate, at the nozzle exit plane—it is as if the diffuser acted as a suction device on the nozzle.

Second, we can examine the energy equations for the two flows (for the bare nozzle Eq. 1, and for the nozzle with diffuser Eq. 3). These equations can be rearranged to yield equations for the velocity at the nozzle exit,

$$\bar{V}_1 = \sqrt{\frac{2gz_0}{1 + K_{\text{entrance}}}} \quad (\text{bare nozzle}) \quad \bar{V}_1 = \sqrt{\frac{2gz_0}{\frac{1}{(AR)^2} + K_{\text{diffuser}} + K_{\text{entrance}}}} \quad (\text{nozzle + diffuser})$$

Comparing these two expressions, we see that the diffuser introduces an extra term (its loss coefficient  $K_{\text{diffuser}} = 0.3$ ) to the denominator, tending to reduce the nozzle velocity, but on the other hand we replace the term 1 (representing loss of the bare nozzle exit plane kinetic energy) with  $1/(AR)^2 = 0.25$  (representing a smaller loss, of the diffuser exit plane kinetic energy). The net effect is that we replace 1 in the denominator with  $0.25 + 0.3 = 0.55$ , leading to a net increase in the nozzle velocity. The resistance to flow introduced by adding the diffuser is more than made up by the fact that we “throw away” much less kinetic energy at the exit of the device (the exit velocity for the bare nozzle is 5.32 m/s, whereas for the diffuser it is 1.77 m/s).

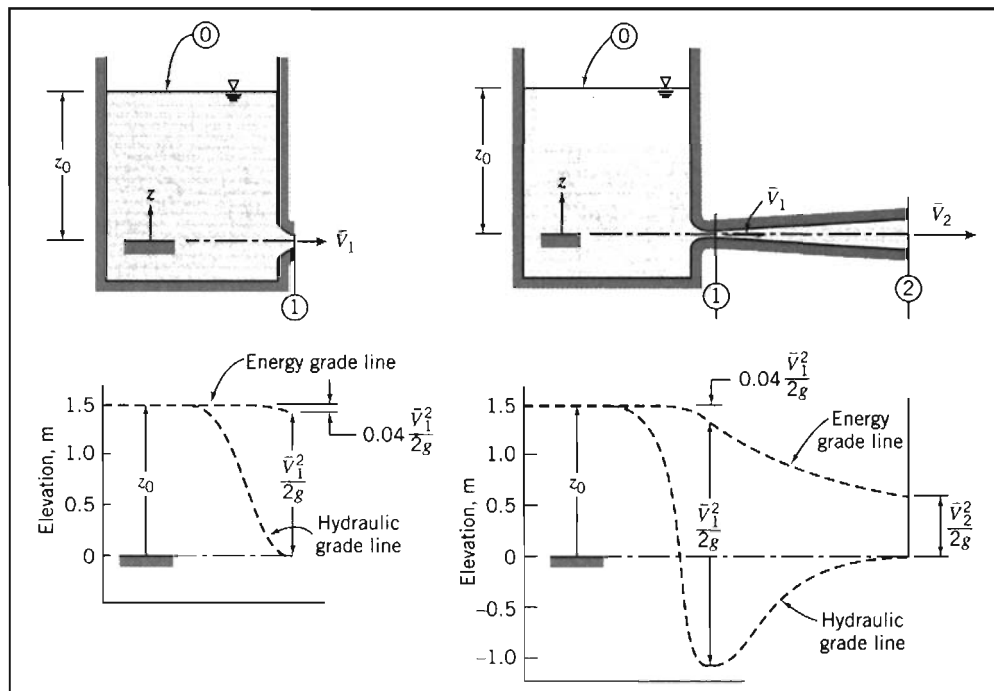

Water Commissioner Frontinus standardized conditions for all Romans in 97 A.D. He required that the tube attached to the nozzle of each customer's pipe be the same diameter for at least 50 lineal feet from the public water main (see Problem 8.129).

### \*Multiple-Path Systems

Many real-world pipe systems (e.g., the pipe network that supplies water to the apartments in a large building) consist of a network of pipes of various diameters assembled in a complicated configuration that may contain parallel and series connections.

\* This section may be omitted without loss of continuity in the text material.



As an example, consider part of a system as shown in Fig. 8.17. Water is supplied at some pressure from a manifold at point 1, and flows through the components shown to the drain at point 5. Some water flows through pipes *A*, *B*, *C*, and *D*, constituting a *series* of pipes (and pipe *B* has a lower flow rate than the others); some flows through *A*, *E*, *F* or *G*, *H*, *C*, and *D* (*F* and *G* are *parallel*), and these two main branches are in *parallel*. We analyze this type of problem in a similar way to how we analyze DC resistor circuits in electrical theory: by applying a few basic rules to the system. The electrical potential at each point in the circuit is analogous to the HGL (or static pressure head if we neglect gravity) at corresponding points in the system. The current in each resistor is analogous to the flow rate in each pipe section. We have the additional difficulty in pipe systems that the resistance to flow in each pipe is a function of the flow rate (electrical resistors are usually considered constant).

The simple rules for analyzing networks can be expressed in various ways. We will express them as follows:

1. The net flow out of any node (junction) is zero.
2. Each node has a unique pressure head (HGL).

For example, in Fig. 8.17 rule 1 means that the flow into node 2 from pipe *A* must equal the sum of outflows to pipes *B* and *E*. Rule 2 means that the pressure head at node 7 must be equal to the head at node 6 less the losses through pipe *F* or pipe *G*, as well as equal to the head at node 3 plus the loss in pipe *H*.

These rules apply in addition to all the pipe-flow constraints we have discussed (e.g., for  $Re \geq 2300$  the flow will be turbulent), and the fact that we may have significant minor losses from features such as sudden expansions. We can anticipate that the flow in pipe *F* (diameter 1 in.) will be a good deal less than the flow in pipe *G* (diameter 1.5 in.), and the flow through branch *E* will be larger than that through branch *B* (why?).

The problems that arise with pipe networks can be as varied as those we discussed when studying single-path systems, but the most common involve finding the flow delivered to each pipe, given an applied pressure difference. We examine this case in Example Problem 8.11. Obviously, pipe networks are much more difficult and

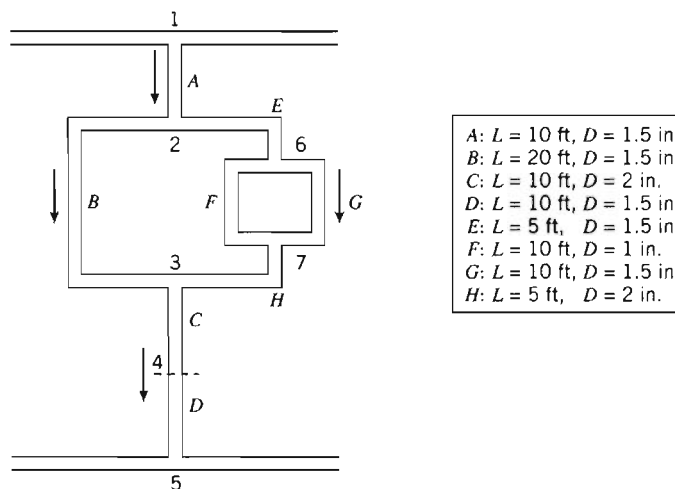


Fig. 8.17 Schematic of part of a pipe network.

time-consuming to analyze than single-path problems, almost always requiring iterative solution methods, and in practice are usually only solved using the computer. A number of computer schemes for analyzing networks have been developed [25], and many engineering consulting companies use proprietary software applications for such analysis. A spreadsheet such as *Excel* is also very useful for setting up and solving such problems.

### EXAMPLE 8.11 Flow Rates in a Pipe Network

In the section of a cast-iron water pipe network shown in Fig. 8.17, the static pressure head (gage) available at point 1 is 100 ft of water, and point 5 is a drain (atmospheric pressure). Find the flow rates (gpm) in each pipe.

#### EXAMPLE PROBLEM 8.11


**GIVEN:** Pressure head  $h_{1,5}$  of 100 ft across pipe network.

**FIND:** The flow rate in each pipe.

**SOLUTION:**

Governing equations:

For each pipe section,

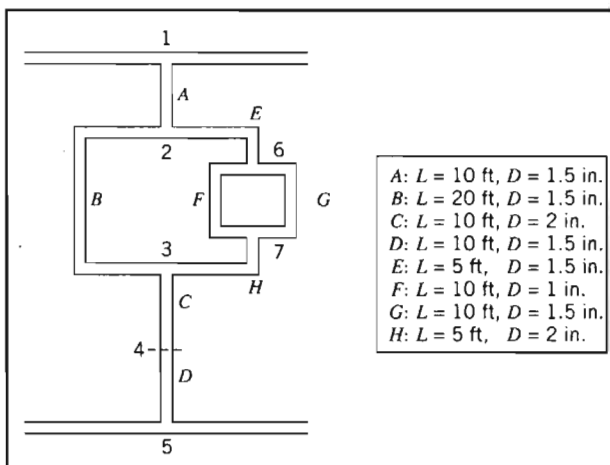

$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = h_{iT} = h_l + \sum h_{l,m} \quad (8.29)$$

where

$$h_l = f \frac{L}{D} \frac{\bar{V}^2}{2} \quad (8.34)$$

and  $f$  is obtained from either Eq. 8.36 (laminar) or Eq. 8.37 (turbulent). For the cast-iron pipe, Table 8.1 gives a roughness for cast iron of  $e = 0.00085$  ft.

Assumptions: (1) Ignore gravity effects.  
(2) Ignore minor losses.

(Assumption 2 is applied to make the analysis clearer—minor losses can be incorporated easily later.)

In addition we have mathematical expressions for the basic rules

1. The net flow out of any node (junction) is zero.
2. Each node has a unique pressure head (HGL).

We can apply basic rule 1 to nodes 2 and 6:

$$\text{Node 2: } Q_A = Q_B + Q_E \quad (1)$$

$$\text{Node 6: } Q_E = Q_F + Q_G \quad (2)$$

and we also have the obvious constraints

$$Q_A = Q_C \quad (3)$$

$$Q_A = Q_D \quad (4)$$

$$Q_E = Q_H \quad (5)$$

We can apply basic rule 2 to obtain the following pressure drop constraints:

$$h_{1-5}: h = h_A + h_B + h_C + h_D \quad (6)$$

$$h_{2-3}: h_B = h_E + h_F + h_H \quad (7)$$

$$h_{6-7}: h_F = h_G \quad (8)$$

This set of eight equations must be solved iteratively. If we were to manually iterate, we would use Eqs. 3, 4, and 5 to immediately reduce the number of unknowns and equations to five ( $Q_A$ ,  $Q_B$ ,  $Q_E$ ,  $Q_F$ ,  $Q_G$ ). There are several approaches to the iteration, one of which is:

1. Make a guess for  $Q_A$ ,  $Q_B$ , and  $Q_F$ .
2. Eqs. 1 and 2 then lead to values for  $Q_E$  and  $Q_G$ .
3. Eqs. 6, 7, and 8 are finally used as a check to see if rule 2 (for unique pressure heads at the nodes) is satisfied.
4. If any of Eqs. 6, 7, or 8 are not satisfied, use knowledge of pipe flow to adjust the values of  $Q_A$ ,  $Q_B$ , or  $Q_F$ .
5. Repeat steps 2 through 5 until convergence occurs.

An example of applying step 4 would be if Eq. 8 were not satisfied. Suppose  $h_F > h_G$ ; then we would have selected too large a value for  $Q_F$ , and would reduce this slightly, and recompute all flow rates and heads.

This iterative process is obviously quite unrealistic for manual calculation (remember that obtaining each head loss  $h$  from each  $Q$  involves a good amount of calculation). Fortunately, we can use a spreadsheet such as *Excel* to automate all these calculations—and it will solve for all eight unknowns automatically! The first step is to set up one worksheet for each pipe section for computing the pipe head  $h$  given the flow rate  $Q$ . A typical such worksheet is shown below:


Microsoft Excel - Example Problem 8.11.xls

Pipe A Data:


Pipe Data			Flow Rate	Computations				
L (ft)	D (in)	e (ft)	Q (ft <sup>3</sup> /s)	V (ft/s)	Re	e/D	f	h (ft <sup>2</sup> /s <sup>2</sup> )
10	1.5	8.50E-04	0.100	8.1	97009	4.72E-05	0.0184	49

In these worksheets, a given flow rate  $Q$  is used to compute values for  $V$ ,  $Re$ ,  $e/D$ ,  $f$ , and  $h$  from  $L$ ,  $D$ , and  $e$ .

The next step is to set up a calculation page that collects together the flow rates and corresponding head losses for all of the pipe sections, and then use these to check whether Eqs. 1 through 8 are satisfied. Shown below is this page with initial guess values of 0.1 ft<sup>3</sup>/s for each of the flow rates. The logic of the workbook is that the eight values entered for  $Q_A$  through  $Q_H$  determine all the other values—that is,  $h_A$  through  $h_H$ , and the values of the constraint equations. The errors for each of the constraint equations are shown, as well as their sum. We can then use *Excel*'s *Solver* feature (repeatedly as necessary) to minimize the total error (currently 665%) by varying  $Q_A$  through  $Q_H$ .

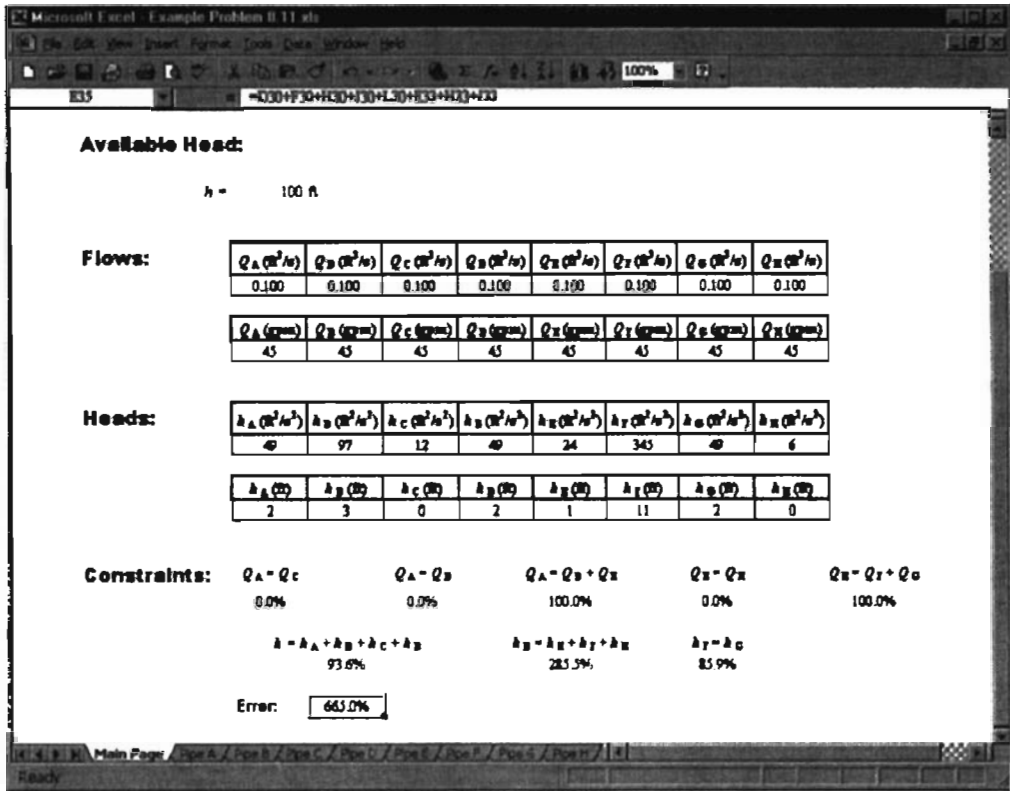

The final results obtained by Excel are:

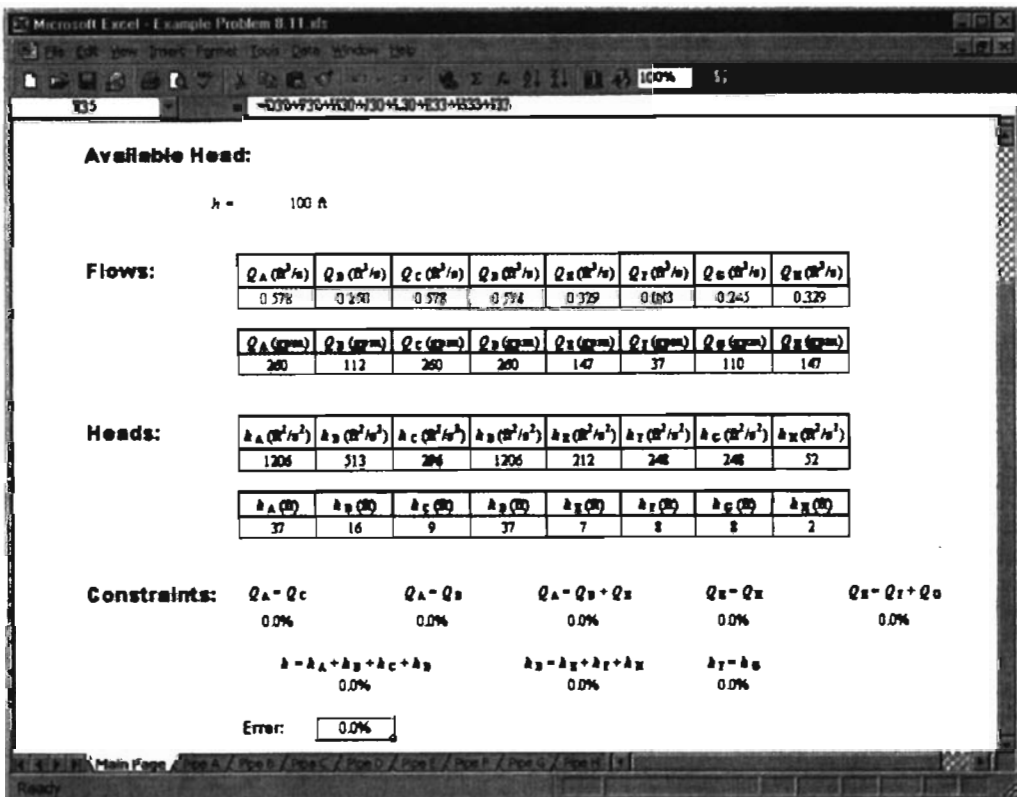

The flow rates are:

$$Q_A = Q_C = Q_D = 260 \text{ gpm}$$

$$Q_B \text{ (gpm)} = 112 \text{ gpm}$$

$$Q_E \text{ (gpm)} = Q_H \text{ (gpm)} = 147 \text{ gpm}$$

$$Q_F \text{ (gpm)} = 37 \text{ gpm}$$

$$Q_G \text{ (gpm)} = 110 \text{ gpm}$$

This problem illustrates use of *Excel* to solve a set of coupled, nonlinear equations for unknown flow rates.



The *Excel* workbook for this problem can be modified for solving a variety of other multiple-path systems.

## PART C FLOW MEASUREMENT

Throughout this text we have referred to the flow rate  $Q$  or average velocity  $\bar{V}$  in a pipe. The question arises: How does one measure these quantities? We will address this question by discussing the various types of flow meters available.

The choice of a flow meter is influenced by the accuracy required, range, cost, complication, ease of reading or data reduction, and service life. The simplest and cheapest device that gives the desired accuracy should be chosen.

### 8-9 DIRECT METHODS

The most obvious way to measure flow rate in a pipe is the *direct method*—simply measure the amount of fluid that accumulates in a container over a fixed time period! Tanks can be used to determine flow rate for steady liquid flows by measuring the volume or mass of liquid collected during a known time interval. If the time interval is long enough to be measured accurately, flow rates may be determined precisely in this way.

Compressibility must be considered in volume measurements for gas flows. The densities of gases generally are too small to permit accurate direct measurement of mass flow rate. However, a volume sample often can be collected by displacing a “bell,” or inverted jar over water (if the pressure is held constant by counterweights). If volume or mass measurements are set up carefully, no calibration is required; this is a great advantage of direct methods.

In specialized applications, particularly for remote or recording uses, *positive displacement* flow meters may be specified, in which the fluid moves a component such as a reciprocating piston or oscillating disk as it passes through the device. Common examples include household water and natural gas meters, which are calibrated to read directly in units of product, or gasoline metering pumps, which measure total flow and automatically compute the cost. Many positive-displacement meters are available commercially. Consult manufacturers’ literature or References (e.g., [10]) for design and installation details.

## 8-10 RESTRICTION FLOW METERS FOR INTERNAL FLOWS

Most restriction flow meters for internal flow (except the laminar flow element, discussed shortly) are based on acceleration of a fluid stream through some form of nozzle, as shown schematically in Fig. 8.18. The idea is that the change in velocity leads to a change in pressure. This  $\Delta p$  can be measured using a pressure gage (electronic or mechanical) or a manometer, and the flow rate inferred using either a theoretical analysis or an experimental correlation for the device. Flow separation at the sharp edge of the nozzle throat causes a recirculation zone to form, as shown by the dashed lines downstream from the nozzle. The mainstream flow continues to accelerate from the nozzle throat to form a *vena contracta* at section ② and then decelerates again to fill the duct. At the vena contracta, the flow area is a minimum, the flow streamlines are essentially straight, and the pressure is uniform across the channel section.

The theoretical flow rate may be related to the pressure differential between sections ① and ② by applying the continuity and Bernoulli equations. Then empirical correction factors may be applied to obtain the actual flow rate.

Basic equations:

$$= 0(1)$$

$$\frac{d}{dt} \int_{CV} \rho \, dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2 \quad (6.8)$$

- Assumptions:
- (1) Steady flow.
  - (2) Incompressible flow.
  - (3) Flow along a streamline.
  - (4) No friction.
  - (5) Uniform velocity at sections ① and ②.
  - (6) No streamline curvature at sections ① or ②, so pressure is uniform across those sections.
  - (7)  $z_1 = z_2$ .

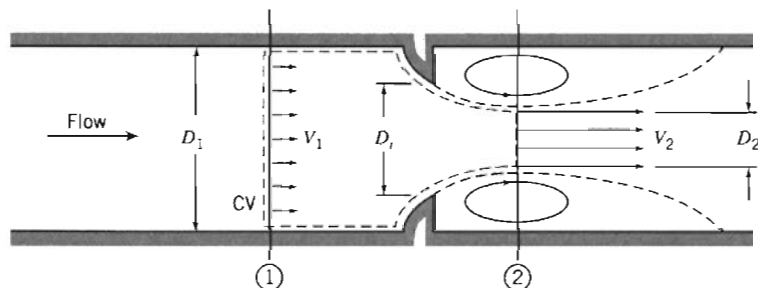


Fig. 8.18 Internal flow through a generalized nozzle, showing control volume used for analysis.

Then, from the Bernoulli equation,

$$p_1 - p_2 = \frac{\rho}{2}(V_2^2 - V_1^2) = \frac{\rho V_2^2}{2} \left[ 1 - \left( \frac{V_1}{V_2} \right)^2 \right]$$

and from continuity

$$(-\rho V_1 A_1) + (\rho V_2 A_2) = 0$$

or

$$V_1 A_1 = V_2 A_2 \quad \text{so} \quad \left( \frac{V_1}{V_2} \right)^2 = \left( \frac{A_2}{A_1} \right)^2$$

Substituting gives

$$p_1 - p_2 = \frac{\rho V_2^2}{2} \left[ 1 - \left( \frac{A_2}{A_1} \right)^2 \right]$$

Solving for the theoretical velocity,  $V_2$ ,

$$V_2 = \sqrt{\frac{2(p_1 - p_2)}{\rho[1 - (A_2/A_1)^2]}} \quad (8.51)$$

The theoretical mass flow rate is then given by

$$\begin{aligned} \dot{m}_{\text{theoretical}} &= \rho V_2 A_2 \\ &= \rho \sqrt{\frac{2(p_1 - p_2)}{\rho[1 - (A_2/A_1)^2]}} A_2 \end{aligned}$$

or

$$\dot{m}_{\text{theoretical}} = \frac{A_2}{\sqrt{1 - (A_2/A_1)^2}} \sqrt{2\rho(p_1 - p_2)} \quad (8.52)$$

Equation 8.52 shows that, under our set of assumptions, for a given fluid ( $\rho$ ) and flow meter geometry ( $A_1$  and  $A_2$ ), the flow rate is directly proportional to the square root of the pressure drop across the meter taps,

$$\dot{m}_{\text{theoretical}} \propto \sqrt{\Delta p}$$

which is the basic idea of these devices. This relationship limits the flow rates that can be measured accurately to approximately a 4:1 range.

Several factors limit the utility of Eq. 8.52 for calculating the actual mass flow rate through a meter. The actual flow area at section (2) is unknown when the vena contracta is pronounced (e.g., for orifice plates when  $D_i$  is a small fraction of  $D_1$ ). The velocity profiles approach uniform flow only at large Reynolds numbers. Frictional effects can become important (especially downstream from the meter) when the meter contours are abrupt. Finally, the location of pressure taps influences the differential pressure reading.

The theoretical equation is adjusted for Reynolds number and diameter ratio  $D_i/D_1$  by defining an empirical *discharge coefficient*  $C$  such that



$$\dot{m}_{\text{actual}} = \frac{CA_t}{\sqrt{1 - (A_t/A_1)^2}} \sqrt{2\rho(p_1 - p_2)} \quad (8.53)$$

Letting  $\beta = D_t/D_1$ , then  $(A_t/A_1)^2 = (D_t/D_1)^4 = \beta^4$ , so

$$\dot{m}_{\text{actual}} = \frac{CA_t}{\sqrt{1 - \beta^4}} \sqrt{2\rho(p_1 - p_2)} \quad (8.54)$$

In Eq. 8.54,  $1/\sqrt{1 - \beta^4}$  is the *velocity-of-approach factor*. The discharge coefficient and velocity of approach factor frequently are combined into a single *flow coefficient*,

$$K \equiv \frac{C}{\sqrt{1 - \beta^4}} \quad (8.55)$$

In terms of this flow coefficient, the actual mass flow rate is expressed as

$$\dot{m}_{\text{actual}} = KA_t \sqrt{2\rho(p_1 - p_2)} \quad (8.56)$$

For standardized metering elements, test data [10, 26] have been used to develop empirical equations that predict discharge and flow coefficients from meter bore, pipe diameter, and Reynolds number. The accuracy of the equations (within specified ranges) usually is adequate so that the meter can be used without calibration. If the Reynolds number, pipe size, or bore diameter fall outside the specified range of the equation, the coefficients must be measured experimentally.

For the turbulent flow regime (pipe Reynolds number greater than 4000) the discharge coefficient may be expressed by an equation of the form [10]

$$C = C_\infty + \frac{b}{Re_{D_1}^n} \quad (8.57)$$

The corresponding form for the flow-coefficient equation is

$$K = K_\infty + \frac{1}{\sqrt{1 - \beta^4}} \frac{b}{Re_{D_1}^n} \quad (8.58)$$




In Eqs. 8.57 and 8.58, subscript  $\infty$  denotes the coefficient at infinite Reynolds number; constants  $b$  and  $n$  allow for scaling to finite Reynolds numbers. Correlating equations and curves of coefficients versus Reynolds number are given in the next three subsections, following a general comparison of the characteristics of specific metering elements.

As we have noted, selection of a flow meter depends on factors such as cost, accuracy, need for calibration, and ease of installation and maintenance. Some of these factors are compared for *orifice plate*, *flow nozzle*, and *venturi* meters in Table 8.6. Note that a high head loss means that the running cost of the device is high—it will consume a lot of the fluid energy. A high initial cost must be amortized over the life of the device. This is an example of a common cost calculation for a company (and an individual!)—between a high initial but low running cost, or low initial but high running cost.

Flow meter coefficients reported in the literature have been measured with fully developed turbulent velocity distributions at the meter inlet (Section ①). If a flow meter is to be installed downstream from a valve, elbow, or other disturbance, a straight section of pipe must be placed in front of the meter. Approximately 10 diameters of straight pipe are required for venturi meters, and up to 40 diameters



**Table 8.6** Characteristics of Orifice, Flow Nozzle, and Venturi Flow Meters

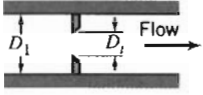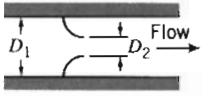
Flow Meter Type	Diagram	Head Loss	Initial Cost
Orifice		High	Low
Flow Nozzle		Intermediate	Intermediate
Venturi		Low	High

for orifice plate or flow nozzle meters. When a meter has been properly installed, the flow rate may be computed from Eq. 8.54 or 8.56, after choosing an appropriate value for the empirical discharge coefficient,  $C$ , or flow coefficient,  $K$ , defined in Eqs. 8.53 and 8.55, respectively. Some design data for incompressible flow are given in the next few sections. The same basic methods can be extended to compressible flows, but these will not be treated here. For complete details, see [10] or [26].

### The Orifice Plate

The orifice plate (Fig. 8.19) is a thin plate that may be clamped between pipe flanges. Since its geometry is simple, it is low in cost and easy to install or replace. The sharp edge of the orifice will not foul with scale or suspended matter. However, suspended matter can build up at the inlet side of a concentric orifice in a horizontal pipe; an eccentric orifice may be placed flush with the bottom of the pipe to avoid this difficulty. The primary disadvantages of the orifice are its limited capacity and the high permanent head loss caused by the uncontrolled expansion downstream from the metering element.

Pressure taps for orifices may be placed in several locations, as shown in Fig. 8.19 (see [10] or [26] for additional details). Since the location of the pressure taps influences the empirically determined flow coefficient, one must select handbook values of  $C$  or  $K$  consistent with the location of pressure taps.

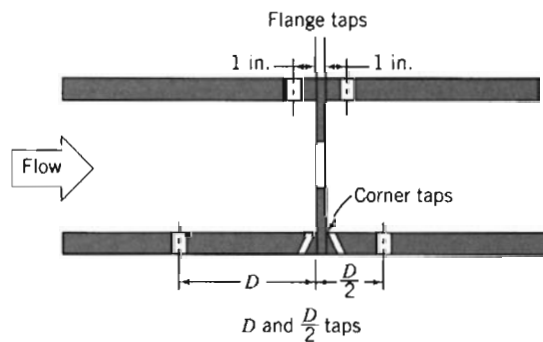

**Fig. 8.19** Orifice geometry and pressure tap locations [10].

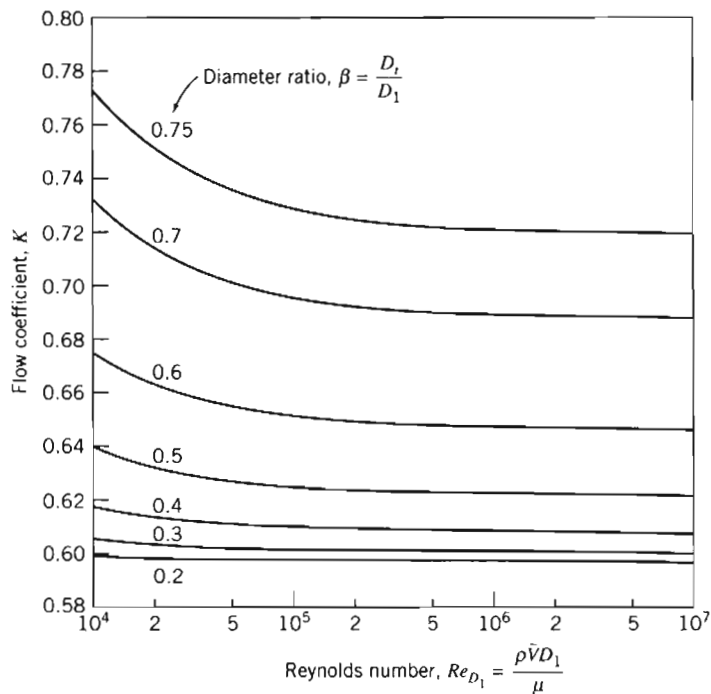


Fig. 8.20 Flow coefficients for concentric orifices with corner taps.

The correlating equation recommended for a concentric orifice with corner taps [10] is

$$C = 0.5959 + 0.0312\beta^{2.1} - 0.184\beta^8 + \frac{91.71\beta^{2.5}}{Re_{D_1}^{0.75}} \quad (8.59)$$

Equation 8.59 predicts orifice discharge coefficients within  $\pm 0.6$  percent for  $0.2 < \beta < 0.75$  and for  $10^4 < Re_{D_1} < 10^7$ . Some flow coefficients calculated from Eq. 8.59 and 8.55 are presented in Fig. 8.20.

A similar correlating equation is available for orifice plates with  $D$  and  $D/2$  taps. Flange taps require a different correlation for every line size. Pipe taps, located at  $2\frac{1}{2}$  and  $8D$ , no longer are recommended for accurate work.

Example Problem 8.12, which appears later in this section, illustrates the application of flow coefficient data to orifice sizing.

### The Flow Nozzle

Flow nozzles may be used as metering elements in either plenums or ducts, as shown in Fig. 8.21; the nozzle section is approximately a quarter ellipse. Design details and recommended locations for pressure taps are given in [26].

The correlating equation recommended for an ASME long-radius flow nozzle [10] is

$$C = 0.9975 - \frac{6.53\beta^{0.5}}{Re_{D_1}^{0.5}} \quad (8.60)$$

Equation 8.60 predicts discharge coefficients for flow nozzles within  $\pm 2.0$  percent for  $0.25 < \beta < 0.75$  for  $10^4 < Re_{D_1} < 10^7$ . Some flow coefficients calculated from

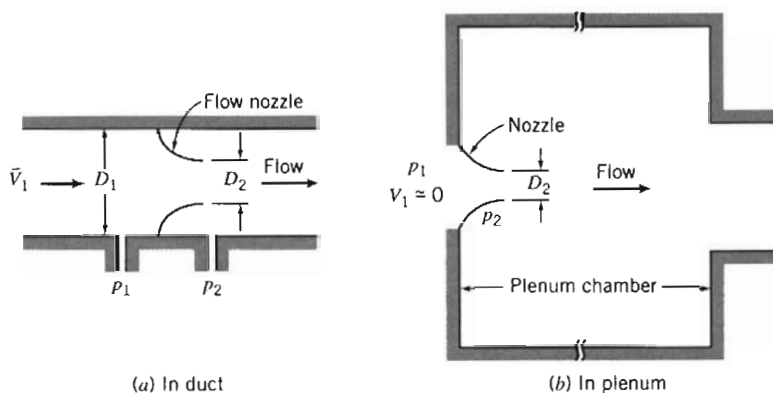


Fig. 8.21 Typical installations of nozzle flow meters.

Eq. 8.60 and Eq. 8.55 are presented in Fig. 8.22. ( $K$  can be greater than one when the velocity-of-approach factor exceeds one.)

### a. Pipe Installation

For pipe installation,  $K$  is a function of  $\beta$  and  $Re_{D_1}$ . Figure 8.22 shows that  $K$  is essentially independent of Reynolds number for  $Re_{D_1} > 10^6$ . Thus at high flow rates, the flow rate may be computed directly using Eq. 8.56. At lower flow rates, where  $K$  is a weak function of Reynolds number, iteration may be required.

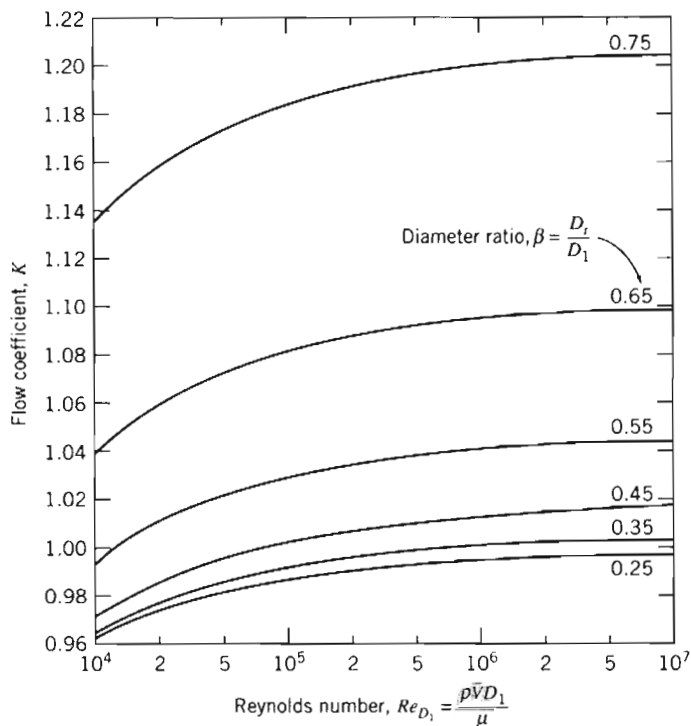


Fig. 8.22 Flow coefficients for ASME long-radius flow nozzles.

### b. Plenum Installation

For plenum installation, nozzles may be fabricated from spun aluminum, molded fiberglass, or other inexpensive materials. Thus they are simple and cheap to make and install. Since the plenum pressure is equal to  $p_2$ , the location of the downstream pressure tap is not critical. Meters suitable for a wide range of flow rates may be made by installing several nozzles in a plenum. At low flow rates, most of them may be plugged. For higher flow rates, more nozzles may be used.

For plenum nozzles  $\beta = 0$ , which is outside the range of applicability of Eq. 8.58. Typical flow coefficients are in the range,  $0.95 < K < 0.99$ ; the larger values apply at high Reynolds numbers. Thus the mass rate of flow can be computed within approximately  $\pm 2$  percent using Eq. 8.56 with  $K = 0.97$ .

### The Venturi

Venturi meters, as sketched in Table 8.6, are generally made from castings and machined to close tolerances to duplicate the performance of the standard design. As a result, venturi meters are heavy, bulky, and expensive. The conical diffuser section downstream from the throat gives excellent pressure recovery; therefore, overall head loss is low. Venturi meters are also self-cleaning because of their smooth internal contours.

Experimental data show that discharge coefficients for venturi meters range from 0.980 to 0.995 at high Reynolds numbers ( $Re_{D_1} > 2 \times 10^5$ ). Thus  $C = 0.99$  can be used to measure mass flow rate within about  $\pm 1$  percent at high Reynolds number [10]. Consult manufacturers' literature for specific information at Reynolds numbers below  $10^5$ .

The orifice plate, flow nozzle, and venturi all produce pressure differentials proportional to the square of the flow rate, according to Eq. 8.56. In practice, a meter size must be chosen to accommodate the highest flow rate expected. Because the relationship of pressure drop to flow rate is nonlinear, the range of flow rate that can be measured accurately is limited. Flow meters with single throats usually are considered only for flow rates over a 4:1 range [10].


The unrecoverable loss in head across a metering element may be expressed as a fraction of the differential pressure,  $\Delta p$ , across the element. Pressure losses are displayed as functions of diameter ratio in Fig. 8.23 [10]. Note that the venturi meter has a much lower permanent head loss than the orifice (which has the highest loss) or nozzle, confirming the trends we summarized in Table 8.6.

### The Laminar Flow Element

The *laminar flow element*<sup>6</sup> is designed to produce a pressure differential directly proportional to flow rate. The idea is that the laminar flow element (LFE) contains a metering section in which the flow passes through a large number of tubes or passages (these often look like a bunch of straws) that are each narrow enough that the flow through them is laminar, regardless of the flow conditions in the main pipe (recall that  $Re_{\text{tube}} = \rho V_{\text{tube}} D_{\text{tube}} / \mu$ , so if  $D_{\text{tube}}$  is made small enough we can ensure that  $Re_{\text{tube}} < Re_{\text{crit}} \approx 2300$ ). For each laminar flow tube we can apply the results of Section 8-3, specifically

$$Q_{\text{tube}} = \frac{\pi D_{\text{tube}}^4}{128 \mu L_{\text{tube}}} \Delta p \propto \Delta p \quad (8.13c)$$

<sup>6</sup> Patented and manufactured by Meriam Instrument Co., 10920 Madison Ave., Cleveland, Ohio 44102.

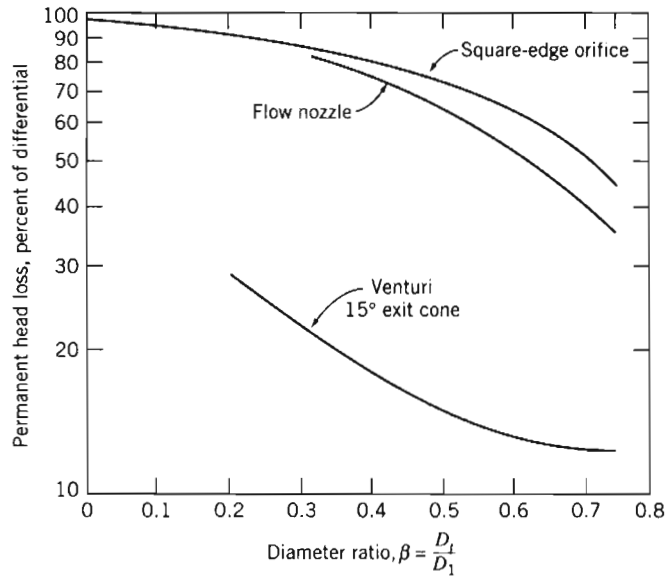

**Fig. 8.23** Permanent head loss produced by various flow metering elements [10].

so the flow rate in each tube is a linear function of the pressure drop across the device. The flow rate in the whole pipe will be the sum of each of these tube flows, and so will also be a linear function of pressure drop. Usually this linear relation is provided in a calibration from the manufacturer, and the LFE can be used over a 10:1 range of flow rates. The relationship between pressure drop and flow rate for laminar flow also depends on viscosity, which is a strong function of temperature. Therefore, the fluid temperature must be known to obtain accurate metering with an LFE.


A laminar flow element costs approximately as much as a venturi, but it is much lighter and smaller. Thus the LFE is becoming widely used in applications where compactness and extended range are important.

### EXAMPLE 8.12 Flow through an Orifice Meter

An air flow rate of  $1 \text{ m}^3/\text{s}$  at standard conditions is expected in a  $0.25 \text{ m}$  diameter duct. An orifice meter is used to measure the rate of flow. The manometer available to make the measurement has a maximum range of  $300 \text{ mm}$  of water. What diameter orifice plate should be used with corner taps? Analyze the head loss if the flow area at the vena contracta is  $A_2 = 0.65 A_1$ . Compare with data from Fig. 8.23.

#### EXAMPLE PROBLEM 8.12

**GIVEN:** Flow through duct and orifice as shown.

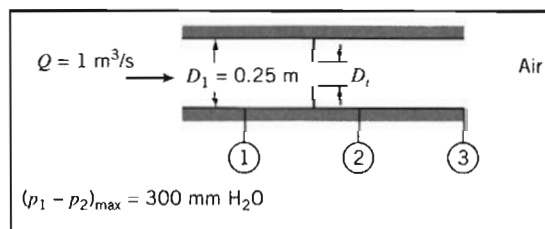

- FIND:** (a)  $D_t$ .  
 (b) Head loss between sections ① and ③.  
 (c) Degree of agreement with data from Fig. 8.23.

**SOLUTION:**

The orifice plate may be designed using Eq. 8.56 and data from Fig. 8.20.

Governing equation: 
$$\dot{m}_{\text{actual}} = KA_t \sqrt{2\rho(p_1 - p_2)} \quad (8.56)$$

- Assumptions: (1) Steady flow.  
 (2) Incompressible flow.

Since  $A_t/A_1 = (D_t/D_1)^2 = \beta^2$ ,

$$\dot{m}_{\text{actual}} = K\beta^2 A_1 \sqrt{2\rho(p_1 - p_2)}$$

or

$$\begin{aligned} K\beta^2 &= \frac{\dot{m}_{\text{actual}}}{A_1 \sqrt{2\rho(p_1 - p_2)}} = \frac{\rho Q}{A_1 \sqrt{2\rho(p_1 - p_2)}} = \frac{Q}{A_1} \sqrt{\frac{\rho}{2(p_1 - p_2)}} \\ &= \frac{Q}{A_1} \sqrt{\frac{\rho}{2g\rho_{\text{H}_2\text{O}}\Delta h}} \\ &= \frac{1 \text{ m}^3}{\text{s}} \times \frac{4}{\pi} \frac{1}{(0.25)^2 \text{ m}^2} \left[ \frac{1}{2} \times 1.23 \frac{\text{kg}}{\text{m}^3} \times \frac{\text{s}^2}{9.81 \text{ m}} \times \frac{\text{m}^3}{999 \text{ kg}} \times \frac{1}{0.30 \text{ m}} \right]^{1/2} \\ K\beta^2 &= 0.295 \quad \text{or} \quad K = \frac{0.295}{\beta^2} \quad (1) \end{aligned}$$

Since  $K$  is a function of both  $\beta$  (Eq. 1) and  $Re_{D_1}$  (Fig. 8.20), we must iterate to find  $\beta$ . The duct Reynolds number is

$$\begin{aligned} Re_{D_1} &= \frac{\rho \bar{V}_1 D_1}{\mu} = \frac{\rho(Q/A_1)D_1}{\mu} = \frac{4Q}{\pi \nu D_1} \\ Re_{D_1} &= \frac{4}{\pi} \times \frac{1 \text{ m}^3}{\text{s}} \times \frac{\text{s}}{1.46 \times 10^{-5} \text{ m}^2} \times \frac{1}{0.25 \text{ m}} = 3.49 \times 10^5 \end{aligned}$$

Guess  $\beta = 0.75$ . From Fig. 8.20,  $K$  should be 0.72. From Eq. 1,

$$K = \frac{0.295}{(0.75)^2} = 0.524$$

Thus our guess for  $\beta$  is too large. Guess  $\beta = 0.70$ . From Fig. 8.20,  $K$  should be 0.69. From Eq. 1,

$$K = \frac{0.295}{(0.70)^2} = 0.602$$

Thus our guess for  $\beta$  is still too large. Guess  $\beta = 0.65$ . From Fig. 8.20,  $K$  should be 0.67. From Eq. 1,

$$K = \frac{0.295}{(0.65)^2} = 0.698$$

There is satisfactory agreement with  $\beta \approx 0.66$  and

$$D_t = \beta D_1 = 0.66(0.25 \text{ m}) = 0.165 \text{ m} \quad \leftarrow D_t$$

To find the permanent head loss for this device, we could simply use the diameter ratio  $\beta \approx 0.66$  in Fig. 8.23; but instead we will find it from the given data. To evaluate the permanent head loss, apply Eq. 8.29 between sections ① and ③.


$$\text{Governing equation: } \left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + g z_1 \right) - \left( \frac{p_3}{\rho} + \alpha_3 \frac{\bar{V}_3^2}{2} + g z_3 \right) = h_{iT} \quad (8.29)$$

- Assumptions: (3)  $\alpha_1 \bar{V}_1^2 = \alpha_3 \bar{V}_3^2$ .  
 (4) Neglect  $\Delta z$ .

Then

$$h_{iT} = \frac{p_1 - p_3}{\rho} = \frac{p_1 - p_2 - (p_3 - p_2)}{\rho} \quad (2)$$

Equation 2 indicates our approach: We will find  $p_1 - p_3$  by using  $p_1 - p_2 = 300 \text{ mm H}_2\text{O}$ , and obtain a value for  $p_3 - p_2$  by applying the  $x$  component of the momentum equation to a control volume between sections ② and ③.

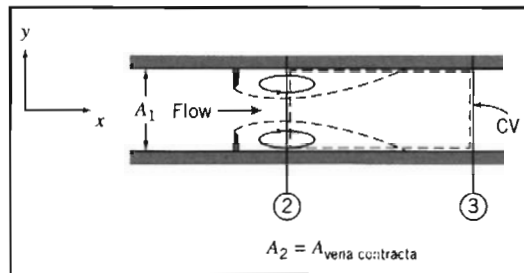

$$\begin{aligned} \text{Governing equation: } &= 0(5) = 0(1) \\ F_{S_x} + F_{B_x} &= \frac{\partial}{\partial t} \int_{CV} u \rho dV + \int_{CS} u \rho \bar{V} \cdot d\bar{A} \end{aligned} \quad (4.18a)$$

- Assumptions: (5)  $F_{B_x} = 0$ .  
 (6) Uniform flow at sections ② and ③.  
 (7) Pressure uniform across duct at sections ② and ③.  
 (8) Neglect friction force on CV.

Then, simplifying and rearranging,

$$(p_2 - p_3) A_1 = u_2(-\rho \bar{V}_2 A_2) + u_3(\rho \bar{V}_3 A_3) = (u_3 - u_2) \rho Q = (\bar{V}_3 - \bar{V}_2) \rho Q$$

or

$$p_3 - p_2 = (\bar{V}_2 - \bar{V}_3) \frac{\rho Q}{A_1}$$

Now  $\bar{V}_3 = Q/A_1$ , and

$$\bar{V}_2 = \frac{Q}{A_2} = \frac{Q}{0.65 A_1} = \frac{Q}{0.65 \beta^2 A_1}$$

Thus,

$$p_3 - p_2 = \frac{\rho Q^2}{A_1^2} \left[ \frac{1}{0.65\beta^2} - 1 \right]$$

$$p_3 - p_2 = \frac{1.23 \text{ kg}}{\text{m}^3} \times \frac{(1)^2 \text{ m}^6}{\text{s}^2} \times \frac{4^2}{\pi^2 (0.25)^4 \text{ m}^4} \left[ \frac{1}{0.65(0.66)^2} - 1 \right] \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}}$$

$$p_3 - p_2 = 1290 \text{ N/m}^2$$

The diameter ratio,  $\beta$ , was selected to give maximum manometer deflection at maximum flow rate. Thus

$$p_1 - p_2 = \rho_{\text{H}_2\text{O}} g \Delta h = \frac{999 \text{ kg}}{\text{m}^3} \times \frac{9.81 \text{ m}}{\text{s}^2} \times 0.30 \text{ m} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} = 2940 \text{ N/m}^2$$

Substituting into Eq. 2 gives

$$h_{l_T} = \frac{p_1 - p_3}{\rho} = \frac{p_1 - p_2 - (p_3 - p_2)}{\rho}$$

$$h_{l_T} = \frac{(2940 - 1290) \text{ N}}{\text{m}^2} \times \frac{\text{m}^3}{1.23 \text{ kg}} = 1340 \text{ N} \cdot \text{m/kg} \leftarrow h_{l_T}$$

To compare with Fig. 8.23, express the permanent pressure loss as a fraction of the meter differential

$$\frac{p_1 - p_3}{p_1 - p_2} = \frac{(2940 - 1290) \text{ N/m}^2}{2940 \text{ N/m}^2} = 0.561$$

The fraction from Fig. 8.23 is about 0.57. This is satisfactory agreement!

This problem illustrates flow meter calculations and shows use of the momentum equation to compute the pressure rise in a sudden expansion.

## 8-11 LINEAR FLOW METERS

The disadvantage of restriction flow meters (except the LFE) is that the measured output ( $\Delta p$ ) is not linear with the flow rate  $Q$ . Several flow meter types produce outputs that are directly proportional to flow rate. These meters produce signals without the need to measure differential pressure. The most common linear flow meters are discussed briefly in the following paragraphs.

*Float meters* may be used to indicate flow rate directly for liquids or gases. An example is shown in Fig. 8.24 In operation, the ball or float is carried upward in the tapered clear tube by the flowing fluid until the drag force and float weight are in equilibrium. Such meters (often called *rotameters*) are available with factory calibration for a number of common fluids and flow rate ranges.

A free-running vaned impeller may be mounted in a cylindrical section of tube (Fig. 8.25) to make a *turbine flow meter*. With proper design, the rate of rotation of the impeller may be made closely proportional to volume flow rate over a wide range.

Rotational speed of the turbine element can be sensed using a magnetic or modulated carrier pickup external to the meter. This sensing method therefore requires no penetrations or seals in the duct. Thus turbine flow meters can be used safely to measure flow rates in corrosive or toxic fluids. The electrical signal can be displayed, recorded, or integrated to provide total flow information.

An interesting device is the *vortex flow meter*. This device takes advantage of the fact that a uniform flow will generate a vortex street when it encounters a bluff body



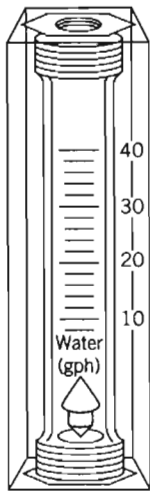


Fig. 8.24 Float-type variable-area flow meter. (Courtesy of Dwyer Instrument Co., Michigan City, Indiana.)

such as a cylinder perpendicular to the flow. A vortex street is a series of alternating vortices shed from the rear of the body; the alternation generates an oscillating sideways force on, and therefore oscillation of, the cylinder (the classic example of this being the “singing” of telephone wires in a high wind). It turns out that the dimensionless group characterizing this phenomenon is the Strouhal number,  $St = fL/V$  ( $f$  is the vortex shedding frequency,  $L$  is the cylinder diameter, and  $V$  is the freestream velocity), and it is approximately constant ( $St \approx 0.21$ ). Hence we have a device for which  $V \propto f$ . Measurement of  $f$  thus directly indicates the velocity  $V$  (however, the velocity profile does affect the shedding frequency so calibration is required). The cylinder used in a flow meter is usually quite short in length—10 mm or less—and placed perpendicular to the flow (and for some devices is not a cylinder at all but some other small bluff object). The oscillation can be measured using a strain gage or other sensor. Vortex flow meters can be used over a 20:1 range of flow rates [10].

The *electromagnetic flow meter* uses the principle of magnetic induction. A magnetic field is created across a pipe. When a conductive fluid passes through the field, a voltage is generated at right angles to the field and velocity vectors. Electrodes placed on a pipe diameter are used to detect the resulting signal voltage. The signal voltage is proportional to the average axial velocity when the profile is axisymmetric.

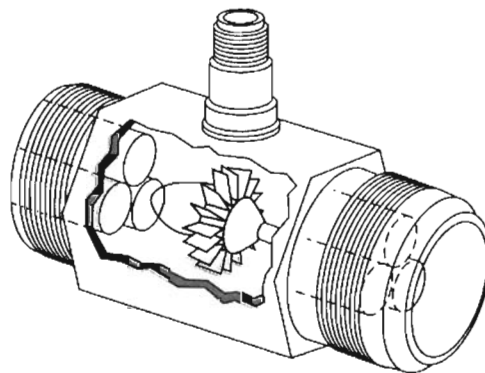


Fig. 8.25 Turbine flow meter. (Courtesy of Potter Aeronautical Corp., Union, New Jersey.)



*Magnetic flow meters* may be used with liquids that have electrical conductivities above 100 microsiemens per meter (1 siemen = 1 ampere per volt). The minimum flow speed should be above about 0.3 m/s, but there are no restrictions on Reynolds number. The flow rate range normally quoted is 10:1 [10].

*Ultrasonic flow meters* also respond to average velocity at a pipe cross section. Two principal types of ultrasonic meters are common: Propagation time is measured for clean liquids, and reflection frequency shift (Doppler effect) is measured for flows carrying particulates. The speed of an acoustic wave increases in the flow direction and decreases when transmitted against the flow. For clean liquids, an acoustic path inclined to the pipe axis is used to infer flow velocity. Multiple paths are used to estimate the volume flow rate accurately.

Doppler effect ultrasonic flow meters depend on reflection of sonic waves (in the MHz range) from scattering particles in the fluid. When the particles move at flow speed, the frequency shift is proportional to flow speed; for a suitably chosen path, output is proportional to volume flow rate. One or two transducers may be used; the meter may be clamped to the outside of the pipe. Ultrasonic meters may require calibration in place. Flow rate range is 10:1 [10].

---

## 8-12 TRAVERSING METHODS

In situations such as in air handling or refrigeration equipment, it may be impractical or impossible to install fixed flow meters. In such cases it may be possible to obtain flow rate data using traversing techniques.

To make a flow rate measurement by traverse, the duct cross-section is conceptually subdivided into segments of equal area. The velocity is measured at the center of each area segment using a pitot tube, a total head tube, or a suitable anemometer. The volume flow rate for each segment is approximated by the product of the measured velocity and the segment area. The flow rate through the entire duct is the sum of these segmental flow rates. Details of recommended procedures for flow rate measurements by the traverse method are given in [27].

Use of *pitot* or *pitot-static tubes* for traverse measurements requires direct access to the flow field. Pitot tubes give uncertain results when pressure gradients or streamline curvature are present, and their response times are slow. Two types of anemometers—*thermal anemometers* and *laser Doppler anemometers* (LDAs)—overcome these difficulties partially, although they introduce new complications.

Thermal anemometers use tiny elements (either hot-wire or hot-film elements) that are heated electrically. Sophisticated electronic feedback circuits are used to maintain the temperature of the element constant and to sense the input heating rate needed to do this. The heating rate is related to the local flow velocity by calibration (a higher velocity leads to more heat transfer). The primary advantage of thermal anemometers is the small size of the sensing element. Sensors as small as 0.002 mm in diameter and 0.1 mm long are available commercially. Because the thermal mass of such tiny elements is extremely small, their response to fluctuations in flow velocity is rapid. Frequency responses to the 50 kHz range have been quoted [28]. Thus thermal anemometers are ideal for measuring turbulence quantities. Insulating coatings may be applied to permit their use in conductive or corrosive gases or liquids.

Because of their fast response and small size, thermal anemometers are used extensively for research. Numerous schemes have been published for treating the result-

ing data [29]. Digital processing techniques, including fast Fourier transforms, can be applied to the signals to obtain mean values and moments, and to analyze frequency content and correlations.

Laser Doppler anemometers are becoming widely used for specialized applications where direct physical access to the flow field is difficult or impossible. One or more laser beams are focused to a small volume in the flow at the location of interest. Laser light is scattered from particles that are present in the flow (dust or particulates) or introduced for this purpose. A frequency shift is caused by the local flow speed (Doppler effect). Scattered light and a reference beam are collected by receiving optics. The frequency shift is proportional to the flow speed; this relationship may be calculated, so there is no need for calibration. Since velocity is measured directly, the signal is unaffected by changes in temperature, density, or composition in the flow field. The primary disadvantages of LDAs are that the optical equipment is expensive and fragile, and that extremely careful alignment is needed (as the authors can attest).

## 8-13 SUMMARY

In this chapter we have:

- ✓ Defined many terms used in the study of internal incompressible viscous flow, such as: the entrance length, fully developed flow, the friction velocity, Reynolds stress, the kinetic energy coefficient, the friction factor, major and minor head losses, and hydraulic diameter.
- ✓ Analyzed laminar flow between parallel plates and in pipes and observed that we can obtain the velocity distribution analytically, and from this derive: the average velocity, the maximum velocity and its location, the flow rate, the wall shear stress, and the shear stress distribution.
- ✓ Studied turbulent flow in pipes and ducts and learned that semi-empirical approaches are needed, e.g., the power-law velocity profile.
- ✓ Written the energy equation in a form useful for analyzing pipe flows.
- ✓ Discussed how to incorporate pumps, fans, and blowers into a pipe flow analysis.
- ✓ Described various flow measurement devices: direct measurement, restriction devices (orifice plate, nozzle, and venturi), linear flow meters (rotameters, various electromagnetic or acoustic devices, and the vortex flow meter), and traversing devices (pitot tubes and laser-Doppler anemometers).

We have learned that pipe and duct flow problems often need iterative solution—the flow rate  $Q$  is not a linear function of the driving force (usually  $\Delta p$ ), except for laminar flows (which are not common in practice). \*We have also seen that pipe networks can be analyzed using the same techniques as a single-pipe system, with the addition of a few basic rules, and that in practice a computer application such as *Excel* is needed to solve all but the simplest networks.

## REFERENCES

1. Streeter, V. L., ed., *Handbook of Fluid Dynamics*. New York: McGraw-Hill, 1961.
2. Rouse, H., and S. Ince, *History of Hydraulics*. New York: Dover, 1957.
3. Moin, P., and J. Kim, "Tackling Turbulence with Supercomputers," *Scientific American*, 276, 1, January 1997, pp. 62–68.


\* This topic applies to a section that may be omitted without loss of continuity in the text material.

4. Panton, R. L., *Incompressible Flow*, 2nd ed. New York: Wiley, 1996.
5. Laufer, J., "The Structure of Turbulence in Fully Developed Pipe Flow," U.S. National Advisory Committee for Aeronautics (NACA), Technical Report 1174, 1954.
6. Tennekes, H., and J. L. Lumley, *A First Course in Turbulence*. Cambridge, MA: The MIT Press, 1972.
7. Hinze, J. O., *Turbulence*, 2nd ed. New York: McGraw-Hill, 1975.
8. Moody, L. F., "Friction Factors for Pipe Flow," *Transactions of the ASME*, 66, 8, November 1944, pp. 671–684.
9. Colebrook, C. F., "Turbulent Flow in Pipes, with Particular Reference to the Transition Region between the Smooth and Rough Pipe Laws," *Journal of the Institution of Civil Engineers, London*, 11, 1938–39, pp. 133–156.
10. Miller, R. W., *Flow Measurement Engineering Handbook*, 3rd ed. New York: McGraw-Hill, 1996.
11. Swamee, P. K., and A. K. Jain, "Explicit Equations for Pipe-Flow Problems," *Proceedings of the ASCE, Journal of the Hydraulics Division*, 102, HY5, May 1976, pp. 657–664.
12. "Flow of Fluids through Valves, Fittings, and Pipe," New York: Crane Company, Technical Paper No. 410, 1982.
13. *ASHRAE Handbook—Fundamentals*. Atlanta, GA: American Society of Heating, Refrigerating, and Air Conditioning Engineers, Inc., 1981.
14. Cockrell, D. J., and C. I. Bradley, "The Response of Diffusers to Flow Conditions at Their Inlet," Paper No. 5, *Symposium on Internal Flows*, University of Salford, Salford, England, April 1971, pp. A32–A41.
15. Sovran, G., and E. D. Klomp, "Experimentally Determined Optimum Geometries for Rectilinear Diffusers with Rectangular, Conical, or Annular Cross-Sections," in *Fluid Mechanics of Internal Flows*, G. Sovran, ed. Amsterdam: Elsevier, 1967.
16. Feiereisen, W. J., R. W. Fox, and A. T. McDonald, "An Experimental Investigation of Incompressible Flow without Swirl in R-Radial Diffusers," *Proceedings, Second International Japan Society of Mechanical Engineers Symposium on Fluid Machinery and Fluidics*, Tokyo, Japan, September 4–9, 1972, pp. 81–90.
17. McDonald, A. T., and R. W. Fox, "An Experimental Investigation of Incompressible Flow in Conical Diffusers," *International Journal of Mechanical Sciences*, 8, 2, February 1966, pp. 125–139.
18. Runstadler, P. W., Jr., "Diffuser Data Book," Hanover, NH: Creare, Inc., Technical Note 186, 1975.
19. Reneau, L. R., J. P. Johnston, and S. J. Kline, "Performance and Design of Straight, Two-Dimensional Diffusers," *Transactions of the ASME, Journal of Basic Engineering*, 89D, 1, March 1967, pp. 141–150.
20. *Aerospace Applied Thermodynamics Manual*. New York: Society of Automotive Engineers, 1969.
21. Daily, J. W., and D. R. F. Harleman, *Fluid Dynamics*. Reading, MA: Addison-Wesley, 1966.
22. White, F. M., *Fluid Mechanics*, 4th ed. New York: McGraw-Hill, 1999.
23. Hamilton, J. B., "The Suppression of Intake Losses by Various Degrees of Rounding," University of Washington, Seattle, WA, Experiment Station Bulletin 51, 1929.
24. Herschel, C., *The Two Books on the Water Supply of the City of Rome, from Sextus Julius Frontinus* (ca. 40–103 A.D.). Boston, 1899.

25. Lam, C. F., and M. L. Wolla, "Computer Analysis of Water Distribution Systems: Part 1, Formulation of Equations," *Proceedings of the ASCE, Journal of the Hydraulics Division*, 98, HY2, February 1972, pp. 335–344.
26. Bean, H. S., ed., *Fluid Meters, Their Theory and Application*. New York: American Society of Mechanical Engineers, 1971.
27. ISO 7145, *Determination of Flowrate of Fluids in Closed Conduits or Circular Cross Sections—Method of Velocity Determination at One Point in the Cross Section*, ISO UDC 532.57.082.25:532.542, 1st ed. Geneva: International Standards Organization, 1982.
28. Goldstein, R. J., ed., *Fluid Mechanics Measurements*, 2nd ed. Washington, D.C.: Taylor & Francis, 1996.
29. Bruun, H. H., *Hot-Wire Anemometry—Principles and Signal Analysis*. New York: Oxford University Press, 1995.
30. Potter, M. C., and J. F. Foss, *Fluid Mechanics*. New York: Ronald, 1975.

## PROBLEMS


- 8.1 Consider incompressible flow in a circular channel. Derive general expressions for Reynolds number in terms of (a) volume flow rate and tube diameter and (b) mass flow rate and tube diameter. The Reynolds number is 1800 in a section where the tube diameter is 10 mm. Find the Reynolds number for the same flow rate in a section where the tube diameter is 6 mm.
- 8.2 Standard air enters a 0.25 m diameter duct. Find the volume flow rate at which the flow becomes turbulent. At this flow rate, estimate the entrance length required to establish fully developed flow.
- 8.3 For flow in circular tubes, transition to turbulence usually occurs around  $Re \approx 2300$ . Investigate the circumstances under which the flows of (a) standard air and (b) water at 15°C become turbulent. On log-log graphs, plot: the average velocity, the volume flow rate, and the mass flow rate, at which turbulence first occurs, as functions of tube diameter.
- 8.4 Standard air flows in a pipe system in which the area is decreased in two stages from 50 mm, to 25 mm, to 10 mm. Each section is 1 m long. As the flow rate is increased, which section will become turbulent first? Determine the flow rates at which one, two, then all three sections first become turbulent. At each of these flow rates, determine which sections, if any, attain fully developed flow.

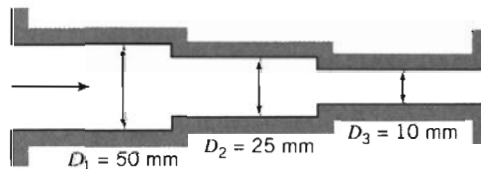

P8.4


- 8.5 For the laminar flow in the section of pipe shown in Fig. 8.1, sketch the expected wall shear stress, pressure, and centerline velocity as functions of distance along the

- pipe. Explain significant features of the plots, comparing them with fully developed flow. Can the Bernoulli equation be applied anywhere in the flow field? If so, where? Explain briefly.
- 8.6 The velocity profile for fully developed flow between stationary parallel plates is given by  $u = a(h^2/4 - y^2)$ , where  $a$  is a constant,  $h$  is the total gap width between plates, and  $y$  is the distance measured from the center of the gap. Determine the ratio  $\bar{V}/u_{\max}$ .
- 8.7 An incompressible fluid flows between two infinite stationary parallel plates. The velocity profile is given by  $u = u_{\max}(Ay^2 + By + C)$ , where  $A$ ,  $B$ , and  $C$  are constants and  $y$  is measured upward from the lower plate. The total gap width is  $h$  units. Use appropriate boundary conditions to express the magnitude and units of the constants in terms of  $h$ . Develop an expression for volume flow rate per unit depth and evaluate the ratio  $\bar{V}/u_{\max}$ .
- 8.8 A viscous oil flows steadily between stationary parallel plates. The flow is laminar and fully developed. The total gap width between the plates is  $h = 5$  mm. The oil viscosity is  $0.5 \text{ N} \cdot \text{s}/\text{m}^2$  and the pressure gradient is  $-1000 \text{ N}/\text{m}^2/\text{m}$ . Find the magnitude and direction of the shear stress on the upper plate and the volume flow rate through the channel, per meter of width.
- 8.9 Viscous oil flows steadily between parallel plates. The flow is fully developed and laminar. The pressure gradient is  $-8 \text{ lbf}/\text{ft}^2/\text{ft}$  and the channel half-width is  $h = 0.06$  in. Calculate the magnitude and direction of the wall shear stress at the upper plate surface. Find the volume flow rate through the channel ( $\mu = 0.01 \text{ lbf} \cdot \text{s}/\text{ft}^2$ ).
- 8.10 A fluid flows steadily between two parallel plates. The flow is fully developed and laminar. The distance between the plates is  $h$ .
- (a) Derive an equation for the shear stress as a function of  $y$ . Sketch this function.  
 (b) For  $\mu = 2.4 \times 10^{-5} \text{ lbf} \cdot \text{s}/\text{ft}^2$ ,  $\partial p/\partial x = -4.0 \text{ lbf}/\text{ft}^2/\text{ft}$ , and  $h = 0.05$  in., calculate the maximum shear stress, in  $\text{lbf}/\text{ft}^2$ .
- 8.11 Oil is confined in a 100 mm diameter cylinder by a piston having a radial clearance of 0.025 mm and a length of 50 mm. A steady force of 20 kN is applied to the piston. Assume the properties of SAE 30 oil at 50°C. Estimate the rate at which oil leaks past the piston.
- 8.12 A hydraulic jack supports a load of 9,000 kg. The following data are given:
- |  |         |
|--|---------|
| Diameter of piston                           | 100 mm  |
| Radial clearance between piston and cylinder | 0.05 mm |
| Length of piston                             | 120 mm  |
- Estimate the rate of leakage of hydraulic fluid past the piston, assuming the fluid is SAE 30 oil at 30°C.
- 8.13 A high pressure in a system is created by a small piston-cylinder assembly. The piston diameter is 6 mm and it extends 50 mm into the cylinder. The radial clearance between the piston and cylinder is 0.002 mm. Neglect elastic deformations of the piston and cylinder caused by pressure. Assume the fluid properties are those of SAE 10W oil at 35°C. When the pressure in the cylinder is 600 MPa, estimate the leakage rate.
- 8.14 A hydrostatic bearing is to support a load of 3600 pounds per foot of length perpendicular to the diagram. The bearing is supplied with SAE 30 oil at 100°F and 100 psig through the central slit. Since the oil is viscous and the gap is small, the flow may be considered fully developed. Calculate (a) the required width of the bearing pad, (b) the resulting pressure gradient,  $dp/dx$ , and (c) the gap height, if  $Q = 0.0006 \text{ ft}^3/\text{min}$  per foot of length.

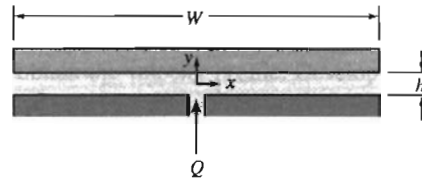


P8.14

- 8.15 The basic component of a pressure gage tester consists of a piston-cylinder apparatus as shown. The piston, 6 mm in diameter, is loaded to develop a pressure of known magnitude. (The piston length is 25 mm.) Calculate the mass,  $M$ , required to produce 1.5 MPa (gage) in the cylinder. Determine the leakage flow rate as a function of radial clearance,  $a$ , for this load if the liquid is SAE 30 oil at 20°C. Specify the maximum allowable radial clearance so the vertical movement of the piston due to leakage will be less than 1 mm/min.

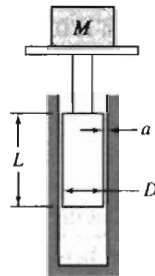

P8.15

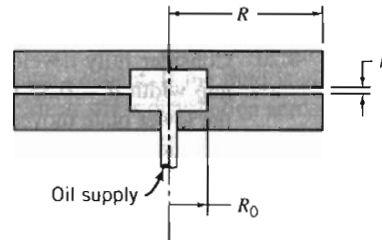

P8.16

- 8.16 Viscous liquid, at volume flow rate  $Q$ , is pumped through the central opening into the narrow gap between the parallel disks shown. The flow rate is low, so the flow is laminar, and the pressure gradient due to convective acceleration in the gap is negligible compared with the gradient caused by viscous forces (this is termed *creeping flow*). Obtain a general expression for the variation of average velocity in the gap between the disks. For creeping flow, the velocity profile at any cross section in the gap is the same as for fully developed flow between stationary parallel plates. Evaluate the pressure gradient,  $dp/dr$ , as a function of radius. Obtain an expression for  $p(r)$ . Show that the net force required to hold the upper plate in the position shown is

$$F = \frac{3\mu QR^2}{h^3} \left[ 1 - \left( \frac{R_0}{R} \right)^2 \right]$$



- 8.17 Consider the simple power-law model for a non-Newtonian fluid given by Eq. 2.11. Extend the analysis of Section 8-2 to show that the velocity profile for fully developed laminar flow of a power-law fluid between stationary parallel plates separated by distance  $2h$  may be written

$$u = \left( \frac{h \Delta p}{k L} \right)^{1/n} \frac{nh}{n+1} \left[ 1 - \left( \frac{y}{h} \right)^{\frac{n+1}{n}} \right]$$

where  $y$  is the coordinate measured from the channel centerline. Plot the profiles  $u/U_{\max}$  versus  $y/h$  for  $n = 0.7, 1.0,$  and  $1.3$ .

- 8.18 Using the profile of Problem 8.17, show that the flow rate for fully developed laminar flow of a power-law fluid between stationary parallel plates may be written as

$$Q = \left( \frac{h \Delta p}{k L} \right)^{\frac{1}{n}} \frac{2nwh^2}{2n+1}$$

Here  $w$  is the plate width. In such an experimental setup the following data on applied pressure difference  $\Delta p$  and flow rate  $Q$  were obtained:


$\Delta p$ (kPa)	10	20	30	40	50	60	70	80	90	100
$Q$ (L/min)	0.451	0.759	1.01	1.15	1.41	1.57	1.66	1.85	2.05	2.25

Determine if the fluid is pseudoplastic or dilatant, and obtain an experimental value for  $n$ .

- 8.19 A sealed journal bearing is formed from concentric cylinders. The inner and outer radii are 25 and 26 mm, the journal length is 100 mm, and it turns at 2800 rpm. The gap is filled with oil in laminar motion. The velocity profile is linear across the gap. The torque needed to turn the journal is 0.2 N · m. Calculate the viscosity of the oil. Will the torque increase or decrease with time? Why?
- 8.20 Consider fully developed laminar flow between infinite parallel plates separated by gap width  $d = 0.35$  in. The upper plate moves to the right with speed  $U_2 = 2$  ft/s; the lower plate moves to the left with speed  $U_1 = 1$  ft/s. The pressure gradient in the direction of flow is zero. Develop an expression for the velocity distribution in the gap. Find the volume flow rate per unit depth passing a given cross-section.
- 8.21 Two immiscible fluids are contained between infinite parallel plates. The plates are separated by distance  $2h$ , and the two fluid layers are of equal thickness  $h$ ; the dynamic viscosity of the upper fluid is three times that of the lower fluid. If the lower plate is stationary and the upper plate moves at constant speed  $U = 5$  m/s, what is the velocity at the interface? Assume laminar flows, and that the pressure gradient in the direction of flow is zero.
- 8.22 Water at 60°C flows between two large flat plates. The lower plate moves to the left at a speed of 0.3 m/s; the upper plate is stationary. The plate spacing is 3 mm, and the flow is laminar. Determine the pressure gradient required to produce zero net flow at a cross-section.
- 8.23 Two immiscible fluids are contained between infinite parallel plates. The plates are separated by distance  $2h$ , and the two fluid layers are of equal thickness  $h = 2.5$  mm. The dynamic viscosity of the upper fluid is twice that of the lower fluid, which is  $\mu_{\text{lower}} = 0.5$  N · s/m<sup>2</sup>. If the plates are stationary and the applied pressure gradient is  $-1000$  N/m<sup>2</sup>/m, find the velocity at the interface. What is the maximum velocity of the flow? Plot the velocity distribution.
- 8.24 The dimensionless velocity profile for fully developed laminar flow between infinite parallel plates with the upper plate moving at constant speed  $U$  is shown in Fig. 8.5. Find the pressure gradient  $\partial p/\partial x$  at which (a) the upper plate and (b) the lower plate experience zero shear stress, in terms of  $U$ ,  $a$ , and  $\mu$ . Plot the dimensionless velocity profiles for these cases.
- 8.25 The record-read head for a computer disk-drive memory storage system rides above the spinning disk on a very thin film of air (the film thickness is 0.5  $\mu\text{m}$ ). The head location is 150 mm from the disk centerline; the disk spins at 3600 rpm. The record-read head is 10 mm square. For standard air in the gap between the head and disk, determine (a) the Reynolds number of the flow, (b) the viscous shear stress, and (c) the power required to overcome viscous shear.




- 8.26 Consider steady, fully developed laminar flow of a viscous liquid down an inclined surface. The liquid layer is of constant thickness,  $h$ . Use a suitably chosen differential control volume to obtain the velocity profile. Develop an expression for the volume flow rate.
- 8.27 Consider steady, incompressible, and fully developed laminar flow of a viscous liquid down an incline with no pressure gradient. The velocity profile was derived in Example Problem 5.9. Plot the velocity profile. Calculate the kinematic viscosity of the liquid if the film thickness on a  $30^\circ$  slope is 0.8 mm and the maximum velocity is 15.7 mm/s.
- 8.28 The velocity distribution for flow of a thin viscous film down an inclined plane surface was developed in Example Problem 5.9. Consider a film 5.63 mm thick, of liquid with  $SG = 1.26$  and dynamic viscosity of  $1.40 \text{ N} \cdot \text{s}/\text{m}^2$ . Derive an expression for the shear stress distribution within the film. Calculate the maximum shear stress within the film and indicate its direction. Evaluate the volume flow rate in the film, in  $\text{mm}^3/\text{s}$  per millimeter of surface width. Calculate the film Reynolds number based on average velocity.
- 8.29 Two immiscible fluids of equal density are flowing down a surface inclined at a  $30^\circ$  angle. The two fluid layers are of equal thickness  $h = 2.5 \text{ mm}$ ; the kinematic viscosity of the upper fluid is twice that of the lower fluid, which is  $\nu_{\text{lower}} = 2 \times 10^{-4} \text{ m}^2/\text{s}$ . Find the velocity at the interface and the velocity at the free surface. Plot the velocity distribution.
- 8.30 Consider fully developed flow between parallel plates with the upper plate moving at  $U = 2 \text{ m/s}$ ; the spacing between the plates is  $a = 2.5 \text{ mm}$ . Determine the flow rate per unit depth for the case of zero pressure gradient. If the fluid is air, evaluate the shear stress on the lower plate and plot the shear stress distribution across the channel for the zero pressure gradient case. Will the flow rate increase or decrease if the pressure gradient is adverse? Determine the pressure gradient that will give zero shear stress at  $y = 0.25a$ . Plot the shear stress distribution across the channel for the latter case.
- 8.31 Water at  $60^\circ\text{F}$  flows between parallel plates with gap width  $b = 0.01 \text{ ft}$ . The upper plate moves with speed  $U = 1 \text{ ft/s}$  in the positive  $x$  direction. The pressure gradient is  $\partial p/\partial x = -1.20 \text{ lbf}/\text{ft}^2/\text{ft}$ . Locate the point of maximum velocity and determine its magnitude (let  $y = 0$  at the bottom plate). Determine the volume of flow that passes a given cross-section ( $x = \text{constant}$ ) in 10 s. Plot the velocity and shear stress distributions.
- 8.32 A continuous belt, passing upward through a chemical bath at speed  $U_0$ , picks up a liquid film of thickness  $h$ , density  $\rho$ , and viscosity  $\mu$ . Gravity tends to make the liquid drain down, but the movement of the belt keeps the liquid from running off completely. Assume that the flow is fully developed and laminar with zero pressure gradient, and that the atmosphere produces no shear stress at the outer surface of the film. State clearly the boundary conditions to be satisfied by the velocity at  $y = 0$  and  $y = h$ . Obtain an expression for the velocity profile.

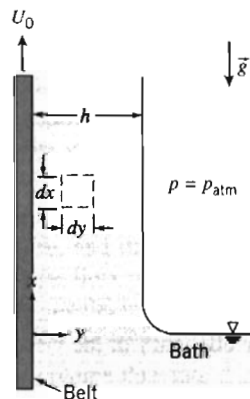

P8.32

- 8.33 The velocity profile for fully developed flow of air between parallel plates with the upper plate moving is given by Eq. 8.8. Assume  $U = 2$  m/s and  $a = 2.5$  mm. Find the pressure gradient for which there is no net flow in the  $x$  direction. Plot the expected velocity distribution and the expected shear stress distribution across the channel for this flow. For the case where  $u = 2U$  at  $y/a = 0.5$ , plot the expected velocity distribution and shear stress distribution across the channel. Comment on features of the plots.
- 8.34 The velocity profile for fully developed flow of water between parallel plates with the upper plate moving is given by Eq. 8.8. Assume  $U = 2$  m/s and  $a = 2.5$  mm. Determine the volume flow rate per unit depth for zero pressure gradient. Evaluate the shear stress on the lower plate and sketch the shear stress distribution across the channel. Would the volume flow rate increase or decrease with a mild adverse pressure gradient? Calculate the pressure gradient that will give zero shear stress at  $y/a = 0.25$ . Sketch the shear stress distribution for this case.
- 8.35 Microchips are supported on a thin air film on a smooth horizontal surface during one stage of the manufacturing process. The chips are 11.7 mm long and 9.35 mm wide and have a mass of 0.325 g. The air film is 0.125 mm thick. The initial speed of a chip is  $V_0 = 1.75$  mm/s; the chip slows as the result of viscous shear in the air film. Analyze the chip motion during deceleration to develop a differential equation for chip speed  $V$  versus time  $t$ . Calculate the time required for a chip to lose 5 percent of its initial speed. Plot the variation of chip speed versus time during deceleration. Explain why it looks as you have plotted it.
- 8.36 Free-surface waves begin to form on a laminar liquid film flowing down an inclined surface whenever the Reynolds number, based on mass flow per unit width of film, is larger than about 33. Estimate the maximum thickness of a laminar film of water that remains free from waves while flowing down a vertical surface.
- 8.37 Hold a flat sheet of paper 50 to 75 mm above a smooth desktop. Propel the sheet smoothly parallel to the desk surface as you release it. Comment on the motion you observe. Explain the fluid dynamic phenomena involved in the motion.
- 8.38 A viscous-shear pump is made from a stationary housing with a close-fitting rotating drum inside. The clearance is small compared with the diameter of the drum, so flow in the annular space may be treated as flow between parallel plates. Fluid is dragged around the annulus by viscous forces. Evaluate the performance characteristics of the shear pump (pressure differential, input power, and efficiency) as functions of volume flow rate. Assume that the depth normal to the diagram is  $b$ .

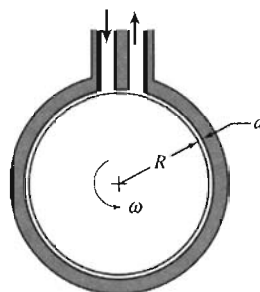

P8.38, P8.39

- 8.39 The efficiency of the viscous-shear pump of Fig. P8.39 is given by

$$\eta = 6q \frac{(1 - 2q)}{(4 - 6q)}$$


where  $q = Q/abR\omega$  is a dimensionless flow rate ( $Q$  is the flow rate at pressure differential  $\Delta p$ , and  $b$  is the depth normal to the diagram). Plot the efficiency versus dimensionless flow rate, and find the flow rate for maximum efficiency. Explain why the efficiency peaks, and why it is zero at certain values of  $q$ .

- 8.40 The clamping force to hold a part in a metal-turning operation is provided by high pressure oil supplied by a pump. Oil leaks axially through an annular gap with diameter  $D$ , length  $L$ , and radial clearance  $a$ . The inner member of the annulus rotates at angular speed  $\omega$ . Power is required both to pump the oil and to overcome viscous dissipation in the annular gap. Develop expressions in terms of the specified geometry for the pump power,  $\mathcal{P}_p$ , and the viscous dissipation power,  $\mathcal{P}_v$ . Show that the total power requirement is minimized when the radial clearance,  $a$ , is chosen such that  $\mathcal{P}_v = 3\mathcal{P}_p$ .
- 8.41 A journal bearing consists of a shaft of diameter  $D = 50$  mm and length  $L = 1$  m (moment of inertia  $I = 0.055$  kg  $\cdot$  m<sup>2</sup>) installed symmetrically in a stationary housing such that the annular gap is  $\delta = 1$  mm. The fluid in the gap has viscosity  $\mu = 0.1$  N  $\cdot$  s/m<sup>2</sup>. If the shaft is given an initial angular velocity of  $\omega = 60$  rpm, determine the time for the shaft to slow to 10 rpm.
- 8.42 An inventor proposes to make a "viscous timer" by placing a weighted cylinder inside a slightly larger cylinder containing viscous liquid, creating a narrow annular gap close to the wall. Analyze the flow field created when the apparatus is inverted and the mass begins to fall under gravity. Would this system make a satisfactory timer? If so, for what range of time intervals? What would be the effect of a temperature change on measured time?
- 8.43 Automotive design is tending toward all-wheel drive to improve vehicle performance and safety when traction is poor. An all-wheel drive vehicle must have an interaxle differential to allow operation on dry roads. Numerous vehicles are being built using multiplate viscous drives for interaxle differentials. Perform the analysis and design needed to define the torque transmitted by the differential for a given speed difference, in terms of the design parameters. Identify suitable dimensions for a viscous differential to transmit a torque of 150 N  $\cdot$  m at a speed loss of 125 rpm, using lubricant with the properties of SAE 30 oil. Discuss how to find the minimum material cost for the viscous differential, if the plate cost per square meter is constant.
- 8.44 For fully developed laminar flow in a pipe, determine the radial distance from the pipe axis at which the velocity equals the average velocity.
- 8.45 Consider first water and then SAE 10W lubricating oil flowing at 40°C in a 6 mm diameter tube. Determine the maximum flow rate (and the corresponding pressure gradient,  $\partial p/\partial x$ ) for each fluid at which laminar flow would be expected.
- 8.46 A hypodermic needle, with inside diameter  $d = 0.1$  mm and length  $L = 25$  mm, is used to inject saline solution with viscosity five times that of water. The plunger diameter is  $D = 10$  mm; the maximum force that can be exerted by a thumb on the plunger is  $F = 45$  N. Estimate the volume flow rate of saline that can be produced.
- 8.47 A viscosity measurement setup for an undergraduate fluid mechanics laboratory is to be made from flexible plastic tubing; the fluid is to be water. Assume the tubing diameter is  $D = 0.125 \pm 0.010$  in. and the length is 50 ft. Evaluate the maximum volume flow rate at which laminar flow would be expected and the corresponding pressure drop. Estimate the experimental uncertainty in viscosity measured using this apparatus. How could the setup be improved?
- 8.48 In a commercial viscometer, the volume flow rate is measured by timing the flow of a known volume through a vertical capillary under the influence of gravity. To reduce the uncertainty in time measurement to a negligible percentage, the size is chosen to




give a flow time of about 200 seconds. A certain viscometer has a capillary diameter of 0.31 mm and a tube length of 73 mm. Estimate the maximum amount the diameter can vary to allow viscosity measurements with uncertainty less than 1 percent. (Note the precision required is the order of  $\pm 1$  micrometer; thus most viscometers require calibration with a liquid of known viscosity.)

- 8.49 In engineering science there are often analogies to be made between disparate phenomena. For example, the applied pressure difference  $\Delta p$  and corresponding volume flow rate  $Q$  in a tube can be compared to the applied DC voltage  $V$  across and current  $I$  through an electrical resistor, respectively. By analogy, find a formula for the "resistance" of laminar flow of fluid of viscosity  $\mu$  in a tube length of  $L$  and diameter  $D$ , corresponding to electrical resistance  $R$ . For a tube 100 mm long with inside diameter 0.3 mm, find the maximum flow rate and pressure difference for which this analogy will hold for (a) kerosine and (b) castor oil (both at  $40^\circ\text{C}$ ). When the flow exceeds this maximum, why does the analogy fail?
- 8.50 Consider the capillary viscometer setup of Example Problem 8.4. Estimate the experimental uncertainty of the viscosity measurement if the least counts of the measurements are  $\pm 0.010$  MPa for pressure,  $\pm 0.01$  mm for tube diameter,  $\pm 5$  mm<sup>3</sup>/s for volume flow rate, and  $\pm 1.00$  mm for tube length (the specific gravity of the test liquid is 0.82). Investigate the effect of tube diameter on experimental uncertainty. Can the uncertainty be minimized by a proper choice of diameter?
- 8.51 Consider fully developed laminar flow in a circular pipe. Use a cylindrical control volume as shown. Indicate the forces acting on the control volume. Using the momentum equation, develop an expression for the velocity distribution.

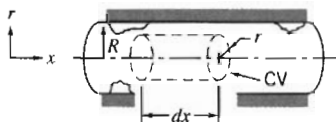

P8.51

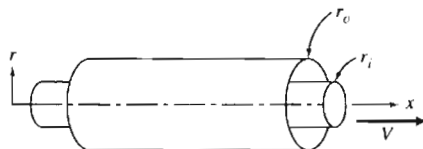

P8.52

- 8.52 Consider fully developed laminar flow in the annulus between two concentric pipes. The outer pipe is stationary, and the inner pipe moves in the  $x$  direction with speed  $V$ . Assume the axial pressure gradient is zero ( $\partial p/\partial x = 0$ ). Obtain a general expression for the shear stress,  $\tau$ , as a function of the radius,  $r$ , in terms of a constant,  $C_1$ . Obtain a general expression for the velocity profile,  $u(r)$ , in terms of two constants,  $C_1$  and  $C_2$ . Obtain expressions for  $C_1$  and  $C_2$ .
- 8.53 Consider fully developed laminar flow in the annular space formed by the two concentric cylinders shown in the diagram for Problem 8.52, but with pressure gradient,  $\partial p/\partial x$ , and the inner cylinder stationary. Let  $r_o = R$  and  $r_i = kR$ . Show that the velocity profile is given by

$$u = -\frac{R^2}{4\mu} \frac{\partial p}{\partial x} \left[ 1 - \left(\frac{r}{R}\right)^2 + \left(\frac{1-k^2}{\ln(1/k)}\right) \ln \frac{r}{R} \right]$$

Obtain an expression for the location of the maximum velocity as a function of  $k$ . Plot the location of maximum velocity ( $\alpha = r/R$ ) as a function of radius ratio  $k$ . Compare the limiting case,  $k \rightarrow 0$ , with the corresponding expression for flow in a circular pipe.

- 8.54 For the flow of Problem 8.53 show that the volume flow rate is given by

$$Q = -\frac{\pi R^4}{8\mu} \frac{\partial p}{\partial x} \left[ (1-k^4) - \frac{(1-k^2)^2}{\ln(1/k)} \right]$$

Find an expression for the average velocity. Compare the limiting case,  $k \rightarrow 0$ , with the corresponding expression for flow in a circular pipe.

- 8.55 In a food industry plant two immiscible fluids are pumped through a tube such that fluid 1 ( $\mu_1 = 1 \text{ N} \cdot \text{s/m}^2$ ) forms an inner core and fluid 2 ( $\mu_2 = 1.5 \text{ N} \cdot \text{s/m}^2$ ) forms an outer annulus. The tube has  $D = 5 \text{ mm}$  diameter and length  $L = 10 \text{ m}$ . Derive and plot the velocity distribution if the applied pressure difference,  $\Delta p$ , is 10 kPa.
- 8.56 It has been suggested in the design of an agricultural sprinkler that a structural member be held in place by a wire placed along the centerline of a pipe; it is surmised that a relatively small wire would have little effect on the pressure drop for a given flow rate. Using the result of Problem 8.54, derive an expression giving the percentage change in pressure drop as a function of the ratio of wire diameter to pipe diameter for laminar flow. Plot the percentage change in pressure drop as a function of radius ratio  $k$  for  $0.001 \leq k \leq 0.10$ .
- 8.57 A horizontal pipe carries fluid in fully developed turbulent flow. The static pressure difference measured between two sections is 5 psi. The distance between the sections is 30 ft and the pipe diameter is 6 in. Calculate the shear stress,  $\tau_w$ , that acts on the walls.
- 8.58 The pressure drop between two taps separated in the streamwise direction by 5 m in a horizontal, fully developed channel flow of water is 3 kPa. The cross-section of the channel is a  $30 \times 240 \text{ mm}$  rectangle. Calculate the average wall shear stress.
- 8.59 Kerosine is pumped through a smooth tube with inside diameter  $D = 30 \text{ mm}$  at close to the critical Reynolds number. The flow is unstable and fluctuates between laminar and turbulent states, causing the pressure gradient to intermittently change from approximately  $-4.5 \text{ kPa/m}$  to  $-11 \text{ kPa/m}$ . Which pressure gradient corresponds to laminar, and which to turbulent, flow? For each flow, compute the shear stress at the tube wall, and sketch the shear stress distributions.
- 8.60 A liquid drug, with the viscosity and density of water, is to be administered through a hypodermic needle. The inside diameter of the needle is 0.25 mm and its length is 50 mm. Determine (a) the maximum volume flow rate for which the flow will be laminar, (b) the pressure drop required to deliver the maximum flow rate, and (c) the corresponding wall shear stress.
- 8.61 Laufer [5] measured the following data for mean velocity in fully developed turbulent pipe flow at  $Re_U = 50,000$ :

$\bar{u}/U$	0.996	0.981	0.963	0.937	0.907	0.866	0.831
$y/r$	0.898	0.794	0.691	0.588	0.486	0.383	0.280
$\bar{u}/U$	0.792	0.742	0.700	0.650	0.619	0.551	
$y/R$	0.216	0.154	0.093	0.062	0.041	0.024	

In addition, Laufer measured the following data for mean velocity in fully developed turbulent pipe flow at  $Re_U = 500,000$ :

$\bar{u}/U$	0.997	0.988	0.975	0.959	0.934	0.908
$y/R$	0.898	0.794	0.691	0.588	0.486	0.383
$\bar{u}/U$	0.874	0.847	0.818	0.771	0.736	0.690
$y/R$	0.280	0.216	0.154	0.093	0.062	0.037

Using *Excel's* trendline analysis, fit each set of data to the "power-law" profile for turbulent flow, Eq. 8.22, and obtain a value of  $n$  for each set. Do the data tend to confirm the validity of Eq. 8.22? Plot the data and their corresponding trendlines on the same graph.


- 8.62 Consider the empirical “power-law” profile for turbulent pipe flow, Eq. 8.22. For  $n = 7$  determine the value of  $r/R$  at which  $u$  is equal to the average velocity,  $\bar{V}$ . Plot the results over the range  $6 \leq n \leq 10$  and compare with the case of fully developed laminar pipe flow, Eq. 8.14.
- 8.63 Equation 8.23 gives the power-law velocity profile exponent,  $n$ , as a function of centerline Reynolds number,  $Re_U$ , for fully developed turbulent flow in smooth pipes. Equation 8.24 relates mean velocity,  $\bar{V}$ , to centerline velocity,  $U$ , for various values of  $n$ . Prepare a plot of  $\bar{V}/U$  as a function of Reynolds number,  $Re_\nu$ .
- 8.64 A momentum coefficient,  $\beta$ , is defined by

$$\int_A u \rho u \, dA = \beta \int_A \bar{V} \rho u \, dA = \beta m \bar{V}$$

Evaluate  $\beta$  for a laminar velocity profile, Eq. 8.14, and for a “power-law” turbulent velocity profile, Eq. 8.22. Plot  $\beta$  as a function of  $n$  for turbulent power-law profiles over the range  $6 \leq n \leq 10$  and compare with the case of fully developed laminar pipe flow.

- 8.65 Consider fully developed laminar flow of water between stationary parallel plates. The maximum flow speed, plate spacing, and width are 6 m/s, 0.2 mm, and 30 mm, respectively. Find the kinetic energy coefficient,  $\alpha$ .
- 8.66 Consider fully developed laminar flow in a circular tube. Evaluate the kinetic energy coefficient for this flow.
- 8.67 Show that the kinetic energy coefficient,  $\alpha$ , for the “power law” turbulent velocity profile of Eq. 8.22 is given by Eq. 8.27. Plot  $\alpha$  as a function of  $Re_\nu$ , for  $Re_\nu = 1 \times 10^4$  to  $1 \times 10^7$ . When analyzing pipe flow problems it is common practice to assume  $\alpha \approx 1$ . Plot the error associated with this assumption as a function of  $Re_\nu$ , for  $Re_\nu = 1 \times 10^4$  to  $1 \times 10^7$ .
- 8.68 Water flows in a horizontal constant-area pipe; the pipe diameter is 50 mm and the average flow speed is 1.5 m/s. At the pipe inlet the gage pressure is 588 kPa, and the outlet is at atmospheric pressure. Determine the head loss in the pipe. If the pipe is now aligned so that the outlet is 25 m above the inlet, what will the inlet pressure need to be to maintain the same flow rate? If the pipe is now aligned so that the outlet is 25 m below the inlet, what will the inlet pressure need to be to maintain the same flow rate? Finally, how much lower than the inlet must the outlet be so that the same flow rate is maintained if both ends of the pipe are at atmospheric pressure (i.e., gravity feed)?
- 8.69 Measurements are made for the flow configuration shown in Fig. 8.11. At the inlet, section ①, the pressure is 10.2 psig, the average velocity is 5.5 ft/s, and the elevation is 7.5 ft. At the outlet, section ②, the pressure, average velocity, and elevation are 6.5 psig, 11.2 ft/s, and 10.5 ft, respectively. Calculate the head loss in ft. Convert to units of energy per unit mass.
- 8.70 For the flow configuration of Fig. 8.11, it is known that the head loss is 1.7 ft. The pressure drop from inlet to outlet is 3.7 psi, the velocity increases by 75 percent from inlet to outlet, and the elevation increase is 5.5 ft. Compute the inlet water velocity.
- 8.71 Consider the pipe flow from a reservoir in the system of Example Problem 8.5. At one flow condition, the head loss is 2.85 m at a volume flow rate of 0.0067 m<sup>3</sup>/s. Find the reservoir depth required to maintain this flow rate.
- 8.72 Consider the pipe flow from a reservoir in the system of Example Problem 8.5. At one flow condition, the head loss is 1.75 m and the reservoir depth is 3.60 m. Calculate the volume flow rate from the reservoir.

- 8.73 The average flow speed in a constant-diameter section of the Alaskan pipeline is 8.27 ft/s. At the inlet, the pressure is 1200 psig and the elevation is 150 ft; at the outlet, the pressure is 50 psig and the elevation is 375 ft. Calculate the head loss in this section of pipeline.
- 8.74 At the inlet to a constant-diameter section of the Alaskan pipeline, the pressure is 8.5 MPa and the elevation is 45 m; at the outlet the elevation is 115 m. The head loss in this section of pipeline is 6.9 kJ/kg. Calculate the outlet pressure.
- 8.75 Water flows from a horizontal tube into a large tank. The tube is located 2.5 m below the free surface of water in the tank. The head loss is 2 J/kg. Compute the average flow speed in the tube.
- 8.76 Water flows at 3 gpm through a horizontal  $\frac{5}{8}$  in. diameter garden hose. The pressure drop along a 50 ft length of hose is 12.3 psi. Calculate the head loss.
- 8.77 Water is pumped at the rate of 2 ft<sup>3</sup>/s from a reservoir 20 ft above a pump to a free discharge 90 ft above the pump. The pressure on the intake side of the pump is 5 psig and the pressure on the discharge side is 50 psig. All pipes are commercial steel of 6 in. diameter. Determine (a) the head supplied by the pump and (b) the total head loss between the pump and point of free discharge.

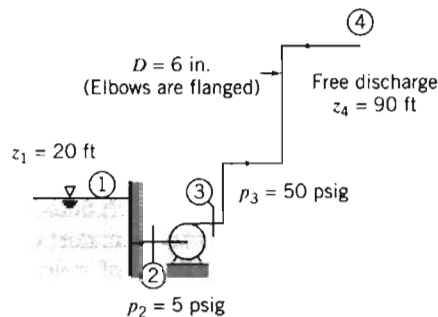

P8.77

- 8.78 Laufer [5] measured the following data for mean velocity near the wall in fully developed turbulent pipe flow at  $Re_U = 50,000$  ( $U = 9.8$  ft/s and  $R = 4.86$  in.) in air:

$\frac{\bar{u}}{U}$	0.343	0.318	0.300	0.264	0.228	0.221	0.179	0.152	0.140
$\frac{y}{R}$	0.0082	0.0075	0.0071	0.0061	0.0055	0.0051	0.0041	0.0034	0.0030

Plot the data and obtain the best-fit slope,  $d\bar{u}/dy$ . Use this to estimate the wall shear stress from  $\tau_w = \mu d\bar{u}/dy$ . Compare this value to that obtained using the friction factor  $f$  computed using (a) the Colebrook formula (Eq. 8.37), and (b) the Blasius correlation (Eq. 8.38).

- 8.79 A small-diameter capillary tube made from drawn aluminum is used in place of an expansion valve in a home refrigerator. The inside diameter is 0.5 mm. Calculate the corresponding relative roughness. Comment on whether this tube may be considered “smooth” with regard to fluid flow.
- 8.80 A smooth, 75 mm diameter pipe carries water (65°C) horizontally. When the mass flow rate is 0.075 kg/s, the pressure drop is measured to be 7.5 Pa per 100 m of pipe. Based on these measurements, what is the friction factor? What is the Reynolds

number? Does this Reynolds number generally indicate laminar or turbulent flow? Is the flow actually laminar or turbulent?

- 8.81 Using Eqs. 8.36 and 8.37, generate the Moody chart of Fig. 8.12.
- 8.82 The turbulent region of the Moody chart of Fig. 8.12 is generated from the empirical correlation given by Eq. 8.37. As noted in Section 8-7, an initial guess for  $f_0$ , given by

$$f_0 = 0.25 \left[ \log \left( \frac{e/D}{3.7} + \frac{5.74}{Re^{0.9}} \right) \right]^{-2}$$

produces results accurate to 1 percent with a single iteration [10]. Investigate the validity of this claim by plotting the error of this approach as a function of  $Re$ , with  $e/D$  as a parameter. Plot curves over a range of  $Re = 10^4$  to  $10^8$ , for  $e/D = 0, 0.0001, 0.001, 0.01$ , and  $0.05$ .

- 8.83 The Moody diagram gives the Darcy friction factor,  $f$ , in terms of Reynolds number and relative roughness. The *Fanning friction factor* for pipe flow is defined as

$$f_F = \frac{\tau_w}{\frac{1}{2} \rho \bar{V}^2}$$


where  $\tau_w$  is the wall shear stress in the pipe. Show that the relation between the Darcy and Fanning friction factors for fully developed pipe flow is given by  $f = 4f_F$ .

- 8.84 Water flows through a 25 mm diameter tube that suddenly enlarges to a diameter of 50 mm. The flow rate through the enlargement is 1.25 Liter/s. Calculate the pressure rise across the enlargement. Compare with the value for frictionless flow.
- 8.85 Air at standard conditions flows through a sudden expansion in a circular duct. The upstream and downstream duct diameters are 3 and 9 in., respectively. The pressure downstream is 0.25 in. of water higher than that upstream. Determine the average speed of the air approaching the expansion and the volume flow rate.
- 8.86 Water flows through a 50 mm diameter tube that suddenly contracts to 25 mm diameter. The pressure drop across the contraction is 3.4 kPa. Determine the volume flow rate.
- 8.87 In an undergraduate laboratory you have been assigned the task of developing a crude flow meter for measuring the flow in a 400 mm diameter water pipe system. You are to install a 200 mm diameter section of pipe, and a water manometer to measure the pressure drop at the sudden contraction. Derive an expression for the theoretical calibration constant  $k$  in  $Q = k\sqrt{\Delta h}$ , where  $Q$  is the volume flow rate in L/min, and  $\Delta h$  is the manometer deflection in mm. Plot the theoretical calibration curve for a flow rate range of 0 to 200 L/min. Would you expect this to be a practical device for measuring flow rate?
- 8.88 Flow through a sudden contraction is shown. The minimum flow area at the vena contracta is given in terms of the area ratio by the contraction coefficient [30],


$$C_c = \frac{A_c}{A_2} = 0.62 + 0.38 \left( \frac{A_2}{A_1} \right)^3$$

The loss in a sudden contraction is mostly a result of the vena contracta: The fluid accelerates into the contraction, there is flow separation (as shown by the dashed lines), and the vena contracta acts as a miniature sudden expansion with significant secondary flow losses. Use these assumptions to obtain and plot estimates of the minor loss coefficient for a sudden contraction, and compare with the data presented in Fig. 8.14.



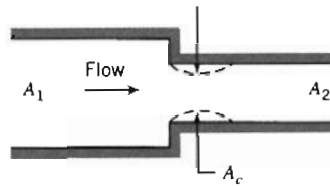

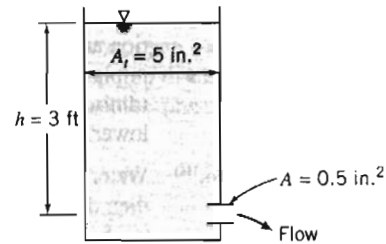


P8.88




P8.89

- 8.89 Water flows from the tank shown through a very short pipe. Assume the flow is quasi-steady. Estimate the flow rate at the instant shown. How could you improve the flow system if a larger flow rate were desired?
- 8.90 Air flows out of a clean room test chamber through a 150 mm diameter duct of length  $L$ . The original duct had a square-edged entrance, but this has been replaced with a well-rounded one. The pressure in the chamber is 2.5 mm of water above ambient. Losses from friction are negligible compared with the entrance and exit losses. Estimate the increase in volume flow rate that results from the change in entrance contour.
- 8.91 Consider again flow through the elbow analyzed in Example Problem 4.6. Using the given conditions, calculate the minor head loss coefficient for the elbow.
- 8.92 A conical diffuser is used to expand a pipe flow from a diameter of 100 mm to a diameter of 150 mm. Find the minimum length of the diffuser if we want a loss coefficient (a)  $K_{\text{diffuser}} \leq 0.2$ , (b)  $K_{\text{diffuser}} \leq 0.35$ .
- 8.93 A conical diffuser of length 150 mm is used to expand a pipe flow from a diameter of 75 mm to a diameter of 100 mm. For a water flow rate of  $0.1 \text{ m}^3/\text{s}$ , estimate the static pressure rise. What is the approximate value of the loss coefficient?
- 8.94 Space has been found for a conical diffuser 0.45 m long in the clean room ventilation system described in Problem 8.90. The best diffuser of this size is to be used. Assume that data from Fig. 8.15 may be used. Determine the appropriate diffuser angle and area ratio for this installation and estimate the volume flow rate that will be delivered after it is installed.
- 8.95 By applying the basic equations to a control volume starting at the expansion and ending downstream, analyze flow through a sudden expansion (assume the inlet pressure  $p_1$  acts on the area  $A_2$  at the expansion). Develop an expression for and plot the minor head loss across the expansion as a function of area ratio, and compare with the data of Fig. 8.14.
- 8.96 Analyze flow through a sudden expansion to obtain an expression for the upstream average velocity  $\bar{V}_1$  in terms of the pressure change  $\Delta p = p_2 - p_1$ , area ratio  $AR$ , fluid density  $\rho$ , and loss coefficient  $K$ . If the flow were frictionless, would the flow rate indicated by a measured pressure change be higher or lower than a real flow, and why? Conversely, if the flow were frictionless, would a given flow generate a larger or smaller pressure change, and why?
- 8.97 Water at  $45^\circ\text{C}$  enters a shower head through a circular tube with 15.8 mm inside diameter. The water leaves in 24 streams, each of 1.05 mm diameter. The volume flow rate is 5.67 L/min. Estimate the minimum water pressure needed at the inlet to the shower head. Evaluate the force needed to hold the shower head onto the end of the circular tube. Indicate clearly whether this is a compression or a tension force.
- 8.98 Water discharges to atmosphere from a large reservoir through a moderately rounded horizontal nozzle of 25 mm diameter. The free surface is 1.5 m above the nozzle exit plane. Calculate the change in flow rate when a short section of 50 mm diameter pipe

is attached to the end of the nozzle to form a sudden expansion. Determine the location and estimate the magnitude of the minimum pressure with the sudden expansion in place. If the flow were frictionless (with the sudden expansion in place), would the minimum pressure be higher, lower, or the same? Would the flow rate be higher, lower, or the same?


- 8.99** Water flows steadily from a large tank through a length of smooth plastic tubing, then discharges to atmosphere. The tubing inside diameter is 3.18 mm, and its length is 15.3 m. Calculate the maximum volume flow rate for which flow in the tubing will remain laminar. Estimate the water level in the tank below which flow will be laminar (for laminar flow,  $\alpha = 2$  and  $K_{\text{ent}} = 1.4$ ).
- 8.100** You are asked to compare the behavior of fully developed laminar flow and fully developed turbulent flow in a horizontal pipe under different conditions. For the same flow rate, which will have the larger centerline velocity? Why? If the pipe discharges to atmosphere what would you expect the trajectory of the discharge stream to look like (for the same flow rate)? Sketch your expectations for each case. For the same flow rate, which flow would give the larger wall shear stress? Why? Sketch the shear stress distribution  $\tau/\tau_w$  as a function of radius for each flow. For the same Reynolds number, which flow would have the larger pressure drop per unit length? Why? For a given imposed pressure differential, which flow would have the larger flow rate? Why?
-  Most of the remaining problems in this chapter involve determination of the turbulent friction factor  $f$  from the Reynolds number  $Re$  and dimensionless roughness  $e/D$ . For approximate calculations,  $f$  can be read from Fig. 8.12; a more accurate approach is to use this value (or some other value, even  $f = 1$ ) as the first value for iterating in Eq. 8.37. The most convenient approach is to use solution of Eq. 8.37 programmed into (or built-into) your calculator, or programmed into an *Excel* workbook. Hence, most of the remaining problems benefit from use of *Excel*. To avoid needless duplication, the disk symbol will only be used next to remaining problems in this chapter when it has an *additional* benefit (e.g., for iterating to a solution, or for graphing).
- 8.101** Estimate the minimum level in the water tank of Problem 8.99 such that the flow will be turbulent.
- 8.102** A laboratory experiment is set up to measure pressure drop for flow of water through a smooth tube. The tube diameter is 15.9 mm, and its length is 3.56 m. Flow enters the tube from a reservoir through a square-edged entrance. Calculate the volume flow rate needed to obtain turbulent flow in the tube. Evaluate the reservoir height differential required to obtain turbulent flow in the tube.
-  **8.103** Plot the required reservoir depth of water to create flow in a smooth tube of diameter 10 mm and length 100 m, for a flow rate range of 1 L/s through 10 L/s.
-  **8.104** As discussed in Problem 8.49, the applied pressure difference,  $\Delta p$ , and corresponding volume flow rate,  $Q$ , for laminar flow in a tube can be compared to the applied DC voltage  $V$  across, and current  $I$  through, an electrical resistor, respectively. Investigate whether or not this analogy is valid for turbulent flow by plotting the "resistance"  $\Delta p/Q$  as a function of  $Q$  for turbulent flow of kerosine (at 40°C) in a tube 100 mm long with inside diameter 0.3 mm.
- 8.105** A water system is used in a laboratory to study flow in a smooth pipe. To obtain a reasonable range, the maximum Reynolds number in the pipe must be 100,000. The system is supplied from an overhead constant-head tank. The pipe system consists of a square-edged entrance, two 45° standard elbows, two 90° standard elbows, and a fully open gate valve. The pipe diameter is 15.9 mm, and the total length of pipe is 9.8 m. Calculate the minimum height of the supply tank above the pipe system discharge to reach the desired Reynolds number.

- 8.106 Water from a pump flows through a 0.25 m diameter commercial steel pipe for a distance of 6 km from the pump discharge to a reservoir open to the atmosphere. The level of the water in the reservoir is 10 m above the pump discharge, and the average speed of the water in the pipe is 2.5 m/s. Calculate the pressure at the pump discharge.

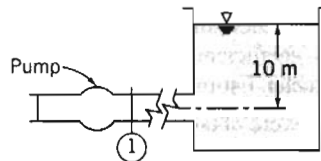

P8.106


- 8.107 Water is to flow by gravity from one reservoir to a lower one through a straight, inclined galvanized iron pipe. The pipe diameter is 50 mm, and the total length is 250 m. Each reservoir is open to the atmosphere. Plot the required elevation difference  $\Delta z$  as a function of flow rate  $Q$ , for  $Q$  ranging from 0 to 0.01 m<sup>3</sup>/s. Estimate the fraction of  $\Delta z$  due to minor losses.
- 8.108 In a certain air-conditioning installation, a flow rate of 35 m<sup>3</sup>/min of air at standard conditions is required. A smooth sheet metal duct 0.3 m square is to be used. Determine the pressure drop for a 30 m horizontal duct run.
- 8.109 A pipe friction experiment is to be designed, using water, to reach a Reynolds number of 100,000. The system will use 2 in. smooth PVC pipe from a constant-head tank to the flow bench and 40 ft of smooth 1 in. PVC line mounted horizontally for the test section. The water level in the constant-head tank is 1.5 ft above the entrance to the 2 in. PVC line. Determine the required average speed of water in the 1 in. pipe. Estimate the feasibility of using a constant-head tank. Calculate the pressure difference expected between taps 15 ft apart in the horizontal test section.
- 8.110 A system for testing variable-output pumps consists of the pump, four standard elbows, and an open gate valve forming a closed circuit as shown. The circuit is to absorb the energy added by the pump. The tubing is 75 mm diameter cast iron, and the total length of the circuit is 20 m. Plot the pressure difference required from the pump for water flow rates  $Q$  ranging from 0.01 m<sup>3</sup>/s to 0.06 m<sup>3</sup>/s.

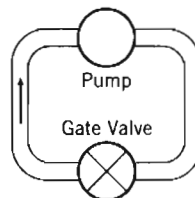


P8.110

- 8.111 Consider flow of standard air at 35 m<sup>3</sup>/min. Compare the pressure drop per unit length of a round duct with that for rectangular ducts of aspect ratio 1, 2, and 3. Assume that all ducts are smooth, with cross-sectional areas of 0.1 m<sup>2</sup>.

- 8.112 Two reservoirs are connected by three clean cast-iron pipes in series,  $L_1 = 600$  m,  $D_1 = 0.3$  m,  $L_2 = 900$  m,  $D_2 = 0.4$  m,  $L_3 = 1500$  m, and  $D_3 = 0.45$  m. When the discharge is  $0.11$  m<sup>3</sup>/s of water at  $15^\circ\text{C}$ , determine the difference in elevation between the reservoirs.
- 8.113 Water, at volume flow rate  $Q = 20$  L/s, is delivered by a fire hose and nozzle assembly. The hose ( $L = 80$  m,  $D = 75$  mm, and  $e/D = 0.004$ ) is made up of four 20 m sections joined by couplings. The entrance is square-edged; the minor loss coefficient for each coupling is  $K_c = 0.5$ , based on mean velocity through the hose. The nozzle loss coefficient is  $K_n = 0.02$ , based on velocity in the exit jet, of  $D_2 = 25$  mm diameter. Estimate the supply pressure required at this flow rate.
- 8.114 Data were obtained from measurements on a vertical section of old, corroded, galvanized iron pipe of 1 in. inside diameter. At one section the pressure was  $p_1 = 100$  psig; at a second section, 20 ft lower, the pressure was  $p_2 = 75.5$  psig. The volume flow rate of water was  $0.110$  ft<sup>3</sup>/s. Estimate the relative roughness of the pipe. What percent savings in pumping power would result if the pipe were restored to its new, clean relative roughness?
- 8.115 A small swimming pool is drained using a garden hose. The hose has 20 mm inside diameter, a roughness height of 0.2 mm, and is 30 m long. The free end of the hose is located 3 m below the elevation of the bottom of the pool. The average velocity at the hose discharge is 1.2 m/s. Estimate the depth of the water in the swimming pool. If the flow were inviscid, what would be the velocity?
- 8.116 Flow in a tube may alternate between laminar and turbulent states for Reynolds numbers in the transition zone. Design a bench-top experiment consisting of a constant-head cylindrical transparent plastic tank with depth graduations, and a length of plastic tubing (assumed smooth) attached at the base of the tank through which the water flows to a measuring container. Select tank and tubing dimensions so that the system is compact, but will operate in the transition zone range. Design the experiment so that you can easily increase the tank head from a low range (laminar flow) through transition to turbulent flow, and vice versa. (Write instructions for students on recognizing when the flow is laminar or turbulent.) Generate plots (on the same graph) of tank depth against Reynolds number, assuming laminar or turbulent flow.
- 8.117 A compressed air drill requires 0.25 kg/s of air at 650 kPa (gage) at the drill. The hose from the air compressor to the drill is 40 mm inside diameter. The maximum compressor discharge gage pressure is 670 kPa; air leaves the compressor at  $40^\circ\text{C}$ . Neglect changes in density and any effects of hose curvature. Calculate the longest hose that may be used.
- 8.118 Gasoline flows in a long, underground pipeline at a constant temperature of  $15^\circ\text{C}$ . Two pumping stations at the same elevation are located 13 km apart. The pressure drop between the stations is 1.4 MPa. The pipeline is made from 0.6 m diameter pipe. Although the pipe is made from commercial steel, age and corrosion have raised the pipe roughness to approximately that for galvanized iron. Compute the volume flow rate.
- 8.119 Water flows steadily in a horizontal 125 mm diameter cast-iron pipe. The pipe is 150 m long and the pressure drop between sections ① and ② is 150 kPa. Find the volume flow rate through the pipe.
- 8.120 Water flows steadily in a 125 mm diameter cast-iron pipe 150 m long. The pressure drop between sections ① and ② is 150 kPa, and section ② is located 15 m above section ①. Find the volume flow rate.
- 8.121 Two open standpipes of equal diameter are connected by a straight tube as shown. Water flows by gravity from one standpipe to the other. For the instant shown, estimate the rate of change of water level in the left standpipe.

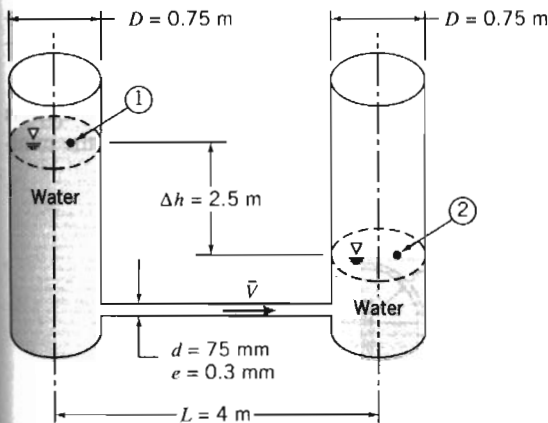

P8.121

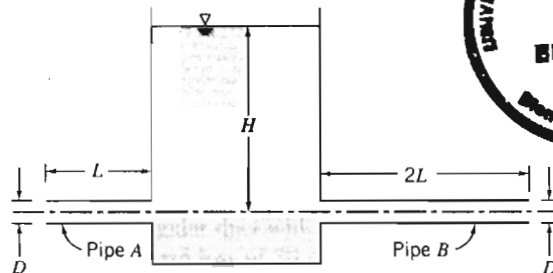


P8.122

- 8.122** Two galvanized iron pipes of diameter  $D$  are connected to a large water reservoir as shown. Pipe  $A$  has length  $L$  and pipe  $B$  has length  $2L$ . Both pipes discharge to atmosphere. Which pipe will pass the larger flow rate? Justify (without calculating the flow rate in each pipe). Compute the flow rates if  $H = 10$  m,  $D = 50$  mm, and  $L = 50$  m.
- 8.123** A mining engineer plans to do hydraulic mining with a high-speed jet of water. A lake is located  $H = 300$  m above the mine site. Water will be delivered through  $L = 900$  m of fire hose; the hose has inside diameter  $D = 75$  mm and relative roughness  $e/D = 0.01$ . Couplings, with equivalent length  $L_e = 20 D$ , are located every 10 m along the hose. The nozzle outlet diameter is  $d = 25$  mm. Its minor loss coefficient is  $K = 0.02$  based on outlet velocity. Estimate the maximum outlet velocity that this system could deliver. Determine the maximum force exerted on a rock face by this water jet.
- 8.124** Investigate the effect of tube length on flow rate by computing the flow generated by a pressure difference  $\Delta p = 100$  kPa applied to a length  $L$  of smooth tubing, of diameter  $D = 25$  mm. Plot the flow rate against tube length for flow ranging from low speed laminar to fully turbulent.
- 8.125** Investigate the effect of tube roughness on flow rate by computing the flow generated by a pressure difference  $\Delta p = 100$  kPa applied to a length  $L = 100$  m of tubing, with diameter  $D = 25$  mm. Plot the flow rate against tube relative roughness  $e/D$  for  $e/D$  ranging from 0 to 0.05 (this could be replicated experimentally by progressively roughening the tube surface). Is it possible that this tubing could be roughened so much that the flow could be slowed to a laminar flow rate?
- 8.126** Use the flow configuration of Example Problem 8.5 with a well rounded inlet, depth  $d = 10$  m,  $D = 26.6$  mm, and commercial steel pipe to investigate the effect of horizontal pipe length on volume flow rate. What is the volume flow rate for a pipe length of 170 m? At what pipe length will the flow become laminar? What happens to the flow rate when the flow changes from laminar to turbulent? How long must the pipe be to reduce the flow rate to 1 gal/hr?
- 8.127** Water for a fire protection system is supplied from a water tower through a 150 mm cast-iron pipe. A pressure gage at a fire hydrant indicates 600 kPa when no water is flowing. The total pipe length between the elevated tank and the hydrant is 200 m. Determine the height of the water tower above the hydrant. Calculate the maximum volume flow rate that can be achieved when the system is flushed by opening the


hydrant wide (assume minor losses are 10 percent of major losses at this condition). When a fire hose is attached to the hydrant, the volume flow rate is  $0.75 \text{ m}^3/\text{min}$ . Determine the reading of the pressure gage at this flow condition.

- 8.128 The siphon shown is fabricated from 2 in. i.d. drawn aluminum tubing. The liquid is water at  $60^\circ\text{F}$ . Compute the volume flow rate through the siphon. Estimate the minimum pressure inside the tube.

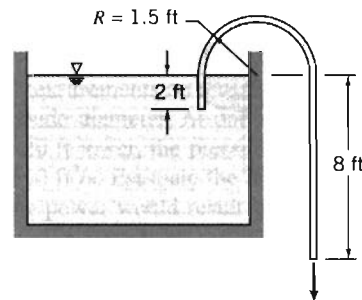


P8.128

- 8.129 Consider again the Roman water supply discussed in Example Problem 8.10. Assume that the 50 ft length of horizontal constant-diameter pipe required by law has been installed. The relative roughness of the pipe is 0.01. Estimate the flow rate of water delivered by the pipe under the inlet conditions of the example. What would be the effect of adding the same diffuser to the end of the 50 ft pipe?
- 8.130 In Example Problem 8.10 we found that the flow rate from a water main could be increased (by as much as 33 percent) by attaching a diffuser to the outlet of the nozzle installed into the water main. We read that the Roman water commissioner required that the tube attached to the nozzle of each customer's pipe be the same diameter for at least 50 feet from the public water main. Was the commissioner overly conservative? Using the data of the problem, estimate the length of pipe (with  $e/D = 0.01$ ) at which the system of pipe and diffuser would give a flow rate equal to that with the nozzle alone. Plot the volume flow ratio  $Q/Q_i$  as a function of  $L/D$ , where  $L$  is the length of pipe between the nozzle and the diffuser,  $Q_i$  is the volume flow rate for the nozzle alone, and  $Q$  is the actual volume flow rate with the pipe inserted between nozzle and diffuser.
- 8.131 You are watering your lawn with an *old* hose. Because lime deposits have built up over the years, the 0.75 in. i.d. hose now has an average roughness height of 0.022 in. One 50 ft length of the hose, attached to your spigot, delivers 15 gpm of water ( $60^\circ\text{F}$ ). Compute the pressure at the spigot, in psi. Estimate the delivery if two 50 ft lengths of the hose are connected. Assume that the pressure at the spigot varies with flow rate and the water main pressure remains constant at 50 psig.
- 8.132 A hydraulic press is powered by a remote high-pressure pump. The gage pressure at the pump outlet is 20 MPa, whereas the pressure required for the press is 19 MPa (gage), at a flow rate of  $0.032 \text{ m}^3/\text{min}$ . The press and pump are connected by 50 m of smooth, drawn steel tubing. The fluid is SAE 10W oil at  $40^\circ\text{C}$ . Determine the minimum tubing diameter that may be used.
- 8.133 A pump is located 15 ft to one side of, and 12 ft above a reservoir. The pump is designed for a flow rate of 100 gpm. For satisfactory operation, the static pressure at the pump inlet must not be lower than  $-20$  ft of water gage. Determine the smallest standard commercial steel pipe that will give the required performance.

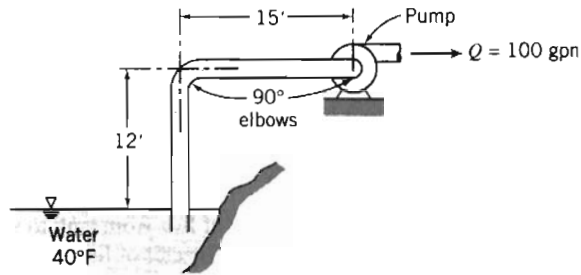

P8.133

- 8.134 Determine the minimum size smooth rectangular duct with an aspect ratio of 2 that will pass  $80 \text{ m}^3/\text{min}$  of standard air with a head loss of 30 mm of water per 30 m of duct.
- 8.135 A new industrial plant requires a water flow rate of  $5.7 \text{ m}^3/\text{min}$ . The gage pressure in the water main, located in the street 50 m from the plant, is 800 kPa. The supply line will require installation of 4 elbows in a total length of 65 m. The gage pressure required in the plant is 500 kPa. What size galvanized iron line should be installed?
- 8.136 Investigate the effect of tube diameter on flow rate by computing the flow generated by a pressure difference,  $\Delta p = 100 \text{ kPa}$ , applied to a length  $L = 100 \text{ m}$  of smooth tubing. Plot the flow rate against tube diameter for a range that includes laminar and turbulent flow.
- 8.137 A large reservoir supplies water for a community. A portion of the water supply system is shown. Water is pumped from the reservoir to a large storage tank before being sent on to the water treatment facility. The system is designed to provide  $1310 \text{ L/s}$  of water at  $20^\circ\text{C}$ . From  $B$  to  $C$  the system consists of a square-edged entrance, 760 m of pipe, three gate valves, four  $45^\circ$  elbows, and two  $90^\circ$  elbows. Gage pressure at  $C$  is 197 kPa. The system between  $F$  and  $G$  contains 760 m of pipe, two gate valves, and four  $90^\circ$  elbows. All pipe is 508 mm diameter, cast iron. Calculate the average velocity of water in the pipe, the gage pressure at section  $F$ , the power input to the pump (its efficiency is 80 percent), and the wall shear stress in section  $FG$ .

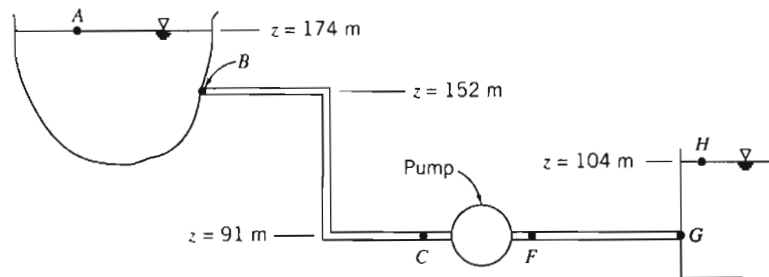

P8.137


- 8.138 An air-pipe friction experiment consists of a smooth brass tube with 63.5 mm inside diameter; the distance between pressure taps is 1.52 m. The pressure drop is indicated by a manometer filled with Meriam red oil. The centerline velocity  $U$  is measured with a pitot cylinder. At one flow condition,  $U = 23.1 \text{ m/s}$  and the pressure drop is 12.3 mm of oil. For this condition, evaluate the Reynolds number based on

average flow velocity. Calculate the friction factor and compare with the value obtained from Eq. 8.37 (use  $n = 7$  in the power-law velocity profile).

- \*8.139 Oil has been flowing from a large tank on a hill to a tanker at the wharf. The compartment in the tanker is nearly full and an operator is in the process of stopping the flow. A valve on the wharf is closed at a rate such that 1 MPa is maintained in the line immediately upstream of the valve. Assume:

Length of line from tank to valve	3 km
Inside diameter of line	200 mm
Elevation of oil surface in tank	60 m
Elevation of valve on wharf	6 m
Instantaneous flow rate	2.5 m <sup>3</sup> /min
Head loss in line (exclusive of valve being closed) at this rate of flow	23 m of oil
Specific gravity of oil	0.88

Calculate the initial instantaneous rate of change of volume flow rate.

-  \*8.140 Problem 8.139 describes a situation in which flow in a long pipeline from a hilltop tank is slowed gradually to avoid a large pressure rise. Expand this analysis to predict and plot the closing schedule (valve loss coefficient versus time) needed to maintain the maximum pressure at the valve at or below a given value throughout the process of stopping the flow from the tank.

- 8.141 The pressure rise across a water pump is 9.5 psi when the volume flow rate is 300 gpm. If the pump efficiency is 80 percent, determine the power input to the pump.
- 8.142 A pump draws water at a steady flow rate of 10 kg/s through a piping system. The pressure on the suction side of the pump is  $-20$  kPa. The pump outlet pressure is 300 kPa. The inlet pipe diameter is 75 mm; the outlet pipe diameter is 50 mm. The pump efficiency is 70 percent. Calculate the power required to drive the pump.
- 8.143 A 2.5 (nominal) in. pipeline conveying water contains 290 ft of straight galvanized pipe, 2 fully open gate valves, 1 fully open angle valve, 7 standard 90° elbows, 1 square-edged entrance from a reservoir, and 1 free discharge. The entrance and exit conditions are:


Location	Elevation	Pressure
Entrance	50.0 ft	20 psig
Discharge	94.0 ft	0 psig

A centrifugal pump is installed in the line to move the water. What pressure rise must the pump deliver so the volume flow rate will be  $Q = 0.439$  ft<sup>3</sup>/s?

- 8.144 You are asked to size a pump for installation in the water supply system of the Sears Tower in Chicago. The system requires 100 gpm of water pumped to a reservoir at the top of the tower 340 m above the street. City water pressure at the street-level pump inlet is 400 kPa (gage). Piping is to be commercial steel. Determine the minimum diameter required to keep the average water velocity below 3.5 m/s in the pipe. Calculate the pressure rise required across the pump. Estimate the minimum power needed to drive the pump.
- 8.145 Cooling water is pumped from a reservoir to rock drills on a construction job using the pipe system shown. The flow rate must be 600 gpm and water must leave the spray nozzle at 120 ft/s. Calculate the minimum pressure needed at the pump outlet. Estimate the required power input if the pump efficiency is 70 percent.

\*These problems require material from sections that may be omitted without loss of continuity in the text material.




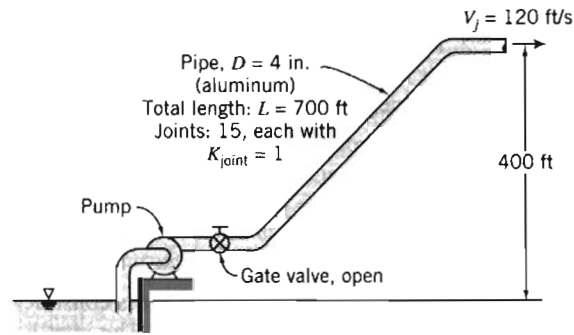

P8.145


- 8.146 Air conditioning for the Purdue University campus is provided by chilled water pumped through a main supply pipe. The pipe makes a loop 3 miles in length. The pipe diameter is 2 ft and the material is steel. The maximum design volume flow rate is 11,200 gpm. The circulating pump is driven by an electric motor. The efficiencies of pump and motor are  $\eta_p = 0.80$  and  $\eta_m = 0.90$ , respectively. Electricity cost is 12 ¢/(kW·hr). Determine (a) the pressure drop, (b) the rate of energy addition to the water, and (c) the daily cost of electrical energy for pumping.
- 8.147 Heavy crude oil ( $SG = 0.925$  and  $\nu = 1.0 \times 10^{-4} \text{ m}^2/\text{s}$ ) is pumped through a pipeline laid on flat ground. The line is made from steel pipe with 600 mm i.d. and has a wall thickness of 12 mm. The allowable tensile stress in the pipe wall is limited to 275 MPa by corrosion considerations. It is important to keep the oil under pressure to ensure that gases remain in solution. The minimum recommended pressure is 500 kPa. The pipeline carries a flow of 400,000 barrels (in the petroleum industry, a "barrel" is 42 gal) per day. Determine the maximum spacing between pumping stations. Compute the power added to the oil at each pumping station.
- 8.148 A fire nozzle is supplied through 300 ft of 1.5 in. diameter, smooth, rubber-lined hose. Water from a hydrant is supplied to a booster pump on board the pumper truck at 50 psig. At design conditions, the pressure at the nozzle inlet is 100 psig, and the pressure drop along the hose is 33 psi per 100 ft of length. Determine (a) the design flow rate, (b) the nozzle exit velocity, assuming no losses in the nozzle, and (c) the power required to drive the booster pump, if its efficiency is 70 percent.
- 8.149 According to the Purdue student newspaper, the volume flow rate through the fountain in the Engineering Mall is 550 gpm. Each water stream can rise to a height of 10 m. Estimate the daily cost to operate the fountain. Assume that the pump motor efficiency is 90 percent, the pump efficiency is 80 percent, and the cost of electricity is 12 ¢/kW·hr.
- 8.150 Petroleum products are transported over long distances by pipeline, e.g., the Alaskan pipeline (see Example Problem 8.6). Estimate the energy needed to pump a typical petroleum product, expressed as a fraction of the throughput energy carried by the pipeline. State and critique your assumptions clearly.
- 8.151 The pump testing system of Problem 8.110 is run with a pump that generates a pressure difference given by  $\Delta p = 750 - 15 \times 10^4 Q^2$  where  $\Delta p$  is in kPa, and the generated flow rate is  $Q \text{ m}^3/\text{s}$ . Find the water flow rate, pressure difference, and power supplied to the pump if it is 70 percent efficient.
- 8.152 A water pump can generate a pressure difference  $\Delta p$  (kPa) given by  $\Delta p = 1000 - 800Q^2$ , where the flow rate is  $Q \text{ m}^3/\text{s}$ . It supplies a pipe of diameter 500 mm, roughness 10 mm, and length 750 m. Find the flow rate, pressure difference, and the power supplied to the pump if it is 70 percent efficient. If the pipe were replaced with one of roughness 5 mm, how much would the flow increase, and what would the required power be?

- 8.153 The head versus capacity curve for a certain fan may be approximated by the equation  $H = 30 - 10^{-7} Q^2$ , where  $H$  is the output static head in inches of water and  $Q$  is the air flow rate in  $\text{ft}^3/\text{min}$ . The fan outlet dimensions are  $8 \times 16$  in. Determine the air flow rate delivered by the fan into a 200 ft straight length of  $8 \times 16$  in. rectangular duct.
- \*8.154 A cast-iron pipe system consists of a 50 m section of water pipe, after which the flow branches into two 50 m sections, which then meet in a final 50 m section. Minor losses may be neglected. All sections are 45 mm diameter, except one of the two branches, which is 25 mm diameter. If the applied pressure across the system is 300 kPa, find the overall flow rate and the flow rates in each of the two branches.
- \*8.155 The water pipe system shown is constructed from 75 mm galvanized iron pipe. Minor losses may be neglected. The inlet is at 250 kPa (gage), and all exits are at atmospheric pressure. Find the flow rates  $Q_0$ ,  $Q_1$ ,  $Q_2$ , and  $Q_3$ . If the flow in the 400 m branch is closed off ( $Q_1 = 0$ ), find the increase in flows  $Q_2$ , and  $Q_3$ .

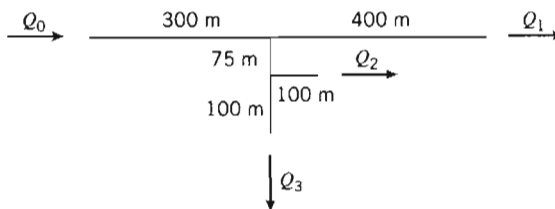

P8.155

- \*8.156 A swimming pool has a partial-flow filtration system. Water at  $75^\circ\text{F}$  is pumped from the pool through the system shown. The pump delivers 30 gpm. The pipe is nominal  $3/4$  in. PVC (i.d. = 0.824 in.). The pressure loss through the filter is approximately  $\Delta p = 0.6Q^2$ , where  $\Delta p$  is in psi and  $Q$  is in gpm. Determine the pump pressure and the flow rate through each branch of the system.

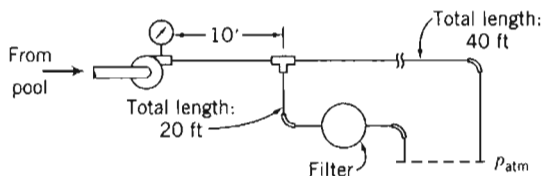

P8.156

- 8.157 Why does the shower temperature change when a toilet is flushed? Sketch pressure curves for the hot and cold water supply systems to explain what happens.
- 8.158 Water at  $150^\circ\text{F}$  flows through a 3 in. diameter orifice installed in a 6 in. i.d. pipe. The flow rate is 300 gpm. Determine the pressure difference between the corner taps.
- 8.159 A square-edged orifice with corner taps and a water manometer are used to meter compressed air. The following data are given:

Inside diameter of air line	150 mm
Orifice plate diameter	100 mm
Upstream pressure	600 kPa
Temperature of air	$25^\circ\text{C}$
Manometer deflection	750 mm $\text{H}_2\text{O}$


Calculate the volume flow rate in the line, expressed in cubic meters per hour.

\*These problems require material from sections that may be omitted without loss of continuity in the text material.

- 8.160 A smooth 200 m pipe, 100 mm diameter connects two reservoirs (the entrance and exit of the pipe are sharp-edged). At the midpoint of the pipe is an orifice plate with diameter 40 mm. If the water levels in the reservoirs differ by 30 m, estimate the pressure differential indicated by the orifice plate and the flow rate.
- 8.161 A venturi meter with a 75 mm diameter throat is placed in a 150 mm diameter line carrying water at 25°C. The pressure drop between the upstream tap and the venturi throat is 300 mm of mercury. Compute the rate of flow.
- 8.162 Gasoline flows through a 2 × 1 in. venturi meter. The differential pressure is 380 mm of mercury. Find the volume flow rate.
- 8.163 Consider a horizontal 2 × 1 in. venturi with water flow. For a differential pressure of 20 psi, calculate the volume flow rate.
- 8.164 Air flow rate in a test of an internal combustion engine is to be measured using a flow nozzle installed in a plenum. The engine displacement is 1.6 liters, and its maximum operating speed is 6000 rpm. To avoid loading the engine, the maximum pressure drop across the nozzle should not exceed 0.25 m of water. The manometer can be read to ± 0.5 mm of water. Determine the flow nozzle diameter that should be specified. Find the minimum rate of air flow that can be metered to ± 2 percent using this setup.
- 8.165 Air flows through the venturi meter described in Problem 8.161. Assume that the upstream pressure is 400 kPa, and that the temperature is everywhere constant at 20°C. Determine the maximum possible mass flow rate of air for which the assumption of incompressible flow is a valid engineering approximation. Compute the corresponding differential pressure reading on a mercury manometer.
- 8.166 Water at 70°F flows steadily through a venturi. The pressure upstream from the throat is 5 psig. The throat area is 0.025 ft<sup>2</sup>; the upstream area is 0.1 ft<sup>2</sup>. Estimate the maximum flow rate this device can handle without cavitation.
- 8.167 Consider a flow nozzle installation in a pipe. Apply the basic equations to the control volume indicated, to show that the permanent head loss across the meter can be expressed, in dimensionless form, as the head loss coefficient,

$$C_l = \frac{p_1 - p_3}{p_1 - p_2} = \frac{1 - A_2/A_1}{1 + A_2/A_1}$$


Plot  $C_l$  as a function of diameter ratio,  $D_2/D_1$ .

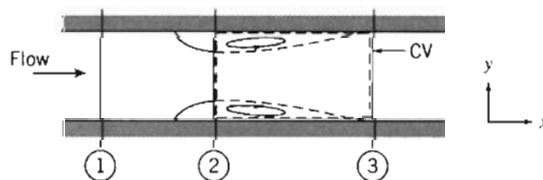

P8.167

- 8.168 In some western states, water for mining and irrigation was sold by the “miner’s inch,” the rate at which water flows through an opening in a vertical plank of 1 in.<sup>2</sup> area, up to 4 in. tall, under a head of 6 to 9 in. Develop an equation to predict the flow rate through such an orifice. Specify clearly the aspect ratio of the opening, thickness of the plank, and datum level for measurement of head (top, bottom, or middle of the opening). Show that the unit of measure varies from 38.4 (in Colorado) to 50 (in Arizona, Idaho, Nevada, and Utah) miner’s inches equal to 1 ft<sup>3</sup>/s.
- 8.169 Drinking straws are to be used to improve the air flow in a pipe-flow experiment. Packing a section of the air pipe with drinking straws to form a “laminar flow

element" might allow the air flow rate to be measured directly, and simultaneously would act as a flow straightener. To evaluate this idea, determine (a) the Reynolds number for flow in each drinking straw, (b) the friction factor for flow in each straw, and (c) the gage pressure at the exit from the drinking straws. (For laminar flow in a tube, the entrance loss coefficient is  $K_{\text{ent}} \approx 1.4$  and  $\alpha = 2.0$ .) Comment on the utility of this idea.

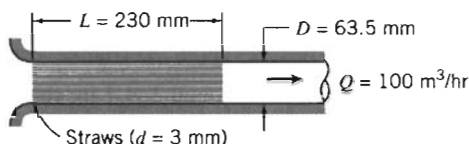

P8.169

- 8.170 The volume flow rate in a circular duct may be measured by "pitot traverse," i.e., by measuring the velocity in each of several area segments across the duct, then summing. Comment on the way such a traverse should be set up. Quantify and plot the expected error in measurement of flow rate as a function of the number of radial locations used in the traverse.
- 8.171 The chilled-water pipeline system that provides air conditioning for the Purdue University campus is described in Problem 8.146. The pipe diameter is selected to minimize total cost (capital cost plus operating cost). Annualized costs are compared, since capital cost occurs once and operating cost continues for the life of the system. The optimum diameter depends on both cost factors and operating conditions; the analysis must be repeated when these variables change. Perform a pipeline optimization analysis. Solve Problem 8.146, arranging your calculations to study the effect of pipe diameter on annual pumping cost. (Assume friction factor remains constant.) Obtain an expression for total annual cost per unit delivery (e.g., dollars per cubic meter), assuming construction cost varies as the square of pipe diameter. Obtain an analytical relation for the pipe diameter that yields minimum total cost per unit delivery. Assume the present chilled-water pipeline was optimized for a 20 year life with 5 percent annual interest. Repeat the optimization for a design to operate at 30 percent larger flow rate. Plot the annual cost of electrical energy for pumping and the capital cost, using the flow conditions of Problem 8.146, with pipe diameter varied from 300 to 900 mm. Show how the diameter may be chosen to minimize total cost. How sensitive are the results to interest rate?

# EXTERNAL INCOMPRESSIBLE VISCOUS FLOW

External flows are flows over bodies immersed in an unbounded fluid. The flow over a sphere (Fig. 2.12*b*) and the flow over a streamlined body (Fig. 2.14) are examples of external flows, which were discussed qualitatively in Chapter 2. More interesting examples are the flow fields around such objects as airfoils (Fig. 9.1), automobiles, and airplanes. Our objective in this chapter is to quantify the behavior of viscous, incompressible fluids in external flow.

A number of phenomena that occur in external flow over a body are illustrated in the sketch of viscous flow at high Reynolds number over an airfoil (Fig. 9.1). The freestream flow divides at the stagnation point and flows around the body. Fluid at the surface takes on the velocity of the body as a result of the no-slip condition. Boundary layers form on both the upper and lower surfaces of the body. (The boundary-layer thickness on both surfaces in Fig. 9.1 is exaggerated greatly for clarity.) The flow in the boundary layers initially is laminar. Transition to turbulent flow occurs at some distance from the stagnation point, depending on freestream conditions, surface roughness, and pressure gradient. The transition points are indicated by "T" in the figure. The turbulent boundary layer following transition grows more rapidly than the laminar layer. A slight displacement of the streamlines of the external flow is caused by the thickening boundary layers on the surface. In a region of increasing pressure (an *adverse pressure gradient*—so-called because it opposes the fluid motion, tending to decelerate the fluid particles) flow separation may occur. Separation points are indicated by "S" in the figure. Fluid that was in the boundary layers on the body surface forms the viscous wake behind the separation points.

This chapter has two parts. Part A is a review of boundary-layer flows. Here we discuss in a little more detail the ideas introduced in Chapter 2, and then apply the fluid mechanics concepts we have learned to analyze the boundary layer for flow along a flat plate—the simplest possible boundary layer, because the pressure field is constant. We will be interested in seeing how the boundary-layer thickness grows, what the surface friction will be, and so on. We will explore a classic analytical solution for a laminar boundary layer, and see that we need to resort to approximate methods when the boundary layer is turbulent (and we will also be able to use these approximate methods for laminar boundary layers, to avoid using the somewhat difficult analytical method). This will conclude our introduction to boundary layers, except we will briefly discuss the effect of pressure gradients (present for *all* body shapes except flat plates) on boundary-layer behavior.

In Part B we will discuss the force on a submerged body, such as the airfoil of Fig. 9.1. We will see that this force results from both shear and pressure forces acting on the body surface, and that both of these are profoundly affected by the fact that we

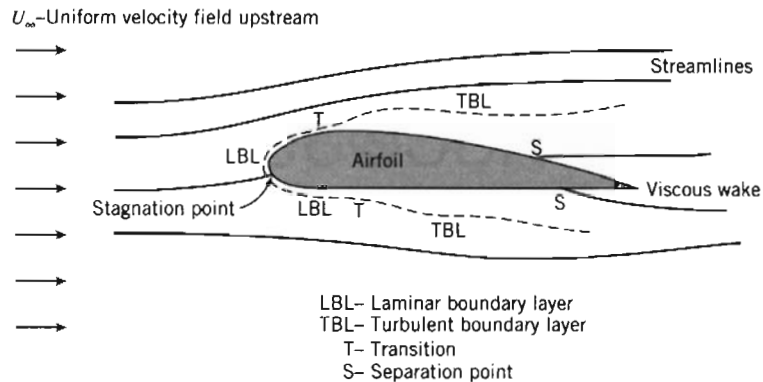


Fig. 9.1 Details of viscous flow around an airfoil.

have a boundary layer, especially when this causes flow separation and a wake. Traditionally the force a body experiences is decomposed into the component parallel to the flow, the *drag*, and the component perpendicular to the flow, the *lift*. Because most bodies do have a point of separation and a wake, it is difficult to use analysis to determine the force components, so we will present approximate analyses and experimental data for various interesting body shapes.

## PART A BOUNDARY LAYERS

### 9-1 THE BOUNDARY-LAYER CONCEPT

The concept of a boundary layer was first introduced by Ludwig Prandtl [1], a German aerodynamicist, in 1904.

Prior to Prandtl's historic breakthrough, the science of fluid mechanics had been developing in two rather different directions. *Theoretical hydrodynamics* evolved from Euler's equation of motion for a nonviscous fluid (Eq. 6.1, published by Leonhard Euler in 1755). Since the results of hydrodynamics contradicted many experimental observations (especially, as we saw in Chapter 6, that under the assumption of inviscid flow no bodies experience drag!), practicing engineers developed their own empirical art of *hydraulics*. This was based on experimental data and differed significantly from the purely mathematical approach of theoretical hydrodynamics.

Although the complete equations describing the motion of a viscous fluid (the Navier–Stokes equations, Eqs. 5.26, developed by Navier, 1827, and independently by Stokes, 1845) were known prior to Prandtl, the mathematical difficulties in solving these equations (except for a few simple cases) prohibited a theoretical treatment of viscous flows. Prandtl showed [1] that many viscous flows can be analyzed by dividing the flow into two regions, one close to solid boundaries, the other covering the rest of the flow. Only in the thin region adjacent to a solid boundary (the boundary layer) is the effect of viscosity important. In the region outside of the boundary layer, the effect of viscosity is negligible and the fluid may be treated as inviscid.

The boundary-layer concept provided the link that had been missing between theory and practice (for one thing, it introduced the theoretical possibility of drag!). Furthermore, the boundary-layer concept permitted the solution of viscous flow problems that would have been impossible through application of the Navier–Stokes

equations to the complete flow field.<sup>1</sup> Thus the introduction of the boundary-layer concept marked the beginning of the modern era of fluid mechanics.

The development of a boundary layer on a solid surface was discussed in Section 2-6. In the boundary layer both viscous and inertia forces are important. Consequently, it is not surprising that the Reynolds number (which represents the ratio of inertia to viscous forces) is significant in characterizing boundary-layer flows. The characteristic length used in the Reynolds number is either the length in the flow direction over which the boundary layer has developed or some measure of the boundary-layer thickness.

As is true for flow in a duct, flow in a boundary layer may be laminar or turbulent. There is no unique value of Reynolds number at which transition from laminar to turbulent flow occurs in a boundary layer. Among the factors that affect boundary-layer transition are pressure gradient, surface roughness, heat transfer, body forces, and freestream disturbances. Detailed consideration of these effects is beyond the scope of this book.

In many real flow situations, a boundary layer develops over a long, essentially flat surface. Examples include flow over ship and submarine hulls, aircraft wings, and atmospheric motions over flat terrain. Since the basic features of all these flows are illustrated in the simpler case of flow over a flat plate, we consider this first. The simplicity of the flow over an infinite flat plate is that the velocity  $U$  outside the boundary layer is constant, and therefore, because this region is steady, inviscid, and incompressible, the pressure will also be constant. This constant pressure is the pressure felt by the boundary layer—obviously the simplest pressure field possible. This is a *zero pressure gradient flow*.

A qualitative picture of the boundary-layer growth over a flat plate is shown in Fig. 9.2. The boundary layer is laminar for a short distance downstream from the leading edge; transition occurs over a region of the plate rather than at a single line across the plate. The transition region extends downstream to the location where the boundary-layer flow becomes completely turbulent.

For incompressible flow over a smooth flat plate (zero pressure gradient), in the absence of heat transfer, transition from laminar to turbulent flow in the boundary layer can be delayed to a Reynolds number,  $Re_x = \rho Ux / \mu$ , greater than one million if external disturbances are minimized. (The length  $x$  is measured from the leading edge.) For calculation purposes, under typical flow conditions, transition usually is considered to occur at a length Reynolds number of 500,000. For air at standard conditions, with freestream velocity  $U = 30$  m/s, this corresponds to  $x \approx 0.24$  m. In the qualitative picture of Fig. 9.2, we have shown the turbulent boundary layer growing

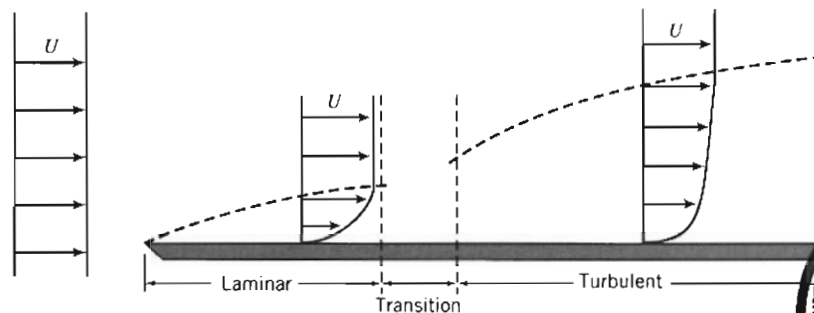


Fig. 9.2 Boundary layer on a flat plate (vertical thickness exaggerated greatly).

<sup>1</sup> Today, computer solutions of the Navier–Stokes equations are common.



faster than the laminar layer. In later sections of this chapter we shall show that this is indeed true.

In the next section we discuss various ways to quantify the thickness of a boundary layer.

## 9-2 BOUNDARY-LAYER THICKNESSES

The boundary layer is the region adjacent to a solid surface in which viscous stresses are present. These stresses are present because we have shearing of the fluid layers, i.e., a velocity gradient, in the boundary layer. As indicated in Fig. 9.2, both laminar and turbulent layers have such gradients, but the difficulty is that the gradients only asymptotically approach zero as we reach the edge of the boundary layer. Hence, the location of the edge, i.e., of the boundary-layer thickness, is not very obvious—we cannot simply define it as where the boundary-layer velocity  $u$  equals the freestream velocity  $U$ . Because of this, several boundary-layer definitions have been developed: the disturbance thickness  $\delta$ , the displacement thickness  $\delta^*$ , and the momentum thickness  $\theta$ . (Each of these increases as we move down the plate, in a manner we have yet to determine.)

The most straightforward definition is the disturbance thickness,  $\delta$ . This is usually defined as the distance from the surface at which the velocity is within 1% of the free stream,  $u \approx 0.99U$  (as shown in Fig. 9.3*b*). The other two definitions are based on the notion that the boundary layer retards the fluid, so that the mass flux and momentum flux are both less than they would be in the absence of the boundary layer. We imagine that the flow remains at uniform velocity  $U$ , but the surface of the plate is moved upwards to reduce either the mass or momentum flux by the same amount that the boundary layer actually does. The *displacement thickness*,  $\delta^*$ , is the distance the plate would be moved so that the loss of mass flux (due to reduction in uniform flow area) is equivalent to the loss the boundary layer causes. The mass flux if we had no boundary layer would be  $\int_0^\infty \rho U dy w$ , where  $w$  is the width of the plate perpendicular to the flow. The

actual flow mass flux is  $\int_0^\infty \rho u dy w$ . Hence, the loss due to the boundary layer is  $\int_0^\infty \rho(U - u) dy w$ . If we imagine keeping the velocity at a constant  $U$ , and instead move the plate up a distance  $\delta^*$  (as shown in Fig. 9.3*a*), the loss of mass flux would be  $\rho U \delta^* w$ . Setting these losses equal to one another gives

$$\rho U \delta^* w = \int_0^\infty \rho(U - u) dy w$$

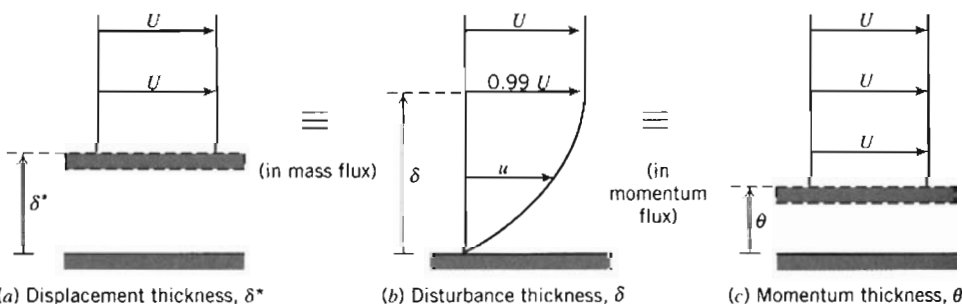


Fig. 9.3 Boundary-layer thickness definitions.



For incompressible flow,  $\rho = \text{constant}$ , and

$$\delta^* = \int_0^\infty \left(1 - \frac{u}{U}\right) dy \approx \int_0^\delta \left(1 - \frac{u}{U}\right) dy \quad (9.1)$$

Since  $u \approx U$  at  $y = \delta$ , the integrand is essentially zero for  $y \geq \delta$ . Application of the displacement-thickness concept is illustrated in Example Problem 9.1.

The *momentum thickness*,  $\theta$ , is the distance the plate would be moved so that the loss of momentum flux is equivalent to the loss the boundary layer actually causes. The momentum flux if we had no boundary layer would be  $\int_0^\infty \rho u U dy w$  (the actual mass flux is  $\int_0^\infty \rho u dy w$ , and the momentum per unit mass flux of the uniform flow is  $U$  itself). The actual momentum flux of the boundary layer is  $\int_0^\infty \rho u^2 dy w$ . Hence, the loss of momentum in the boundary layer is  $\int_0^\infty \rho u(U - u) dy w$ . If we imagine keeping the velocity at a constant  $U$ , and instead move the plate up a distance  $\theta$  (as shown in Fig. 9.3c), the loss of momentum flux would be  $\int_0^\theta \rho U U dy w = \rho U^2 \theta w$ . Setting these losses equal to one another gives

$$\rho U^2 \theta = \int_0^\infty \rho u(U - u) dy$$

and

$$\theta = \int_0^\infty \frac{u}{U} \left(1 - \frac{u}{U}\right) dy \approx \int_0^\delta \frac{u}{U} \left(1 - \frac{u}{U}\right) dy \quad (9.2)$$

Again, the integrand is essentially zero for  $y \geq \delta$ .

The displacement and momentum thicknesses,  $\delta^*$  and  $\theta$ , are *integral thicknesses*, because their definitions, Eqs. 9.1 and 9.2, are in terms of integrals across the boundary layer. Because they are defined in terms of integrals for which the integrand vanishes in the freestream, they are appreciably easier to evaluate accurately from experimental data than the boundary-layer disturbance thickness,  $\delta$ . This fact, coupled with their physical significance, accounts for their common use in specifying boundary-layer thickness.

We have seen that the velocity profile in the boundary layer merges into the local freestream velocity asymptotically. Little error is introduced if the slight difference between velocities at the edge of the boundary layer is ignored for an approximate analysis. Simplifying assumptions usually made for engineering analyses of boundary-layer development are:

1.  $u \rightarrow U$  at  $y = \delta$
2.  $\partial u / \partial y \rightarrow 0$  at  $y = \delta$
3.  $v \ll U$  within the boundary layer

Results of the analyses developed in the next two sections show that the boundary layer is very thin compared with its development length along the surface. Therefore it is also reasonable to assume:

4. Pressure variation across the thin boundary layer is negligible. The freestream pressure distribution is *impressed* on the boundary layer.

### EXAMPLE 9.1 Boundary Layer in Channel Flow

A laboratory wind tunnel has a test section that is 305 mm square. Boundary-layer velocity profiles are measured at two cross-sections and displacement thicknesses are evaluated from the measured profiles. At section ①, where the freestream speed is  $U_1 = 26$  m/s, the displacement thickness is  $\delta_1^* = 1.5$  mm. At section ②, located downstream from section ①,  $\delta_2^* = 2.1$  mm. Calculate the change in static pressure between sections ① and ②. Express the result as a fraction of the freestream dynamic pressure at section ①. Assume standard atmosphere conditions.


#### EXAMPLE PROBLEM 9.1

**GIVEN:** Flow of standard air in laboratory wind tunnel. Test section is  $L = 305$  mm square. Displacement thicknesses are  $\delta_1^* = 1.5$  mm and  $\delta_2^* = 2.1$  mm. Freestream speed is  $U_1 = 26$  m/s.

**FIND:** Change in static pressure between sections ① and ②. (Express as a fraction of freestream dynamic pressure at section ①.)

#### SOLUTION:

The idea here is that at each location the boundary-layer displacement thickness effectively reduces the area of uniform flow, as indicated in the following figures: Location ② has a smaller effective flow area than location ① (because  $\delta_2^* > \delta_1^*$ ). Hence, from mass conservation the uniform velocity at location ② will be higher. Finally, from the Bernoulli equation the pressure at location ② will be lower than that at location ①.

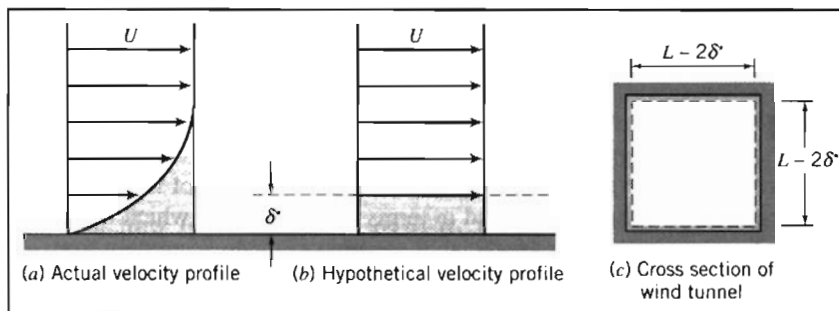

Apply the continuity and Bernoulli equations to freestream flow outside the boundary-layer displacement thickness, where viscous effects are negligible.

$$\text{Governing equations: } \frac{\partial}{\partial t} \int_{CV} \rho \, dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0$$

$$\frac{p_1}{\rho} + \frac{V_1^2}{2} + gz_1 = \frac{p_2}{\rho} + \frac{V_2^2}{2} + gz_2$$

- Assumptions:
- (1) Steady flow.
  - (2) Incompressible flow.
  - (3) Flow uniform at each section outside  $\delta^*$ .
  - (4) Flow along a streamline between sections ① and ②.
  - (5) No frictional effects in freestream.
  - (6) Negligible elevation changes.

From the Bernoulli equation we obtain

$$p_1 - p_2 = \frac{1}{2} \rho (V_2^2 - V_1^2) = \frac{1}{2} \rho (U_2^2 - U_1^2) = \frac{1}{2} \rho U_1^2 \left[ \left( \frac{U_2}{U_1} \right)^2 - 1 \right]$$

or

$$\frac{p_1 - p_2}{\frac{1}{2} \rho U_1^2} = \left( \frac{U_2}{U_1} \right)^2 - 1$$

From continuity,  $V_1 A_1 = U_1 A_1 = V_2 A_2 = U_2 A_2$ , so  $\frac{U_2}{U_1} = \frac{A_1}{A_2}$ , where  $A = (L - 2\delta^*)^2$  is the effective flow area. Substituting gives

$$\frac{p_1 - p_2}{\frac{1}{2} \rho U_1^2} = \left( \frac{A_1}{A_2} \right)^2 - 1 = \left[ \frac{(L - 2\delta_1^*)^2}{(L - 2\delta_2^*)^2} \right]^2 - 1$$

$$\frac{p_1 - p_2}{\frac{1}{2} \rho U_1^2} = \left[ \frac{305 - 2(1.5)}{305 - 2(2.1)} \right]^4 - 1 = 0.0161 \quad \text{or} \quad 1.61 \text{ percent} \quad \longleftarrow \frac{p_1 - p_2}{\frac{1}{2} \rho U_1^2}$$

Notes:

- ✓ This problem illustrates a basic application of the displacement-thickness concept. It is somewhat unusual in that, because the flow is confined, the reduction in flow area caused by the boundary layer leads to the result that the pressure in the inviscid flow region drops (if only slightly). In most applications the pressure distribution is determined from the inviscid flow and *then* applied to the boundary layer.
- ✓ We saw a similar phenomenon in Section 8-1, where we discovered that the centerline velocity at the entrance of a pipe increases due to the boundary layer “squeezing” the effective flow area.

### 9-3 LAMINAR FLAT-PLATE BOUNDARY LAYER: EXACT SOLUTION (CD-ROM)

### 9-4 MOMENTUM INTEGRAL EQUATION

Blasius' exact solution involved performing a rather subtle mathematical transformation of two differential equations based on the insight that the laminar boundary layer velocity profile is self-similar—only its scale changes as we move along the plate. Even with this transformation, we note that numerical integration was necessary to obtain results for the boundary-layer thickness  $\delta(x)$ , velocity profile  $u/U$  versus  $y/\delta$ , and wall shear stress  $\tau_w(x)$ . Furthermore, the analysis is limited to laminar boundary layers only (Eq. 9.4 does not include the turbulent Reynolds stresses discussed in Chapter 8), and for a flat plate only (no pressure variations).

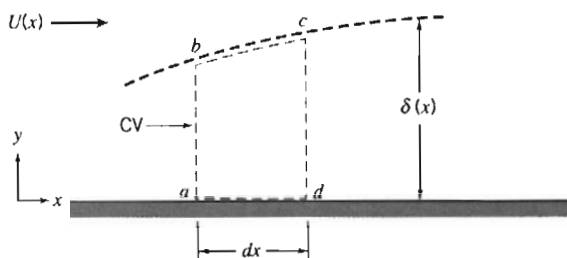


Fig. 9.4 Differential control volume in a boundary layer.

To avoid these difficulties and limitations, we now consider a method for deriving an algebraic equation that can be used to obtain approximate information on boundary-layer growth for the general case (laminar or turbulent boundary layers, with or without a pressure gradient). The approach is one in which we will again apply the basic equations to a control volume. The derivation, from the mass conservation (or continuity) equation and the momentum equation, will take several pages.

Consider incompressible, steady, two-dimensional flow over a solid surface. The boundary-layer thickness,  $\delta$ , grows in some manner with increasing distance,  $x$ . For our analysis we choose a differential control volume, of length  $dx$ , width  $w$ , and height  $\delta(x)$ , as shown in Fig. 9.4. The freestream velocity is  $U(x)$ .

We wish to determine the boundary-layer thickness,  $\delta$ , as a function of  $x$ . There will be mass flow across surfaces  $ab$  and  $cd$  of differential control volume  $abcd$ . What about surface  $bc$ ? Will there be a mass flow across this surface? In Example Problem 9.2, (on the CD), we showed that the edge of the boundary layer is not a streamline. Thus there will be mass flow across surface  $bc$ . Since control surface  $ad$  is adjacent to a solid boundary, there will not be flow across  $ad$ . Before considering the forces acting on the control volume and the momentum fluxes through the control surface, let us apply the continuity equation to determine the mass flux through each portion of the control surface.

### a. Continuity Equation

Basic equation:

$$= 0(1) \quad \frac{d}{dt} \int_{CV} \rho \, dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

- Assumptions: (1) Steady flow.  
(2) Two-dimensional flow.

Then

$$\int_{CS} \rho \vec{V} \cdot d\vec{A} = 0$$

$$\dot{m}_{ab} + \dot{m}_{bc} + \dot{m}_{cd} = 0$$

or

$$\dot{m}_{bc} = -\dot{m}_{ab} - \dot{m}_{cd}$$

Now let us evaluate these terms for the differential control volume of width  $w$ :

Surface	Mass Flux
$ab$	Surface $ab$ is located at $x$ . Since the flow is two-dimensional (no variation with $z$ ), the mass flux through $ab$ is $\dot{m}_{ab} = -\left\{ \int_0^\delta \rho u \, dy \right\} w$
$cd$	Surface $cd$ is located at $x + dx$ . Expanding $\dot{m}$ in a Taylor series about location $x$ , we obtain $\dot{m}_{x+dx} = \dot{m}_x + \left. \frac{\partial \dot{m}}{\partial x} \right _x dx$ and hence $\dot{m}_{cd} = \left\{ \int_0^\delta \rho u \, dy + \frac{\partial}{\partial x} \left[ \int_0^\delta \rho u \, dy \right] dx \right\} w$
$bc$	Thus for surface $bc$ we obtain $\dot{m}_{bc} = -\left\{ \frac{\partial}{\partial x} \left[ \int_0^\delta \rho u \, dy \right] dx \right\} w$

Now let us consider the momentum fluxes and forces associated with control volume  $abcd$ . These are related by the momentum equation.

### b. Momentum Equation

Apply the  $x$  component of the momentum equation to control volume  $abcd$ :

Basic equation:

$$F_{S_x} + \cancel{F_{B_x}} = \frac{\partial}{\partial t} \int_{CV} u \rho \, dV + \int_{CS} u \rho \vec{V} \cdot d\vec{A} \quad (4.18a)$$

Assumption: (3)  $F_{B_x} = 0$ .

Then

$$F_{S_x} = mf_{ab} + mf_{bc} + mf_{cd}$$

where  $mf$  represents the  $x$  component of momentum flux.

To apply this equation to differential control volume  $abcd$ , we must obtain expressions for the  $x$  momentum flux through the control surface and also the surface forces acting on the control volume in the  $x$  direction. Let us consider the momentum flux first and again consider each segment of the control surface.

Surface	Momentum Flux (mf)
<i>ab</i>	Surface <i>ab</i> is located at <i>x</i> . Since the flow is two-dimensional, the <i>x</i> momentum flux through <i>ab</i> is $mf_{ab} = - \left\{ \int_0^\delta u \rho u dy \right\} w$
<i>cd</i>	Surface <i>cd</i> is located at <i>x</i> + <i>dx</i> . Expanding the <i>x</i> momentum flux (mf) in a Taylor series about location <i>x</i> , we obtain $mf_{x+dx} = mf_x + \frac{\partial mf}{\partial x} dx$ or $mf_{cd} = \left\{ \int_0^\delta u \rho u dy + \frac{\partial}{\partial x} \left[ \int_0^\delta u \rho u dy \right] dx \right\} w$
<i>bc</i>	Since the mass crossing surface <i>bc</i> has velocity component <i>U</i> in the <i>x</i> direction, the <i>x</i> momentum flux across <i>bc</i> is given by $mf_{bc} = U \dot{m}_{bc}$ $mf_{bc} = -U \left\{ \frac{\partial}{\partial x} \left[ \int_0^\delta \rho u dy \right] dx \right\} w$

From the above we can evaluate the net *x* momentum flux through the control surface as

$$\int_{CS} u \rho \vec{V} \cdot d\vec{A} = - \left\{ \int_0^\delta u \rho u dy \right\} w + \left\{ \int_0^\delta u \rho u dy \right\} w + \left\{ \frac{\partial}{\partial x} \left[ \int_0^\delta u \rho u dy \right] dx \right\} w - U \left\{ \frac{\partial}{\partial x} \left[ \int_0^\delta \rho u dy \right] dx \right\} w$$

Collecting terms, we find that

$$\int_{CS} u \rho \vec{V} \cdot d\vec{A} = + \left\{ \frac{\partial}{\partial x} \left[ \int_0^\delta u \rho u dy \right] dx - U \frac{\partial}{\partial x} \left[ \int_0^\delta \rho u dy \right] dx \right\} w$$

Now that we have a suitable expression for the *x* momentum flux through the control surface, let us consider the surface forces acting on the control volume in the *x* direction. (For convenience the differential control volume has been redrawn in Fig. 9.5.) We recognize that normal forces having nonzero components in the *x* direction act on three surfaces of the control surface. In addition, a shear force acts on surface *ad*.

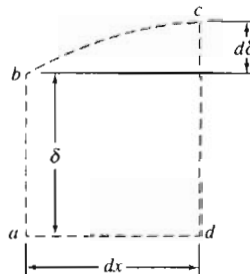


Fig. 9.5 Differential control volume.

Since the velocity gradient goes to zero at the edge of the boundary layer, the shear force acting along surface  $bc$  is negligible.

Surface	Force
$ab$	<p>If the pressure at <math>x</math> is <math>p</math>, then the force acting on surface <math>ab</math> is given by</p> $F_{ab} = pw\delta$ <p>(The boundary layer is very thin; its thickness has been greatly exaggerated in all the sketches we have made. Because it is thin, pressure variations in the <math>y</math> direction may be neglected, and we assume that within the boundary layer, <math>p = p(x)</math>.)</p>
$cd$	<p>Expanding in a Taylor series, the pressure at <math>x + dx</math> is given by</p> $p_{x+dx} = p + \left. \frac{dp}{dx} \right]_x dx$ <p>The force on surface <math>cd</math> is then given by</p> $F_{cd} = - \left( p + \left. \frac{dp}{dx} \right]_x dx \right) w(\delta + d\delta)$
$bc$	<p>The average pressure acting over surface <math>bc</math> is</p> $p + \left. \frac{1}{2} \frac{dp}{dx} \right]_x dx$ <p>Then the <math>x</math> component of the normal force acting over <math>bc</math> is given by</p> $F_{bc} = \left( p + \left. \frac{1}{2} \frac{dp}{dx} \right]_x dx \right) w d\delta$
$ad$	<p>The average shear force acting on <math>ad</math> is given by</p> $F_{ad} = - \left( \tau_w + \frac{1}{2} d\tau_w \right) w dx$

Summing the  $x$  components of all forces acting on the control volume, we obtain

$$F_{S_x} + \left\{ - \frac{dp}{dx} \delta dx - \frac{1}{2} \frac{dp}{dx} dx/d\delta - \tau_w dx - \frac{1}{2} d\tau_w dx \right\} w$$

where we note that  $dx d\delta \ll \delta dx$  and  $d\tau_w \ll \tau_w$ , and so neglect the second and fourth terms.

Substituting the expressions for  $\int_{CS} u \rho \vec{V} \cdot d\vec{A}$  and  $F_{S_x}$  into the  $x$  momentum equation, we obtain

$$\left\{ - \frac{dp}{dx} \delta dx - \tau_w dx \right\} w = \left\{ \frac{\partial}{\partial x} \left[ \int_0^\delta u \rho u dy \right] dx - U \frac{\partial}{\partial x} \left[ \int_0^\delta \rho u dy \right] dx \right\} w$$

Dividing this equation by  $w dx$  gives

$$-\delta \frac{dp}{dx} - \tau_w = \frac{\partial}{\partial x} \int_0^\delta u \rho u dy - U \frac{\partial}{\partial x} \int_0^\delta \rho u dy \quad (9.16)$$

Equation 9.16 is a "momentum integral" equation that gives a relation between the  $x$  components of the forces acting in a boundary layer and the  $x$  momentum flux.

The pressure gradient,  $dp/dx$ , can be determined by applying the Bernoulli equation to the inviscid flow outside the boundary layer:  $dp/dx = -\rho U dU/dx$ . If we recognize that  $\delta = \int_0^\delta dy$ , then Eq. 9.16 can be written as

$$\tau_w = -\frac{\partial}{\partial x} \int_0^\delta u \rho u dy + U \frac{\partial}{\partial x} \int_0^\delta \rho u dy + \frac{dU}{dx} \int_0^\delta \rho U dy$$

Since

$$U \frac{\partial}{\partial x} \int_0^\delta \rho u dy = \frac{\partial}{\partial x} \int_0^\delta \rho u U dy - \frac{dU}{dx} \int_0^\delta \rho u dy$$

we have

$$\tau_w = \frac{\partial}{\partial x} \int_0^\delta \rho u (U - u) dy + \frac{dU}{dx} \int_0^\delta \rho (U - u) dy$$

and

$$\tau_w = \frac{\partial}{\partial x} U^2 \int_0^\delta \rho \frac{u}{U} \left(1 - \frac{u}{U}\right) dy + U \frac{dU}{dx} \int_0^\delta \rho \left(1 - \frac{u}{U}\right) dy$$

Using the definitions of displacement thickness,  $\delta^*$  (Eq. 9.1), and momentum thickness,  $\theta$  (Eq. 9.2), we obtain

---


$$\frac{\tau_w}{\rho} = \frac{d}{dx} (U^2 \theta) + \delta^* U \frac{dU}{dx} \quad (9.17)$$


---

Equation 9.17 is the *momentum integral equation*. This equation will yield an ordinary differential equation for boundary-layer thickness, provided that a suitable form is assumed for the velocity profile and that the wall shear stress can be related to other variables. Once the boundary-layer thickness is determined, the momentum thickness, displacement thickness, and wall shear stress can then be calculated.

Equation 9.17 was obtained by applying the basic equations (continuity and  $x$  momentum) to a differential control volume. Reviewing the assumptions we made in the derivation, we see that the equation is restricted to steady, incompressible, two-dimensional flow with no body forces parallel to the surface.

We have not made any specific assumption relating the wall shear stress,  $\tau_w$ , to the velocity field. Thus Eq. 9.17 is valid for either a laminar or turbulent boundary-layer flow. In order to use this equation to estimate the boundary-layer thickness as a function of  $x$ , we must:

1. Obtain a first approximation to the freestream velocity distribution,  $U(x)$ . This is determined from inviscid flow theory (the velocity that would exist in the absence of a boundary layer) and depends on body shape. The pressure in the boundary layer is related to the freestream velocity,  $U(x)$ , using the Bernoulli equation.
2. Assume a reasonable velocity-profile shape inside the boundary layer.
3. Derive an expression for  $\tau_w$  using the results obtained from item 2.

To illustrate the application of Eq. 9.17 to boundary-layer flows, we consider first the case of flow with zero pressure gradient over a flat plate (Section 9-5)—the results we obtain for a laminar boundary layer can then be compared to the exact Blasius results. The effects of pressure gradients in boundary-layer flow are then discussed in Section 9-6.



## 9-5 USE OF THE MOMENTUM INTEGRAL EQUATION FOR FLOW WITH ZERO PRESSURE GRADIENT

For the special case of a flat plate (zero pressure gradient) the free-stream pressure  $p$  and velocity  $U$  are both constant, so for item 1 we have  $U(x) = U = \text{constant}$ .

The momentum integral equation then reduces to

$$\tau_w = \rho U^2 \frac{d\theta}{dx} = \rho U^2 \frac{d}{dx} \int_0^\delta \frac{u}{U} \left(1 - \frac{u}{U}\right) dy \quad (9.18)$$

The velocity distribution,  $u/U$ , in the boundary layer is assumed to be similar for all values of  $x$  and normally is specified as a function of  $y/\delta$ . (Note that  $u/U$  is dimensionless and  $\delta$  is a function of  $x$  only.) Consequently, it is convenient to change the variable of integration from  $y$  to  $y/\delta$ . Defining

$$\eta = \frac{y}{\delta}$$

we get

$$dy = \delta d\eta$$

and the momentum integral equation for zero pressure gradient is written

$$\tau_w = \rho U^2 \frac{d\theta}{dx} = \rho U^2 \frac{d\delta}{dx} \int_0^1 \frac{u}{U} \left(1 - \frac{u}{U}\right) d\eta \quad (9.19)$$

We wish to solve this equation for the boundary-layer thickness as a function of  $x$ . To do this, we must satisfy the remaining items:

2. Assume a velocity distribution in the boundary layer—a functional relationship of the form

$$\frac{u}{U} = f\left(\frac{y}{\delta}\right)$$

- (a) The assumed velocity distribution should satisfy the following approximate physical boundary conditions:

$$\text{at } y = 0, \quad u = 0$$

$$\text{at } y = \delta, \quad u = U$$

$$\text{at } y = \delta, \quad \frac{\partial u}{\partial y} = 0$$

- (b) Note that for any assumed velocity distribution, the numerical value of the integral in Eq. 9.19 is simply

$$\int_0^1 \frac{u}{U} \left(1 - \frac{u}{U}\right) d\eta = \frac{\theta}{\delta} = \text{constant} = \beta$$

and the momentum integral equation becomes

$$\tau_w = \rho U^2 \frac{d\delta}{dx} \beta$$

3. Obtain an expression for  $\tau_w$  in terms of  $\delta$ . This will then permit us to solve for  $\delta(x)$ , as illustrated below.



### Laminar Flow

For laminar flow over a flat plate, a reasonable assumption for the velocity profile is a polynomial in  $y$ :

$$u = a + by + cy^2$$

The physical boundary conditions are:

$$\text{at } y = 0, \quad u = 0$$

$$\text{at } y = \delta, \quad u = U$$

$$\text{at } y = \delta, \quad \frac{\partial u}{\partial y} = 0$$

Evaluating constants  $a$ ,  $b$ , and  $c$  gives

$$\frac{u}{U} = 2\left(\frac{y}{\delta}\right) - \left(\frac{y}{\delta}\right)^2 = 2\eta - \eta^2 \quad (9.20)$$

Equation 9.20 satisfies item 2. For item 3, we recall that the wall shear stress is given by

$$\tau_w = \mu \left. \frac{\partial u}{\partial y} \right|_{y=0}$$

Substituting the assumed velocity profile, Eq. 9.20, into this expression for  $\tau_w$  gives

$$\tau_w = \mu \left. \frac{\partial u}{\partial y} \right|_{y=0} = \mu \left. \frac{U \partial(u/U)}{\delta \partial(y/\delta)} \right|_{y/\delta=0} = \left. \frac{\mu U}{\delta} \frac{d(u/U)}{d\eta} \right|_{\eta=0}$$

or

$$\tau_w = \left. \frac{\mu U}{\delta} \frac{d}{d\eta} (2\eta - \eta^2) \right|_{\eta=0} = \left. \frac{\mu U}{\delta} (2 - 2\eta) \right|_{\eta=0} = \frac{2\mu U}{\delta}$$

Now that we have completed items 1, 2, and 3, we can return to the momentum integral equation

$$\tau_w = \rho U^2 \frac{d\delta}{dx} \int_0^1 \frac{u}{U} \left(1 - \frac{u}{U}\right) d\eta \quad (9.19)$$

Substituting for  $\tau_w$  and  $u/U$ , we obtain

$$\frac{2\mu U}{\delta} = \rho U^2 \frac{d\delta}{dx} \int_0^1 (2\eta - \eta^2)(1 - 2\eta + \eta^2) d\eta$$

or

$$\frac{2\mu U}{\delta \rho U^2} = \frac{d\delta}{dx} \int_0^1 (2\eta - 5\eta^2 + 4\eta^3 - \eta^4) d\eta$$

Integrating and substituting limits yields

$$\frac{2\mu}{\delta \rho U} = \frac{2}{15} \frac{d\delta}{dx} \quad \text{or} \quad \delta d\delta = \frac{15\mu}{\rho U} dx$$

which is a differential equation for  $\delta$ . Integrating again gives

$$\frac{\delta^2}{2} = \frac{15\mu}{\rho U} x + c$$

If we assume that  $\delta = 0$  at  $x = 0$ , then  $c = 0$ , and thus

$$\delta = \sqrt{\frac{30\mu x}{\rho U}}$$

or

$$\frac{\delta}{x} = \sqrt{\frac{30\mu}{\rho U x}} = \frac{5.48}{\sqrt{Re_x}} \quad (9.21)$$

Equation 9.21 shows that the ratio of laminar boundary-layer thickness to distance along a flat plate varies inversely with the square root of length Reynolds number. It has the same form as the exact solution derived from the complete differential equations of motion by H. Blasius in 1908. Remarkably, Eq. 9.21 is only in error (the constant is too large) by about 10 percent compared with the exact solution (Section 9-3). Table 9.2 summarizes corresponding results calculated using other approximate velocity profiles and lists results obtained from the exact solution. (The only thing that changes in the analysis when we choose a different velocity profile is the value of  $\beta$  in  $\tau_w = \rho U^2 \frac{d\delta}{dx} \beta$  in item 2b on page 421.) The shapes of the approximate profiles may be compared readily by plotting  $u/U$  versus  $y/\delta$ .

Once we know the boundary-layer thickness, all details of the flow may be determined. The wall shear stress, or "skin friction," coefficient is defined as

$$C_f \equiv \frac{\tau_w}{\frac{1}{2}\rho U^2} \quad (9.22)$$

Substituting from the velocity profile and Eq. 9.21 gives

$$C_f = \frac{\tau_w}{\frac{1}{2}\rho U^2} = \frac{2\mu(U/\delta)}{\frac{1}{2}\rho U^2} = \frac{4\mu}{\rho U \delta} = 4 \frac{\mu}{\rho U x} \frac{x}{\delta} = 4 \frac{1}{Re_x} \frac{\sqrt{Re_x}}{5.48}$$

**Table 9.2** Results of the Calculation of Laminar Boundary-Layer Flow over a Flat Plate at Zero Incidence Based on Approximate Velocity Profiles

Velocity Distribution $\frac{u}{U} = f\left(\frac{y}{\delta}\right) = f(\eta)$	$\frac{\theta}{\delta}$	$\frac{\delta^*}{\delta}$	$H = \frac{\delta^*}{\theta}$	$a = \frac{\delta}{x} \sqrt{Re_x}$	$b = C_f \sqrt{Re_x}$
$f(\eta) = \eta$	$\frac{1}{6}$	$\frac{1}{2}$	3.00	3.46	0.577
$f(\eta) = 2\eta - \eta^2$	$\frac{2}{15}$	$\frac{1}{3}$	2.50	5.48	0.730
$f(\eta) = \frac{3}{2}\eta - \frac{1}{2}\eta^3$	$\frac{39}{280}$	$\frac{3}{8}$	2.69	4.64	0.647
$f(\eta) = 2\eta - 2\eta^3 + \eta^4$	$\frac{37}{315}$	$\frac{3}{10}$	2.55	5.84	0.685
$f(\eta) = \sin\left(\frac{\pi}{2}\eta\right)$	$\frac{4-\pi}{2\pi}$	$\frac{\pi-2}{\pi}$	2.66	4.80	0.654
Exact	0.133	0.344	2.59	5.00	0.664

Finally,

$$C_f = \frac{0.730}{\sqrt{Re_x}} \quad (9.23)$$

Once the variation of  $\tau_w$  is known, the viscous drag on the surface can be evaluated by integrating over the area of the flat plate, as illustrated in Example Problem 9.3.

Equation 9.21 can be used to calculate the thickness of the laminar boundary layer at transition. At  $Re_x = 5 \times 10^5$ , with  $U = 30$  m/s,  $x = 0.24$  m for air at standard conditions. Thus

$$\frac{\delta}{x} = \frac{5.48}{\sqrt{Re_x}} = \frac{5.48}{\sqrt{5 \times 10^5}} = 0.00775$$

and the boundary-layer thickness is

$$\delta = 0.00775x = 0.00775(0.24 \text{ m}) = 1.86 \text{ mm}$$

The boundary-layer thickness at transition is less than 1 percent of the development length,  $x$ . These calculations confirm that viscous effects are confined to a very thin layer near the surface of a body.

The results in Table 9.2 indicate that reasonable results may be obtained with a variety of approximate velocity profiles.

### EXAMPLE 9.3 Laminar Boundary Layer on a Flat Plate: Approximate Solution Using Sinusoidal Velocity Profile

Consider two-dimensional laminar boundary-layer flow along a flat plate. Assume the velocity profile in the boundary layer is sinusoidal,

$$\frac{u}{U} = \sin\left(\frac{\pi y}{2\delta}\right)$$

Find expressions for:

- The rate of growth of  $\delta$  as a function of  $x$ .
- The displacement thickness,  $\delta^*$ , as a function of  $x$ .
- The total friction force on a plate of length  $L$  and width  $b$ .


#### EXAMPLE PROBLEM 9.3

**GIVEN:** Two-dimensional, laminar boundary-layer flow along a flat plate. The boundary-layer velocity profile is

$$\frac{u}{U} = \sin\left(\frac{\pi y}{2\delta}\right) \quad \text{for } 0 \leq y \leq \delta$$

and

$$\frac{u}{U} = 1 \quad \text{for } y > \delta$$



**FIND:** (a)  $\delta(x)$ . (b)  $\delta^*(x)$ .  
(c) Total friction force on a plate of length  $L$  and width  $b$ .

**SOLUTION:**

For flat plate flow,  $U = \text{constant}$ ,  $dp/dx = 0$ , and

$$\tau_w = \rho U^2 \frac{d\theta}{dx} = \rho U^2 \frac{d\delta}{dx} \int_0^1 \frac{u}{U} \left(1 - \frac{u}{U}\right) d\eta \quad (9.19)$$

- Assumptions: (1) Steady flow.  
(2) Incompressible flow.

Substituting  $\frac{u}{U} = \sin \frac{\pi}{2} \eta$  into Eq. 9.19, we obtain

$$\begin{aligned} \tau_w &= \rho U^2 \frac{d\delta}{dx} \int_0^1 \sin \frac{\pi}{2} \eta \left(1 - \sin \frac{\pi}{2} \eta\right) d\eta = \rho U^2 \frac{d\delta}{dx} \int_0^1 \left(\sin \frac{\pi}{2} \eta - \sin^2 \frac{\pi}{2} \eta\right) d\eta \\ &= \rho U^2 \frac{d\delta}{dx} \frac{2}{\pi} \left[-\cos \frac{\pi}{2} \eta - \frac{1}{2} \frac{\pi}{2} \eta + \frac{1}{4} \sin \pi \eta\right]_0^1 = \rho U^2 \frac{d\delta}{dx} \frac{2}{\pi} \left[0 + 1 - \frac{\pi}{4} + 0 + 0 - 0\right] \\ \tau_w &= 0.137 \rho U^2 \frac{d\delta}{dx} = \beta \rho U^2 \frac{d\delta}{dx}; \quad \beta = 0.137 \end{aligned}$$

Now

$$\tau_w = \mu \left. \frac{\partial u}{\partial y} \right|_{y=0} = \mu \left. \frac{U}{\delta} \frac{\partial (u/U)}{\partial (y/\delta)} \right|_{y=0} = \mu \left. \frac{U}{\delta} \frac{\pi}{2} \cos \frac{\pi}{2} \eta \right|_{\eta=0} = \frac{\pi \mu U}{2\delta}$$

Therefore,

$$\tau_w = \frac{\pi \mu U}{2\delta} = 0.137 \rho U^2 \frac{d\delta}{dx}$$

Separating variables gives

$$\delta d\delta = 11.5 \frac{\mu}{\rho U} dx$$

Integrating, we obtain

$$\frac{\delta^2}{2} = 11.5 \frac{\mu}{\rho U} x + c$$

But  $c = 0$ , since  $\delta = 0$  at  $x = 0$ , so

$$\delta = \sqrt{23.0 \frac{x\mu}{\rho U}}$$

or

$$\frac{\delta}{x} = 4.80 \sqrt{\frac{\mu}{\rho U x}} = \frac{4.80}{\sqrt{Re_x}} \leftarrow \delta(x)$$

The displacement thickness,  $\delta^*$ , is given by

$$\begin{aligned} \delta^* &= \delta \int_0^1 \left(1 - \frac{u}{U}\right) d\eta \\ &= \delta \int_0^1 \left(1 - \sin \frac{\pi}{2} \eta\right) d\eta = \delta \left[\eta + \frac{2}{\pi} \cos \frac{\pi}{2} \eta\right]_0^1 \\ \delta^* &= \delta \left[1 - 0 + 0 - \frac{2}{\pi}\right] = \delta \left[1 - \frac{2}{\pi}\right] \end{aligned}$$

Since, from part (a),

$$\frac{\delta}{x} = \frac{4.80}{\sqrt{Re_x}}$$

then

$$\frac{\delta^*}{x} = \left(1 - \frac{2}{\pi}\right) \frac{4.80}{\sqrt{Re_x}} = \frac{1.74}{\sqrt{Re_x}} \leftarrow \delta^*(x)$$

The total friction force on one side of the plate is given by

$$F = \int_{A_p} \tau_w dA$$

Since  $dA = b dx$  and  $0 \leq x \leq L$ , then

$$F = \int_0^L \tau_w b dx = \int_0^L \rho U^2 \frac{d\theta}{dx} b dx = \rho U^2 b \int_0^{\theta_L} d\theta = \rho U^2 b \theta_L$$

$$\theta_L = \int_0^{\delta_L} \frac{u}{U} \left(1 - \frac{u}{U}\right) dy = \delta_L \int_0^1 \frac{u}{U} \left(1 - \frac{u}{U}\right) d\eta = \beta \delta_L$$

From part (a),  $\beta = 0.137$  and  $\delta_L = \frac{4.80L}{\sqrt{Re_L}}$ , so

$$F = \frac{0.658 \rho U^2 b L}{\sqrt{Re_L}} \leftarrow F$$

This problem illustrates application of the momentum integral equation to the laminar boundary layer on a flat plate.



The *Excel* workbook for this Example Problem plots the growth of  $\delta$  and  $\delta^*$  in the boundary layer, and the exact solution (Eq. 9.13). It also shows wall shear stress distributions for the sinusoidal velocity profile and the exact solution.

## Turbulent Flow

For the flat plate, we still have for item 1 that  $U = \text{constant}$ . As for the laminar boundary layer, we need to satisfy item 2 (an approximation for the turbulent velocity profile) and item 3 (an expression for  $\tau_w$ ) in order to solve Eq. 9.19 for  $\delta(x)$ :

$$\tau_w = \rho U^2 \frac{d\delta}{dx} \int_0^1 \frac{u}{U} \left(1 - \frac{u}{U}\right) d\eta \quad (9.19)$$

Details of the turbulent velocity profile for boundary layers at zero pressure gradient are very similar to those for turbulent flow in pipes and channels. Data for turbulent boundary layers plot on the universal velocity profile using coordinates of  $\bar{u}/u_*$  versus  $y u_* / \nu$ , as shown in Fig. 8.8. However, this profile is rather complex mathematically for easy use with the momentum integral equation. The momentum integral equation is approximate; hence, an acceptable velocity profile for turbulent boundary

layers on smooth flat plates is the empirical power-law profile. An exponent of  $\frac{1}{7}$  is typically used to model the turbulent velocity profile. Thus

$$\frac{u}{U} = \left(\frac{y}{\delta}\right)^{1/7} = \eta^{1/7} \quad (9.24)$$

However, this profile does not hold in the immediate vicinity of the wall, since at the wall it predicts  $du/dy = \infty$ . Consequently, we cannot use this profile in the definition of  $\tau_w$  to obtain an expression for  $\tau_w$  in terms of  $\delta$  as we did for laminar boundary-layer flow. For turbulent boundary-layer flow we adapt the expression developed for pipe flow,

$$\tau_w = 0.0332\rho\bar{V}^2 \left[\frac{\nu}{R\bar{V}}\right]^{0.25} \quad (8.39)$$

For a  $\frac{1}{7}$ -power profile in a pipe, Eq. 8.24 gives  $\bar{V}/U = 0.817$ . Substituting  $\bar{V} = 0.817U$  and  $R = \delta$  into Eq. 8.39, we obtain

$$\tau_w = 0.0233\rho U^2 \left(\frac{\nu}{U\delta}\right)^{1/4} \quad (9.25)$$

Substituting for  $\tau_w$  and  $u/U$  into Eq. 9.19 and integrating, we obtain

$$0.0233 \left(\frac{\nu}{U\delta}\right)^{1/4} = \frac{d\delta}{dx} \int_0^1 \eta^{1/7} (1 - \eta^{1/7}) d\eta = \frac{7}{72} \frac{d\delta}{dx}$$

Thus we obtain a differential equation for  $\delta$ :

$$\delta^{1/4} d\delta = 0.240 \left(\frac{\nu}{U}\right)^{1/4} dx$$

Integrating gives

$$\frac{4}{5} \delta^{5/4} = 0.240 \left(\frac{\nu}{U}\right)^{1/4} x + c$$

If we assume that  $\delta \approx 0$  at  $x = 0$  (this is equivalent to assuming turbulent flow from the leading edge), then  $c = 0$  and

$$\delta = 0.382 \left(\frac{\nu}{U}\right)^{1/5} x^{4/5}$$

or

$$\frac{\delta}{x} = 0.382 \left(\frac{\nu}{Ux}\right)^{1/5} = \frac{0.382}{Re_x^{1/5}} \quad (9.26)$$

Using Eq. 9.25, we obtain the skin friction coefficient in terms of  $\delta$ :

$$C_f = \frac{\tau_w}{\frac{1}{2}\rho U^2} = 0.0466 \left(\frac{\nu}{U\delta}\right)^{1/4}$$

Substituting for  $\delta$ , we obtain

$$C_f = \frac{\tau_w}{\frac{1}{2}\rho U^2} = \frac{0.0594}{Re_x^{1/5}} \quad (9.27)$$

Experiments show that Eq. 9.27 predicts turbulent skin friction on a flat plate very well for  $5 \times 10^5 < Re_x < 10^7$ . This agreement is remarkable in view of the approximate nature of our analysis.

Application of the momentum integral equation for turbulent boundary-layer flow is illustrated in Example Problem 9.4.

Use of the momentum integral equation is an approximate technique to predict boundary-layer development; the equation predicts trends correctly. Parameters of the laminar boundary layer vary as  $Re_x^{-1/2}$ ; those for the turbulent boundary layer vary as  $Re_x^{-1/5}$ . Thus the turbulent boundary layer develops more rapidly than the laminar boundary layer.

Laminar and turbulent boundary layers are compared in Example Problem 9.4. Wall shear stress is much higher in the turbulent boundary layer than in the laminar layer. This is the primary reason for the more rapid development of turbulent boundary layers.

The agreement we have obtained with experimental results shows that use of the momentum integral equation is an effective approximate method that gives us considerable insight into the general behavior of boundary layers.


#### EXAMPLE 9.4 Turbulent Boundary Layer on a Flat Plate: Approximate Solution Using $\frac{1}{7}$ -power Velocity Profile

Water flows at  $U = 1$  m/s past a flat plate with  $L = 1$  m in the flow direction. The boundary layer is tripped so it becomes turbulent at the leading edge. Evaluate the disturbance thickness,  $\delta$ , displacement thickness,  $\delta^*$ , and wall shear stress,  $\tau_w$ , at  $x = L$ . Compare with laminar flow maintained to the same position. Assume a  $\frac{1}{7}$ -power turbulent velocity profile.

#### EXAMPLE PROBLEM 9.4

**GIVEN:** Flat-plate boundary-layer flow; turbulent flow from the leading edge. Assume  $\frac{1}{7}$ -power velocity profile.

- FIND:** (a) Disturbance thickness,  $\delta_L$ .  
 (b) Displacement thickness,  $\delta_L^*$ .  
 (c) Wall shear stress,  $\tau_w(L)$ .  
 (d) Comparison with results for laminar flow from the leading edge.

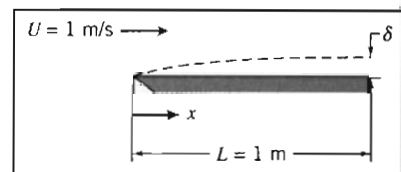

#### SOLUTION:

Apply results from the momentum integral equation.

Governing equations: 
$$\frac{\delta}{x} = \frac{0.382}{Re_x^{1/5}} \quad (9.26)$$

$$\delta^* = \int_0^{\infty} \left(1 - \frac{u}{U}\right) dy \quad (9.1)$$

$$C_f = \frac{\tau_w}{\frac{1}{2}\rho U^2} = \frac{0.0594}{Re_x^{1/5}} \quad (9.27)$$

At  $x = L$ , with  $\nu = 1.00 \times 10^{-6}$  m<sup>2</sup>/s for water ( $T = 20^\circ\text{C}$ ),

$$Re_L = \frac{UL}{\nu} = \frac{1 \text{ m}}{s} \times \frac{1 \text{ m}}{s} \times \frac{s}{10^{-6} \text{ m}^2} = 10^6$$



From Eq. 9.26,

$$\delta_L = \frac{0.382}{Re_L^{1/5}} L = \frac{0.382}{(10^6)^{1/5}} \times 1 \text{ m} = 0.0241 \text{ m} \quad \text{or} \quad \delta_L = 24.1 \text{ mm} \quad \leftarrow \delta_L$$

Using Eq. 9.1, with  $u/U = (y/\delta)^{1/7} = \eta^{1/7}$ , we obtain

$$\delta_L^* = \int_0^\infty \left(1 - \frac{u}{U}\right) dy = \delta_L \int_0^1 \left(1 - \frac{u}{U}\right) d\left(\frac{y}{\delta}\right) = \delta_L \int_0^1 (1 - \eta^{1/7}) d\eta = \delta_L \left[\eta - \frac{7}{8} \eta^{8/7}\right]_0^1$$

$$\delta_L^* = \frac{\delta_L}{8} = \frac{24.1 \text{ mm}}{8} = 3.01 \text{ mm} \quad \leftarrow \delta_L^*$$

From Eq. 9.27,

$$C_f = \frac{0.0594}{(10^6)^{1/5}} = 0.00375$$

$$\tau_w = C_f \frac{1}{2} \rho U^2 = 0.00375 \times \frac{1}{2} \times 999 \frac{\text{kg}}{\text{m}^3} \times (1)^2 \frac{\text{m}^2}{\text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}}$$

$$\tau_w = 1.87 \text{ N/m}^2 \quad \leftarrow \tau_w(L)$$

For laminar flow, use Blasius solution values. From Eq. 9.13,

$$\delta_L = \frac{5.0}{\sqrt{Re_L}} L = \frac{5.0}{(10^6)^{1/2}} \times 1 \text{ m} = 0.005 \text{ m} \quad \text{or} \quad 5.00 \text{ mm}$$

From Example 9.2,  $\delta^*/\delta = 0.344$ , so

$$\delta^* = 0.344 \delta = 0.344 \times 5.0 \text{ mm} = 1.72 \text{ mm}$$

From Eq. 9.15,  $C_f = \frac{0.664}{\sqrt{Re_x}}$ , so

$$\tau_w = C_f \frac{1}{2} \rho U^2 = \frac{0.664}{\sqrt{10^6}} \times \frac{1}{2} \times 999 \frac{\text{kg}}{\text{m}^3} \times (1)^2 \frac{\text{m}^2}{\text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} = 0.332 \text{ N/m}^2$$

Comparing values at  $x = L$ , we obtain

$$\text{Disturbance thickness, } \frac{\delta_{\text{turbulent}}}{\delta_{\text{laminar}}} = \frac{24.1 \text{ mm}}{5.00 \text{ mm}} = 4.82$$

$$\text{Displacement thickness, } \frac{\delta_{\text{turbulent}}^*}{\delta_{\text{laminar}}^*} = \frac{3.01 \text{ mm}}{1.72 \text{ mm}} = 1.75$$

$$\text{Wall shear stress, } \frac{\tau_{w,\text{turbulent}}}{\tau_{w,\text{laminar}}} = \frac{1.87 \text{ N/m}^2}{0.332 \text{ N/m}^2} = 5.63$$

This problem illustrates application of the momentum integral equation to the turbulent boundary layer on a flat plate. Compared to a laminar boundary layer, it is clear that the turbulent boundary layer grows much more rapidly—because the turbulent wall stress is significantly greater than the laminar wall stress.



The *Excel* workbook for this Example Problem plots the  $\frac{1}{7}$ -power-law turbulent boundary layer (Eq. 9.26) and the laminar boundary layer (Eq. 9.13). It also shows the wall stress distributions for both cases.

## 9-6 PRESSURE GRADIENTS IN BOUNDARY-LAYER FLOW

The boundary layer (laminar or turbulent) with a uniform flow along an infinite flat plate is the easiest one to study because the pressure gradient is zero—the fluid particles in the boundary layer are slowed only by shear stresses, leading to boundary-layer growth. We now consider the effects caused by a pressure gradient, which will be present for all bodies except, as we have seen, a flat plate.

A *favorable pressure gradient* is one in which the pressure decreases in the flow direction (i.e.,  $\partial p/\partial x < 0$ , arising when the free-stream velocity  $U$  is increasing with  $x$ , for example in a converging flow field) will tend to counteract the slowing of fluid particles in the boundary layer. On the other hand an *adverse pressure gradient* in which pressure increases in the flow direction (i.e.,  $\partial p/\partial x > 0$ , when  $U$  is decreasing with  $x$ , for example in a diverging flow field) will tend to contribute to the slowing of the fluid particles. If the adverse pressure gradient is severe enough, the fluid particles in the boundary layer will actually be brought to rest. When this occurs, the particles will be forced away from the body surface (a phenomenon called *flow separation*) as they make room for following particles, ultimately leading to a *wake* in which flow is turbulent.

This description, of the adverse pressure gradient and friction in the boundary layer together forcing flow separation, certainly makes intuitive sense; the question arises whether we can more formally see when this occurs. For example, can we have flow separation and a wake for uniform flow over a flat plate, where  $\partial p/\partial x = 0$ ? We can gain insight into this question by considering when the velocity in the boundary layer will become zero. Consider the velocity  $u$  in the boundary layer at an infinitesimal distance  $dy$  above the plate. This will be

$$u_{y=dy} = u_0 + \left. \frac{\partial u}{\partial y} \right|_{y=0} dy = \left. \frac{\partial u}{\partial y} \right|_{y=0} dy$$

where  $u_0 = 0$  is the velocity at the surface of the plate. It is clear that  $u_{y=dy}$  will be zero (i.e., separation will occur) only when  $\left. \partial u/\partial y \right|_{y=0} = 0$ . Hence, we can use this as our litmus test for flow separation. We recall that the velocity gradient near the surface in a laminar boundary layer, and in the viscous sublayer of a turbulent boundary layer, was related to the wall shear stress by

$$\tau_w = \mu \left. \frac{\partial u}{\partial y} \right|_{y=0}$$

Further, we learned in the previous section that the wall shear stress for the flat plate is given by

$$\frac{\tau_w(x)}{\rho U^2} = \frac{\text{constant}}{\sqrt{Re_x}}$$

for a laminar boundary layer and

$$\frac{\tau_w(x)}{\rho U^2} = \frac{\text{constant}}{Re_x^{1/5}}$$

for a turbulent boundary layer. We see that for the flow over a flat plate, the wall stress is always  $\tau_w > 0$ . Hence,  $\left. \partial u/\partial y \right|_{y=0} > 0$  always; and therefore, finally,  $u_{y=dy} > 0$  always. We conclude that for uniform flow over a flat plate the flow *never* separates, and we never develop a wake region, whether the boundary layer is laminar or turbulent, regardless of plate length.

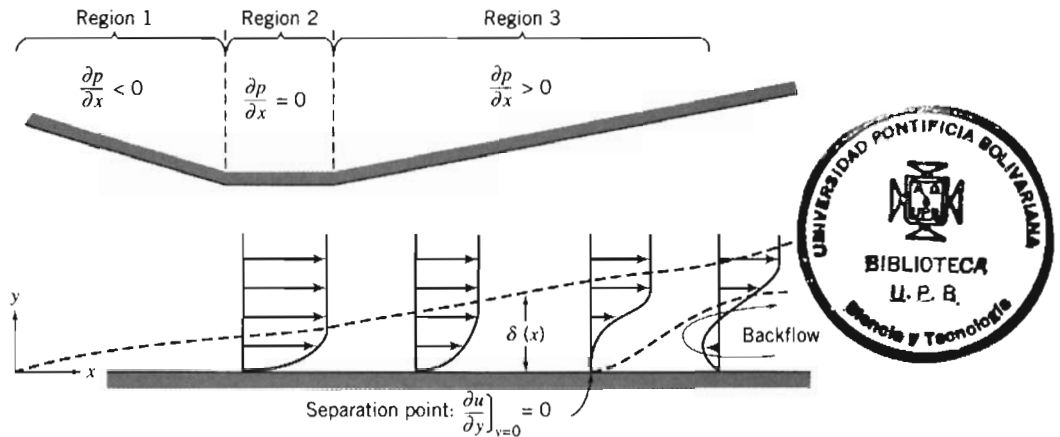


Fig. 9.6 Boundary-layer flow with pressure gradient (boundary-layer thickness exaggerated for clarity).

We conclude that flow will not separate for flow over a flat plate, when  $\partial p/\partial x = 0$ . Clearly, for flows in which  $\partial p/\partial x < 0$  (whenever the free-stream velocity is increasing), we can be sure that there will be no flow separation; for flows in which  $\partial p/\partial x > 0$  (i.e., adverse pressure gradients) we *could* have flow separation. We should not conclude that an adverse pressure gradient *always* leads to flow separation and a wake; we have only concluded that it is a necessary condition for flow separation to occur.

To illustrate these results consider the variable cross-sectional flow shown in Fig. 9.6. Outside the boundary layer the velocity field is one in which the flow accelerates (Region 1), has a constant velocity region (Region 2), and then a deceleration region (Region 3). Corresponding to these, the pressure gradient is favorable, zero, and adverse, respectively, as shown. (Note that the straight wall is not a simple flat plate—it has these various pressure gradients because the flow above the wall is not a uniform flow.) From our discussions above, we conclude that separation cannot occur in Region 1 or 2, but can (as shown) occur in Region 3. Could we avoid flow separation in a device like this? Intuitively, we can see that if we make the divergent section less severe, we may be able to eliminate flow separation. In other words, we may eliminate flow separation if we sufficiently reduce the magnitude of the adverse pressure gradient  $\partial p/\partial x$ . The final question remaining is how small the adverse pressure gradient needs to be to accomplish this. This, and a more rigorous proof that we must have  $\partial p/\partial x > 0$  for a chance of flow separation, is beyond the scope of this text [3]. We conclude that flow separation is possible, but not guaranteed, when we have an adverse pressure gradient.

The nondimensional velocity profiles for laminar and turbulent boundary-layer flow over a flat plate are shown in Fig. 9.7a. The turbulent profile is much fuller (more blunt) than the laminar profile. At the same freestream speed, the momentum flux within the turbulent boundary layer is greater than within the laminar layer (Fig. 9.7b). Separation occurs when the momentum of fluid layers near the surface is reduced to zero by the combined action of pressure and viscous forces. As shown in Fig. 9.7b, the momentum of the fluid near the surface is significantly greater for the turbulent profile. Consequently, the turbulent layer is better able to resist separation in an adverse pressure gradient. We shall discuss some consequences of this behavior in Section 9-7.

Adverse pressure gradients cause significant changes in velocity profiles for both laminar and turbulent boundary-layer flows. Approximate solutions for nonzero pressure gradient flow may be obtained from the momentum integral equation

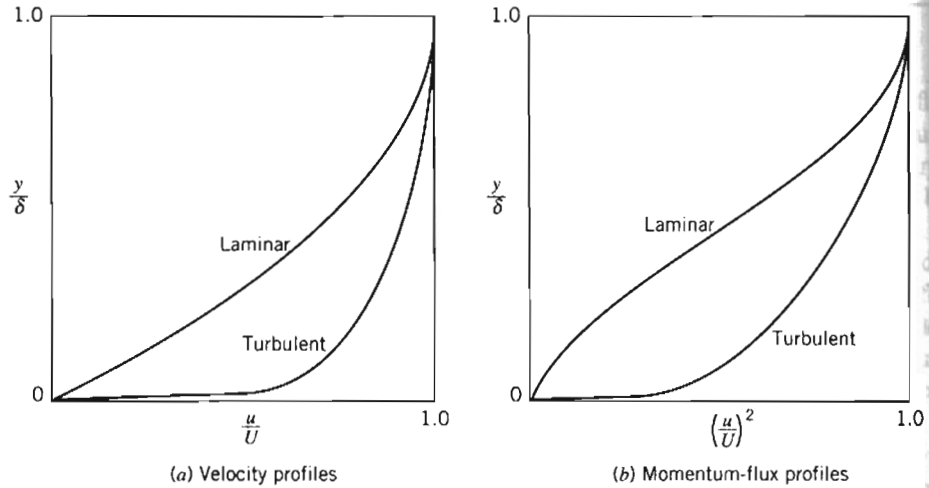


Fig. 9.7 Nondimensional profiles for flat plate boundary-layer flow.

$$\frac{\tau_w}{\rho} = \frac{d}{dx}(U^2\theta) + \delta^* U \frac{dU}{dx} \quad (9.17)$$

Expanding the first term, we can write

$$\frac{\tau_w}{\rho} = U^2 \frac{d\theta}{dx} + (\delta^* + 2\theta)U \frac{dU}{dx}$$

or

$$\frac{\tau_w}{\rho U^2} = \frac{C_f}{2} = \frac{d\theta}{dx} + (H + 2) \frac{\theta}{U} \frac{dU}{dx} \quad (9.28)$$

where  $H = \delta^*/\theta$  is a velocity-profile “shape factor.” The shape factor increases in an adverse pressure gradient. For turbulent boundary-layer flow,  $H$  increases from 1.3 for a zero pressure gradient to approximately 2.5 at separation. For laminar flow with zero pressure gradient,  $H = 2.6$ ; at separation  $H = 3.5$ .

The freestream velocity distribution,  $U(x)$ , must be known before Eq. 9.28 can be applied. Since  $dp/dx = -\rho U dU/dx$ , specifying  $U(x)$  is equivalent to specifying the pressure gradient. We can obtain a first approximation for  $U(x)$  from ideal flow theory for an inviscid flow under the same conditions. As pointed out in Chapter 6, for frictionless irrotational flow (potential flow), the stream function,  $\psi$ , and the velocity potential,  $\phi$ , satisfy Laplace’s equation. These can be used to determine  $U(x)$  over the body surface.

Much effort has been devoted to calculation of velocity distributions over bodies of known shape (the “direct” problem) and to the determination of body shapes to produce a desired pressure distribution (the “inverse” problem). Smith and co-workers [6] have developed calculation methods that use singularities distributed over the body surface to solve the direct problem for two-dimensional or axisymmetric body shapes. A type of finite-element method that uses singularities defined on discrete surface panels (the “panel” method [7]) recently has gained increased popularity for application to three-dimensional flows.

Once the velocity distribution,  $U(x)$ , is known, Eq. 9.28 can be integrated to determine  $\theta(x)$ , if  $H$  and  $C_f$  can be correlated with  $\theta$ . A detailed discussion of various calculation methods for flows with nonzero pressure gradient is beyond the scope of this book. Numerous solutions for laminar flows are given in [8]. Calculation methods for turbulent boundary-layer flow based on the momentum integral equation are reviewed in [9].

Because of the importance of turbulent boundary layers in engineering flow situations, the state of the art of calculation schemes is advancing rapidly. Numerous calculation schemes have been proposed [10, 11]; most such schemes for turbulent flow use models to predict turbulent shear stress and then solve the boundary-layer equations numerically [12, 13]. Continuing improvement in size and speed of computers is beginning to make possible the solution of the full Navier–Stokes equations using numerical methods [14, 15].

## PART B FLUID FLOW ABOUT IMMERSSED BODIES

Whenever there is relative motion between a solid body and the viscous fluid surrounding it, the body will experience a net force  $\vec{F}$ . The magnitude of this force depends on many factors—certainly the relative velocity  $\vec{V}$ , but also the body shape and size, and the fluid properties ( $\rho$ ,  $\mu$ , etc.). As the fluid flows around the body, it will generate surface stresses on each element of the surface, and it is these that lead to the net force. The surface stresses are composed of tangential stresses due to viscous action and normal stresses due to the local pressure. We might be tempted to think that we can analytically derive the net force by integrating these over the body surface. The first step might be: Given the shape of the body (and assuming that the Reynolds number is high enough that we can use inviscid flow theory), compute the pressure distribution. Then integrate the pressure over the body surface to obtain the contribution of pressure forces to the net force  $\vec{F}$ . (As we discussed in Chapter 6, this step was developed very early in the history of fluid mechanics; it led to the result that no bodies experience drag!) The second step might be: Use this pressure distribution to find the surface viscous stress  $\tau_w$  (at least in principle, using for example 1, Eq. 9.17). Then integrate the viscous stress over the body surface to obtain its contribution to the net force  $\vec{F}$ . This procedure sounds conceptually straightforward, but in practice is quite difficult except for the simplest body shapes. In addition, even if possible, it leads to erroneous results in most cases because it takes no account of a very important consequence of the existence of boundary layers—flow separation. This causes a wake, which not only creates a low-pressure region usually leading to large drag on the body, but also radically changes the overall flow field and hence the inviscid flow region and pressure distribution on the body.

For these reasons we must resort to experimental methods to determine the net force for most body shapes. Traditionally the net force  $\vec{F}$  is resolved into the drag force,  $F_D$ , defined as the component of the force parallel to the direction of motion, and the lift force,  $F_L$  (if it exists for a body), defined as the component of the force perpendicular to the direction of motion. In Sections 9-7 and 9-8 we will examine these forces for a number of different body shapes.

---

### 9-7 DRAG

Drag is the component of force on a body acting parallel to the direction of relative motion. In discussing the need for experimental results in fluid mechanics (Chapter 7), we considered the problem of determining the drag force,  $F_D$ , on a smooth sphere of diameter  $d$ , moving through a viscous, incompressible fluid with speed  $V$ ; the fluid density and viscosity were  $\rho$  and  $\mu$ , respectively. The drag force,  $F_D$ , was written in the functional form

$$F_D = f_1(d, V, \mu, \rho)$$

Application of the Buckingham Pi theorem resulted in two dimensionless  $\Pi$  parameters that were written in functional form as

$$\frac{F_D}{\rho V^2 d^2} = f_2\left(\frac{\rho V d}{\mu}\right)$$

Note that  $d^2$  is proportional to the cross-sectional area ( $A = \pi d^2/4$ ) and therefore we could write

$$\frac{F_D}{\rho V^2 A} = f_3\left(\frac{\rho V d}{\mu}\right) = f_3(Re) \quad (9.29)$$

Although Eq. 9.29 was obtained for a sphere, the form of the equation is valid for incompressible flow over *any* body; the characteristic length used in the Reynolds number depends on the body shape.

The *drag coefficient*,  $C_D$ , is defined as

$$C_D \equiv \frac{F_D}{\frac{1}{2} \rho V^2 A} \quad (9.30)$$

The number  $\frac{1}{2}$  has been inserted (as was done in the defining equation for the friction factor) to form the familiar dynamic pressure. Then Eq. 9.29 can be written as

$$C_D = f(Re) \quad (9.31)$$

We have not considered compressibility or free-surface effects in this discussion of the drag force. Had these been included, we would have obtained the functional form

$$C_D = f(Re, Fr, M)$$

At this point we shall consider the drag force on several bodies for which Eq. 9.31 is valid. The total drag force is the sum of friction drag and pressure drag. However, the drag coefficient is a function only of the Reynolds number.

We now consider the drag force and drag coefficient for a number of bodies, starting with the simplest: a flat plate parallel to the flow (which has only friction drag); a flat plate normal to the flow (which has only pressure drag); and cylinders and spheres (the simplest 2D and 3D bodies, which have both friction and pressure drag). We will also briefly discuss streamlining.

### Flow over a Flat Plate Parallel to the Flow: Friction Drag

This flow situation was considered in detail in Section 9-5. Since the pressure gradient is zero (and in any event the pressure forces are perpendicular to the plate and therefore do not contribute to drag), the total drag is equal to the friction drag. Thus

$$F_D = \int_{\text{plate surface}} \tau_w dA$$

and

$$C_D = \frac{F_D}{\frac{1}{2} \rho V^2 A} = \frac{\int_{PS} \tau_w dA}{\frac{1}{2} \rho V^2 A} \quad (9.32)$$

where  $A$  is the total surface area in contact with the fluid (i.e., the *wetted area*). The drag coefficient for a flat plate parallel to the flow depends on the shear stress distribution along the plate.

For laminar flow over a flat plate, the shear stress coefficient was given by

$$C_f = \frac{\tau_w}{\frac{1}{2} \rho U^2} = \frac{0.664}{\sqrt{Re_x}} \quad (9.15)$$

The drag coefficient for flow with freestream velocity  $V$ , over a flat plate of length  $L$  and width  $b$ , is obtained by substituting for  $\tau_w$  from Eq. 9.15 into Eq. 9.32. Thus

$$\begin{aligned} C_D &= \frac{1}{A} \int_A 0.664 Re_x^{-0.5} dA = \frac{1}{bL} \int_0^L 0.664 \left(\frac{V}{\nu}\right)^{-0.5} x^{-0.5} b dx \\ &= \frac{0.664}{L} \left(\frac{\nu}{V}\right)^{0.5} \left[ \frac{x^{0.5}}{0.5} \right]_0^L = 1.33 \left(\frac{\nu}{VL}\right)^{0.5} \\ C_D &= \frac{1.33}{\sqrt{Re_L}} \end{aligned} \quad (9.33)$$

Assuming the boundary layer is turbulent from the leading edge, the shear stress coefficient, based on the approximate analysis of Section 9-5, is given by

$$C_f = \frac{\tau_w}{\frac{1}{2} \rho U^2} = \frac{0.0594}{Re_x^{1/5}} \quad (9.27)$$

Substituting for  $\tau_w$  from Eq. 9.27 into Eq. 9.32, we obtain

$$\begin{aligned} C_D &= \frac{1}{A} \int_A 0.0594 Re_x^{-0.2} dA = \frac{1}{bL} \int_0^L 0.0594 \left(\frac{V}{\nu}\right)^{-0.2} x^{-0.2} b dx \\ &= \frac{0.0594}{L} \left(\frac{\nu}{V}\right)^{0.2} \left[ \frac{x^{0.8}}{0.8} \right]_0^L = 0.0742 \left(\frac{\nu}{VL}\right)^{0.2} \\ C_D &= \frac{0.0742}{Re_L^{1/5}} \end{aligned} \quad (9.34)$$

Equation 9.34 is valid for  $5 \times 10^5 < Re_L < 10^7$ .

For  $Re_L < 10^9$  the empirical equation given by Schlichting [3]

$$C_D = \frac{0.455}{(\log Re_L)^{2.58}} \quad (9.35)$$

fits experimental data very well.

For a boundary layer that is initially laminar and undergoes transition at some location on the plate, the turbulent drag coefficient must be adjusted to account for the laminar flow over the initial length. The adjustment is made by subtracting the quantity  $B/Re_L$  from the  $C_D$  determined for completely turbulent flow. The value of  $B$  depends on the Reynolds number at transition;  $B$  is given by

$$B = Re_{tr} (C_{D_{turbulent}} - C_{D_{laminar}}) \quad (9.36)$$

For a transition Reynolds number of  $5 \times 10^5$ , the drag coefficient may be calculated by making the adjustment to Eq. 9.34, in which case

$$C_D = \frac{0.0742}{Re_L^{1/5}} - \frac{1740}{Re_L} \quad (5 \times 10^5 < Re_L < 10^7) \quad (9.37a)$$

or to Eq. 9.35, in which case

$$C_D = \frac{0.455}{(\log Re_L)^{2.58}} - \frac{1610}{Re_L} \quad (5 \times 10^5 < Re_L < 10^9) \quad (9.37b)$$

The variation in drag coefficient for a flat plate parallel to the flow is shown in Fig. 9.8.

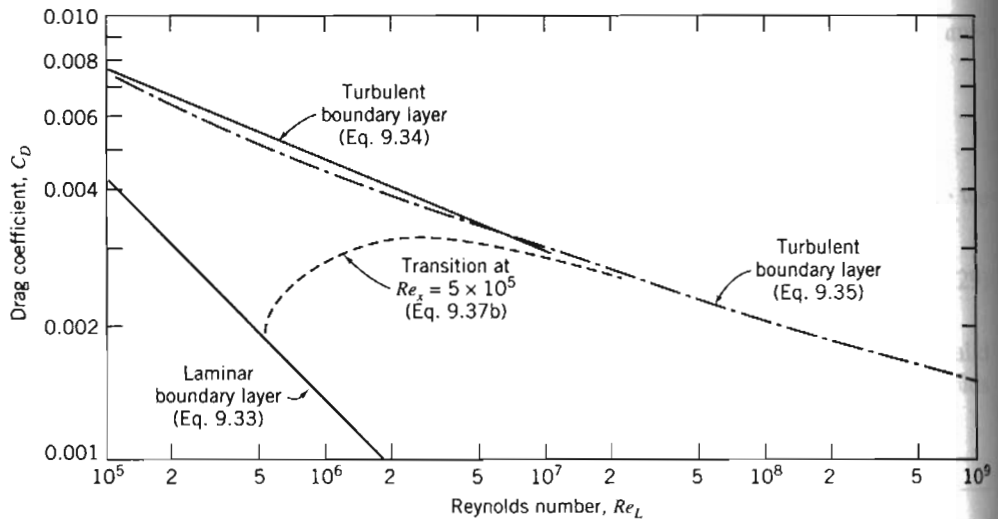


Fig. 9.8 Variation of drag coefficient with Reynolds number for a smooth flat plate parallel to the flow.

In the plot of Fig. 9.8, transition was assumed to occur at  $Re_x = 5 \times 10^5$  for flows in which the boundary layer was initially laminar. The actual Reynolds number at which transition occurs depends on a combination of factors, such as surface roughness and freestream disturbances. Transition tends to occur earlier (at lower Reynolds number) as surface roughness or freestream turbulence is increased. For transition at other than  $Re_x = 5 \times 10^5$ , the constant in the second term of Eqs. 9.37 is modified using Eq. 9.36. Figure 9.8 shows that the drag coefficient is less, for a given length of plate, when laminar flow is maintained over the longest possible distance. However, at large  $Re_L (> 10^7)$  the contribution of the laminar drag is negligible.

### EXAMPLE 9.5 Skin Friction Drag on a Supertanker

A supertanker is 360 m long and has a beam width of 70 m and a draft of 25 m. Estimate the force and power required to overcome skin friction drag at a cruising speed of 13 kt in seawater at 10°C.


#### EXAMPLE PROBLEM 9.5

**GIVEN:** Supertanker cruising at  $U = 13$  kt.

**FIND:** (a) Force.  
(b) Power required to overcome skin friction drag.

**SOLUTION:**

Model the tanker hull as a flat plate, of length  $L$  and width  $b = B + 2D$ , in contact with water. Estimate skin friction drag from the drag coefficient.

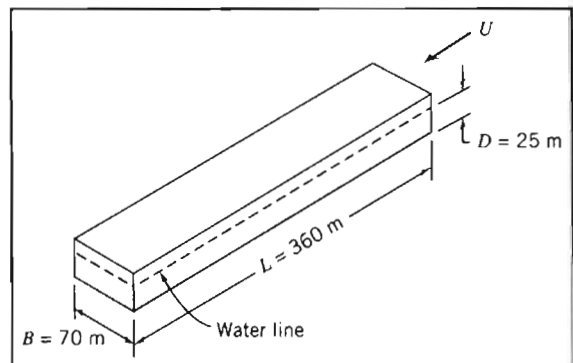

Governing equations:

$$C_D = \frac{F_D}{\frac{1}{2} \rho U^2 A} \quad (9.32)$$



$$C_D = \frac{0.455}{(\log Re_L)^{2.58}} - \frac{1610}{Re_L} \quad (9.37b)$$

The ship speed is 13 kt (nautical miles per hour), so

$$U = 13 \frac{\text{nm}}{\text{hr}} \times \frac{6076 \text{ ft}}{\text{nm}} \times \frac{0.305 \text{ m}}{\text{ft}} \times \frac{\text{hr}}{3600 \text{ s}} = 6.69 \text{ m/s}$$

From Appendix A, at 10°C,  $\nu = 1.37 \times 10^{-6} \text{ m}^2/\text{s}$  for seawater. Then

$$Re_L = \frac{UL}{\nu} = \frac{6.69 \text{ m}}{\text{s}} \times \frac{360 \text{ m}}{\text{s}} \times \frac{\text{s}}{1.37 \times 10^{-6} \text{ m}^2} = 1.76 \times 10^9$$

Assuming Eq. 9.37b is valid,

$$C_D = \frac{0.455}{(\log 1.76 \times 10^9)^{2.58}} - \frac{1610}{1.76 \times 10^9} = 0.00147$$

and from Eq. 9.32,

$$\begin{aligned} F_D &= C_D A \frac{1}{2} \rho U^2 \\ &= 0.00147 \times (360 \text{ m})(70 + 50) \text{ m} \times \frac{1}{2} \times 1020 \frac{\text{kg}}{\text{m}^3} \times \frac{(6.69)^2 \text{ m}^2}{\text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ F_D &= 1.45 \text{ MN} \end{aligned}$$

The corresponding power is

$$\begin{aligned} \mathcal{P} &= F_D U = 1.45 \times 10^6 \text{ N} \times 6.69 \frac{\text{m}}{\text{s}} \times \frac{\text{W} \cdot \text{s}}{\text{N} \cdot \text{m}} \\ \mathcal{P} &= 9.70 \text{ MW} \end{aligned}$$

This problem illustrates application of drag coefficient equations for a flat plate parallel to the flow.

- ✓ The power required (about 13,000 hp) is very large because although the friction stress is small, it acts over a substantial area.
- ✓ The boundary layer is turbulent for almost the entire length of the ship (transition occurs at  $x \approx 0.1 \text{ m}$ ).

### Flow over a Flat Plate Normal to the Flow: Pressure Drag

In flow over a flat plate normal to the flow (Fig. 9.9), the wall shear stress is perpendicular to the flow direction and therefore does not contribute to the drag force. The drag is given by

$$F_D = \int_{\text{surface}} p \, dA$$

For this geometry the flow separates from the edges of the plate; there is back-flow in the low energy wake of the plate. Although the pressure over the rear surface of the plate is essentially constant, its magnitude cannot be determined analytically. Consequently, we must resort to experiments to determine the drag force.

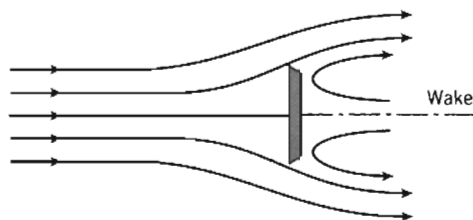


Fig. 9.9 Flow over a flat plate normal to the flow.

The drag coefficient for flow over an immersed object usually is based on the *frontal area* (or projected area) of the object. (For airfoils and wings, the *planform area* is used; see Section 9-8.)

The drag coefficient for a finite plate normal to the flow depends on the ratio of plate width to height and on the Reynolds number. For  $Re$  (based on height) greater than about 1000, the drag coefficient is essentially independent of Reynolds number. The variation of  $C_D$  with the ratio of plate width to height ( $b/h$ ) is shown in Fig. 9.10. (The ratio  $b/h$  is defined as the *aspect ratio* of the plate.) For  $b/h = 1.0$ , the drag coefficient is a minimum at  $C_D = 1.18$ ; this is just slightly higher than for a circular disk ( $C_D = 1.17$ ) at large Reynolds number.

The drag coefficient for all objects with sharp edges is essentially independent of Reynolds number (for  $Re \geq 1000$ ) because the separation points and therefore the size of the wake are fixed by the geometry of the object. Drag coefficients for selected objects are given in Table 9.3.

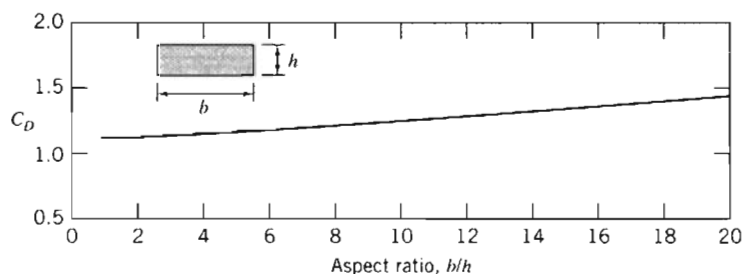


Fig. 9.10 Variation of drag coefficient with aspect ratio for a flat plate of finite width normal to the flow with  $Re_h > 1000$  [16].

### Flow over a Sphere and Cylinder: Friction and Pressure Drag

We have looked at two special flow cases in which either friction or pressure drag was the sole form of drag present. In the former case, the drag coefficient was a strong function of Reynolds number, while in the latter case,  $C_D$  was essentially independent of Reynolds number for  $Re \geq 1000$ .





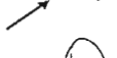
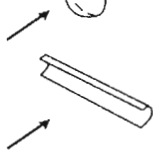
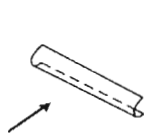
In the case of flow over a sphere, both friction drag and pressure drag contribute to total drag. The drag coefficient for flow over a smooth sphere is shown in Fig. 9.11 as a function of Reynolds number.<sup>2</sup>

At very low Reynolds number,<sup>3</sup>  $Re \leq 1$ , there is no flow separation from a sphere; the wake is laminar and the drag is predominantly friction drag. Stokes has

<sup>2</sup> An approximate curve fit to the data of Fig. 9.11 is presented in Problem 9.110.

<sup>3</sup> See the NCFMF video *The Fluid Dynamics of Drag* or [17] for a good discussion of drag on spheres and other shapes. Another excellent NCFMF video is *Low Reynolds Number Flows*. See also [18].

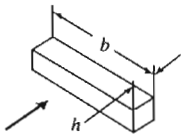
**Table 9.3** Drag Coefficient Data for Selected Objects ( $Re \geq 10^3$ )<sup>a</sup>

Object	Diagram		$C_D(Re \geq 10^3)$
Square prism		$b/h = \infty$	2.05
		$b/h = 1$	1.05
Disk			1.17
Ring			1.20 <sup>b</sup>
Hemisphere (open end facing flow)			1.42
Hemisphere (open end facing downstream)			0.38
C-section (open side facing flow)			2.30
C-section (open side facing downstream)			1.20

<sup>a</sup> Data from [16].<sup>b</sup> Based on ring area.

shown analytically, for very low Reynolds number flows where inertia forces may be neglected, that the drag force on a sphere of diameter  $d$ , moving at speed  $V$ , through a fluid of viscosity  $\mu$ , is given by

$$F_D = 3\pi\mu V d$$

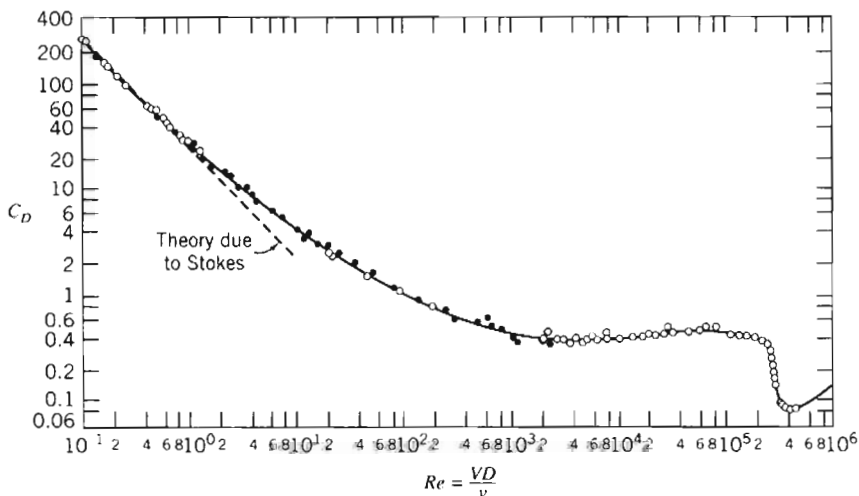**Fig. 9.11** Drag coefficient of a smooth sphere as a function of Reynolds number [3].


The drag coefficient,  $C_D$ , defined by Eq. 9.30, is then

$$C_D = \frac{24}{Re}$$

As shown in Fig. 9.11, this expression agrees with experimental values at low Reynolds number but begins to deviate significantly from the experimental data for  $Re > 1.0$ .

As the Reynolds number is further increased, the drag coefficient drops continuously up to a Reynolds number of about 1000, but not as rapidly as predicted by Stokes' theory. A turbulent wake (not incorporated in Stokes' theory) develops and grows at the rear of the sphere as the separation point moves from the rear of the sphere toward the front; this wake is at a relatively low pressure, leading to a large pressure drag. By the time  $Re \approx 1000$ , about 95% of total drag is due to pressure. For  $10^3 < Re < 3 \times 10^5$  the drag coefficient is approximately constant. In this range the entire rear of the sphere has a low-pressure turbulent wake, as indicated in Fig. 9.12, and most of the drag is caused by the front-rear pressure asymmetry. Note that  $C_D \propto 1/Re$  corresponds to  $F_D \propto V$ , and that  $C_D \sim \text{const.}$  corresponds to  $F_D \propto V^2$ , indicating a quite rapid increase in drag.

For Reynolds numbers larger than about  $3 \times 10^5$ , transition occurs and the boundary layer on the forward portion of the sphere becomes turbulent. The point of separation then moves downstream from the sphere midsection, and the size of the wake decreases. The net pressure force on the sphere is reduced (Fig. 9.12), and the drag coefficient decreases abruptly.

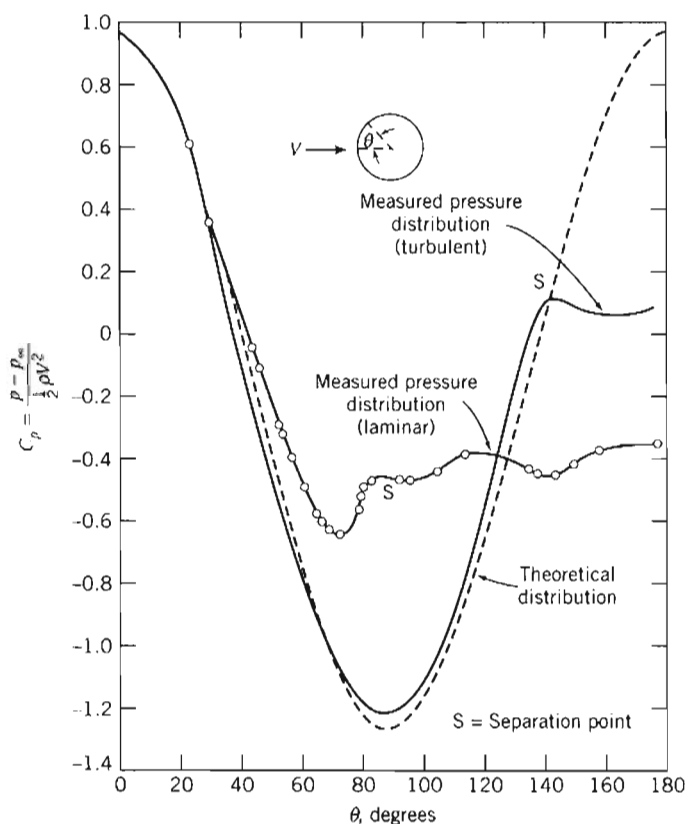

**Fig. 9.12** Pressure distribution around a smooth sphere for laminar and turbulent boundary-layer flow, compared with inviscid flow [18].

A turbulent boundary layer, since it has more momentum flux than a laminar boundary layer, can better resist an adverse pressure gradient, as discussed in Section 9-6. Consequently, turbulent boundary-layer flow is desirable on a blunt body because it delays separation and thus reduces the pressure drag.

Transition in the boundary layer is affected by roughness of the sphere surface and turbulence in the flow stream. Therefore, the reduction in drag associated with a turbulent boundary layer does not occur at a unique value of Reynolds number. Experiments with smooth spheres in a flow with low turbulence level show that transition may be delayed to a critical Reynolds number,  $Re_D$ , of about  $4 \times 10^5$ . For rough surfaces and/or highly turbulent freestream flow, transition can occur at a critical Reynolds number as low as 50,000.

The drag coefficient of a sphere with turbulent boundary-layer flow is about one-fifth that for laminar flow near the critical Reynolds number. The corresponding reduction in drag force can affect the range of a sphere (e.g., a golf ball) appreciably. The “dimples” on a golf ball are designed to “trip” the boundary layer and, thus, to guarantee turbulent boundary-layer flow and minimum drag. To illustrate this effect graphically, we obtained samples of golf balls without dimples some years ago. One of our students volunteered to hit drives with the smooth balls. In 50 tries with each type of ball, the average distance with the standard balls was 215 yards; the average with the smooth balls was only 125 yards!

Adding roughness elements to a sphere also can suppress local oscillations in location of the transition between laminar and turbulent flow in the boundary layer. These oscillations can lead to variations in drag and to random fluctuations in lift (see Section 9-8). In baseball, the “knuckle ball” pitch is intended to behave erratically to confuse the batter. By throwing the ball with almost no spin, the pitcher relies on the seams to cause transition in an unpredictable fashion as the ball moves on its way to the batter. This causes the desired variation in the flight path of the ball.

Figure 9.13 shows the drag coefficient for flow over a smooth cylinder. The variation of  $C_D$  with Reynolds number shows the same characteristics as observed in the flow over a smooth sphere, but the values of  $C_D$  are about twice as high.

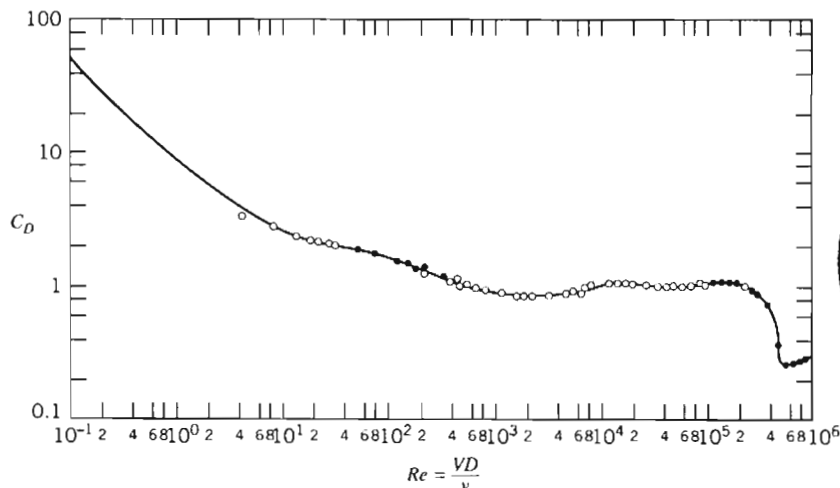


Fig. 9.13 Drag coefficient for a smooth circular cylinder as a function of Reynolds number [3].



Flow about a smooth circular cylinder may develop a regular pattern of alternating vortices downstream. The *vortex trail*<sup>4</sup> causes an oscillatory lift force on the cylinder perpendicular to the stream motion. Vortex shedding excites oscillations that cause telegraph wires to “sing” and ropes on flag poles to “slap” annoyingly. Sometimes structural oscillations can reach dangerous magnitudes and cause high stresses; they can be reduced or eliminated by applying roughness elements or fins—either axial or helical (sometimes seen on chimneys or automobile antennas)—that destroy the symmetry of the cylinder and stabilize the flow.

Experimental data show that regular vortex shedding occurs most strongly in the range of Reynolds number from about 60 to 5000. For  $Re > 1000$  the dimensionless frequency of vortex shedding, expressed as a Strouhal number,  $St = fD/V$ , is approximately equal to 0.21 [3].

Roughness affects drag of cylinders and spheres similarly: the critical Reynolds number is reduced by the rough surface, and transition from laminar to turbulent flow in the boundary layers occurs earlier. The drag coefficient is reduced by a factor of about 4 when the boundary layer on the cylinder becomes turbulent.

### EXAMPLE 9.6 Aerodynamic Drag and Moment on a Chimney

A cylindrical chimney 1 m in diameter and 25 m tall is exposed to a uniform 50 km/hr wind at standard atmospheric conditions. End effects and gusts may be neglected. Estimate the bending moment at the base of the chimney due to wind forces.

#### EXAMPLE PROBLEM 9.6

**GIVEN:** Cylindrical chimney,  $D = 1$  m,  $L = 25$  m, in uniform flow with  
 $V = 50$  km/hr     $p = 101$  kPa (abs)     $T = 15^\circ\text{C}$   
 Neglect end effects.

**FIND:** Bending moment at bottom of chimney.

**SOLUTION:**

The drag coefficient is given by  $C_D = \frac{F_D}{\frac{1}{2}\rho V^2 A}$ , and thus  $F_D = C_D A \frac{1}{2}\rho V^2$ .


Since the force per unit length is uniform over the entire length, the resultant force,  $F_D$ , will act at the midpoint of the chimney. Hence the moment about the chimney base is

$$M_0 = F_D \frac{L}{2} = C_D A \frac{1}{2}\rho V^2 \frac{L}{2} = C_D A \frac{L}{4}\rho V^2$$

$$V = \frac{50 \text{ km}}{\text{hr}} \times \frac{10^3 \text{ m}}{\text{km}} \times \frac{\text{hr}}{3600 \text{ s}} = 13.9 \text{ m/s}$$

For air at standard conditions,  $\rho = 1.23 \text{ kg/m}^3$ , and  $\mu = 1.79 \times 10^{-5} \text{ kg/(m}\cdot\text{s)}$ . Thus

$$Re = \frac{\rho V D}{\mu} = \frac{1.23 \text{ kg}}{\text{m}^3} \times \frac{13.9 \text{ m}}{\text{s}} \times \frac{1 \text{ m}}{1.79 \times 10^{-5} \text{ kg}} = 9.55 \times 10^5$$

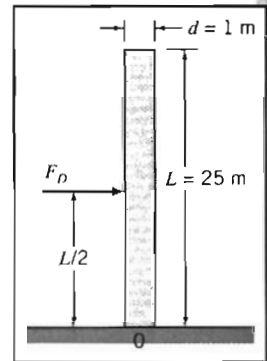

<sup>4</sup> The regular pattern of vortices in the wake of a cylinder sometimes is called a *Karman vortex street* in honor of the prominent fluid mechanician, Theodore von Kármán, who was first to predict the stable spacing of the vortex trail on theoretical grounds in 1911; see [19].

From Fig. 9.13,  $C_D \approx 0.35$ . For a cylinder,  $A = DL$ , so

$$\begin{aligned} M_0 &= C_D A \frac{L}{4} \rho V^2 = C_D DL \frac{L}{4} \rho V^2 = C_D D \frac{L^2}{4} \rho V^2 \\ &= \frac{1}{4} \times 0.35 \times 1 \text{ m} \times (25)^2 \text{ m}^2 \times 1.23 \frac{\text{kg}}{\text{m}^3} \times (13.9)^2 \frac{\text{m}^2}{\text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ M_0 &= 13.0 \text{ kN} \cdot \text{m} \end{aligned}$$

This problem illustrates application of drag-coefficient data to calculate the force and moment on a structure. We modeled the wind as a uniform flow; more realistically, the lower atmosphere is often modeled as a huge turbulent boundary layer, with a power-law velocity profile,  $u \sim y^{1/n}$  ( $y$  is the elevation). See Problem 9.116, where this is analyzed for the case  $n = 7$ .

### EXAMPLE 9.7 Deceleration of an Automobile by a Drag Parachute

A dragster weighing 1600 lbf attains a speed of 270 mph in the quarter mile. Immediately after passing through the timing lights, the driver opens the drag chute, of area  $A = 25 \text{ ft}^2$ . Air and rolling resistance of the car may be neglected. Find the time required for the machine to decelerate to 100 mph in standard air.


### EXAMPLE PROBLEM 9.7

**GIVEN:** Dragster weighing 1600 lbf, moving with initial speed  $V_0 = 270 \text{ mph}$ , is slowed by the drag force on a chute of area  $A = 25 \text{ ft}^2$ . Neglect air and rolling resistance of the car. Assume standard air.

**FIND:** Time required for the machine to decelerate to 100 mph.

#### SOLUTION:

Taking the car as a system and writing Newton's second law in the direction of motion gives
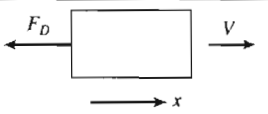
$$-F_D = ma = m \frac{dV}{dt}$$


$$\begin{aligned} V_0 &= 270 \text{ mph} \\ V_f &= 100 \text{ mph} \\ \rho &= 0.00238 \text{ slug/ft}^3 \end{aligned}$$

Since  $C_D = \frac{F_D}{\frac{1}{2} \rho V^2 A}$ , then  $F_D = \frac{1}{2} C_D \rho V^2 A$ .

Substituting into Newton's second law gives

$$-\frac{1}{2} C_D \rho V^2 A = m \frac{dV}{dt}$$

Separating variables and integrating, we obtain

$$\begin{aligned} -\frac{1}{2} C_D \rho \frac{A}{m} \int_0^t dt &= \int_{V_0}^{V_f} \frac{dV}{V^2} \\ -\frac{1}{2} C_D \rho \frac{A}{m} t &= -\frac{1}{V} \Big|_{V_0}^{V_f} = -\frac{1}{V_f} + \frac{1}{V_0} = -\frac{(V_0 - V_f)}{V_f V_0} \end{aligned}$$

Finally,

$$t = \frac{(V_0 - V_f)}{V_f V_0} \frac{2m}{C_D \rho A} = \frac{(V_0 - V_f)}{V_f V_0} \frac{2W}{C_D \rho A g}$$

Model the drag chute as a hemisphere (with open end facing flow). From Table 9.3,  $C_D = 1.42$  (assuming  $Re > 10^3$ ). Then, substituting numerical values,

$$t = (270 - 100) \text{ mph} \times 2 \times 1600 \text{ lbf} \times \frac{1}{100 \text{ mph}} \times \frac{\text{hr}}{270 \text{ mi}} \times \frac{1}{1.2} \times \frac{\text{ft}^3}{0.00238 \text{ slug}}$$

$$\times \frac{1}{25 \text{ ft}^2} \times \frac{\text{s}^2}{32.2 \text{ ft}} \times \frac{\text{slug} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2} \times \frac{\text{mi}}{5280 \text{ ft}} \times \frac{3600 \text{ s}}{\text{hr}}$$

$$t = 5.05 \text{ s}$$

Check the assumption on  $Re$ :

$$Re = \frac{DV}{\nu} = \left[ \frac{4A}{\pi} \right]^{1/2} \frac{V}{\nu}$$

$$= \left[ \frac{4}{\pi} \times 25 \text{ ft}^2 \right]^{1/2} \times 100 \frac{\text{mi}}{\text{hr}} \times \frac{\text{hr}}{3600 \text{ s}} \times \frac{5280 \text{ ft}}{\text{mi}} \times \frac{\text{s}}{1.57 \times 10^{-4} \text{ ft}^2}$$

$$Re = 5.27 \times 10^6$$

Hence the assumption is valid.

This problem illustrates application of drag-coefficient data to calculate the drag on a vehicle parachute.



The *Excel* workbook for this Example Problem plots the dragster velocity (and distance traveled) as a function of time; it also allows “what-ifs”, e.g., we can find the parachute area  $A$  required to slow the dragster to 60 mph in 5 sec.

All experimental data presented in this section are for single objects immersed in an unbounded fluid stream. The objective of wind tunnel tests is to simulate the conditions of an unbounded flow. Limitations on equipment size make this goal unreachably in practice. Frequently it is necessary to apply corrections to measured data to obtain results applicable to unbounded flow conditions.

In numerous realistic flow situations, interactions occur with nearby objects or surfaces. Drag can be reduced significantly when two or more objects, moving in tandem, interact. This phenomenon is well known to bicycle riders and those interested in automobile racing, where “drafting” is a common practice. Drag reductions of 80 percent may be achieved with optimum spacing [20]. Drag also can be increased significantly when spacing is not optimum.

Drag can be affected by neighbors alongside as well. Small particles falling under gravity travel more slowly when they have neighbors than when they are isolated. This phenomenon, which is illustrated in the NCFMF video *Low Reynolds Number Flows*, has important applications to mixing and sedimentation processes.



Experimental data for drag coefficients on objects must be selected and applied carefully. Due regard must be given to the differences between the actual conditions and the more controlled conditions under which measurements were made.

## Streamlining

The extent of the separated flow region behind many of the objects discussed in the previous section can be reduced or eliminated by streamlining, or fairing, the body shape. We have seen that due to the convergent body shape at the rear of any object (after all, every object is of finite length!), the streamlines will diverge, so that the velocity will decrease, and therefore, more importantly (as shown by the Bernoulli equation, applicable in the freestream region) the pressure will increase. Hence, we initially have an adverse pressure gradient at the rear of the body, leading to boundary layer separation and ultimately to a low-pressure wake leading to large pressure drag. Streamlining is the attempt to reduce the drag on a body. We can reduce the drag on a body by making the rear of the body more tapered (e.g., we can reduce the drag on a sphere by making it “teardrop” shaped), which will reduce the adverse pressure gradient and hence make the turbulent wake smaller. However, as we do so, we are in danger of increasing the skin friction drag simply because we have increased the surface area. In practice, there is an optimum amount of fairing or tapering at which the total drag (the sum of pressure and skin friction drag) is minimized. These effects are discussed at length in the NCFMF video series *The Fluid Dynamics of Drag*.

The pressure gradient around a “teardrop” shape (a “streamlined” cylinder) is less severe than that around a cylinder of circular section. The trade-off between pressure and friction drag for this case is illustrated by the results presented in Fig. 9.14, for tests at  $Re_c = 4 \times 10^5$ . (This Reynolds number is typical of that for a strut on an early aircraft.) From the figure, the minimum drag coefficient is  $C_D \approx 0.06$ , which occurs when the ratio of thickness to chord is  $t/c \approx 0.25$ . This value is approximately 20 percent of the minimum drag coefficient for a circular cylinder of the same thickness! Hence, even a small aircraft will typically have fairings on many structural members, e.g., the struts that make up the landing wheel assembly, leading to significant fuel savings.

The maximum thickness for the shapes shown in Fig. 9.14 is located approximately 25 percent of the chord distance from the leading edge. Most of the drag on


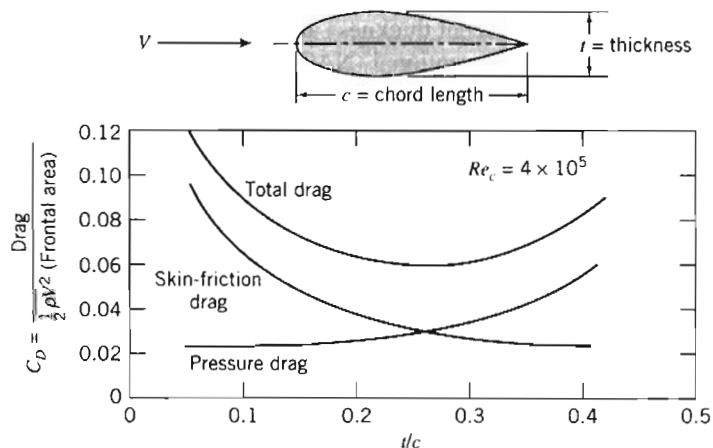


Fig. 9.14 Drag coefficient on a streamlined strut as a function of thickness ratio, showing contributions of skin friction and pressure to total drag [19].

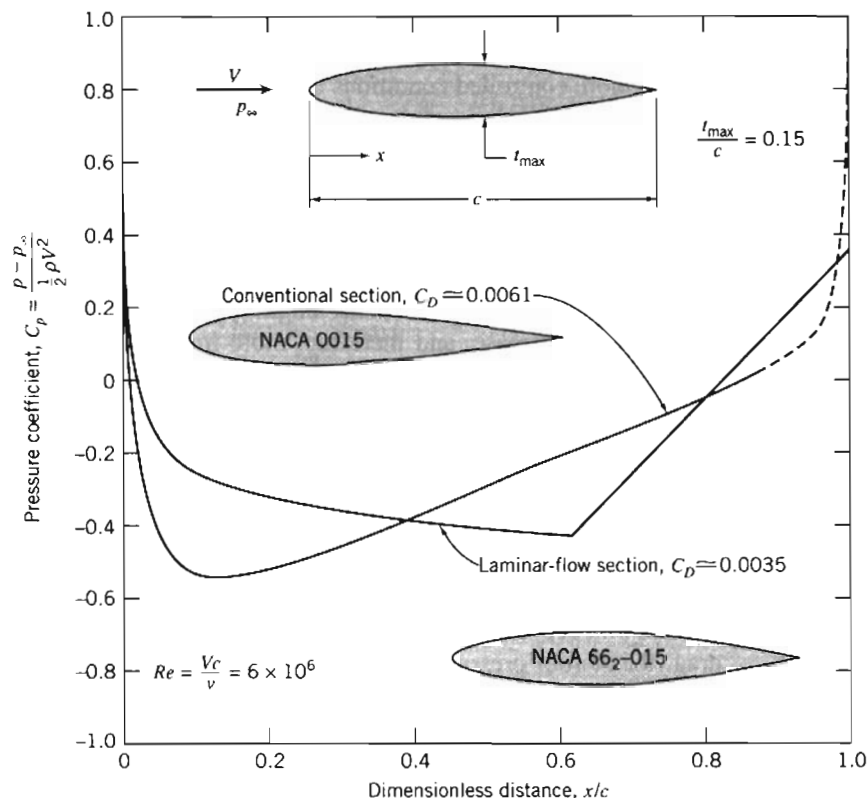

**Fig. 9.15** Theoretical pressure distributions at zero angle of attack for two symmetric airfoil sections of 15 percent thickness ratio. (Data from [21].)

the thinner sections is due to skin friction in the turbulent boundary layers on the tapered rear sections. Interest in low-drag airfoils increased during the 1930s. The National Advisory Committee for Aeronautics (NACA) developed several series of “laminar-flow” airfoils for which transition was postponed to 60 or 65 percent chord length aft from the airfoil nose.

Pressure distribution and drag coefficients<sup>5</sup> for two symmetric airfoils of infinite span and 15 percent thickness at zero angle of attack are presented in Fig. 9.15. Transition on the conventional (NACA 0015) airfoil takes place where the pressure gradient becomes adverse, at  $x/c = 0.13$ , near the point of maximum thickness. Thus most of the airfoil surface is covered with a turbulent boundary layer; the drag coefficient is  $C_D \approx 0.0061$ . The point of maximum thickness has been moved aft on the airfoil (NACA 66<sub>2</sub>-015) designed for laminar flow. The boundary layer is maintained in the laminar regime by the favorable pressure gradient to  $x/c = 0.63$ . Thus the bulk of the flow is laminar;  $C_D \approx 0.0035$  for this section, based on planform area. The drag coefficient based on frontal area is  $C_{D_f} = C_D/0.15 = 0.0233$ , or about 40 percent of the optimum for the shapes shown in Fig. 9.14.

Tests in special wind tunnels have shown that laminar flow can be maintained up to length Reynolds numbers as high as 30 million by appropriate profile shaping.

<sup>5</sup> Note that drag coefficients for airfoils are based on the planform area, i.e.,  $C_D = F_D / \frac{1}{2} \rho V^2 A_p$ , where  $A_p$  is the maximum projected wing area.

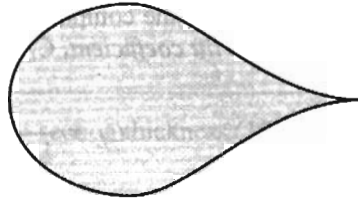


Fig. 9.16 Nearly optimum shape for low-drag strut [24].

Because they have favorable drag characteristics, laminar-flow airfoils are used in the design of most modern subsonic aircraft.

Recent advances have made possible development of low-drag shapes even better than the NACA 60-series shapes. Experiments [21] led to the development of a pressure distribution that prevented separation while maintaining the turbulent boundary layer in a condition that produces negligible skin friction. Improved methods for calculating body shapes that produced a desired pressure distribution [23, 24] led to development of nearly optimum shapes for thick struts with low drag. Figure 9.16 shows an example of the results.

Reduction of aerodynamic drag also is important for road vehicle applications. Interest in fuel economy has provided significant incentive to balance efficient aerodynamic performance with attractive design for automobiles. Drag reduction also has become important for buses and trucks.

Practical considerations limit the overall length of road vehicles. Fully streamlined tails are impractical for all but land-speed-record cars. Consequently, it is not possible to achieve results comparable to those for optimum airfoil shapes. However, it is possible to optimize both front and rear contours within given constraints on overall length [25–27].

Much attention has been focused on front contours. Studies on buses have shown that drag reductions up to 25 percent are possible with careful attention to front contour [27]. Thus it is possible to reduce the drag coefficient of a bus from about 0.65 to less than 0.5 with practical designs. Highway tractor-trailer rigs have higher drag coefficients— $C_D$  values from 0.90 to 1.1 have been reported. Commercially available add-on devices offer improvements in drag of up to 15 percent, particularly for windy conditions where yaw angles are nonzero. The typical fuel saving is half the percentage by which aerodynamic drag is reduced.

Front contours and details are important for automobiles. A low nose and smoothly rounded contours are the primary features that promote low drag. Radii of “A-pillar” and windshield header, and blending of accessories to reduce parasite and interference drag have received increased attention. As a result, drag coefficients have been reduced from about 0.55 to 0.30 or less for recent production vehicles. Recent advances in computational methods have led to development of computer-generated optimum shapes. A number of designs have been proposed, with claims of  $C_D$  values below 0.2 for vehicles complete with running gear.

## 9-8 LIFT

For most objects in relative motion in a fluid, the most significant fluid force is the drag. However, there are some objects, such as airfoils, for which the lift is

significant.<sup>6</sup> Lift is defined as the component of fluid force perpendicular to the fluid motion. For an airfoil, the *lift coefficient*,  $C_L$ , is defined as

$$C_L \equiv \frac{F_L}{\frac{1}{2} \rho V^2 A_p} \quad (9.38)$$

It is worth noting that the lift coefficient defined above and the drag coefficient (Eq. 9.30) are each defined as the ratio of an actual force (lift or drag) divided by the product of dynamic pressure and area. This denominator can be viewed as the force that would be generated if we imagined bringing to rest the fluid directly approaching the area (recall that the dynamic pressure is the difference between total and static pressures). This gives us a “feel” for the meaning of the coefficients: They indicate the ratio of the actual force to this (unrealistic but nevertheless intuitively meaningful) force. We note also that the coefficient definitions include  $V^2$  in the denominator, so that  $F_L$  (or  $F_D$ ) being proportional to  $V^2$  corresponds to a constant  $C_L$  (or  $C_D$ ), and that  $F_L$  (or  $F_D$ ) increasing with  $V$  at a lower rate than quadratic corresponds to a decrease in  $C_L$  (or  $C_D$ ) with  $V$ .

The lift and drag coefficients for an airfoil are functions of both Reynolds number and angle of attack; the angle of attack,  $\alpha$ , is the angle between the airfoil chord and the freestream velocity vector. The *chord* of an airfoil is the straight line joining the leading edge and the trailing edge. The wing section shape is obtained by combining a *mean line* and a thickness distribution (see [21] for details). When the airfoil has a symmetric section, the mean line and the chord line both are straight lines, and they coincide. An airfoil with a curved mean line is said to be *cambered*.

The area at right angles to the flow changes with angle of attack. Consequently, the planform area,  $A_p$  (the maximum projected area of the wing), is used to define lift and drag coefficients for an airfoil.



The phenomenon of aerodynamic lift is commonly explained by the velocity increase causing pressure to decrease (the Bernoulli effect) over the top surface of the airfoil and the velocity decrease (causing pressure to increase) along the bottom surface of the airfoil. The resulting pressure distributions are shown clearly in the video *Boundary Layer Control*. Because of the pressure differences relative to atmosphere, the upper surface of the airfoil may be called the *suction surface* and the lower surface the *pressure surface*.

As shown in Example Problem 6.12, lift on a body can also be related to the circulation around the profile: In order for lift to be generated, there must be a net circulation around the profile. One may imagine the circulation to be caused by a vortex “bound” within the profile.

Advances continue in computational methods and computer hardware. However, most airfoil data available in the literature were obtained from wind tunnel tests. Reference 21 contains results from a large number of tests conducted by NACA (the National Advisory Committee for Aeronautics—the predecessor to NASA). Data for some representative NACA profile shapes are described in the next few paragraphs.

Lift and drag coefficient data for typical conventional and laminar-flow profiles are plotted in Fig. 9.17 for a Reynolds number of  $9 \times 10^6$  based on chord length. The section shapes in Fig. 9.17 are designated as follows:

<sup>6</sup> Flow over an airfoil is shown in the NCFMF video *Boundary Layer Control*.

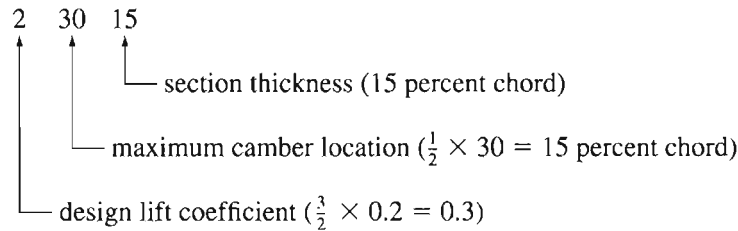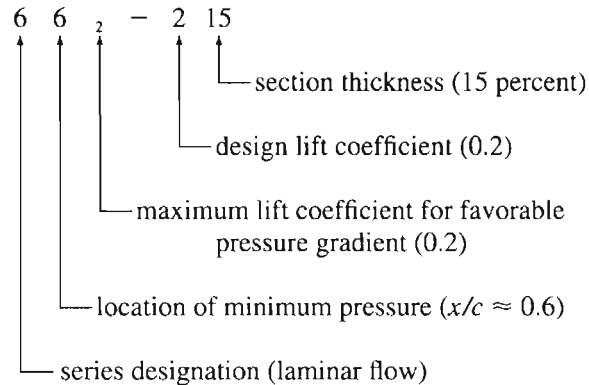*Conventional*—23015*Laminar Flow*—66<sub>2</sub> - 215



Both sections are cambered to give lift at zero angle of attack. As the angle of attack is increased, the  $\Delta p$  between the upper and lower surfaces increases, causing the lift coefficient to increase smoothly until a maximum is reached. Further increases in angle of attack produce a sudden decrease in  $C_L$ . The airfoil is said to have *stalled* when  $C_L$  drops in this fashion.

Airfoil stall results when flow separation occurs over a major portion of the upper surface of the airfoil. As the angle of attack is increased, the stagnation point moves back along the lower surface of the airfoil, as shown schematically for the symmetric laminar-flow section in Fig. 9.18a. Flow on the upper surface then must accelerate sharply to round the nose of the airfoil.<sup>7</sup> The effect of angle of attack on the theoretical upper-surface pressure distribution is shown in Fig. 9.18b. The minimum pressure becomes lower, and its location moves forward on the upper surface. A severe adverse pressure gradient appears following the point of minimum pressure; finally, the adverse pressure gradient causes the flow to separate completely from the upper surface and the airfoil stalls.

Movement of the minimum pressure point and accentuation of the adverse pressure gradient are responsible for the sudden increase in  $C_D$  for the laminar-flow section, which is apparent in Fig. 9.17. The sudden rise in  $C_D$  is caused by early transition from laminar to turbulent boundary-layer flow on the upper surface. Aircraft with laminar-flow sections are designed to cruise in the low-drag region.

Because laminar-flow sections have very sharp leading edges, all of the effects we have described are exaggerated, and they stall at lower angles of attack than conventional sections, as shown in Fig. 9.17. The maximum possible lift coefficient,  $C_{L_{\max}}$ , also is less for laminar-flow sections.

<sup>7</sup> Flow patterns and pressure distributions for airfoil sections are shown in the NCFMF video *Boundary Layer Control*.

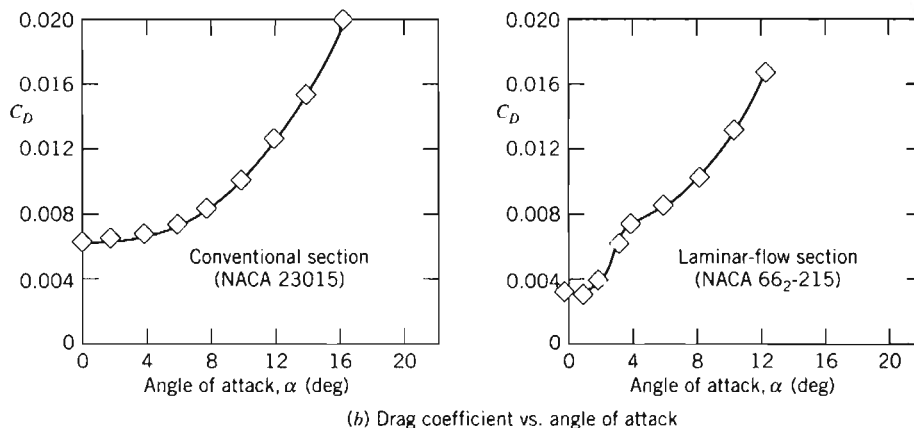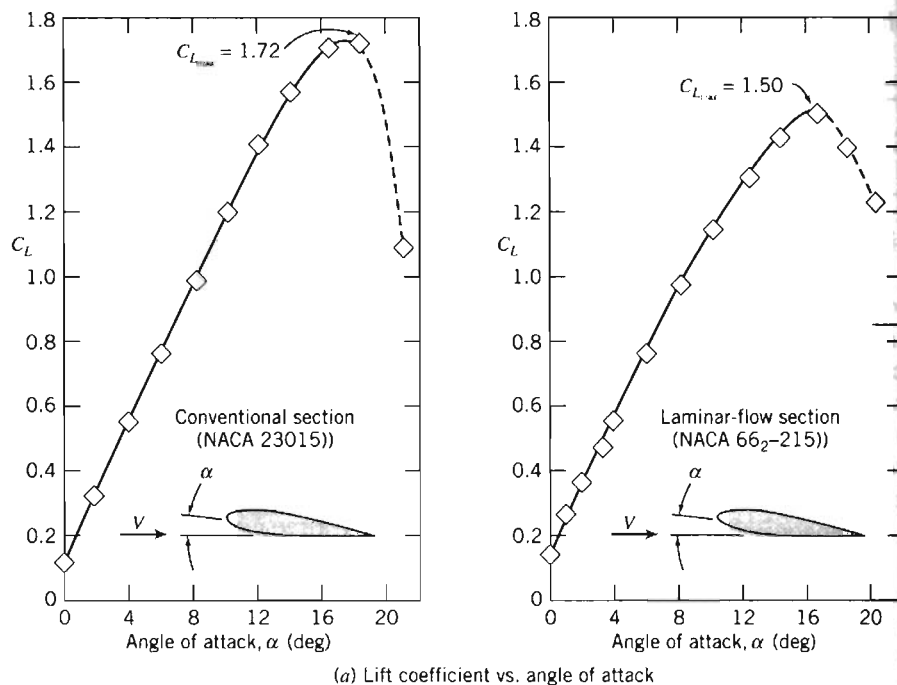

**Fig. 9.17** Lift and drag coefficients versus angle of attack for two airfoil sections of 15 percent thickness ratio at  $Re_c = 9 \times 10^6$ . (Data from [21].)

Plots of  $C_L$  versus  $C_D$  (called lift-drag polars) often are used to present airfoil data in compact form. A polar plot is given in Fig. 9.19 for the two sections we have discussed. The lift/drag ratio,  $C_L/C_D$ , is shown at the design lift coefficient for both sections. This ratio is very important in the design of aircraft: The lift coefficient determines the lift of the wing and hence the load that can be carried, and the drag coefficient indicates a large part (in addition to that caused by the fuselage, etc.) of the drag the airplane engines have to work against in order to generate the needed lift; hence, in general, a high  $C_L/C_D$  is the goal, at which the laminar airfoil clearly excels.

Recent improvements in modeling and computational capabilities have made it possible to design airfoil sections that develop high lift while maintaining very low

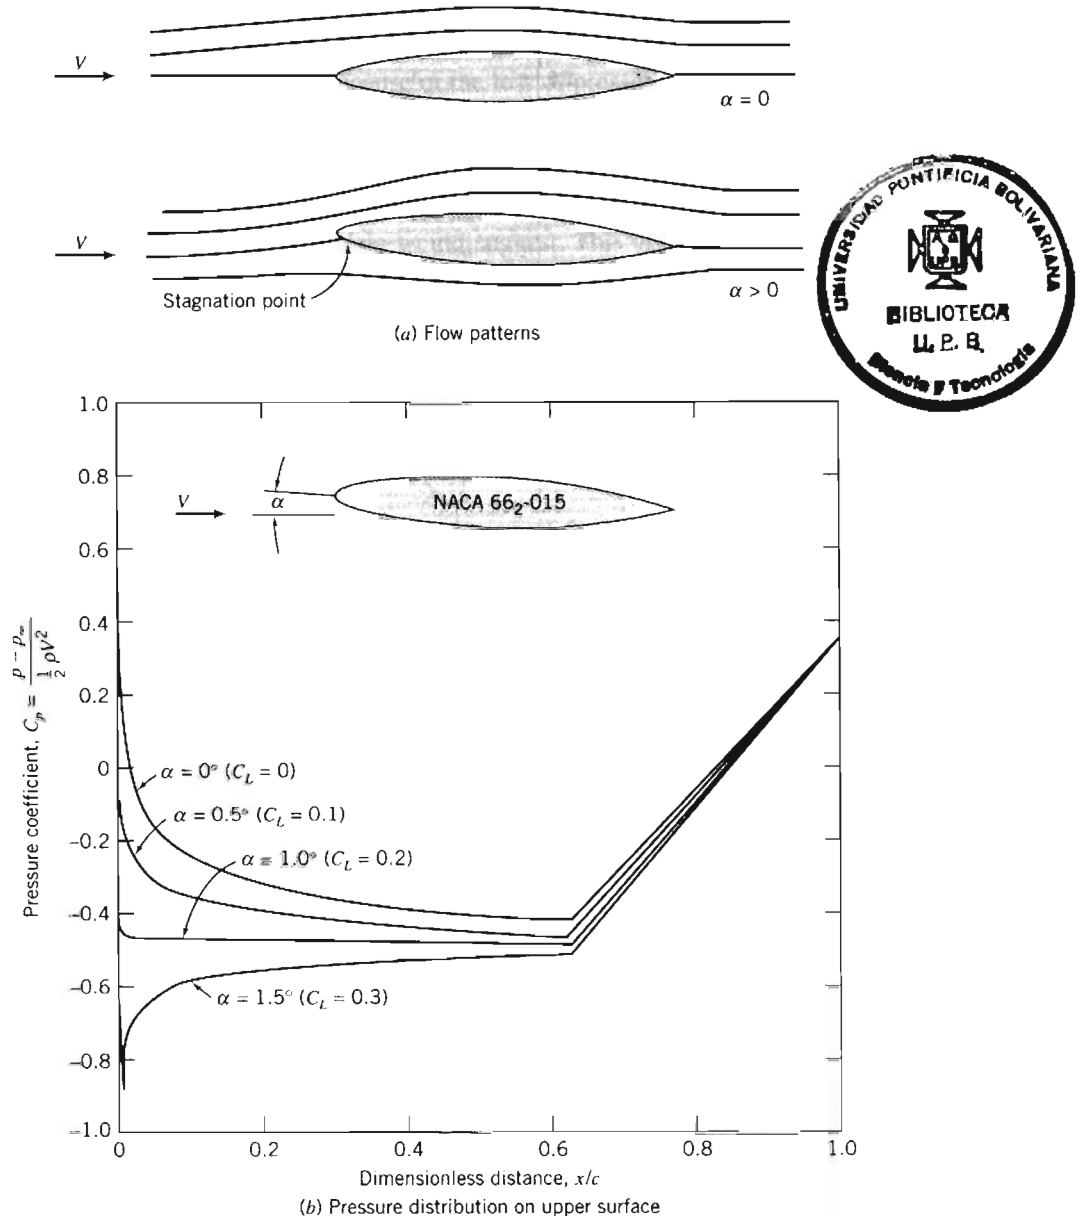


Fig. 9.18 Effect of angle of attack on flow pattern and theoretical pressure distribution for a symmetric laminar-flow airfoil of 15 percent thickness ratio. (Data from [21].)

drag [23, 24]. Boundary-layer calculation codes are used with inverse methods for calculating potential flow to develop pressure distributions and the resulting body shapes that postpone transition to the most rearward location possible. The turbulent boundary layer following transition is maintained in a state of incipient separation with nearly zero skin friction by appropriate shaping of the pressure distribution.

Such computer-designed airfoils have been used on racing cars to develop very high negative lift (downforce) to improve high-speed stability and cornering performance [23]. Airfoil sections especially designed for operation at low Reynolds number were used for the wings and propeller on the Kremer prize-winning man-powered

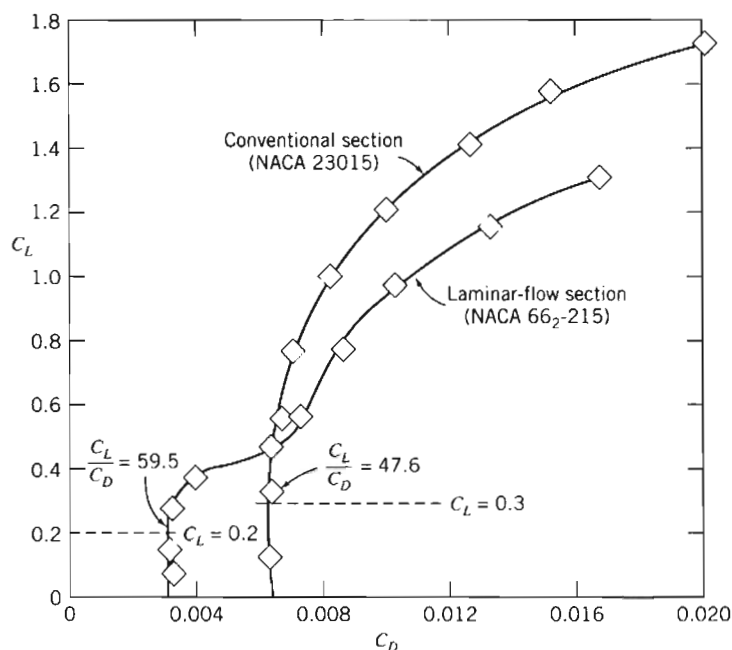


Fig. 9.19 Lift-drag polars for two airfoil sections of 15 percent thickness ratio. (Data from [21].)

“Gossamer Condor” [28], which now hangs in the National Air and Space Museum in Washington, D.C.

All real airfoils—*wings*—are of finite span and have less lift and more drag than their airfoil section data would indicate. There are several ways to explain this. If we consider the pressure distribution near the end of the wing, the low pressure on the upper and high pressure on the lower surface cause flow to occur around the wing tip, leading to *trailing vortices* (as shown in Fig. 9.20), and the pressure difference is reduced, leading to less lift. These trailing vortices can also be explained more abstractly, in terms of circulation: We learned in Section 6-6 that circulation around a wing section is present whenever we have lift, and that the circulation is solenoidal—that is, it cannot end in the fluid; hence, the circulation extends beyond the wing in the form of trailing vortices. Trailing vortices can be very strong and persistent, possibly

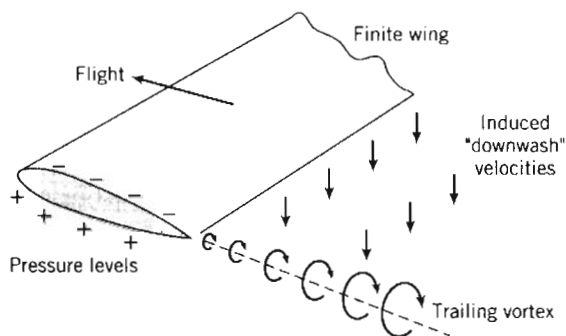


Fig. 9.20 Schematic representation of the trailing vortex system of a finite wing.



being a hazard to other aircraft for 5 to 10 miles behind a large airplane—air speeds of greater than 200 mph have been measured.<sup>8</sup>

Trailing vortices reduce lift because of the loss of pressure difference, as we just mentioned. This reduction and an increase in drag (called *induced drag*) can also be explained in the following way: The “downwash” velocities induced by the vortices mean that the effective angle of attack is reduced—the wing “sees” a flow at approximately the mean of the upstream and downstream directions—explaining why the wing has less lift than its section data would suggest. This also causes the lift force (which is perpendicular to the effective angle of attack) to “lean backwards” a little, resulting in some of the lift appearing as drag.

Loss of lift and increase in drag caused by finite-span effects are concentrated near the tip of the wing; hence, it is clear that a short, stubby wing will experience these effects more severely than a very long wing. We should therefore expect the effects to correlate with the wing *aspect ratio*, defined as

$$ar \equiv \frac{b^2}{A_p} \quad (9.39)$$

where  $A_p$  is planform area and  $b$  is wingspan. For a rectangular planform of wingspan  $b$  and chord length  $c$ ,

$$ar = \frac{b^2}{A_p} = \frac{b^2}{bc} = \frac{b}{c}$$

The maximum lift/drag ratio ( $L/D = C_L/C_D$ ) for a modern low-drag section may be as high as 400 for infinite aspect ratio. A high-performance sailplane (glider) with  $ar = 40$  might have  $L/D = 40$ , and a typical light plane ( $ar \approx 12$ ) might have  $L/D \approx 20$  or so. Two examples of rather poor shapes are lifting bodies used for reentry from the upper atmosphere, and water skis, which are *hydrofoils* of low aspect ratio. For both of these shapes,  $L/D$  typically is less than unity.

Variations in aspect ratio are seen in nature. Soaring birds, such as the albatross or California condor, have thin wings of long span. Birds that must maneuver quickly to catch their prey, such as owls, have wings of relatively short span, but large area, which gives low *wing loading* (ratio of weight to planform area) and thus high maneuverability.

It makes sense that as we try to generate more lift from a finite wing (by, for example, increasing the angle of attack), the trailing vortices and therefore the downwash increase; we also learned that the downwash causes the effective angle of attack to be less than that of the corresponding airfoil section (i.e., when  $ar = \infty$ ), ultimately leading to loss of lift and to induced drag. Hence, we conclude that the effects of the finite aspect ratio can be characterized as a reduction  $\Delta\alpha$  in the effective angle of attack, and that this (which is usually undesirable) becomes worse as we generate more lift (i.e., as the lift coefficient  $C_L$  increases) and as the aspect ratio  $ar$  is made smaller. Theory and experiment indicate that

$$\Delta\alpha \approx \frac{C_L}{\pi ar} \quad (9.40)$$

Compared with an airfoil section ( $ar = \infty$ ), the geometric angle of attack of a wing (finite  $ar$ ) must be increased by this amount to get the same lift, as shown in

<sup>8</sup> Sforza, P. M., “Aircraft Vortices: Benign or Baleful?” *Space/Aeronautics*, 53, 4, April 1970, pp. 42–49. See also the University of Iowa video *Form Drag, Lift, and Propulsion*.

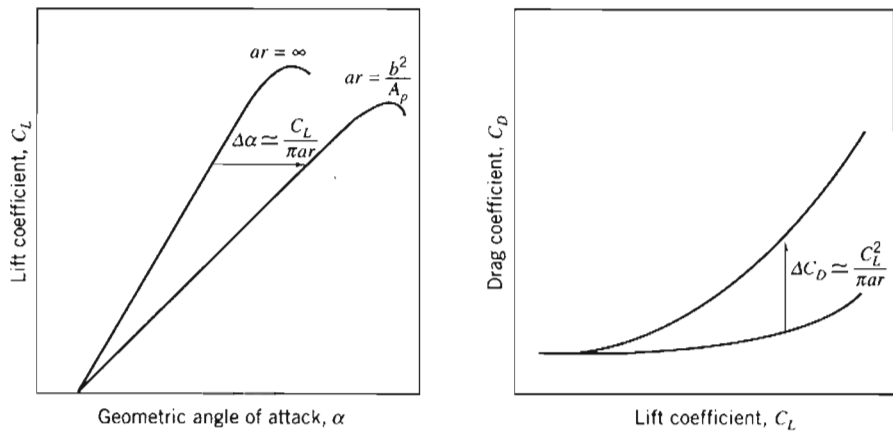


Fig. 9.21 Effect of finite aspect ratio on lift and drag coefficients for a wing.

Fig. 9.21. It also means that instead of being perpendicular to the motion, the lift force leans angle  $\Delta\alpha$  backwards from the perpendicular—we have an induced drag component of the drag coefficient. From simple geometry

$$\Delta C_D \approx C_L \Delta\alpha \approx \frac{C_L^2}{\pi ar} \quad (9.41)$$

This also is shown in Fig. 9.21.

When written in terms of aspect ratio, the drag of a wing of finite span becomes [21]

$$C_D = C_{D,\infty} + C_{D,i} = C_{D,\infty} + \frac{C_L^2}{\pi ar} \quad (9.42)$$

where  $C_{D,\infty}$  is the section drag coefficient at  $C_L$ ,  $C_{D,i}$  is the induced drag coefficient at  $C_L$ , and  $ar$  is the aspect ratio of the finite-span wing.

Drag on airfoils arises from viscous and pressure forces. Viscous drag changes with Reynolds number but only slightly with angle of attack. These relationships and some commonly used terminology are illustrated in Fig. 9.22.

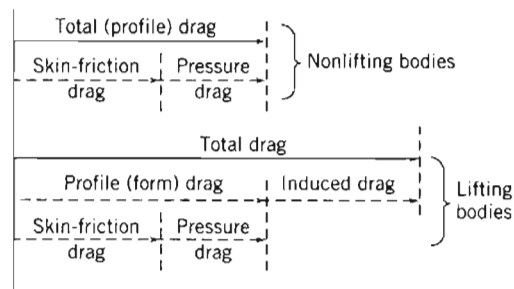


Fig. 9.22 Drag breakdown on nonlifting and lifting bodies.

A useful approximation to the drag polar for a complete aircraft may be obtained by adding the induced drag to the drag at zero lift. The drag at any lift coefficient is obtained from

$$C_D = C_{D,0} + C_{D,i} = C_{D,0} + \frac{C_L^2}{\pi ar} \quad (9.43)$$

where  $C_{D,0}$  is the drag coefficient at zero lift and  $ar$  is the aspect ratio.

It is possible to increase the *effective* aspect ratio for a wing of given geometric ratio by adding an *endplate* or *winglet* to the wing tip. An endplate may be a simple plate attached at the tip, perpendicular to the wing span, as on the rear-mounted wing of the racing car (see Fig. 9.26). An endplate functions by blocking the flow that tends to migrate from the high-pressure region below the wing tip to the low-pressure region above the tip when the wing is producing lift. When the endplate is added, the strength of the trailing vortex and the induced drag are reduced.

Winglets are short, aerodynamically contoured wings set perpendicular to the wing at the tip. Like the endplate, the winglet reduces the strength of the trailing vortex system and the induced drag. The winglet also produces a small component of force in the flight direction, which has the effect of further reducing the overall drag of the aircraft. The contour and angle of attack of the winglet are adjusted based on wind tunnel tests to provide optimum results.

As we have seen, aircraft can be fitted with low-drag airfoils to give excellent performance at cruise conditions. However, since the maximum lift coefficient is low for thin airfoils, additional effort must be expended to obtain acceptably low landing speeds. In steady-state flight conditions, lift must equal aircraft weight. Thus,

$$W = F_L = C_L \frac{1}{2} \rho V^2 A$$

Minimum flight speed is therefore obtained when  $C_L = C_{L_{\max}}$ . Solving for  $V_{\min}$ ,


$$V_{\min} = \sqrt{\frac{2W}{\rho C_{L_{\max}} A}} \quad (9.44)$$

According to Eq. 9.44, the minimum landing speed can be reduced by increasing either  $C_{L_{\max}}$  or wing area. Two basic techniques are available to control these variables: variable-geometry wing sections (e.g., obtained through the use of flaps) or boundary-layer control techniques.

Flaps are movable portions of a wing trailing edge that may be extended during landing and takeoff to increase effective wing area. The effects on lift and drag of two typical flap configurations are shown in Fig. 9.23, as applied to the NACA 23012 airfoil section. The maximum lift coefficient for this section is increased from 1.52 in the “clean” condition to 3.48 with double-slotted flaps. From Eq. 9.44, the corresponding reduction in landing speed would be 34 percent.

Figure 9.23 shows that section drag is increased substantially by high-lift devices. From Fig. 9.23*b*, section drag at  $C_{L_{\max}}$  ( $C_D \approx 0.28$ ) with double-slotted flaps is about 5 times as high as section drag at  $C_{L_{\max}}$  ( $C_D \approx 0.055$ ) for the clean airfoil. Induced drag due to lift must be added to section drag to obtain total drag. Because induced drag is proportional to  $C_L^2$  (Eq. 9.41) total drag rises sharply at low aircraft speeds. At speeds near stall, drag may increase enough to exceed the thrust available from the engines. To avoid this dangerous region of unstable operation, the Federal Aviation Administration (FAA) limits operation of commercial aircraft to speeds above 1.2 times stall speed.

Although details are beyond the scope of this book, the basic purpose of all boundary-layer control techniques is to delay separation or reduce drag, by adding

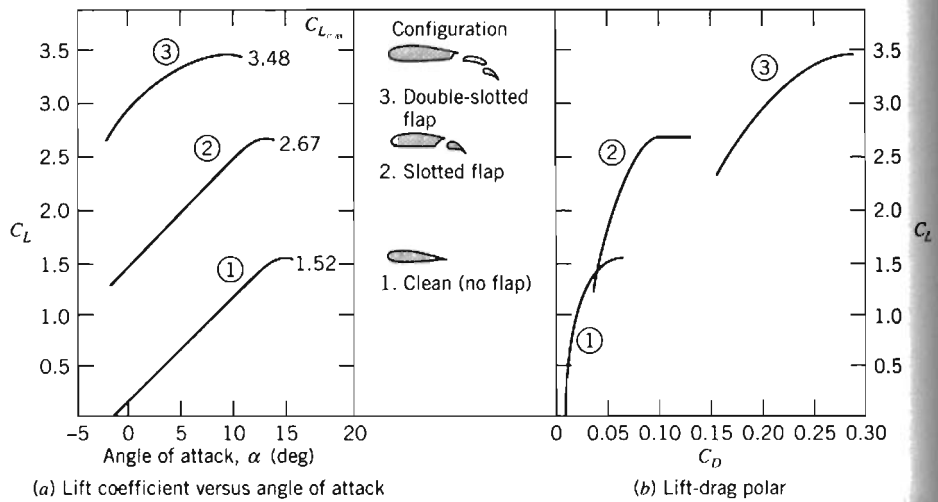

**Fig. 9.23** Effect of flaps on aerodynamic characteristics of NACA 23012 airfoil section. (Data from [21].)



**Fig. 9.24(a)** Application of high-lift boundary-layer control devices to reduce landing speed of a jet transport aircraft. The wing of the Boeing 777 is highly mechanized. In the landing configuration, large slotted trailing-edge flaps roll out from under the wing and deflect downward to increase wing area and camber, thus increasing the lift coefficient. Slats at the leading edge of the wing move forward and down, to increase the effective radius of the leading edge and prevent flow separation, and to open a slot that helps keep air flow attached to the wing's upper surface. After touchdown, spoilers (not shown in use) are raised in front of each flap to decrease lift and ensure that the plane remains on the ground, despite use of the lift-augmenting devices. (This photograph was taken during a flight test. Flow cones are attached to the flaps and ailerons to identify regions of separated flow on these surfaces.) (Photograph courtesy of Boeing Airplane Company.)



**Fig. 9.24(b)** Application of high-lift boundary-layer control devices to reduce takeoff speed of a jet transport aircraft. This is another view of the Boeing 777 wing. In the takeoff configuration, large slotted trailing-edge flaps deflect to increase the lift coefficient. The low-speed aileron near the wingtip also deflects to improve span loading during takeoff. This view also shows the single-slotted outboard flap, the high-speed aileron, and nearest the fuselage, the double-slotted inboard flap. (Photograph courtesy of Boeing Airplane Company.)

momentum to the boundary layer through blowing, or by removing low-momentum boundary-layer fluid by suction.<sup>9</sup> Many examples of practical boundary-layer control systems may be seen on commercial transport aircraft at your local airport. Two typical systems are shown in Fig. 9.24.

### EXAMPLE 9.8 Optimum Cruise Performance of a Jet Transport

Jet engines burn fuel at a rate proportional to thrust delivered. The optimum cruise condition for a jet aircraft is at maximum speed for a given thrust. In steady level flight, thrust and drag are equal. Hence, optimum cruise occurs at the speed when the ratio of drag force to air speed is minimized.

A Boeing 727-200 jet transport has wing planform area  $A_p = 1600 \text{ ft}^2$ , and aspect ratio  $ar = 6.5$ . Stall speed at sea level for this aircraft with flaps up and a gross weight of 150,000 lbf is 175 mph. Below  $M = 0.6$ , drag due to compressibility effects is negligible, so Eq. 9.43 may be used to estimate total drag on the aircraft.  $C_{D,0}$  for the aircraft is constant at 0.0182. Assume sonic speed at sea level is  $c = 759 \text{ mph}$ .

Evaluate the performance envelope for this aircraft at sea level by plotting drag force versus speed, between stall and  $M = 0.6$ . Use this graph to estimate optimum cruise speed for the aircraft at sea-level conditions. Comment on stall speed and optimum cruise speed for the aircraft at 30,000 ft altitude on a standard day.

<sup>9</sup> See the excellent NCFMF video *Boundary Layer Control* for a review of these techniques.

**EXAMPLE PROBLEM 9.8****GIVEN:** Boeing 727-200 jet transport at sea-level conditions.

$$W = 150,000 \text{ lbf}, A = 1600 \text{ ft}^2, ar = 6.5, \text{ and } C_{D,0} = 0.0182$$

Stall speed is  $V_{\text{stall}} = 175 \text{ mph}$ , and compressibility effects on drag are negligible for  $M \leq 0.6$  (sonic speed at sea level is  $c = 759 \text{ mph}$ ).

**FIND:** (a) Drag force as a function of speed from  $V_{\text{stall}}$  to  $M = 0.6$ ; plot results.

(b) Estimate of optimum cruise speed at sea level.

(c) Stall speed and optimum cruise speed at 30,000 ft altitude.

**SOLUTION:**

For steady, level flight, weight equals lift and thrust equals drag.

Governing equations:  $F_L = C_L A \frac{1}{2} \rho V^2 = W \quad C_D = C_{D,0} + \frac{C_L^2}{\pi ar}$

$$F_D = C_D A \frac{1}{2} \rho V^2 = T \quad M = \frac{V}{c}$$

At sea level,  $\rho = 0.00238 \text{ slug/ft}^3$ , and  $c = 759 \text{ mph}$ .Since  $F_L = W$  for level flight at any speed, then

$$C_L = \frac{W}{\frac{1}{2} \rho V^2 A} = \frac{2W}{\rho V^2 A}$$

At stall speed,  $V = 175 \text{ mph}$ , so

$$C_L = 2 \times 150,000 \text{ lbf} \times \frac{\text{ft}^3}{0.00238 \text{ slug}} \left[ \frac{\text{hr}}{175 \text{ mi}} \times \frac{\text{mi}}{5280 \text{ ft}} \times 3600 \frac{\text{s}}{\text{hr}} \right]^2 \frac{1}{1600 \text{ ft}^2} \times \frac{\text{slug} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2}$$

$$C_L = \frac{3.65 \times 10^4}{[V(\text{mph})]^2} = \frac{3.65 \times 10^4}{(175)^2} = 1.196, \text{ and}$$

$$C_D = C_{D,0} + \frac{C_L^2}{\pi ar} = 0.0182 + \frac{(1.196)^2}{\pi(6.5)} = 0.0882$$

Then

$$F_D = W \frac{C_D}{C_L} = 150,000 \text{ lbf} \left( \frac{0.0882}{1.19} \right) = 11,100 \text{ lbf}$$

At  $M = 0.6$ ,  $V = Mc = (0.6)759 \text{ mph} = 455 \text{ mph}$ , so  $C_L = 0.177$  and

$$C_D = 0.0182 + \frac{(0.177)^2}{\pi(6.5)} = 0.0197$$


so

$$F_D = 150,000 \text{ lbf} \left( \frac{0.0197}{0.177} \right) = 16,700 \text{ lbf}$$

Similar calculations lead to the following table (computed using *Excel*):

$V$ (mph)	175	200	300	400	455
$C_L$	1.196	0.916	0.407	0.229	0.177
$C_D$	0.0882	0.0593	0.0263	0.0208	0.0197
$F_D$ (lbf)	11,100	9,710	9,700	13,600	16,700

These data may be plotted as:

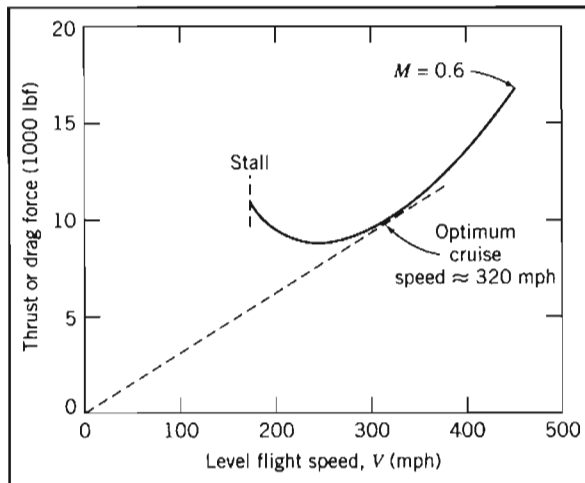

From the plot, the optimum cruise speed at sea level is estimated as 320 mph (and using *Excel* we obtain 323 mph).

At 30,000 ft (9,140 m) altitude, the density is only about 0.375 times sea level density, from Table A.3. The speeds for corresponding forces are calculated from

$$F_L = C_L A \frac{1}{2} \rho V^2 \quad \text{or} \quad V = \sqrt{\frac{2F_L}{C_L \rho A}} \quad \text{or} \quad \frac{V_{30}}{V_{SL}} = \sqrt{\frac{\rho_{SL}}{\rho_{30}}} = \sqrt{\frac{1}{0.375}} = 1.63$$

Thus, speeds increase 63 percent at 30,000 ft altitude:  $V_{\text{stall}} \approx 285$  mph

$$V_{\text{cruise}} \approx 522 \text{ mph}$$

This problem illustrates that high-altitude flight increases the optimum cruising speed—in general this speed depends on aircraft configuration, gross weight, segment length, and winds aloft.



The *Excel* workbook for this Example Problem plots the drag or thrust and power as functions of speed. It also allows “what-ifs,” e.g., what happens to the optimum speed if altitude is increased, or if the aspect ratio is increased, and so on.

Aerodynamic lift is an important consideration in the design of high-speed land vehicles such as racing cars and land-speed-record machines. A road vehicle generates lift by virtue of its shape [29]. A representative centerline pressure distribution measured in the wind tunnel for an automobile is shown in Fig. 9.25 [30].

The pressure is low around the nose because of streamline curvature as the flow rounds the nose. The pressure reaches a maximum at the base of the windshield, again as a result of streamline curvature. Low-pressure regions also occur at the windshield header and over the top of the automobile. The air speed across the top is approximately 30 percent higher than the freestream air speed. The same effect

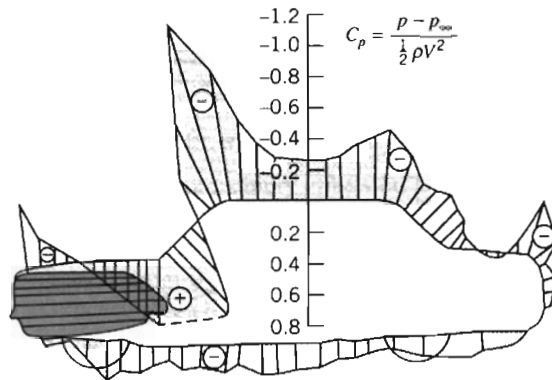


Fig. 9.25 Pressure distribution along the centerline of an automobile [30].

occurs around the “A-pillars” at the windshield edges. The drag increase caused by an added object, such as an antenna, spotlight, or mirror at that location, thus would be  $(1.3)^2 \approx 1.7$  times the drag the object would experience in an undisturbed flow field. Thus the *parasite drag* of an added component can be much higher than would be predicted from its drag calculated for free flow.

At high speeds, aerodynamic lift forces can unload tires, causing serious reductions in steering control and reducing stability to a dangerous extent. Lift forces on early racing cars were counteracted somewhat by “spoilers,” at considerable penalty in drag. In 1965 Jim Hall introduced the use of movable inverted airfoils on his Chaparral sports cars to develop aerodynamic downforce and provide aerodynamic braking [31]. Since then the developments in application of aerodynamic devices have been rapid. Aerodynamic design is used to reduce lift on all modern racing cars, as exemplified in Fig. 9.26. Liebeck airfoils [23] are used frequently for high-speed automobiles. Their high lift coefficients and relatively low drag allow downforce equal to or greater than the car weight to be developed at racing speeds. “Ground effect” cars use venturi-shaped ducts under the car and side skirts to seal leakage flows. The net result of these aerodynamic effects is that the downward force (which increases

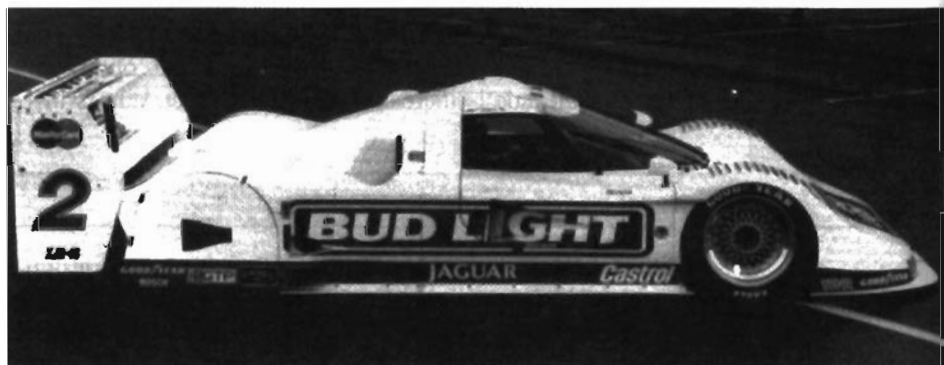


Fig. 9.26 Contemporary sports-racing car, showing aerodynamic design features. To achieve 200<sup>+</sup> mph performance requires careful attention to aerodynamic design for low drag and to aerodynamic downforce for stability and high cornering speeds. The photo shows the carefully streamlined mirrors, flush inlet ducts, and other details needed to achieve low drag. The low front contour, underbody shape, and rear wing create downforce for stability and high-speed cornering performance. (Photo courtesy of Goodyear Tire & Rubber Co., Inc.)



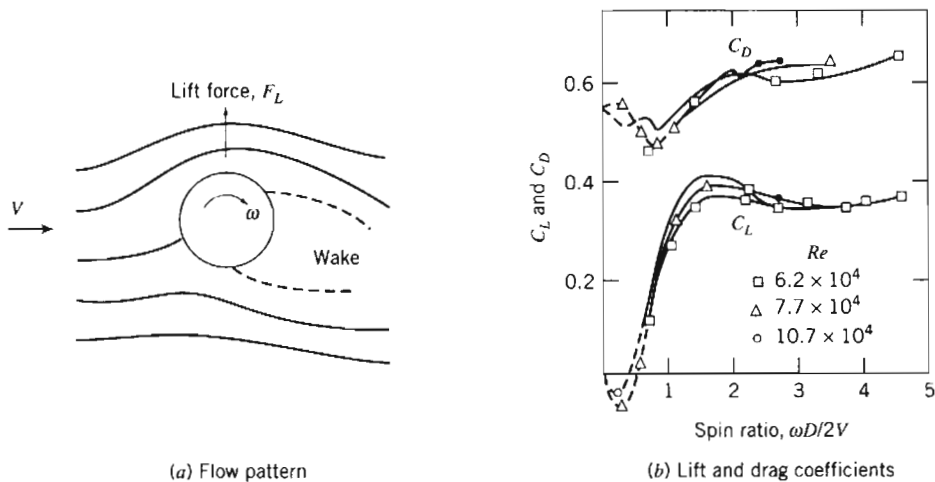


Fig. 9.27 Flow pattern, lift, and drag coefficients for a smooth spinning sphere in uniform flow. (Data from [19].)


with speed) generates excellent traction without adding significant weight to the vehicle, allowing faster speeds through curves and leading to lower lap times.

Another method of boundary-layer control is use of moving surfaces to reduce skin friction effects on the boundary layer [32]. This method is hard to apply to practical devices, because of geometric and weight complications, but it is very important in recreation. Most golfers, tennis players, Ping-Pong enthusiasts, and baseball pitchers can attest to this! Tennis and Ping-Pong players use spin to control the trajectory and bounce of a shot. In golf, a drive can leave the tee at 275 ft/s or more, with backspin of 9000 rpm! Spin provides significant aerodynamic lift that substantially increases the carry of a drive. Spin is also largely responsible for hooking and slicing when shots are not hit squarely. The baseball pitcher uses spin to throw a curve ball.

Flow about a spinning sphere is shown in Fig. 9.27a. Spin alters the pressure distribution and also affects the location of boundary-layer separation. Separation is delayed on the upper surface of the sphere in Fig. 9.27a, and it occurs earlier on the lower surface. Thus pressure (because of the Bernoulli effect) is reduced on the upper surface and increased on the lower surface; the wake is deflected downward as shown. Pressure forces cause a lift in the direction shown; spin in the opposite direction would produce negative lift—a downward force. The force is directed perpendicular to both  $V$  and the spin axis.

Lift and drag data for spinning smooth spheres are presented in Fig. 9.27b. The most important parameter is the *spin ratio*,  $\omega D/2V$ , the ratio of surface speed to freestream flow speed; Reynolds number plays a secondary role. At low spin ratio, lift is negative in terms of the directions shown in Fig. 9.27a. Only above  $\omega D/2V \approx 0.5$  does lift become positive and continue to increase as spin ratio increases. Lift coefficient levels out at about 0.35. Spin has little effect on sphere drag coefficient, which varies from about 0.5 to about 0.65 over the range of spin ratio shown.

Earlier we mentioned the effect of dimples on the drag of a golf ball. Experimental data for lift and drag coefficients for spinning golf balls are presented in Fig. 9.28 for subcritical Reynolds numbers between 126,000 and 238,000. Again the independent variable is spin ratio; a much smaller range of spin ratio, typical of golf balls, is presented in Fig. 9.28.

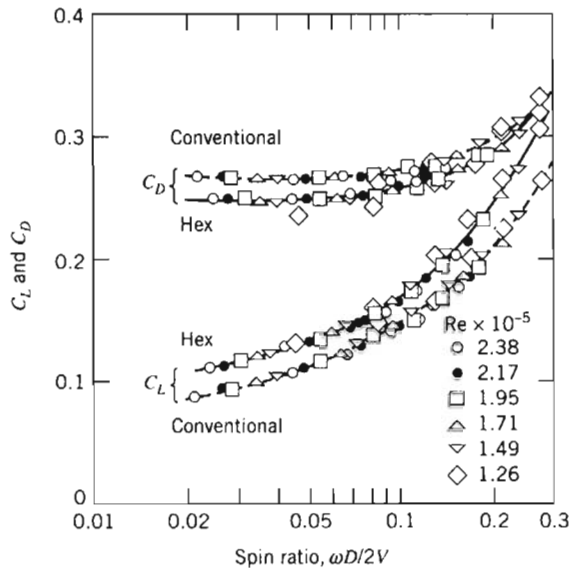

**Fig. 9.28** Comparison of conventional and hex-dimpled golf balls [33].

A clear trend is evident: The lift coefficient increases consistently with spin ratio for both hexagonal and “conventional” (round) dimples. The lift coefficient on a golf ball with hexagonal dimples is significantly—as much as 15 percent—higher than on a ball with round dimples. The advantage for hexagonal dimples continues to the largest spin ratios that were measured. The drag coefficient for a ball with hexagonal dimples is consistently 5 to 7 percent lower than the drag coefficient for a ball with round dimples at low spin ratios, but the difference becomes less pronounced as spin ratio increases.

The combination of higher lift and lower drag increases the carry of a golf shot. A recent design—the Callaway HX—has improved performance further by using a “tubular lattice network” using ridges of hexagons and pentagons (at a precise height of 0.0083 in.) instead of dimples, so that there are no flat spots at all on the surface [34]. Callaway claims the HX flies farther than any ball they ever tested.

### EXAMPLE 9.9 Lift of a Spinning Ball

A smooth tennis ball, with 57 g mass and 64 mm diameter, is hit at 25 m/s with topspin of 7500 rpm. Calculate the aerodynamic lift acting on the ball. Evaluate the radius of curvature of its path at maximum elevation in a vertical plane. Compare with the radius for no spin.

#### EXAMPLE PROBLEM 9.9

**GIVEN:** Tennis ball in flight, with  $m = 57$  g and  $D = 64$  mm, hit with  $V = 25$  m/s and topspin of 7500 rpm.

**FIND:** (a) Aerodynamic lift acting on ball.  
 (b) Radius of curvature of path in vertical plane.  
 (c) Comparison with radius for no spin.

**SOLUTION:**

Assume ball is smooth.

$$\text{Use data from Fig. 9.27 to find lift: } C_L = f\left(\frac{\omega D}{2V}, Re_D\right).$$

From given data (for standard air,  $\nu = 1.46 \times 10^{-5} \text{ m}^2/\text{s}$ ),

$$\frac{\omega D}{2V} = \frac{1}{2} \times 7500 \frac{\text{rev}}{\text{min}} \times 0.064 \text{ m} \times \frac{\text{s}}{25 \text{ m}} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}}{60 \text{ s}} = 1.01$$

$$Re_D = \frac{VD}{\nu} = 25 \frac{\text{m}}{\text{s}} \times 0.064 \text{ m} \times \frac{\text{s}}{1.46 \times 10^{-5} \text{ m}^2} = 1.10 \times 10^5$$

From Fig. 9.27,  $C_L \approx 0.3$ , so

$$F_L = C_L A \frac{1}{2} \rho V^2$$

$$= C_L \frac{\pi D^2}{4} \frac{1}{2} \rho V^2 = \frac{\pi}{8} C_L D^2 \rho V^2$$

$$F_L = \frac{\pi}{8} \times 0.3 \times (0.064)^2 \text{ m}^2 \times 1.23 \frac{\text{kg}}{\text{m}^3} \times (25)^2 \frac{\text{m}^2}{\text{s}^2} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} = 0.371 \text{ N} \leftarrow F_L$$

Because the ball is hit with topspin, this force acts downward.

Use Newton's second law to evaluate curvature of path. In the vertical plane,

$$\sum F_z = -F_L - mg = ma_z = -m \frac{V^2}{R} \quad \text{or} \quad R = \frac{V^2}{g + F_L/m}$$

$$R = (25)^2 \frac{\text{m}^2}{\text{s}^2} \left[ \frac{1}{9.81 \frac{\text{m}}{\text{s}^2} + 0.371 \text{ N} \times \frac{1}{0.057 \text{ kg}} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2}} \right]$$

$$R = 38.3 \text{ m (with spin)} \leftarrow R$$


$$R = (25)^2 \frac{\text{m}^2}{\text{s}^2} \times \frac{\text{s}^2}{9.81 \text{ m}} = 63.7 \text{ m (without spin)} \leftarrow R$$

Thus topspin has a significant effect on trajectory of the shot!

It has long been known that a spinning projectile in flight is affected by a force perpendicular to the direction of motion and to the spin axis. This effect, known as the *Magnus effect*, is responsible for the systematic drift of artillery shells.

Cross flow about a rotating circular cylinder is qualitatively similar to flow about the spinning sphere shown schematically in Fig. 9.27a. If the velocity of the upper surface of a cylinder is in the same direction as the freestream velocity, separation is delayed on the upper surface; it occurs earlier on the lower surface. Thus the wake is deflected and the pressure distribution on the cylinder surface is altered when rotation is present. Pressure is reduced on the upper surface and increased on the lower surface, causing a net lift force acting upward. Spin in the opposite direction reverses these effects and causes a downward lift force.

Lift and drag coefficients for the rotating cylinder are based on projected area,  $LD$ . Experimentally measured lift and drag coefficients for subcritical Reynolds numbers between 40,000 and 660,000 are shown as functions of spin ratio in Fig. 9.29. When surface speed exceeds flow speed, the lift coefficient increases to surprisingly high values, while in two-dimensional flow, drag is affected only moderately. Induced

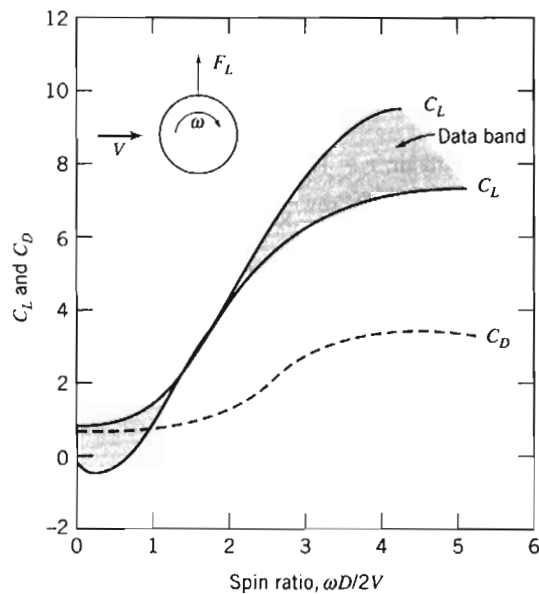

**Fig. 9.29** Lift and drag of a rotating cylinder as a function of relative rotational speed; Magnus force. (Data from [35].)

drag, which must be considered for finite cylinders, can be reduced by using end disks larger in diameter than the body of the cylinder.

The power required to rotate a cylinder may be estimated from the skin friction drag of the cylinder surface. Hoerner [35] suggests basing the skin friction drag estimate on the tangential surface speed and surface area. Goldstein [19] suggests that the power required to spin the cylinder, when expressed as an equivalent drag coefficient, may represent 20 percent or more of the aerodynamic  $C_D$  of a stationary cylinder.

## 9-9 SUMMARY

In this chapter we have:

- ✓ Defined and discussed various terms commonly used in aerodynamics, such as: boundary-layer disturbance, displacement and momentum thicknesses; flow separation; streamlining; skin friction and pressure drag and drag coefficient; lift and lift coefficient; wing chord, span and aspect ratio; and induced drag.
- ✓ Derived expressions for the boundary-layer thickness on a flat plate (zero pressure gradient) using exact\* and approximate methods (using the momentum integral equation).
- ✓ Learned how to estimate the lift and drag from published data for a variety of objects.

While investigating the above phenomena, we developed insight into some of the basic concepts of aerodynamic design, such as how to minimize drag, how to determine the optimum cruising speed of an airplane, and so on.

\* This topic applies to a section that may be omitted without loss of continuity in the text material.


## REFERENCES

1. Prandtl, L., "Fluid Motion with Very Small Friction (in German)," *Proceedings of the Third International Congress on Mathematics*, Heidelberg, 1904; English translation available as NACA TM 452, March 1928.
2. Blasius, H., "The Boundary Layers in Fluids with Little Friction (in German)," *Zeitschrift für Mathematik und Physik*, 56, 1, 1908, pp. 1–37; English translation available as NACA TM 1256, February 1950.
3. Schlichting, H., *Boundary-Layer Theory*, 7th ed. New York: McGraw-Hill, 1979.
4. Stokes, G. G., "On the Effect of the Internal Friction of Fluids on the Motion of Pendulums," *Cambridge Philosophical Transactions*, IX, 8, 1851.
5. Howarth, L., "On the Solution of the Laminar Boundary-Layer Equations," *Proceedings of the Royal Society of London*, A164, 1938, pp. 547–579.
6. Hess, J. L., and A. M. O. Smith, "Calculation of Potential Flow about Arbitrary Bodies," in *Progress in Aeronautical Sciences*, Vol. 8, D. Kuchemann, et al., eds. Elmsford, NY: Pergamon Press, 1966.
7. Kraus, W., "Panel Methods in Aerodynamics," in *Numerical Methods in Fluid Dynamics*, H. J. Wirz and J. J. Smolderen, eds. Washington, D.C.: Hemisphere, 1978.
8. Rosenhead, L., ed., *Laminar Boundary Layers*. London: Oxford University Press, 1963.
9. Rotta, J. C., "Turbulent Boundary Layers in Incompressible Flow," in *Progress in Aeronautical Sciences*, A. Ferri, et al., eds. New York: Pergamon Press, 1960, pp. 1–220.
10. Kline, S. J., et al., eds., *Proceedings, Computation of Turbulent Boundary Layers—1968 AFOSR-IFP-Stanford Conference*, Vol. I: Methods, Predictions, Evaluation, and Flow Structure, and Vol. II: Compiled Data. Stanford, CA: Thermosciences Division, Department of Mechanical Engineering, Stanford University, 1969.
11. Kline, S. J., et al., eds., *Proceedings, 1980–81 AFOSR-HTTM-Stanford Conference on Complex Turbulent Flows: Comparison of Computation and Experiment*, three volumes. Stanford, CA: Thermosciences Division, Department of Mechanical Engineering, Stanford University, 1982.
12. Cebeci, T., and P. Bradshaw, *Momentum Transfer in Boundary Layers*. Washington, D.C.: Hemisphere, 1977.
13. Bradshaw, P., T. Cebeci, and J. H. Whitelaw, *Engineering Calculation Methods for Turbulent Flow*. New York: Academic Press, 1981.
14. *Fluent*. Fluent Incorporated, Centerra Resources Park, 10 Cavendish Court, Lebanon, NH 03766 ([www.fluent.com](http://www.fluent.com)).
15. *STAR-CD*. Adapco, 60 Broadhollow Road, Melville, NY 11747 ([www.cd-adapco.com](http://www.cd-adapco.com)).
16. Hoerner, S. F., *Fluid-Dynamic Drag*, 2nd ed. Midland Park, NJ: Published by the author, 1965.
17. Shapiro, A. H., *Shape and Flow, The Fluid Dynamics of Drag*. New York: Anchor, 1961 (paperback).
18. Fage, A., "Experiments on a Sphere at Critical Reynolds Numbers," Great Britain, *Aeronautical Research Council, Reports and Memoranda*, No. 1766, 1937.
19. Goldstein, S., ed., *Modern Developments in Fluid Dynamics*, Vols. I and II. Oxford: Clarendon Press, 1938. (Reprinted in paperback by Dover, New York, 1967.)
20. Morel, T., and M. Bohn, "Flow over Two Circular Disks in Tandem," *Transactions of the ASME, Journal of Fluids Engineering*, 102, 1, March 1980, pp. 104–111.

21. Abbott, I. H., and A. E. von Doenhoff, *Theory of Wing Sections, Including a Summary of Airfoil Data*. New York: Dover, 1959 (paperback).
22. Stratford, B. S., "An Experimental Flow with Zero Skin Friction," *Journal of Fluid Mechanics*, 5, Pt. 1, January 1959, pp. 17–35.
23. Liebeck, R. H., "Design of Subsonic Airfoils for High Lift," *AIAA Journal of Aircraft*, 15, 9, September 1978, pp. 547–561.
24. Smith, A. M. O., "Aerodynamics of High-Lift Airfoil Systems," in *Fluid Dynamics of Aircraft Stalling*, AGARD CP-102, 1973, pp. 10–1 through 10–26.
25. Morel, T., "Effect of Base Slant on Flow in the Near Wake of an Axisymmetric Cylinder," *Aeronautical Quarterly*, XXXI, Pt. 2, May 1980, pp. 132–147.
26. Hucho, W. H., "The Aerodynamic Drag of Cars—Current Understanding, Unresolved Problems, and Future Prospects," in *Aerodynamic Drag Mechanisms of Bluff Bodies and Road Vehicles*, G. Sovran, T. Morel, and W. T. Mason, eds. New York: Plenum, 1978.
27. McDonald, A. T., and G. M. Palmer, "Aerodynamic Drag Reduction of Intercity Buses," *Transactions, Society of Automotive Engineers*, 89, Section 4, 1980, pp. 4469–4484 (SAE Paper No. 801404).
28. Grosser, M., *Gossamer Odyssey*. Boston: Houghton Mifflin, 1981.
29. Carr, G. W., "The Aerodynamics of Basic Shapes for Road Vehicles. Part 3: Streamlined Bodies," The Motor Industry Research Association, Warwickshire, England, Report No. 107/4, 1969.
30. Goetz, H., "The Influence of Wind Tunnel Tests on Body Design, Ventilation, and Surface Deposits of Sedans and Sports Cars," SAE Paper No. 710212, 1971.
31. Hall, J., "What's Jim Hall Really Like?" *Automobile Quarterly*, VIII, 3, Spring 1970, pp. 282–293.
32. Mokterian, F., and V. J. Modi, "Fluid Dynamics of Airfoils with Moving Surface Boundary-Layer Control," *AIAA Journal of Aircraft*, 25, 2, February 1988, pp. 163–169.
33. Mehta, R. D., "Aerodynamics of Sports Balls," in *Annual Review of Fluid Mechanics*, ed. by M. van Dyke, et al. Palo Alto, CA: Annual Reviews, 1985, 17, pp. 151–189.
34. "The Year in Ideas," *New York Times Magazine*, December 9, 2001, pp. 58–60.
35. Hoerner, S. F., and H. V. Borst, *Fluid-Dynamic Lift*. Bricktown, NJ: Hoerner Fluid Dynamics, 1975.
36. Chow, C.-Y., *An Introduction to Computational Fluid Mechanics*. New York: Wiley, 1980.
37. Carr, G. W., "The Aerodynamics of Basic Shapes for Road Vehicles, Part 1: Simple Rectangular Bodies," The Motor Industry Research Association, Warwickshire, England, Report No. 1968/2, 1967.

---

## PROBLEMS

- 9.1  The roof of a minivan is approximated as a horizontal flat plate. Plot the length of the laminar boundary layer as a function of minivan speed,  $V$ , as the minivan accelerates from 10 mph to 90 mph.
- 9.2 A model of a river towboat is to be tested at 1:13.5 scale. The boat is designed to travel at 8 mph in fresh water at 10°C. Estimate the distance from the bow where transition occurs. Where should transition be stimulated on the model towboat?

- 9.3 An airplane cruises at 300 knots at 10 km altitude on a standard day. Assume the boundary layers on the wing surfaces behave as on a flat plate. Estimate the expected extent of laminar flow in the wing boundary layers.
- 9.4 Plot on one graph the length of the laminar boundary layer on a flat plate, as a function of freestream velocity, for (a) water and standard air at (b) sea level and (c) 10 km altitude. Use log-log axes, and compute data for the boundary-layer length ranging from 0.01 m to 10 m.
- 9.5 The extent of the laminar boundary layer on the surface of an aircraft or missile varies with altitude. For a given speed, will the laminar boundary-layer length increase or decrease with altitude? Why? Plot the ratio of laminar boundary-layer length at altitude  $z$ , to boundary-layer length at sea level, as a function of  $z$ , up to altitude  $z = 30$  km, for a standard atmosphere.
- 9.6 The most general sinusoidal velocity profile for laminar boundary-layer flow on a flat plate is  $u = A \sin(By) + C$ . State three boundary conditions applicable to the laminar boundary-layer velocity profile. Evaluate constants  $A$ ,  $B$ , and  $C$ .
- 9.7 Velocity profiles in laminar boundary layers often are approximated by the equations

$$\begin{aligned} \text{Linear:} \quad & \frac{u}{U} = \frac{y}{\delta} \\ \text{Sinusoidal:} \quad & \frac{u}{U} = \sin\left(\frac{\pi y}{2\delta}\right) \\ \text{Parabolic:} \quad & \frac{u}{U} = 2\left(\frac{y}{\delta}\right) - \left(\frac{y}{\delta}\right)^2 \end{aligned}$$


Compare the shapes of these velocity profiles by plotting  $y/\delta$  (on the ordinate) versus  $u/U$  (on the abscissa).

- 9.8 The velocity profile in a turbulent boundary layer often is approximated by the  $\frac{1}{7}$ -power-law equation

$$\frac{u}{U} = \left(\frac{y}{\delta}\right)^{1/7}$$


Compare the shape of this profile with the parabolic laminar boundary-layer velocity profile (Problem 9.7) by plotting  $y/\delta$  (on the ordinate) versus  $u/U$  (on the abscissa) for both profiles.

- 9.9 Evaluate  $\delta^*/\delta$  for each of the laminar boundary-layer velocity profiles given in Problem 9.7.
- 9.10 Evaluate  $\theta/\delta$  for each of the laminar boundary-layer velocity profiles given in Problem 9.7.
- 9.11 Evaluate  $\delta^*/\delta$  and  $\theta/\delta$  for the turbulent  $\frac{1}{7}$ -power-law velocity profile given in Problem 9.8. Compare with ratios for the parabolic laminar boundary-layer velocity profile given in Problem 9.7.
- 9.12 A fluid, with density  $\rho = 800 \text{ kg/m}^3$ , flows at  $U = 3 \text{ m/s}$  over a flat plate 3 m long and 1 m wide. At the trailing edge the boundary-layer thickness is  $\delta = 25 \text{ mm}$ . Assume the velocity profile is linear, as shown, and that the flow is two-dimensional (flow conditions are independent of  $z$ ). Using control volume  $abcd$ , shown by dashed lines, compute the mass flow rate across surface  $ab$ . Determine the drag force on the upper surface of the plate. Explain how this (viscous) drag can be computed from the given data even though we do not know the fluid viscosity (see Problem 9.34).

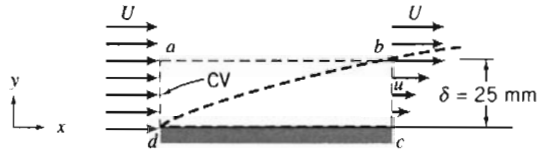

P9.12

- 9.13 The flat plate of Problem 9.12 is turned so that the 1 m side is parallel to the flow (the width becomes 3 m). Should we expect that the drag increases or decreases? Why? The trailing edge boundary-layer thickness is now  $\delta = 14$  mm. Assume again that the velocity profile is linear, and that the flow is two-dimensional (flow conditions are independent of  $z$ ). Repeat the analysis of Problem 9.12.
- 9.14 Solve Problem 9.12 again with the velocity profile at section  $bc$  given by the parabolic expression from Problem 9.7.
- 9.15 Laboratory wind tunnels have test sections 1 ft square and 2 ft long. With nominal air speed  $U_1 = 80$  ft/s at the test section inlet, turbulent boundary layers form on the top, bottom, and side walls of the tunnel. The boundary-layer thickness is  $\delta_1 = 0.8$  in. at the inlet and  $\delta_2 = 1.2$  in. at the outlet from the test section. The boundary-layer velocity profiles are of power-law form, with  $u/U = (y/\delta)^{1/7}$ . Evaluate the freestream velocity,  $U_2$ , at the exit from the wind-tunnel test section. Determine the change in static pressure along the test section.
- 9.16 The square test section of a small laboratory wind tunnel has sides of width  $W = 305$  mm. At one measurement location, the turbulent boundary layers on the tunnel walls are  $\delta_1 = 9.5$  mm thick. The velocity profile is approximated well by the  $\frac{1}{7}$ -power expression. At this location the freestream air speed is  $U_1 = 18.3$  m/s, and the static pressure is  $p_1 = -22.9$  mm H<sub>2</sub>O (gage). At a second measurement location downstream, the boundary-layer thickness is  $\delta_2 = 12.7$  mm. Evaluate the air speed in the freestream at the second section. Calculate the difference in static pressure from section ① to section ②.
- 9.17 Air flows in a horizontal cylindrical duct of diameter  $D = 100$  mm. At a section a few meters from the entrance, the turbulent boundary layer is of thickness  $\delta_1 = 5.25$  mm, and the velocity in the inviscid central core is  $U_1 = 12.5$  m/s. Farther downstream the boundary layer is of thickness  $\delta_2 = 24$  mm. The velocity profile in the boundary layer is approximated well by the  $\frac{1}{7}$ -power expression. Find the velocity,  $U_2$ , in the inviscid central core at the second section, and the pressure drop between the two sections.
- 9.18 Air flows in the entrance region of a square duct, as shown. The velocity is uniform,  $U_0 = 30$  m/s, and the duct is 80 mm square. At a section 0.3 m downstream from the entrance, the displacement thickness,  $\delta^*$ , on each wall measures 1.0 mm. Determine the pressure change between sections ① and ②.

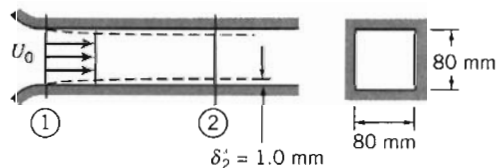

P9.18

- 9.19 Flow of air develops in a flat horizontal duct following a well-rounded entrance section. The duct height is  $H = 300$  mm. Turbulent boundary layers grow on the duct walls, but the flow is not yet fully developed. Assume that the velocity profile in each boundary layer is  $u/U = (y/\delta)^{1/7}$ . The inlet flow is uniform at  $\bar{V} = 10$  m/s at





section ①. At section ②, the boundary-layer thickness on each wall of the channel is  $\delta_2 = 100$  mm. Show that for this flow,  $\delta^* = \delta/8$ . Evaluate the static gage pressure at section ②. Find the average wall shear stress between the entrance and section ②, located at  $L = 5$  m.


9.20 A laboratory wind tunnel has a square test section, with sides of width  $W = 305$  mm and length  $L = 610$  mm. When the freestream air speed at the test section entrance is  $U_1 = 24.4$  m/s, the head loss from the atmosphere is 6.5 mm H<sub>2</sub>O. Turbulent boundary layers form on the top, bottom, and side walls of the test section. Measurements show the boundary-layer thicknesses are  $\delta_1 = 20.3$  mm at the entrance and  $\delta_2 = 25.4$  mm at the outlet from the test section. The velocity profiles are of  $\frac{1}{7}$ -power form. Evaluate the freestream air speed at the outlet from the test section. Determine the static pressures at the test section inlet and outlet.


9.21 Air flows into the inlet contraction section of a wind tunnel in an undergraduate laboratory. From the inlet the air enters the test section, which is square in cross-section with side dimensions of 305 mm. The test section is 609 mm long. At one operating condition air leaves the contraction at 50.2 m/s with negligible boundary-layer thickness. Measurements show that boundary layers at the downstream end of the test section are 20.3 mm thick. Evaluate the displacement thickness of the boundary layers at the downstream end of the wind tunnel test section. Calculate the change in static pressure along the wind tunnel test section. Estimate the approximate total drag force caused by skin friction on each wall of the wind tunnel.


9.22 Flow of air develops in a horizontal cylindrical duct, of diameter  $D = 400$  mm, following a well-rounded entrance. A turbulent boundary grows on the duct wall, but the flow is not yet fully developed. Assume that the velocity profile in the boundary layer is  $u/U = (y/\delta)^{1/7}$ . The inlet flow is at  $\bar{V} = 15$  m/s at section ①. At section ②, the boundary-layer thickness is  $\delta_2 = 100$  mm. Evaluate the static gage pressure at section ②, located at  $L = 6$  m. Find the average wall shear stress.

 \*9.23 Using numerical results for the Blasius exact solution for laminar boundary-layer flow on a flat plate, plot the dimensionless velocity profile,  $u/U$  (on the abscissa), versus dimensionless distance from the surface,  $y/\delta$  (on the ordinate). Compare with the approximate parabolic velocity profile of Problem 9.7.

 \*9.24 Using numerical results obtained by Blasius (Table 9.1), evaluate the distribution of shear stress in a laminar boundary layer on a flat plate. Plot  $\tau/\tau_w$  versus  $y/\delta$ . Compare with results derived from the approximate parabolic velocity profile given in Problem 9.7.

 \*9.25 Using numerical results obtained by Blasius (Table 9.1), evaluate the distribution of shear stress in a laminar boundary layer on a flat plate. Plot  $\tau/\tau_w$  versus  $y/\delta$ . Compare with results derived from the approximate sinusoidal velocity profile given in Problem 9.7.






 \*9.26 Using numerical results obtained by Blasius (Table 9.1), evaluate the vertical component of velocity in a laminar boundary layer on a flat plate. Plot  $v/U$  versus  $y/\delta$  for  $Re_x = 10^5$ .

 \*9.27 Verify that the  $y$  component of velocity for the Blasius solution to the Prandtl boundary-layer equations is given by Eq. 9.10. Obtain an algebraic expression for the  $x$  component of the acceleration of a fluid particle in the laminar boundary layer. Plot  $a_x$  versus  $\eta$  to determine the maximum  $x$  component of acceleration at a given  $x$ .

\*9.28 Numerical results of the Blasius solution to the Prandtl boundary-layer equations are presented in Table 9.1. Consider steady, incompressible flow of standard air over a

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

flat plate at freestream speed  $U = 4.3$  m/s. At  $x = 0.2$  m, estimate the distance from the surface at which  $u = 0.95 U$ . Evaluate the slope of the streamline through this point. Obtain an algebraic expression for the local skin friction,  $\tau_w(x)$ . Obtain an algebraic expression for the total skin friction drag force on the plate. Evaluate the momentum thickness at  $L = 0.8$  m.


-  **\*9.29** The Blasius exact solution involves solving a nonlinear equation, Eq. 9.11, with initial and boundary conditions given by Eq. 9.12. Set up an *Excel* workbook to obtain a numerical solution of this system. The workbook should consist of columns for  $\eta$ ,  $f$ ,  $f'$ , and  $f''$ . The rows should consist of values of these, with a suitable step size for  $\eta$  (e.g., for 1000 rows the step size for  $\eta$  would be 0.01 to generate data through  $\eta = 10$ , to go a little beyond the data in Table 9.1). The values of  $f$  and  $f'$  for the first row are zero (from the initial conditions, Eq. 9.12); a guess value is needed for  $f''$  (try 0.5). Subsequent row values for  $f$ ,  $f'$ , and  $f''$  can be obtained from previous row values using Euler's finite difference method for approximating first derivatives (and Eq. 9.11). Finally, a solution can be found by using *Excel's Goal Seek* or *Solver* functions to vary the initial value of  $f''$  until  $f' = 1$  for large  $\eta$  (e.g.,  $\eta = 10$ , boundary condition of Eq. 9.12). Plot the results. Note: Because Euler's method is relatively crude, the results will agree with Blasius' only to within about 1%.
-  **9.30** Consider flow of air over a flat plate. On one graph, plot the laminar boundary-layer thickness as a function of distance along the plate (up to transition) for freestream speeds  $U = 1$  m/s, 2 m/s, 3 m/s, 4 m/s, 5 m/s, and 10 m/s.
-  **9.31** A thin flat plate,  $L = 0.3$  m long and  $b = 1$  m wide, is installed in a water tunnel as a splitter. The freestream speed is  $U = 2$  m/s and the velocity profile in the boundary layer is approximated as parabolic. Plot  $\delta$ ,  $\delta^*$ , and  $\tau_w$  versus  $x/L$  for the plate.
- 9.32** A thin flat plate is installed in a water tunnel as a splitter. The plate is 0.3 m long and 1 m wide. The freestream speed is 1.6 m/s. Laminar boundary layers form on both sides of the plate. The boundary-layer velocity profile is approximated as parabolic. Determine the total viscous drag force on the plate assuming that pressure drag is negligible.
- 9.33** Consider flow over the splitter plate of Problem 9.31. Show algebraically that the total drag force on one side of the splitter plate may be written  $F_D = \rho U^2 \theta_L b$ . Evaluate  $\theta_L$  and the total drag for the given conditions.
- 9.34** In Problems 9.12 and 9.13 the drag on the upper surface of a flat plate with flow (fluid density  $\rho = 800$  kg/m<sup>3</sup>) at freestream speed  $U = 3$  m/s, was determined from momentum flux calculations. The drag was determined for the plate with its long edge (3 m) and its short edge (1 m) parallel to the flow. If the fluid viscosity  $\mu = 0.02$  N · s/m<sup>2</sup>, compute the drag using boundary layer equations.
-  **9.35** A horizontal surface, with length  $L = 1.8$  m and width  $b = 0.9$  m, is immersed in a stream of standard air flowing at  $U = 3.2$  m/s. Assume a laminar boundary layer forms and approximate the velocity profile as sinusoidal. Plot  $\delta$ ,  $\delta^*$ , and  $\tau_w$  versus  $x/L$  for the plate.
- 9.36** The velocity profile in a laminar boundary-layer flow at zero pressure gradient is approximated by the linear expression given in Problem 9.7. Use the momentum integral equation with this profile to obtain expressions for  $\delta/x$  and  $C_f$ .
-  **9.37** A horizontal surface, with length  $L = 0.8$  m and width  $b = 1.9$  m, is immersed in a stream of standard air flowing at  $U = 5.3$  m/s. Assume a laminar boundary layer forms and approximate the velocity profile as linear. Plot  $\delta$ ,  $\delta^*$ , and  $\tau_w$  versus  $x/L$  for the plate.
- 9.38** For the flow conditions of Problem 9.37, develop an algebraic expression for the variation of wall shear stress with distance along the surface. Integrate to obtain an

\* This problem requires material from sections that may be omitted without loss of continuity in the text material.

algebraic expression for the total skin-friction drag on the surface. Evaluate the drag for the given conditions.

- 9.39 Water at 15°C flows over a flat plate at a speed of 1 m/s. The plate is 0.4 m long and 1 m wide. The boundary layer on each surface of the plate is laminar. Assume that the velocity profile may be approximated as linear. Determine the drag force on the plate.

- 9.40 Standard air flows from the atmosphere into the wide, flat channel shown. Laminar boundary layers form on the top and bottom walls of the channel (ignore boundary-layer effects on the side walls). Assume the boundary layers behave as on a flat plate, with linear velocity profiles. At any axial distance from the inlet, the static pressure is uniform across the channel. Assume uniform flow at section ①. Indicate where the Bernoulli equation can be applied in this flow field. Find the static pressure (gage) and the displacement thickness at section ②. Plot the stagnation pressure (gage) across the channel at section ②, and explain the result. Find the static pressure (gage) at section ① and compare to the static pressure (gage) at section ②.

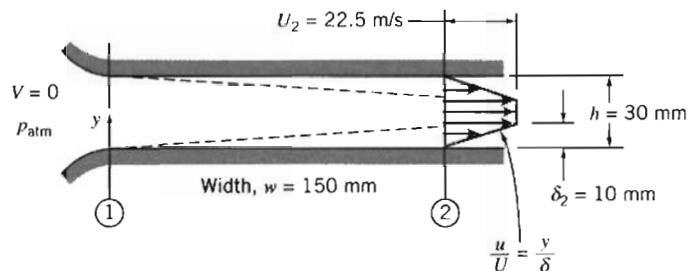

P9.40

- 9.41 A developing boundary layer of standard air on a flat plate is shown in Fig. P9.12. The freestream flow outside the boundary layer is undisturbed with  $U = 50.2$  m/s. The plate is 3.2 m wide perpendicular to the diagram. Assume flow in the boundary layer is turbulent, with a  $\frac{1}{7}$ -power velocity profile, and that  $\delta = 20.3$  mm at surface  $bc$ . Calculate the mass flow rate across surface  $ad$  and the mass flux across surface  $ab$ . Evaluate the  $x$  momentum flux across surface  $bc$ . Determine the drag force exerted on the flat plate between  $d$  and  $c$ . Estimate the distance from the leading edge at which transition from laminar to turbulent flow may be expected.

- 9.42 Consider flow of air over a flat plate of length 5 m. On one graph, plot the boundary-layer thickness as a function of distance along the plate for freestream speed  $U = 10$  m/s assuming (a) a completely laminar boundary layer, (b) a completely turbulent boundary layer, and (c) a laminar boundary layer that becomes turbulent at  $Re_x = 5 \times 10^5$ . Use *Excel's Goal Seek* or *Solver* to find the speeds  $U$  for which transition occurs at the trailing edge, and at  $x = 4$  m, 3 m, 2 m, and 1 m.

- 9.43 Assume the flow conditions given in Example Problem 9.4. Plot  $\delta$ ,  $\delta^*$ , and  $\tau_w$  versus  $x/L$  for the plate.

- 9.44 For the flow conditions of Example Problem 9.4, develop an algebraic expression for the variation of wall shear stress with distance along the surface. Integrate to obtain an algebraic expression for the total skin friction drag on the surface. Evaluate the drag for the given conditions.

- 9.45 The velocity profile in a turbulent boundary-layer flow at zero pressure gradient is approximated by the  $\frac{1}{6}$ -power profile expression,

$$\frac{u}{U} = \eta^{1/6}, \quad \text{where} \quad \eta = \frac{y}{\delta}$$




Use the momentum integral equation with this profile to obtain expressions for  $\delta/x$  and  $C_f$ . Compare with results obtained in Section 9-5 for the  $\frac{1}{7}$ -power profile.

- 9.46 For the flow conditions of Example Problem 9.4, but using the  $\frac{1}{6}$ -power velocity profile of Problem 9.45, develop an algebraic expression for the variation of wall shear stress with distance along the surface. Integrate to obtain an algebraic expression for the total skin friction drag on the surface. Evaluate the drag for the given conditions.
- 9.47 Repeat Problem 9.45, using the  $\frac{1}{8}$ -power profile expression.
- 9.48 For the flow conditions of Example Problem 9.4, but using the  $\frac{1}{8}$ -power velocity profile, develop an algebraic expression for the variation of wall shear stress with distance along the surface. Integrate to obtain an algebraic expression for the total skin friction drag on the surface. Evaluate the drag for the given conditions.
- 9.49 Air at standard conditions flows over a flat plate. The freestream speed is 10 m/s. Find  $\delta$  and  $\tau_w$  at  $x = 1$  m from the leading edge assuming (a) completely laminar flow (assume a parabolic velocity profile) and (b) completely turbulent flow (assume a  $\frac{1}{7}$ -power velocity profile).
- 9.50 Standard air flows over a horizontal smooth flat plate at freestream speed  $U = 20$  m/s. The plate length is  $L = 1.5$  m and its width is  $b = 0.8$  m. The pressure gradient is zero. The boundary layer is tripped so that it is turbulent from the leading edge; the velocity profile is well represented by the  $\frac{1}{7}$ -power expression. Evaluate the boundary-layer thickness,  $\delta$ , at the trailing edge of the plate. Calculate the wall shear stress at the trailing edge of the plate. Estimate the skin friction drag on the portion of the plate between  $x = 0.5$  m and the trailing edge.
- 9.51 A uniform flow of standard air at 60 m/s enters a plane-wall diffuser with negligible boundary-layer thickness. The inlet width is 75 mm. The diffuser walls diverge slightly to accommodate the boundary-layer growth so that the pressure gradient is negligible. Assume flat-plate boundary-layer behavior. Explain why the Bernoulli equation is applicable to this flow. Estimate the diffuser width 1.2 m downstream from the entrance.
- 9.52 Small wind tunnels in an undergraduate laboratory have 305 mm square test sections. Measurements show the boundary layers on the tunnel walls are fully turbulent and well represented by  $\frac{1}{7}$ -power profiles. At cross section ① with freestream speed  $U_1 = 26.1$  m/s, data show that  $\delta_1 = 12.2$  mm; at section ②, located downstream,  $\delta_2 = 16.6$  mm. Evaluate the change in static pressure between sections ① and ②. Estimate the distance between the two sections.
- 9.53 A laboratory wind tunnel has a flexible upper wall that can be adjusted to compensate for boundary-layer growth, giving zero pressure gradient along the test section. The wall boundary layers are well represented by the  $\frac{1}{7}$ -power velocity profile. At the inlet the tunnel cross section is square, with height  $H_1$  and width  $W_1$ , each equal to 305 mm. With freestream speed  $U_1 = 26.5$  m/s, measurements show that  $\delta_1 = 12.2$  mm and downstream,  $\delta_6 = 16.6$  mm. Calculate the height of the tunnel walls at section ⑥. Determine the equivalent length of flat plate that would produce the inlet boundary layer thickness. Estimate the streamwise distance between sections ① and ⑥ in the tunnel.
- 9.54 Air flows in a cylindrical duct of diameter  $D = 150$  mm. At section ①, the turbulent boundary layer is of thickness  $\delta_1 = 10$  mm, and the velocity in the inviscid central core is  $U_1 = 25$  m/s. Further downstream, at section ②, the boundary layer is of thickness  $\delta_2 = 30$  mm. The velocity profile in the boundary layer is approximated well by the  $\frac{1}{7}$ -power expression. Find the velocity,  $U_2$ , in the inviscid central core at the second section, and the pressure drop between the two sections. Does the

magnitude of the pressure drop indicate that we are justified in approximating the flow between sections ① and ② as one with zero pressure gradient? Estimate the length of duct between sections ① and ②. Estimate the distance downstream from section ① at which the boundary-layer thickness is  $\delta = 20$  mm.

- 9.55 Perform a cost-effectiveness analysis on a typical large tanker used for transporting petroleum. Determine, as a percentage of the petroleum cargo, the amount of petroleum that is consumed in traveling a distance of 2000 miles. Use data from Example Problem 9.5, and the following: Assume the petroleum cargo constitutes 75% of the total weight, the propeller efficiency is 70%, the wave drag and power to run auxiliary equipment constitute losses equivalent to an additional 20%, the engines have a thermal efficiency of 40%, and the petroleum energy is 20,000 Btu/lbm. Also compare the performance of this tanker to that of the Alaskan Pipeline, which requires about 120 Btu of energy for each ton-mile of petroleum delivery.
- 9.56 Consider the linear, sinusoidal, and parabolic laminar boundary-layer approximations of Problem 9.7. Compare the momentum fluxes of these profiles. Which is most likely to separate first when encountering an adverse pressure gradient?
- \*9.57 Table 9.1 shows the numerical results obtained from Blasius exact solution of the laminar boundary-layer equations. Plot the velocity distribution (note that from Eq. 9.13 we see that  $\eta \approx 5.0 \frac{y}{\delta}$ ). On the same graph, plot the turbulent velocity distribution given by the  $\frac{1}{7}$ -power expression of Eq. 9.24. Which is most likely to separate first when encountering an adverse pressure gradient? To justify your answer, compare the momentum fluxes of these profiles (the laminar data can be integrated using a numerical method such as Simpson's rule).
- 9.58 Consider the plane-wall diffuser shown in Fig. P9.58. First, assume the fluid is inviscid. Describe the flow pattern, including the pressure distribution, as the diffuser angle  $\phi$  is increased from zero degrees (parallel walls). Second, modify your description to allow for boundary layer effects. Which fluid (inviscid or viscous) will generally have the highest exit pressure?

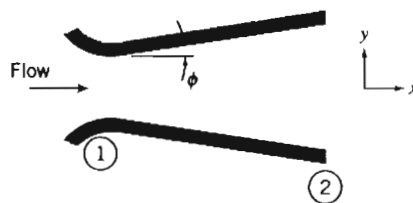


P9.58

- 9.59 For flow over a flat plate with zero pressure gradient, will the shear stress increase, decrease, or remain constant along the plate? Justify your answer. Does the momentum flux increase, decrease, or remain constant as the flow proceeds along the plate? Justify your answer. Compare the behavior of laminar flow and turbulent flow (both from the leading edge) over a flat plate. At a given distance from the leading edge, which flow will have the larger boundary-layer thickness? Does your answer depend on the distance along the plate? How would you justify your answer?
- \*9.60 Boundary-layer separation occurs when the shear stress at the surface becomes zero. Assume a polynomial representation for the laminar boundary layer of the form,  $u/U = a + b\lambda + c\lambda^2 + d\lambda^3$ , where  $\lambda = y/\delta$ . Specify boundary conditions on the velocity profile at separation. Find appropriate constants,  $a$ ,  $b$ ,  $c$ , and  $d$ , for the separation

\* This problem requires material from sections that may be omitted without loss of continuity in the text material.

profile. Calculate the shape factor  $H$  at separation. Plot the profile and compare with the parabolic approximate profile.


- 9.61 Cooling air is supplied through the wide, flat channel shown. For minimum noise and disturbance of the outlet flow, laminar boundary layers must be maintained on the channel walls. Estimate the maximum inlet flow speed at which the outlet flow will be laminar. Assuming parabolic velocity profiles in the laminar boundary layers, evaluate the pressure drop,  $p_1 - p_2$ . Express your answer in inches of water.

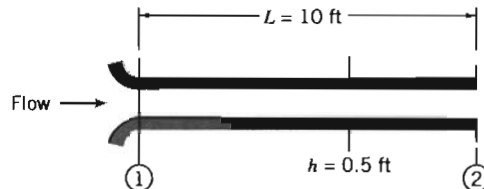


P9.61

- 9.62 A laboratory wind tunnel has a test section that is square in cross section, with inlet width,  $W_1$ , and height,  $H_1$ , each equal to 305 mm. At freestream speed  $U_1 = 24.5$  m/s, measurements show the boundary-layer thickness is  $\delta_1 = 9.75$  mm with a  $\frac{1}{7}$ -power turbulent velocity profile. The pressure gradient in this region is given approximately by  $dp/dx = -0.035$  mm H<sub>2</sub>O/mm. Evaluate the reduction in effective flow area caused by the boundary layers on the tunnel bottom, top, and walls at section ①. Calculate the rate of change of boundary-layer momentum thickness,  $d\theta/dx$ , at section ①. Estimate the momentum thickness at the end of the test section, located  $L = 254$  mm downstream.
- 9.63 The variable-wall concept is proposed to maintain constant boundary-layer thickness in the wind tunnel of Problem 9.62. Beginning with the initial conditions of Problem 9.62, evaluate the freestream velocity distribution needed to maintain constant boundary-layer thickness. Assume constant width,  $W_1$ . Estimate the top-height settings along the test section from  $x = 0$  at section ① to  $x = 254$  mm at section ② downstream.
- 9.64 A vertical stabilizing fin on a land-speed-record car is  $L = 1.65$  m long and  $H = 0.785$  m tall. The automobile is to be driven at the Bonneville Salt Flats in Utah, where the elevation is 1340 m and the summer temperature reaches 50°C. The car speed is 560 km/hr. Evaluate the length Reynolds number of the fin. Estimate the location of transition from laminar to turbulent flow in the boundary layers. Calculate the power required to overcome skin friction drag on the fin.
- 9.65 A jet transport aircraft cruises at 12 km altitude in steady level flight at 820 km/hr. Model the aircraft fuselage as a circular cylinder with diameter  $D = 4$  m and length  $L = 40$  m. Neglecting compressibility effects, estimate the skin friction drag force on the fuselage. Evaluate the power needed to overcome this force.
- 9.66 A towboat for river barges is tested in a towing tank. The towboat model is built at a scale ratio of 1:13.5. Dimensions of the model are overall length 11.1 ft, beam 3.11 ft, and draft 0.62 ft. (The model displacement in fresh water is 1200 lb.) Estimate the average length of wetted surface on the hull. Calculate the skin friction drag force on the prototype at a speed of 8 mph relative to the water.
- 9.67 A flat-bottomed barge, 25 m long and 10 m wide, submerged to a depth of 1.5 m, is to be pushed up a river (the river water is at 15°C). Estimate and plot the power required to overcome skin friction for speeds ranging up to 20 km/hr.
- 9.68 Resistance of a barge is to be determined from model test data. The model is constructed to a scale ratio of 1:13.5, and has length, beam, and draft of 22.0, 4.00, and


0.667 ft, respectively. The test is to simulate performance of the prototype at 8 mph. What must be the model speed in order for the model and prototype to exhibit similar wave drag behavior? Is the boundary layer on the prototype predominantly laminar or turbulent? Does the model boundary layer become turbulent at the comparable point? If not, the model boundary layer could be artificially triggered to turbulent by placing a tripwire across the hull. Where would this be placed? Estimate the skin-friction drag on model and prototype.

- 9.69 You are asked by the Purdue crew to estimate the skin friction drag on their eight-seat racing shell. The hull of the shell may be approximated as half a circular cylinder with 457 mm diameter and 7.32 m length. The speed of the shell through the water is 6.71 m/s. Estimate the location of transition from laminar to turbulent flow in the boundary layer on the hull of the shell. Calculate the thickness of the turbulent boundary layer at the rear of the hull. Determine the total skin friction drag on the hull under the given conditions.
- 9.70 A sheet of plastic material  $\frac{3}{8}$  in. thick, with specific gravity  $SG = 1.5$ , is dropped into a large tank containing water. The sheet is 2 ft by 3 ft. Estimate the terminal speed of the sheet as it falls with (a) the short side vertical and (b) the long side vertical. Assume that the drag is due only to skin friction, and that the boundary layers are turbulent from the leading edge.
- 9.71 A nuclear submarine cruises fully submerged at 27 knots. The hull is approximately a circular cylinder with diameter  $D = 11.0$  m and length  $L = 107$  m. Estimate the percentage of the hull length for which the boundary layer is laminar. Calculate the skin friction drag on the hull and the power consumed.
- 9.72 The 600-seat jet transport aircraft proposed by Airbus Industrie has a fuselage that is 70 m long and 7.5 m in diameter. The aircraft is to operate 14 hr per day, 6 days per week; it will cruise at 257 m/s ( $M = 0.87$ ) at 12 km altitude. The engines consume fuel at the rate of 0.06 kg per hour for each N of thrust produced. Estimate the skin friction drag force on the aircraft fuselage at cruise. Calculate the annual fuel savings for the aircraft if friction drag on the fuselage could be reduced 1 percent by modifying the surface coating.
-  9.73 In Section 7-6 the wave resistance and viscous resistance on a model and prototype ship were discussed. For the prototype,  $L = 409$  ft and  $A = 19,500$  ft<sup>2</sup>. From the data of Figs. 7.2 and 7.3, plot on one graph the wave, viscous, and total resistance (lbf) experienced by the prototype, as a function of speed. Plot a similar graph for the model. Discuss your results. Finally, plot the power (hp) required for the prototype ship to overcome the total resistance.
- 9.74 A supertanker displacement is approximately 600,000 metric tons. This ship has length  $L = 300$  m, beam (width)  $b = 80$  m, and draft (depth)  $D = 25$  m. The ship steams at 14 knots through seawater at 4°C. For these conditions, estimate (a) the thickness of the boundary layer at the stern of the ship, (b) the total skin friction drag acting on the ship, and (c) the power required to overcome the drag force.
- 9.75 As a part of the 1976 bicentennial celebration, an enterprising group hung a giant American flag (59 m high and 112 m wide) from the suspension cables of the Verrazano Narrows Bridge. They apparently were reluctant to make holes in the flag to alleviate the wind force, and hence they effectively had a flat plate normal to the flow. The flag tore loose from its mountings when the wind speed reached 16 km/hr. Estimate the wind force acting on the flag at this wind speed. Should they have been surprised that the flag blew down?
- 9.76 A rotary mixer is constructed from two circular disks as shown. The mixer is rotated at 60 rpm in a large vessel containing a brine solution ( $SG = 1.1$ ). Neglect the drag on the rods and the motion induced in the liquid. Estimate the minimum torque and power required to drive the mixer.

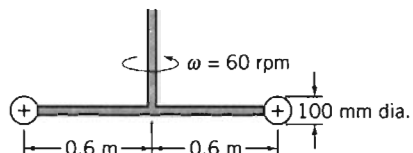

P9.76, 9.77

- 9.77 As a young design engineer you decide to make the rotary mixer look more “cool” by replacing the disks with rings. The rings may have the added benefit of making the mixer mix more effectively. If the mixer absorbs 350 W at 60 rpm, redesign the device. There is a design constraint that the outer diameter of the rings not exceed 125 mm.
- 9.78 The vertical component of the landing speed of a parachute is to be less than 6 m/s. The total mass of chute and jumper is 120 kg. Determine the minimum diameter of the open parachute.
- 9.79 As a young design engineer you are asked to design an emergency braking parachute system for use with a military aircraft of mass 9500 kg. The plane lands at 350 km/hr, and the parachute system alone must slow the airplane to 100 km/hr in less than 1200 m. Find the minimum diameter required for a single parachute, and for three non-interfering parachutes. Plot the airplane speed versus distance and versus time. What is the maximum “g-force” experienced?
- 9.80 An emergency braking parachute system on a military aircraft consists of a large parachute of diameter 6 m. If the airplane mass is 8500 kg, and it lands at 400 km/hr, find the time and distance at which the airplane is slowed to 100 km/hr by the parachute alone. Plot the aircraft speed versus distance and versus time. What is the maximum “g-force” experienced? An engineer proposes that less space would be taken up by replacing the large parachute with three non-interfering parachutes each of diameter 3.75 m. What effect would this have on the time and distance to slow to 100 km/hr?
- 9.81 It has been proposed to use surplus 55 gal oil drums to make simple windmills for underdeveloped countries. Two possible configurations are shown. Estimate which would be better, why, and by how much. The diameter and length of a 55 gal drum are  $D = 24$  in. and  $H = 29$  in.

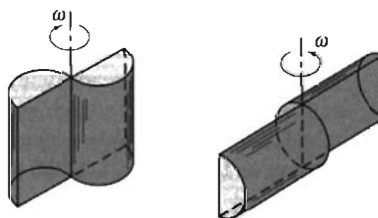

P9.81

- 9.82 Ballistic data obtained on a firing range show that aerodynamic drag reduces the speed of a .44 magnum revolver bullet from 250 m/s to 210 m/s as it travels over a horizontal distance of 150 m. The diameter and mass of the bullet are 11.2 mm and 15.6 g, respectively. Evaluate the average drag coefficient for the bullet.
- 9.83 The resistance to motion of a good bicycle on smooth pavement is nearly all due to aerodynamic drag. Assume that the total mass of rider and bike is  $M = 100$  kg. The frontal area measured from a photograph is  $A = 0.46$  m<sup>2</sup>. Experiments on a hill, where the road grade is 8 percent, show that terminal speed is  $V_t = 15$  m/s. From




these data, the drag coefficient is estimated as  $C_D = 1.2$ . Verify this calculation of drag coefficient. Estimate the distance needed for the bike and rider to decelerate from 15 to 10 m/s while coasting after reaching level road.

- 9.84 A cyclist is able to attain a maximum speed of 30 km/hr on a calm day. The total mass of rider and bike is 65 kg. The rolling resistance of the tires is  $F_R = 7.5$  N, and the drag coefficient and frontal area are  $C_D = 1.2$  and  $A = 0.25$  m<sup>2</sup>. The cyclist bets that today, even though there is a headwind of 10 km/hr, she can maintain a speed of 24 km/hr. She also bets that, cycling with wind support, she can attain a top speed of 40 km/hr. Which, if any, bets does she win?

- 9.85 Consider the cyclist in Problem 9.84. Determine the maximum speeds she is actually able to attain today (with the 10 km/hr wind) cycling into the wind, and cycling with the wind. If she were to replace the tires with high-tech ones that had a rolling resistance of only 3.5 N, determine her maximum speed on a calm day, cycling into the wind, and cycling with the wind. If she in addition attaches an aerodynamic fairing that reduces the drag coefficient to  $C_D = 0.9$ , what will be her new maximum speeds?


- 9.86 Consider the cyclist in Problem 9.84. She is having a bad day, because she has to climb a hill with a 5° slope. What is the speed she is able to attain? What is the maximum speed if there is also a headwind of 10 km/hr? She reaches the top of the hill, and turns around and heads down the hill. If she still pedals as hard as possible, what will be her top speed (when it is calm, and when the wind is present)? What will be her maximum speed if she decides to coast down the hill (with and without the aid of the wind)?

- 9.87 A circular disk is hung in an air stream from a pivoted strut as shown. In a wind-tunnel experiment, performed in air at 50 ft/s with a 1 in. diameter disk,  $\alpha$  was measured at 10°. For these conditions determine the mass of the disk. Assume the drag coefficient for the disk applies when the component of wind speed normal to the disk is used. Assume drag on the strut and friction in the pivot are negligible. Plot a theoretical curve of  $\alpha$  as a function of air speed.

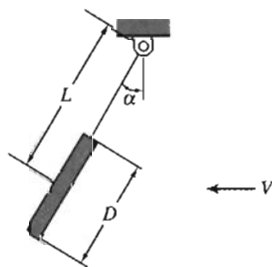

P9.87

- 9.88 An anemometer to measure wind speed is made from four hemispherical cups of 50 mm diameter, as shown. The center of each cup is placed at  $R = 80$  mm from the pivot. Find the theoretical calibration constant  $k$  in the calibration equation  $V = k\omega$ , where  $V$  (km/hr) is the wind speed and  $\omega$  (rpm) is the rotation speed. In your analysis base the torque calculations on the drag generated at the instant when two of the cups are orthogonal, and the other two cups are parallel, and ignore friction in the bearings. Explain why, in the absence of friction, at any given wind speed, the anemometer runs at constant speed rather than accelerating without limit. If the actual anemometer bearing has (constant) friction such that the anemometer needs a minimum wind speed of 1 km/hr to begin rotating, compare the rotation speeds with and without friction for  $V = 10$  km/hr.

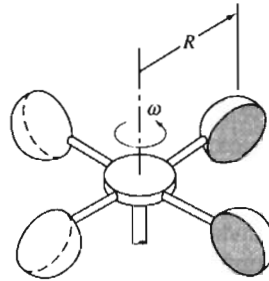

P9.88

- 9.89 A simple but effective anemometer to measure wind speed can be made from a thin plate hinged to deflect in the wind. Consider a thin plate made from brass that is 20 mm high and 10 mm wide. Derive a relationship for wind speed as a function of deflection angle,  $\theta$ . What thickness of brass should be used to give  $\theta = 30^\circ$  at 10 m/s?
- 9.90 An F-4 aircraft is slowed after landing by dual parachutes deployed from the rear. Each parachute is 12 ft in diameter. The F-4 weighs 32,000 lbf and lands at 160 knots. Estimate the time and distance required to decelerate the aircraft to 100 knots, assuming that the brakes are not used and the drag of the aircraft is negligible.
- 9.91 Experimental data [16] suggest that the maximum and minimum drag area ( $C_D A$ ) for a skydiver varies from about  $0.85 \text{ m}^2$  for a prone, spread-eagle position to about  $0.11 \text{ m}^2$  for vertical fall. Estimate the terminal speeds for a 75 kg skydiver in each position. Calculate the time and distance needed for the skydiver to reach 95 percent of terminal speed at an altitude of 3000 m on a standard day.
- 9.92 A vehicle is built to try for the land-speed record at the Bonneville Salt flats, elevation 4400 ft. The engine delivers 500 hp to the rear wheels, and careful streamlining has resulted in a drag coefficient of 0.15, based on a  $15 \text{ ft}^2$  frontal area. Compute the theoretical maximum ground speed of the car (a) in still air and (b) with a 20 mph headwind.
- 9.93 In the early 1970s a typical large American sedan had a frontal area of  $23.4 \text{ ft}^2$  and a drag coefficient of 0.5. Plot a curve of horsepower required to overcome aerodynamic drag versus road speed in standard air. If rolling resistance is 1.5 percent of curb weight (4500 lbf), determine the speed at which the aerodynamic force exceeds frictional resistance. How much power is required to cruise at 55 mph and at 70 mph on level road with no wind?
- 9.94 A tractor-trailer rig has frontal area  $A = 102 \text{ ft}^2$  and drag coefficient  $C_D = 0.9$ . Rolling resistance is 6 lbf per 1000 lbf of vehicle weight. The specific fuel consumption of the diesel engine is 0.34 lbm of fuel per horsepower hour, and drivetrain efficiency is 92 percent. The density of diesel fuel is 6.9 lbm/gal. Estimate the fuel economy of the rig at 55 mph if its gross weight is 72,000 lbf. An air fairing system reduces aerodynamic drag 15 percent. The truck travels 120,000 miles per year. Calculate the fuel saved per year by the roof fairing.
- 9.95 A bus travels at 85 km/hr in standard air. The frontal area of the vehicle is  $7.2 \text{ m}^2$ , and the drag coefficient is 0.95. How much power is required to overcome aerodynamic drag? Estimate the maximum speed of the bus if the engine is rated at 450 hp. A young engineer proposes adding fairings on the front and rear of the bus to reduce the drag coefficient. Tests indicate that this would reduce the drag coefficient to 0.85 without changing the frontal area. What would be the required power at 85 km/hr, and the new top speed? If the fuel cost for the bus is currently \$130/day, how long would the modification take to pay for itself if it costs \$3,000 to install?
- 9.96 A 165 hp sports car of frontal area  $1.75 \text{ m}^2$ , with a drag coefficient of 0.32, requires 12 hp to cruise at 55 mph. At what speed does aerodynamic drag first exceed rolling

resistance? (The rolling resistance is 1% of the car weight, and the car mass is 1250 kg.) Find the drive train efficiency. What is the maximum acceleration at 55 mph? What is the maximum speed? Which redesign will lead to a higher maximum speed: improving the drive train efficiency by 5% from its current value, reducing the drag coefficient to 0.29, or reducing the rolling resistance to 0.93% of the car weight?

- 9.97 A round thin disk of radius  $R$  is oriented perpendicular to a fluid stream. The pressure distributions on the front and back surfaces are measured and presented in the form of pressure coefficients. The data are modeled with the following expressions for the front and back surfaces, respectively:


$$\text{Front Surface} \quad C_p = 1 - \left(\frac{r}{R}\right)^6$$

$$\text{Rear Surface} \quad C_p = -0.42$$

Calculate the drag coefficient for the disk.


- 9.98 Repeat the analysis for the frictionless anemometer of Problem 9.88, except this time base the torque calculations on the more realistic model that the average torque is obtained by integrating, over one revolution, the instantaneous torque generated by each cup (i.e., as the cup's orientation to the wind varies).

- 9.99 An object falls in air down a long vertical chute. The speed of the object is constant at 3 m/s. The flow pattern around the object is shown. The static pressure is uniform across sections ① and ②; pressure is atmospheric at section ①. The effective flow area at section ② is 20 percent of the chute area. Frictional effects between sections ① and ② are negligible. Evaluate the flow speed relative to the object at section ②. Calculate the static pressure at section ②. Determine the mass of the object.

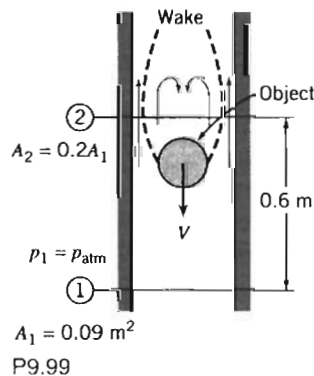

- 9.100 An object of mass  $m$ , with cross-sectional area equal to half the size of the chute, falls down a mail chute. The motion is steady. The wake area is  $\frac{3}{4}$  the size of the chute at its maximum area. Use the assumption of constant pressure in the wake. Apply the continuity, Bernoulli, and momentum equations to develop an expression for terminal speed of the object in terms of its mass and other quantities.
- 9.101 A large paddle wheel is immersed in the current of a river to generate power. Each paddle has area  $A$  and drag coefficient  $C_D$ ; the center of each paddle is located at radius  $R$  from the centerline of the paddle wheel. Assume the equivalent of one paddle is submerged continuously in the flowing stream. Obtain an expression for the drag force on a single paddle in terms of geometric variables, current speed,  $V$ , and linear speed of the paddle center,  $U = R\omega$ . Develop expressions for the torque and power

produced by the paddle wheel. Find the speed at which the paddle wheel should rotate to obtain maximum power output from the wheel in a given current.

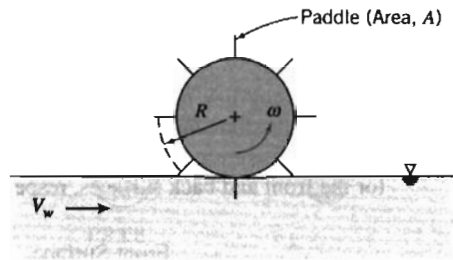

P9.101

- 9.102 A light plane tows an advertising banner over a football stadium on a Saturday afternoon. The banner is 1 m tall and 12 m long. According to Hoerner [16], the drag coefficient based on area ( $Lh$ ) for such a banner is approximated by  $C_D = 0.05 L/h$ , where  $L$  is the banner length and  $h$  is the banner height. Estimate the power required to tow the banner at  $V = 90$  km/hr. Compare with the drag of a rigid flat plate. Why is the drag larger for the banner?
- 9.103 The antenna on a car is 8 mm in diameter and 2 m long. Estimate the bending moment that tends to snap it off if the car is driven at 125 km/hr on a standard day.
- 9.104 Consider small oil droplets ( $SG = 0.85$ ) rising in water. Develop a relation for calculating terminal speed of a droplet (in m/s) as a function of droplet diameter (in mm) assuming Stokes flow. For what range of droplet diameter is Stokes flow a reasonable assumption?
- 9.105 A spherical hydrogen-filled balloon, 0.6 m in diameter, exerts an upward force of 1.3 N on a restraining string when held stationary in standard air with no wind. With a wind speed of 3 m/s, the string holding the balloon makes an angle of  $60^\circ$  with the horizontal. Calculate the drag coefficient of the balloon under these conditions, neglecting the weight of the string.
- 9.106 Standard air is drawn into a low-speed wind tunnel. A 30 mm diameter sphere is mounted on a force balance to measure lift and drag. An oil-filled manometer is used to measure static pressure inside the tunnel; the reading is  $-40$  mm of oil ( $SG = 0.85$ ). Calculate the freestream air speed in the tunnel, the Reynolds number of flow over the sphere, and the drag force on the sphere. Are the boundary layers on the sphere laminar or turbulent? Explain.
- 9.107 A field hockey ball has diameter  $D = 73$  mm and mass  $m = 160$  g. When struck well, it leaves the stick with initial speed  $U_0 = 50$  m/s. The ball is essentially smooth. Estimate the distance traveled in horizontal flight before the speed of the ball is reduced 10 percent by aerodynamic drag.
- 9.108 Compute the terminal speed of a  $\frac{1}{8}$  in. diameter raindrop (assume spherical) in standard air.
- 9.109 A small sphere ( $D = 6$  mm) is observed to fall through castor oil at a terminal speed of 60 mm/s. The temperature is  $20^\circ\text{C}$ . Compute the drag coefficient for the sphere. Determine the density of the sphere. If dropped in water, would the sphere fall slower or faster? Why?
- 9.110 The following curve-fit for the drag coefficient of a smooth sphere as a function of Reynolds number has been proposed by Chow [36]:

$$C_D = 24/Re$$

$$Re \leq 1$$

$$C_D = 24/Re^{0.646}$$

$$1 < Re \leq 400$$


$$C_D = 0.5 \quad 400 < Re \leq 3 \times 10^5$$

$$C_D = 0.000366 Re^{0.4275} \quad 3 \times 10^5 < Re \leq 2 \times 10^6$$

$$C_D = 0.18 \quad Re > 2 \times 10^6$$

Use data from Fig. 9.11 to estimate the magnitude and location of the maximum error between the curve fit and data.

- 9.111 A tennis ball with a mass of 57 g and diameter of 64 mm is dropped in standard sea level air. Calculate the terminal velocity of the ball. Assuming as an approximation that the drag coefficient remains constant at its terminal-velocity value, estimate the time and distance required for the ball to reach 95% of its terminal speed.
- 9.112 Problem 9.87 showed a circular disk hung in an air stream from a cylindrical strut. Assume the strut is  $L = 40$  mm long and  $d = 3$  mm in diameter. Solve Problem 9.87 including the effect of drag on the support.
- 9.113 A water tower consists of a 12 m diameter sphere on top of a vertical tower 30 m tall and 2 m in diameter. Estimate the bending moment exerted on the base of the tower due to the aerodynamic force imposed by a 100 km/hr wind on a standard day. Neglect interference at the joint between the sphere and tower.
- 9.114 A spherical balloon contains helium and ascends through standard air. The mass of the balloon and its payload is 150 kg. Determine the required diameter if it is to ascend at 3 m/s.
- 9.115 A cast-iron "12-pounder" cannon ball rolls off the deck of a ship and falls into the ocean at a location where the depth is 1000 m. Estimate the time that elapses before the cannonball hits the sea bottom.
- 9.116 Consider a cylindrical flag pole of height  $H$ . For constant drag coefficient, evaluate the drag force and bending moment on the pole if wind speed varies as  $u/U = (y/H)^{1/7}$ , where  $y$  is distance measured from the ground. Compare with drag and moment for a uniform wind profile with constant speed  $U$ .
- 9.117 The Stokes drag law for smooth spheres is to be verified experimentally by dropping steel ball bearings in glycerin. Evaluate the largest diameter steel ball for which  $Re < 1$  at terminal speed. Calculate the height of glycerin column needed for a bearing to reach 95 percent of terminal speed.
- 9.118 The plot shows pressure difference versus angle, measured for air flow around a circular cylinder at  $Re = 80,000$ . Use these data to estimate  $C_D$  for this flow. Compare with data from Fig. 9.13. How can you explain the difference?

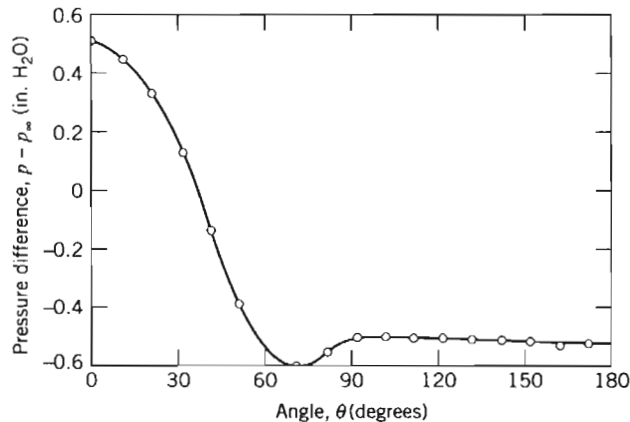

P9.118




- 9.119 The air bubble of Problem 3.10 expands as it rises in water. Find the time it takes for the bubble to reach the surface. Repeat for bubbles of diameter 5 mm and 15 mm. Compute and plot the depth of the bubbles as a function of time.
- 9.120 Consider the tennis ball of Problem 9.111. Use the equations for drag coefficient given in Problem 9.110, and a numerical integration scheme (e.g., Simpson's rule) to compute the time and distance required for the ball to reach 95% of its terminal speed.
- 9.121 Consider the tennis ball of Problem 9.111. Suppose it is hit so that it has an initial upward speed of 50 m/s. Estimate the maximum height of the ball, assuming (a) a constant drag coefficient and (b) using the equations for drag coefficient given in Problem 9.110, and a numerical integration scheme (e.g., a Simpson's rule).
- 9.122 Coastdown tests, performed on a level road on a calm day, can be used to measure aerodynamic drag and rolling resistance coefficients for a full-scale vehicle. Rolling resistance is estimated from  $dV/dt$  measured at low speed, where aerodynamic drag is small. Rolling resistance then is deducted from  $dV/dt$  measured at high speed to determine the aerodynamic drag. The following data were obtained during a test with a vehicle, of weight  $W = 25,000$  lbf and frontal area  $A = 79$  ft<sup>2</sup>:

$V(\text{mph})$	5	55
$\frac{dV}{dt} \left( \frac{\text{mph}}{\text{s}} \right)$	-0.150	-0.475


Estimate the aerodynamic drag coefficient for this vehicle. At what speed does the aerodynamic drag first exceed rolling resistance?

- 9.123 Approximate dimensions of a rented rooftop carrier are shown. Estimate the drag force on the carrier ( $r = 4$  in.) at 65 mph. If the drivetrain efficiency of the vehicle is 0.85 and the brake specific fuel consumption of its engine is 0.46 lbm/(hp · hr), estimate the additional rate of fuel consumption due to the carrier. Compute the effect on fuel economy if the auto achieves 30 mpg without the carrier. The rental company offers you a cheaper, square-edged carrier at a price \$5 less than the current carrier. Estimate the extra cost of using this carrier instead of the round-edged one for a 500-mile trip, assuming fuel is \$1.75 per gallon. Is the cheaper carrier really cheaper?

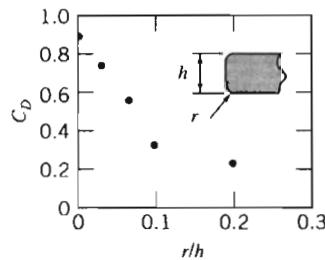




Drag coefficient v. radius ratio [37]

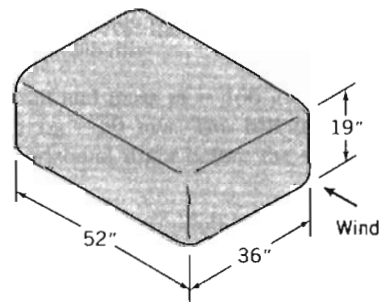P9.123



- 9.124 A spherical sonar transducer with 0.375 m diameter is to be towed in seawater. The transducer must be fully submerged at 31.1 knots. To avoid cavitation, the minimum pressure on the surface of the transducer must be greater than 30 kPa (abs). Calculate the hydrodynamic drag force acting on the transducer at the required towing speed. Estimate the minimum depth to which the transducer must be submerged to avoid cavitation.

- 9.125 While walking across campus one windy day, Floyd Fluids speculates about using an umbrella as a “sail” to propel a bicycle along the sidewalk. Develop an algebraic expression for the speed a bike could reach on level ground with the umbrella “propulsion system.” The frontal area of bike and rider is estimated as  $0.3 \text{ m}^2$ , and the drag coefficient is about 1.2. Assume the rolling resistance is 0.75% of the bike and rider weight; the combined mass is 75 kg. Evaluate the bike speed that could be achieved with an umbrella 1.22 m in diameter in a wind that blows at 24 km/hr. Discuss the practicality of this propulsion system.
- 9.126 Hold a flat sheet of paper parallel to the ground. Drop the sheet. Notice that it falls more slowly than if it were wadded into a ball. Explain.
-  9.127 Motion of a small rocket was analyzed in Example Problem 4.12 assuming negligible aerodynamic drag. This was not realistic at the final calculated speed of 369 m/s. Use Euler’s finite difference method for approximating the first derivatives, in an *Excel* workbook, to solve the equation of motion for the rocket. Plot the rocket speed as a function of time, assuming  $C_D = 0.3$  and a rocket diameter of 700 mm. Compare with the results for  $C_D = 0$ .
- 9.128 Wiffle™ balls made from light plastic with numerous holes are used to practice baseball and golf. Explain the purpose of the holes and why they work. Explain how you could test your hypothesis experimentally.
- 9.129 Towers for television transmitters may be up to 500 m in height. In the winter, ice forms on structural members. When the ice thaws, chunks break off and fall to the ground. How far from the base of a tower would you recommend placing a fence to limit danger to pedestrians from falling ice chunks?
-  9.130 The “shot tower,” used to produce spherical lead shot, has been recognized as a mechanical engineering landmark. In a shot tower, molten lead is dropped from a high tower; as the lead solidifies, surface tension pulls each shot into a spherical shape. Discuss the possibility of increasing the “hang time,” or of using a shorter tower, by dropping molten lead into an air stream that is moving upward. Support your discussion with appropriate calculations.
-  9.131 Design a wind anemometer that uses aerodynamic drag to move or deflect a member or linkage, producing an output that can be related to wind speed, for the range from 1 to 10 m/s in standard air. Consider three alternative design concepts. Select the best concept and prepare a detailed design. Specify the shape, size, and material for each component. Quantify the relation between wind speed and anemometer output. Present results as a theoretical “calibration curve” of anemometer output versus wind speed. Discuss reasons why you rejected the alternative designs and chose your final design concept.
- 9.132 An antique airplane carries 60 m of external guy wires stretched normal to the direction of motion. The wire diameter is 6 mm. Estimate the maximum power saving that results from an optimum streamlining of the wires at a plane speed of 150 km/hr in standard air at sea level.
- 9.133 Why does an arrow have feathers? Explain how feathers affect the arrow’s flight.
- 9.134 Why do modern guns have rifled barrels?
- 9.135 Why is it possible to kick a football farther in a spiral motion than in an end-over-end tumbling motion?
- 9.136 How do cab-mounted wind deflectors for tractor-trailer trucks work? Explain using diagrams of the flow pattern around the truck and pressure distribution on the surface of the truck.
- 9.137 An airplane with an effective lift area of  $25 \text{ m}^2$  is fitted with airfoils of NACA 23012 section (Fig. 9.23). The maximum flap setting that can be used at takeoff corresponds

- to configuration ② in Fig. 9.23. Determine the maximum gross mass possible for the airplane if its takeoff speed is 150 km/hr at sea level (neglect added lift due to ground effect). Find the minimum takeoff speed required for this gross mass if the airplane is instead taking off from Denver (elevation approximately 1.6 km).
- 9.138 An aircraft is in level flight at 250 km/hr through air at standard conditions. The lift coefficient at this speed is 0.4 and the drag coefficient is 0.065. The mass of the aircraft is 850 kg. Calculate the effective lift area for the craft, and the required engine thrust and power.
- 9.139 A high school project involves building a model ultralight airplane. Some of the students propose making an airfoil from a sheet of plastic 1.5 m long by 2 m wide at an angle of attack of  $12^\circ$ . At this airfoil's aspect ratio and angle of attack the lift and drag coefficients are  $C_L = 0.72$  and  $C_D = 0.17$ . If the airplane is designed to fly at 12 m/s, what is the maximum total payload? What will be the required power to maintain flight? Does this proposal seem feasible?
- 9.140 The foils of a surface-piercing hydrofoil watercraft have a total effective area of  $0.7 \text{ m}^2$ . Their coefficients of lift and drag are 1.6 and 0.5, respectively. The total mass of the craft in running trim is 1800 kg. Determine the minimum speed at which the craft is supported by the hydrofoils. At this speed, find the power required to overcome water resistance. If the craft is fitted with a 110 kW engine, estimate its top speed.
- 9.141 A light airplane, with mass  $M = 1000 \text{ kg}$ , has a conventional-section (NACA 23015) wing of planform area  $A = 10 \text{ m}^2$ . Find the angle of attack of the wing for a cruising speed of  $V = 63 \text{ m/s}$ . What is the required power? Find the maximum instantaneous vertical "g force" experienced at cruising speed if the angle of attack is suddenly increased.
- 9.142 The U.S. Air Force F-16 fighter aircraft has wing planform area  $A = 27.9 \text{ m}^2$ ; it can achieve a maximum lift coefficient of  $C_L = 1.6$ . When fully loaded its maximum mass is  $M = 11,600 \text{ kg}$ . The airframe is capable of maneuvers that produce  $9g$  vertical accelerations. However, student pilots are restricted to  $5g$  maneuvers during training. Consider a turn flown in level flight with the aircraft banked. Find the minimum speed in standard air at which the pilot can produce a  $5g$  total acceleration. Calculate the corresponding flight radius. Discuss the effect of altitude on these results.
- 9.143 The teacher of the students designing the airplane of Problem 9.139 is not happy with the idea of using a sheet of plastic for the airfoil. He asks the students to evaluate the expected maximum total payload, and required power to maintain flight, if the sheet of plastic is replaced with a conventional section (NACA 23015) airfoil with the same aspect ratio and angle of attack. What are the results of the analysis?
- 9.144 A light airplane has 10 m effective wingspan and 1.8 m chord. It was originally designed to use a conventional (NACA 23015) airfoil section. With this airfoil, its cruising speed on a standard day near sea level is 225 km/hr. A conversion to a laminar-flow (NACA 66<sub>2</sub>-215) section airfoil is proposed. Determine the cruising speed that could be achieved with the new airfoil section for the same power.
- 9.145 Instead of a new laminar-flow airfoil, a redesign of the light airplane of Problem 9.144 is proposed in which the current conventional airfoil section is replaced with another conventional airfoil section of the same area, but with aspect ratio  $ar = 8$ . Determine the cruising speed that could be achieved with this new airfoil for the same power.
- 9.146 Assume the Boeing 727 aircraft has wings with NACA 23012 section, planform area of  $1600 \text{ ft}^2$ , double-slotted flaps, and effective aspect ratio of 6.5. If the aircraft flies at 150 knots in standard air at 175,000 lb gross weight, estimate the thrust required to maintain level flight.



- 9.147 An airplane with mass of 4500 kg is flown at constant elevation and speed on a circular path at 250 km/hr. The flight circle has a radius of 1000 m. The plane has lifting area of 22 m<sup>2</sup> and is fitted with NACA 23015 section airfoils with effective aspect ratio of 7. Estimate the drag on the aircraft and the power required.
- 9.148 Find the minimum and maximum speeds at which the airplane of Problem 9.147 can fly on a 1000 m radius circular flight path, and estimate the drag on the aircraft and power required at these extremes.
- 9.149 Jim Hall's Chaparral 2F sports-racing cars in the 1960s pioneered use of airfoils mounted above the rear suspension to enhance stability and improve braking performance. The airfoil was effectively 6 ft wide (span) and had a 1 ft chord. Its angle of attack was variable between 0 and minus 12 degrees. Assume lift and drag coefficient data are given by curves (for conventional section) in Fig. 9.17. Consider a car speed of 120 mph on a calm day. For an airfoil deflection of 12° down, calculate (a) the maximum downward force and (b) the maximum increase in deceleration force produced by the airfoil.
- 9.150 The glide angle for unpowered flight is such that lift, drag, and weight are in equilibrium. Show that the glide slope angle,  $\theta$ , is such that  $\tan \theta = C_D/C_L$ . The minimum glide slope occurs at the speed where  $C_L/C_D$  is a maximum. For the conditions of Example Problem 9.8, evaluate the minimum glide slope angle for a Boeing 727-200. How far could this aircraft glide from an initial altitude of 10 km on a standard day?
- 9.151 The hood ornament of a car is decorative, but it increases the aerodynamic drag of the car. Estimate the cost of the increased fuel consumption over the life of a vehicle caused by a typical hood ornament.
- 9.152 Some cars come with a "spoiler," a wing section mounted on the rear of the vehicle that salespeople sometimes claim significantly increases traction of the tires at highway speeds. Investigate the validity of this claim. Are these devices really just cosmetic?
- 9.153 The wing loading of the Gossamer Condor is 0.4 lbf/ft<sup>2</sup> of wing area. Crude measurements showed drag was approximately 6 lbf at 12 mph. The total weight of the Condor was 200 lbf. The effective aspect ratio of the Condor is 17. Estimate the minimum power required to fly the aircraft. Compare to the 0.39 hp that pilot Brian Allen could sustain for 2 hr.
- 9.154 How does a Frisbee™ fly? What causes it to curve left or right? What is the effect of spin on its flight?
- 9.155 An automobile travels down the road with a bicycle attached to a carrier across the rear of the trunk. The bicycle wheels rotate slowly. Explain why and in what direction the rotation occurs.
- 9.156 Roadside signs tend to oscillate in a twisting motion when a strong wind blows. Discuss the phenomena that must occur to cause this behavior.
- 9.157 Air moving over an automobile is accelerated to speeds higher than the travel speed, as shown in Fig. 9.25. This causes changes in interior pressure when windows are opened or closed. Use the data of Fig. 9.25 to estimate the pressure reduction when a window is opened slightly at a speed of 100 km/hr. What is the air speed in the freestream near the window opening?
- 9.158 A class demonstration showed that lift is present when a cylinder rotates in an air stream. A string wrapped around a paper cylinder and pulled causes the cylinder to spin and move forward simultaneously. Assume a cylinder of 2 in. diameter and 10 in. length is given a rotational speed of 300 rpm and a forward speed of 4 ft/s. Estimate the approximate lift force that acts on the cylinder.

- 9.159 Rotating cylinders were proposed as a means of ship propulsion in 1924 by the German engineer, Flettner. The original Flettner rotor ship had two rotors, each about 3 m in diameter and 15 m high, rotating at up to 750 rpm. Calculate the maximum lift and drag forces that act on each rotor in a 50 km/hr wind. Compare the total force to that produced at the optimum  $L/D$  at the same wind speed. Estimate the power needed to spin the rotor at 750 rpm.
- 9.160 A golf ball (diameter  $D = 43$  mm) with circular dimples is hit from a sand trap at 20 m/s with backspin of 2000 rpm. The mass of the ball is 48 g. Evaluate the lift and drag forces acting on the ball. Express your results as fractions of the weight of the ball.
- 9.161 American and British golf balls have slightly different diameters but the same mass (see Problems 1.10 and 1.13). Assume a professional golfer hits each type of ball from a tee at 85 m/s with backspin of 9000 rpm. Evaluate the lift and drag forces on each ball. Express your answers as fractions of the weight of each ball. Estimate the radius of curvature of the trajectory of each ball. Which ball should have the longer range for these conditions?
- 9.162 A baseball pitcher throws a ball at 90 km/hr. Home plate is 18 m away from the pitcher's mound. What spin should be placed on the ball for maximum horizontal deviation from a straight path? (A baseball has  $m = 145$  g and  $D = 74$  mm.) How far will the ball deviate from a straight line?
- 9.163 A soccer player takes a free kick. Over a distance of 15 yd, the ball veers to the right by about  $3\frac{1}{2}$  ft. Estimate the spin the player's kick put on the ball if its speed is 100 ft/s. The ball weighs 15 oz and has a diameter of 8.75 in.

---

## Chapter 10

# FLUID MACHINERY

Humans have sought to control nature since antiquity. Early humans carried water by the bucket; as larger groups formed, this process was mechanized. The first fluid machines developed as bucket wheels and screw pumps to lift water. The Romans introduced paddle wheels around 70 B.C. to obtain energy from streams [1]. Later, windmills were developed to harness wind power, but the low power density of the wind limited output to a few hundred horsepower. Development of water wheels made it possible to extract thousands of horsepower at a single site.

Today we take many fluid machines for granted. On a typical day we draw pressurized water from the tap, use a blower to dry our hair, drive a car in which fluid machines operate the lubrication, cooling, and power steering systems, and work in a comfortable environment provided by air circulation. The list could be extended indefinitely.

A fluid machine is a device that either performs work on, or extracts work (or power) from, a fluid. As you can imagine, this is a very large field of study, so we will limit ourselves mostly to incompressible flows. Within incompressible flows, we will focus on such common machines as pumps and fans that perform work on a fluid, and machines such as water turbines used for extracting work or power from a fluid.

First the terminology of the field is introduced and machines are classified by operating principle and physical characteristics. Rather than attempt a treatment of the entire field, we focus on machines in which energy transfer to or from the fluid is through a rotating element. Basic equations are reviewed and then simplified to forms useful for analysis of fluid machines. Performance characteristics of typical machines are considered. Examples are given of pump and turbine applications in typical systems. Problems ranging from simple applications to system design conclude the chapter.

---

### 10-1 INTRODUCTION AND CLASSIFICATION OF FLUID MACHINES

Fluid machines may be broadly classified as either *positive displacement* or *dynamic*. In positive-displacement machines, energy transfer is accomplished by volume changes that occur due to movement of the boundary in which the fluid is confined. Fluid-handling devices that direct the flow with blades or vanes attached to a rotating member are termed *turbomachines*. In contrast to positive-displacement machinery, there is no closed volume in a turbomachine. All work interactions in a turbomachine result from dynamic effects of the rotor on the fluid stream. The emphasis in this chapter is on dynamic machines.

A further distinction among types of turbomachines is based on the geometry of the flow path. In *radial-flow* machines, the flow path is essentially radial, with significant changes in radius from inlet to outlet. (Such machines sometimes are

called *centrifugal* machines.) In *axial-flow* machines, the flow path is nearly parallel to the machine centerline, and the radius of the flow path does not vary significantly. In *mixed-flow* machines the flow-path radius changes only moderately. Schematic diagrams of typical turbomachines are shown in Figs. 10.1 through 10.3.

### Machines for Doing Work on a Fluid

Machines that add energy to a fluid by performing work on it are called *pumps* when the flow is liquid or slurry, and *fans*, *blowers*, or *compressors* for gas- or vapor-handling units, depending on pressure rise. Fans usually have small pressure rise (less than 1 inch of water) and blowers have moderate pressure rise (perhaps 1 inch of mercury); pumps and compressors may have very high pressure rises. Current industrial systems operate at pressures up to 150,000 psi ( $10^4$  atmospheres).

The rotating element of a pump is frequently called the *impeller*; the impeller is contained within the pump *housing* or *casing*. The shaft that transfers mechanical energy to the impeller usually must penetrate the casing; a system of bearings and seals is required to complete the mechanical design of the unit.

Three typical centrifugal machines are shown schematically in Fig. 10.1. Flow enters each machine nearly axially at small radius through the *eye* of the rotor, diagram (a), at radius  $r_1$ . Flow is turned and leaves through the impeller discharge at radius  $r_2$ , where the width is  $b_2$ . Flow leaving the impeller is collected in the *scroll* or *volute*, which gradually increases in area as it nears the outlet of the machine, diagram (b). The impeller usually has vanes; it may be *shrouded* (enclosed) as shown in diagram (a), or *open* as shown in diagram (c). The impeller vanes may be relatively straight, or they may curve to become non-radial at the outlet. Diagram (c) shows that there may be a diffuser between the impeller discharge and the volute. This *radial* diffuser may be *vaneless* or it may have vanes.

Typical axial-flow and mixed-flow turbomachines are shown schematically in Fig. 10.2. Diagram (a) shows a typical axial-flow compressor stage.<sup>1</sup> Flow enters nearly parallel to the rotor axis and maintains nearly the same radius through the stage. The mixed-flow pump in diagram (b) shows the flow being turned outward and moving to larger radius as it passes through the stage.

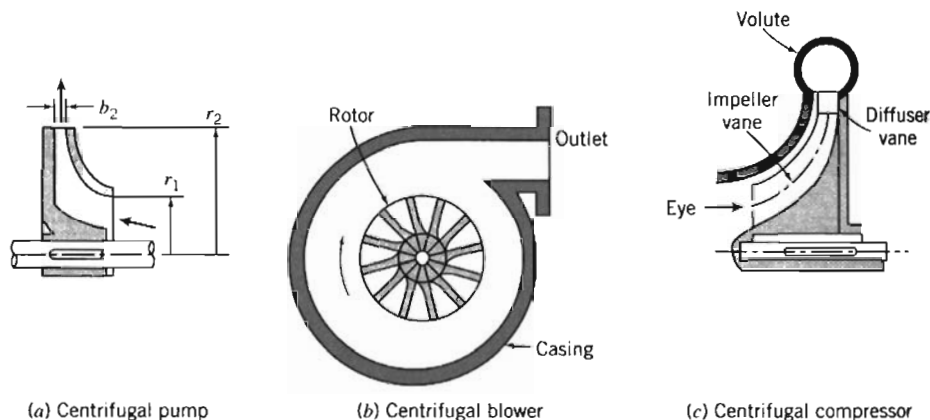


Fig. 10.1 Schematic diagrams of typical centrifugal-flow turbomachines, adapted from [2].

<sup>1</sup> The combination of a stationary blade row and a moving blade row is called a *stage*. (The stationary blades may be guide vanes placed before the rotor; more commonly they are *antiswirl vanes* placed after the rotor.)

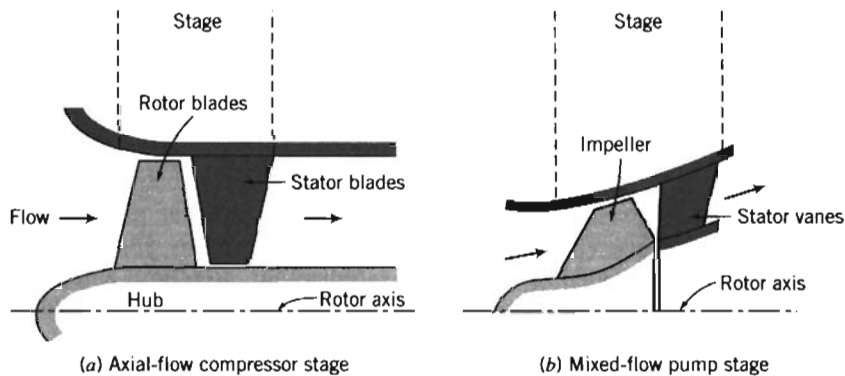


Fig. 10.2 Schematic diagrams of typical axial-flow and mixed-flow turbomachines, adapted from [2].

The pressure rise that can be achieved efficiently in a single stage is limited, depending on the type of machine. However, stages may be combined to produce multistage machines, virtually without limit on pressure rise. Axial-flow compressors, as typically found in turbojet engines, are examples of multi-stage compressors. Centrifugal pumps frequently are built with multiple stages in a single housing.

Fans, blowers, compressors, and pumps are found in many sizes and types, ranging from simple household units to complex industrial units of large capacity. Torque and power requirements for idealized pumps and turboblowers can be analyzed by applying the angular-momentum principle using a suitable control volume.

Propellers are essentially axial-flow devices that operate without an outer housing. Propellers may be designed to operate in gases or liquids. As you might expect, propellers designed for these very different applications are quite distinct. Marine propellers tend to have wide blades compared with their radii, giving high *solidity*. Aircraft propellers tend to have long, thin blades with relatively low solidity.

### Machines for Extracting Work (Power) from a Fluid

Machines that extract energy from a fluid in the form of work (or power) are called *turbines*. The assembly of *vanes*, *blades*, or *buckets* attached to the turbine shaft is called the *rotor*, *wheel*, or *runner*. In *hydraulic turbines* the working fluid is water, so the flow is incompressible. In *gas turbines* and *steam turbines* the density of the working fluid may change significantly.

The two most general classifications of turbines are *impulse* and *reaction* turbines. Impulse turbines are driven by one or more high-speed free jets. Each jet is accelerated in a nozzle external to the turbine wheel. If friction and gravity are neglected, neither the fluid pressure nor speed relative to the runner changes as the fluid passes over the turbine buckets. Thus for an impulse turbine, the fluid acceleration and accompanying pressure drop take place in nozzles external to the blades and the runner does not flow full of fluid.

Several typical hydraulic turbines are shown schematically in Fig. 10.3. Diagram (a) shows an impulse turbine driven by a single jet, which lies in the plane of the turbine runner. Water from the jet strikes each bucket in succession, is turned, and leaves the bucket with relative velocity nearly opposite to that with which it entered the bucket. Spent water falls into the *tailrace* (not shown).

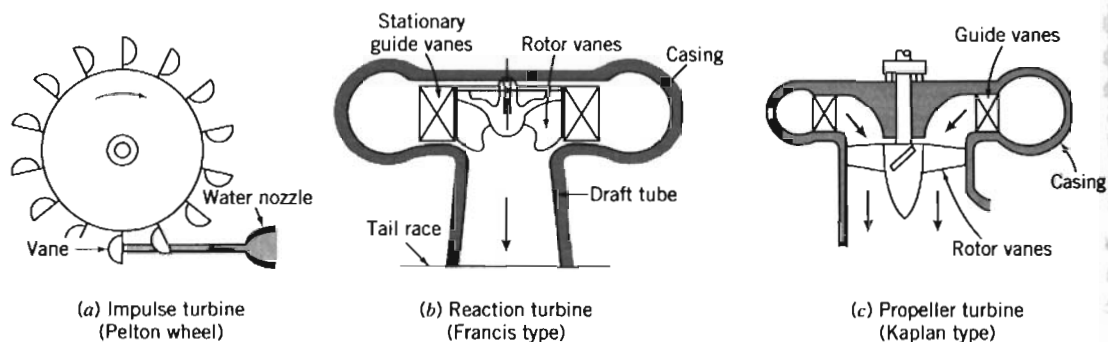


Fig. 10.3 Schematic diagrams of typical hydraulic turbines, adapted from [2].

In reaction turbines, part of the pressure change takes place externally and part takes place within the moving blades. External acceleration occurs and the flow is turned to enter the runner in the proper direction as it passes through nozzles or stationary blades called *guide vanes* or *wicket gates*. Additional fluid acceleration relative to the rotor occurs within the moving blades, so both the relative velocity and the pressure of the stream change across the runner. Because reaction turbines flow full of fluid, they generally can produce more power for a given overall size than impulse turbines.

A reaction turbine of the Francis type is shown in Fig. 10.3b. Incoming water flows circumferentially through the turbine casing. It enters the periphery of the stationary guide vanes and flows toward the runner. Water enters the runner nearly radially and is turned downward to leave nearly axially; the flow pattern may be thought of as a centrifugal pump in reverse. Water leaving the runner flows through a diffuser known as a *draft tube* before entering the tailrace.

Diagram (c) shows a propeller turbine of the Kaplan type. The water entry is similar to that in the Francis turbine just described. However, it is turned to flow nearly axially before encountering the turbine runner. Flow leaving the runner may pass through a draft tube.

Thus turbines range from simple windmills to complex gas and steam turbines with many stages of carefully designed blading. These devices also can be analyzed in idealized form by applying the angular-momentum principle.

Dimensionless parameters such as *specific speed*, *flow coefficient*, *torque coefficient*, *power coefficient*, and *pressure ratio* frequently are used to characterize the performance of turbomachines. These parameters were introduced in Chapter 7; their development and use will be considered in more detail later in this chapter.

## 10-2 SCOPE OF COVERAGE

According to Japikse [3], "Turbomachinery represents a \$400 billion market (possibly much more) with enormous worldwide growth at this time. It is estimated that industrial centrifugal pumps alone consume 5% of all the energy produced in the USA." Therefore, proper design, construction, selection, and application of pumps and compressors are economically significant.

Design of actual machines involves diverse technical knowledge, including fluid mechanics, materials, bearings, seals, and vibrations. These topics are covered in numerous specialized texts. Our objective here is to present only enough detail to

illustrate the analytical basis of fluid flow design and to discuss briefly the limitations on results obtained from simple analytical models. For more detailed design information consult the references.

Applications or "system" engineering requires a wealth of experience. Much of this experience must be gained by working with other engineers in the field. Our coverage is not intended to be comprehensive; instead we discuss only the most important considerations for successful system application of pumps, compressors, and turbines.

In this chapter our treatment deals almost exclusively with incompressible flows. Even with this limitation, the material presented in Chapter 10 is intrinsically more difficult than the fundamental topics considered in earlier chapters, because so much of it involves integration of empirical information with theory. Consequently, no presentation of fluid machinery can be as clear or straightforward as the earlier chapters dealing with fundamentals.

## 10-3 TURBOMACHINERY ANALYSIS

The analysis method used for turbomachinery is chosen according to the information sought. If overall information on flow rate, pressure change, torque, and power is desired, then a finite-control-volume analysis may be used. If detailed information is desired about blade angles or velocity profiles, then individual blade elements must be analyzed using an infinitesimal control volume or other detailed procedure. We consider only idealized flow processes in this book, so we concentrate on the approach using the finite control volume, applying the angular-momentum principle. The analysis that follows applies to machines both for doing work on, and extracting work from, a fluid flow.

### The Angular-Momentum Principle

The angular-momentum principle was applied to finite control volumes in Chapter 4. The result was Eq. 4.46,

$$\vec{r} \times \vec{F}_S + \int_{CV} \vec{r} \times \vec{g} \rho \, dV + \dot{T}_{\text{shaft}} = \frac{\partial}{\partial t} \int_{CV} \vec{r} \times \vec{V} \rho \, dV + \int_{CS} \vec{r} \times \vec{V} \rho \vec{v} \cdot d\vec{A} \quad (4.46)$$

Equation 4.46 states that the moment of surface forces and body forces, plus the applied torque, lead to a change in the angular momentum of the flow. (The surface forces are due to friction and pressure, the body force is due to gravity, the applied torque could be positive or negative, and the angular-momentum change can arise as a change in angular momentum within the control volume, or flux of angular momentum across the control surface.)

In the next section Eq. 4.46 is simplified for analysis of turbomachinery.

### Euler Turbomachine Equation

For turbomachinery analysis, it is convenient to choose a fixed control volume enclosing the rotor to evaluate shaft torque. Because we are looking at control volumes for which we expect large shaft torques, as a first approximation torques due to surface



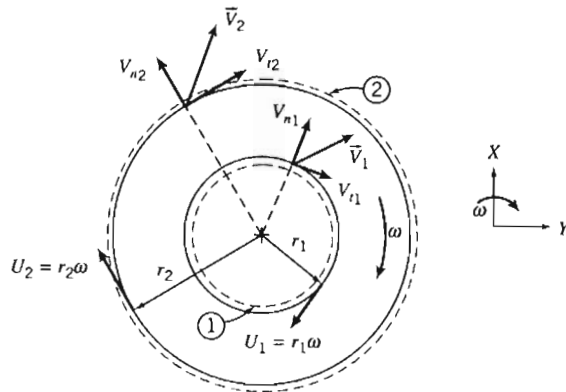


Fig. 10.4 Finite control volume and absolute velocity components for analysis of angular momentum.

forces may be ignored. The body force may be neglected by symmetry. Then, for steady flow, Eq. 4.46 becomes

$$\vec{T}_{\text{shaft}} = \int_{\text{CS}} \vec{r} \times \vec{V} \rho \vec{V} \cdot d\vec{A} \quad (10.1a)$$

Equation 10.1a states: For a turbomachine with work input, the torque *required* causes a change in the fluid angular momentum; for a turbomachine with work output, the torque *produced* is due to the change in fluid angular momentum. Let us write this equation in scalar form and illustrate its application to axial- and radial-flow machines.

As shown in Fig. 10.4, we select a *fixed* control volume enclosing a generalized turbomachine rotor. The fixed coordinate system is chosen with the  $z$  axis aligned with the axis of rotation of the machine. The idealized velocity components are shown in the figure. The fluid enters the rotor at radial location  $r_1$ , with uniform absolute velocity  $\vec{V}_1$ ; the fluid leaves the rotor at radial location  $r_2$ , with uniform absolute velocity  $\vec{V}_2$ .

The integrand on the right side of Eq. 10.1a is the product of  $\vec{r} \times \vec{V}$  with the mass flow rate at each section. For uniform flow into the rotor at section (1), and out of the rotor at section (2), Eq. 10.1a becomes

$$T_{\text{shaft}} \hat{k} = (r_2 V_{t2} - r_1 V_{t1}) \dot{m} \hat{k} \quad (10.1b)$$

or in scalar form,

$$T_{\text{shaft}} = (r_2 V_{t2} - r_1 V_{t1}) \dot{m} \quad (10.1c)$$

Equation 10.1c is the basic relationship between torque and angular momentum for all turbomachines. It often is called the *Euler turbomachine equation*.

Each velocity that appears in Eq. 10.1c is the tangential component of the absolute velocity of the fluid crossing the control surface. The tangential velocities are chosen positive when in the same direction as the blade speed,  $U$ . This sign convention gives  $T_{\text{shaft}} > 0$  for pumps, fans, blowers, and compressors and  $T_{\text{shaft}} < 0$  for turbines.

The rate of work done on a turbomachine rotor (the *mechanical power*,  $\dot{W}_m$ ) is given by the dot product of rotor angular velocity,  $\vec{\omega}$ , and applied torque,  $\vec{T}_{\text{shaft}}$ . Using Eq. 10.1b, we obtain

$$\dot{W}_m = \vec{\omega} \cdot \vec{T}_{\text{shaft}} = \omega \hat{k} \cdot T_{\text{shaft}} \hat{k} = \omega \hat{k} \cdot (r_2 V_{t2} - r_1 V_{t1}) \dot{m} \hat{k}$$



or

$$\dot{W}_m = \omega T_{\text{shaft}} = \omega(r_2 V_{t_2} - r_1 V_{t_1})\dot{m} \quad (10.2a)$$

According to Eq. 10.2a, the angular momentum of the fluid is increased by the addition of shaft work. For a pump,  $\dot{W}_m > 0$  and the angular momentum of the fluid must increase. For a turbine,  $\dot{W}_m < 0$  and the angular momentum of the fluid must decrease.

Equation 10.2a may be written in two other useful forms. Introducing  $U = r\omega$ , where  $U$  is the tangential speed of the rotor at radius  $r$ , we have

$$\dot{W}_m = (U_2 V_{t_2} - U_1 V_{t_1})\dot{m} \quad (10.2b)$$

Dividing Eq. 10.2b by  $\dot{m}g$ , we obtain a quantity with the dimensions of length, which may be viewed as the theoretical *head* added to the flow.<sup>2</sup>

$$H = \frac{\dot{W}_m}{\dot{m}g} = \frac{1}{g}(U_2 V_{t_2} - U_1 V_{t_1}) \quad (10.2c)$$

Equations 10.1 and 10.2 are simplified forms of the angular-momentum equation for a control volume. They all are written for a fixed control volume under the assumptions of steady, uniform flow at each section. The equations show that only the difference in the product  $rV_t$  or  $UV_t$ , between the outlet and inlet sections, is important in determining the torque applied to the rotor or the mechanical power. Although  $r_2 > r_1$  in Fig. 10.4, no restriction has been made on geometry; the fluid may enter and leave at the same or different radii.

### Velocity Diagrams

The equations that we have derived also suggest the importance of clearly defining the velocity components of the fluid and rotor at the inlet and outlet sections. For this purpose, it is useful to develop *velocity diagrams* (frequently called *velocity polygons*) for the inlet and outlet flows. Figure 10.5 shows the velocity diagrams and introduces the notation for blade and flow angles.

Machines are designed such that at design condition the fluid moves smoothly (without disturbances) through the blades. In the idealized situation at the design speed, flow relative to the rotor is assumed to enter and leave tangent to the blade profile at each section. (This idealized inlet condition is sometimes called *shockless* entry flow.) At speeds other than design speed (and sometimes in reality, even at design speed!), the fluid may impact the blades at inlet, exit at an angle relative to the blade, or may have significant flow separation, leading to machine inefficiency. Figure 10.5 is representative of a typical radial flow machine. We assume the fluid is moving without major flow disturbances through the machine, as shown in Fig. 10.5a, with blade inlet and exit angles  $\beta_1$  and  $\beta_2$ , respectively, relative to the circumferential direction. Note that although angles  $\beta_1$  and  $\beta_2$  are both less than  $90^\circ$  in Fig. 10.5, in general they can be less than, equal to, or greater than  $90^\circ$ , and the analysis that follows applies to all of these possibilities.

The runner speed at inlet is  $U_1 = \omega r_1$ , and therefore it is specified by the impeller geometry and the machine operating speed. The absolute fluid velocity is the vector sum of the impeller velocity and the flow velocity relative to the blade. The absolute inlet velocity  $V_1$  may be determined graphically, as shown in Fig. 10.5b.

<sup>2</sup> Since  $\dot{W}_m$  has dimensions of energy per unit time and  $\dot{m}g$  is weight flow per unit time, *head*,  $H$ , is actually energy per unit weight of flowing fluid.

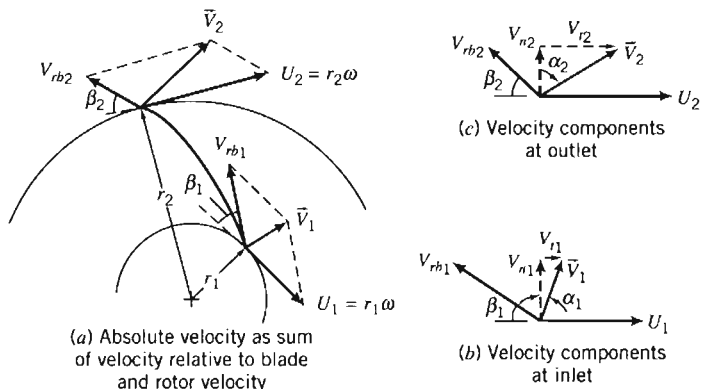


Fig. 10.5 Geometry and notation used to develop velocity diagrams for typical radial-flow machines.

The angle of the absolute fluid velocity,  $\alpha_1$ , is measured from the direction normal to the flow area, as shown.<sup>3</sup> The tangential component of the absolute velocity,  $V_{t1}$ , and the component normal to the flow area,  $V_{n1}$ , are also shown in Fig. 10.5b. Note from the geometry of the figure that at each section the normal component of the absolute velocity,  $V_n$ , and the normal component of the velocity relative to the blade,  $V_{rn}$ , are equal (the blade has no normal velocity).

When the inlet flow is swirl-free, the absolute inlet velocity will be purely radial. The inlet blade angle may be specified for the design flow rate and pump speed to provide shockless entry flow. Swirl, which may be present in the inlet flow, or introduced by inlet guide vanes, causes the absolute inlet flow direction to differ from radial.

The velocity diagram is constructed similarly at the outlet section. The runner speed at the outlet is  $U_2 = \omega r_2$ , which again is known from the geometry and operating speed of the turbomachine. The relative flow is assumed to leave the impeller tangent to the blades, as shown in Fig. 10.5c. This idealizing assumption of perfect guidance fixes the direction of the relative outlet flow at design conditions.

For a centrifugal pump or reaction turbine, the velocity relative to the blade generally changes in magnitude from inlet to outlet. The continuity equation must be applied, using the impeller geometry, to determine the normal component of velocity at each section. The normal component, together with the outlet blade angle, is sufficient to establish the velocity relative to the blade at the impeller outlet for a radial-flow machine. The velocity diagram is completed by the vector addition of the velocity relative to the blade and the wheel velocity, as shown in Fig. 10.5c.

The inlet and outlet velocity diagrams provide all the information needed to calculate the ideal torque or power, absorbed or delivered by the impeller, using Eqs. 10.1 or 10.2. The results represent the performance of a turbomachine under idealized conditions at the design operating point, since we have assumed:

- ✓ Negligible torque due to surface forces (viscous and pressure).
- ✓ Inlet and exit flow tangent to blades.
- ✓ Uniform flow at inlet and exit.

An actual turbomachine is not likely to conform to all of these assumptions, so the results of our analysis represent the upper limit of the performance of actual machines.

<sup>3</sup> The notation varies from book to book, so be careful when comparing references.

Performance of an actual machine may be estimated using the same basic approach, but accounting for variations in flow properties across the blade span at the inlet and outlet sections, and for deviations between the blade angles and the flow directions. Such detailed calculations are beyond the scope of this book.

The alternative is to measure the overall performance of a machine on a suitable test stand. Manufacturers' data are examples of measured performance information.

In Example Problem 10.1 the angular-momentum principle is applied to an idealized centrifugal pump. In Example Problem 10.2 velocity diagrams are utilized in the analysis of flow through an axial-flow fan.

### EXAMPLE 10.1 Idealized Centrifugal Pump

A centrifugal pump is used to pump 150 gpm of water. The water enters the impeller axially through a 1.25 in. diameter inlet. The inlet velocity is axial and uniform. The impeller outlet diameter is 4 in. Flow leaves the impeller at 10 ft/s relative to the blades, which are radial at the exit. The impeller speed is 3450 rpm. Determine the impeller exit width,  $b_2$ , the torque input, and the power predicted by the Euler turbine equation.


#### EXAMPLE PROBLEM 10.1

**GIVEN:** Flow as shown in the figure:  $V_{rb_2} = 10$  ft/s,  $Q = 150$  gpm.

**FIND:** (a)  $b_2$ .  
(b)  $T_{\text{shaft}}$ .  
(c)  $\dot{W}_m$ .

**SOLUTION:**

Apply the angular-momentum equation to a fixed control volume.

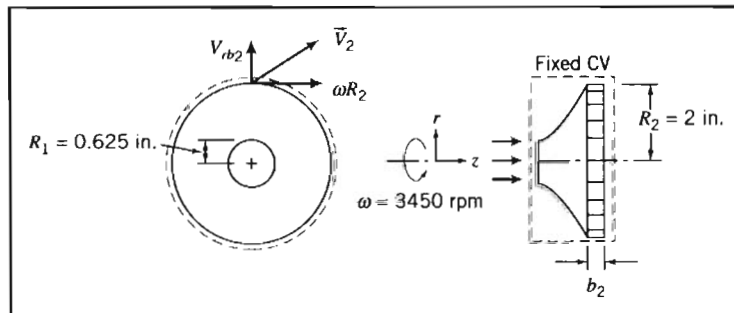

Governing equations:

$$\vec{T}_{\text{shaft}} = \int_{\text{CS}} \vec{r} \times \vec{V} \rho \vec{V} \cdot d\vec{A} \quad (10.1a)$$

$$= 0(2)$$

$$\frac{d}{dt} \int_{\text{CV}} \rho dV + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

- Assumptions: (1) Neglect torques due to body and surface forces.  
(2) Steady flow.  
(3) Uniform flow at inlet and outlet sections.  
(4) Incompressible flow.

Then, from continuity,

$$\left(-\rho V_1 \pi R_1^2\right) + \left(\rho V_{rb_2} 2\pi R_2 b_2\right) = 0$$

or

$$\dot{m} = \rho Q = \rho V_{rb_2} 2\pi R_2 b_2$$

so that

$$b_2 = \frac{Q}{2\pi R_2 V_{rb_2}} = \frac{1}{2\pi} \times \frac{150 \text{ gal}}{\text{min}} \times \frac{1}{2 \text{ in.}} \times \frac{\text{s}}{10 \text{ ft}} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{12 \text{ in.}}{\text{ft}}$$

$$b_2 = 0.0319 \text{ ft or } 0.383 \text{ in.} \quad \leftarrow b_2$$

The angular-momentum equation, Eq. 10.1a, simplifies to Eq. 10.1b for uniform flow, or in scalar form to Eq. 10.1c,

$$T_{\text{shaft}} = (r_2 V_2 - r_1 V_1) \dot{m} \quad (10.1c)$$

For an axial inlet the tangential velocity  $V_1 = 0$ , and for radial exit blades  $V_2 = R_2 \omega$ , so Eq. 10.1c reduces to

$$T_{\text{shaft}} = R_2^2 \omega \dot{m} = \omega R_2^2 \rho Q$$

where we have used continuity ( $\dot{m} = \rho Q$ ).

Thus,

$$T_{\text{shaft}} = \omega R_2^2 \rho Q = \frac{3450 \text{ rev}}{\text{min}} \times (2)^2 \text{ in.}^2 \times \frac{1.94 \text{ slug}}{\text{ft}^3} \times \frac{150 \text{ gal}}{\text{min}}$$

$$\times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}^2}{3600 \text{ s}^2} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{ft}^2}{144 \text{ in.}^2} \times \frac{\text{lb} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}}$$

$$T_{\text{shaft}} = 6.51 \text{ ft} \cdot \text{lb} \cdot \text{ft} \quad \leftarrow T_{\text{shaft}}$$

and

$$\dot{W}_m = \omega T_{\text{shaft}} = \frac{3450 \text{ rev}}{\text{min}} \times 6.51 \text{ ft} \cdot \text{lb} \cdot \text{ft} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lb} \cdot \text{ft}}$$

$$\dot{W}_m = 4.28 \text{ hp} \quad \leftarrow \dot{W}_m$$

This problem illustrates the application of the angular-momentum equation for a fixed control volume to a centrifugal flow machine.


### EXAMPLE 10.2 Idealized Axial-Flow Fan

An axial-flow fan operates at 1200 rpm. The blade tip diameter is 1.1 m and the hub diameter is 0.8 m. The inlet and exit angles at the mean blade radius are  $30^\circ$  and  $60^\circ$ , respectively. Inlet guide vanes give the absolute flow entering the first stage an angle of  $30^\circ$ . The fluid is air at standard conditions and the flow may be considered incompressible. There is no change in axial component of velocity across the rotor. Assume the relative flow enters and leaves the rotor at the geometric blade angles and use properties at the mean blade radius for calculations. For these idealized conditions, draw the inlet velocity diagram, determine the volume flow rate of the fan, and sketch the rotor blade shapes. Using the data so obtained, draw the outlet velocity diagram and calculate the minimum torque and power needed to drive the fan.

**EXAMPLE PROBLEM 10.2**
**GIVEN:** Flow through rotor of axial-flow fan.

- Tip diameter: 1.1 m  
 Hub diameter: 0.8 m  
 Operating speed: 1200 rpm  
 Absolute inlet angle:  $30^\circ$   
 Blade inlet angle:  $30^\circ$   
 Blade outlet angle:  $60^\circ$

Fluid is air at standard conditions. Use properties at mean diameter of blades.

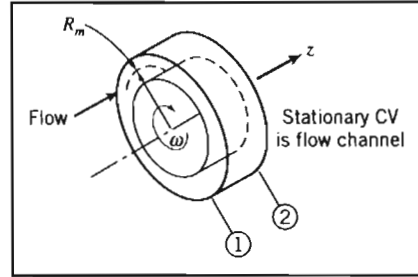

- FIND:** (a) Inlet velocity diagram. (d) Outlet velocity diagram.  
 (b) Volume flow rate. (e) Rotor torque.  
 (c) Rotor blade shape. (f) Power required.

**SOLUTION:**

Apply the angular-momentum equation to a fixed control volume.


Governing equations: 
$$\vec{T}_{\text{shaft}} = \int_{\text{CS}} \vec{r} \times \vec{V} \rho \vec{V} \cdot d\vec{A} \quad (10.1a)$$

$$= 0 \quad (2)$$

$$\frac{\partial}{\partial t} \int_{\text{CV}} \rho dV + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$


- Assumptions: (1) Neglect torques due to body or surface forces.  
 (2) Steady flow.  
 (3) Uniform flow at inlet and outlet sections.  
 (4) Incompressible flow.  
 (5) No change in axial flow area.  
 (6) Use mean radius of rotor blades,  $R_m$ .

The blade shapes are

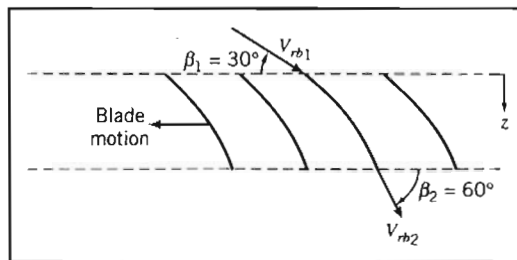

(Note that for an axial-flow machine the normal velocity components are parallel to the axis, not normal to the circumferential surface!)

The inlet velocity diagram is

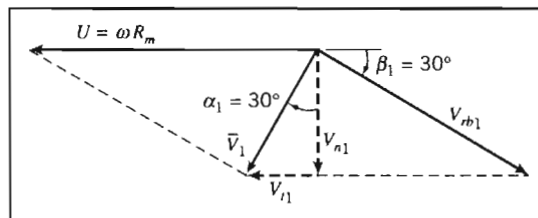


From continuity

$$(-\rho V_{n1} A_1) + (\rho V_{n2} A_2) = 0$$

or

$$Q = V_{n1} A_1 = V_{n2} A_2$$

Since  $A_1 = A_2$ , then  $V_{n1} = V_{n2}$ , and the outlet velocity diagram is as shown in the following figure:

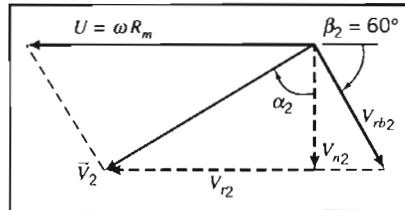

At the mean blade radius,

$$U = R_m \omega = \frac{D_m}{2} \omega$$

$$U = \frac{1}{2} (1.1 + 0.8) \text{ m} \times 1200 \frac{\text{rev}}{\text{min}} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}}{60 \text{ s}} = 59.7 \text{ m/s}$$

From the geometry of the inlet velocity diagram,

$$U = V_{n1} (\tan \alpha_1 + \cot \beta_1)$$

so that

$$V_{n1} = \frac{U}{\tan \alpha_1 + \cot \beta_1} = \frac{59.7 \text{ m}}{\text{s}} \times \frac{1}{\tan 30^\circ + \cot 30^\circ} = 25.9 \text{ m/s}$$

Consequently,

$$V_1 = \frac{V_{n1}}{\cos \alpha_1} = \frac{25.9 \text{ m}}{\text{s}} \times \frac{1}{\cos 30^\circ} = 29.9 \text{ m/s}$$

$$V_{t1} = V_1 \sin \alpha_1 = \frac{29.9 \text{ m}}{\text{s}} \times \sin 30^\circ = 15.0 \text{ m/s}$$

and

$$V_{rb1} = \frac{V_{n1}}{\sin \beta_1} = \frac{25.9 \text{ m}}{\text{s}} \times \frac{1}{\sin 30^\circ} = 51.8 \text{ m/s}$$

The volume flow rate is

$$Q = V_{n1} A_1 = \frac{\pi}{4} V_{n1} (D_t^2 - D_h^2) = \frac{\pi}{4} \times \frac{25.9 \text{ m}}{\text{s}} [(1.1)^2 - (0.8)^2] \text{ m}^2$$

$$Q = 11.6 \text{ m}^3/\text{s} \leftarrow Q$$

From the geometry of the outlet velocity diagram,

$$\tan \alpha_2 = \frac{V_{t2}}{V_{n2}} = \frac{U - V_{n2} \cot \beta_2}{V_{n2}} = \frac{U - V_{n1} \cot \beta_2}{V_{n1}}$$

or

$$\alpha_2 = \tan^{-1} \left[ \frac{59.7 \frac{\text{m}}{\text{s}} - \frac{25.9 \text{ m}}{\text{s}} \times \cot 60^\circ}{\frac{25.9 \text{ m}}{\text{s}}} \right] = 59.9^\circ$$

and

$$V_2 = \frac{V_{n_2}}{\cos \alpha_2} = \frac{V_{n_1}}{\cos \alpha_2} = \frac{25.9 \text{ m}}{\text{s}} \times \frac{1}{\cos 59.9^\circ} = 51.6 \text{ m/s}$$

Finally,

$$V_{t_2} = V_2 \sin \alpha_2 = \frac{51.6 \text{ m}}{\text{s}} \times \sin 59.9^\circ = 44.6 \text{ m/s}$$

The angular-momentum equation, Eq. 10.1a, simplifies to Eq. 10.1b for uniform flow, or in scalar form to Eq. 10.1c,

$$T_{\text{shaft}} = (r_2 V_{t_2} - r_1 V_{t_1}) \dot{m} \quad (10.1c)$$

For this machine we have  $r_1 = R_1 \approx R_m$  and  $r_2 = R_2 \approx R_m$ , so Eq. 10.1c reduces to

$$T_{\text{shaft}} = R_m (V_{t_2} - V_{t_1}) \dot{m} = R_m (V_{t_2} - V_{t_1}) \rho Q$$

where we have used continuity ( $\dot{m} = \rho Q$ ).

Hence

$$\begin{aligned} T_{\text{shaft}} &= \rho Q R_m (V_{t_2} - V_{t_1}) \\ &= \frac{1.23 \text{ kg}}{\text{m}^3} \times \frac{11.6 \text{ m}^3}{\text{s}} \times \frac{0.95 \text{ m}}{2} \times (44.6 - 15.0) \frac{\text{m}}{\text{s}} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ T_{\text{shaft}} &= 201 \text{ N} \cdot \text{m} \leftarrow T_{\text{shaft}} \end{aligned}$$

Thus the torque *on* the CV is in the same sense as  $\bar{\omega}$ . The power required is

$$\begin{aligned} \dot{W}_m &= \bar{\omega} \cdot \bar{T} = \omega T_{\text{shaft}} = \frac{1200 \text{ rev}}{\text{min}} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}}{60 \text{ s}} \times 201 \text{ N} \cdot \text{m} \times \frac{\text{W} \cdot \text{s}}{\text{N} \cdot \text{m}} \\ \dot{W}_m &= 25.3 \text{ kW} \leftarrow \dot{W}_m \end{aligned}$$

This problem illustrates construction of velocity diagrams and application of the angular-momentum equation for a fixed control volume to an axial-flow machine under idealized conditions.

Figure 10.5 represents the flow through a simple centrifugal pump impeller. If the fluid enters the impeller with a purely radial absolute velocity, then the fluid entering the impeller has no angular momentum and  $V_{t_1}$  is identically zero.

With  $V_{t_1} = 0$ , the increase in head (from Eq. 10.2c) is given by

$$H = \frac{U_2 V_{t_2}}{g} \quad (10.3)$$

From the exit velocity diagram of Fig. 10.5c,

$$V_{t_2} = U_2 - V_{rb_2} \cos \beta_2 = U_2 - \frac{V_{n_2}}{\sin \beta_2} \cos \beta_2 = U_2 - V_{n_2} \cot \beta_2 \quad (10.4)$$

Then

$$H = \frac{U_2^2 - U_2 V_{n2} \cot \beta_2}{g} \quad (10.5)$$

For an impeller of width  $w$ , the volume flow rate is

$$Q = \pi D_2 w V_{n2} \quad (10.6)$$

To express the increase in head in terms of volume flow rate, we substitute for  $V_{n2}$  in terms of  $Q$  from Eq. 10.6. Thus

$$H = \frac{U_2^2}{g} - \frac{U_2 \cot \beta_2}{\pi D_2 w g} Q \quad (10.7a)$$

Equation 10.7a is of the form

$$H = C_1 - C_2 Q \quad (10.7b)$$

where constants  $C_1$  and  $C_2$  are functions of machine geometry and speed,


$$C_1 = \frac{U_2^2}{g} \quad \text{and} \quad C_2 = \frac{U_2 \cot \beta_2}{\pi D_2 w g}$$

Thus Eq. 10.7a predicts a linear variation of head,  $H$ , with volume flow rate,  $Q$ .

Constant  $C_1 = U_2^2/g$  represents the ideal head developed by the pump for zero flow rate; this is called the *shutoff head*. The slope of the curve of head versus flow rate (the  $H - Q$  curve) depends on the sign and magnitude of  $C_2$ .

For radial outlet vanes,  $\beta_2 = 90^\circ$  and  $C_2 = 0$ . The tangential component of the absolute velocity at the outlet is equal to the wheel speed and is independent of flow rate. From Eq. 10.7a, the ideal head is independent of flow rate. This characteristic  $H - Q$  curve is plotted in Fig. 10.6.

If the vanes are *backward curved* (as shown in Fig. 10.5a),  $\beta_2 < 90^\circ$  and  $C_2 > 0$ . Then the tangential component of the absolute outlet velocity is less than the wheel

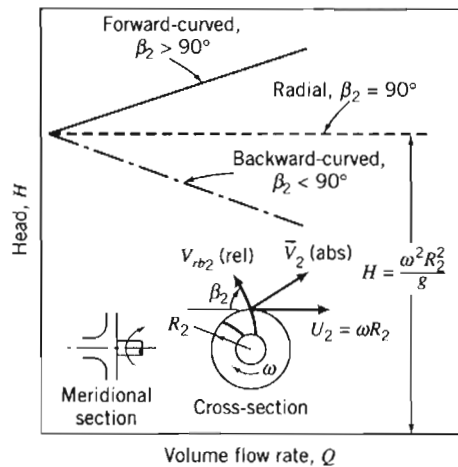

**Fig. 10.6** Idealized relationship between head and volume flow rate for centrifugal pump with forward-curved, radial, and backward-curved impeller blades.



speed and it decreases in proportion to the flow rate. From Eq. 10.7a, the ideal head decreases linearly with increasing flow rate. The corresponding  $H - Q$  curve is plotted in Fig. 10.6.

If the vanes are *forward curved*, then  $\beta_2 > 90^\circ$  and  $C_2 < 0$ . The tangential component of the absolute fluid velocity at the outlet is greater than the wheel speed and it increases as the flow rate increases. From Eq. 10.7a, the ideal head increases linearly with increasing flow rate. The corresponding  $H - Q$  curve is plotted in Fig. 10.6.

The characteristics of a radial-flow machine can be altered by changing the outlet vane angle; the idealized model predicts the trends as the outlet vane angle is changed.

The predictions of the idealized angular-momentum theory for a centrifugal pump are summarized in Fig. 10.6. Forward-curved vanes are almost never used in practice because they tend to have an unstable operating point.

### Hydraulic Power

The torque and power predicted by applying the angular-momentum equation to a turbomachine rotor (Eqs. 10.1c and 10.2a) are idealized values. In practice, rotor power and the rate of change of fluid energy are not equal. Energy *transfer* between rotor and fluid causes losses because of viscous effects, departures from uniform flow, and departures of flow direction from the blade angles. Kinetic energy *transformation* to pressure rise by diffusion in the fixed casing introduces more losses. Energy *dissipation* occurs in seals and bearings and in fluid friction between the rotor and housing of the machine ("windage" losses). Applying the first law of thermodynamics to a control volume surrounding the rotor shows that these "losses" in mechanical energy are irreversible conversions from mechanical energy to thermal energy. As was the case for the pipe flows discussed in Chapter 8, the thermal energy appears either as internal energy in the fluid stream or as heat transfer to the surroundings.

Because of these losses, in a pump the actual power delivered to the fluid is less than predicted by the angular-momentum equation. In the case of a turbine, the actual power delivered to the shaft is less than the power given up by the fluid stream.

We can define the power, head, and efficiency of a turbomachine based on whether the machine does work on the fluid or extracts work (or power) from the fluid.

### Machines for Doing Work on a Fluid

For a pump, the *hydraulic power* is given by the rate of mechanical energy input to the fluid,

$$\dot{W}_h = \rho Q g H_p \quad (10.8a)$$

where

$$H_p = \left( \frac{p}{\rho g} + \frac{\bar{V}^2}{2g} + z \right)_{\text{discharge}} - \left( \frac{p}{\rho g} + \frac{\bar{V}^2}{2g} + z \right)_{\text{suction}} \quad (10.8b)$$

For a pump the *head* rise measured on a test stand is less than that produced by the impeller. The rate of mechanical energy input is greater than the rate of head rise produced by the impeller. The mechanical input power needed to drive the pump is related to the hydraulic power by defining *pump efficiency* as

$$\eta_p = \frac{\dot{W}_h}{\dot{W}_m} = \frac{\rho Q g H_p}{\omega T} \quad (10.8c)$$



To evaluate the actual change in head across a machine from Eq. 10.8b, we must know the pressure, fluid velocity, and elevation at two measurement sections. Fluid velocity can be calculated from the measured volume flow rate and passage diameters. (Suction and discharge lines for pumps usually have different inside diameters.)

Static pressure usually is measured in straight sections of pipe upstream from the pump inlet and downstream from the pump outlet, after diffusion has occurred within the pump casing. The elevation of each pressure gage may be recorded, or the static pressure readings may be corrected to the same elevation. (The pump centerline provides a convenient reference level.)

### Machines for Extracting Work (Power) from a Fluid

For a hydraulic turbine the *hydraulic power* is defined as the rate of mechanical energy removal from the flowing fluid stream,

$$\dot{W}_h = \rho Q g H_t \quad (10.9a)$$

where

$$H_t = \left( \frac{p}{\rho g} + \frac{\bar{V}^2}{2g} + z \right)_{\text{inlet}} - \left( \frac{p}{\rho g} + \frac{\bar{V}^2}{2g} + z \right)_{\text{outlet}} \quad (10.9b)$$

For a hydraulic turbine the power output from the rotor (the mechanical power) is less than the rate of energy transfer from the fluid to the rotor, because the rotor must overcome friction and windage losses.

The mechanical power output obtained from the turbine is related to the hydraulic power by defining *turbine efficiency* as

$$\eta_t = \frac{\dot{W}_m}{\dot{W}_h} = \frac{\omega T}{\rho Q g H_t} \quad (10.9c)$$

Equation 10.9b shows that *to obtain maximum power output from a hydraulic turbine, it is important to minimize the mechanical energy in the flow leaving the turbine.* This is accomplished by making the outlet pressure, flow speed, and elevation as small as practical. The turbine must be set as close to the tailwater level as possible, allowing for the level increase when the river floods. Tests to measure turbine efficiency may be performed at various output power levels and at different constant head conditions (see the discussion of Figs. 10.12 and 10.13).

The trends predicted by the idealized angular-momentum theory are compared with experimental results in the next section.

## 10-4 PERFORMANCE CHARACTERISTICS

To specify fluid machines for flow systems, the designer must know the pressure rise (or head), torque, power requirement, and efficiency of a machine. For a given machine each of these characteristics is a function of flow rate; the characteristics for similar machines depend upon size and operating speed. In this section we define *performance characteristics* for pumps and turbines and review experimentally measured trends for typical machines. We discuss *dimensionless parameters* to illustrate the similarities among families of machines and the trends in design features as

functions of flow rate and head rise. We review *scaling laws* and present examples to illustrate their use. The section concludes with a discussion of *cavitation* and the net head that must be available at the inlet of a pump to assure satisfactory cavitation-free operation.

### Performance Parameters

The idealized analyses presented in Section 10-3 are useful to predict trends and to approximate the design-point performance of an energy-absorbing or energy-producing machine. However, the complete performance of a real machine, including operation at off-design conditions, must be determined experimentally. We consider the performance parameters of a turbomachine based on whether the machine does work on the fluid or extracts work (or power) from the fluid.


### Machines for Doing Work on a Fluid

To determine performance, a pump, fan, blower, or compressor must be set up on an instrumented test stand with the capability of measuring flow rate, speed, input torque, and pressure rise. The test must be performed according to a standardized procedure corresponding to the machine being tested [4, 5]. Measurements are made as flow rate is varied from shutoff (zero flow) to maximum delivery by varying the load from maximum to minimum (by starting with a valve that is closed and opening it to fully open in stages). Power input to the machine is determined from a calibrated motor or calculated from measured speed and torque, and then efficiency is computed as illustrated in Example Problem 10.3. Finally, the calculated characteristics are plotted in the desired engineering units or nondimensionally. If appropriate, smooth curves may be faired through the plotted points or curve-fits may be made to the results, as illustrated in Example Problem 10.4.

### EXAMPLE 10.3 Calculation of Pump Characteristics from Test Data

The flow system used to test a centrifugal pump at a nominal speed of 1750 rpm is shown. The liquid is water at 80°F, and the suction and discharge pipe diameters are 6 in. Data measured during the test are given in the table. The motor is supplied at 460 V, 3-phase, and has a power factor of 0.875 and a constant efficiency of 90 percent.

Rate of Flow (gpm)	Suction Pressure (psig)	Discharge Pressure (psig)	Motor Current (amp)
0	0.65	53.3	18.0
500	0.25	48.3	26.2
800	-0.35	42.3	31.0
1000	-0.92	36.9	33.9
1100	-1.24	33.0	35.2
1200	-1.62	27.8	36.3
1400	-2.42	15.3	38.0
1500	-2.89	7.3	39.0

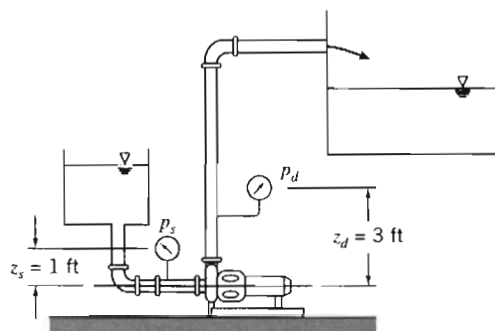

Calculate the net head delivered and the pump efficiency at a volume flow rate of 1000 gpm. Plot the pump head, power input, and efficiency as functions of volume flow rate.

**EXAMPLE PROBLEM 10.3****GIVEN:** Pump test flow system and data shown.**FIND:** (a) Pump head and efficiency at  $Q = 1000$  gpm.  
(b) Pump head, power input, and efficiency as a function of volume flow rate. Plot the results.**SOLUTION:**

Governing equations:

$$\dot{W}_h = \rho Q g H_p \quad \eta_p = \frac{\dot{W}_h}{\dot{W}_m} = \frac{\rho Q g H_p}{\omega T}$$

$$H_p = \left( \frac{p}{\rho g} + \frac{\bar{V}^2}{2g} + z \right)_d - \left( \frac{p}{\rho g} + \frac{\bar{V}^2}{2g} + z \right)_s$$

Assumptions: (1) Steady flow.  
 (2) Uniform flow at each section.  
 (3)  $\bar{V}_2 = \bar{V}_1$ .  
 (4) Correct all heads to the same elevation.

Since  $\bar{V}_2 = \bar{V}_1$ , the pump head is

$$H_p = \frac{1}{g} \left[ \left( \frac{p}{\rho} + gz \right)_d - \left( \frac{p}{\rho} + gz \right)_s \right] = \frac{p_2 - p_1}{\rho g}$$

where the discharge and suction pressures, corrected to the same elevation, are designated  $p_2$  and  $p_1$ , respectively.

Correct measured static pressures to the pump centerline:

$$p_1 = p_s + \rho g z_s$$

$$p_1 = -0.92 \frac{\text{lbf}}{\text{in.}^2} + 1.94 \frac{\text{slug}}{\text{ft}^3} \times 32.2 \frac{\text{ft}}{\text{s}^2} \times 1.0 \text{ ft} \times \frac{\text{lbf} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}} \times \frac{\text{ft}^2}{144 \text{ in.}^2} = -0.49 \text{ psig}$$

and

$$p_2 = p_d + \rho g z_d$$

$$p_2 = 36.9 \frac{\text{lbf}}{\text{in.}^2} + 1.94 \frac{\text{slug}}{\text{ft}^3} \times 32.2 \frac{\text{ft}}{\text{s}^2} \times 3.0 \text{ ft} \times \frac{\text{lbf} \cdot \text{s}^2}{\text{slug} \cdot \text{ft}} \times \frac{\text{ft}^2}{144 \text{ in.}^2} = 38.2 \text{ psi}$$

Calculate the pump head:

$$H_p = (p_2 - p_1) / \rho g$$

$$H_p = [38.2 - (-0.49)] \frac{\text{lbf}}{\text{in.}^2} \times \frac{\text{ft}^3}{1.94 \text{ slug}} \times \frac{\text{s}^2}{32.2 \text{ ft}} \times \frac{144 \text{ in.}^2}{\text{ft}^2} \times \frac{\text{slug} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2} = 89.2 \text{ ft} \longleftarrow H_p$$

Compute the hydraulic power delivered to the fluid:

$$\begin{aligned} \dot{W}_h &= \rho Q g H_p = Q(p_2 - p_1) \\ &= 1000 \frac{\text{gal}}{\text{min}} \times [38.2 - (-0.49)] \frac{\text{lbf}}{\text{in.}^2} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{144 \text{ in.}^2}{\text{ft}^2} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lbf}} \\ \dot{W}_h &= 22.6 \text{ hp} \end{aligned}$$


Calculate the motor power output (the mechanical power input to the pump) from electrical information:

$$\begin{aligned} \mathcal{P}_{\text{in}} &= \eta \sqrt{3} (PF) EI \\ \mathcal{P}_{\text{in}} &= 0.90 \times \sqrt{3} \times 0.875 \times 460 \text{ V} \times 33.9 \text{ A} \times \frac{\text{W}}{\text{VA}} \times \frac{\text{hp}}{746 \text{ W}} = 28.5 \text{ hp} \end{aligned}$$

The corresponding pump efficiency is

$$\eta_p = \frac{\dot{W}_h}{\dot{W}_m} = \frac{22.6 \text{ hp}}{28.5 \text{ hp}} = 0.792 \text{ or } 79.2 \text{ percent} \leftarrow \eta_p$$

Results from similar calculations at the other volume flow rates are plotted below:

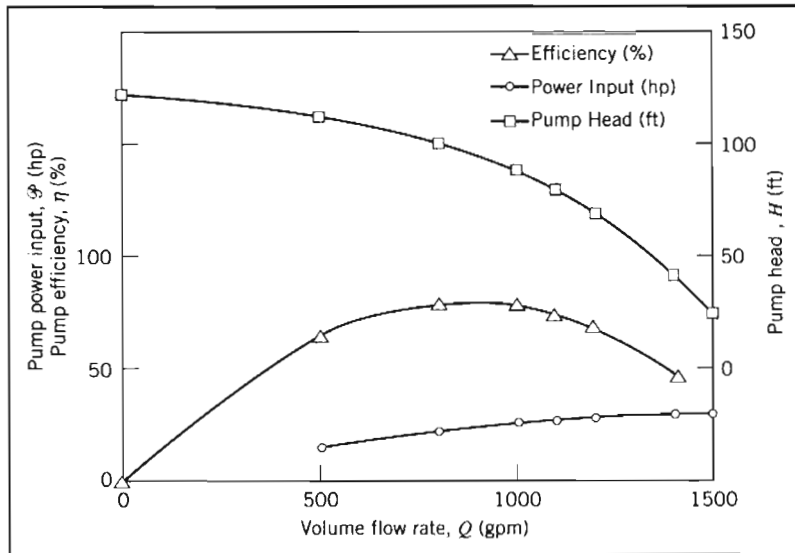

This problem illustrates the data reduction procedure used to obtain the performance curves for a pump from experimental data. The results calculated and plotted in this example are typical for a centrifugal pump driven at constant speed:

- ✓ The pressure rise is highest at shutoff (zero flow rate).
- ✓ Pressure rise decreases steadily as flow rate is increased; compare this typical experimental curve to the linear behavior shown in Fig. 10.7 for idealized backward-curved impeller blades (used in most centrifugal pumps).
- ✓ Required power input increases with flow rate; the increase is generally nonlinear.
- ✓ Efficiency is zero at shutoff, rises to a peak as flow rate is increased, then drops off at larger flow rates; it stays near its maximum over a range of flow rates (in this example, from about 800 to 1100 gpm).

This example is a little oversimplified because it is assumed that the motor efficiency is constant. In practice, motor efficiency varies with load, so must be either computed at each load from motor speed and torque measurements, or obtained from a calibration curve.



The *Excel* workbook for this Example Problem was used for the calculations for each flow rate, and for generating the graph. It can be modified for use with other pump data.

The basic procedure used to calculate machine performance was illustrated for a centrifugal pump in Example Problem 10.3. The difference in static pressures between the pump suction and discharge was used to calculate the head rise produced by the pump. For pumps, dynamic pressure rise typically is a small fraction of the head rise developed by the pump, so it may be neglected compared with the head rise.

The test and data reduction procedures for fans, blowers, and compressors are basically the same as for centrifugal pumps. However, blowers, and especially fans, add relatively small amounts of static head to gas or vapor flows. For these machines, the dynamic head may increase from inlet to discharge, and it may be appreciable compared with the static head rise. For these reasons, it is important to state clearly the basis on which performance calculations are made. Standard definitions are available for machine efficiency based on either the static-to-static pressure rise or the static-to-total pressure rise [6].

### EXAMPLE 10.4 Curve-Fit to Pump Performance Data

Pump test data were given and performance was calculated in Example Problem 10.3. Fit a parabolic curve,  $H = H_0 - AQ^2$ , to these calculated pump performance results and compare the fitted curve with the measured data.

#### EXAMPLE PROBLEM 10.4

**GIVEN:** Pump test data and performance calculated in Example Problem 10.3.

**FIND:** (a) Parabolic curve,  $H = H_0 - AQ^2$ , fitted to the pump performance data.  
(b) Comparison of the curve-fit with the calculated performance.

**SOLUTION:**

The curve-fit may be obtained by fitting a linear curve to  $H$  versus  $Q^2$ . Tabulating,


From calculated performance:		From the curve fit:		
$Q$ (gpm)	$Q^2$ (gpm <sup>2</sup> )	$H$ (ft)	$H$ (ft)	Error (%)
0	0	123	127	2.8
500	$25 \times 10^4$	113	116	3.1
800	$64 \times 10^4$	100	99.8	-0.5
1000	$100 \times 10^4$	89.2	84.6	-5.2
1100	$121 \times 10^4$	80.9	75.7	-6.5
1200	$144 \times 10^4$	69.8	65.9	-5.6
1400	$196 \times 10^4$	42.8	43.9	2.5
1500	$225 \times 10^4$	25.5	31.7	24.2
		Intercept =	127	
		Slope =	$-4.23 \times 10^{-5}$	
		$r^2 =$	0.984	

Using the method of least squares, the equation for the fitted curve is obtained as

$$H \text{ (ft)} = 127 - 4.23 \times 10^{-5} [Q \text{ (gpm)}]^2$$


with coefficient of determination  $r^2 = 0.984$ .

Always compare the results of a curve-fit with the data used to develop the fit. The figure shows the curve-fit (the solid line) and the experimental values (the points).

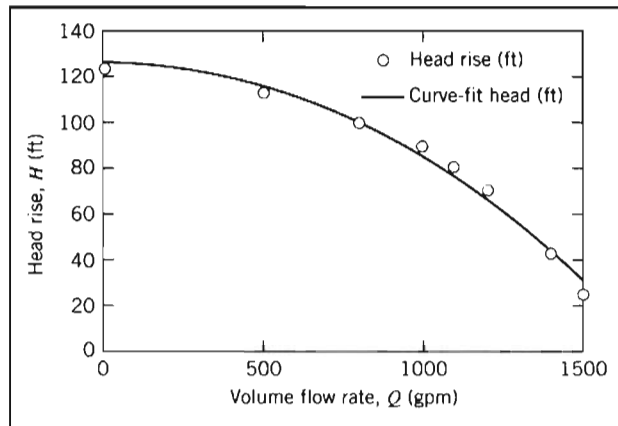

This problem illustrates that the pump test data for Example Problem 10.3 can be fitted quite well to a parabolic curve. As with fitting a curve to any experimental data, our justifications for choosing a parabolic function in this case are:

- ✓ Experimental observation—the experimental data *looks* parabolic.
- ✓ Theory or concept—we will see later in this section that similarity rules suggest such a relation between head and flow rate.

 The *Excel* workbook for this Example Problem was used for the least-squares calculations, and for generating the graph. It can be modified for use with other pump data.


Typical characteristic curves for a centrifugal pump tested at constant speed were shown qualitatively in Fig. 7.5;<sup>4</sup> the head versus capacity curve is reproduced in Fig. 10.7 to compare with characteristics predicted by the idealized analysis. Figure 10.7 shows that the head at any flow rate in the real machine may be significantly lower than is predicted by the idealized analysis. Some of the causes are:

1. At very low flow rate some fluid recirculates in the impeller.
2. Friction loss and leakage loss both increase with flow rate.
3. “Shock loss” results from mismatch between the direction of the relative velocity and the tangent to the impeller blade at the inlet.<sup>5</sup>

Curves such as those in Figs. 7.5 and 10.7 are measured at constant (design) speed with a single impeller diameter. It is common practice to vary pump capacity by changing the impeller size in a given casing. To present information compactly,

<sup>4</sup> The only important pump characteristic not shown in Fig. 7.5 is the net positive suction head (*NPSH*) required to prevent cavitation. Cavitation and *NPSH* will be treated later in this section.


<sup>5</sup> This loss is largest at high and low flow rates; it decreases essentially to zero as optimum operating conditions are approached [7].

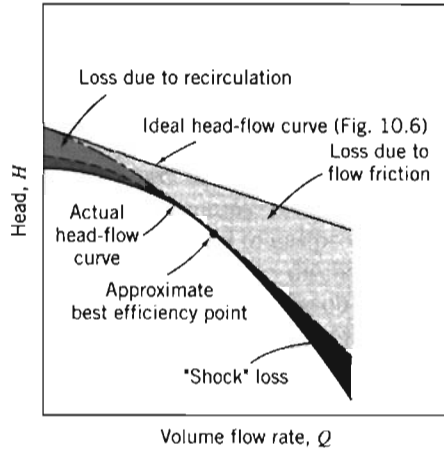

**Fig. 10.7** Comparison of ideal and actual head-flow curves for a centrifugal pump with backward-curved impeller blades [8].

data from tests of several impeller diameters may be plotted on a single graph, as shown in Fig. 10.8. As before, for each diameter, head is plotted versus flow rate; each curve is labeled with the corresponding diameter. Efficiency contours are plotted by joining points having the same constant efficiency. Power-requirement contours are also plotted. Finally, the *NPSH* requirements (which we have not yet defined) are shown for the extreme diameters; in Fig. 10.8, the curve for the 8 in. impeller would lie between the curves for the 6 in. and 10 in. impellers.

For this typical machine, head is a maximum at shutoff and decreases continuously as flow rate increases. Input power is minimum at shutoff and increases as delivery is increased. Consequently, to minimize the starting load, it may be advisable to start the pump with the outlet valve closed. (However, the valve should not be left closed for long, lest the pump overheat as energy dissipated by friction is transferred

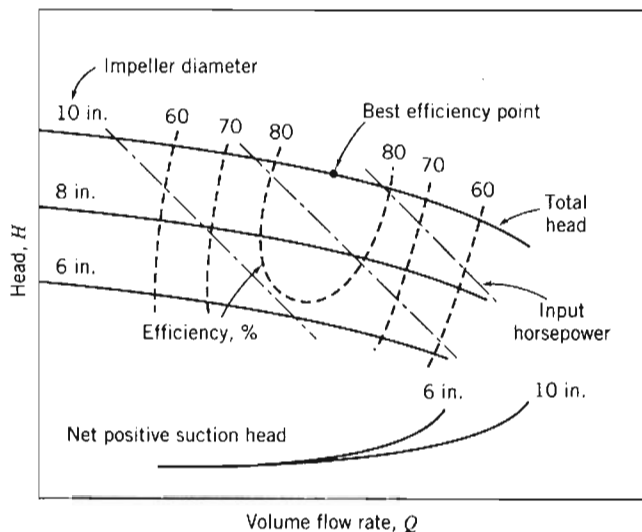

**Fig. 10.8** Typical pump performance curves from tests with three impeller diameters at constant speed [8].



to the water in the housing.) Pump efficiency increases with capacity until the *best efficiency point* (BEP) is reached, then decreases as flow rate is increased further. For minimum energy consumption, it is desirable to operate as close to BEP as possible.

Centrifugal pumps may be combined in parallel to deliver greater flow or in series to deliver greater head. A number of manufacturers build multi-stage pumps, which are essentially several pumps arranged in series within a single casing. Pumps and blowers are usually tested at several constant speeds. Common practice is to drive machines with electric motors at nearly constant speed, but in some system applications impressive energy savings can result from variable-speed operation. These pump application topics are discussed in Section 10-5.

### Machines for Extracting Work (Power) from a Fluid

The test procedure for turbines is similar to that for pumps, except that a dynamometer is used to absorb the turbine power output while speed and torque are measured. Turbines usually are intended to operate at a constant speed that is a fraction or multiple of the electric power frequency to be produced. Therefore turbine tests are run at constant speed under varying load, while water usage is measured and efficiency is calculated.

The impulse turbine is a relatively simple turbomachine, so we use it to illustrate typical test results. Impulse turbines are chosen when the head available exceeds about 300 m. Most impulse turbines used today are improved versions of the *Pelton wheel* developed in the 1880s by American mining engineer Lester Pelton [9]. An impulse turbine is supplied with water under high head through a long conduit called a *penstock*. The water is accelerated through a nozzle and discharges as a high-speed free jet at atmospheric pressure. The jet strikes deflecting buckets attached to the rim of a rotating wheel (Fig. 10.3a). Its kinetic energy is given up as it is turned by the buckets. Turbine output is controlled at essentially constant jet speed by changing the flow rate of water striking the buckets. A variable-area nozzle may be used to make small and gradual changes in turbine output. Larger or more rapid changes must be accomplished by means of jet deflectors, or auxiliary nozzles, to avoid sudden changes in flow speed and the resulting high pressures in the long water column in the penstock. Water discharged from the wheel at relatively low speed falls into the tailrace. The tailrace level is set to avoid submerging the wheel during flooded conditions. When large amounts of water are available, additional power can be obtained by connecting two wheels to a single shaft or by arranging two or more jets to strike a single wheel.

Figure 10.9 illustrates an impulse-turbine installation and the definitions of gross and net head [7]. The *gross head* available is the difference between the levels in the supply reservoir and the tailrace. The effective or *net head*,  $H$ , used to calculate efficiency, is the total head at the *entrance* to the nozzle, measured at the nozzle


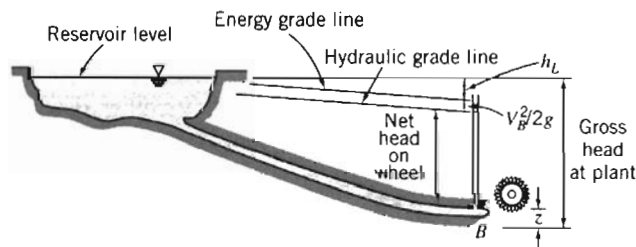


Fig. 10.9 Schematic of impulse-turbine installation, showing definitions of gross and net heads [7].

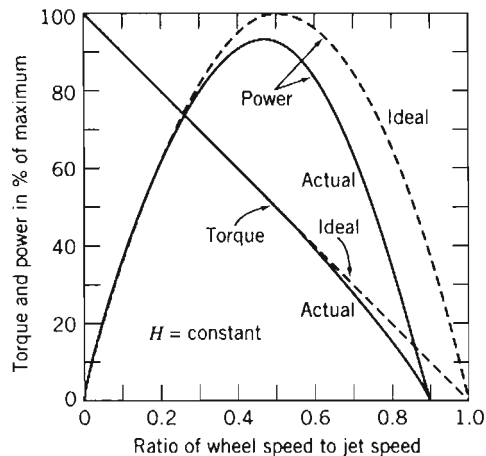

**Fig. 10.10** Ideal and actual variable-speed performance for an impulse turbine [10].


centerline [7]. Hence not all of the net head is converted into work at the turbine: Some is lost to turbine inefficiency, some is lost in the nozzle itself, and some is lost as residual kinetic energy in the exit flow. In practice, the penstock usually is sized so that at rated power the net head is 85–95 percent of the gross head.

In addition to nozzle loss, windage, bearing friction, and surface friction between the jet and bucket reduce performance compared with the ideal, frictionless case. Figure 10.10 shows typical results from tests performed at constant head.

The peak efficiency of the impulse turbine corresponds to the peak power, since the tests are performed at constant head and flow rate. For the ideal turbine, as shown in Example Problem 10.5, this occurs when the wheel speed is half the jet speed. As we will see, at this wheel speed the fluid exits the turbine at the lowest absolute velocity possible, hence minimizing the loss of kinetic energy at the exit. As indicated in Eq. 10.2a, if we minimize the exit velocity  $\bar{V}_2$  we will maximize the turbine work  $\dot{W}_m$ , and hence the efficiency. In actual installations, peak efficiency occurs at a wheel speed only slightly less than half the jet speed. This condition fixes the wheel speed once the jet speed is determined for a given installation. For large units, overall efficiency may be as high as 88 percent [11].


### EXAMPLE 10.5 Optimum Speed for Impulse Turbine

A Pelton wheel is a form of impulse turbine well adapted to situations of high head and low flow rate. Consider the Pelton wheel and single-jet arrangement shown, in which the jet stream strikes the bucket tangentially and is turned through angle  $\theta$ . Obtain an expression for the torque exerted by the water stream on the wheel and the corresponding power output. Show that the power is a maximum when the bucket speed,  $U = R\omega$ , is half the jet speed,  $V$ .

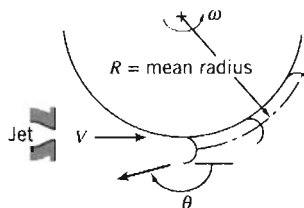

**EXAMPLE PROBLEM 10.5****GIVEN:** Pelton wheel and single jet shown.

- FIND:** (a) Expression for torque exerted on the wheel.  
 (b) Expression for power output.  
 (c) Ratio of wheel speed  $U$  to jet speed  $V$  for maximum power.

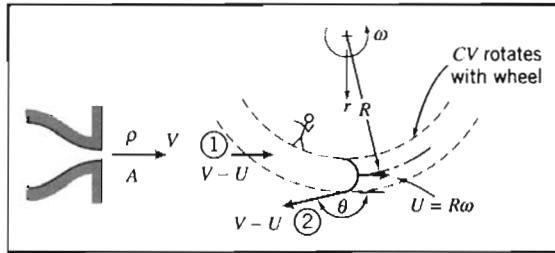**SOLUTION:**

As an illustration of its use, we start with the angular-momentum equation, Eq. 4.52 (on the CD), for a rotating CV as shown, rather than the inertial CV form, Eq. 4.46, that we used in deriving the Euler turbomachine equation in Section 10.3.

Governing equation:

$$\begin{aligned}
 &= 0(1) & &= 0(2) & & \approx 0(3) \\
 \vec{r} \times \vec{F}_s + \int_{CV} \vec{r} \times \vec{g} \rho dV + \vec{T}_{\text{shaft}} - \int_{CV} \vec{r} \times [2\vec{\omega} \times \vec{V}_{xyz} + \vec{\omega} \times (\vec{\omega} \times \vec{r}) + \dot{\vec{\omega}} \times \vec{r}] \rho dV \\
 &= 0(4) \\
 &= \frac{\partial}{\partial t} \int_{CV} \vec{r} \times \vec{V}_{xyz} \rho dV + \int_{CS} \vec{r} \times \vec{V}_{xyz} \rho \vec{V}_{xyz} \cdot d\vec{A} \quad (4.52)
 \end{aligned}$$

- Assumptions: (1) Neglect torque due to surface forces.  
 (2) Neglect torque due to body forces.  
 (3) Neglect mass of water on wheel.  
 (4) Steady flow with respect to wheel.  
 (5) All water that issues from the nozzle acts upon the buckets.  
 (6) Bucket height is small compared with  $R$ , hence  $r_1 \approx r_2 \approx R$ .  
 (7) Uniform flow at each section.  
 (8) No change in jet speed relative to bucket.

Then, since all water from the jet crosses the buckets,

$$\begin{aligned}
 \vec{T}_{\text{shaft}} &= \vec{r}_1 \times \vec{V}_1 (-\rho VA) + \vec{r}_2 \times \vec{V}_2 (+\rho VA) \\
 \vec{r}_1 &= R\hat{e}_r & \vec{r}_2 &= R\hat{e}_r \\
 \vec{V}_1 &= (V-U)\hat{e}_\theta & \vec{V}_2 &= (V-U)\cos\theta\hat{e}_\theta + (V-U)\sin\theta\hat{e}_r \\
 T_{\text{shaft}}\hat{k} &= R(V-U)\hat{k}(-\rho VA) + R(V-U)\cos\theta\hat{k}(\rho VA)
 \end{aligned}$$

so that finally

$$T_{\text{shaft}}\hat{k} = -R(1 - \cos\theta)\rho VA(V-U)\hat{k}$$

This is the external torque of the shaft on the control volume, i.e., on the wheel. The torque exerted by the water on the wheel is equal and opposite,

$$\vec{T}_{\text{out}} = -\vec{T}_{\text{shaft}} = R(1 - \cos\theta)\rho VA(V-U)\hat{k} = \rho QR(V-U)(1 - \cos\theta)\hat{k} \quad \leftarrow \vec{T}_{\text{out}}$$

The corresponding power output is

$$\dot{W}_{\text{out}} = \vec{\omega} \cdot \vec{T}_{\text{out}} = R\omega(1 - \cos\theta)\rho VA(V-U) = \rho QU(V-U)(1 - \cos\theta) \quad \leftarrow \dot{W}_{\text{out}}$$



To find the condition for maximum power, differentiate the expression for power with respect to wheel speed  $U$  and set the result equal to zero. Thus

$$\frac{d\dot{W}}{dU} = \rho Q(V - U)(1 - \cos \theta) + \rho QU(-1)(1 - \cos \theta) = 0$$

$$\therefore (V - U) - U = V - 2U = 0$$

Thus for maximum power,  $U/V = \frac{1}{2}$  or  $U = V/2$ .

$U/V$

Note: Turning the flow through  $\theta = 180^\circ$  would give maximum power with  $U = V/2$ . Under these conditions, theoretically the *absolute* velocity of the fluid at the exit (computed in the direction of  $U$ ) would be  $U - (V - U) = V/2 - (V - V/2) = 0$ , so that there would be no loss of kinetic energy at the exit, maximizing the power output. In practice, it is possible to deflect the jet stream through angles up to  $165^\circ$ . With  $\theta = 165^\circ$ ,  $1 - \cos \theta \approx 1.97$ , or about 1.5 percent below the value for maximum power.

This problem illustrates the use of the angular-momentum equation for a rotating control volume, Eq. 4.52, to analyze flow through an ideal impulse turbine.

- ✓ The peak power occurs when the wheel speed is half the jet speed, which is a useful design criterion when selecting a turbine for a given available head.
- ✓ This problem also could be analyzed starting with an inertial control volume, i.e., using the Euler turbomachine equation (Problem 10.15).

In practice, hydraulic turbines usually are run at a constant speed, and output is varied by changing the opening area of the needle valve jet nozzle. Nozzle loss increases slightly and mechanical losses become a larger fraction of output as the valve is closed, so efficiency drops sharply at low load, as shown in Fig. 10.11. For this Pelton wheel, efficiency remains above 85 percent from 40 to 113 percent of full load.

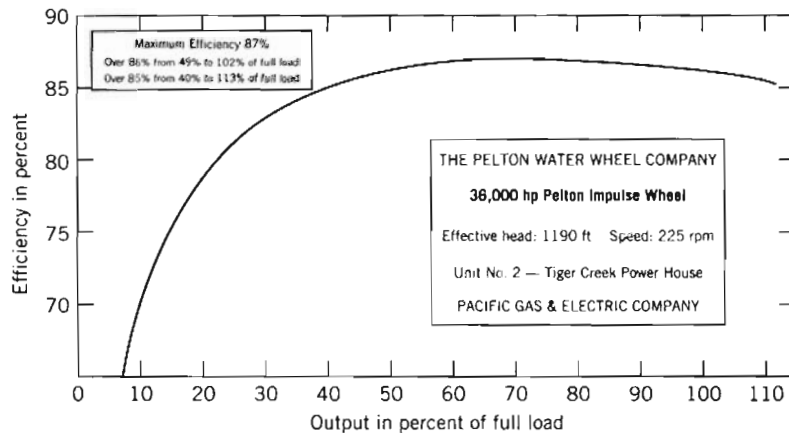


Fig. 10.11 Relation between efficiency and output for a typical Pelton water turbine (adapted from [11]).

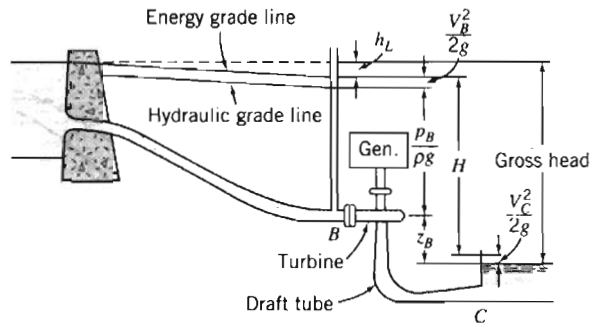


Fig. 10.12 Schematic of typical reaction turbine installation, showing definitions of head terminology [7].


At lower heads, reaction turbines provide better efficiency than impulse turbines. In contrast to flow in a centrifugal pump, flow in a reaction turbine enters the rotor at the largest (outer) radial section and discharges at the smallest (inner) radial section after transferring most of its energy to the rotor. Reaction turbines tend to be high flow, low head machines. A typical reaction turbine installation is shown schematically in Fig. 10.12, where the terminology used to define the heads is indicated.

Reaction turbines flow full of water. Consequently, it is possible to use a diffuser or draft tube to regain a fraction of the kinetic energy that remains in water leaving the rotor. The draft tube forms an integral part of the installation design. As shown in Fig. 10.12, the *gross head* available is the difference between the supply reservoir head and the tailrace head. The *effective head* or *net head*,  $H$ , used to calculate efficiency, is the difference between the elevation of the energy grade line just upstream of the turbine and that of the draft tube discharge (section C). The benefit of the draft tube is clear: the net head available for the turbine is equal to the gross head minus losses in the supply pipework and the kinetic energy loss at the turbine exit; without the draft tube the exit velocity and kinetic energy would be relatively large, but with the draft tube they are small, leading to increased turbine efficiency. Put another way, the draft tube diffuser, through a Bernoulli effect, reduces the turbine exit pressure, leading to a larger pressure drop across the turbine, and increased power output. (We saw a similar Bernoulli effect used by ancient Romans in Example Problem 8.10.)

An efficient mixed-flow turbine runner was developed by James B. Francis using a careful series of experiments at Lowell, Massachusetts, during the 1840s [9]. An efficient axial-flow propeller turbine, with adjustable blades, was developed by German professor Victor Kaplan between 1910 and 1924. The *Francis Turbine* (Fig. 10.3b) is usually chosen when  $15 \leq H \leq 300$  m, and the *Kaplan turbine* (Fig. 10.3c) is usually chosen for heads of 15 m or less. Performance of reaction turbines may be measured in the same manner as performance of the impulse turbine. However, because the gross heads are less, any change in water level during operation is more significant. Consequently, measurements are made at a series of heads to completely define the performance of a reaction turbine.

An example of the data presentation for a reaction turbine is given in Fig. 10.13, where efficiency is shown at various output powers for a series of constant heads [10]. The reaction turbine has higher maximum efficiency than the impulse turbine, but efficiency varies more sharply with load.

As a sharp-eyed reader, you will have noticed that Fig. 10.13 contained both model-test (expected efficiencies) and full-scale results. You should be asking, "How

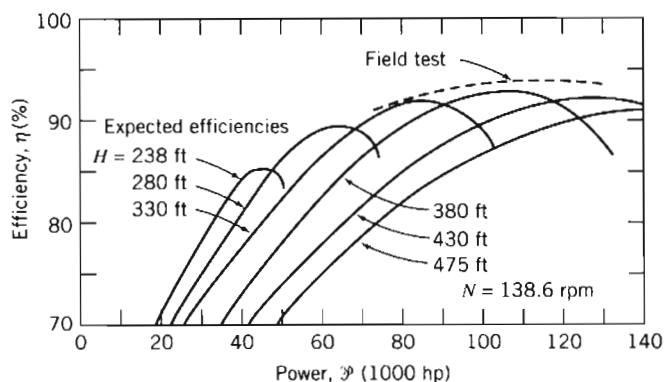

**Fig. 10.13** Performance of typical reaction turbine as predicted by model tests (expected efficiencies) and confirmed by field test [10].

are model tests designed and conducted, and how are model test results scaled to predict prototype performance?" To answer these questions, read on.

### Dimensional Analysis and Specific Speed

Dimensional analysis for turbomachines was introduced in Chapter 7, where dimensionless flow, head, and power coefficients were derived in generalized form. The independent parameters were the flow coefficient and a form of Reynolds number. The dependent parameters were the head and power coefficients.

Our objective here is to develop the forms of dimensionless coefficients in common use, and to give examples illustrating their use in selecting a machine type, designing model tests, and scaling results. Since we developed an idealized theory for turbomachines in Section 10-3, we can gain additional physical insight by developing dimensionless coefficients directly from the resulting computing equations.

The dimensionless *flow coefficient*,  $\Phi$ , is defined by normalizing the volume flow rate using the exit area and the wheel speed at the outlet. Thus

$$\Phi = \frac{Q}{A_2 U_2} = \frac{V_{n_2}}{U_2} \quad (10.10)$$

where  $V_{n_2}$  is the velocity component perpendicular to the exit area. This component is also referred to as the *meridional velocity* at the wheel exit plane. It appears in true projection in the *meridional plane*, which is any radial cross-section through the centerline of a machine.

A dimensionless *head coefficient*,  $\Psi$ , may be obtained by normalizing the head,  $H$  (Eq. 10.2c), with  $U_2^2/g$ . Thus

$$\Psi = \frac{gH}{U_2^2} \quad (10.11)$$

A dimensionless *torque coefficient*,  $\tau$ , may be obtained by normalizing the torque,  $T$  (Eq. 10.1c), with  $\rho A_2 U_2^2 R_2$ . Thus

$$\tau = \frac{T}{\rho A_2 U_2^2 R_2} \quad (10.12)$$

Finally, the dimensionless *power coefficient*,  $\Pi$ , is obtained by normalizing the power  $\dot{W}$  (Eq. 10.2b), with  $\dot{m} U_2^2 = \rho Q U_2^2$ . Thus

$$\Pi = \frac{\dot{W}}{\rho Q U_2^2} = \frac{\dot{W}}{\rho \omega^2 Q R_2^2} \quad (10.13)$$

For pumps, mechanical input power exceeds hydraulic power, and the efficiency is defined as  $\eta_p = \dot{W}_h / \dot{W}_m$  (Eq. 10.8c). Hence

$$\dot{W}_m = T\omega = \frac{1}{\eta_p} \dot{W}_h = \frac{\rho Q g H_p}{\eta_p} \quad (10.14)$$

Introducing dimensionless coefficients  $\Phi$  (Eq. 10.10),  $\Psi$  (Eq. 10.11), and  $\tau$  (Eq. 10.12) into Eq. 10.14, we obtain an analogous relation among the dimensionless coefficients as

$$\tau = \frac{\Psi \Phi}{\eta_p} \quad (10.15)$$

For turbines, mechanical output power is less than hydraulic power, and the efficiency is defined as  $\eta_t = \dot{W}_m / \dot{W}_h$  (Eq. 10.9c). Hence,

$$\dot{W}_m = T\omega = \eta_t \dot{W}_h = \eta_t \rho Q g H_t \quad (10.16)$$

Introducing dimensionless coefficients  $\Phi$ ,  $\Psi$ , and  $\tau$  into Eq. 10.16, we obtain an analogous relation among the dimensionless coefficients as

$$\tau = \eta_t \Psi \Phi \quad (10.17)$$

The dimensionless coefficients form the basis for designing model tests and scaling the results. As shown in Chapter 7, the flow coefficient is treated as the independent parameter. Then, if viscous effects are neglected, the head, torque, and power coefficients are treated as multiple dependent parameters. Under these assumptions, dynamic similarity is achieved when the flow coefficient is matched between model and prototype machines.

As discussed in Chapter 7, a useful parameter called *specific speed* can be obtained by combining the flow and head coefficients and eliminating the machine size. The result was

$$N_S = \frac{\omega Q^{1/2}}{h^{3/4}} \quad (7.16a)$$

When head is expressed as energy per unit mass (i.e., with dimensions equivalent to  $L^2/t^2$ , or  $g$  times head in height of liquid), and  $\omega$  is expressed in radians per second, the specific speed defined by Eq. 7.16a is dimensionless.

Although specific speed is a dimensionless parameter, it is common practice to use an "engineering" equation form of Eq. 7.16a in which  $\omega$  and  $Q$  are specified in units that are convenient but inconsistent, and energy per unit mass,  $h$ , is replaced with energy per unit weight of fluid,  $H$ . When this is done, the specific speed is not a unitless parameter and the magnitude of the specific speed depends on the units used to calculate it. Customary units used in U.S. engineering practice for pumps are rpm for  $\omega$ , gpm for  $Q$ , and feet (energy per unit weight) for  $H$ . In practice, the symbol  $N$  is

used to represent rate of rotation ( $\omega$ ) in rpm. Thus, the dimensional specific speed for pumps, expressed in U.S. customary units, becomes

$$N_{S_{cu}} = \frac{N(\text{rpm})[Q(\text{gpm})]^{1/2}}{[H(\text{ft})]^{3/4}} \quad (7.16b)$$

Values of the dimensionless specific speed,  $N_s$  (Eq. 7.16a), must be multiplied by 2733 to obtain the values of specific speed corresponding to this commonly used but inconsistent set of units (see Example Problem 10.6).

For hydraulic turbines, we use the fact that power output is proportional to flow rate and head,  $\mathcal{P} \propto \rho Qh$  in consistent units. Substituting  $\mathcal{P}/\rho h$  for  $Q$  in Eq. 7.16a gives

$$N_s = \omega(\mathcal{P}/\rho h)^{1/2}/h^{3/4} = \omega\mathcal{P}^{1/2}/(\rho^{1/2}h^{5/4}) \quad (10.18a)$$

as the nondimensional form of the specific speed.

In U.S. engineering practice it is customary to drop the factor  $\rho^{1/2}$  (water is invariably the working fluid in the turbines to which the specific speed is applied) and to use head  $H$  in place of energy per unit mass  $h$ . Customary units used in U.S. engineering practice for hydraulic turbines are rpm for  $\omega$ , horsepower for  $\mathcal{P}$ , and feet for  $H$ . In practice, the symbol  $N$  is used to represent rate of rotation ( $\omega$ ) in rpm. Thus the dimensional specific speed for a hydraulic turbine, expressed in U.S. customary units, becomes

$$N_{S_{cu}} = \frac{N(\text{rpm})[\mathcal{P}(\text{hp})]^{1/2}}{[H(\text{ft})]^{5/4}} \quad (10.18b)$$

Values of the dimensionless specific speed for a hydraulic turbine,  $N_s$  (Eq. 10.18a), must be multiplied by 43.46 to obtain the values of specific speed corresponding to this commonly used but inconsistent set of units.


Specific speed may be thought of as *the operating speed at which a pump produces unit head at unit volume flow rate* (or, for a hydraulic turbine, unit power at unit head). To see this, solve for  $N$  in Eqs. 7.16b and 10.18b, respectively. For pumps

$$N(\text{rpm}) = N_{S_{cu}} \frac{[H(\text{ft})]^{3/4}}{[Q(\text{gpm})]^{1/2}}$$

and for hydraulic turbines


$$N(\text{rpm}) = N_{S_{cu}} \frac{[H(\text{ft})]^{5/4}}{[\mathcal{P}(\text{hp})]^{1/2}}$$

Holding specific speed constant describes all operating conditions of geometrically similar machines with similar flow conditions.

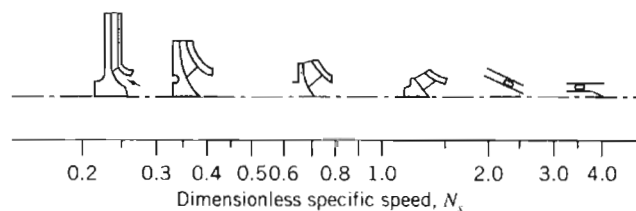

**Fig. 10.14** Typical geometric proportions of commercial pumps as they vary with dimensionless specific speed [12].



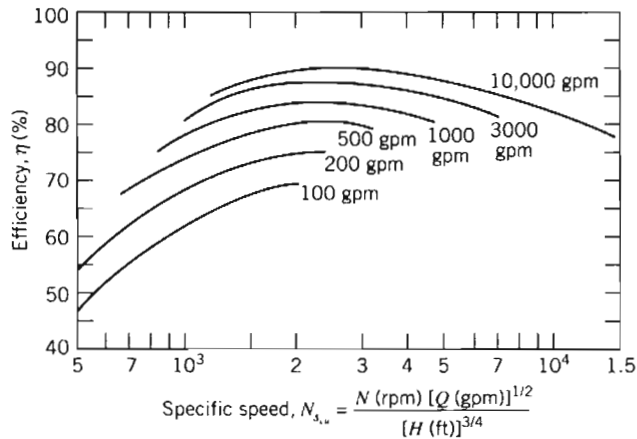


**Fig. 10.15** Average efficiencies of commercial pumps as they vary with specific speed and pump size [10].

It is customary to characterize a machine by its specific speed at the design point. This specific speed has been found to characterize the hydraulic design features of a machine. Low specific speeds correspond to efficient operation of radial-flow machines. High specific speeds correspond to efficient operation of axial-flow machines. For a specified head and flow rate, one can choose either a low specific speed machine (which operates at low speed) or a high specific speed machine (which operates at higher speed).

Typical proportions for commercial pump designs and their variation with dimensionless specific speed are shown in Fig. 10.14. In this figure, the size of each machine has been adjusted to give the same head and flow rate for rotation at a speed corresponding to the specific speed. Thus it can be seen that if the machine's size and weight are critical, one should choose a higher specific speed. Figure 10.14 shows the trend from radial (purely centrifugal pumps), through mixed-flow, to axial-flow geometries as specific speed increases.

The corresponding efficiency trends for typical pumps are shown in Fig. 10.15, which shows that pump capacity generally increases as specific speed increases. The figure also shows that at any given specific speed, efficiency is higher for large pumps than for small ones. Physically this *scale effect* means that viscous losses become less important as the pump size is increased.

Characteristic proportions of hydraulic turbines also are correlated by specific speed, as shown in Fig. 10.16. As in Fig. 10.14, the machine size has been scaled in

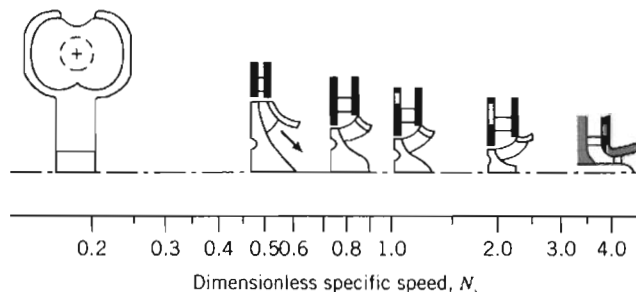

**Fig. 10.16** Typical geometric proportions of commercial hydraulic turbines as they vary with dimensionless specific speed [12].

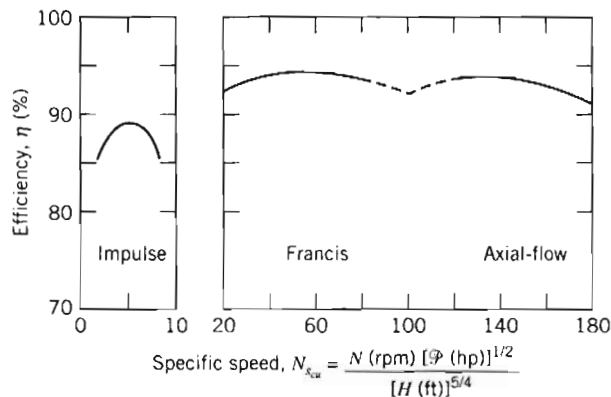


Fig. 10.17 Average efficiencies of commercial hydraulic turbines as they vary with specific speed [10].

this illustration to deliver approximately the same power at unit head when rotating at a speed equal to the specific speed. The corresponding efficiency trends for typical turbine types are shown in Fig. 10.17.

Several variations of specific speed, calculated directly from engineering units, are widely used in practice. The most commonly used forms of specific speed for pumps are defined and compared in Example Problem 10.6.

### EXAMPLE 10.6 Comparison of Specific Speed Definitions

At the best efficiency point, a centrifugal pump, with impeller diameter  $D = 8$  in., produces  $H = 21.9$  ft at  $Q = 300$  gpm with  $N = 1170$  rpm. Compute the corresponding specific speeds using: (a) U.S. customary units, (b) SI units ( $\text{rad/s}$ ,  $\text{m}^3/\text{s}$ ,  $\text{m}^2/\text{s}^2$ ), and (c) European units ( $\text{rev/s}$ ,  $\text{m}^3/\text{s}$ ,  $\text{m}^2/\text{s}^2$ ). Develop conversion factors to relate the specific speeds.

#### EXAMPLE PROBLEM 10.6

**GIVEN:** Centrifugal pump at best efficiency point (BEP). Assume the pump characteristics are  $H = 21.9$  ft,  $Q = 300$  gpm, and  $N = 1170$  rpm.

**FIND:** (a) The specific speed in U.S. customary units.  
 (b) The specific speed in SI units.  
 (c) The specific speed in European units.  
 (d) Appropriate conversion factors to relate the specific speeds.

**SOLUTION:**

$$\text{Governing equations: } N_s = \frac{\omega Q^{1/2}}{h^{3/4}} \quad \text{and} \quad N_{scu} = \frac{NQ^{1/2}}{H^{3/4}}$$

From the given information, the specific speed in U.S. customary units is

$$N_{scu} = 1170 \text{ rpm} \times (300)^{1/2} \text{ gpm}^{1/2} \times \frac{1}{(21.9)^{3/4} \text{ ft}^{3/4}} = 2000 \leftarrow N_{scu}$$

Convert information to SI units:

$$\omega = 1170 \frac{\text{rev}}{\text{min}} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}}{60 \text{ s}} = 123 \text{ rad/s}$$

$$Q = 300 \frac{\text{gal}}{\text{min}} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{min}}{60 \text{ s}} \times (0.305)^3 \frac{\text{m}^3}{\text{ft}^3} = 0.0190 \text{ m}^3/\text{s}$$

$$H = 21.9 \text{ ft} \times \frac{0.305 \text{ m}}{\text{ft}} = 6.68 \text{ m}$$

The energy per unit mass is

$$h = gH = 9.81 \frac{\text{m}}{\text{s}^2} \times 6.68 \text{ m} = 65.5 \text{ m}^2/\text{s}^2$$

The dimensionless specific speed is

$$N_s = \frac{123 \text{ rad}}{\text{s}} \times (0.0190)^{1/2} \frac{\text{m}^{3/2}}{\text{s}^{1/2}} \times \frac{(\text{s}^2)^{3/4}}{(65.5)^{3/4} (\text{m}^2)^{3/4}} = 0.736 \leftarrow N_s(\text{SI})$$

Convert the operating speed to hertz:

$$\omega = 1170 \frac{\text{rev}}{\text{min}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{\text{Hz} \cdot \text{s}}{\text{rev}} = 19.5 \text{ Hz}$$

Finally, the specific speed in European units is

$$N_s(\text{Eur}) = 19.5 \text{ Hz} \times (0.0190)^{1/2} \frac{\text{m}^{3/2}}{\text{s}^{1/2}} \times \frac{(\text{s}^2)^{3/4}}{(65.5)^{3/4} (\text{m}^2)^{3/4}} = 0.117 \leftarrow N_s(\text{Eur})$$

To relate the specific speeds, form ratios:

$$\frac{N_{s_{cu}}}{N_s(\text{Eur})} = \frac{2000}{0.117} = 17,100$$

$$\frac{N_{s_{cu}}}{N_s(\text{SI})} = \frac{2000}{0.736} = 2720$$

This problem demonstrates the use of “engineering” equations to calculate specific speed for pumps from each of three commonly used sets of units and to compare the results. (Three significant figures have been used for all calculations in this example. Slightly different results would be obtained if more significant figures were carried in intermediate calculations.)

## Similarity Rules

Pump manufacturers offer a limited number of casing sizes and designs. Frequently, casings of different sizes are developed from a common design by increasing or decreasing all dimensions by the same scale ratio. Additional variation in characteristic curves may be obtained by varying the operating speed or by changing the impeller size within a given pump housing. The dimensionless parameters developed in

Chapter 7 form the basis for predicting changes in performance that result from changes in pump size, operating speed, or impeller diameter.

To achieve dynamic similarity requires geometric and kinematic similarity. Assuming similar pumps and flow fields, and neglecting viscous effects, as shown in Chapter 7, we obtain dynamic similarity when the dimensionless flow coefficient is held constant. Dynamically similar operation is assured when two flow conditions satisfy the relation

$$\frac{Q_1}{\omega_1 D_1^3} = \frac{Q_2}{\omega_2 D_2^3} \quad (10.19a)$$

The dimensionless head and power coefficients depend only on the flow coefficient, i.e.,

$$\frac{h}{\omega^2 D^2} = f_1\left(\frac{Q}{\omega D^3}\right) \quad \text{and} \quad \frac{\mathcal{P}}{\rho \omega^3 D^5} = f_2\left(\frac{Q}{\omega D^3}\right)$$

Hence, when we have dynamic similarity, as shown in Example Problem 7.6, pump characteristics at a new condition (subscript 2) may be related to those at an old condition (subscript 1) by

$$\frac{h_1}{\omega_1^2 D_1^2} = \frac{h_2}{\omega_2^2 D_2^2} \quad (10.19b)$$

and

$$\frac{\mathcal{P}_1}{\rho_1 \omega_1^3 D_1^5} = \frac{\mathcal{P}_2}{\rho_2 \omega_2^3 D_2^5} \quad (10.19c)$$

These scaling relationships may be used to predict the effects of changes in pump operating speed, pump size, or impeller diameter within a given housing.

The simplest situation is when we keep the same pump and only the pump speed is changed. Then geometric similarity is assured. Kinematic similarity holds if there is no cavitation; flows are then dynamically similar when the flow coefficients are matched. For this case of speed change with fixed diameter, Eqs. 10.19 become

$$\frac{Q_2}{Q_1} = \frac{\omega_2}{\omega_1} \quad (10.20a)$$

$$\frac{h_2}{h_1} = \frac{H_2}{H_1} = \left(\frac{\omega_2}{\omega_1}\right)^2 \quad (10.20b)$$

$$\frac{\mathcal{P}_2}{\mathcal{P}_1} = \left(\frac{\omega_2}{\omega_1}\right)^3 \quad (10.20c)$$

In Example Problem 10.4, it was shown that a pump performance curve could be modeled within engineering accuracy by the parabolic relationship,  $H = H_0 - AQ^2$ . Since this representation contains two parameters, the pump curve for the new operating condition could be derived by scaling any two points from the performance curve measured at the original operating condition. Usually, the *shutoff condition* and the *best efficiency point* are chosen for scaling. These points are represented by points B and C in Fig. 10.18.

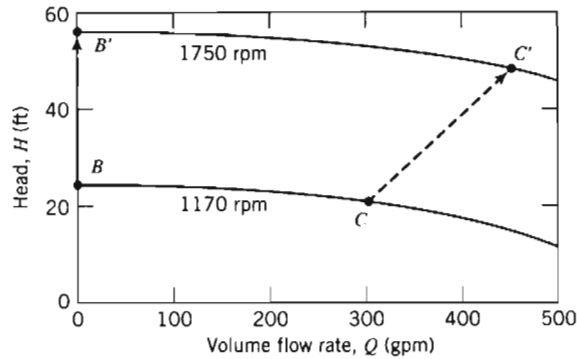


Fig. 10.18 Schematic of a pump performance curve, illustrating the effect of a change in pump operating speed.

As shown by Eq. 10.20a, the flow rate increases by the ratio of operating speeds, so

$$Q_{B'} = \frac{\omega_2}{\omega_1} Q_B = 0 \quad \text{and} \quad Q_{C'} = \frac{\omega_2}{\omega_1} Q_C$$

Thus, point  $B'$  is located directly above point  $B$  and point  $C'$  moves to the right of point  $C$  (in this example  $\omega_2 > \omega_1$ ).

The head increases by the square of the speed ratio, so

$$H_{B'} = H_B \left( \frac{\omega_2}{\omega_1} \right)^2 \quad \text{and} \quad H_{C'} = H_C \left( \frac{\omega_2}{\omega_1} \right)^2$$

Points  $C$  and  $C'$ , where dynamically similar flow conditions are present, are termed *homologous* points for the pump.

We can relate the old operating condition (e.g., running at speed  $N_1 = 1170$  rpm, as shown in Fig. 10.18) to the new, primed one (e.g., running at speed  $N_2 = 1750$  rpm in Fig. 10.18) using the parabolic relation and Eqs. 10.20a and 10.20b,

$$H = H' \left( \frac{\omega_1}{\omega_2} \right)^2 = H_0 - A Q^2 = H'_0 \left( \frac{\omega_1}{\omega_2} \right)^2 - A Q'^2 \left( \frac{\omega_1}{\omega_2} \right)^2$$

or

$$H' = H'_0 - A Q'^2 \quad (10.21)$$

so that for a given pump the factor  $A$  remains unchanged as we change pump speed (as we will verify in Example Problem 10.7).

Efficiency remains relatively constant between dynamically similar operating points when only the pump operating speed is changed. Application of these ideas is illustrated in Example Problem 10.7.

### EXAMPLE 10.7 Scaling Pump Performance Curves

When operated at  $N = 1170$  rpm, a centrifugal pump, with impeller diameter  $D = 8$  in., has shutoff head  $H_0 = 25.0$  ft of water. At the same operating speed, best efficiency occurs at  $Q = 300$  gpm, where the head is  $H = 21.9$  ft of water. Fit these data at 1170 rpm with a parabola. Scale the results to a new operating speed of 1750 rpm. Plot and compare the results.



**EXAMPLE PROBLEM 10.7**

**GIVEN:** Centrifugal pump (with  $D = 8$  in. impeller) operated at  $N = 1170$  rpm.

$Q$ (gpm)	0	300
$H$ (ft of water)	25.0	21.9

- FIND:** (a) The equation of a parabola through the pump characteristics at 1170 rpm.  
 (b) The corresponding equation for a new operating speed of 1750 rpm.  
 (c) Comparison (plot) of the results.

**SOLUTION:**

Assume a parabolic variation in pump head of the form,  $H = H_0 - AQ^2$ . Solving for  $A$  gives

$$A_1 = \frac{H_0 - H}{Q^2} = \frac{(25.0 - 21.9) \text{ ft}}{(300)^2 (\text{gpm})^2} \times \frac{1}{(300)^2 (\text{gpm})^2} = 3.44 \times 10^{-5} \text{ ft}/(\text{gpm})^2$$

The desired equation is

$$H (\text{ft}) = 25.0 - 3.44 \times 10^{-5} [Q (\text{gpm})]^2$$

The pump remains the same, so the two flow conditions are geometrically similar. Assuming no cavitation occurs, the two flows also will be kinematically similar. Then dynamic similarity will be obtained when the two flow coefficients are matched. Denoting the 1170 rpm condition by subscript 1 and the 1750 rpm condition by subscript 2, we have

$$\frac{Q_2}{\omega_2 D_2^3} = \frac{Q_1}{\omega_1 D_1^3} \quad \text{or} \quad \frac{Q_2}{Q_1} = \frac{\omega_2}{\omega_1} = \frac{N_2}{N_1}$$

since  $D_2 = D_1$ . For the shutoff condition,

$$Q_2 = \frac{N_2}{N_1} Q_1 = \frac{1750 \text{ rpm}}{1170 \text{ rpm}} \times 0 \text{ gpm} = 0 \text{ gpm}$$

From the best efficiency point, the new flow rate is

$$Q_2 = \frac{N_2}{N_1} Q_1 = \frac{1750 \text{ rpm}}{1170 \text{ rpm}} \times 300 \text{ gpm} = 449 \text{ gpm}$$

The pump heads are related by

$$\frac{h_2}{h_1} = \frac{H_2}{H_1} = \frac{N_2^2 D_2^2}{N_1^2 D_1^2} \quad \text{or} \quad \frac{H_2}{H_1} = \frac{N_2^2}{N_1^2} = \left( \frac{N_2}{N_1} \right)^2$$

since  $D_2 = D_1$ . For the shutoff condition,

$$H_2 = \left( \frac{N_2}{N_1} \right)^2 H_1 = \left( \frac{1750 \text{ rpm}}{1170 \text{ rpm}} \right)^2 25.0 \text{ ft} = 55.9 \text{ ft}$$

At the best efficiency point,

$$H_2 = \left( \frac{N_2}{N_1} \right)^2 H_1 = \left( \frac{1750 \text{ rpm}}{1170 \text{ rpm}} \right)^2 21.9 \text{ ft} = 49.0 \text{ ft}$$

The curve parameter at 1750 rpm may now be found. Solving for  $A$ , we find

$$A_2 = \frac{H_{02} - H_2}{Q_2^2} = \frac{(55.9 - 49.0) \text{ ft}}{(449)^2 (\text{gpm})^2} \times \frac{1}{(449)^2 (\text{gpm})^2} = 3.44 \times 10^{-5} \text{ ft}/(\text{gpm})^2$$


Note that  $A_2$  at 1750 rpm is the same as  $A_1$  at 1170 rpm. Thus we have demonstrated that the coefficient  $A$  in the parabolic equation does not change when the pump speed is changed. The “engineering” equations for the two curves are

$$H_1 = 25.0 - 3.44 \times 10^{-5}[Q \text{ (gpm)}]^2 \quad (\text{at 1170 rpm})$$

and


$$H_2 = 55.9 - 3.44 \times 10^{-5}[Q \text{ (gpm)}]^2 \quad (\text{at 1750 rpm})$$

The pump curves are compared in the following plot:

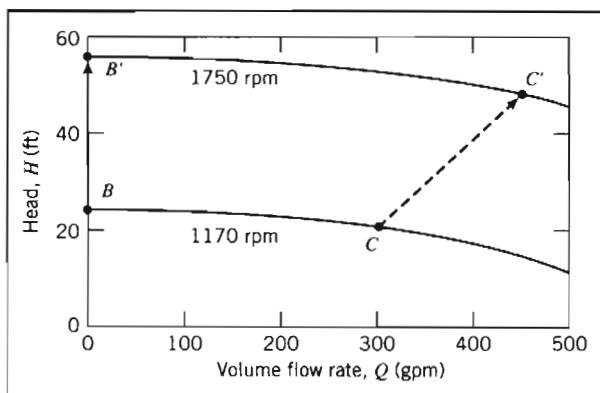

This Example Problem illustrates the procedures for:

- ✓ Obtaining the parabolic “engineering” equation from shut-off head  $H_0$  and best efficiency data on  $Q$  and  $H$ .
- ✓ Scaling pump curves from one speed to another.

 The *Excel* workbook for this Example Problem can be used to generate pump performance curves for a range of speeds.

In principle, geometric similarity would be maintained when pumps of the same geometry, differing in size only by a scale ratio, were tested at the same operating speed. The flow, head, and power would be predicted to vary with *pump size* as

$$Q_2 = Q_1 \left( \frac{D_2}{D_1} \right)^3, \quad H_2 = H_1 \left( \frac{D_2}{D_1} \right)^2, \quad \text{and} \quad \mathcal{P}_2 = \mathcal{P}_1 \left( \frac{D_2}{D_1} \right)^5 \quad (10.22)$$

It is impractical to manufacture and test a series of pump models that differ in size by only a scale ratio. Instead it is common practice to test a given pump casing at a fixed speed with several impellers of different diameter [13]. Because pump casing width is the same for each test, impeller width also must be the same; only impeller diameter  $D$  is changed. As a result, volume flow rate scales in proportion to  $D^2$ , not to  $D^3$ . Pump input power at fixed speed scales as the product of flow rate and head, so it becomes proportional to  $D^4$ . Using this modified scaling method frequently gives results of acceptable accuracy, as demonstrated in several end-of-chapter problems where the method is checked against measured performance data from Appendix D.

It is not possible to compare the efficiencies at the two operating conditions directly. However, viscous effects should become relatively less important as the pump size increases. Thus efficiency should improve slightly as diameter is increased.

Moody [14] suggested an empirical equation that may be used to estimate the maximum efficiency of a prototype pump based on test data from a geometrically similar model of the prototype pump. His equation is written

$$\frac{1 - \eta_p}{1 - \eta_m} = \left( \frac{D_m}{D_p} \right)^{\frac{1}{2}} \quad (10.23)$$

To develop Eq. 10.23, Moody assumed that only the surface resistance changes with model scale so that losses in passages of the same roughness vary as  $1/D^5$ . Unfortunately, it is difficult to maintain the same relative roughness between model and prototype pumps. Further, the Moody model does not account for any difference in mechanical losses between model and prototype, nor does it allow determination of off-peak efficiencies. Nevertheless, scaling of the maximum-efficiency point is useful to obtain a general estimate of the efficiency curve for the prototype pump.

### Cavitation and Net Positive Suction Head

*Cavitation* can occur in any machine handling liquid whenever the local static pressure falls below the vapor pressure of the liquid. When this occurs, the liquid can locally flash to vapor, forming a vapor cavity and significantly changing the flow pattern from the noncavitating condition. The vapor cavity changes the effective shape of the flow passage, thus altering the local pressure field. Since the size and shape of the vapor cavity are influenced by the local pressure field, the flow may become unsteady. The unsteadiness may cause the entire flow to oscillate and the machine to vibrate.

As cavitation commences, it reduces the performance of a pump or turbine rapidly. Thus cavitation must be avoided to maintain stable and efficient operation. In addition, local surface pressures may become high when the vapor cavity implodes or collapses, causing erosion damage or surface pitting. The damage may be severe enough to destroy a machine made from a brittle low-strength material. Obviously cavitation also must be avoided to assure long machine life.

In a pump, cavitation tends to begin at the section where the flow is accelerated into the impeller. Cavitation in a turbine begins where pressure is lowest. The tendency to cavitate increases as local flow speeds increase; this occurs whenever flow rate or machine operating speed is increased.

Cavitation can be avoided if the pressure everywhere in the machine is kept above the vapor pressure of the operating liquid. At constant speed, this requires that a pressure somewhat greater than the vapor pressure of the liquid be maintained at a pump inlet (the *suction*). Because of pressure losses in the inlet piping, the suction pressure may be sub-atmospheric. Therefore it is important to carefully limit the pressure drop in the inlet piping system.

*Net positive suction head (NPSH)* is defined as the difference between the absolute stagnation pressure in the flow at the pump suction and the liquid vapor pressure, expressed as head of flowing liquid [15].<sup>6</sup> The *net positive suction head required (NPSHR)* by a specific pump to suppress cavitation varies with the liquid

<sup>6</sup>*NPSH* may be expressed in any convenient units of measure, such as height of the flowing liquid, e.g., ft of water (hence the term *suction head*), psia, or kPa (abs). When expressed as *head*, *NPSH* is measured relative to the pump impeller centerline.



pumped, and with the liquid temperature and pump condition (e.g., as critical geometric features of the pump are affected by wear). *NPSHR* may be measured in a pump test facility by controlling the input pressure. The results are plotted on the pump performance curve. Typical pump characteristic curves for three impellers tested in the same housing were shown in Fig. 10.8. Experimentally determined *NPSHR* curves for the largest and smallest impeller diameters are plotted near the bottom of the figure.


The *net positive suction head available (NPSHA)* at the pump inlet must be greater than the *NPSHR* to suppress cavitation. Pressure drop in the inlet piping and pump entrance increases as volume flow rate increases. Thus for any system, the *NPSHA* decreases as flow rate is raised. The *NPSHR* of the pump increases as the flow rate is raised. Therefore, as the system flow rate is increased, the curves for *NPSHA* and *NPSHR* versus flow rate ultimately cross. For any inlet system, there is a flow rate that cannot be exceeded if flow through the pump is to remain free from cavitation. Inlet pressure losses may be reduced by increasing the diameter of the inlet piping; for this reason many centrifugal pumps have larger flanges or couplings at the inlet than at the outlet.

### EXAMPLE 10.8 Calculation of Net Positive Suction Head (*NPSH*)

A Peerless Type 4AE11 centrifugal pump (Fig. D.3, Appendix D) is tested at 1750 rpm using a flow system with the layout of Example Problem 10.3. The water level in the inlet reservoir is 3.5 ft above the pump centerline; the inlet line consists of 6 ft of 5 in. diameter straight cast-iron pipe, a standard elbow, and a fully open gate valve. Calculate the net positive suction head available (*NPSHA*) at the pump inlet at a volume flow rate of 1000 gpm of water at 80°F. Compare with the net positive suction head required (*NPSHR*) by the pump at this flow rate. Plot *NPSHA* and *NPSHR* for water at 80°F and 180°F versus volume flow rate.

#### EXAMPLE PROBLEM 10.8

**GIVEN:** A Peerless Type 4AE11 centrifugal pump (Fig. D.3, Appendix D) is tested at 1750 rpm using a flow system with the layout of Example Problem 10.3. The water level in the inlet reservoir is 3.5 ft. above the pump centerline; the inlet line has 6 ft of 5 in. diameter straight cast-iron pipe, a standard elbow, and a fully open gate valve.

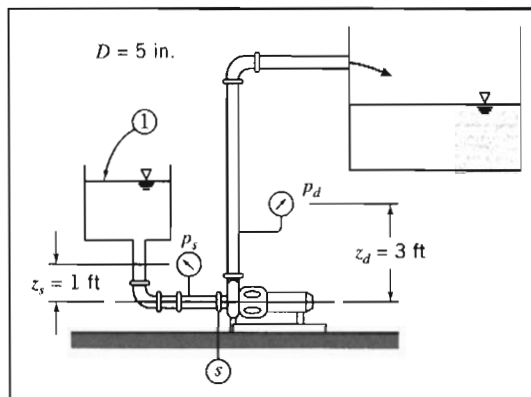

- FIND:** (a) *NPSHA* at  $Q = 1000$  gpm of water at  $80^\circ\text{F}$ .  
 (b) Comparison with *NPSHR* for this pump at  $Q = 1000$  gpm.  
 (c) Plot of *NPSHA* and *NPSHR* for water at  $80^\circ\text{F}$  and  $180^\circ\text{F}$  versus volume flow rate.

**SOLUTION:**

Net positive suction head (*NPSH*) is defined as the difference between the absolute stagnation pressure in the flow at the pump suction and the liquid vapor pressure, expressed as head of flowing liquid. Therefore it is necessary to calculate the head at the pump suction.

Apply the energy equation for steady, incompressible pipe flow to compute the pressure at the pump inlet and thus the *NPSHA*. Denote the reservoir level as ① and the pump suction as ②, as shown above.

$$\text{Governing equation: } p_1 + \frac{1}{2}\rho\bar{V}_1^2 + \rho gz_1 = p_s + \frac{1}{2}\rho\bar{V}_s^2 + \rho g z_s + \rho h_{\ell T}$$

Assumption:  $\bar{V}_1$  is negligible. Thus

$$p_s = p_1 + \rho g(z_1 - z_s) - \frac{1}{2}\rho\bar{V}_s^2 - \rho h_{\ell T} \quad (1)$$

The total head loss is

$$h_{\ell T} = \left( \sum K + \sum f \frac{L_e}{D} + f \frac{L}{D} \right) \frac{1}{2} \rho \bar{V}_s^2 \quad (2)$$

Substituting Eq. 2 into Eq. 1 and dividing by  $\rho g$ ,

$$H_s = H_1 + z_1 - z_s - \left( \sum K + \sum f \frac{L_e}{D} + f \frac{L}{D} + 1 \right) \frac{\bar{V}_s^2}{2g} \quad (3)$$

Evaluating the friction factor and head loss,

$$f = f(Re, e/D); \quad Re = \frac{\rho \bar{V} D}{\mu} = \frac{\bar{V} D}{\nu}; \quad \bar{V} = \frac{Q}{A}; \quad A = \frac{\pi D^2}{4}$$

For 5 in. (nominal) pipe,  $D = 5.047$  in.

$$D = 5.047 \text{ in.} \times \frac{\text{ft}}{12 \text{ in.}} = 0.421 \text{ ft}, \quad A = \frac{\pi D^2}{4} = 0.139 \text{ ft}^2$$

$$\bar{V} = \frac{1000 \text{ gal}}{\text{min}} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{1}{0.139 \text{ ft}^2} \times \frac{\text{min}}{60 \text{ s}} = 16.0 \text{ ft/s}$$

From Table A.7, for water at  $T = 80^\circ\text{F}$ ,  $\nu = 0.927 \times 10^{-5} \text{ ft}^2/\text{s}$ .

The Reynolds number is

$$Re = \frac{\bar{V} D}{\nu} = \frac{16.0 \text{ ft}}{\text{s}} \times \frac{0.421 \text{ ft}}{\text{s}} \times \frac{\text{s}}{0.927 \times 10^{-5} \text{ ft}^2} = 7.27 \times 10^5$$

From Table 8.1,  $e = 0.00085$  ft, so  $e/D = 0.00202$ . From Eq. 8.37,  $f = 0.0237$ . The minor loss coefficients are

$$\text{Entrance} \quad K = 0.5$$

$$\text{Standard elbow} \quad \frac{L_e}{D} = 30$$

$$\text{Open gate valve} \quad \frac{L_e}{D} = 8$$

Substituting,

$$\left( \sum K + \sum f \frac{L_e}{D} + f \frac{L}{D} + 1 \right) = 0.5 + 0.0237(30 + 8) + 0.0237 \left( \frac{6}{0.421} \right) + 1 = 2.74$$

The heads are

$$H_1 = \frac{p_{\text{atm}}}{\rho g} = \frac{14.7 \text{ lbf}}{\text{in}^2} \times \frac{144 \text{ in}^2}{\text{ft}^2} \times \frac{\text{ft}^3}{1.93 \text{ slug}} \times \frac{\text{s}^2}{32.2 \text{ ft}} \times \frac{\text{slug} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2} = 34.1 \text{ ft (abs)}$$

$$\frac{\bar{V}_s^2}{2g} = \frac{1}{2} \times (16.0)^2 \frac{\text{ft}^2}{\text{s}^2} \times \frac{\text{s}^2}{32.2 \text{ ft}} = 3.98 \text{ ft}$$

Thus,

$$H_s = 34.1 \text{ ft} + 3.5 \text{ ft} - (2.74)3.98 \text{ ft} = 26.7 \text{ ft (abs)}$$

To obtain *NPSHA*, add velocity head and subtract vapor head. Thus

$$NPSHA = H_s + \frac{\bar{V}_s^2}{2g} - H_v$$


The vapor pressure for water at 80°F is  $p_v = 0.507$  psia. The corresponding head is  $H_v = 1.17$  ft of water. Thus,

$$NPSHA = 26.7 + 3.98 - 1.17 = 29.5 \text{ ft} \longleftarrow \text{NPSHA}$$

The pump curve (Fig. D.3, Appendix D) shows that at 1000 gpm the pump requires

$$NPSHR = 10.0 \text{ ft} \longleftarrow \text{NPSHR}$$

Results of similar computations for water at 80°F are plotted in the figure on the left below. (*NPSHR* values are obtained from the pump curves in Fig. D.3, Appendix D.)

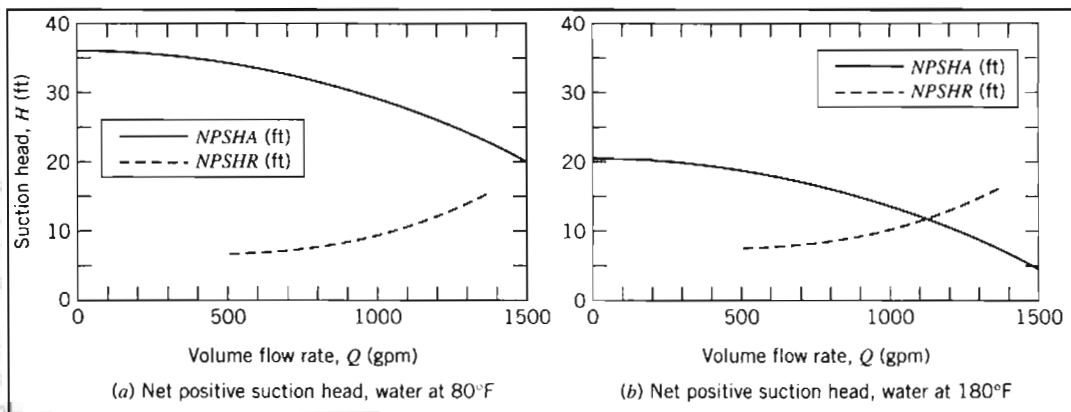

Results of computation for water at 180°F are plotted in the figure on the right above. The vapor pressure for water at 180°F is  $p_v = 7.51$  psia. The corresponding head is  $H_v = 17.3$  ft of water. This high vapor pressure reduces the *NPSHA*, as shown in the plot.

This problem illustrates the procedures used for checking whether a given pump is in danger of experiencing cavitation:

- ✓ Equation 3 and the plots show that the  $NPSHA$  decreases as flow rate  $Q$  (or  $\dot{V}_s$ ) increases; on the other hand, the  $NPSHR$  increases with  $Q$ , so if the flow rate is high enough, a pump will likely experience cavitation (when  $NPSHA < NPSHR$ ).
- ✓ The  $NPSHR$  for any pump increases with flow rate  $Q$  because local fluid velocities within the pump increase, causing locally reduced pressures and tending to promote cavitation.
- ✓ For this pump, at 80°F, the pump appears to have  $NPSHA > NPSHR$  at all flow rates, so it would never experience cavitation; at 180°F, cavitation would occur around 1100 gpm, but from Fig. D.3, the pump best efficiency is around 900 gpm, so it would probably not be run at 1100 gpm—the pump would probably not cavitate even with the hotter water.



The *Excel* workbook for this Example Problem can be used to generate the  $NPSHA$  and  $NPSHR$  curves for a variety of pumps and water temperatures.

## 10-5 APPLICATIONS TO FLUID SYSTEMS

We define a *fluid system* as the combination of a fluid machine and a network of pipes or channels that convey fluid. The engineering application of fluid machines in an actual system requires matching the machine and system characteristics, while satisfying constraints of energy efficiency, capital economy, and durability. We have alluded to the vast assortment of hardware offered by competing suppliers; this variety verifies the commercial importance of fluid machinery in modern engineering systems.

Usually it is more economical to specify a production machine rather than a custom unit, because products of established vendors have known, published performance characteristics, and they must be durable to survive in the marketplace. Application engineering consists of making the best selection from catalogs of available products. In addition to machine characteristic curves, all manufacturers provide a wealth of dimensional data, alternative configuration and mounting schemes, and technical information bulletins to guide intelligent application of their products.

This section consists of a brief review of relevant theory, followed by example applications using data taken from manufacturer literature. Two subsections treat machines for doing work on a fluid (pumps, fans, blowers, compressors, and propellers) and machines for extracting work from a fluid (turbines and windmills). Selected performance curves for centrifugal pumps and fans are presented in Appendix D. These may be studied as typical examples of performance data supplied by manufacturers. The curves may also be used to help solve the equipment selection and system design problems at the end of the chapter.

## Machines for Doing Work on a Fluid

We will consider various machines for doing work on a fluid, but we first make a few general points. As we saw in Example Problem 10.3, a typical pump, for example, produces a smaller head as the flow rate is increased. On the other hand, the head (which includes major and minor losses) required to maintain flow in a pipe system increases with the flow rate. Hence, as shown graphically<sup>7</sup> in Fig. 10.19, a pump-system will run at the *operating point*, the flow rate at which the pump head rise and required system head match. (Figure 10.19 also shows a pump efficiency curve, indicating that, for optimum pump selection, a pump should be chosen that has maximum efficiency at the operating point flow rate.) The pump-system shown in Fig. 10.19 is stable. If for some reason the flow rate falls below the operating flow rate, the pump pressure head rises above the required system head, and so the flow rate increases back to the operating point. Conversely, if the flow rate momentarily increases, the required head exceeds the head provided by the pump, and the flow rate decreases back to the operating point. This notion of an operating point applies to each machine we will consider (although, as we will see, the operating points are not always stable).

The system pressure requirement at a given flow rate is composed of frictional pressure drop (major loss due to friction in straight sections of constant area and minor loss due to entrances, fittings, valves, and exits) and pressure changes due to gravity (static lift may be positive or negative). It is useful to discuss the two limiting cases of pure friction and pure lift before considering their combination.

The *all-friction* system head versus flow curve, with no static lift, starts at zero flow and head, as shown in Fig. 10.20a. For this system the total head required is the sum of major and minor losses,

$$h_{l_r} = \sum h_l + \sum h_{l_m} = \sum f \frac{L}{D} \frac{\bar{V}^2}{2} + \sum \left( f \frac{L_e}{D} \frac{\bar{V}^2}{2} + K \frac{\bar{V}^2}{2} \right)$$

For turbulent flow (the usual flow regime in engineering systems), as we learned in Chapter 8 (see Fig. 8.12), the friction factors approach constant and the minor loss coefficients  $K$  and equivalent lengths  $L_e$  are also constant. Hence  $h_{l_r} \sim \bar{V}^2 \sim Q^2$  so that the system curve is approximately parabolic. (In reality, because the friction factors  $f$  only approach constants as the regime becomes fully turbulent, it turns out that  $Q^{1.75} < h_{l_r} < Q^2$ .) This means the system curve with pure friction becomes steeper as


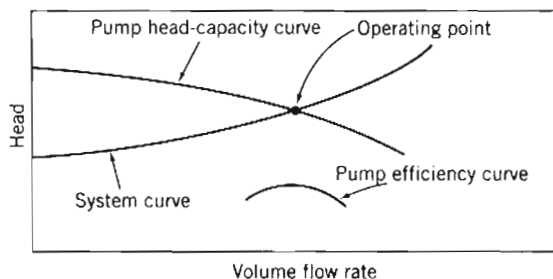


Fig. 10.19 Superimposed system head-flow and pump head-capacity curves.

<sup>7</sup> While a graphical representation is useful for visualizing the pump-system matching, we typically use analytical or numerical methods to determine the operating point (*Excel* is very useful for this).

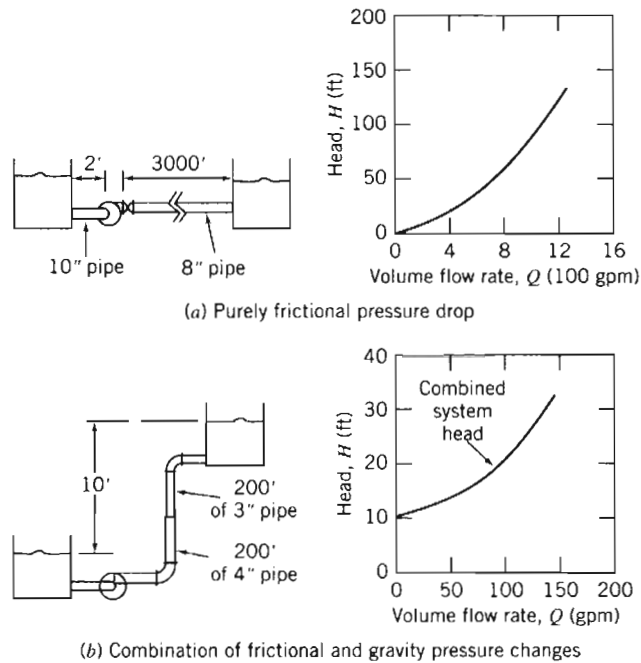

**Fig. 10.20** Schematic diagrams illustrating basic types of system head-flow curves (adapted from [8]).

flow rate increases. To develop the friction curve, losses are computed at various flow rates and then plotted.

Pressure change due to elevation difference is independent of flow rate. Thus the *pure lift* system head-flow curve is a horizontal straight line. The gravity head is evaluated from the change in elevation in the system.

All actual flow systems have some frictional pressure drop and some elevation change. Thus all system head-flow curves may be treated as the sum of a frictional component and a static-lift component. The head for the complete system at any flow rate is the sum of the frictional and lift heads. The system head-flow curve is plotted in Fig. 10.20b.

Whether the resulting system curve is *steep* or *flat* depends on the relative importance of friction and gravity. Friction drop may be relatively unimportant in the water supply to a high-rise building (e.g., the Sears Tower in Chicago, which is nearly 400 m tall), and gravity lift may be negligible in an air-handling system for a one-story building.

In Section 8-7 we obtained a form of the energy equation for a control volume consisting of a pump-pipe system,

$$\left( \frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 \right) - \left( \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 \right) = h_{t_r} - \Delta h_{\text{pump}} \quad (8.49)$$

Replacing  $\Delta h_{\text{pump}}$  with  $h_a$ , representing the head added by any machine (not only a pump) that does work on the fluid, and rearranging Eq. 8.49, we obtain a more general expression

$$\frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 + h_a = \frac{p_2}{\rho} + \alpha_2 \frac{\bar{V}_2^2}{2} + gz_2 + h_{t_r} \quad (10.24a)$$

Dividing by  $g$  gives

$$\frac{p_1}{\rho g} + \alpha_1 \frac{\bar{V}_1^2}{2g} + z_1 + H_a = \frac{p_2}{\rho g} + \alpha_2 \frac{\bar{V}_2^2}{2g} + z_2 + \frac{h_{lT}}{g} \quad (10.24b)$$

where  $H_a$  is the energy per unit weight (i.e., the head, with dimensions of  $L$ ) added by the machine.

### a. Pumps

The pump operating point is defined by superimposing the system curve and the pump performance curve, as shown in Fig. 10.19. The point of intersection is the only condition where the pump and system flow rates are equal and the pump and system heads are equal simultaneously. The procedure used to determine the match point for a pumping system is illustrated in Example Problem 10.9.

## EXAMPLE 10.9 Finding the Operating Point for a Pumping System

The pump of Example Problem 10.7, operating at 1750 rpm, is used to pump water through the pipe system of Fig. 10.20a. Develop an algebraic expression for the general shape of the system resistance curve. Calculate and plot the system resistance curve. Solve graphically for the system operating point. Obtain an approximate analytical expression for the system resistance curve. Solve analytically for the system operating point.

### EXAMPLE PROBLEM 10.9

**GIVEN:** Pump of Example Problem 10.7, operating at 1750 rpm, with  $H = H_0 - AQ^2$ , where  $H_0 = 55.9$  ft and  $A = 3.44 \times 10^{-5}$  ft/(gpm)<sup>2</sup>. System of Fig. 10.20a, where  $L_1 = 2$  ft of  $D_1 = 10$  in. pipe and  $L_2 = 3000$  ft of  $D_2 = 8$  in. pipe, conveying water between two large reservoirs whose surfaces are at the same level.

**FIND:** (a) A general algebraic expression for the system head curve.  
 (b) The system head curve by direct calculation.  
 (c) The system operating point using a graphical solution.  
 (d) An *approximate* analytical expression for the system head curve.  
 (e) The system operating point using the analytical expression of part (d).

#### SOLUTION:

Apply the energy equation to the flow system of Fig. 10.20a.

Governing equation:

$$\frac{p_0}{\rho g} + \alpha_0 \frac{\bar{V}_0^2}{2g} + z_0 + H_a = \frac{p_3}{\rho g} + \alpha_3 \frac{\bar{V}_3^2}{2g} + z_3 + \frac{h_{lT}}{g} \quad (10.24b)$$

where  $z_0$  and  $z_3$  are the surface elevations of the supply and discharge reservoirs, respectively.

**Assumptions:** (1)  $p_0 = p_3 = p_{\text{atm}}$ .  
 (2)  $\bar{V}_0 = \bar{V}_3 = 0$ .  
 (3)  $z_0 = z_3$  (given).

Simplifying, we obtain

$$H_a = \frac{h_{lT}}{g} = \frac{h_{lT01}}{g} + \frac{h_{lT23}}{g} = H_{lT} \quad (1)$$



where sections ① and ② are located just upstream and downstream from the pump, respectively. The total head losses are the sum of the major and minor losses, so

$$h_{lT01} = K_{\text{ent}} \frac{\bar{V}_1^2}{2} + f_1 \frac{L_1}{D_1} \frac{\bar{V}_1^2}{2} = \left( K_{\text{ent}} + f_1 \frac{L_1}{D_1} \right) \frac{\bar{V}_1^2}{2}$$

$$h_{lT23} = f_2 \frac{L_2}{D_2} \frac{\bar{V}_2^2}{2} + K_{\text{exit}} \frac{\bar{V}_2^2}{2} = \left( f_2 \frac{L_2}{D_2} + K_{\text{exit}} \right) \frac{\bar{V}_2^2}{2}$$

From continuity,  $\bar{V}_1 A_1 = \bar{V}_2 A_2$ , so  $\bar{V}_1 = \bar{V}_2 \frac{A_2}{A_1} = \bar{V}_2 \left( \frac{D_2}{D_1} \right)^2$ .

Hence

$$H_{lT} = \frac{h_{lT}}{g} = \left( K_{\text{ent}} + f_1 \frac{L_1}{D_1} \right) \frac{\bar{V}_2^2}{2g} \left( \frac{D_2}{D_1} \right)^4 + \left( f_2 \frac{L_2}{D_2} + K_{\text{exit}} \right) \frac{\bar{V}_2^2}{2g}$$

or, upon simplifying,

$$H_{lT} = \left[ \left( K_{\text{ent}} + f_1 \frac{L_1}{D_1} \right) \left( \frac{D_2}{D_1} \right)^4 + f_2 \frac{L_2}{D_2} + K_{\text{exit}} \right] \frac{\bar{V}_2^2}{2g} \quad \leftarrow H_{lT}$$

This is the head loss equation for the system. At the operating point, as indicated in Eq. 1, the head loss is equal to the head produced by the pump, given by

$$H_a = H_0 - A Q^2 \quad (2)$$


where  $H_0 = 55.9$  ft and  $A = 3.44 \times 10^{-5}$  ft/(gpm)<sup>2</sup>.

The head loss in the system and head produced by the pump can be computed for a range of flow rates:

$Q$ (gpm)	$\bar{V}_1$ (ft/s)	$Re_1$ (1000)	$f_1$ (-)	$\bar{V}_2$ (ft/s)	$Re_2$ (1000)	$f_2$ (-)	$H_{lT}$ (ft)	$H_a$ (ft)
0	0.00	0	-	0.00	0	-	0.0	55.9
100	0.41	32	0.026	0.64	40	0.025	0.7	55.6
200	0.82	63	0.023	1.28	79	0.023	2.7	54.5
300	1.23	95	0.022	1.91	119	0.023	5.9	52.8
400	1.63	127	0.022	2.55	158	0.022	10.3	50.4
500	2.04	158	0.021	3.19	198	0.022	15.8	47.3
600	2.45	190	0.021	3.83	237	0.022	22.6	43.3
700	2.86	222	0.021	4.47	277	0.022	30.6	39.0
800	3.27	253	0.021	5.11	317	0.022	39.7	33.9
900	3.68	285	0.021	5.74	356	0.021	50.1	28.0
1000	4.09	317	0.021	6.38	396	0.021	61.7	21.5
1100	4.49	348	0.020	7.02	435	0.021	74.4	
1200	4.90	380	0.020	7.66	475	0.021	88.4	
1300	5.31	412	0.020	8.30	515	0.021	103	
1400	5.72	443	0.020	8.94	554	0.021	120	
1500	6.13	475	0.020	9.57	594	0.021	137	

The pump curve and the system resistance curve are plotted below:



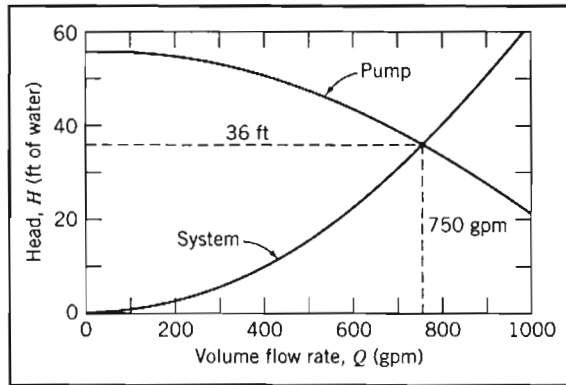

The graphical solution is shown on the plot. At the operating point,  $H \approx 36$  ft and  $Q \approx 750$  gpm.

We can obtain more accuracy from the graphical solution using the following approach: Because the Reynolds number corresponds to the fully turbulent regime,  $f \approx \text{const.}$ , we can simplify the equation for the head loss and write it in the form

$$H_{l_r} \approx CQ^2 \quad (3)$$

where  $C = 8/\pi^2 D^4 g$  times the term in square brackets in the expression for  $H_{l_r}$ . We can obtain a value for  $C$  directly from Eq. 3 by using values for  $H_{l_r}$  and  $Q$  from the table at a point close to the anticipated operating point. For example, from the  $Q = 700$  gpm data point,

$$C = \frac{H_{l_r}}{Q^2} = \frac{30.6 \text{ ft}}{700^2 (\text{gpm})^2} = 6.24 \times 10^{-5} \text{ ft}/(\text{gpm})^2$$

Hence, the approximate analytical expression for the system head curve is

$$H_{l_r} = 6.24 \times 10^{-5} \text{ ft}/(\text{gpm})^2 [Q(\text{gpm})]^2 \longleftarrow H_{l_r}$$

Using Eqs. 2 and 3 in Eq. 1, we obtain

$$H_0 - AQ^2 = CQ^2$$

Solving for  $Q$ , the volume flow rate at the operating point, gives

$$Q = \left[ \frac{H_0}{A + C} \right]^{1/2}$$

For this case,

$$Q = \left[ 55.9 \text{ ft} \times \frac{(\text{gpm})^2}{(3.44 \times 10^{-5} + 6.24 \times 10^{-5}) \text{ ft}} \right]^{1/2} = 760 \text{ gpm} \longleftarrow Q$$

The volume flow rate may be substituted into either expression for head to calculate the head at the operating point as

$$H = CQ^2 = 6.24 \times 10^{-5} \frac{\text{ft}}{(\text{gpm})^2} \times (760)^2 (\text{gpm})^2 = 36.0 \text{ ft} \longleftarrow H$$


We can see that in this problem our reading of the operating point from the graph was pretty good: The reading of head was in agreement with the calculated head; the reading of flow rate was less than 2% different from the calculated result.

Note that both sets of results are approximate. We can get a more accurate, and easier, result by using *Excel's Solver* or *Goal Seek* to find the operating point, allowing for the fact that the friction factors vary,

however slightly, with Reynolds number. Doing so yields an operating point flow rate of 761 gpm and head of 36.0 ft.

This problem illustrates the procedures used to find the operating point of a pump and flow system.

- ✓ The approximate methods—graphical, and assuming friction losses are proportional to  $Q^2$ —yielded results close to the detailed computation using *Excel*. We conclude that since most pipe flow friction coefficients are accurate to only about  $\pm 10\%$  anyway, the approximate methods are accurate enough. On the other hand, use of *Excel*, when available, is easier as well as being more accurate.
- ✓ Equation 3, for the head loss in the system, must be replaced with an equation of the form  $H = Z_0 + CQ^2$  when the head  $H$  required by the system has a component  $Z_0$  due to gravity as well as a component due to head losses.

 The *Excel* workbook for this Example Problem was used to generate the tabulated results as well as the most accurate solution. It can be adapted for use with other pump-pipe systems.

The shapes of both the pump curve and the system curve can be important to system stability in certain applications. The pump curve shown in Fig. 10.19 is typical of the curve for a new centrifugal pump of intermediate specific speed, for which the head decreases smoothly and monotonically as the flow rate increases from shut-off. Two effects take place gradually as the system ages: the pump wears and its performance decreases (it produces less pressure head so the pump curve gradually moves downward toward lower head at each flow rate) and the system head increases (the system curve gradually moves toward higher head at each flow rate because of pipe aging<sup>8</sup>). The effect of these changes is to move the operating point toward lower flow rates over time. The magnitude of the change in flow rate depends on the shapes of the pump and system curves.

The capacity losses, as pump wear occurs, are compared for steep (friction dominated) and flat (gravity dominated) system curves in Fig. 10.21. The loss in capacity is greater for the flat system curve than for the steep system curve.

The pump efficiency curve is also plotted in Fig. 10.19. The original system operating point usually is chosen to coincide with the maximum efficiency by careful choice of pump size and operating speed. Pump wear increases internal leakage, thus reducing delivery and lowering peak efficiency. In addition, as shown in Fig. 10.21, the operating point moves toward lower flow rate, away from the best efficiency point. Thus the reduced system performance may not be accompanied by reduced energy usage.

Sometimes it is necessary to satisfy a high-head, low-flow requirement; this forces selection of a pump with low specific speed. Such a pump may have a performance curve with a slightly rising head near shutoff, as shown in Fig. 10.22. When the

<sup>8</sup>As the pipe ages, mineral deposits form on the wall (see Fig. 8.13), raising the relative roughness and reducing the pipe diameter compared with the as-new condition. See Problem 10.62 for typical friction-factor data.

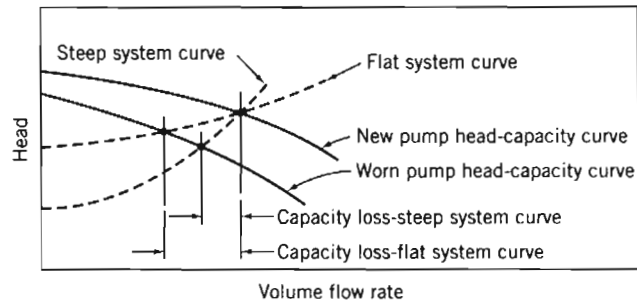


Fig. 10.21 Effect of pump wear on flow delivery to system.

system curve is steep, the operating point is well defined and no problems with system operation should result. However, use of the pump with a flat system curve could easily cause problems, especially if the actual system curve were slightly above the computed curve or the pump delivery were below the charted head-capacity performance.

If there are two points of intersection of the pump and system curves, the system may operate at either point, depending on conditions at startup; a disturbance could cause the system operating point to shift to the second point of intersection. Under certain conditions, the system operating point can alternate between the two points of intersection, causing unsteady flow and unsatisfactory performance.

Instead of a single pump of low specific speed, a multi-stage pump may be used in this situation. Since the flow rate through all stages is the same, but the head per stage is less than in the single-stage unit, the specific speed of the multi-stage pump is higher (see Eq. 7.16a).

The head-flow characteristic curve of some high specific speed pumps shows a dip at capacities below the peak efficiency point, as shown in Fig. 10.23. Caution is needed in applying such pumps if it is ever necessary to operate the pump at or near the dip in the head-flow curve. No trouble should occur if the system characteristic is steep, for there will be only one point of intersection with the pump curve. Unless this intersection is near point *B*, the system should return to stable, steady-state operation following any transient disturbance.

Operation with a flat system curve is more problematic. It is possible to have one, two, or three points of intersection of the pump and system curves, as suggested in the figure. Points *A* and *C* are stable operating points, but point *B* is unstable: If the flow rate momentarily falls below  $Q_B$ , for whatever reason, the flow rate will continue to fall (to  $Q_A$ ) because the head provided by the pump is now less than that required


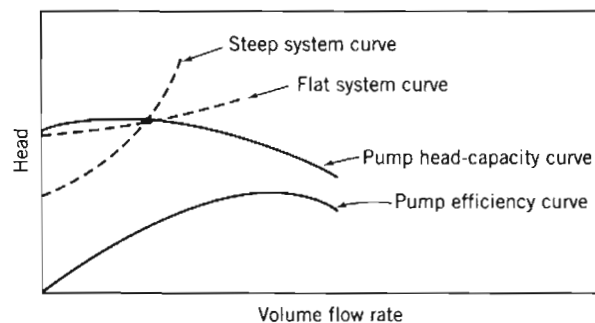


Fig. 10.22 Operation of low specific speed pump near shutoff.

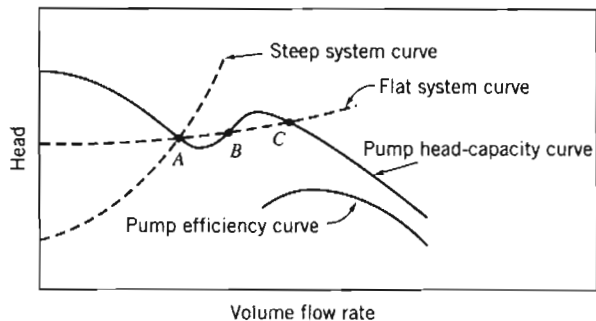


**Fig. 10.23** Operation of high specific speed pump near the dip.

by the system; conversely, if the flow surges above  $Q_B$ , the flow rate will continue to increase (to  $Q_C$ ) because the pump head exceeds the required head. With the flat system curve, the pump may “hunt” or oscillate periodically or aperiodically.

Several other factors can adversely influence pump performance: pumping hot liquid, pumping liquid with entrained vapor, and pumping liquid with high viscosity. According to [5], the presence of small amounts of entrained gas can drastically reduce performance. As little as 4 percent vapor can reduce pump capacity by more than 40 percent. Air can enter the suction side of the pumping circuit where pressure is below atmospheric if any leaks are present.

Adequate submergence of the suction pipe is necessary to prevent air entrainment. Insufficient submergence can cause a vortex to form at the pipe inlet. If the vortex is strong, air can enter the suction pipe. References 16 and 17 give guidelines for adequate suction-basin design to eliminate the likelihood of vortex formation.

Increased fluid viscosity may dramatically reduce the performance of a centrifugal pump [17]. Typical experimental test results are plotted in Fig. 10.24. In the figure, pump performance with water ( $\mu = 1$  cP) is compared with performance in pumping a more viscous liquid ( $\mu = 220$  cP). The increased viscosity reduces the head produced by the pump. At the same time the input power requirement is increased. The result is a dramatic drop in pump efficiency at all flow rates.

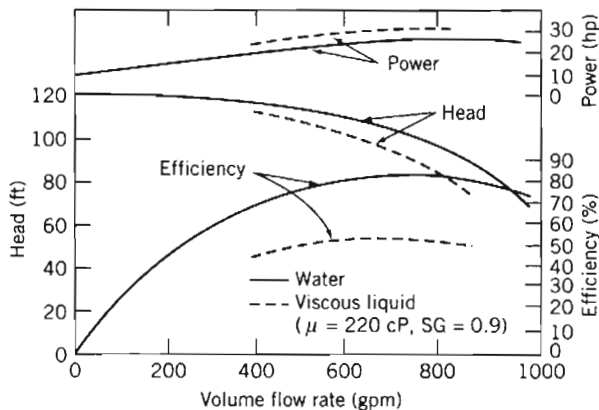

**Fig. 10.24** Effect of liquid viscosity on performance of a centrifugal pump [5].

Heating a liquid raises its vapor pressure. Thus to pump a hot liquid requires additional pressure at the pump inlet to prevent cavitation. (See Example Problem 10.8.)

In some systems, such as city water supply or chilled-water circulation, there may be a wide range in demand with a relatively constant system resistance. In these cases, it may be possible to operate constant-speed pumps in series or parallel to supply the system requirements without excessive energy dissipation due to outlet throttling. Two or more pumps may be operated in parallel or series to supply flow at high demand conditions, and fewer units can be used when demand is low.

For pumps in *series*, the combined performance curve is derived by adding the head rises at each flow rate (Fig. 10.25). The increase in flow rate gained by operating pumps in series depends upon the resistance of the system being supplied. For two pumps in series, delivery will increase at any system head. The characteristic curves for one pump and for two identical pumps in series are

$$H_1 = H_0 - A Q^2$$

and

$$H_{2s} = 2(H_0 - A Q^2) = 2H_0 - 2A Q^2$$

Figure 10.25 is a schematic illustrating the application of two identical pumps in series. A reasonable match to the system requirement is possible—while keeping efficiency high—if the system curve is relatively steep.

In an actual system, it is not appropriate simply to connect two pumps in series. If only one pump were powered, flow through the second, unpowered pump would cause additional losses, raising the system resistance. It also is desirable to arrange the pumps and piping so that each pump can be taken out of the pumping circuit for maintenance, repair, or replacement when needed. Thus a system of bypasses, valves, and check valves may be necessary in an actual installation [13, 17].

Pumps also may be combined in *parallel*. The resulting performance curve, shown in Fig. 10.26, is obtained by adding the pump capacities at each head. The characteristic curves for one pump and for two identical pumps in parallel are

$$H_1 = H_0 - A Q^2$$

and

$$H_{2p} = H_0 - A \left( \frac{Q}{2} \right)^2 = H_0 - \frac{1}{4} A Q^2$$

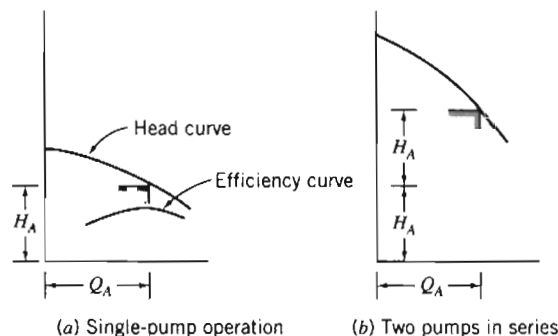


Fig. 10.25 Operation of two centrifugal pumps in series.

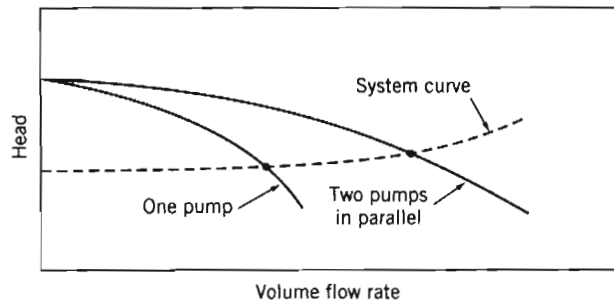


Fig. 10.26 Operation of two centrifugal pumps in parallel.

The schematic in Fig. 10.26 shows that the parallel combination may be used most effectively to increase system capacity when the system curve is relatively flat.

An actual system installation with parallel pumps also requires more thought to allow satisfactory operation with only one pump powered. It is necessary to prevent backflow through the pump that is not powered. To prevent backflow, and to permit pump removal, a more complex and expensive piping setup is needed.

Many other piping arrangements and pump combinations are possible. Pumps of different sizes, heads, and capacities may be combined in series, parallel, or series-parallel arrangements. Obviously the complexity of the piping and control system increases rapidly. In many applications the complexity is due to a requirement that the

Table 10.1 Power Requirements for Constant- and Variable-Speed Drive Pumps

Throttle Valve Control with Constant-Speed (1750 rpm) Motor								
Flow Rate (gpm)	System Head (ft)	Valve <sup>a</sup> Efficiency (%)	Pump Head (ft)	Pump Efficiency (%)	Pump Power (bhp)	Motor Efficiency (%)	Motor Input (hp)	Power Input <sup>b</sup> (hp)
1700	180	100.0	180	80.0	96.7	90.8	106.5	106.7
1500	150	78.1	192	78.4	92.9	90.7	102.4	102.6
1360	131	66.2	198	76.8	88.6	90.7	97.7	97.9
1100	102	49.5	206	72.4	79.1	90.6	87.3	87.5
900	83	39.5	210	67.0	71.3	90.3	79.0	79.1
600	62	29.0	214	54.0	60.1	90.0	66.8	66.9

Variable-Speed Drive with Energy-Efficient Motor								
Flow Rate (gpm)	Pump/System Head (ft)	Pump Efficiency (%)	Pump Power (bhp)	Motor Speed (rpm)	Motor Efficiency (%)	Motor Input (hp)	Control Efficiency (%)	Power Input (hp)
1700	180	80.0	96.7	1750	93.7	103.2	97.0	106.4
1500	150	79.6	71.5	1580	94.0	76.0	96.1	79.1
1360	131	78.8	57.2	1470	93.9	60.9	95.0	64.1
1100	102	78.4	36.2	1275	93.8	38.6	94.8	40.7
900	83	77.1	24.5	1140	92.3	26.5	92.8	28.6
600	62	72.0	13.1	960	90.0	14.5	89.1	16.3

<sup>a</sup> Valve efficiency is the ratio of system pressure to pump pressure.

<sup>b</sup> Power input is motor input divided by 0.998 starter efficiency.

system handle a variety of flow rates—a range of flow rates can be generated by using pumps in parallel and in series, and by using throttling valves. Throttling valves are usually necessary because constant-speed motors drive most pumps, so simply using a network of pumps (with some on and others off) without throttling valves only allows the flow rate to be varied in discrete steps. The disadvantage of throttling valves is that they can be a major loss of energy, so that a given flow rate will require a larger power supply than would otherwise be the case. Some typical data for a throttling valve, given in Table 10.1 [18], show a decreasing valve efficiency (the percentage of pump pressure available that is not consumed by the valve) as the valve is used to reduce the flow rate.

Use of *variable-speed operation* allows infinitely variable control of system flow rate with high energy efficiency and without extra plumbing complexity. A further advantage is that a variable-speed drive system offers much simplified control of system flow rate. The cost of efficient variable-speed drive systems continues to decrease because of advances in power electronic components and circuits. The system flow rate can be controlled by varying pump operating speed with impressive savings in pumping power and energy usage. The input power reduction afforded by use of a variable-speed drive is illustrated in Table 10.1 [18]. At 1100 gpm the power input is cut almost 54 percent for the variable-speed system; the reduction at 600 gpm is more than 75 percent.

The reduction in input power requirement at reduced flow with the variable-speed drive is impressive. The energy savings, and therefore the cost savings, depend on the specific duty cycle on which the machine operates. Reference 18 presents information on mean duty cycles for centrifugal pumps used in the chemical process industry; Fig. 10.27 is a plot showing the histogram of these data. The plot shows that although the system must be designed and installed to deliver full rated capacity, this condition seldom occurs. Instead, more than half the time, the system operates at 70 percent capacity or below. The energy savings that result from use of a variable-speed drive for this duty cycle are estimated in Example Problem 10.10.

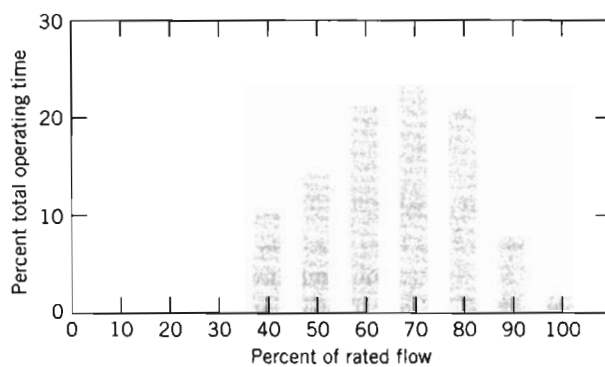


Fig. 10.27 Mean duty cycle for centrifugal pumps in the chemical and petroleum industries [18].

### EXAMPLE 10.10 Energy Savings with Variable-Speed Centrifugal Pump Drive

Combine the information on mean duty cycle for centrifugal pumps given in Fig. 10.27 with the drive data in Table 10.1. Estimate the annual savings in pumping energy and cost that could be achieved by implementing a variable-speed drive system.

**EXAMPLE PROBLEM 10.10**


**GIVEN:** Consider the variable-flow, variable-pressure pumping system of Table 10.1. Assume the system operates on the typical duty cycle shown in Fig. 10.27, 24 hours per day, year round.

**FIND:** (a) An estimate of the reduction in annual energy usage obtained with the variable-speed drive.  
(b) The energy costs and the cost saving due to variable-speed operation.

**SOLUTION:**

Full-time operation involves 365 days  $\times$  24 hours per day, or 8760 hours per year. Thus the percentages in Fig. 10.27 may be multiplied by 8760 to give annual hours of operation.

First plot the pump input power versus flow rate using data from Table 10.1 to allow interpolation, as shown below.

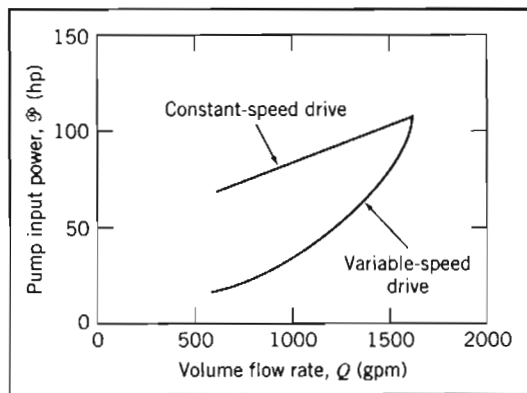

Illustrate the procedure using operation at 70 percent flow rate as a sample calculation. At 70 percent flow rate, the pump delivery is  $0.7 \times 1700 \text{ gpm} = 1190 \text{ gpm}$ . From the plot, the pump input power requirement at this flow rate is 90 hp for the constant-speed drive. At this flow rate, the pump operates 23 percent of the time, or  $0.23 \times 8760 = 2015$  hours per year. The total energy consumed at this duty point is  $90 \text{ hp} \times 2015 \text{ hr} = 1.81 \times 10^5 \text{ hp} \cdot \text{hr}$ . The electrical energy consumed is

$$E = 1.81 \times 10^5 \text{ hp} \cdot \text{hr} \times \frac{0.746 \text{ kW} \cdot \text{hr}}{\text{hp} \cdot \text{hr}} = 1.35 \times 10^5 \text{ kW} \cdot \text{hr}$$

The corresponding cost of electricity [at  $\$0.12/(\text{kW} \cdot \text{hr})$ ] is

$$C = 1.35 \times 10^5 \text{ kW} \cdot \text{hr} \times \frac{\$0.12}{\text{kW} \cdot \text{hr}} = \$16,250$$

The following tables were prepared using similar calculations:

Constant-Speed Drive, 8760 hr/yr					
Flow (%)	Flow (gpm)	Time (%)	Time (hr)	Power (hp)	Energy (hp · hr)
100	1700	2	175	109	$1.91 \times 10^4$
90	1530	8	701	103	$7.20 \times 10^4$
80	1360	21	1840	96	$17.7 \times 10^4$
70	1190	23	2015	90	$18.1 \times 10^4$
60	1020	21	1840	84	$15.4 \times 10^4$
50	850	15	1314	77	$10.2 \times 10^4$
40	680	10	876	71	$6.21 \times 10^4$
Total:					$76.7 \times 10^4$



Summing the last column of the table shows that for the constant-speed drive system the annual energy consumption is  $7.67 \times 10^5$  hp · hr. The electrical energy consumption is

$$E = 7.67 \times 10^5 \text{ hp} \cdot \text{hr} \times \frac{0.746 \text{ kW} \cdot \text{hr}}{\text{hp} \cdot \text{hr}} = 572,000 \text{ kW} \cdot \text{hr} \leftarrow E_{\text{CSD}}$$

At \$0.12 per kilowatt hour, the energy cost for the constant-speed drive system is

$$C = 572,000 \text{ kW} \cdot \text{hr} \times \frac{\$0.12}{\text{kW} \cdot \text{hr}} = \$68,700 \leftarrow C_{\text{CSD}}$$

Variable-Speed Drive, 8760 hr/yr					
Flow (%)	Flow (gpm)	Time (%)	Time (hr)	Power (hp)	Energy (hp · hr)
100	1700	2	175	109	$1.90 \times 10^4$
90	1530	8	701	81	$5.71 \times 10^4$
80	1360	21	1840	61	$11.2 \times 10^4$
70	1190	23	2015	46	$9.20 \times 10^4$
60	1020	21	1840	34	$6.29 \times 10^4$
50	850	15	1314	26	$3.37 \times 10^4$
40	680	10	876	19	$1.68 \times 10^4$
				Total:	$39.4 \times 10^4$

Summing the last column of the table shows that for the variable-speed drive system, the annual energy consumption is  $3.94 \times 10^5$  hp · hr. The electrical energy consumption is

$$E = 3.94 \times 10^5 \text{ hp} \cdot \text{hr} \times \frac{0.746 \text{ kW} \cdot \text{hr}}{\text{hp} \cdot \text{hr}} = 294,000 \text{ kW} \cdot \text{hr} \leftarrow E_{\text{VSD}}$$

At \$0.12 per kilowatt hour, the energy cost for the variable-speed drive system is only

$$C = 294,000 \text{ kW} \cdot \text{hr} \times \frac{\$0.12}{\text{kW} \cdot \text{hr}} = \$35,250 \leftarrow C_{\text{VSD}}$$

Thus, in this application, the variable-speed drive reduces energy consumption by 278,000 kW·hr (47 percent). The cost saving is an impressive \$33,450 annually. One could afford to install a variable-speed drive even at considerable cost penalty. The savings in energy cost are appreciable each year and continue throughout the life of the system.

This problem illustrates the energy and cost savings that can be gained by the use of variable-speed pump drives. We see that the specific benefits depend on the system and its operating duty cycle.

The *Excel* workbook for this Example Problem was used for plotting the graph, for obtaining the interpolated data, and for performing all calculations. It can be easily modified for other such analyses. Note that results were rounded down to three significant figures *after* calculation.



### b. Fans, Blowers, and Compressors

Fans are designed to handle air or vapor. Fan sizes range from that of the cooling fan on a piece of electronic equipment, which moves a cubic meter of air per hour and requires a few watts of power, to that of the ventilation fans for the Channel Tunnel, which move thousands of cubic meters of air per minute and require many hundreds of kilowatts of power. Fans are produced in varieties similar to those of pumps: They range from radial-flow (centrifugal) to axial-flow devices. As with pumps, the characteristic curve shapes for fans depend on the fan type. Some typical performance curves for centrifugal fans are presented in Appendix D. The curves may be used to choose fans to solve some of the equipment-selection and system-design problems at the end of the chapter.


An exploded view of a medium-size centrifugal fan is shown in Fig. 10.28. Some commonly used terminology is shown on the figure.

The pressure rise produced by fans is several orders of magnitude less than that for pumps. Another difference between fans and pumps is that measurement of flow rate is more difficult in gases and vapors than in liquids. There is no convenient analog to the “catch the flow in a bucket” method of measuring liquid flow rates! Consequently, fan testing requires special facilities and procedures [6, 20]. Because the pressure rise produced by a fan is small, usually it is impractical to measure flow rate with a restriction flow meter such as an orifice, flow nozzle, or venturi. It may be necessary to use an auxiliary fan to develop enough pressure rise to permit measurement of flow rate with acceptable accuracy using a restriction flow meter. An alternative is to use an instrumented duct in which the flow rate is calculated from a pitot traverse. Appropriate standards may be consulted to obtain complete information on specific fan-test methods and data-reduction procedures for each application [6, 20].

Because the pressure change across a fan is small, the dynamic pressure at the fan exit may be an appreciable fraction of the pressure rise. Consequently, it is necessary to carefully specify the basis on which pressure measurements are made. Data for both static and total pressure rise and for efficiency, based on both pressure rises, are frequently plotted on the same characteristic graph (Fig. 10.29).

The coordinates may be plotted in physical units (e.g., inches of water, cubic feet per minute, and horsepower) or as dimensionless flow and pressure coefficients. The difference between the total and static pressures is the dynamic pressure, so the vertical distance between these two curves is proportional to  $Q^2$ .

Centrifugal fans are used frequently; we will use them as examples. The centrifugal fan developed from simple paddle-wheel designs, in which the wheel was a disk

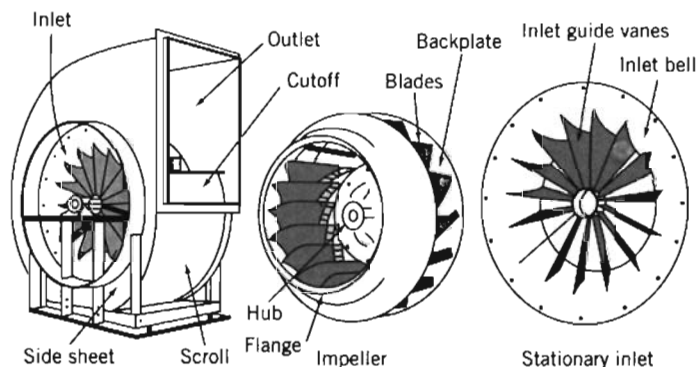

**Fig. 10.28** Exploded view of typical centrifugal fan [19].

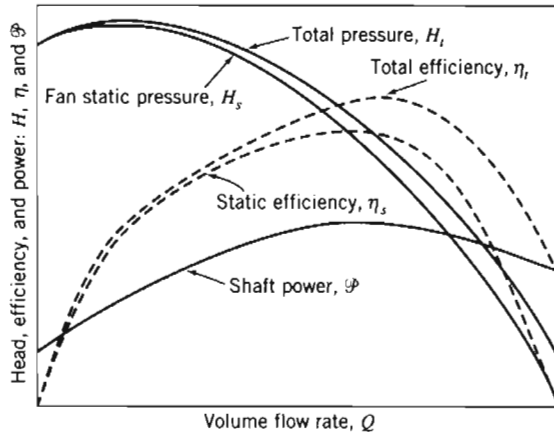


Fig. 10.29 Typical characteristic curves for fan with backward-curved blades [21].

carrying radial flat plates. (This primitive form still is used in non-clogging fans such as in commercial clothes dryers.) Refinements have led to the three general types shown in Figs. 10.30a through c, with backward-curved, radial-tipped, and forward-curved blades. All the fans illustrated have blades that are curved at their inlet edges to approximate shockless flow between the blade and the inlet flow direction. These three designs are typical of fans with sheet-metal blades, which are relatively simple to manufacture and thus relatively inexpensive. The forward-curved design illustrated in the figure has very closely spaced blades; it is frequently called a *squirrel-cage* fan because of its resemblance to the exercise wheels found in animal cages.

As fans become larger in size and power demand, efficiency becomes more important. The streamlined *airfoil blades* shown in Fig. 10.30d are much less sensitive to inlet flow direction and improve efficiency markedly compared with the thin blades shown in diagrams a through c. The added expense of airfoil blades for large metal fans may be life-cycle cost effective. Airfoil blades are being used more frequently on small fans as impellers molded from plastic become common.

As is true for pumps, the total pressure rise across a fan is approximately proportional to the absolute velocity of the fluid at the exit from the wheel. Therefore the characteristic curves produced by the basic blade shapes tend to differ from each


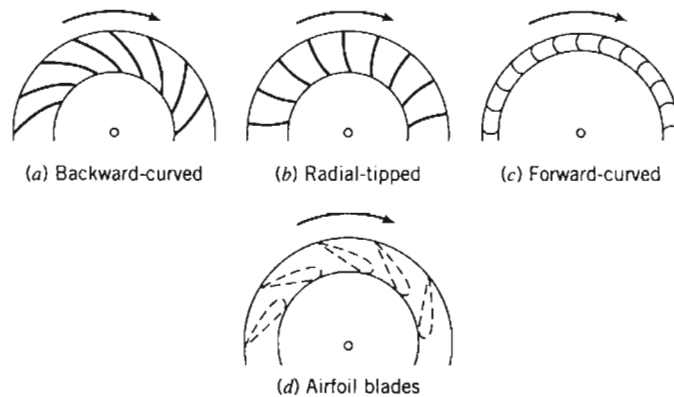


Fig. 10.30 Typical types of blading used for centrifugal fan wheels [21].

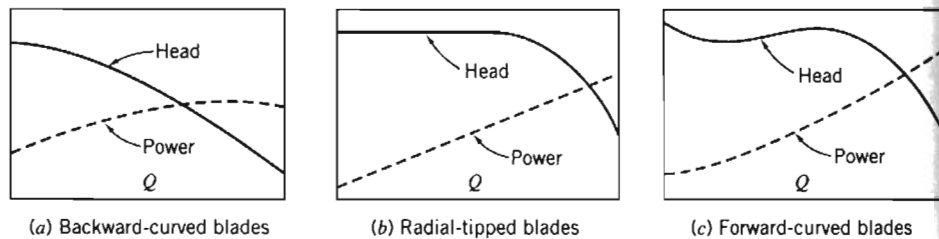

**Fig. 10.31** General features of performance curves for centrifugal fans with backward-, radial-, and forward-curved blades [21].


other. The typical curve shapes are shown in Fig. 10.31, where both pressure rise and power requirements are sketched. Fans with backward-curved blade tips typically have a power curve that reaches a maximum and then decreases as flow rate increases. If the fan drive is sized properly to handle the peak power, it is impossible to overload the drive with this type of fan.

The power curves for fans with radial and forward-curved blades rise as flow rate increases. If the fan operating point is higher than the design flow rate, the motor may be overloaded. Such fans cannot be run for long periods at low back pressures.

Fans with backward-curved blades are best for installations with large power demand and continuous operation. The forward-curved blade fan is preferred where low first cost and small size are important and where service is intermittent. Forward-curved blades require lower tip speed to produce a specified head; lower blade tip speed means reduced noise. Thus forward-curved blades may be specified for heating and air conditioning applications to minimize noise.

Characteristic curves for axial-flow (*propeller*) fans differ markedly from those for centrifugal fans. The power curve, Fig. 10.32, is especially different, as it tends to decrease continuously as flow rate increases. Thus it is impossible to overload a properly sized drive for an axial-flow fan.

The simple propeller fan is often used for ventilation; it may be free-standing or mounted in an opening, as a window fan, with no inlet or outlet duct work. Ducted axial-flow fans have been studied extensively and developed to high efficiency [22]. Modern designs, with airfoil blades, mounted in ducts and often fitted with guide vanes, can deliver large volumes against high resistances with high efficiency. The primary deficiency of the axial-flow fan is the non-monotonic slope of the pressure characteristic: in certain ranges of flow rate the fan may pulsate. Because axial-flow fans tend to have high rotational speeds, they can be noisy.

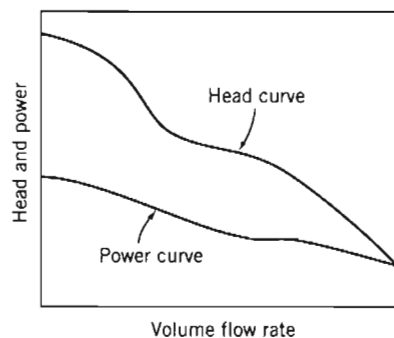

**Fig. 10.32** Characteristic curves for a typical axial-flow fan [21].

Selection and installation of a fan always requires compromise. To minimize energy consumption, it is desirable to operate a fan at its highest efficiency point. To reduce the fan size for a given capacity, it is tempting to operate at higher flow rate than that at maximum efficiency. In an actual installation, this tradeoff must be made considering such factors as available space, initial cost, and annual hours of operation. It is not wise to operate a fan at a flow rate below maximum efficiency. Such a fan would be larger than necessary and some designs, particularly those with forward-curved blades, can be unstable and noisy when operated in this region.

It is necessary to consider the duct system at both the inlet and the outlet of the fan to develop a satisfactory installation. Anything that disrupts the uniform flow at the fan inlet is likely to impair performance. Nonuniform flow at the inlet causes the wheel to operate unsymmetrically and may decrease capacity dramatically. Swirling flow also adversely affects fan performance. Swirl in the direction of rotation reduces the pressure developed; swirl in the opposite direction can increase the power required to drive the fan.

The fan specialist may not be allowed total freedom in designing the best flow system for the fan. Sometimes a poor flow system can be improved without too much effort by adding splitters or straightening vanes to the inlet. Some fan manufacturers offer guide vanes that can be installed for this purpose.

Flow conditions at the fan discharge also affect installed performance. Every fan produces nonuniform outlet flow. When the fan is connected to a length of straight duct, the flow becomes more uniform and some excess kinetic energy is transformed to static pressure. If the fan discharges directly into a large space with no duct, the excess kinetic energy of the nonuniform flow is dissipated. A fan in a flow system with no discharge ducting may fall considerably short of the performance measured in a laboratory test setup.

The flow pattern at the fan outlet may be affected by the amount of resistance present downstream. The effect of the system on fan performance may be different at different points along the fan pressure-flow curve. Thus, it may not be possible to accurately predict the performance of a fan, *as installed*, on the basis of curves measured in the laboratory.

Fans may be scaled up or down in size or speed using the basic laws developed for fluid machines in Chapter 7. It is possible for two fans to operate with fluids of significantly different density,<sup>9</sup> so pressure is used instead of head (which uses density) as a dependent parameter and density must be retained in the dimensionless groups. The dimensionless groups appropriate for fan scaling are

$$\Pi_1 = \frac{Q}{\omega D^3}, \quad \Pi_2 = \frac{P}{\rho \omega^2 D^2}, \quad \text{and} \quad \Pi_3 = \frac{\mathcal{P}}{\rho \omega^3 D^5} \quad (10.25)$$

Once again dynamic similarity is assured when the flow coefficients are matched. Thus when

$$Q' = Q \left( \frac{\omega'}{\omega} \right) \left( \frac{D'}{D} \right)^3 \quad (10.26a)$$

then

$$p' = p \left( \frac{\rho'}{\rho} \right) \left( \frac{\omega'}{\omega} \right)^2 \left( \frac{D'}{D} \right)^2 \quad (10.26b)$$

<sup>9</sup> Density of the flue gas handled by an induced-draft fan on a steam powerplant may be 40 percent less than the density of the air handled by the forced-draft fan in the same plant.

and

$$\mathcal{P}' = \mathcal{P} \left( \frac{\rho'}{\rho} \right) \left( \frac{\omega'}{\omega} \right)^3 \left( \frac{D'}{D} \right)^5 \quad (10.26c)$$

As a first approximation, the efficiency of the scaled fan is assumed to remain constant, so

$$\eta' = \eta \quad (10.26d)$$


When head is replaced by pressure, and density is included, the expression defining the specific speed of a fan becomes

$$N_s = \frac{\omega Q^{1/2} \rho^{3/4}}{p^{3/4}} \quad (10.27)$$

A fan scale-up with density variation is the subject of Example Problem 10.11.

### EXAMPLE 10.11 Scaling of Fan Performance

Performance curves [21] are given below for a centrifugal fan with  $D = 36$  in. and  $N = 600$  rpm, as measured on a test stand using cool air ( $\rho = 0.075$  lbm/ft<sup>3</sup>). Scale the data to predict the performance of a similar fan with  $D' = 42$  in.,  $N' = 1150$  rpm, and  $\rho' = 0.045$  lbm/ft<sup>3</sup>. Estimate the delivery and power of the larger fan when it operates at a system pressure equivalent to 7.4 in. of H<sub>2</sub>O. Check the specific speed of the fan at the new operating point.

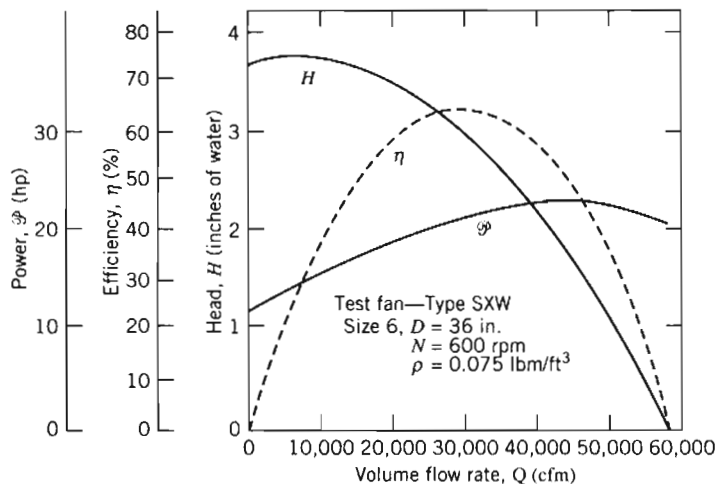

### EXAMPLE PROBLEM 10.11

**GIVEN:** Performance data as shown for centrifugal fan with  $D = 36$  in.,  $N = 600$  rpm, and  $\rho = 0.075$  lbm/ft<sup>3</sup>.

- FIND:**
- The predicted performance of a geometrically similar fan with  $D' = 42$  in., at  $N' = 1150$  rpm, with  $\rho' = 0.045$  lbm/ft<sup>3</sup>.
  - An estimate of the delivery and input power requirement if the larger fan operates against a system resistance of 7.4 in. H<sub>2</sub>O.
  - The specific speed of the larger fan at this operating point.

**SOLUTION:**

Develop the performance curves at the new operating condition by scaling the test data point-by-point. Using Eqs. 10.26 and the data from the curves at  $Q = 30,000$  cfm, the new volume flow rate is

$$Q' = Q \left( \frac{N'}{N} \right) \left( \frac{D'}{D} \right)^3 = 30,000 \text{ cfm} \left( \frac{1150}{600} \right) \left( \frac{42}{36} \right)^3 = 91,300 \text{ cfm}$$

The fan pressure rise is

$$p' = p \frac{\rho'}{\rho} \left( \frac{N'}{N} \right)^2 \left( \frac{D'}{D} \right)^2 = 2.96 \text{ in. H}_2\text{O} \left( \frac{0.045}{0.075} \right) \left( \frac{1150}{600} \right)^2 \left( \frac{42}{36} \right)^2 = 8.88 \text{ in. H}_2\text{O}$$

and the new power input is

$$\mathcal{P}' = \mathcal{P} \left( \frac{\rho'}{\rho} \right) \left( \frac{N'}{N} \right)^3 \left( \frac{D'}{D} \right)^5 = 21.4 \text{ hp} \left( \frac{0.045}{0.075} \right) \left( \frac{1150}{600} \right)^3 \left( \frac{42}{36} \right)^5 = 195 \text{ hp}$$


We assume the efficiency remains constant between the two scaled points, so

$$\eta' = \eta = 0.64$$

Similar calculations at other operating points give the results tabulated below:

$Q$ (cfm)	$p$ (in. H <sub>2</sub> O)	$\mathcal{P}$ (hp)	$\eta$ (%)	$Q'$ (cfm)	$p'$ (in. H <sub>2</sub> O)	$\mathcal{P}'$ (hp)
0	3.68	11.1	0	0	11.0	101
10,000	3.75	15.1	37	30,400	11.3	138
20,000	3.50	18.6	59	60,900	10.5	170
30,000	2.96	21.4	65	91,300	8.88	195
40,000	2.12	23.1	57	122,000	6.36	211
50,000	1.02	23.1	34	152,000	3.06	211
60,000	0	21.0	0	183,000	0	192

To allow interpolation among the calculated points, it is convenient to plot the results:

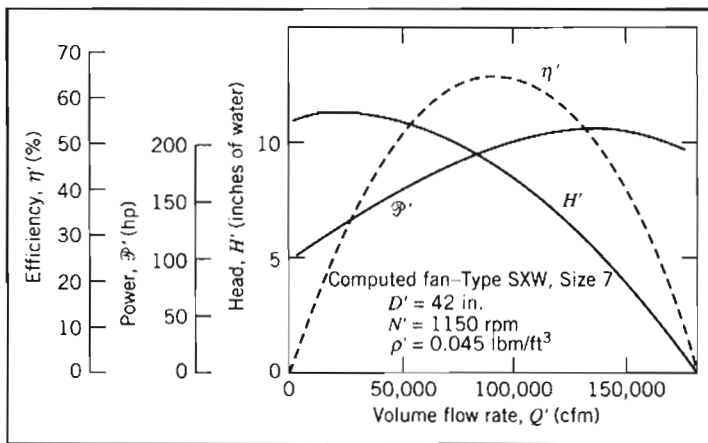

From the head-capacity curve, the larger fan should deliver 110,000 cfm at 7.5 in. H<sub>2</sub>O system head, with an efficiency of about 58 percent.


This operating point is only slightly to the right of peak efficiency for this fan, so it is a reasonable point at which to operate the fan. The specific speed of the fan at this operating point (in U.S. customary units) is given by direct substitution into Eq. 10.27:

$$N_{s_{cu}} = \frac{\omega Q^{1/2} \rho^{3/4}}{p^{3/4}} = \frac{(1150 \text{ rpm})(110,000 \text{ cfm})^{1/2} (0.045 \text{ lbm/ft}^3)^{3/4}}{(7.5 \text{ in. H}_2\text{O})^{3/4}} = 8223 \leftarrow N_{s_{cu}}$$

In nondimensional (SI) units,

$$N_s = \frac{(120 \text{ rad/s})(3110 \text{ m}^3/\text{s})^{1/2} (0.721 \text{ kg/m}^3)^{3/4}}{(1.86 \times 10^3 \text{ N/m}^2)^{3/4}} = 18.5 \leftarrow N_s(\text{SI})$$

This problem illustrates the procedure for scaling performance of fans operating on gases with two different densities.

 The *Excel* workbook for this Example Problem was used for plotting the graphs, for obtaining the interpolated data, and for performing all calculations. It can be easily modified for other such analyses.

Three methods are available to control fan delivery: motor speed control, inlet dampers, and outlet throttling. Speed control was treated thoroughly in the section on pumps. The same benefits of reduced energy usage and noise are obtained with fans, and the cost of variable-speed drive systems continues to drop.

Inlet dampers may be used effectively on some large centrifugal fans. However, they decrease efficiency and cannot be used to reduce the fan flow rate below about 40 percent of rated capacity. Outlet throttling is cheap but wasteful of energy. For further details, consult either Reference 19 or 21; both are particularly comprehensive. Osborne [23] also treats noise, vibration, and the mechanical design of fans.


Fans also may be combined in series, parallel, or more complex arrangements to match varying system resistance and flow needs. These combinations may be analyzed using the methods described for pumps. References 24 and 25 are excellent sources for loss data on air flow systems.

*Blowers* have performance characteristics similar to fans, but they operate (typically) at higher speeds and increase the fluid pressure more than do fans. Jorgensen [19] divides the territory between fans and compressors at an arbitrary pressure level that changes the air density by 5 percent; he does not demarcate between fans and blowers.

*Compressors* may be centrifugal or axial, depending on specific speed. Automotive turbochargers, small gas-turbine engines, and natural-gas pipeline boosters usually are centrifugal. Large gas turbines and jet aircraft engines frequently are axial-flow machines.

Compressor performance depends on operating speed, mass flow rate, and density of the working fluid. It is common practice to present compressor performance data on the coordinates shown in Fig. 10.33, as *pressure ratio* versus *corrected mass flow rate*, with *corrected speed* as a parameter. It turns out that normalizing the mass flow rate by  $\sqrt{T}/p$ , where  $T$  and  $p$  are absolute temperature and pressure, removes the effects of density variations. Normalizing the compressor operating speed with  $1/\sqrt{T}$  relates the tip speed of the compressor wheel to the speed of sound (this forms a dimensional Mach number—see Chapter 11).



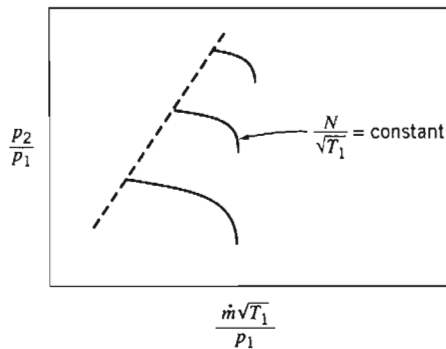

**Fig. 10.33** Typical performance map for a centrifugal compressor [2].

At first glance, the performance curves in Fig. 10.33 appear incomplete. Two phenomena limit the range of mass flow rate at which a compressor can be operated at any given speed. The maximum mass flow rate is limited by choking—the approach to  $M = 1$  at some point in the machine—see Chapter 12. Performance deteriorates rapidly as the choking limit is approached.

The mass flow rate is limited at the low end by either *rotating stall* or *surge* in the compressor. Rotating stall occurs when cells of separated flow form and block a segment of the compressor rotor. The effect is to reduce performance and unbalance the rotor; this causes severe vibration and can quickly lead to damage. Thus it is impossible to operate a compressor with rotating stall and it must be avoided.

Centrifugal and axial compressors may also be limited by surge, a cyclic pulsation phenomenon that causes the mass flow rate through the machine to vary, and can even reverse it! Surge is accompanied by loud noises and can damage the compressor or related components; it too must be avoided.

In general, as shown in Fig. 10.33, the higher the performance, the more narrow the range in which the compressor may be operated successfully. Thus a compressor must be carefully matched to its flow system to assure satisfactory operation. Compressor matching in natural gas pipeline applications is discussed by Vincent-Genod [26]. Perhaps the most common application of high-speed fluid machinery today is in automotive turbochargers (worldwide approximately 3 million units are sold each year with turbochargers). Automotive turbocharger matching is described in manufacturers' literature [27].

### c. Positive-Displacement Pumps

Pressure is developed in positive-displacement pumps through volume reductions caused by movement of the boundary in which the fluid is confined. In contrast to turbomachines, positive displacement pumps can develop high pressures at relatively low speeds because the pumping effect depends on volume change instead of dynamic action.

Positive-displacement pumps frequently are used in hydraulic systems at pressures ranging up to 40 MPa (6000 psi). A principal advantage of hydraulic power is the high *power density* (power per unit weight or unit size) that can be achieved: for a given power output, a hydraulic system can be lighter and smaller than a typical electric-drive system.

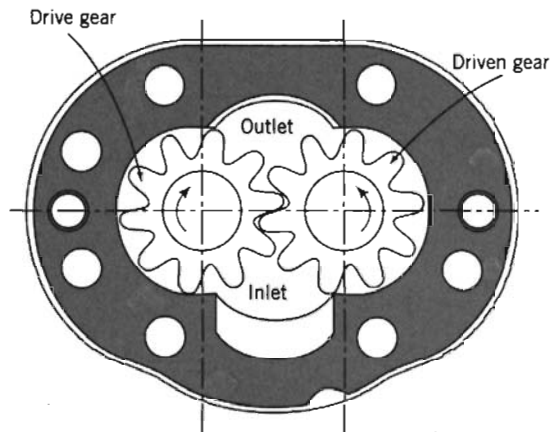


Fig. 10.34 Schematic of typical gear pump [28].


Numerous types of positive-displacement pumps have been developed. A few examples include piston pumps, vane pumps, and gear pumps. Within each type, pumps may be fixed- or variable-displacement. A comprehensive classification of pump types is given in [16].

The performance characteristics of most positive-displacement pumps are similar; in this section we shall focus on gear pumps. This pump type typically is used, for example, to supply pressurized lubricating oil in internal combustion engines. Figure 10.34 is a schematic diagram of a typical gear pump. Oil enters the space between the gears at the bottom of the pump cavity. Oil is carried outward and upward by the teeth of the rotating gears and exits through the outlet port at the top of the cavity. Pressure is generated as the oil is forced toward the pump outlet; leakage and backflow are prevented by the closely fitting gear teeth at the center of the pump, and by the small clearances maintained between the side faces of the gears and the pump housing. The close clearances require the hydraulic fluid to be kept extremely clean by full-flow filtration.

Figure 10.35 is a photo showing the parts of an actual gear pump; it gives a good idea of the robust housing and bearings needed to withstand the large pressure forces developed within the pump. It also shows pressure-loaded side plates designed to “float”—to allow thermal expansion—while maintaining the smallest possible side clearance between gears and housing. Many ingenious designs have been developed for pumps; details are beyond the scope of our treatment here, which will focus on performance characteristics. For more details consult Reference 28 or 29.

Typical performance curves of pressure versus delivery for a medium-duty gear pump are shown in Fig. 10.36. The pump size is specified by its displacement per revolution and the working fluid is characterized by its viscosity and temperature. Curves for tests at three constant speeds are presented in the diagram. At each speed, delivery decreases slightly as pressure is raised. The pump displaces the same volume, but as pressure is raised, both leakage and backflow increase, so delivery decreases slightly. Leakage fluid ends up in the pump housing, so a case drain must be provided to return this fluid to the system reservoir.


*Volumetric efficiency*—shown by the dashed curves—is defined as actual volumetric delivery divided by pump displacement. Volumetric efficiency decreases as pressure is raised or pump speed is reduced. *Overall efficiency*—shown by the solid

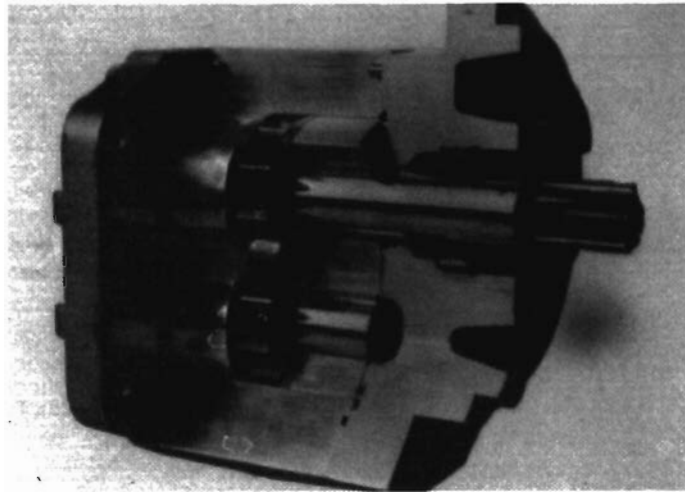

**Fig. 10.35** Illustration of gear pump with pressure-loaded side plates [28]. (Photo courtesy Sauer Sundstrand Company.)


curves—is defined as power delivered to the fluid divided by power input to the pump. Overall efficiency tends to rise (and reaches a maximum at intermediate pressure) as pump speed increases.

Thus far we have shown pumps of fixed displacement only. The extra cost and complication of variable-displacement pumps is motivated by the energy saving they permit during partial-flow operation. In a variable-displacement pump, delivery can

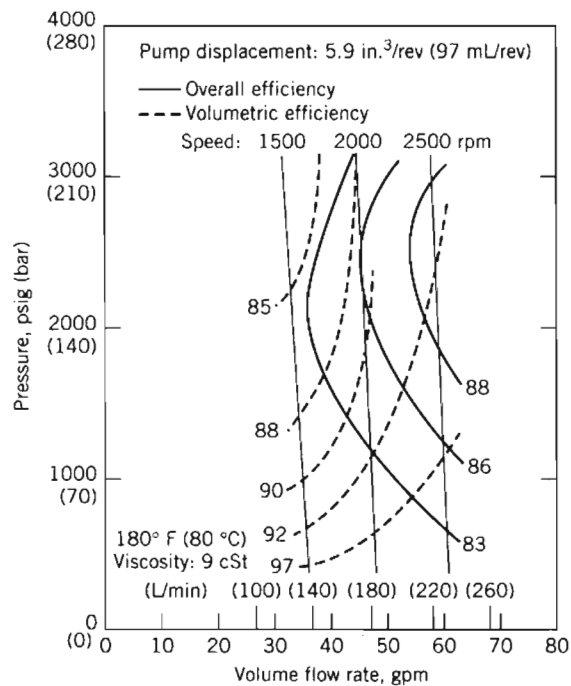

**Fig. 10.36** Performance characteristics of typical gear pump [28].



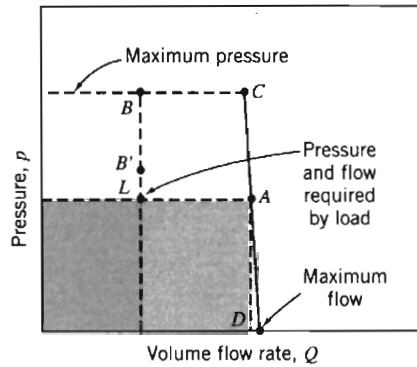

**Fig. 10.37** Pressure-flow diagram illustrating system losses at part load [28].

be varied to accommodate the load. Load sensing can be used to reduce the delivery pressure and thus the energy expenditure still further during part-load operation. Some pump designs allow pressure relief to further reduce power loss during standby operation.

Figure 10.37 illustrates system losses with a fixed-displacement pump compared with losses for variable-displacement and variable-pressure pumps. Assume the pressure and flow required by the load at partial-flow operation correspond to point  $L$  on the diagram. A fixed-displacement pump will operate along curve  $CD$ ; its delivery will be at point  $A$ . Since the load requires only the flow at  $L$ , the remaining flow (between  $L$  and  $A$ ) must be bypassed back to the reservoir. Its pressure is dissipated by throttling. Consequently the system power loss will be the area beneath line  $LA$ .

A variable-displacement pump operating at constant pressure will deliver just enough flow to supply the load, but at a pressure represented by point  $B$ . The system power loss will be proportional to the area to the left of line  $BL$ . Control of delivery pressure using load sensing can be used to reduce power loss. With a load sensing pump of variable displacement, the pressure supplied is only slightly higher than is needed to move the load. A pump with load sensing would operate at the flow and pressure of point  $B'$ . The system loss would be reduced significantly to the area to the left of line  $B'L$ .

The best system choice depends on the operating duty cycle. Complete details of these and other hydraulic power systems are presented in [28].

### EXAMPLE 10.12 Performance of a Positive-Displacement Pump

A hydraulic pump, with the performance characteristics of Fig. 10.36, operates at 2000 rpm in a system that requires  $Q = 20$  gpm at  $p = 1500$  psig to the load at one operating condition. Check the volume of oil per revolution delivered by this pump. Compute the required pump power input, the power delivered to the load, and the power dissipated by throttling at this condition. Compare with the power dissipated by using (i) a variable-displacement pump at 3000 psig and (ii) a pump with load sensing that operates at 100 psi above the load requirement.

**EXAMPLE PROBLEM 10.12**

**GIVEN:** Hydraulic pump, with performance characteristics of Fig. 10.36, operating at 2000 rpm. System requires  $Q = 20$  gpm at  $p = 1500$  psig.

- FIND:** (a) The volume of oil per revolution delivered by this pump.  
 (b) The required pump power input.  
 (c) The power delivered to the load.  
 (d) The power dissipated by throttling at this condition.  
 (e) The power dissipated using:  
 (i) a variable-displacement pump at 3000 psig, and  
 (ii) a pump with load sensing that operates at 100 psi above the load pressure requirement.

**SOLUTION:**

To estimate the maximum delivery, extrapolate the curve of pressure versus flow rate to zero pressure. Under these conditions,  $Q = 48.5$  gpm at  $N = 2000$  rpm with negligible  $\Delta p$ . Thus

$$V = \frac{Q}{N} = 48.5 \frac{\text{gal}}{\text{min}} \times \frac{\text{min}}{2000 \text{ rev}} \times 231 \frac{\text{in.}^3}{\text{gal}} = 5.60 \text{ in.}^3/\text{rev} \leftarrow V$$

The volumetric efficiency of the pump at maximum flow is

$$\eta_v = \frac{V_{\text{calc}}}{V_{\text{pump}}} = \frac{5.60}{5.9} = 0.949$$

The operating point of the pump may be found from Fig. 10.36. At 1500 psig, it operates at  $Q \approx 46.5$  gpm. The power delivered to the fluid is

$$\begin{aligned} \mathcal{P}_{\text{fluid}} &= \rho Q g H_p = Q \Delta p_p \\ &= 46.5 \frac{\text{gal}}{\text{min}} \times 1500 \frac{\text{lb}_f}{\text{in.}^2} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{min}}{60 \text{ s}} \times 144 \frac{\text{in.}^2}{\text{ft}^2} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lb}_f} \\ \mathcal{P}_{\text{fluid}} &= 40.7 \text{ hp} \end{aligned}$$

From the graph, at this operating point, the pump efficiency is approximately  $\eta = 0.84$ . Therefore the required input power is

$$\mathcal{P}_{\text{input}} = \frac{\mathcal{P}_{\text{fluid}}}{\eta} = \frac{40.7 \text{ hp}}{0.84} = 48 \text{ hp} \leftarrow \mathcal{P}_{\text{input}}$$

The power delivered to the load is

$$\begin{aligned} \mathcal{P}_{\text{load}} &= Q_{\text{load}} \Delta p_{\text{load}} \\ &= 20.0 \frac{\text{gal}}{\text{min}} \times 1500 \frac{\text{lb}_f}{\text{in.}^2} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{min}}{60 \text{ s}} \times 144 \frac{\text{in.}^2}{\text{ft}^2} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lb}_f} \\ \mathcal{P}_{\text{load}} &= 17.5 \text{ hp} \leftarrow \mathcal{P}_{\text{load}} \end{aligned}$$

The power dissipated by throttling is

$$\mathcal{P}_{\text{dissipated}} = \mathcal{P}_{\text{fluid}} - \mathcal{P}_{\text{load}} = 40.7 - 17.5 = 23.2 \text{ hp} \leftarrow \mathcal{P}_{\text{dissipated}}$$

The dissipation with the variable-displacement pump is

$$\begin{aligned} \mathcal{P}_{\text{var-disp}} &= Q_{\text{load}} (p_{\text{oper}} - p_{\text{load}}) \\ &= 20.0 \frac{\text{gal}}{\text{min}} \times (3000 - 1500) \frac{\text{lb}_f}{\text{in.}^2} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{min}}{60 \text{ s}} \times 144 \frac{\text{in.}^2}{\text{ft}^2} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lb}_f} \\ \mathcal{P}_{\text{var-disp}} &= 17.5 \text{ hp} \leftarrow \mathcal{P}_{\text{var-disp}} \end{aligned}$$

The dissipation with the variable-displacement pump is therefore less than the 23.2 hp dissipated with the constant-displacement pump and throttle. The saving is approximately 6 hp.

The final computation is for the load-sensing pump. If the pump pressure is 100 psi above that required by the load, the excess energy dissipation is

$$\begin{aligned}\mathcal{P}_{\text{load-sense}} &= Q_{\text{load}}(P_{\text{oper}} - P_{\text{load}}) \\ &= 20.0 \frac{\text{gal}}{\text{min}} \times 100 \frac{\text{lb}_f}{\text{in}^2} \times \frac{\text{ft}^3}{7.48 \text{ gal}} \times \frac{\text{min}}{60 \text{ s}} \times 144 \frac{\text{in}^2}{\text{ft}^2} \times \frac{\text{hp} \cdot \text{s}}{550 \text{ ft} \cdot \text{lb}_f} \\ \mathcal{P}_{\text{load-sense}} &= 1.17 \text{ hp} \leftarrow \mathcal{P}_{\text{load-sense}}\end{aligned}$$

This problem contrasts the performance of a system with a pump of constant displacement to that of a system with variable-displacement and load-sensing pumps. The specific savings depend on the system operating point and on the duty cycle of the system.

#### d. Propellers

It has been suggested that a propeller may be considered an axial-flow machine without a housing [10]. In common with other propulsion devices, a propeller produces thrust by imparting linear momentum to a fluid. Thrust production always leaves the stream with some kinetic energy and angular momentum that are not recoverable, so the process is never 100 percent efficient.

The one-dimensional flow model shown schematically in Fig. 10.38 is drawn as seen by an observer moving with the propeller, so the flow is steady. The actual propeller is replaced conceptually by a thin *actuator disk*, across which flow speed is continuous but pressure rises abruptly. Relative to the propeller, the upstream flow is at speed  $V$  and ambient pressure. The axial speed at the actuator disk is  $V + \Delta V/2$ , with a corresponding reduction in pressure. Downstream, the speed is  $V + \Delta V$  and the pressure returns to ambient. (Example Problem 10.13 shows that half the speed

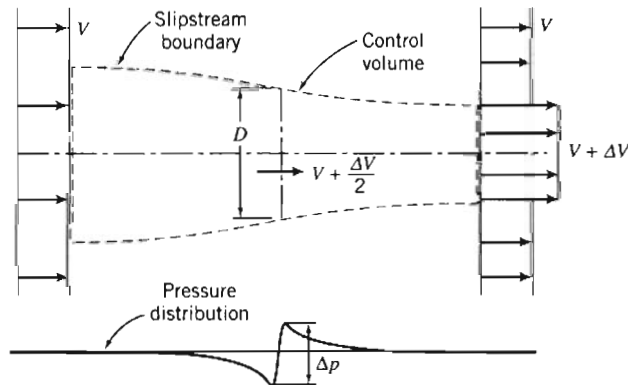


Fig. 10.38 One-dimensional flow model and control volume used to analyze an idealized propeller [10].

increase occurs before and half after the actuator disk.) The contraction of the slipstream area to satisfy continuity and the pressure rise across the propeller disk are shown in the figure.

Not shown in the figure are the swirl velocities that result from the torque required to turn the propeller. The kinetic energy of the swirl in the slipstream also is lost unless it is removed by a counter-rotating propeller or partially recovered in stationary guide vanes.

As for all turbomachinery, propellers may be analyzed in two ways. Application of linear momentum in the axial direction, using a finite control volume, provides overall relations among slipstream speed, thrust, useful power output, and minimum residual kinetic energy in the slipstream. A more detailed *blade element* theory is needed to calculate the interaction between a propeller blade and the stream. A general relation for ideal propulsive efficiency can be derived using the control volume approach, as shown following Example 10.13.

### EXAMPLE 10.13 Control Volume Analysis of Idealized Flow through a Propeller

Consider the one-dimensional model for the idealized flow through a propeller shown in Fig. 10.38. The propeller advances into still air at steady speed  $V_1$ . Obtain expressions for the pressure immediately upstream and the pressure immediately downstream from the actuator disk. Write the thrust on the propeller as the product of this pressure difference times the disk area. Equate this expression for thrust to one obtained by applying the linear momentum equation to the control volume. Show that half the velocity increase occurs ahead of and half behind the propeller disk.

#### EXAMPLE PROBLEM 10.13

**GIVEN:** Propeller advancing into still air at speed  $V_1$ , as shown in Fig. 10.38.

- FIND:** (a) Expressions for the pressures immediately upstream and immediately downstream from the actuator disk.  
 (b) Expression for the air speed at the actuator disk. Then show that half the velocity increase occurs ahead of the actuator disk and half occurs behind the actuator disk.

**SOLUTION:**

Apply the Bernoulli equation and the  $x$  component of linear momentum using the CV shown.

Governing equations:

$$\frac{p}{\rho} + \frac{V^2}{2} + \cancel{gz} \approx 0(5) = \text{constant}$$

$$F_{S_x} + F_{B_x} = \frac{\partial}{\partial t} \int_{CV} u_{xyz} \rho dV + \int_{CS} u_{xyz} \rho \vec{V} \cdot d\vec{A}$$

$= 0(5) = 0(1)$

- Assumptions: (1) Steady flow relative to the CV.  
 (2) Incompressible flow.  
 (3) Flow along a streamline.  
 (4) Frictionless flow.  
 (5) Horizontal flow: neglect changes in  $z$ ;  $F_{B_x} = 0$ .  
 (6) Uniform flow at each section.  
 (7)  $p_{\text{atm}}$  surrounds the CV.

Applying the Bernoulli equation from section ① to section ② gives

$$\frac{p_{\text{atm}}}{\rho} + \frac{V_1^2}{2} = \frac{p_2}{\rho} + \frac{V_2^2}{2}; \quad p_{2(\text{gage})} = \frac{1}{2} \rho (V_1^2 - V_2^2)$$

Applying Bernoulli from section ③ to section ④ gives

$$\frac{p_3}{\rho} + \frac{V_3^2}{2} = \frac{p_{\text{atm}}}{\rho} + \frac{V_4^2}{2}; \quad p_{3(\text{gage})} = \frac{1}{2} \rho (V_4^2 - V_3^2)$$

The thrust on the propeller is given by

$$F_T = (p_3 - p_2)A = \frac{1}{2} \rho A (V_4^2 - V_2^2) \quad (V_3 = V_2 = V)$$

From the momentum equation, using *relative* velocities,

$$R_x = F_T = u_1(-\dot{m}) + u_4(+\dot{m}) = \rho VA(V_4 - V_1) \quad (u_1 = V_1, u_4 = V_4)$$

$$F_T = \rho VA(V_4 - V_1)$$

Equating these two expressions for  $F_T$ ,

$$F_T = \frac{1}{2} \rho A (V_4^2 - V_1^2) = \rho VA(V_4 - V_1) \quad \text{or} \quad \frac{1}{2} (V_4 + V_1)(V_4 - V_1) = V(V_4 - V_1)$$


Thus,  $V = \frac{1}{2}(V_1 + V_4)$ , so

$$\Delta V_{12} = V - V_1 = \frac{1}{2}(V_1 + V_4) - V_1 = \frac{1}{2}(V_4 - V_1) = \frac{\Delta V}{2}$$

$$\Delta V_{34} = V_4 - V = V_4 - \frac{1}{2}(V_1 + V_4) = \frac{1}{2}(V_4 - V_1) = \frac{\Delta V}{2}$$

Velocity Increase

The purpose of this problem is to apply the continuity, momentum, and Bernoulli equations to an idealized flow model of a propeller, and to verify the Rankine theory of 1885 that half the velocity change occurs on either side of the propeller disk.

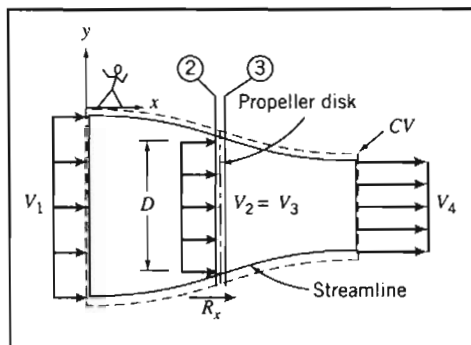

The continuity and momentum equations in control volume form were applied in Example Problem 10.13 to the propeller flow shown in Fig. 10.38. The results obtained are discussed further below. The thrust produced is

$$F_T = \dot{m} \Delta V \quad (10.28)$$



For incompressible flow, in the absence of friction and heat transfer, the energy equation indicates that the minimum required input to the propeller is the power required to increase the kinetic energy of the flow, which may be expressed as

$$\mathcal{P}_{\text{input}} = \dot{m} \left[ \frac{(V + \Delta V)^2}{2} - \frac{V^2}{2} \right] = \dot{m} \left[ \frac{2V\Delta V + (\Delta V)^2}{2} \right] = \dot{m}V\Delta V \left[ 1 + \frac{\Delta V}{2V} \right] \quad (10.29)$$

The useful power produced is the product of thrust and speed of advance,  $V$ . Using Eq. 10.28, this may be written as

$$\mathcal{P}_{\text{useful}} = F_T V = \dot{m}V\Delta V \quad (10.30)$$

Combining Eqs. 10.29 and 10.30, and simplifying, gives the propulsive efficiency as

$$\eta = \frac{\mathcal{P}_{\text{useful}}}{\mathcal{P}_{\text{input}}} = \frac{1}{1 + \frac{\Delta V}{2V}} \quad (10.31)$$

Equations 10.28 through 10.31 are applicable to any device that creates thrust by increasing the speed of a fluid stream. Thus they apply equally well to propeller-driven or jet-propelled aircraft, boats, or ships.

Equation 10.31 for propulsive efficiency is of fundamental importance. It indicates that propulsive efficiency can be increased by reducing  $\Delta V$  or by increasing  $V$ . At constant thrust, as shown by Eq. 10.28,  $\Delta V$  can be reduced if  $\dot{m}$  is increased, i.e., if more fluid is accelerated over a smaller speed increase. More mass flow can be handled if propeller diameter is increased, but overall size and tip speed ultimately limit this approach. The same principle is used to increase the propulsive efficiency of a *turbofan* engine by using a large fan to move additional air flow outside the engine core.

Propulsive efficiency also can be increased by increasing the speed of motion relative to the fluid. Speed of advance may be limited by cavitation in marine applications. Flight speed is limited for propeller-driven aircraft by compressibility effects at the propeller tips, but progress is being made in the design of propellers to maintain high efficiency with low noise levels while operating with transonic flow at the blade tips. Jet-propelled aircraft can fly much faster than propeller-driven craft, giving them superior propulsive efficiency.

A more detailed *blade element* theory may be used to calculate the interaction between a propeller blade and the stream. If the blade spacing is large and the *disk loading*<sup>10</sup> is light, blades can be considered independent and relations can be derived for the torque required and the thrust produced by a propeller. These approximate relations are most accurate for low-solidity propellers.<sup>11</sup> Aircraft propellers typically are of fairly low solidity, having long, thin blades.

A schematic diagram of an element of a rotating propeller blade is shown in Fig. 10.39. The blade is set at angle  $\theta$  to the plane of the propeller disk. Flow is shown as it would be seen by an observer *on* the propeller blade.

The relative speed of flow,  $V_r$ , passing over the blade element depends on both the blade peripheral speed,  $\omega r$ , and the *speed of advance*,  $V$ . Consequently, for a given blade setting, the angle of attack,  $\alpha$ , depends on *both*  $V$  and  $\omega r$ . Thus, the performance of a propeller is influenced by both  $\omega$  and  $V$ .

<sup>10</sup> *Disk loading* is the propeller thrust divided by the swept area of the actuator disk.

<sup>11</sup> *Solidity* is defined as the ratio of projected blade area to the swept area of the actuator disk.

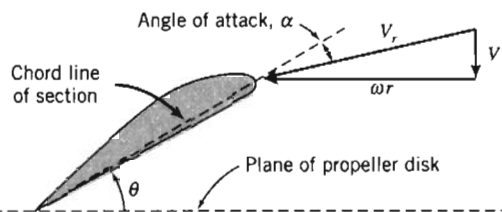


Fig. 10.39 Diagram of blade element and relative flow velocity vector.

Even if the geometry of the propeller is adjusted to give constant geometric pitch<sup>12</sup>, the flow field in which it operates may not be uniform. Thus, the angle of attack across the blade elements may vary from the ideal, and can be calculated only with the aid of a comprehensive computer code that can predict local flow directions and speeds.

Propeller performance characteristics usually are measured experimentally. Figure 10.40 shows typical measured characteristics for a marine propeller [10], and for an aircraft propeller [30]. The variables used to plot the characteristics are almost dimensionless: by convention, rotational speed,  $n$ , is expressed in revolutions per second (rather than as  $\omega$ , in radians per second). The independent variable is the *speed of advance coefficient*,  $J$ ,

$$J \equiv \frac{V}{nD} \quad (10.32)$$

Dependent variables are the *thrust coefficient*,  $C_F$ , the *torque coefficient*,  $C_T$ , the *power coefficient*,  $C_P$ , and the *propeller efficiency*,  $\eta$ , defined as

$$C_F = \frac{F_T}{\rho n^2 D^4}, \quad C_T = \frac{T}{\rho n^2 D^5}, \quad C_P = \frac{\mathcal{P}}{\rho n^3 D^5}, \quad \text{and} \quad \eta = \frac{F_T V}{\mathcal{P}_{\text{input}}} \quad (10.33)$$

The performance curves for both propellers show similar trends. Both thrust and torque coefficients are highest, and efficiency is zero, at zero speed of advance. This corresponds to the largest angle of attack for each blade element ( $\alpha = \alpha_{\text{max}} = \theta$ ). Efficiency is zero because no useful work is being done by the stationary propeller. As advance speed increases, thrust and torque decrease smoothly. Efficiency increases to a maximum at an optimum advance speed and then decreases to zero as thrust tends to zero. (For example, if the blade element section is symmetric, this would theoretically occur when  $\alpha = 0$ , or when  $\tan \theta = V/\omega r$ .)

### EXAMPLE 10.14 Sizing a Marine Propeller

Consider the supertanker of Example Problem 9.5. Assume the total power required to overcome viscous resistance and wave drag is 11.4 MW. Use the performance characteristics of the marine propeller shown in Fig. 10.40a to estimate the diameter and operating speed required to propel the supertanker using a single propeller.

<sup>12</sup> *Pitch* is defined as the distance a propeller would travel in still fluid per revolution if it advanced along the blade setting angle  $\theta$ . The pitch,  $H$ , of this blade element is equal to  $2\pi r \tan \theta$ . To obtain constant pitch along the blade,  $\theta$  must follow the relation,  $\tan \theta = H/2\pi r$ , from hub to tip. Thus the geometric blade angle is smallest at the tip and increases steadily toward the root.

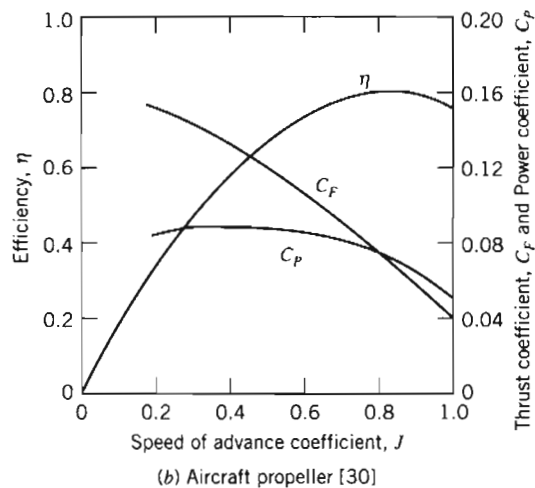
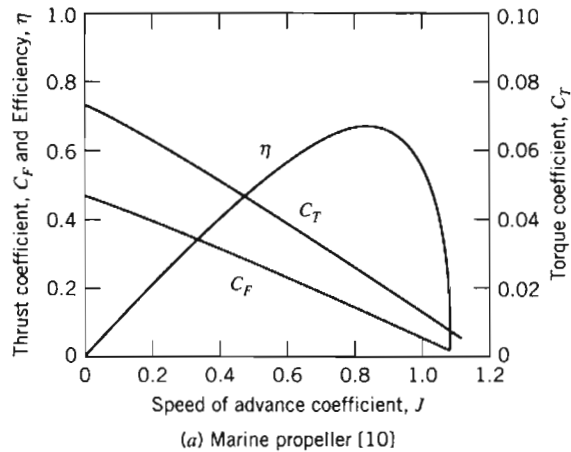


Fig. 10.40 Typical measured characteristics of two propellers.

### EXAMPLE PROBLEM 10.14

**GIVEN:** Supertanker of Example Problem 9.5, with total propulsion power requirement of 11.4 MW to overcome viscous and wave drag, and performance data for the marine propeller shown in Fig. 10.40a.

**FIND:** (a) An estimate of the diameter of a single propeller required to power the ship.  
(b) The operating speed of this propeller.

#### SOLUTION:

From the curves in Fig. 10.40a, at optimum propeller efficiency, the coefficients are

$$J = 0.85, \quad C_F = 0.10, \quad C_T = 0.020, \quad \text{and} \quad \eta = 0.66$$

The ship steams at  $V = 6.69$  m/s and requires  $\mathcal{P}_{\text{useful}} = 11.4$  MW. Therefore, the propeller thrust must be

$$F_T = \frac{\mathcal{P}_{\text{useful}}}{V} = \frac{11.4 \times 10^6 \text{ W}}{6.69 \text{ m}} \times \frac{\text{s}}{\text{W} \cdot \text{s}} \times \frac{\text{N} \cdot \text{m}}{\text{W} \cdot \text{s}} = 1.70 \text{ MN}$$

The required power input to the propeller is

$$\mathcal{P}_{\text{input}} = \frac{\mathcal{P}_{\text{useful}}}{\eta} = \frac{11.4 \text{ MW}}{0.66} = 17.3 \text{ MW}$$

From  $J = \frac{V}{nD} = 0.85$ , then

$$nD = \frac{V}{J} = \frac{6.69 \text{ m}}{0.85} \times \frac{1}{\text{s}} = 7.87 \text{ m/s}$$

Since

$$C_F = \frac{F_T}{\rho n^2 D^4} = 0.10 = \frac{F_T}{\rho (n^2 D^2) D^2} = \frac{F_T}{\rho (nD)^2 D^2}$$

solving for  $D$  gives

$$D = \left[ \frac{F_T}{\rho (nD)^2 C_F} \right]^{1/2} = \left[ \frac{1.70 \times 10^6 \text{ N}}{1025 \text{ kg} \times (7.87)^2 \text{ m}^2 \times 0.10} \times \frac{\text{m}^3}{\text{s}^2} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \right]^{1/2}$$

$$D = 16.4 \text{ m} \leftarrow$$

From  $nD = \frac{V}{J} = 7.87$  m/s,  $n = \frac{nD}{D} = \frac{7.87 \text{ m}}{16.4 \text{ m}} \times \frac{1}{\text{s}} = 0.480$  rev/s

so that

$$n = \frac{0.480 \text{ rev}}{\text{s}} \times \frac{60 \text{ s}}{\text{min}} = 28.8 \text{ rev/min} \leftarrow n$$

The required propeller is quite large, but still smaller than the 25 m draft of the supertanker. The ship would need to take on seawater for ballast to keep the propeller submerged when not carrying a full cargo of petroleum.

This problem illustrates the use of normalized coefficient data for the preliminary sizing of a marine propeller. This preliminary design process would be repeated, using data for other propeller types, to find the optimum combination of propeller size, speed, and efficiency.

Marine propellers tend to have high solidity. This packs a lot of lifting surface within the swept area of the disk to keep the pressure difference small across the propeller and to avoid cavitation. Cavitation tends to unload the blades of a marine propeller, reducing both the torque required and the thrust produced [10]. Cavitation becomes more prevalent along the blades as the cavitation number,

$$Ca = \frac{p - p_v}{\frac{1}{2} \rho V^2} \quad (10.34)$$

is reduced. Inspection of Eq. 10.34 shows that  $Ca$  decreases when  $p$  is reduced by operating near the free surface or by increasing  $V$ . Those who have operated motor boats

also are aware that local cavitation can be caused by distorted flow approaching the propeller, e.g., from turning sharply.

Compressibility affects aircraft propellers when tip speeds approach the *critical Mach number* at which the local Mach number approaches  $M = 1$  at some point on the blade. Under these conditions, torque increases because of increased drag, thrust drops because of reduced section lift, and efficiency drops drastically.

If a propeller operates within the boundary layer of a propelled body, where the relative flow is slowed, its apparent thrust and torque may increase compared with those in a uniform freestream at the same rate of advance. The residual kinetic energy in the slipstream also may be reduced. The combination of these effects may increase the overall propulsive efficiency of the combined body and propeller. Advanced computer codes are used in the design of modern ships (and submarines, where noise may be an overriding consideration) to optimize performance of each propeller/hull combination.

For certain special applications, a propeller may be placed within a *shroud* or *duct*. Such configurations may be integrated into a hull (e.g., as a bow thruster to increase maneuverability), built into the wing of an aircraft, or placed on the deck of a hovercraft. Thrust may be improved by the favorable pressure forces on the duct lip, but efficiency may be reduced by the added skin-friction losses encountered in the duct.

## Machines for Extracting Work (Power) from a Fluid

### a. Hydraulic Turbines

Falling water has long been considered a source of “free,” renewable energy. In reality, power produced by hydraulic turbines is not free; operating costs are low, but considerable capital investment is required to prepare the site and install the equipment. At a minimum, the water inlet works, supply penstock, turbine(s), powerhouse, and controls must be provided. An economic analysis is necessary to determine the feasibility of developing any candidate site. In addition to economic factors, hydroelectric power plants must also be evaluated for their environmental impact—in recent years it has been found that such plants are not entirely benign, and can be damaging, for example, to salmon runs.

Early in the industrial revolution water wheels were used to power grain mills and textile machinery. These plants had to be located at the site of the falling water, which limited use of water power to relatively small and local enterprises. The introduction of alternating current in the 1880s made it possible to transmit electrical energy efficiently over long distances. Since then nearly 40 percent of the available hydroelectric power resources in the United States have been developed and connected to the utility grid [31]. Hydroelectric power accounts for about 16 percent of the electrical energy produced in this country.

The United States has abundant and relatively cheap supplies of fossil fuels. Therefore at present the remaining hydropower resources in the United States are not considered economical compared to fossil-fired plants.

Worldwide, only about 20 percent of available hydropower resources have been developed commercially [31]. Considerably more hydropower will likely be developed in coming decades as countries become more industrialized. Many developing countries do not have their own supplies of fossil fuel. Hydropower may offer many such countries their only practical path to increased utility development. Consequently the design and installation of hydroelectric plants are likely to be important future engineering activities in developing countries.

To evaluate a candidate site for hydropower potential, one must know the average stream flow rate and the gross head available to make preliminary estimates of



turbine type, number of turbines, and potential power production. Economic analyses are beyond the scope of this book, but we consider the fluids engineering fundamentals of impulse turbine performance to optimize the efficiency.


Hydraulic turbines convert the potential energy of stored water to mechanical work. To maximize turbine efficiency, it is always a design goal to discharge water from a turbine at ambient pressure, as close to the tailwater elevation as possible, and with the minimum possible residual kinetic energy.

Conveying water flow into the turbine with minimum energy loss also is important. Numerous design details must be considered, such as inlet geometry, trash racks, etc. [31]. References 1, 8, 10, and 31–37 contain a wealth of information about turbine siting, selection, hydraulic design, and optimization of hydropower plants. The number of large manufacturers has dwindled to just a few, but small-scale units are becoming plentiful [34]. The enormous cost of a commercial-scale hydro plant justifies the use of comprehensive scale-model testing to finalize design details. See [31] for detailed coverage of hydraulic power generation.

Hydraulic losses in long supply pipes (known as *penstocks*) must be considered when designing the installation for high-head machines such as impulse turbines; an optimum diameter for the inlet pipe that maximizes turbine output power can be determined for these units, as shown in Example Problem 10.15.

Turbine power output is proportional to volume flow rate times the pressure difference across the nozzle. At zero flow, the full hydrostatic head is available but power is zero. As flow rate increases, the net head at the nozzle inlet decreases. Power first increases, reaches a maximum, then decreases again as flow rate increases. As we will see in Example Problem 10.15, for a given penstock diameter, the theoretical maximum power is obtained when the system is designed so that one-third of the gross head is dissipated by friction losses in the penstock. In practice, penstock diameter is chosen larger than the theoretical minimum, and only 10–15 percent of the gross head is dissipated by friction [7].


A certain minimum penstock diameter is required to produce a given power output. The minimum diameter depends on the desired power output, the available head, and the penstock material and length. Some representative values are shown in Fig. 10.41.

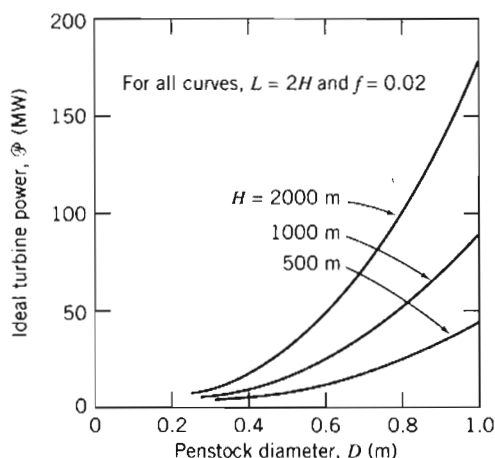

**Fig. 10.41** Maximum hydraulic impulse turbine power output versus penstock diameter.

**EXAMPLE 10.15 Performance and Optimization of an Impulse Turbine**

Consider the hypothetical impulse turbine installation shown. Analyze flow in the penstock to develop an expression for the optimum turbine output power as a function of jet diameter,  $D_j$ . Obtain an expression for the ratio of jet diameter,  $D_j$ , to penstock diameter,  $D$ , at which output power is maximized. Under conditions of maximum power output, show that the head loss in the penstock is one-third of the available head. Develop a parametric equation for the minimum penstock diameter needed to produce a specified power output, using gross head and penstock length as parameters.

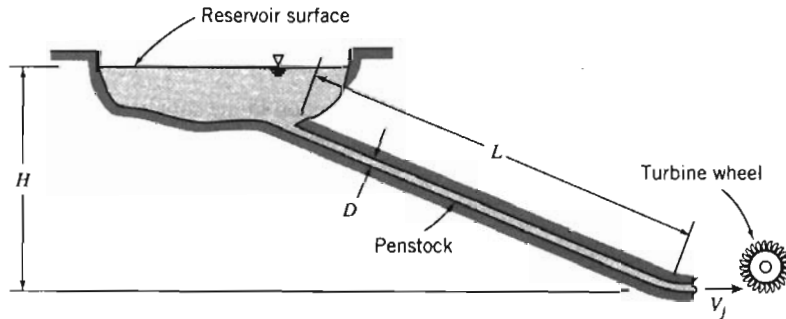**EXAMPLE PROBLEM 10.15**

**GIVEN:** Impulse turbine installation shown.

- FIND:**
- Expression for optimum turbine output power as a function of jet diameter.
  - Expression for the ratio of jet diameter,  $D_j$ , to penstock diameter,  $D$ , at which output power is maximized.
  - Ratio of head loss in penstock to available head for condition of maximum power.
  - Parametric equation for the minimum penstock diameter needed to produce a specified output power, using gross head and penstock length as parameters.

**SOLUTION:**

According to the results of Example 10.5, the output power of an idealized impulse turbine is given by  $\mathcal{P}_{\text{out}} = \rho Q U (V - U)(1 - \cos \theta)$ . For optimum power output,  $U = V/2 = V_j/2$ , and

$$\mathcal{P}_{\text{out}} = \rho Q \frac{V}{2} \left( V - \frac{V}{2} \right) (1 - \cos \theta) = \rho A_j V_j \frac{V_j}{2} \frac{V_j}{2} (1 - \cos \theta)$$

$$\mathcal{P}_{\text{out}} = \rho A_j \frac{V_j^3}{4} (1 - \cos \theta)$$

Thus output power is proportional to  $A_j V_j^3$ .

Apply the energy equation for steady incompressible pipe flow through the penstock to analyze  $V_j^2$  at the nozzle outlet. Designate the free surface of the reservoir as section ①; there  $\bar{V}_1 \approx 0$ .

Governing equation:

$$\frac{p_1}{\rho} + \alpha_1 \frac{\bar{V}_1^2}{2} + gz_1 - \left( \frac{p_j}{\rho} + \alpha_j \frac{\bar{V}_j^2}{2} + gz_j \right) = h_{l_T} = \left( K_{\text{ent}} + f \frac{L}{D} \right) \frac{\bar{V}^2}{2} + K_{\text{nozzle}} \frac{\bar{V}_j^2}{2}$$

- Assumptions: (1) Steady flow.  
 (2) Incompressible flow.  
 (3) Fully developed flow.  
 (4) Atmospheric pressure at jet exit.  
 (5)  $\alpha_j = 1$ , so  $\bar{V}_j = V_j$ .  
 (6) Uniform flow in penstock, so  $\bar{V}_p = V$ .  
 (7)  $K_{\text{ent}} \ll f \frac{L}{D}$ .  
 (8)  $K_{\text{nozzle}} = 0$ .

Then

$$g(z_1 - z_j) = gH = f \frac{L}{D} \frac{V^2}{2} + \frac{V_j^2}{2} \quad \text{or} \quad V_j^2 = 2gH - f \frac{L}{D} V^2$$

Hence the available head is partly consumed in friction in the supply penstock, and the rest is available as kinetic energy at the jet exit—in other words, the jet kinetic energy is reduced by the loss in the penstock. However, this loss itself is a function of jet speed, as we see from continuity:

$$VA = V_j A_j, \text{ so } V = V_j \frac{A_j}{A} = V_j \left( \frac{D_j}{D} \right)^2 \quad \text{and} \quad V_j^2 = 2gH - f \frac{L}{D} V_j^2 \left( \frac{D_j}{D} \right)^4$$

Solving for  $V_j$ , we obtain

$$V_j = \left[ \frac{2gH}{\left\{ 1 + f \frac{L}{D} \left( \frac{D_j}{D} \right)^4 \right\}} \right]^{\frac{1}{2}} \quad (1)$$

The turbine power can be written as

$$\mathcal{P} = \rho A_j \frac{V_j^3}{4} (1 - \cos \theta) = \rho \frac{\pi}{16} D_j^2 \left[ \frac{2gH}{\left\{ 1 + f \frac{L}{D} \left( \frac{D_j}{D} \right)^4 \right\}} \right]^{\frac{3}{2}} (1 - \cos \theta)$$

$$\mathcal{P} = C_1 D_j^2 \left[ \frac{2gH}{\left\{ 1 + f \frac{L}{D} \left( \frac{D_j}{D} \right)^4 \right\}} \right]^{\frac{3}{2}} \quad \mathcal{P}$$

where  $C_1 = \rho \pi (2gH)^{3/2} (1 - \cos \theta) / 16 = \text{constant}$ .

To find the condition for maximum power output, at fixed penstock diameter,  $D$ , differentiate with respect to  $D_j$  and set equal to zero,

$$\frac{d\mathcal{P}}{dD_j} = 2C_1 D_j \left[ 1 + f \frac{L}{D} \left( \frac{D_j}{D} \right)^4 \right]^{-\frac{3}{2}} - \frac{3}{2} C_1 D_j^2 \left[ 1 + f \frac{L}{D} \left( \frac{D_j}{D} \right)^4 \right]^{-\frac{5}{2}} 4f \frac{L}{D} \frac{D_j^3}{D^4} = 0$$

Thus,

$$1 + f \frac{L}{D} \left( \frac{D_j}{D} \right)^4 = 3f \frac{L}{D} \left( \frac{D_j}{D} \right)^4$$



Solving for  $D_j/D$ , we obtain

$$\frac{D_j}{D} = \left[ \frac{1}{2f \frac{L}{D}} \right]^{\frac{1}{4}} \quad \frac{D_j}{D}$$

At this optimum value of  $D_j/D$ , the jet speed is given by Eq. 1 as

$$V_j = \left[ \frac{2gH}{1 + f \frac{L}{D} \left( \frac{D_j}{D} \right)^4} \right]^{\frac{1}{2}} = \sqrt{\frac{4}{3} gH}$$

The head loss at maximum power is then

$$h_f = f \frac{L}{D} \frac{V_j^2}{V} = gH - \frac{V_j^2}{2} = gH - \frac{2}{3} gH = \frac{1}{3} gH$$

and

$$\frac{h_f}{gH} = \frac{1}{3} \quad \frac{h_f}{gH}$$

Under the conditions of maximum power

$$\mathcal{P}_{\max} = \rho V_j^3 \frac{A_j}{4} (1 - \cos \theta) = \rho \left( \frac{4}{3} gH \right)^{\frac{3}{2}} \frac{\pi}{16} \left[ \frac{D^5}{2fL} \right]^{\frac{1}{2}} (1 - \cos \theta)$$

Finally, to solve for minimum penstock diameter for fixed output power, the equation may be written in the form

$$D \propto \left( \frac{L}{H} \right)^{\frac{1}{5}} \left( \frac{\mathcal{P}}{H} \right)^{\frac{2}{5}} \quad D$$

This problem illustrates the optimization of an idealized impulse turbine. The analysis determines the minimum penstock diameter needed to obtain a specified power output. In practice larger diameters than this are used, reducing the frictional head loss below that computed here.

## b. Wind-Power Machines

Windmills (or more properly, wind turbines) have been used for centuries to harness the power of natural winds. Two well-known examples are shown in Fig. 10.42.

Dutch windmills (Fig. 10.42a) turned slowly so the power could be used to turn stone wheels for milling grain, hence the name "windmill." They evolved into large structures; the practical maximum size was limited by the materials of the day. Calvert [39] reports that, based on his laboratory-scale tests, a traditional Dutch windmill of 26 m diameter produced 41 kW in a wind of 36 km/hr at an angular speed of 20 rpm.



(a) Traditional Dutch mill



(b) American Farm windmill

**Fig. 10.42** Examples of well-known windmills [38]. (Photo courtesy of (a) Netherlands Board of Tourism, (b) U.S. Department of Agriculture.)

American multi-blade windmills (Fig. 10.42*b*) were found on many American farms between about 1850 and 1950. They performed valuable service in powering water pumps before rural electrification.

The recent emphasis on renewable resources has revived interest in windmill design and optimization. Horizontal-axis wind turbine (HAWT) and vertical-axis wind turbine (VAWT) configurations have been studied extensively. Most HAWT designs feature 2- or 3-bladed propellers turning at high speed. The large modern HAWT, shown in Fig. 10.43*a*, is capable of producing power in any wind above a light breeze.

The final example (Fig. 10.43*b*) is a *Darrieus* VAWT. This device uses a modern symmetric airfoil section for the rotor, which is formed into a *troposkien* shape.<sup>13</sup> In contrast to the other designs, the *Darrieus* VAWT is not capable of starting from rest; it can only produce usable power above a certain minimum angular speed. It may be combined with a self-starting turbine, such as a *Savonius rotor*, to provide starting torque (see illustration for Problem 9.81 or [41]).

A horizontal-axis wind turbine may be analyzed as a propeller operated in reverse. The Rankine model of one-dimensional flow incorporating an idealized actuator disk is shown in Fig. 10.44. The simplified notation of the figure is frequently used for analysis of wind turbines.

The wind speed far upstream is  $V$ . The stream is decelerated to  $V(1 - a)$  at the turbine disk and to  $V(1 - 2a)$  in the wake of the turbine ( $a$  is called the *interference factor*). Thus the stream tube of air captured by the windmill is small upstream and its diameter increases as it moves downstream.

Straightforward application of linear momentum to a CV (see Example Problem 10.16) predicts the axial thrust on a turbine of radius  $R$  to be

$$F_T = 2\pi R^2 \rho V^2 a(1 - a) \quad (10.35)$$

<sup>13</sup> This shape (which would be assumed by a flexible cord whirled about a vertical axis) minimizes bending stresses in the *Darrieus* turbine rotor.



(a) Horizontal-axis wind turbine



(b) Vertical-axis wind turbine

**Fig. 10.43** Examples of modern wind turbine designs [40]. (Photos courtesy U.S. Department of Energy.)

Application of the energy equation, assuming no losses (no change in internal energy or heat transfer), gives the power taken from the fluid stream as


$$\dot{\mathcal{P}} = 2\pi R^2 \rho V^3 a(1-a)^2 \quad (10.36)$$

The efficiency of a windmill is most conveniently defined with reference to the kinetic energy flux contained within a stream tube the size of the actuator disk. This kinetic energy flux is

$$KEF = \frac{1}{2} \rho V^3 \pi R^2 \quad (10.37)$$

Combining Eqs. 10.36 and 10.37 gives the efficiency (or alternatively, the *power coefficient* [40]) as

$$\eta = \frac{\dot{\mathcal{P}}}{KEF} = 4a(1-a)^2 \quad (10.38)$$

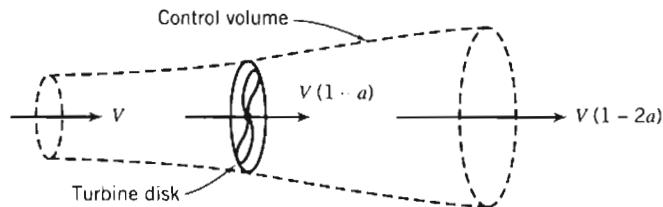

**Fig. 10.44** Control volume and simplified notation used to analyze wind turbine performance.

Betz [see 40] was the first to derive this result and to show that the theoretical efficiency is maximized when  $a = 1/3$ . The maximum theoretical efficiency is  $\eta = 0.593$ .

If the windmill is lightly loaded ( $a$  is small), it will affect a large mass of air per unit time, but the energy extracted per unit mass will be small and the efficiency low. Most of the kinetic energy in the initial air stream will be left in the wake and wasted. If the windmill is heavily loaded ( $a \approx 1/2$ ), it will affect a much smaller mass of air per unit time. The energy removed per unit mass will be large, but the power produced will be small compared with the kinetic energy flux through the undisturbed area of the actuator disk. Thus a peak efficiency occurs at intermediate disk loadings.

The Rankine model includes some important assumptions that limit its applicability [40]. First, the wind turbine is assumed to affect only the air contained within the stream tube defined in Fig. 10.44. Second, the kinetic energy produced as swirl behind the turbine is not accounted for. Third, any radial pressure gradient is ignored. Glauert [see 30] partially accounted for the wake swirl to predict the dependence of ideal efficiency on *tip-speed ratio*,  $X = \omega R/V$ , as shown in Fig. 10.45 ( $\omega$  is the angular velocity of the turbine).

As the tip-speed ratio increases, ideal efficiency increases, approaching the peak value ( $\eta = 0.593$ ) asymptotically. (Physically, the swirl left in the wake is reduced as the tip-speed ratio increases.) Reference 40 presents a summary of the detailed blade-element theory used to develop the limiting efficiency curve shown in Fig. 10.45.

Each type of wind turbine has its most favorable range of application. The traditional American multi-bladed windmill has a large number of blades and operates at relatively slow speed. Its solidity,  $\sigma$  (the ratio of blade area to the swept area of the turbine disk,  $\pi R^2$ ) is high. Because of its relatively slow operating speed, its tip-speed ratio and theoretical performance limit are low. Its relatively poor performance, compared with its theoretical limit, is largely caused by use of crude blades, which are simple bent sheet metal surfaces rather than airfoil shapes.

It is necessary to increase the tip-speed ratio considerably to reach a more favorable operating range. Modern high-speed wind-turbine designs use carefully shaped airfoils and operate at tip-speed ratios up to 7 [42].

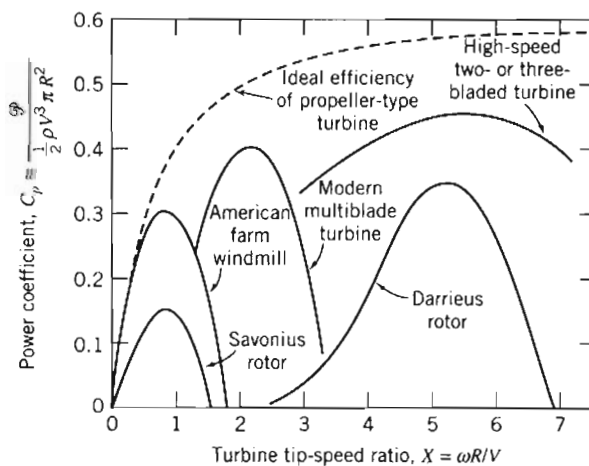


Fig. 10.45 Efficiency trends of wind turbine types versus tip-speed ratio [40].

**EXAMPLE 10.16 Performance of an Idealized Windmill**

Develop general expressions for thrust, power output, and efficiency of an idealized windmill, as shown in Fig. 10.44. Calculate the thrust, ideal efficiency, and actual efficiency for the Dutch windmill tested by Calvert ( $D = 26$  m,  $N = 20$  rpm,  $V = 36$  km/hr, and  $\mathcal{P}_{\text{output}} = 41$  kW).

**EXAMPLE PROBLEM 10.16**


**GIVEN:** Idealized windmill, as shown in Fig. 10.44, and Dutch windmill tested by Calvert:

$$D = 26 \text{ m} \quad N = 20 \text{ rpm} \quad V = 36 \text{ km/hr} \quad \mathcal{P}_{\text{output}} = 41 \text{ kW}$$

**FIND:** (a) General expressions for the ideal thrust, power output, and efficiency.  
(b) The thrust, power output, and ideal and actual efficiencies for the Dutch windmill tested by Calvert.

**SOLUTION:**

Apply the continuity, momentum ( $x$  component), and energy equations, using the CV and coordinates shown.

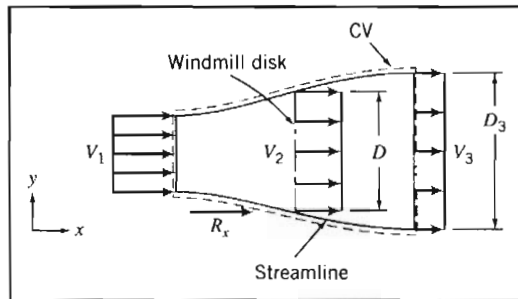

$$\begin{aligned} &= 0(3) \\ \text{Governing equations:} \quad & \frac{\partial}{\partial t} \int_{\text{CV}} \rho d\mathcal{V} + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0 \\ &= 0(2) = 0(3) \\ & F_{S_x} + F_{B_x} = \frac{\partial}{\partial t} \int_{\text{CV}} u \rho d\mathcal{V} + \int_{\text{CS}} u \rho \vec{V} \cdot d\vec{A} \\ &= 0(7) \quad = 0(3) \\ & \dot{Q} - \dot{W}_s = \frac{\partial}{\partial t} \int_{\text{CV}} e \rho d\mathcal{V} + \int_{\text{CS}} \left( e + \frac{p}{\rho} \right) \rho \vec{V} \cdot d\vec{A} \end{aligned}$$

- Assumptions:
- (1) Atmospheric pressure acts on CV;  $F_{S_x} = R_x$ .
  - (2)  $F_{B_x} = 0$ .
  - (3) Steady flow.
  - (4) Uniform flow at each section.
  - (5) Incompressible flow of standard air.
  - (6)  $V_1 - V_2 = V_2 - V_3 = 1/2(V_1 - V_3)$ , as shown by Rankine.
  - (7)  $\dot{Q} = 0$ .
  - (8) No change in internal energy for frictionless incompressible flow.

In terms of the interference factor,  $a$ ,  $V_1 = V$ ,  $V_2 = (1 - a)V$ , and  $V_3 = (1 - 2a)V$ .

From continuity, for uniform flow at each cross section,  $V_1 A_1 = V_2 A_2 = V_3 A_3$ .

From momentum,

$$R_x = u_1(-\rho V_1 A_1) + u_3(+\rho V_3 A_3) = (V_3 - V_1)\rho V_2 A_2 \quad \{u_1 = V_1, u_3 = V_3\}$$

$R_x$  is the external force acting on the control volume. The thrust force exerted by the CV on the surroundings is

$$K_x = -R_x = (V_1 - V_3)\rho V_2 A_2$$

In terms of the interference factor, the equation for thrust may be written in the general form,

$$K_x = \rho V^2 \pi R^2 2a(1-a) \leftarrow K_x$$

(Set  $dK_x/da$  equal to zero to show that maximum thrust occurs when  $a = 1/2$ .)

The energy equation becomes

$$-\dot{W}_s = \frac{V_1^2}{2}(-\rho V_1 A_1) + \frac{V_3^2}{2}(+\rho V_3 A_3) = \rho V_2 \pi R^2 \frac{1}{2}(V_3^2 - V_1^2)$$

The ideal output power,  $\mathcal{P}$ , is equal to  $\dot{W}_s$ . In terms of the interference factor,

$$\mathcal{P} = \dot{W}_s = \rho V(1-a)\pi R^2 \left[ \frac{V^2}{2} - \frac{V^2}{2}(1-2a)^2 \right] = \rho V^3(1-a) \frac{\pi R^2}{2} [1 - (1-2a)^2]$$

After simplifying algebraically,

$$\mathcal{P}_{\text{ideal}} = 2\rho V^3 \pi R^2 a(1-a)^2 \leftarrow \mathcal{P}_{\text{ideal}}$$

The kinetic energy flux through a stream tube of undisturbed flow, equal in area to the actuator disk, is

$$KEF = \rho V \pi R^2 \frac{V^2}{2} = \frac{1}{2} \rho V^3 \pi R^2$$

Thus the ideal efficiency may be written

$$\eta = \frac{\mathcal{P}_{\text{ideal}}}{KEF} = \frac{2\rho V^3 \pi R^2 a(1-a)^2}{\frac{1}{2} \rho V^3 \pi R^2} = 4a(1-a)^2 \leftarrow \eta$$

To find the condition for maximum possible efficiency, set  $d\eta/da$  equal to zero. The maximum efficiency is  $\eta = 0.593$ , which occurs when  $a = 1/3$ .

The Dutch windmill tested by Calvert had a tip-speed ratio of

$$X = \frac{NR}{V} = \frac{20 \text{ rev}}{\text{min}} \times \frac{2\pi \text{ rad}}{\text{rev}} \times \frac{\text{min}}{60 \text{ s}} \times \frac{13 \text{ m}}{10 \text{ m}} \times \frac{\text{s}}{10 \text{ m}} = 2.72 \leftarrow X$$

The maximum theoretically attainable efficiency at this tip-speed ratio, accounting for swirl (Fig. 10.45), would be about 0.53.

The actual efficiency of the Dutch windmill is

$$\eta_{\text{actual}} = \frac{\mathcal{P}_{\text{actual}}}{KEF}$$

Based on Calvert's test data, the kinetic energy flux is

$$\begin{aligned} KEF &= \frac{1}{2} \rho V^3 \pi R^2 \\ &= \frac{1}{2} \times 1.23 \frac{\text{kg}}{\text{m}^3} \times (10)^3 \frac{\text{m}^3}{\text{s}^3} \times \pi (13)^2 \text{m}^2 \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \times \frac{\text{W} \cdot \text{s}}{\text{N} \cdot \text{m}} \\ KEF &= 3.27 \times 10^5 \text{ W} \quad \text{or} \quad 327 \text{ kW} \end{aligned}$$

Substituting into the definition of actual efficiency,

$$\eta_{\text{actual}} = \frac{41 \text{ kW}}{327 \text{ kW}} = 0.125 \leftarrow \eta_{\text{actual}}$$

Thus the actual efficiency of the Dutch windmill is about 24 percent of the maximum efficiency theoretically attainable at this tip-speed ratio.

The actual thrust on the Dutch windmill can only be estimated, because the interference factor,  $a$ , is not known. The maximum possible thrust would occur at  $a = 1/2$ , in which case,

$$\begin{aligned} K_x &= \rho V^2 \pi R^2 2a(1-a) \\ &= \frac{1.23 \text{ kg}}{\text{m}^3} \times (10)^2 \frac{\text{m}^2}{\text{s}^2} \times \pi (13)^2 \text{m}^2 \times 2 \left(\frac{1}{2}\right) \left(1 - \frac{1}{2}\right) \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \\ K_x &= 3.27 \times 10^4 \text{ N} \quad \text{or} \quad 32.7 \text{ kN} \end{aligned} \quad \leftarrow K_x$$

This does not sound like a large thrust force, considering the size ( $D = 26 \text{ m}$ ) of the windmill. However,  $V = 36 \text{ km/hr}$  is only a moderate wind. The actual machine would have to withstand much more severe wind conditions during storms.

This problem illustrates application of the concepts of ideal thrust, power, and efficiency for a windmill, and calculation of these quantities for an actual machine.



## 10-6 SUMMARY

In this chapter, we:

- ✓ Defined the two major types of fluid machines: positive displacement machines, and turbomachines.
- ✓ Defined, within the turbomachine category: radial, axial, and mixed flow types, pumps, fans, blowers, compressors, and impulse and reaction turbines.
- ✓ Discussed various features of turbomachines, such as impellers, rotors, runners, scrolls (volute), compressor stages, and draft tubes.
- ✓ Discussed various defining parameters, such as pump efficiency, solidity, hydraulic power, mechanical power, turbine efficiency, shutoff head, shock loss, specific speed, cavitation, *NPSHR*, and *NPSHA*.
- ✓ Used the angular-momentum equation for a control volume to derive the Euler turbomachine equation.
- ✓ Drew velocity diagrams and applied the Euler turbomachine equation to the analysis of various idealized machines to derive ideal torque, head, and power.
- ✓ Evaluated the performance—head, power, and efficiency—of various actual machines from measured data.
- ✓ Defined and used dimensionless parameters to scale the performance of a fluid machine from one size, operating speed, and set of operating conditions to another.
- ✓ Examined pumps for their compliance with the constraint that the net positive suction head available exceeds that required to avoid cavitation.
- ✓ Matched fluid machines for doing work on a fluid to pipe systems to obtain the operating point (flow rate and head).
- ✓ Predicted the effects of installing fluid machines in series and parallel on the operating point of a system.

With these concepts and techniques, we learned how to use manufacturers' literature and other data to perform preliminary analyses and make appropriate selections of pumps, fans, hydraulic and wind turbines, and other fluid machines.

## REFERENCES

1. Wilson, D. G., "Turbomachinery—From Paddle Wheels to Turbojets," *Mechanical Engineering*, 104, 10, October 1982, pp. 28–40.
2. Logan, E. S., Jr., *Turbomachinery: Basic Theory and Applications*. New York: Dekker, 1981.
3. Japikse, D. "Teaching Design in an Engineering Education Curriculum: A Design Track Syllabus," TM-519, Concepts ETI Inc., White River Jct., VT 05001.
4. American Society of Mechanical Engineers, *Performance Test Codes: Centrifugal Pumps*, ASME PTC 8.2-1990. New York: ASME, 1990.
5. American Institute of Chemical Engineers, *Equipment Testing Procedure: Centrifugal Pumps (Newtonian Liquids)*. New York: AIChE, 1984.
6. Air Movement and Control Association, *Laboratory Methods of Testing Fans for Rating*. AMCA Standard 210-74, ASHRAE Standard 51-75. Atlanta, GA: ASHRAE, 1975.
7. Daugherty, R. L., J. B. Franzini, and E. J. Finnemore, *Fluid Mechanics with Engineering Applications*, 8th ed. New York: McGraw-Hill, 1985.
8. Peerless Pump,\* Brochure B-4003, "System Analysis for Pumping Equipment Selection," 1979.
9. Rouse, H., and S. Ince, *History of Hydraulics*. Iowa City, IA: Iowa University Press, 1957.
10. Daily, J. W., "Hydraulic Machinery," in Rouse, H., ed., *Engineering Hydraulics*. New York: Wiley, 1950.
11. Russell, G. E., *Hydraulics*, 5th ed. New York: Henry Holt, 1942.
12. Sabersky, R. H., A. J. Acosta, E. G. Hauptmann, and E. M. Gates, *Fluid Flow: A First Course in Fluid Mechanics*, 4th ed. Englewood Cliffs, NJ: Prentice-Hall, 1999.
13. Hodge, B. K., *Analysis and Design of Energy Systems*, 2nd ed. Englewood Cliffs, NJ: Prentice-Hall, 1990.
14. Moody, L. F., "Hydraulic Machinery," in *Handbook of Applied Hydraulics*, ed. by C. V. Davis. New York: McGraw-Hill, 1942.
15. Hydraulic Institute, *Hydraulic Institute Standards*. New York: Hydraulic Institute, 1969.
16. Dickinson, C., *Pumping Manual*, 8th ed. Surrey, England: Trade & Technical Press, Ltd., 1988.
17. Hicks, T. G., and T. W. Edwards, *Pump Application Engineering*. New York: McGraw-Hill, 1971.
18. Armintor, J. K., and D. P. Conners, "Pumping Applications in the Petroleum and Chemical Industries," *IEEE Transactions on Industry Applications*, IA-23, 1, January 1987.
19. Jorgensen, R., ed., *Fan Engineering*, 8th ed. Buffalo, NY: Buffalo Forge, 1983.
20. American Society of Mechanical Engineers, *Power Test Code for Fans*. New York: ASME, Power Test Codes, PTC 11-1946.
21. Berry, C. H., *Flow and Fan: Principles of Moving Air through Ducts*, 2nd ed. New York: Industrial Press, 1963.
22. Wallis, R. A., *Axial Flow Fans and Ducts*. New York: Wiley, 1983.
23. Osborne, W. C., *Fans*, 2nd ed. London: Pergamon Press, 1977.

\* Peerless Pump Company, a member of the Sterling Group, P.O. Box 7026, Indianapolis, IN 46206-7026, U.S.A.



24. American Society of Heating, Refrigeration, and Air Conditioning Engineers, *Handbook of Fundamentals*. Atlanta, GA: ASHRAE, 1980.
25. Idelchik, I. E., *Handbook of Hydraulic Resistance*, 2nd ed. New York: Hemisphere, 1986.
26. Vincent-Genod, J., *Fundamentals of Pipeline Engineering*. Houston: Gulf Publishing Co., 1984.
27. Warner-Ishi Turbocharger brochure.\*\*
28. Lambeck, R. R., *Hydraulic Pumps and Motors: Selection and Application for Hydraulic Power Control Systems*. New York: Dekker, 1983.
29. Warring, R. H., ed., *Hydraulic Handbook*, 8th ed. Houston: Gulf Publishing Co., 1983.
30. Durand, W. F., ed., *Aerodynamic Theory*, 6 Volumes. New York: Dover, 1963.
31. Gulliver, J. S., and R. E. A. Arndt, *Hydropower Engineering Handbook*. New York: McGraw-Hill, 1990.
32. Fritz, J. J., *Small and Mini Hydropower Systems: Resource Assessment and Project Feasibility*. New York: McGraw-Hill, 1984.
33. Gladwell, J. S., *Small Hydro: Some Practical Planning and Design Considerations*. Idaho Water Resources Institute. Moscow, ID: University of Idaho, April 1980.
34. McGuigan, D., *Small Scale Water Power*. Dorchester: Prism Press, 1978.
35. Olson, R. M., and S. J. Wright, *Essentials of Engineering Fluid Mechanics*, 5th ed. New York: Harper & Row, 1990.
36. Quick, R. S., "Problems Encountered in the Design and Operation of Impulse Turbines," *Transactions of the ASME*, 62, 1940, pp. 15-27.
37. Warnick, C. C., *Hydropower Engineering*. Englewood Cliffs, NJ: Prentice-Hall, 1984.
38. Putnam, P. C., *Power from the Wind*. New York: Van Nostrand, 1948.
39. Calvert, N.G., *Windpower Principles: Their Application on the Small Scale*. London: Griffin, 1978.
40. Baumeister, T., E. A. Avallone, and T. Baumeister, III, eds., *Marks' Standard Handbook for Mechanical Engineers*, 8th ed. New York: McGraw-Hill, 1978.
41. Eldridge, F. R., *Wind Machines*, 2nd ed. New York: Van Nostrand Reinhold, 1980.
42. Migliore, P. G., "Comparison of NACA 6-Series and 4-Digit Airfoils for Darrieus Wind Turbines," *Journal of Energy*, 7, 4, Jul-Aug 1983, pp. 291-292.
43. White, F. M., *Fluid Mechanics*, 4th ed. New York: McGraw-Hill, 1999.
44. Sovern, D. T., and G. J. Poole, "Column Separation in Pumped Pipelines," in Kienow, K. K., ed., *Pipeline Design and Installation*, Proceedings of the International Conference on Pipeline Design and Installation, Las Vegas, Nevada, March 25-27, 1990. New York: American Society of Civil Engineers, 1990, pp. 230-243.
45. Drella, M., "Aerodynamics of Human-Powered Flight," in *Annual Review of Fluid Mechanics*, 22, pp. 93-110. Palo Alto, CA: Annual Reviews, 1990.
46. U.S. Department of the Interior, "Selecting Hydraulic Reaction Turbines," A Water Resources Technical Publication, *Engineering Monograph No. 20*. Denver, CO: U.S. Department of the Interior, Bureau of Reclamation, 1976.
47. Abbott, I. H., and A. E. von Doenhoff, *Theory of Wing Sections, Including a Summary of Airfoil Data*. New York: Dover, 1959.

\*\* Warner-Ishi, P.O. Box 580, Shelbyville, IL 62565-0580, U.S.A.

## PROBLEMS

- 10.1 A centrifugal pump running at 3500 rpm pumps water at a rate of  $0.01 \text{ m}^3/\text{s}$ . The water enters axially, and leaves the impeller at  $5 \text{ m/s}$  relative to the blades, which are radial at the exit. If the pump requires  $5 \text{ kW}$ , and is 67 percent efficient, estimate the basic dimensions (impeller exit diameter and width), using the Euler turbomachine equation.
- 10.2 Consider the centrifugal pump impeller dimensions given in Example Problem 10.1. Estimate the ideal head rise and mechanical power input if the outlet blade angle is changed to  $60^\circ$ ,  $70^\circ$ ,  $80^\circ$ , or  $85^\circ$ .
- 10.3 Dimensions of a centrifugal pump impeller are

Parameter	Inlet, Section ①	Outlet, Section ②
Radius, $r$ (mm)	75	250
Blade width, $b$ (mm)	40	30
Blade angle, $\beta$ (deg)	60	70

The pump is driven at 1250 rpm while pumping water. Calculate the theoretical head and mechanical power input if the flow rate is  $0.10 \text{ m}^3/\text{s}$ .

- 10.4 Dimensions of a centrifugal pump impeller are

Parameter	Inlet, Section ①	Outlet, Section ②
Radius, $r$ (mm)	175	500
Blade width, $b$ (mm)	50	30
Blade angle, $\beta$ (deg)	65	70

The pump handles water and is driven at 750 rpm. Calculate the theoretical head and mechanical power input if the flow rate is  $0.75 \text{ m}^3/\text{s}$ .

- 10.5 Dimensions of a centrifugal pump impeller are

Parameter	Inlet, Section ①	Outlet, Section ②
Radius, $r$ (mm)	400	1200
Blade width, $b$ (mm)	120	80
Blade angle, $\beta$ (deg)	40	60

The pump is driven at 575 rpm and the fluid is water. Calculate the theoretical head and mechanical power if the flow rate is  $5.00 \text{ m}^3/\text{s}$ .

- 10.6 A centrifugal water pump, with 6 in. diameter impeller and axial inlet flow, is driven at 1750 rpm. The impeller vanes are backward-curved ( $\beta_2 = 65^\circ$ ) and have axial width  $b_2 = 0.75 \text{ in.}$  For a volume flow rate of 1000 gpm determine the theoretical head rise and power input to the pump.
- 10.7 Consider the geometry of the idealized centrifugal pump described in Problem 10.11. Draw inlet and outlet velocity diagrams assuming  $b = \text{constant}$ . Calculate the inlet blade angles required for "shockless" entry flow at the design flow rate. Evaluate the theoretical power input to the pump at the design flow rate.
- 10.8 For the impeller of Problem 10.3, determine the rotational speed for which the tangential component of the inlet velocity is zero if the volume flow rate is  $0.25 \text{ m}^3/\text{s}$ . Calculate the theoretical head and mechanical power input.

- 10.9 For the impeller of Problem 10.4, operating at 750 rpm, determine the volume flow rate for which the tangential component of the inlet velocity is zero. Calculate the theoretical head and mechanical power input.
- 10.10 For the impeller of Problem 10.5, determine the inlet blade angle for which the tangential component of the inlet velocity is zero if the volume flow rate is 8 m<sup>3</sup>/s. Calculate the theoretical head and mechanical power input.
- 10.11 Consider a centrifugal pump whose geometry and flow conditions are

Impeller inlet radius, $R_1$	25 mm
Impeller outlet radius, $R_2$	200 mm
Impeller outlet width, $b_2$	10 mm
Design speed, $N$	2000 rpm
Design flow rate, $Q$	50 L/s
Backward-curved vanes (outlet blade angle), $\beta_2$	75°
Required flow rate range	50–150% of design

Assume ideal pump behavior with 100 percent efficiency. Find the shutoff head. Calculate the absolute and relative discharge velocities, the total head, and the theoretical power required at the design flow rate.

- 10.12 A centrifugal pump runs at 1750 rpm while pumping water at a rate of 50 L/s. The water enters axially, and leaves tangential to the impeller blades. The impeller exit diameter and width are 150 mm and 10 mm, respectively. If the pump requires 45 kW, and is 75 percent efficient, estimate the exit angle of the impeller blades.
- 10.13 Consider the centrifugal pump impeller dimensions given in Example Problem 10.1. Construct the velocity diagram for shockless flow at the impeller inlet, if  $b = \text{constant}$ . Calculate the effective flow angle with respect to the radial impeller blades for the case of no inlet swirl. Investigate the effects on flow angle of (a) variations in impeller width and (b) inlet swirl velocities.
- 10.14 A centrifugal water pump designed to operate at 1300 rpm has dimensions

Parameter	Inlet	Outlet
Radius, $r$ (mm)	100	175
Blade width, $b$ (mm)	10	7.5
Blade angle, $\beta$ (deg)		40

Draw the inlet velocity diagram for a volume flow rate of 35 L/s. Determine the inlet blade angle for which the entering velocity has no tangential component. Draw the outlet velocity diagram. Determine the outlet absolute flow angle (measured relative to the normal direction). Evaluate the hydraulic power delivered by the pump, if its efficiency is 75 percent. Determine the head developed by the pump.

- 10.15 Repeat the analysis for determining the optimum speed for an impulse turbine of Example Problem 10.5, using the Euler turbomachine equation.
- 10.16 A centrifugal water pump designed to operate at 1200 rpm has dimensions

Parameter	Inlet	Outlet
Radius, $r$ (mm)	90	150
Blade width, $b$ (mm)	10	7.5
Blade angle, $\beta$ (deg)	25	45

Determine the flow rate at which the entering velocity has no tangential component. Draw the outlet velocity diagram, and determine the outlet absolute flow angle (measured relative to the normal direction), at this flow rate. Evaluate the hydraulic power delivered by the pump, if its efficiency is 70 percent. Determine the head developed by the pump.

- 10.17 A centrifugal pump designed to deliver water at 460 gpm has dimensions

Parameter	Inlet	Outlet
Radius $r$ (in.)	3.0	6.0
Blade width, $b$ (in.)	0.3	0.25
Blade angle, $\beta$ (deg)	25	40

Draw the inlet velocity diagram. Determine the design speed if the entering velocity has no tangential component. Draw the outlet velocity diagram. Determine the outlet absolute flow angle (measured relative to the normal direction). Evaluate the theoretical head developed by the pump. Estimate the minimum mechanical power delivered to the pump.

- 10.18 Gasoline is pumped by a centrifugal pump. When the flow rate is 375 gpm, the pump requires 19.3 hp input, and its efficiency is 81.2 percent. Calculate the pressure rise produced by the pump. Express this result as (a) ft of water and (b) ft of gasoline.

- 10.19 In the water pump of Problem 10.6, the pump casing acts as a diffuser, which converts 60 percent of the absolute velocity head at the impeller outlet to static pressure rise. The head loss through the pump suction and discharge channels is 0.75 times the radial component of velocity head leaving the impeller. Estimate the volume flow rate, head rise, power input, and pump efficiency at the maximum efficiency point. Assume the torque to overcome bearing, seal, and spin losses is 10 percent of the ideal torque at  $Q = 1000$  gpm.

- 10.20 The theoretical head delivered by a centrifugal pump at shutoff depends on the discharge radius and angular speed of the impeller. For preliminary design, it is useful to have a plot showing the theoretical shutoff characteristics and approximating the actual performance. Prepare a log-log plot of impeller radius versus theoretical head rise at shutoff with standard motor speeds as parameters. Assume the fluid is water and the actual head at the design flow rate is 70 percent of the theoretical shutoff head. (Show these as dashed lines on the plot.) Explain how this plot might be used for preliminary design.

- 10.21 Use data from Appendix D to choose points from the performance curves for a Peerless horizontal split case Type 4AE12 pump at 1750 and 3550 nominal rpm. Obtain and plot curve-fits for total head versus delivery at each speed for this pump, with a 12.12 in. diameter impeller.

- 10.22 Use data from Appendix D to choose points from the performance curves for a Peerless horizontal split case Type 16A18B pump at 705 and 880 nominal rpm. Obtain and plot curve-fits of total head versus delivery for this pump, with an 18.0 in. diameter impeller.

- 10.23 Data from tests of a Peerless end suction Type 1430 pump operated at 1750 rpm with a 14.0 in. diameter impeller are

Flow rate, $Q$ (gpm)	270	420	610	720	1000
Total head, $H$ (ft)	198	195	178	165	123
Power input, $\mathcal{P}$ (hp)	25	30	35	40	45

Plot the performance curves for this pump; include a curve of efficiency versus volume flow rate. Locate the best efficiency point and specify the pump rating at this point.

- 10.24 Data from tests of a Peerless end suction Type 1440 pump operated at 1750 rpm with a 14.0 in. diameter impeller are

Flow rate, $Q$ (gpm)	290	440	550	790	920	1280
Total head, $H$ (ft)	204	203	200	187	175	135
Power input, $\mathcal{P}$ (hp)	30	35	40	45	50	60

Plot the performance curves for this pump; include a curve of efficiency versus volume flow rate. Locate the best efficiency point and specify the pump rating at this point.

- 10.25 Data measured during tests of a centrifugal pump at 2750 rpm are

Parameter	Inlet, Section ①	Outlet, Section ②
Gage pressure, $p$ (kPa)	120	500
Elevation above datum, $z$ (m)	2.5	9
Average speed of flow, $\bar{V}$ (m/s)	2.5	3.5


The flow rate is  $15 \text{ m}^3/\text{hr}$  and the torque applied to the pump shaft is  $8.5 \text{ N} \cdot \text{m}$ . Evaluate the total dynamic heads at the pump inlet and outlet, the hydraulic power input to the fluid, and the pump efficiency. Specify the electric motor size needed to drive the pump. If the electric motor efficiency is 85 percent, calculate the electric power requirement.

- 10.26 Data measured during tests of centrifugal pump driven at 3000 rpm are

Parameter	Inlet, Section ①	Outlet, Section ②
Gage pressure, $p$ (kPa)	90	
Elevation above datum, $z$ (m)	2	10
Average speed of flow, $\bar{V}$ (m/s)	2	5

The flow rate is  $15 \text{ m}^3/\text{hr}$  and the torque applied to the pump shaft is  $6.5 \text{ N} \cdot \text{m}$ . The pump efficiency is 75 percent, and the electric motor efficiency is 85 percent. Find the electric power required, and the gage pressure at section ②.

- 10.27 Write the pump specific speed in terms of the flow coefficient and the head coefficient.
- 10.28 Write the turbine specific speed in terms of the flow coefficient and the head coefficient.
- 10.29 The *kilogram force* (kgf), defined as the force exerted by a kilogram mass in standard gravity, is commonly used in European practice. The *metric horsepower* (hpm) is defined as  $1 \text{ hpm} \equiv 75 \text{ m} \cdot \text{kgf/s}$ . Develop a conversion relating metric horsepower to U.S. horsepower. Relate the specific speed for a hydraulic turbine—calculated in units of rpm, metric horsepower, and meters—to the specific speed calculated in U.S. customary units.
- 10.30 A small centrifugal pump, when tested at  $N = 2875 \text{ rpm}$  with water, delivered  $Q = 252 \text{ gpm}$  and  $H = 138 \text{ ft}$  at its best efficiency point ( $\eta = 0.76$ ). Determine the specific speed of the pump at this test condition. Sketch the impeller shape you expect. Compute the required power input to the pump.
- 10.31 Typical performance curves for a centrifugal pump, tested with three different impeller diameters in a single casing, are shown. Specify the flow rate and head produced by the pump at its best efficiency point with a 12 in. diameter impeller. Scale these data to predict the performance of this pump when tested with 11 in. and 13 in. impellers. Comment on the accuracy of the scaling procedure.

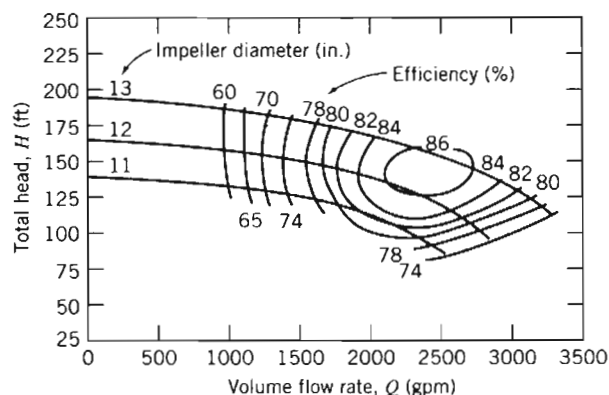

P10.31

- 10.32** At its best efficiency point ( $\eta = 0.85$ ), a mixed-flow pump, with  $D = 400$  mm, delivers  $Q = 1.20$  m<sup>3</sup>/s of water at  $H = 50$  m when operating at  $N = 1500$  rpm. Calculate the specific speed of this pump. Estimate the required power input. Determine the curve-fit parameters of the pump performance curve based on the shutoff point and the best efficiency point. Scale the performance curve to estimate the flow, head, efficiency, and power input required to run the same pump at 750 rpm.
- 10.33** A pump with  $D = 500$  mm delivers  $Q = 0.725$  m<sup>3</sup>/s of water at  $H = 10$  m at its best efficiency point. If the specific speed of the pump is 1.74, and the required input power is 90 kW, determine the shutoff head,  $H_0$ , and best efficiency,  $\eta$ . What type of pump is this? If the pump is now run at 900 rpm, by scaling the performance curve, estimate the new flow rate, head, shutoff head, and required power.
- 10.34** A pumping system must be specified for a lift station at a wastewater treatment facility. The average flow rate is 30 million gallons per day and the required lift is 30 ft. Non-clogging impellers must be used; about 65 percent efficiency is expected. For convenient installation, electric motors of 50 hp or less are desired. Determine the number of motor/pump units needed and recommend an appropriate operating speed.
- 10.35** A centrifugal water pump operates at 1750 rpm; the impeller has backward-curved vanes with  $\beta_2 = 60^\circ$  and  $b_2 = 0.50$  in. At a flow rate of 350 gpm, the radial outlet velocity is  $V_{n_2} = 11.7$  ft/s. Estimate the head this pump could deliver at 1150 rpm.
- 10.36** Appendix D contains area bound curves for pump model selection and performance curves for individual pump models. Use these data to verify the similarity rules for a Peerless Type 4AE12 pump, with impeller diameter  $D = 11.0$  in., operated at 1750 and 3550 nominal rpm.
- 10.37** Appendix D contains area bound curves for pump model selection and performance curves for individual pump models. Use these data and the similarity rules to predict and plot the curves of head  $H$  (ft) versus  $Q$  (gpm) of a Peerless Type 10AE12 pump, with impeller diameter  $D = 12$  in., for nominal speeds of 1000, 1200, 1400, and 1600 rpm.
- 10.38** Use data from Appendix D to verify the similarity rules for the effect of changing the impeller diameter of a Peerless Type 4AE12 pump operated at 1750 and 3550 nominal rpm.
- 10.39** Consider the Peerless Type 16A18B horizontal split case centrifugal pump (Appendix D). Use these performance data to verify the similarity rules for (a) impeller diameter change and (b) operating speeds of 705 and 880 rpm (note the scale change between speeds).

- 10.40 Performance curves for Peerless horizontal split case pumps are presented in Appendix D. Develop and plot a curve-fit for a Type 10AE12 pump driven at 1150 nominal rpm using the procedure described in Example Problem 10.7.
- 10.41 Performance curves for Peerless horizontal split case pumps are presented in Appendix D. Develop and plot curve-fits for a Type 16A18B pump, with impeller diameter  $D = 18.0$  in., driven at 705 and 880 nominal rpm. Verify the effects of pump speed on scaling pump curves using the procedure described in Example Problem 10.7.
- 10.42 Problem 10.20 suggests that pump head at best efficiency is typically about 70 percent of shutoff head. Use pump data from Appendix D to evaluate this suggestion. A further suggestion in Section 10-4 is that the appropriate scaling for tests of a pump casing with different impeller diameters is  $Q \propto D^2$ . Use pump data to evaluate this suggestion.
- 10.43 A reaction turbine is designed to produce 24,000 hp at 120 rpm under 150 ft of head. Laboratory facilities are available to provide 30 ft of head and to absorb 45 hp from the model turbine. Assume comparable efficiencies for the model and prototype turbines. Determine the appropriate model test speed, scale ratio, and volume flow rate.
- 10.44 Catalog data for a centrifugal water pump at design conditions are  $Q = 250$  gpm and  $\Delta p = 18.6$  psi at 1750 rpm. A laboratory flume requires 200 gpm at 32 ft of head. The only motor available develops 3 hp at 1750 rpm. Is this motor suitable for the laboratory flume? How might the pump/motor match be improved?
- 10.45 A centrifugal pump is to operate at  $Q = 250$  cfs,  $H = 400$  ft, and  $N = 870$  rpm. A model test is planned in a facility where the maximum water flow rate is 5 cfs and a 300 hp dynamometer is available. Assume the model and prototype efficiencies are comparable. Determine the appropriate model test speed and scale ratio.
- 10.46 A  $1/3$  scale model of a centrifugal pump, when running at  $N_m = 100$  rpm, produces a flow rate of  $Q_m = 32$  cfs with a head of  $H_m = 15$  ft. Assuming the model and prototype efficiencies are comparable, estimate the flow rate, head, and power requirement if the design speed is 125 rpm.
- 10.47 White [43] suggests modeling the efficiency for a centrifugal pump using the curve-fit,  $\eta = aQ - bQ^3$ , where  $a$  and  $b$  are constants. Describe a procedure to evaluate  $a$  and  $b$  from experimental data. Evaluate  $a$  and  $b$  using data for the Peerless Type 10AE12 pump, with impeller diameter  $D = 12.0$  in., at 1760 rpm (Appendix D). Plot and illustrate the accuracy of the curve-fit by comparing measured and predicted efficiencies for this pump.
- 10.48 Sometimes the variation of water viscosity with temperature can be used to achieve dynamic similarity. A model pump delivers 1.25 L/s of water at 15°C against a head of 18.6 m, when operating at 3500 rpm. Determine the water temperature that must be used to obtain dynamically similar operation at 1750 rpm. Estimate the volume flow rate and head produced by the pump at the lower-speed test condition. Comment on the *NPSH* requirements for the two tests.
- 10.49 A four-stage boiler feed pump has suction and discharge lines of 4 in. and 3 in. inside diameter. At 3500 rpm, the pump is rated at 400 gpm against a head of 400 ft while handling water at 240°F. The inlet pressure gage, located 1.5 ft below the impeller centerline, reads 21.5 psig. The pump is to be factory certified by tests at the same flow rate, head rise, and speed, but using water at 80°F. Calculate the *NPSHA* at the pump inlet in the field installation. Evaluate the suction head that must be used in the factory test to duplicate field suction conditions.
- 10.50 Data from tests of a pump operated at 1200 rpm, with a 12 in. diameter impeller, are

Flow rate, $Q$ (gpm)	100	200	300	400	500	600	700
Net positive suction head required, $NPSHR$ (ft)	7.1	7.9	8.4	10.1	11.8	13.6	16.7

Develop and plot a curve-fit equation for  $NPSHR$  versus volume flow rate in the form,  $NPSHR = a + bQ^2$ , where  $a$  and  $b$  are constants. If the  $NPSHA = 20$  ft, estimate the maximum allowable speed of this pump.

- 10.51** A large deep fryer at a snack-food plant contains hot oil that is circulated through a heat exchanger by pumps. Solid particles and water droplets coming from the food product are observed in the flowing oil. What special factors must be considered in specifying the operating conditions for the pumps?
- 10.52** The net positive suction head required ( $NPSHR$ ) by a pump may be expressed approximately as a parabolic function of volume flow rate. The  $NPSHR$  for a particular pump operating at 1750 rpm is given as  $H_r = H_0 + AQ^2$ , where  $H_0 = 10$  ft of water and  $A = 4.1 \times 10^{-5}$  ft/(gpm)<sup>2</sup>. Assume the pipe system supplying the pump suction consists of a reservoir, whose surface is 20 ft above the pump centerline, a square entrance, 20 ft of 6 in. cast-iron pipe, and a 90° elbow. Calculate the maximum volume flow rate at 68°F for which the suction head is sufficient to operate this pump without cavitation.
- 10.53** For the pump and flow system of Problem 10.52, calculate the maximum flow rate for hot water at various temperatures and plot versus water temperature. (Be sure to consider the density variation as water temperature is varied.)
- 10.54** A centrifugal pump, operating at  $N = 2265$  rpm, lifts water between two reservoirs connected by 300 ft of 6 in. and 100 ft of 3 in. cast-iron pipe in series. The gravity lift is 25 ft. Estimate the head requirement, power needed, and hourly cost of electrical energy to pump water at 200 gpm to the higher reservoir. Assume that electricity costs 12¢/kW·hr, and that the electric motor efficiency is 85 percent.
- 10.55** Part of the water supply for the South Rim of Grand Canyon National Park is taken from the Colorado River [44]. A flow rate of 600 gpm, taken from the river at elevation 3734 ft, is pumped to a storage tank atop the South Rim at 7022 ft elevation. Part of the pipeline is above ground and part is in a hole directionally drilled at angles up to 70° from the vertical; the total pipe length is approximately 13,200 ft. Under steady flow operating conditions, the frictional head loss is 290 ft of water in addition to the static lift. Estimate the diameter of the commercial steel pipe in the system. Compute the pumping power requirement if the pump efficiency is 61 percent.
- 10.56** A Peerless horizontal split-case type 4AE12 pump with 11.0 in. diameter impeller, operating at 1750 rpm, lifts water between two reservoirs connected by 200 ft of 4 in. and 200 ft of 3 in. cast-iron pipe in series. The gravity lift is 10 ft. Plot the system head curve and determine the pump operating point.
- 10.57** A centrifugal pump is installed in a piping system with  $L = 1000$  ft of  $D = 16$  in. cast-iron pipe. The downstream reservoir surface is 50 ft lower than the upstream reservoir. Determine and plot the system head curve. Find the volume flow rate (magnitude and direction) through the system when the pump is not operating. Estimate the friction loss, power requirement, and hourly energy cost to pump water at 14,600 gpm through this system.
- 10.58** A pump transfers water from one reservoir to another through two cast-iron pipes in series. The first is 3000 ft of 9 in. pipe and the second is 1000 ft of 6 in. pipe. A constant flow rate of 75 gpm is tapped off at the junction between the two pipes. Obtain and plot the system head versus flow rate curve. Find the delivery if the system is supplied by the pump of Example Problem 10.7, operating at 1750 rpm.



- 10.59 Performance data for a pump are

$H$ (ft)	179	176	165	145	119	84	43
$Q$ (gpm)	0	500	1000	1500	2000	2500	3000

Estimate the delivery when the pump is used to move water between two open reservoirs, through 1200 ft of 12 in. commercial steel pipe containing two 90° elbows and an open gate valve, if the elevation increase is 50 ft. Determine the gate valve loss coefficient needed to reduce the volume flow rate by half.

- 10.60 Consider again the pump and piping system of Problem 10.59. Determine the volume flow rate and gate valve loss coefficient for the case of two identical pumps installed in *parallel*.
- 10.61 Consider again the pump and piping system of Problem 10.59. Determine the volume flow rate and gate valve loss coefficient for the case of two identical pumps installed in *series*.
- 10.62 The resistance of a given pipe increases with age as deposits form, increasing the roughness and reducing the pipe diameter (see Fig. 8.13). Typical multipliers to be applied to the friction factor are given in [16]:


Pipe Age (years)	Small Pipes, 4–10 in.	Large Pipes, 12–60 in.
New	1.00	1.00
10	2.20	1.60
20	5.00	2.00
30	7.25	2.20
40	8.75	2.40
50	9.60	2.86
60	10.0	3.70
70	10.1	4.70



Consider again the pump and piping system of Problem 10.59. Estimate the percentage reductions in volume flow rate that occur after (a) 20 years and (b) 40 years of use, if the pump characteristics remain constant. Repeat the calculation if the pump head is reduced 10 percent after 20 years of use and 25 percent after 40 years.

- 10.63 Consider again the pump and piping system of Problem 10.60. Estimate the percentage reductions in volume flow rate that occur after (a) 20 years and (b) 40 years of use, if the pump characteristics remain constant. Repeat the calculation if the pump head is reduced 10 percent after 20 years of use and 25 percent after 40 years. (Use the data of Problem 10.62 for increase in pipe friction factor with age.)
- 10.64 Consider again the pump and piping system of Problem 10.61. Estimate the percentage reductions in volume flow rate that occur after (a) 20 years and (b) 40 years of use, if the pump characteristics remain constant. Repeat the calculation if the pump head is reduced 10 percent after 20 years of use and 25 percent after 40 years. (Use the data of Problem 10.62 for increase in pipe friction factor with age.)
- 10.65 The city of Englewood, Colorado, diverts water for municipal use from the South Platte River at elevation 5280 ft [44]. The water is pumped to storage reservoirs at 5310 ft elevation. The inside diameter of the steel water line is 27 in.; its length is 5800 ft. The facility is designed for an initial capacity (flow rate) of 31 cfs, with an ultimate capacity of 38 cfs. Calculate and plot the system resistance curve. Specify an appropriate pumping system. Estimate the pumping power required for steady-state operation, at both the initial and ultimate flow rates.


- 10.66** A pump in the system shown draws water from a sump and delivers it to an open tank through 1250 ft of new, 4 in. nominal diameter, schedule 40 steel pipe. The vertical suction pipe is 5 ft long and includes a foot valve with hinged disk and a 90° standard elbow. The discharge line includes two 90° standard elbows, an angle lift check valve, a fully open gate valve, and a fully open gate valve. The design flow rate is 200 gpm. Find the head losses in the suction and discharge lines. Calculate the *NPSHA*. Select a pump suitable for this application.

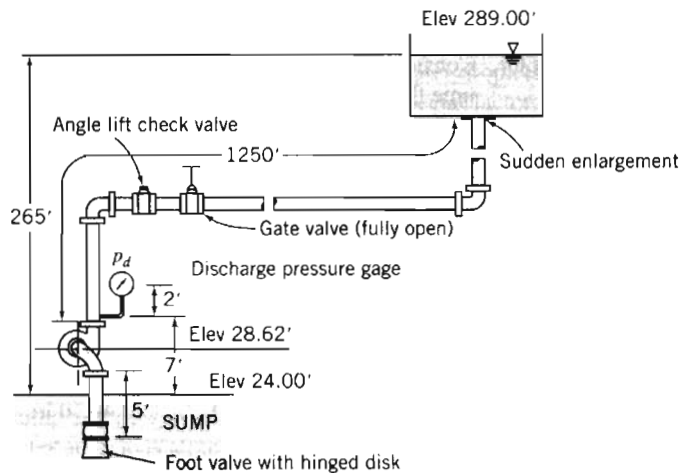

P10.66

- 10.67** Consider the flow system and data of Problem 10.66 and the data for pipe aging given in Problem 10.62. Select pump(s) that will maintain the system flow at the desired rate for (a) 10 years and (b) 20 years. Compare the delivery produced by these pumps with the delivery by the pump sized for new pipes only.
- 10.68** Consider the flow system shown in Problem 8.106. Assume the minimum *NPSHR* at the pump inlet is 4.5 m of water. Select a pump appropriate for this application. Use the data for increase in friction factor with pipe age given in Problem 10.62 to determine and compare the system flow rate after 10 years of operation.
- 10.69** Consider the flow system described in Problem 8.143. Select a pump appropriate for this application. Check the *NPSHR* versus the *NPSHA* for this system.
- 10.70** Consider the flow system shown in Problem 8.145. Select an appropriate pump for this application. Check the pump efficiency and power requirement compared with those in the problem statement.
- 10.71** A fire nozzle is supplied through 300 ft of 3 in. diameter canvas hose (with  $e = 0.001$  ft). Water from a hydrant is supplied at 50 psig to a booster pump on board the pumper truck. At design operating conditions, the pressure at the nozzle inlet is 100 psig, and the pressure drop along the hose is 33 psi per 100 ft of length. Calculate the design flow rate and the maximum nozzle exit speed. Select a pump appropriate for this application, determine its efficiency at this operating condition, and calculate the power required to drive the pump.
- 10.72** Consider the pipe network of Problem 8.155. Select a pump suitable to deliver a total flow rate of 300 gpm through the pipe network.
- 10.73** A pumping system with two different static lifts is shown. Each reservoir is supplied by a line consisting of 1000 ft of 8 in. cast-iron pipe. Evaluate and plot the system head versus flow curve. Explain what happens when the pump head is less

than the height of the upper reservoir. Calculate the flow rate delivered at a pump head of 88 ft.

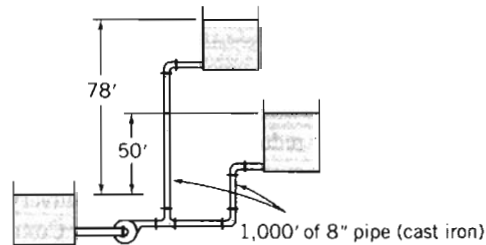

P10.73

- 10.74 Consider the flow system shown in Problem 8.77. Evaluate the *NPSHA* at the pump inlet. Select a pump appropriate for this application. Use the data on pipe aging from Problem 10.62 to estimate the reduction in flow rate after 10 years of operation.
- 10.75 Consider the chilled water circulation system of Problem 8.146. Select pumps that may be combined in parallel to supply the total flow requirement. Calculate the power required for 3 pumps in parallel. Also calculate the volume flow rates and power required when only 1 or 2 of these pumps operates.
- 10.76 Consider the gasoline pipeline flow of Problem 8.118. Select pumps that, combined in parallel, supply the total flow requirement. Calculate the power required for 4 pumps in parallel. Also calculate the volume flow rates and power required when only 1, 2, or 3 of these pumps operates.
- 10.77 Water is pumped from a lake (at  $z = 0$ ) to a large storage tank located on a bluff above the lake. The pipe is 3 in. diameter galvanized iron. The inlet section (between the lake and the pump) includes one rounded inlet, one standard  $90^\circ$  elbow, and 50 ft of pipe. The discharge section (between the pump outlet and the discharge to the open tank) includes two standard  $90^\circ$  elbows, one gate valve, and 150 ft of pipe. The pipe discharge (into the side of the tank) is at  $z = 70$  ft. Calculate the system flow curve. Estimate the system operating point. Determine the power input to the pump if its efficiency at the operating point is 80 percent. Sketch the system curve when the water level in the upper tank reaches  $z = 90$  ft. If the water level in the upper tank is at  $z = 75$  ft and the valve is partially closed to reduce the flow rate to  $0.1 \text{ ft}^3/\text{s}$ , sketch the system curve for this operating condition. Would you expect the pump efficiency to be higher for the first or second operating condition? Why?
- 10.78 Water for the sprinkler system at a lakeside summer home is to be drawn from the adjacent lake. The home is located on a bluff 80 ft above the lake surface. The pump is located on level ground 10 ft above the lake surface. The sprinkler system requires 10 gpm at 50 psig. The piping system is to be 1 in. diameter galvanized iron. The inlet section (between the lake and pump inlet) includes a reentrant inlet, one standard  $45^\circ$  elbow, one standard  $90^\circ$  elbow, and 50 ft of pipe. The discharge section (between the pump outlet and the sprinkler connection) includes two standard  $45^\circ$  elbows and 120 ft of pipe. Evaluate the head loss on the suction side of the pump. Calculate the gage pressure at the pump inlet. Determine the hydraulic power requirement of the pump. If the pipe diameter were increased to 1.5 in., would the power requirement of the pump increase, decrease, or stay the same? What difference would it make if the pump were located halfway up the hill?

- 10.79 Manufacturer's data for the "Little Giant Water Wizard" submersible utility pump are

Discharge height (ft)	1	2	5	10	15	20	26.3
Water flow rate (gpm)	20.4	20	19	16	13	8	0


The Owner's Manual also states, "Note: These ratings are based on discharge into 1 in. pipe with friction loss neglected. Using 3/4 in. garden hose adaptor, performance will be reduced approximately 15%." Plot a performance curve for the pump. Develop a curve-fit equation for the performance curve; show the curve-fit on the plot. Calculate and plot the pump delivery versus discharge height through a 50 ft length of smooth 3/4 in. garden hose. Compare with the curve for delivery into 1 in. pipe.

- 10.80 Consider the fire hose and nozzle of Problem 8.148. Specify an appropriate pump and impeller diameter to supply four such hoses simultaneously. Calculate the power input to the pump.
- 10.81 Consider the swimming pool filtration system of Problem 8.156. Assume the pipe used is 3/4 in. nominal PVC (smooth plastic). Specify the speed and impeller diameter and estimate the efficiency of a suitable pump.
- 10.82 Performance data for a Buffalo Forge Type BL centrifugal fan of 36.5 in. diameter, tested at 600 rpm, are

Volume flow rate, $Q$ (cfm)	6000	8000	10,000	12,000	14,000	16,000
Static pressure rise, $\Delta p$ (in. H <sub>2</sub> O)	2.10	2.00	1.76	1.37	0.92	0.42
Power input, $\mathcal{P}$ (hp)	2.75	3.18	3.48	3.51	3.50	3.22

Plot the performance data versus volume flow rate. Calculate static efficiency and show the curve on the plot. Find the best efficiency point and specify the fan rating at this point.

- 10.83 Using the fan of Problem 10.82 determine the minimum-size square sheet-metal duct that will carry a flow of 12,000 cfm over a distance of 50 ft. Estimate the increase in delivery if the fan speed is increased to 800 rpm.
- 10.84 Consider the fan and performance data of Problem 10.82. At  $Q = 12,000$  cfm, the dynamic pressure is equivalent to 0.16 in. of water. Evaluate the fan outlet area. Plot total pressure rise and input horsepower for this fan versus volume flow rate. Calculate the fan total efficiency and show the curve on the plot. Find the best efficiency point and specify the fan rating at this point.
- 10.85 The performance data of Problem 10.82 are for a 36.5 in. diameter fan wheel. This fan also is manufactured with 40.3, 44.5, 49.0, and 54.3 in. diameter wheels. Pick a standard fan to deliver 30,000 cfm against a 5 in. H<sub>2</sub>O static pressure rise. Assume standard air at the fan inlet. Determine the required fan speed and the input power needed.
- 10.86 Performance characteristics of a Buffalo Forge axial flow fan are presented on the next page. The fan is used to power a wind tunnel with 1 ft square test section. The tunnel consists of a smooth inlet contraction, two screens (each with loss coefficient  $K = 0.12$ ), the test section, and a diffuser where the cross section is expanded to 24 in. diameter at the fan inlet. Flow from the fan is discharged back to the room. Calculate and plot the system characteristic curve of pressure loss versus volume flow rate. Estimate the maximum air flow speed available in this wind tunnel test section.

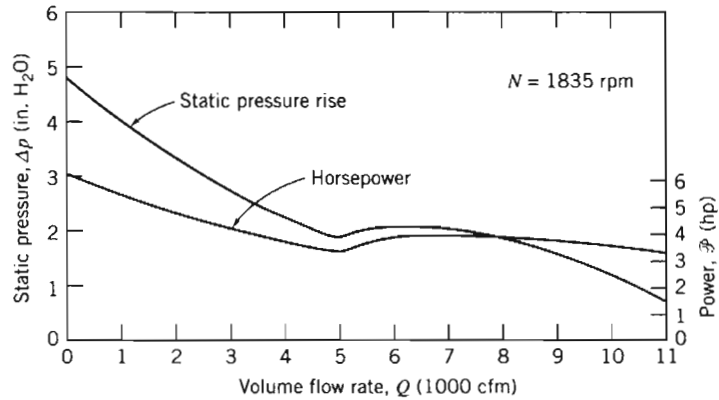

P10.86, 10.87

- 10.87 Consider again the axial-flow fan and wind tunnel of Problem 10.86. Scale the performance of the fan as it varies with operating speed. Develop and plot a “calibration curve” showing test section flow speed (in m/s) versus fan speed (in rpm).
- 10.88 Experimental test data for an aircraft engine fuel pump are presented below. This gear pump is required to supply jet fuel at 450 pounds per hour and 150 psig to the engine fuel controller. Tests were conducted at 10, 96, and 100 percent of the rated pump speed of 4536 rpm. At each constant speed, the back pressure on the pump was set, and the flow rate measured. On one graph, plot curves of pressure versus delivery at the three constant speeds. Estimate the pump displacement volume per revolution. Calculate the volumetric efficiency at each test point and sketch contours of constant  $\eta_v$ . Evaluate the energy loss caused by valve throttling at 100 percent speed and full delivery to the engine.

Pump Speed (rpm)	Back Pressure (psig)	Fuel Flow (pph*)	Pump Speed (rpm)	Back Pressure (psig)	Fuel Flow (pph)	Pump Speed (rpm)	Back Pressure (psig)	Fuel Flow (pph)
	200	1810		200	1730		200	89
4536	300	1810	4355	300	1750	453	250	73
(100%)	400	1810	(96%)	400	1735	(10%)	300	58.5
	500	1790		500	1720		350	45
	900	1720		900	1635		400	30



\* Fuel flow rate measured in pounds per hour (pph).

- 10.89 An air boat in the Florida Everglades is powered by a propeller, with  $D = 5$  ft, driven at maximum speed,  $N = 1800$  rpm, by a 160 hp engine. Estimate the maximum thrust produced by the propeller at (a) standstill and (b)  $V = 30$  mph.
- 10.90 The propeller on an airboat used in the Florida Everglades moves air at the rate of 40 kg/s. When at rest, the speed of the slipstream behind the propeller is 40 m/s at a location where the pressure is atmospheric. Calculate (a) the propeller diameter, (b) the thrust produced at rest, and (c) the thrust produced when the airboat is moving ahead at 10 m/s, if the mass flow rate through the propeller remains constant.
- 10.91 A jet-propelled aircraft traveling at 200 m/s takes in 40 kg/s of air and discharges it at 500 m/s relative to the aircraft. Determine the propulsive efficiency (defined as the ratio of the useful work output to the mechanical energy input to the fluid) of the aircraft.

- 10.92** Drag data for model and prototype guided missile frigates are presented in Figs. 7.2 and 7.3. Dimensions of the prototype vessel are given in Problem 9.73. Use these data, with the propeller performance characteristics of Fig. 10.40, to size a single propeller to power the full-scale vessel. Calculate the propeller size, operating speed, and power input, if the propeller operates at maximum efficiency when the vessel travels at its maximum speed,  $V = 37.6$  knots.
- 10.93** The propeller for the Gossamer Condor human-powered aircraft has  $D = 12$  ft and rotates at  $N = 107$  rpm. Additional details on the aircraft are given in Problem 9.153. Estimate the dimensionless performance characteristics and efficiency of this propeller at cruise conditions. Assume the pilot expends 70 percent of maximum power at cruise. (See Reference 45 for more information on human-powered flight.)
- 10.94** The propulsive efficiency,  $\eta$ , of a propeller is defined as the ratio of the useful work produced to the mechanical energy input to the fluid. Determine the propulsive efficiency of the moving airboat of Problem 10.90. What would be the efficiency if the boat were not moving?
- 10.95** Equations for the thrust, power, and efficiency of propulsion devices were derived in Section 10-5. Show that these equations may be combined for the condition of constant thrust to obtain

$$\eta = \frac{2}{1 + \left( 1 + \frac{F_T}{\frac{\rho V^2}{2} \frac{\pi D^2}{4}} \right)^{\frac{1}{2}}}$$

Interpret this result physically.

- 10.96** Preliminary calculations for a hydroelectric power generation site show a net head of 2350 ft is available at a water flow rate of 75 ft<sup>3</sup>/s. Compare the geometry and efficiency of Pelton wheels designed to run at (a) 450 rpm and (b) 600 rpm.
- 10.97** Conditions at the inlet to the nozzle of a Pelton wheel are  $p = 4.81$  MPa (gage) and  $V = 6.10$  m/s. The jet diameter is  $d = 200$  mm and the nozzle loss coefficient is  $K_{\text{nozzle}} = 0.04$ . The wheel diameter is  $D = 2.45$  m. At this operating condition,  $\eta = 0.86$ . Calculate (a) the power output, (b) the normal operating speed, (c) the approximate runaway speed, (d) the torque at normal operating speed, and (e) the approximate torque at zero speed.
-  **10.98** The reaction turbines at Niagara Falls are of the Francis type. The impeller outside diameter is 176 in. Each turbine produces 72,500 hp at 107 rpm, with 93.8 percent efficiency under 214 ft of net head. Calculate the specific speed of these units. Evaluate the volume flow rate to each turbine. Estimate the penstock size, if it is 1300 ft long and the net head is 85 percent of the gross head.
- 10.99** Francis turbine Units 19, 20, and 21, installed at the Grand Coulee Dam on the Columbia River, are *very* large [46]. Each runner is 32.6 ft in diameter and contains 550 tons of cast steel. At rated conditions, each turbine develops 820,000 hp at 72 rpm under 285 ft of head. Efficiency is nearly 95 percent at rated conditions. The turbines operate at heads from 220 to 355 ft. Calculate the specific speed at rated operating conditions. Estimate the maximum water flow rate through each turbine.
- 10.100** Figure 10.11 contains data for the efficiency of a large Pelton water wheel installed in the Tiger Creek Power House of Pacific Gas & Electric Company near Jackson, California. This unit is rated at 36,000 hp when operated at 225 rpm under a net head of 1190 ft of water. Assume reasonable flow angles and nozzle loss coefficient. Determine the rotor diameter and estimate the jet diameter and the volume flow rate.
-  **10.101** Measured data for performance of the reaction turbines at Shasta Dam near Redding, California are shown in Fig. 10.13. Each turbine is rated at 103,000 hp when

operating at 138.6 rpm under a net head of 380 ft. Evaluate the specific speed and compute the shaft torque developed by each turbine at rated operating conditions. Calculate and plot the water flow rate per turbine required to produce rated output power as a function of head.

10.102 An impulse turbine is to develop 20,000 hp from a single wheel at a location where the net head is 1120 ft. Determine the appropriate speed, wheel diameter, and jet diameter for single- and multiple-jet operation. Compare with a double-overhung wheel installation. Estimate the required water consumption.

10.103 Tests of a model impulse turbine under a net head of 65.5 ft produced the following results:

Wheel Speed (rpm)	No-Load Discharge (cfs)	Net Brake Scale Reading (lbf) ( $R = 5.25$ ft)					
275	0.110	6.8	14.9	22.0	28.9	40.0	48.0
300	0.125	5.9	12.9	19.8	25.5	36.0	43.8
Discharge (cfs)		0.397	0.773	1.114	1.414	1.896	2.315

Calculate and plot the machine power output and efficiency versus water flow rate.

10.104 According to a spokesperson for Pacific Gas & Electric Company, the Tiger Creek plant, located east of Jackson, California, is one of 71 PG&E hydroelectric powerplants. The plant has 1219 ft of gross head, consumes 750 cfs of water, is rated at 60 MW, and operates at 58 MW. The plant is claimed to produce 968 kW · hr/ (acre · ft) of water and  $336.4 \times 10^6$  kW · hr/yr of operation. Estimate the net head at the site, the turbine specific speed, and its efficiency. Comment on the internal consistency of these data.


10.105 In U.S. customary units, the common definition of specific speed for a hydraulic turbine is given by Eq. 10.18b. Develop a conversion between this definition and a truly dimensionless one in SI units. Evaluate the specific speed of an impulse turbine, operating at 400 rpm under a net head of 1190 ft with 86 percent efficiency, when supplied by a single 6 in. diameter jet. Use both U.S. customary and SI units. Estimate the wheel diameter.

10.106 Design the piping system to supply a water turbine from a mountain reservoir. The reservoir surface is 300 m above the turbine site. The turbine efficiency is 80 percent, and it must produce 25 kW of mechanical power. Define the minimum standard-size pipe required to supply water to the turbine and the required volume flow rate of water. Discuss the effects of turbine efficiency, pipe roughness, and installing a diffuser at the turbine exit on the performance of the installation.

10.107 A small hydraulic impulse turbine is supplied with water through a penstock with diameter  $D$  and length  $L$ ; the jet diameter is  $d$ . The elevation difference between the reservoir surface and nozzle centerline is  $Z$ . The nozzle head loss coefficient is  $K_{nozzle}$  and the loss coefficient from the reservoir to the penstock entrance is  $K_{entrance}$ . Determine the water jet speed, the volume flow rate, and the hydraulic power of the jet, for the case where  $Z = 300$  ft,  $L = 1000$  ft,  $D = 6$  in.,  $K_{entrance} = 0.5$ ,  $K_{nozzle} = 0.04$ , and  $d = 2$  in., if the pipe is made from commercial steel. Plot the jet power as a function of jet diameter to determine the optimum jet diameter and the resulting hydraulic power of the jet. Comment on the effects of varying the loss coefficients and pipe roughness.


10.108 The National Aeronautics & Space Administration (NASA) and the U.S. Department of Energy (DOE) co-sponsor a large demonstration wind turbine generator at Plum Brook, near Sandusky, Ohio [41]. The turbine has two blades, with  $D = 38$  m, and delivers maximum power when the wind speed is above  $V = 29$  km/hr. It is

designed to produce 100 kW with powertrain efficiency of 0.75. The rotor is designed to operate at a constant speed of 40 rpm in winds over 6 mph by controlling system load and adjusting blade angles. For the maximum power condition, estimate the rotor tip speed and power coefficient.

- 10.109** A model of an American multiblade farm windmill is to be built for display. The model, with  $D = 2$  ft, is to develop full power at  $V = 22$  mph wind speed. Calculate the angular speed of the model for optimum power generation. Estimate the power output.
- 10.110** The largest known Darrieus vertical axis wind turbine was built by the U.S. Department of Energy near Sandia, New Mexico [42]. This machine is 60 ft tall and 30 ft in diameter; the area swept by the rotor is almost 1200 ft<sup>2</sup>. Estimate the maximum power this wind turbine can produce in a 20 mph wind.
- 10.111** A typical American multiblade farm windmill has  $D = 7$  ft and is designed to produce maximum power in winds with  $V = 15$  mph. Estimate the rate of water delivery, as a function of the height to which the water is pumped, for this windmill.
-  **10.112** Aluminum extrusions, patterned after NACA symmetric airfoil sections, frequently are used to form Darrieus wind turbine “blades.” Below are section lift and drag coefficient data [47] for a NACA 0012 section, tested at  $Re = 6 \times 10^6$  with standard roughness (the section stalled for  $\alpha > 12^\circ$ ):

Angle of attack, $\alpha$ (deg)	0	2	4	6	8	10	12
Lift coefficient, $C_L$ (—)	0	0.23	0.45	0.68	0.82	0.94	1.02
Drag coefficient, $C_D$ (—)	0.0098	0.0100	0.0119	0.0147	0.0194	—	—

Analyze the air flow relative to a blade element of a Darrieus wind turbine rotating about its troposkien axis. Develop a numerical model for the blade element. Calculate the power coefficient developed by the blade element as a function of tip-speed ratio. Compare your result with the general trend of power output for Darrieus rotors shown in Fig. 10.45.

-  **10.113** Lift and drag data for the NACA 23015 airfoil section are presented in Fig. 9.17. Consider a two-blade horizontal-axis propeller wind turbine with NACA 23015 blade section. Analyze the air flow relative to a blade element of the rotating wind turbine. Develop a numerical model for the blade element. Calculate the power coefficient developed by the blade element as a function of tip-speed ratio. Compare your result with the general trend of power output for high-speed two-bladed turbine rotors shown in Fig. 10.45.



# INTRODUCTION TO COMPRESSIBLE FLOW

In Chapter 2 we briefly discussed the two most important questions we must ask before analyzing a fluid flow: whether or not the flow is viscous, and whether or not the flow is compressible. We subsequently considered *incompressible, inviscid* flows (Chapter 6) and *incompressible, viscous* flows (Chapters 8 and 9). We are now ready to study flows that experience compressibility effects. Because this is an introductory text, our focus will be mainly on *one-dimensional compressible, inviscid* flows, although we will also review some important *compressible, viscous* flow phenomena. After our consideration of one-dimensional flows, we will introduce some basic concepts of two-dimensional steady compressible flows.

We first need to establish what we mean by a “compressible” flow. This is a flow in which there are significant or noticeable changes in fluid density. Just as inviscid fluids do not actually exist, so incompressible fluids do not actually exist. For example, in this text we have treated water as an incompressible fluid, although in fact the density of seawater increases by 1% for each mile or so of depth. Hence, whether or not a given flow can be treated as incompressible is a judgment call: Liquid flows will almost always be considered incompressible (exceptions include phenomena such as the “water hammer” effect in pipes), but gas flows could easily be either incompressible or compressible. As we will see (in Example Problem 11.5), our judgment will be guided by the rule of thumb that flows for which the Mach number  $M$  is less than about 0.3 can be considered incompressible.

The consequences of compressibility are not limited simply to density changes. Density changes mean that we can have significant compression or expansion work on a gas, so the thermodynamic state of the fluid will change, meaning that in general *all* properties—temperature, internal energy, entropy, and so on—can change. In particular, density changes create a mechanism (just as viscosity did) for exchange of energy between “mechanical” energies (kinetic, potential, and “pressure”) and the thermal internal energy. For this reason, we begin with a review of the thermodynamics needed to study compressible flow.

---

## 11-1 REVIEW OF THERMODYNAMICS

The pressure, density, and temperature of a substance may be related by an equation of state. Although many substances are complex in behavior, experience shows that most gases of engineering interest, at moderate pressure and temperature, are well represented by the ideal gas equation of state,

$$p = \rho RT \quad (11.1)$$

where  $R$  is a unique constant for each gas;<sup>1</sup>  $R$  is given by

$$R = \frac{R_u}{M_m}$$

where  $R_u$  is the universal gas constant,  $R_u = 8314 \text{ N} \cdot \text{m}/(\text{kgmole} \cdot \text{K}) = 1544 \text{ ft} \cdot \text{lb}/(\text{lbmole} \cdot ^\circ\text{R})$  and  $M_m$  is the molecular mass of the gas. Although the ideal gas equation is derived using a model that has the unrealistic assumptions that the gas molecules (a) take up zero volume (i.e., they are point masses) and (b) do not interact with one another, many real gases conform to Eq. 11.1, especially if the pressure is “low” enough and/or temperature “high” enough (see, e.g., [1–3]). For example, at room temperature, as long as the pressure is less than about 30 atm, Eq. 11.1 models the air density to better than 1 percent accuracy; similarly, Eq. 11.1 is accurate for air at 1 atm for temperatures that are greater than about  $-130^\circ\text{C}$  (140 K).

The ideal gas has other features that are useful. In general, the *internal energy* of a simple substance may be expressed as a function of any two independent properties, e.g.,  $u = u(v, T)$ , where  $v \equiv 1/\rho$  is the *specific volume*. Then

$$du = \left( \frac{\partial u}{\partial T} \right)_v dT + \left( \frac{\partial u}{\partial v} \right)_T dv$$

The *specific heat at constant volume* is defined as  $c_v \equiv (\partial u/\partial T)_v$ , so that

$$du = c_v dT + \left( \frac{\partial u}{\partial v} \right)_T dv$$

In particular, for an ideal gas it can be shown (see, e.g., Chapter 11 of [1]) that the internal energy,  $u$ , is a function of temperature only, so  $(\partial u/\partial v)_T = 0$ , and

$$du = c_v dT \quad (11.2)$$

for an ideal gas. This means that internal energy and temperature changes may be related if  $c_v$  is known. Furthermore, since  $u = u(T)$ , then from Eq. 11.2,  $c_v = c_v(T)$ .

The *enthalpy* of any substance is defined as  $h \equiv u + p/\rho$ . For an ideal gas,  $p = \rho RT$ , and so  $h = u + RT$ . Since  $u = u(T)$  for an ideal gas,  $h$  also must be a function of temperature alone.

We can obtain a relation between  $h$  and  $T$  by recalling once again that for a simple substance any property can be expressed as a function of any two other independent properties [1], e.g.,  $h = h(v, T)$  as we did for  $u$ , or  $h = h(p, T)$ . We choose the latter in order to develop a useful relation,

$$dh = \left( \frac{\partial h}{\partial T} \right)_p dT + \left( \frac{\partial h}{\partial p} \right)_T dp$$

Since the *specific heat at constant pressure* is defined as  $c_p \equiv (\partial h/\partial T)_p$ ,

$$dh = c_p dT + \left( \frac{\partial h}{\partial p} \right)_T dp$$

We have shown that for an ideal gas  $h$  is a function of  $T$  only. Consequently,  $(\partial h/\partial p)_T = 0$  and

$$dh = c_p dT \quad (11.3)$$

<sup>1</sup>For air,  $R = 287 \text{ N} \cdot \text{m}/(\text{kg} \cdot \text{K}) = 53.3 \text{ ft} \cdot \text{lb}/(\text{lbm} \cdot ^\circ\text{R})$ .

Since  $h$  is a function of  $T$  alone, Eq. 11.3 requires that  $c_p$  be a function of  $T$  only for an ideal gas.

Although specific heats for an ideal gas are functions of temperature, their difference is a constant for each gas. To see this, from

$$h = u + RT$$

we can write

$$dh = du + RdT$$

Combining this with Eq. 11.2 and Eq. 11.3, we can write

$$dh = c_p dT = du + RdT = c_v dT + R dT$$

Then

$$c_p - c_v = R \quad (11.4)$$

This result may seem a bit odd, but it means simply that although the specific heats of an ideal gas may vary with temperature, they do so at the same rate, so their difference is always constant.

The *ratio of specific heats* is defined as

$$k \equiv \frac{c_p}{c_v} \quad (11.5)$$

Using the definition of  $k$ , we can solve Eq. 11.4 for either  $c_p$  or  $c_v$  in terms of  $k$  and  $R$ . Thus,

$$c_p = \frac{kR}{k-1} \quad (11.6a)$$

and

$$c_v = \frac{R}{k-1} \quad (11.6b)$$

Although the specific heats of an ideal gas may vary with temperature, for moderate temperature ranges they vary only slightly, and can be treated as constant, so

$$u_2 - u_1 = \int_{u_1}^{u_2} du = \int_{T_1}^{T_2} c_v dT = c_v(T_2 - T_1) \quad (11.7a)$$

$$h_2 - h_1 = \int_{h_1}^{h_2} dh = \int_{T_1}^{T_2} c_p dT = c_p(T_2 - T_1) \quad (11.7b)$$

Data for  $M_m$ ,  $c_p$ ,  $c_v$ ,  $R$ , and  $k$  for common gases are given in Table A.6 of Appendix A.

We will find the property *entropy* to be extremely useful in analyzing compressible flows. State diagrams, particularly the temperature-entropy ( $Ts$ ) diagram, are valuable aids in the physical interpretation of analytical results. Since we shall make extensive use of  $Ts$  diagrams in solving compressible flow problems, let us review briefly some useful relationships involving the property entropy [1-3].

Entropy is defined by the equation

$$\Delta S \equiv \int_{\text{rev}} \frac{\delta Q}{T} \quad \text{or} \quad dS = \left( \frac{\delta Q}{T} \right)_{\text{rev}} \quad (11.8)$$

where the subscript signifies *reversible*.



The inequality of Clausius, deduced from the second law, states that

$$\oint \frac{\delta Q}{T} \leq 0$$

As a consequence of the second law, we can write

$$dS \geq \frac{\delta Q}{T} \quad \text{or} \quad T dS \geq \delta Q \quad (11.9a)$$

For *reversible* processes, the equality holds, and

$$T ds = \frac{\delta Q}{m} \quad (\text{reversible process}) \quad (11.9b)$$

The inequality holds for *irreversible* processes, and

$$T ds > \frac{\delta Q}{m} \quad (\text{irreversible process}) \quad (11.9c)$$

For an *adiabatic* process,  $\delta Q/m \equiv 0$ . Thus

$$ds = 0 \quad (\text{reversible adiabatic process}) \quad (11.9d)$$

and

$$ds > 0 \quad (\text{irreversible adiabatic process}) \quad (11.9e)$$

Thus a process that is *reversible and adiabatic* is also *isentropic*; the entropy remains constant during the process. Inequality 11.9e shows that entropy must *increase* for an adiabatic process that is irreversible.

Equations 11.9 show that any two of the restrictions—reversible, adiabatic, or isentropic—imply the third. For example, a process that is isentropic and reversible must also be adiabatic.

A useful relationship among properties ( $p, v, T, s, u$ ) can be obtained by considering the first and second laws together. The result is the Gibbs, or  $T ds$ , equation

$$T ds = du + p dv \quad (11.10a)$$

This is a differential relationship among properties, valid for any process between any two equilibrium states. Although it is derived from the first and second laws, it is, in itself, a statement of neither.

An alternative form of Eq. 11.10a can be obtained by substituting

$$du = d(h - pv) = dh - p dv - v dp$$

to obtain

$$T ds = dh - v dp \quad (11.10b)$$

For an ideal gas, entropy change can be evaluated from the  $T ds$  equations as

$$ds = \frac{du}{T} + \frac{p}{T} dv = c_v \frac{dT}{T} + R \frac{dv}{v}$$

$$ds = \frac{dh}{T} - \frac{v}{T} dp = c_p \frac{dT}{T} - R \frac{dp}{p}$$

For constant specific heats, these equations can be integrated to yield

$$s_2 - s_1 = c_v \ln \frac{T_2}{T_1} + R \ln \frac{v_2}{v_1} \quad (11.11a)$$

$$s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (11.11b)$$

and also

$$s_2 - s_1 = c_v \ln \frac{p_2}{p_1} + c_p \ln \frac{v_2}{v_1} \quad (11.11c)$$

(Equation 11.11c can be obtained from either Eq. 11.11a or 11.11b using Eq. 11.4 and the ideal gas equation, Eq. 11.1, written in the form  $p v = RT$ , to eliminate  $T$ .)

Example Problem 11.1 shows use of the above governing equations (the  $T ds$  equations) to evaluate property changes during a process.

For an ideal gas with constant specific heats, we can use Eqs. 11.11 to obtain relations valid for an isentropic process. From Eq. 11.11a

$$s_2 - s_1 = 0 = c_v \ln \frac{T_2}{T_1} + R \ln \frac{v_2}{v_1}$$

Then, using Eqs. 11.4 and 11.5,

$$\left(\frac{T_2}{T_1}\right) \left(\frac{v_2}{v_1}\right)^{R/c_v} = 0 \quad \text{or} \quad T_2 v_2^{k-1} = T_1 v_1^{k-1} = T v^{k-1} = \text{constant}$$

where states 1 and 2 are arbitrary states of the isentropic process. Using  $v = 1/\rho$ ,

$$T v^{k-1} = \frac{T}{\rho^{k-1}} = \text{constant} \quad (11.12a)$$

We can apply a similar process to Eqs. 11.11b and 11.11c, respectively, and obtain the following useful relations:

$$T p^{\frac{1-k}{k}} = \text{constant} \quad (11.12b)$$

$$p v^k = \frac{p}{\rho^k} = \text{constant} \quad (11.12c)$$

Equations 11.12 are for an ideal gas undergoing an isentropic process.

Qualitative information that is useful in drawing state diagrams also can be obtained from the  $T ds$  equations. To complete our review of the thermodynamic fundamentals, we evaluate the slopes of lines of constant pressure and of constant volume on the  $Ts$  diagram in Example Problem 11.2.


### EXAMPLE 11.1 Property Changes in Compressible Duct Flow

Air flows through a long duct of constant area at 0.15 kg/s. A short section of the duct is cooled by liquid nitrogen that surrounds the duct. The rate of heat loss in this section is 15.0 kJ/s from the air. The absolute pressure, temperature, and velocity entering the cooled section are 188 kPa, 440 K, and 210 m/s, respectively. At the outlet, the absolute pressure and temperature are 213 kPa and 351 K. Compute the duct cross-sectional area and the changes in enthalpy, internal energy, and entropy for this flow.

**EXAMPLE PROBLEM 11.1**

**GIVEN:** Air flows steadily through a short section of constant-area duct that is cooled by liquid nitrogen.

$$\begin{aligned} T_1 &= 440 \text{ K} \\ p_1 &= 188 \text{ kPa (abs)} \\ V_1 &= 210 \text{ m/s} \end{aligned}$$

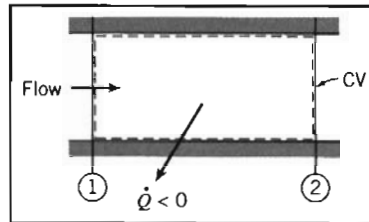

$$\begin{aligned} T_2 &= 351 \text{ K} \\ p_2 &= 213 \text{ kPa (abs)} \end{aligned}$$

**FIND:** (a) Duct area. (b)  $\Delta h$ . (c)  $\Delta u$ . (d)  $\Delta s$ .

**SOLUTION:**

The duct area may be found from the continuity equation.

$$\text{Governing equation: } \frac{d}{dt} \int_{\text{CV}} \rho dV + \int_{\text{CS}} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

- Assumptions: (1) Steady flow.  
 (2) Uniform flow at each section.  
 (3) Ideal gas with constant specific heats.

Then

$$(-\rho_1 V_1 A_1) + (\rho_2 V_2 A_2) = 0$$

or

$$\dot{m} = \rho_1 V_1 A = \rho_2 V_2 A$$

since  $A = A_1 = A_2 = \text{constant}$ . Using the ideal gas relation,  $p = \rho RT$ , we find

$$\rho_1 = \frac{p_1}{RT_1} = \frac{1.88 \times 10^5 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{440 \text{ K}} = 1.49 \text{ kg/m}^3$$

From continuity,

$$A = \frac{\dot{m}}{\rho_1 V_1} = \frac{0.15 \text{ kg}}{\text{s}} \times \frac{\text{m}^3}{1.49 \text{ kg}} \times \frac{\text{s}}{210 \text{ m}} = 4.79 \times 10^{-4} \text{ m}^2 \quad \leftarrow \underline{\underline{A}}$$

For an ideal gas, the change in enthalpy is

$$\Delta h = h_2 - h_1 = \int_{T_1}^{T_2} c_p dT = c_p (T_2 - T_1) \quad (11.7b)$$

$$\Delta h = \frac{1.00 \text{ kJ}}{\text{kg} \cdot \text{K}} \times (351 - 440) \text{ K} = -89.0 \text{ kJ/kg} \quad \leftarrow \underline{\underline{\Delta h}}$$

Also, the change in internal energy is

$$\Delta u = u_2 - u_1 = \int_{T_1}^{T_2} c_v dT = c_v (T_2 - T_1) \quad (11.7a)$$

$$\Delta u = \frac{0.717 \text{ kJ}}{\text{kg} \cdot \text{K}} \times (351 - 440) \text{ K} = -63.8 \text{ kJ/kg} \quad \leftarrow \underline{\underline{\Delta u}}$$

The entropy change may be obtained from Eq. 11.11b,

$$\begin{aligned}\Delta s &= s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \\ &= 1.00 \frac{\text{kJ}}{\text{kg} \cdot \text{K}} \times \ln \left( \frac{351}{440} \right) - 0.287 \frac{\text{kJ}}{\text{kg} \cdot \text{K}} \times \ln \left( \frac{2.13 \times 10^5}{1.88 \times 10^5} \right) \\ \Delta s &= -0.262 \text{ kJ}/(\text{kg} \cdot \text{K}) \quad \leftarrow \Delta s\end{aligned}$$

We see that entropy may decrease for a nonadiabatic process in which the gas is cooled.

This problem illustrates the use of the governing equations for computing property changes of an ideal gas during a process.

### EXAMPLE 11.2 Constant-Property Lines on a $Ts$ Diagram

For an ideal gas, find the equations for lines of (a) constant volume and (b) constant pressure in the  $Ts$  plane.

#### EXAMPLE PROBLEM 11.2

**FIND:** Equations for lines of (a) constant volume and (b) constant pressure in the  $Ts$  plane for an ideal gas.

**SOLUTION:**

(a) We are interested in the relation between  $T$  and  $s$  with the volume  $v$  held constant. This suggests use of Eq. 11.11a,

$$s_2 - s_1 = c_v \ln \frac{T_2}{T_1} + R \ln \frac{v_2}{v_1} = 0$$

We relabel this equation so that state 1 is now reference state 0, and state 2 is an arbitrary state,

$$s - s_0 = c_v \ln \frac{T}{T_0} \quad \text{or} \quad T = T_0 e^{\frac{s-s_0}{c_v}} \quad (1)$$


Hence, we conclude that constant volume lines in the  $Ts$  plane are exponential.

(b) We are interested in the relation between  $T$  and  $s$  with the pressure  $p$  held constant. This suggests use of Eq. 11.11b, and using a similar approach to case (a), we find

$$T = T_0 e^{\frac{s-s_0}{c_p}} \quad (2)$$

Hence, we conclude that constant pressure lines in the  $Ts$  plane are also exponential.

What about the slope of these curves? Because  $c_p > c_v$  for all gases, we can see that the exponential, and therefore the slope, of the constant pressure curve, Eq. 2, is smaller than that for the constant volume curve, Eq. 1. This is shown in the sketch below:

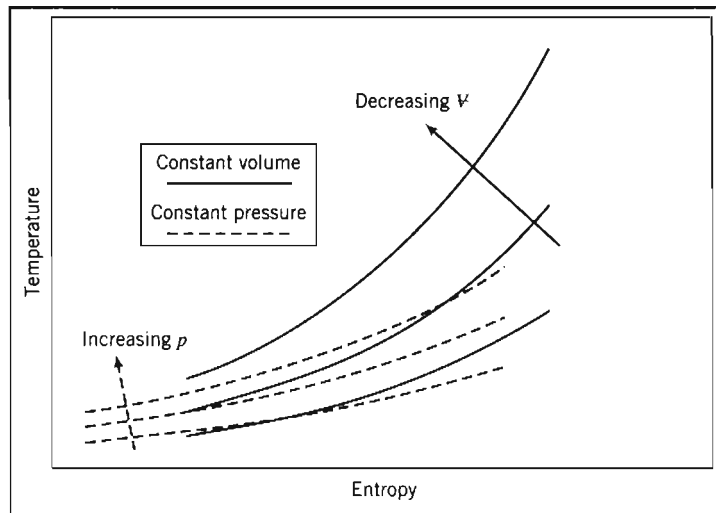

This Example Problem illustrates use of governing equations to explore relations among properties.

## 11-2 PROPAGATION OF SOUND WAVES


### Speed of Sound

*Supersonic* and *subsonic* are familiar terms; they refer to speeds that are, respectively, greater than and less than the speed of sound. The speed of sound (which is a pressure wave of infinitesimal strength) is therefore an important characteristic parameter for compressible flow. We have previously (Chapters 2 and 7) introduced the Mach number,  $M = V/c$ , the ratio of the local flow speed to the local speed of sound, as an important nondimensional parameter characterizing compressible flows. Before studying compressible flows let us determine the speed of sound in any medium (gas, liquid, or solid). As we do so, it is worth keeping in mind the question "Would a liquid, such as water, behave this way, or just a gas, such as air?"

Consider propagation of a sound wave of infinitesimal strength into an undisturbed medium, as shown in Fig. 11.1a. We are interested in relating the speed of wave propagation,  $c$ , to fluid property changes across the wave. If pressure and density in the undisturbed medium ahead of the wave are denoted by  $p$  and  $\rho$ , passage of the wave will cause them to undergo infinitesimal changes to become  $p + dp$  and  $\rho + d\rho$ . Since the wave propagates into a stationary fluid, the velocity ahead of the wave,  $V_x$ , is zero. The magnitude of the velocity behind the wave,  $V_x + dV_x$ , then will be simply  $dV_x$ ; in Fig. 11.1a, the direction of the motion behind the wave has been assumed to the left.<sup>2</sup>

<sup>2</sup>The same final result is obtained regardless of the direction initially assumed for motion behind the wave (see Problem 11.19).



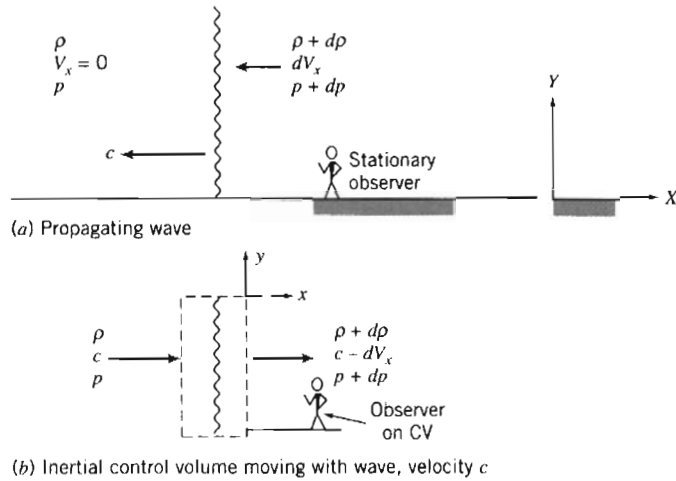

**Fig. 11.1** Propagating sound wave showing control volume chosen for analysis.

The flow of Fig. 11.1a appears unsteady to a stationary observer, viewing the wave motion from a fixed point on the ground. However, the flow appears steady to an observer located *on* an inertial control volume moving with a segment of the wave, as shown in Fig. 11.1b. The velocity approaching the control volume is  $c$ , and the velocity leaving is  $c - dV_x$ .

The basic equations may be applied to the differential control volume shown in Fig. 11.1b (we use  $V_x$  for the  $x$  component of velocity to avoid confusion with internal energy,  $u$ ).

### a. Continuity Equation

$$\text{Governing equation: } \frac{\partial}{\partial t} \int_{CV} \rho dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

Assumptions: (1) Steady flow.  
(2) Uniform flow at each section.

Then

$$(-\rho c A) + \{(\rho + d\rho)(c - dV_x)A\} = 0 \quad (11.13a)$$

or

$$-\cancel{\rho c A} + \cancel{\rho c A} - \rho dV_x A + d\rho c A - d\rho dV_x A \approx 0$$

or

$$dV_x = \frac{c}{\rho} d\rho \quad (11.13b)$$

### b. Momentum Equation

$$\text{Governing equation: } F_{S_x} + F_{B_x} = \frac{\partial}{\partial t} \int_{CV} V_x \rho dV + \int_{CS} V_x \rho \vec{V} \cdot d\vec{A} \quad (4.18a)$$

Assumption: (3)  $F_{B_x} = 0$

The only surface forces acting in the  $x$  direction on the control volume of Fig. 11.1*b* are due to pressure (the infinitesimal upper and lower areas have zero friction because we assume the wave continues unchanged above and below the control volume),

$$F_{S_x} = pA - (p + dp)A = -A dp$$

Substituting into the governing equation gives

$$-A dp = c(-\rho cA) + (c - dV_x)\{(\rho + d\rho)(c - dV_x)A\}$$

Using the continuity equation, (Eq. 11.13a), this reduces to

$$\begin{aligned} -A dp &= c(-\rho cA) + (c - dV_x)(\rho cA) = (-c + c - dV_x)(\rho cA) \\ -A dp &= -\rho cA dV_x \end{aligned}$$

or

$$dV_x = \frac{1}{\rho c} dp \quad (11.13c)$$

Combining Eqs. 11.13b and 11.13c, we obtain

$$dV_x = \frac{c}{\rho} d\rho = \frac{1}{\rho c} dp$$

from which

$$dp = c^2 d\rho$$

or

$$c^2 = \frac{dp}{d\rho} \quad (11.14)$$

We have derived an expression for the speed of sound in any medium in terms of thermodynamic quantities! Equation 11.14 indicates that the speed of sound depends on how the pressure and density of the medium are related. To obtain the speed of sound in a medium we could measure the time a sound wave takes to travel a prescribed distance, or instead we could apply a small pressure change  $dp$  to a sample, measure the corresponding density change  $d\rho$  and evaluate  $c$  from Eq. 11.14. For example, an *incompressible* medium would have  $dp = 0$  for any  $d\rho$ , so  $c \rightarrow \infty$ . We can anticipate that solids and liquids (whose densities are difficult to change) will have relatively high  $c$  values, and gases (whose densities are easy to change) will have relatively low  $c$  values. There is only one problem with Eq. 11.14: For a simple substance, each property depends on any *two* independent properties [1]. For a sound wave, by definition we have an infinitesimal pressure change (i.e., it is *reversible*), and it occurs very quickly, so there is no time for any heat transfer to occur (i.e., it is *adiabatic*). Thus the sound wave propagates *isentropically*. Hence, if we express  $p$  as a function of density and entropy,  $p = p(\rho, s)$ , then

$$dp = \left(\frac{\partial p}{\partial \rho}\right)_s d\rho + \left(\frac{\partial p}{\partial s}\right)_\rho ds = \left(\frac{\partial p}{\partial \rho}\right)_s d\rho$$

so Eq. 11.14 becomes

$$c^2 = \frac{dp}{d\rho} = \left(\frac{\partial p}{\partial \rho}\right)_s$$

and

$$c = \sqrt{\left(\frac{\partial p}{\partial \rho}\right)_s} \quad (11.15)$$

We can now apply Eq. 11.15 to solids, liquids, and gases. For *solids* and *liquids* data are usually available on the bulk modulus  $E_v$ , which is a measure of how a pressure change affects a relative density change,

$$E_v = \frac{dp}{d\rho/\rho} = \rho \frac{dp}{d\rho}$$

For these media

$$c = \sqrt{E_v/\rho} \quad (11.16)$$

For an *ideal gas*, the pressure and density in isentropic flow are related by

$$\frac{p}{\rho^k} = \text{constant} \quad (11.12c)$$

Taking logarithms and differentiating, we obtain

$$\frac{dp}{p} - k \frac{d\rho}{\rho} = 0$$

Therefore,

$$\left(\frac{\partial p}{\partial \rho}\right)_s = k \frac{p}{\rho}$$

But  $p/\rho = RT$ , so finally

$$c = \sqrt{kRT} \quad (11.17)$$

for an ideal gas. The speed of sound in air has been measured precisely by numerous investigators [4]. The results agree closely with the theoretical prediction of Eq. 11.17.

The important feature of sound propagation in an ideal gas, as shown by Eq. 11.17, is that the *speed of sound is a function of temperature only*. The variation in atmospheric temperature with altitude on a standard day was discussed in Chapter 3; the properties are summarized in Table A.3. The corresponding variation in  $c$  is computed as an exercise in Problem 11.20 and plotted as a function of altitude.

### EXAMPLE 11.3 Speed of Sound in Steel, Water, Seawater, and Air

Find the speed of sound in (a) steel ( $E_v \approx 200 \text{ GN/m}^2$ ), (b) water (at  $20^\circ\text{C}$ ), (c) seawater (at  $20^\circ\text{C}$ ), and (d) air at sea level on a standard day.

**EXAMPLE PROBLEM 11.3**

**FIND:** Speed of sound in (a) steel ( $E_v = 200 \text{ GN/M}^2$ ), (b) water (at  $20^\circ\text{C}$ ), (c) seawater (at  $20^\circ\text{C}$ ), and (d) air at sea level on a standard day.

**SOLUTION:**

(a) For steel, a solid, we use Eq. 11.16, with  $\rho$  obtained from Table A.1(b),

$$c = \sqrt{E_v/\rho} = \sqrt{E_v/SG\rho_{\text{H}_2\text{O}}}$$

$$c = \sqrt{\frac{200 \times 10^9 \text{ N}}{\text{m}^2} \times \frac{1}{7.83} \times 1000 \frac{\text{m}^3}{\text{kg}} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2}} = 5050 \text{ m/s} \longleftarrow c_{\text{steel}}$$

(b) For water we also use Eq. 11.16, with data obtained from Table A.2,

$$c = \sqrt{E_v/\rho} = \sqrt{E_v/SG\rho_{\text{H}_2\text{O}}}$$

$$c = \sqrt{\frac{2.24 \times 10^9 \text{ N}}{\text{m}^2} \times \frac{1}{0.998} \times 1000 \frac{\text{m}^3}{\text{kg}} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2}} = 1500 \text{ m/s} \longleftarrow c_{\text{water}}$$

(c) For seawater we again use Eq. 11.16, with data obtained from Table A.2,

$$c = \sqrt{E_v/\rho} = \sqrt{E_v/SG\rho_{\text{H}_2\text{O}}}$$

$$c = \sqrt{\frac{2.42 \times 10^9 \text{ N}}{\text{m}^2} \times \frac{1}{1.025} \times 1000 \frac{\text{m}^3}{\text{kg}} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2}} = 1540 \text{ m/s} \longleftarrow c_{\text{seawater}}$$

(d) For air we use Eq. 11.17, with the sea level temperature obtained from Table A.3,

$$c = \sqrt{kRT}$$

$$c = \sqrt{1.4 \times 287 \frac{\text{N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 288 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2}} = 340 \text{ m/s} \longleftarrow c_{\text{air (288 K)}}$$

This Example Problem illustrates the relative magnitudes of the speed of sound in typical solids, liquids, and gases ( $c_{\text{solids}} > c_{\text{liquids}} > c_{\text{gases}}$ ). Do not confuse the speed of sound with the *attenuation* of sound—the rate at which internal friction of the medium reduces the sound level—generally, solids and liquids attenuate sound much more rapidly than do gases.

**Types of Flow—The Mach Cone**

Flows for which  $M < 1$  are *subsonic*, while those with  $M > 1$  are *supersonic*. Flow fields that have both subsonic and supersonic regions are termed *transonic*. (The transonic regime occurs for Mach numbers between about 0.9 and 1.2.) Although most flows within our experience are subsonic, there are important practical cases where  $M \geq 1$  occurs in a flow field. Perhaps the most obvious are supersonic aircraft and transonic flows in aircraft compressors and fans. Yet another flow regime, *hypersonic*

flow ( $M \approx 5$ ), is of interest in missile and reentry-vehicle design. (The proposed National Aerospace Plane would have cruised at Mach numbers approaching 20.) Some important qualitative differences between subsonic and supersonic flows can be deduced from the properties of a simple moving sound source.

Consider a point source of sound that emits a pulse every  $\Delta t$  seconds. Each pulse expands outwards from its origination point at speed  $c$ , so at any instant  $t$  the pulse will be a sphere of radius  $ct$  centered at the pulse's origination point. We want to investigate what happens if the point source itself is moving. There are four possibilities, as shown in Fig. 11.2:

- $V = 0$ . The point source is *stationary*. Figure 11.2a shows conditions after  $3\Delta t$  seconds. The first pulse has expanded to a sphere of radius  $c(3\Delta t)$ , the second to a sphere of radius  $c(2\Delta t)$ , and the third to a sphere of radius  $c(\Delta t)$ ; a new pulse is about to be emitted. The pulses constitute a set of ever-expanding concentric spheres.
- $0 < V < c$ . The point source moves to the left at *subsonic* speed. Figure 11.2b shows conditions after  $3\Delta t$  seconds. The source is shown at times  $t = 0, \Delta t, 2\Delta t$ , and  $3\Delta t$ . The first pulse has expanded to a sphere of radius  $c(3\Delta t)$  centered where the source was originally, the second to a sphere of radius  $c(2\Delta t)$  centered where the source was at time  $\Delta t$ , and the third to a sphere of radius  $c(\Delta t)$  centered where the source was at time  $2\Delta t$ ; a new pulse is about to be emitted. The pulses again constitute a set of ever-expanding

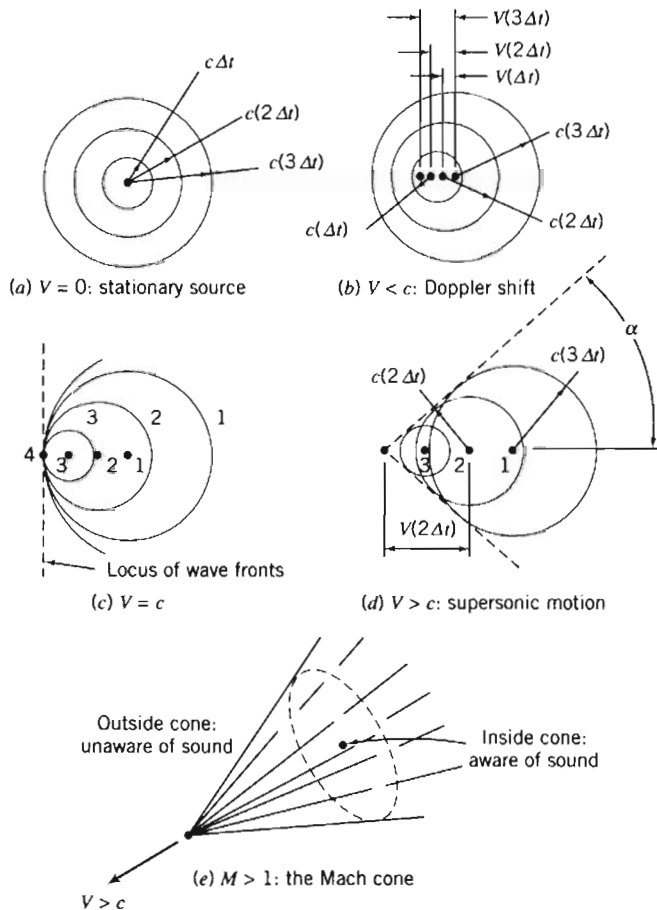


Fig. 11.2 Propagation of sound waves from a moving source: The Mach cone.

spheres, except now they are not concentric. The pulses are all expanding at constant speed  $c$ . We make two important notes: First, we can see that an observer who is ahead of the source (or whom the source is approaching) will hear the pulses at a higher frequency rate than will an observer who is behind the source (this is the Doppler effect that occurs when a vehicle approaches and passes); second, an observer ahead of the source hears the source *before* the source itself reaches the observer.

- (c)  $V = c$ . The point source moves to the left at *sonic* speed. Figure 11.2c shows conditions after  $3\Delta t$  seconds. The source is shown at times  $t = 0$  (point 1),  $\Delta t$  (point 2),  $2\Delta t$  (point 3), and  $3\Delta t$  (point 4). The first pulse has expanded to sphere 1 of radius  $c(3\Delta t)$  centered at point 1, the second to sphere 2 of radius  $c(2\Delta t)$  centered at point 2, and the third to sphere 3 of radius  $c(\Delta t)$  centered around the source at point 3. We can see once more that the pulses constitute a set of ever-expanding spheres, except now they are tangent to one another on the left! The pulses are all expanding at constant speed  $c$ , but the source is moving at speed  $c$ , with the result that the source and all its pulses are traveling together to the left. We again make two important notes: First, we can see that an observer who is ahead of the source will *not* hear the pulses before the source reaches her; second, in theory, over time an unlimited number of pulses will accumulate at the front of the source, leading to a sound wave of unlimited amplitude (a source of concern to engineers trying to break the “sound barrier,” which many people thought could not be broken—Chuck Yeager in a Bell X-1 was the first to do so in 1947).
- (d)  $V > c$ . The point source moves to the left at *supersonic* speed. Figure 11.2d shows conditions after  $3\Delta t$  seconds. By now it is clear how the spherical waves develop. We can see once more that the pulses constitute a set of ever-expanding spheres, except now the source is moving so fast it moves ahead of each sphere that it generates! For supersonic motion, the spheres generate what is called a *Mach cone* tangent to each sphere. The region inside the cone is called the *zone of action* and that outside the cone the *zone of silence*, for obvious reasons, as shown in Fig. 11.2e. From geometry, we see from Fig. 11.2d that

$$\sin \alpha = \frac{c}{V} = \frac{1}{M}$$

or

$$\alpha = \sin^{-1}\left(\frac{1}{M}\right) \quad (11.18)$$

### 11-3 REFERENCE STATE: LOCAL ISENTROPIC STAGNATION PROPERTIES

In our study of compressible flow, we will discover that, in general, *all* properties ( $p$ ,  $T$ ,  $\rho$ ,  $u$ ,  $h$ ,  $s$ ,  $V$ ) may be changing as the flow proceeds. We need to obtain reference conditions that we can use to relate conditions in a flow from point to point. For any flow, a reference condition is obtained when the fluid is (in reality or conceptually) brought to rest ( $V = 0$ ). We will call this the stagnation condition, and the property values ( $p_0$ ,  $T_0$ ,  $\rho_0$ ,  $u_0$ ,  $h_0$ ,  $s_0$ ) at this state the stagnation properties. This process—of bringing the fluid to rest—is not as straightforward as it seems. For example, do we do so while there is friction, or while the fluid is being heated or cooled, or “violently,” or in some other way? The most obvious process to use is an isentropic process, in which there is no friction, no heat transfer, and no “violent” events. Hence, the properties we obtain will be the *local isentropic stagnation properties*. Why “local”? Because the actual flow can be any kind of flow, e.g., with friction, so it may or may not itself be isentropic. Hence, each point in the flow will have its own, or local, isentropic stagnation properties. This is illustrated in Fig. 11.3, showing a

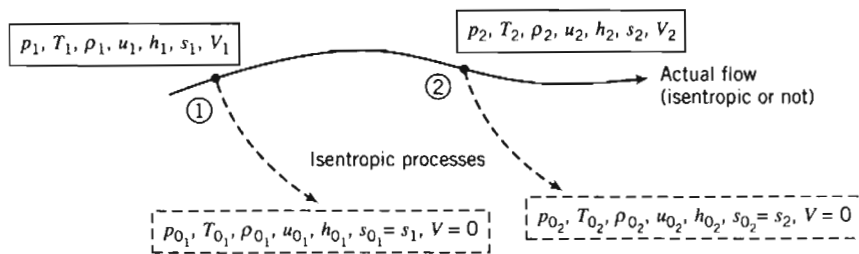


Fig. 11.3 Local isentropic stagnation properties.

flow from some state ① to some new state ②. The local isentropic stagnation properties for each state, obtained by isentropically bringing the fluid to rest, are also shown. Hence,  $s_{01} = s_1$  and  $s_{02} = s_2$ . The actual flow may or may not be isentropic. If it *is* isentropic,  $s_1 = s_2 = s_{01} = s_{02}$ , so the stagnation states are identical; if it is *not* isentropic, then  $s_{01} \neq s_{02}$ . We will see that changes in local isentropic stagnation properties will provide useful information about the flow.

We can obtain information on the reference isentropic stagnation state for *incompressible* flows by recalling the Bernoulli equation from Chapter 6

$$\frac{p}{\rho} + \frac{V^2}{2} + gz = \text{constant} \quad (6.8)$$

valid for a steady, incompressible, frictionless flow along a streamline. Equation 6.8 is valid for our isentropic process because it is reversible (frictionless and steady) and adiabatic (we did not include heat transfer considerations in its derivation). As we saw in Section 6.3, the Bernoulli equation leads to

$$p_0 = p + \frac{1}{2} \rho V^2 \quad (6.11)$$

(The gravity term drops out because we assume the reference state is at the same elevation as the actual state, and in any event in external flows it is usually much smaller than the other terms.) In Example Problem 11.5 we compare isentropic stagnation conditions obtained assuming incompressibility (Eq. 6.11), and allowing for compressibility.

For *compressible* flows, we will focus on ideal gas behavior.

### Local Isentropic Stagnation Properties for the Flow of an Ideal Gas

For a compressible flow we can derive the isentropic stagnation relations by applying the mass conservation (or continuity) and momentum equations to a differential control volume, and then integrating. For the process shown schematically in Fig. 11.3, we can depict the process from state ① to the corresponding stagnation state by imagining the control volume shown in Fig. 11.4. Consider first the continuity equation.

#### a. Continuity Equation

$$\text{Governing equation:} \quad \frac{\partial}{\partial t} \int_{CV} \rho \, dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

- Assumptions: (1) Steady flow.  
(2) Uniform flow at each section.

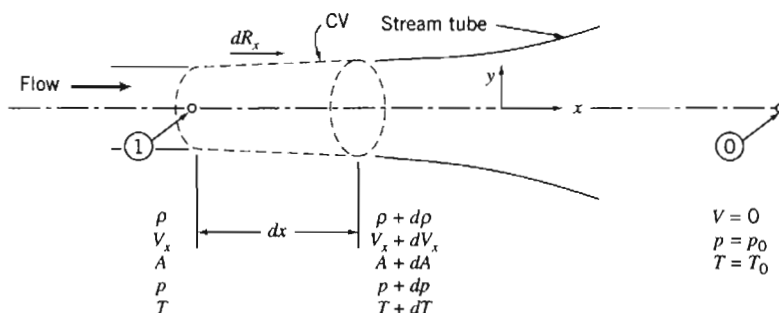


Fig. 11.4 Compressible flow in an infinitesimal stream tube.

Then

$$(-\rho V_x A) + \{(\rho + dp)(V_x + dV_x)(A + dA)\} = 0$$

or

$$\rho V_x A = (\rho + dp)(V_x + dV_x)(A + dA) \quad (11.19a)$$

### b. Momentum Equation

$$\text{Governing equation: } F_{S_x} + \cancel{F_{B_x}} = \frac{\partial}{\partial t} \int_{CV} V_x \rho dV + \int_{CS} V_x \rho \vec{V} \cdot d\vec{A} \quad (4.18a)$$

Assumptions: (3)  $F_{B_x} = 0$ .

(4) Frictionless flow.

The surface forces acting on the infinitesimal control volume are

$$F_{S_x} = dR_x + pA - (p + dp)(A + dA)$$

The force  $dR_x$  is applied along the stream tube boundary, as shown in Fig. 11.4, where the average pressure is  $p + dp/2$ , and the area component in the  $x$  direction is  $dA$ . There is no friction. Thus,

$$F_{S_x} = \left( p + \frac{dp}{2} \right) dA + pA - (p + dp)(A + dA)$$

or

$$F_{S_x} = \cancel{p dA} + \frac{dp}{2} \overset{\approx 0}{dA} + \cancel{pA} - \cancel{pA} - dp A - \cancel{p dA} - dp \overset{\approx 0}{dA}$$

Substituting this result into the momentum equation gives

$$-dp A = V_x \{-\rho V_x A\} + (V_x + dV_x) \{(\rho + dp)(V_x + dV_x)(A + dA)\}$$

which may be simplified using Eq. 11.19a to obtain

$$-dp A = (-V_x + V_x + dV_x)(\rho V_x A)$$

Finally,

$$dp = -\rho V_x dV_x = -\rho d \left( \frac{V_x^2}{2} \right)$$



or

$$\frac{dp}{\rho} + d\left(\frac{V_x^2}{2}\right) = 0 \quad (11.19b)$$

Equation 11.19b is a relation among properties during the deceleration process. In developing this relation, we have specified a frictionless deceleration process. Before we can integrate between the initial and final (stagnation) states, we must specify the relation that exists between pressure,  $p$ , and density,  $\rho$ , along the process path.

Since the deceleration process is isentropic, then  $p$  and  $\rho$  for an ideal gas are related by the expression

$$\frac{p}{\rho^k} = \text{constant} \quad (11.12c)$$

Our task now is to integrate Eq. 11.19b subject to this relation. Along the stagnation streamline there is only a single component of velocity;  $V_x$  is the magnitude of the velocity. Hence we can drop the subscript in Eq. 11.19b.

From  $p/\rho^k = \text{constant} = C$ , we can write

$$p = C\rho^k \quad \text{and} \quad \rho = p^{1/k} C^{-1/k}$$

Then, from Eq. 11.19b,

$$-d\left(\frac{V^2}{2}\right) = \frac{dp}{\rho} = p^{-1/k} C^{1/k} dp$$

We can integrate this equation between the initial state and the corresponding stagnation state

$$-\int_V^0 d\left(\frac{V^2}{2}\right) = C^{1/k} \int_p^{p_0} p^{-1/k} dp$$

to obtain

$$\begin{aligned} \frac{V^2}{2} &= C^{1/k} \frac{k}{k-1} \left[ p^{(k-1)/k} \right]_p^{p_0} = C^{1/k} \frac{k}{k-1} \left[ p_0^{(k-1)/k} - p^{(k-1)/k} \right] \\ \frac{V^2}{2} &= C^{1/k} \frac{k}{k-1} p^{(k-1)/k} \left[ \left( \frac{p_0}{p} \right)^{(k-1)/k} - 1 \right] \end{aligned}$$

Since  $C^{1/k} = p^{1/k}/\rho$ ,

$$\begin{aligned} \frac{V^2}{2} &= \frac{k}{k-1} \frac{p^{1/k}}{\rho} p^{(k-1)/k} \left[ \left( \frac{p_0}{p} \right)^{(k-1)/k} - 1 \right] \\ \frac{V^2}{2} &= \frac{k}{k-1} \frac{p}{\rho} \left[ \left( \frac{p_0}{p} \right)^{(k-1)/k} - 1 \right] \end{aligned}$$

Since we seek an expression for stagnation pressure, we can rewrite this equation as

$$\left( \frac{p_0}{p} \right)^{(k-1)/k} = 1 + \frac{k-1}{k} \frac{\rho}{p} \frac{V^2}{2}$$

and

$$\frac{p_0}{p} = \left[ 1 + \frac{k-1}{k} \frac{\rho V^2}{2p} \right]^{k/(k-1)}$$

For an ideal gas,  $p = \rho RT$ , and hence

$$\frac{p_0}{p} = \left[ 1 + \frac{k-1}{2} \frac{V^2}{kRT} \right]^{k/(k-1)}$$

Also, for an ideal gas the sonic speed is  $c = \sqrt{kRT}$ , and thus

$$\begin{aligned} \frac{p_0}{p} &= \left[ 1 + \frac{k-1}{2} \frac{V^2}{c^2} \right]^{k/(k-1)} \\ \frac{p_0}{p} &= \left[ 1 + \frac{k-1}{2} M^2 \right]^{k/(k-1)} \end{aligned} \quad (11.20a)$$

Equation 11.20a enables us to calculate the local isentropic stagnation pressure at any point in a flow field of an ideal gas, provided that we know the static pressure and Mach number at that point.

We can readily obtain expressions for other isentropic stagnation properties by applying the relation

$$\frac{p}{\rho^k} = \text{constant}$$

between end states of the process. Thus

$$\frac{p_0}{p} = \left( \frac{\rho_0}{\rho} \right)^k \quad \text{and} \quad \frac{\rho_0}{\rho} = \left( \frac{p_0}{p} \right)^{1/k}$$

For an ideal gas, then,

$$\frac{T_0}{T} = \frac{p_0}{p} \frac{\rho}{\rho_0} = \frac{p_0}{p} \left( \frac{p_0}{p} \right)^{-1/k} = \left( \frac{p_0}{p} \right)^{(k-1)/k}$$

Using Eq. 11.20a, we can summarize the equations for determining local isentropic stagnation properties of an ideal gas as

---


$$\frac{p_0}{p} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{k/(k-1)} \quad (11.20a)$$

$$\frac{T_0}{T} = 1 + \frac{k-1}{2} M^2 \quad (11.20b)$$

$$\frac{\rho_0}{\rho} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{1/(k-1)} \quad (11.20c)$$


---


From Eqs. 11.20, the ratio of each local isentropic stagnation property to the corresponding static property at any point in a flow field for an ideal gas can be found if the

local Mach number is known. We will usually use Eqs. 11.20 in lieu of the continuity and momentum equations for relating the properties at a state to that state's stagnation properties, but it is important to remember that we derived Eqs. 11.20 using these equations *and* the isentropic relation for an ideal gas. Appendix E-1 lists flow functions for property ratios  $T_0/T$ ,  $p_0/p$ , and  $\rho_0/\rho$ , in terms of  $M$  for isentropic flow of an ideal gas. A table of values, as well as a plot of these property ratios is presented for air ( $k = 1.4$ ) for a limited range of Mach numbers. The associated *Excel* workbook, *Isentropic Relations*, can be used to print a larger table of values for air and other ideal gases. The calculation procedure is illustrated in Example Problem 11.4.

The Mach number range for validity of the assumption of incompressible flow is investigated in Example Problem 11.5.


### EXAMPLE 11.4 Local Isentropic Stagnation Conditions in Channel Flow

Air flows steadily through the duct shown from 350 kPa(abs), 60°C, and 183 m/s at the inlet state to  $M = 1.3$  at the outlet, where local isentropic stagnation conditions are known to be 385 kPa(abs) and 350 K. Compute the local isentropic stagnation pressure and temperature at the inlet and the static pressure and temperature at the duct outlet. Locate the inlet and outlet static state points on a  $Ts$  diagram, and indicate the stagnation processes.

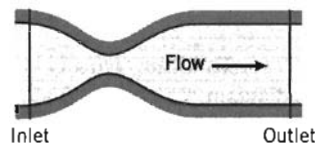

#### EXAMPLE PROBLEM 11.4

**GIVEN:** Steady flow of air through a duct as shown in the sketch.

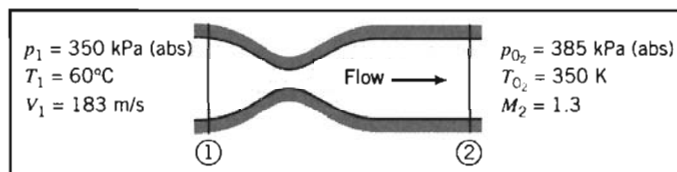

- FIND:** (a)  $p_{01}$ ,  
 (b)  $T_{01}$ ,  
 (c)  $p_2$ ,  
 (d)  $T_2$ ,  
 (e) State points ① and ② on a  $Ts$  diagram; indicate the stagnation processes.

**SOLUTION:**

To evaluate local isentropic stagnation conditions at section ①, we must calculate the Mach number,  $M_1 = V_1/c_1$ . For an ideal gas,  $c = \sqrt{kRT}$ . Then

$$c_1 = \sqrt{kRT_1} = \left[ 1.4 \times \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times (273 + 60) \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \right]^{1/2} = 366 \text{ m/s}$$

and

$$M_1 = \frac{V_1}{c_1} = \frac{183}{366} = 0.5$$

Local isentropic stagnation properties can be evaluated from Eqs. 11.20. Thus

$$p_{01} = p_1 \left[ 1 + \frac{k-1}{2} M_1^2 \right]^{k/(k-1)} = 350 \text{ kPa} [1 + 0.2(0.5)^2]^{3.5} = 415 \text{ kPa(abs)} \leftarrow p_{01}$$

$$T_{01} = T_1 \left[ 1 + \frac{k-1}{2} M_1^2 \right] = 333 \text{ K} [1 + 0.2(0.5)^2] = 350 \text{ K} \leftarrow T_{01}$$

At section ②, Eqs. 11.20 can be applied again. Thus from Eq. 11.20a,

$$p_2 = \frac{p_{02}}{\left[ 1 + \frac{k-1}{2} M_2^2 \right]^{k/(k-1)}} = \frac{385 \text{ kPa}}{[1 + 0.2(1.3)^2]^{3.5}} = 139 \text{ kPa (abs)} \leftarrow p_2$$


From Eq. 11.20b,

$$T_2 = \frac{T_{02}}{1 + \frac{k-1}{2} M_2^2} = \frac{350 \text{ K}}{1 + 0.2(1.3)^2} = 262 \text{ K} \leftarrow T_2$$

To locate states ① and ② in relation to one another, and sketch the stagnation processes on the  $Ts$  diagram, we need to find the change in entropy  $s_2 - s_1$ . At each state we have  $p$  and  $T$ , so it is convenient to use Eq. 11.11b,

$$\begin{aligned} s_2 - s_1 &= c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \\ &= 1.00 \frac{\text{kJ}}{\text{kg} \cdot \text{K}} \times \ln \left( \frac{262}{333} \right) - 0.287 \frac{\text{kJ}}{\text{kg} \cdot \text{K}} \times \ln \left( \frac{139}{350} \right) \\ s_2 - s_1 &= 0.0252 \text{ kJ}/(\text{kg} \cdot \text{K}) \end{aligned}$$

Hence in this flow we have an increase in entropy. Perhaps there is irreversibility (e.g., friction), or heat is being added, or both. (We will see in Chapter 12 that the fact that  $T_{01} = T_{02}$  for this particular flow means that actually we have an adiabatic flow.) We also found that  $T_2 < T_1$  and that  $p_2 < p_1$ . We can now sketch the  $Ts$  diagram (and recall we saw in Example Problem 11.2 that isobars (lines of constant pressure) in  $Ts$  space are exponential),

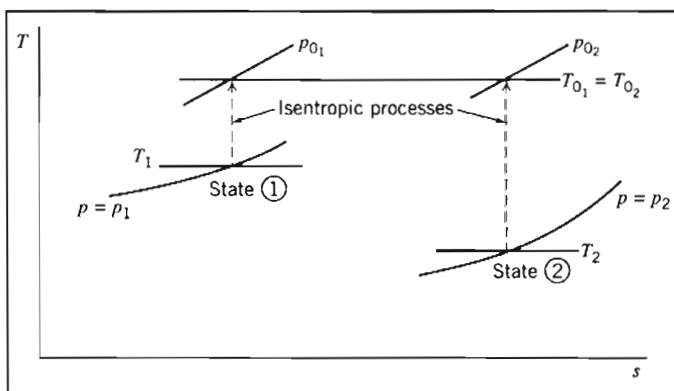

This problem illustrates use of the local isentropic stagnation properties (Eqs. 11.20) to relate different points in a flow.



The *Excel* workbook *Isentropic Relations* can be used for computing property ratios from the Mach number  $M$ , as well as for computing  $M$  from property ratios.

**EXAMPLE 11.5 Mach-Number Limit for Incompressible Flow**

We have derived equations for  $p_0/p$  for both compressible and “incompressible” flows. By writing both equations in terms of Mach number, compare their behavior. Find the Mach number below which the two equations agree within engineering accuracy.

**EXAMPLE PROBLEM 11.5**

**GIVEN:** The incompressible and compressible forms of the equations for stagnation pressure,  $p_0$ .

$$\text{Incompressible} \quad p_0 = p + \frac{1}{2} \rho V^2 \quad (6.11)$$

$$\text{Compressible} \quad \frac{p_0}{p} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{k/(k-1)} \quad (11.20a)$$

**FIND:** (a) Behavior of both equations as a function of Mach number.  
(b) Mach number below which calculated values of  $p_0/p$  agree within engineering accuracy.

**SOLUTION:**

First, let us write Eq. 6.11 in terms of Mach number. Using the ideal gas equation of state and  $c^2 = kRT$ ,

$$\frac{p_0}{p} = 1 + \frac{\rho V^2}{2p} = 1 + \frac{V^2}{2RT} = 1 + \frac{kV^2}{2kRT} = 1 + \frac{kV^2}{2c^2}$$

Thus,

$$\frac{p_0}{p} = 1 + \frac{k}{2} M^2 \quad (1)$$

for “incompressible” flow.


Equation 11.20a may be expanded using the binomial theorem,

$$(1+x)^n = 1 + nx + \frac{n(n-1)}{2!} x^2 + \dots, |x| < 1$$

For Eq. 11.20a,  $x = [(k-1)/2]M^2$ , and  $n = k/(k-1)$ . Thus the series converges for  $[(k-1)/2]M^2 < 1$ , and for compressible flow,

$$\begin{aligned} \frac{p_0}{p} &= 1 + \left( \frac{k}{k-1} \right) \left[ \frac{k-1}{2} M^2 \right] + \left( \frac{k}{k-1} \right) \left( \frac{k}{k-1} - 1 \right) \frac{1}{2!} \left[ \frac{k-1}{2} M^2 \right]^2 \\ &\quad + \left( \frac{k}{k-1} \right) \left( \frac{k}{k-1} - 1 \right) \left( \frac{k}{k-1} - 2 \right) \frac{1}{3!} \left[ \frac{k-1}{2} M^2 \right]^3 + \dots \\ &= 1 + \frac{k}{2} M^2 + \frac{k}{8} M^4 + \frac{k(2-k)}{48} M^6 + \dots \\ \frac{p_0}{p} &= 1 + \frac{k}{2} M^2 \left[ 1 + \frac{1}{4} M^2 + \frac{(2-k)}{24} M^4 + \dots \right] \quad (2) \end{aligned}$$

In the limit, as  $M \rightarrow 0$ , the term in brackets in Eq. 2 approaches 1.0. Thus, for flow at low Mach number, the incompressible and compressible equations give the same result. The variation of  $p_0/p$  with Mach number is shown below. As Mach number is increased, the compressible equation gives a larger ratio,  $p_0/p$ .

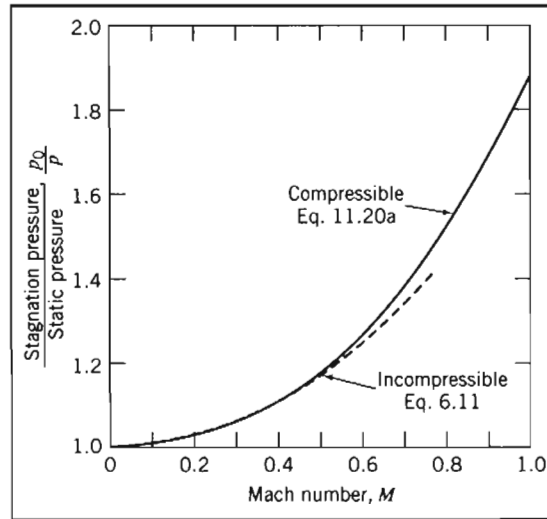

Equations 1 and 2 may be compared quantitatively most simply by writing

$$\frac{p_0}{p} - 1 = \frac{k}{2} M^2 \text{ ("incompressible")}$$

$$\frac{p_0}{p} - 1 = \frac{k}{2} M^2 \left[ 1 + \frac{1}{4} M^2 + \frac{(2-k)}{24} M^4 + \dots \right] \text{ (compressible)}$$

The term in brackets is approximately equal to 1.02 at  $M = 0.3$ , and to 1.04 at  $M = 0.4$ . Thus, for calculations of engineering accuracy, *flow may be considered incompressible if  $M < 0.3$* . The two agree within 5 percent for  $M \leq 0.45$ .

## 11-4 CRITICAL CONDITIONS

Stagnation conditions are extremely useful as reference conditions for thermodynamic properties; this is not true for velocity, since by definition  $V = 0$  at stagnation. A useful reference value for velocity is the *critical speed*—the speed  $V$  we attain when a flow is either accelerated or decelerated (actually or conceptually) isentropically until we reach  $M = 1$ . Even if there is no point in a given flow field where the Mach number is equal to unity, such a hypothetical condition still is useful as a reference condition.

Using asterisks to denote conditions at  $M = 1$ , then by definition

$$V^* \equiv c^*$$

At critical conditions, Eqs. 11.20 for isentropic stagnation properties become

$$\frac{p_0}{p^*} = \left[ \frac{k+1}{2} \right]^{k/(k-1)} \quad (11.21a)$$

$$\frac{T_0}{T^*} = \frac{k+1}{2} \quad (11.21b)$$

$$\frac{\rho_0}{\rho^*} = \left[ \frac{k+1}{2} \right]^{1/(k-1)} \quad (11.21c)$$

The critical speed may be written in terms of either critical temperature,  $T^*$ , or isentropic stagnation temperature,  $T_0$ .

For an ideal gas,  $c^* = \sqrt{kRT^*}$ , and thus  $V^* = \sqrt{kRT^*}$ . Since, from Eq. 11.21b,

$$T^* = \frac{2}{k+1} T_0$$

we have

$$V^* = c^* = \sqrt{\frac{2k}{k+1} RT_0} \quad (11.22)$$

We shall use both stagnation conditions and critical conditions as reference conditions in the next chapter when we consider a variety of compressible flows.

## 11-5 SUMMARY

In this chapter, we:

- ✓ Reviewed the basic equations used in thermodynamics, including isentropic relations.
- ✓ Introduced some compressible flow terminology, such as definitions of the Mach number and subsonic, supersonic, transonic, and hypersonic flows.
- ✓ Learned about several phenomena having to do with sound, including that the speed of sound in an ideal gas is a function of temperature only ( $c = \sqrt{kRT}$ ), and that the Mach cone and Mach angle determine when a supersonic vehicle is heard on the ground.
- ✓ Learned that there are two useful reference states for a compressible flow: the isentropic stagnation condition, and the isentropic critical condition.

## REFERENCES

1. Cengel, Y. A., and M. A. Boles, *Thermodynamics: An Engineering Approach*, 4th ed. New York: McGraw-Hill, 2002.
2. Sonntag, R. E., and C. Borgnakke, *Fundamentals of Thermodynamics*, 5th ed. New York: Wiley, 2001.
3. Moran, M. J., and H. N. Shapiro, *Fundamentals of Engineering Thermodynamics*, 4th ed. New York: Wiley, 1999.
4. Wong, G. S. K., "Speed of Sound in Standard Air," *J. Acoustical Society of America*, 79, 5, May 1986, pp. 1359–1366.

## PROBLEMS

- 11.1 Air is expanded in a steady flow process through a turbine. Initial conditions are 1300°C and 2.0 MPa (abs). Final conditions are 500°C and atmospheric pressure. Show this process on a  $Ts$  diagram. Evaluate the changes in internal energy, enthalpy, and specific entropy for this process.



- 11.2 A vendor claims that an adiabatic air compressor takes in air at standard atmosphere conditions and delivers the air at 650 kPa (gage) and 285°C. Is this possible? Justify your answer by calculation. Sketch the process on a  $Ts$  diagram.
- 11.3 What is the lowest possible delivery temperature generated by an adiabatic air compressor, starting with standard atmosphere conditions and delivering the air at 650 kPa (gage)? Sketch the process on a  $Ts$  diagram.
- 11.4 Ten lbm of air is cooled in a closed tank from 500 to 100°F. The initial pressure is 400 psia. Compute the changes in entropy, internal energy, and enthalpy. Show the process state points on a  $Ts$  diagram.
- 11.5 Air is contained in a piston-cylinder device. The temperature of the air is 100°C. Using the fact that for a reversible process the heat transfer  $q = \int Tds$ , compare the amount of heat (J/kg) required to raise the temperature of the air to 1200°C at (a) constant pressure and (b) constant volume. Verify your results using the first law of thermodynamics. Plot the processes on a  $Ts$  diagram.
- 11.6 The four-stroke Otto cycle of a typical automobile engine is sometimes modeled as an ideal air-standard closed system. In this simplified system the combustion process is modeled as a heating process, and the exhaust-intake process as a cooling process of the working fluid (air). The cycle consists of: isentropic compression from state ① ( $p_1 = 100$  kPa (abs),  $T_1 = 20^\circ\text{C}$ ,  $\Psi_1 = 500$  cc) to state ② ( $\Psi_2 = \Psi_1/8.5$ ); isometric (constant volume) heat addition to state ③ ( $T_3 = 2750^\circ\text{C}$ ); isentropic expansion to state ④ ( $\Psi_4 = \Psi_1$ ); and isometric cooling back to state ①. Plot the  $p\Psi$  and  $Ts$  diagrams for this cycle, and find the efficiency, defined as the net work (the cycle area in  $p\Psi$  space) divided by the heat added.
- 11.7 The four-stroke cycle of a typical diesel engine is sometimes modeled as an ideal air-standard closed system. In this simplified system the combustion process is modeled as a heating process, and the exhaust-intake process as a cooling process of the working fluid (air). The cycle consists of: isentropic compression from state ① ( $p_1 = 100$  kPa (abs),  $T_1 = 20^\circ\text{C}$ ,  $\Psi_1 = 500$  cc) to state ② ( $\Psi_2 = \Psi_1/12.5$ ); isometric (constant volume) heat addition to state ③ ( $T_3 = 3000^\circ\text{C}$ ); isobaric heat addition to state ④ ( $\Psi_4 = 1.75 \Psi_3$ ); isentropic expansion to state ⑤; and isometric cooling back to state ①. Plot the  $p\Psi$  and  $Ts$  diagrams for this cycle, and find the efficiency, defined as the net work (the cycle area in  $p\Psi$  space) divided by the heat added.
- 11.8 Air enters a turbine in steady flow at 0.5 kg/s with negligible velocity. Inlet conditions are 1300°C and 2.0 MPa (abs). The air is expanded through the turbine to atmospheric pressure. If the actual temperature and velocity at the turbine exit are 500°C and 200 m/s, determine the power produced by the turbine. Label state points on a  $Ts$  diagram for this process.
- 11.9 A tank of volume  $\Psi = 10$  m<sup>3</sup> contains compressed air at 15°C. The gage pressure in the tank is 4.50 MPa. Evaluate the work required to fill the tank by compressing air from standard atmosphere conditions for (a) isothermal compression and (b) isentropic compression followed by cooling at constant pressure. What is the peak temperature of the isentropic compression process? Calculate the energy removed during cooling for process (b). Assume ideal gas behavior and reversible processes. Label state points on a  $Ts$  diagram and a  $p\Psi$  diagram for each process.
- 11.10 Natural gas, with the thermodynamic properties of methane, flows in an underground pipeline of 0.6 m diameter. The gage pressure at the inlet to a compressor station is 0.5 MPa; outlet pressure is 8.0 MPa (gage). The gas temperature and speed at inlet are 13°C and 32 m/s, respectively. The compressor efficiency is  $\eta = 0.85$ . Calculate the mass flow rate of natural gas through the pipeline. Label state points on a  $Ts$  diagram for compressor inlet and outlet. Evaluate the gas temperature and speed at the compressor outlet and the power required to drive the compressor.



- 11.11 Over time the efficiency of the compressor of Problem 11.10 drops. At what efficiency will the power required to attain 8.0 MPa (gage) exceed 30 MW? Plot the required power and the gas exit temperature as functions of efficiency.
- 11.12 In an isothermal process, 0.1 cubic feet of standard air per minute (SCFM) is pumped into a balloon. Tension in the rubber skin of the balloon is given by  $\sigma = kA$ , where  $k = 200 \text{ lbf/ft}^3$ , and  $A$  is the surface area of the balloon in  $\text{ft}^2$ . Compute the time required to increase the balloon radius from 5 to 7 inches.
- 11.13 For the balloon process of Problem 11.12 we could define a “volumetric ratio” as the ratio of the volume of standard air supplied to the volume increase of the balloon, per unit time. Plot this ratio over time as the balloon diameter is increased from 5 to 7 inches.
- 11.14 An airplane flies at 180 m/s at 500 m altitude on a standard day. The plane climbs to 15 km and flies at 320 m/s. Calculate the Mach number of flight in both cases.
- 11.15 The Boeing 727 aircraft of Example Problem 9.8 cruises at 520 mph at 33,000 ft altitude on a standard day. Calculate the cruise Mach number of the aircraft. If the maximum allowable operating Mach number for the aircraft is 0.9, what is the corresponding flight speed?
- 11.16 Actual performance characteristics of the Lockheed SR-71 “Blackbird” reconnaissance aircraft never were released. However, it was thought to cruise at  $M = 3.3$  at 85,000 ft altitude. Evaluate the speed of sound and flight speed for these conditions. Compare to the muzzle speed of a 30–06 rifle bullet (700 m/s).
- 11.17 Lightning strikes and you see the distant flash. A few seconds later you hear the thunderclap. Explain how you could estimate the distance to the lightning strike.
- 11.18 Use data for specific volume to calculate and plot the speed of sound in saturated liquid water over the temperature range from 32 to 400°F.
- 11.19 Re-derive the equation for sonic speed (Eq. 11.17) assuming that the direction of fluid motion behind the sound wave is  $dV_x$  to the *right*. Show that the result is identical to that given by Eq. 11.17.
- 11.20 Compute the speed of sound at sea level in standard air. By scanning data from Table A.3 into your PC (or using Fig. 3.3), evaluate the speed of sound and plot for altitudes to 90 km.
- 11.21 The temperature varies linearly from sea level to approximately 11 km altitude in the standard atmosphere. Evaluate the *lapse rate*—the rate of decrease of temperature with altitude—in the standard atmosphere. Derive an expression for the rate of change of sonic speed with altitude in an ideal gas under standard atmospheric conditions. Evaluate and plot from sea level to 10 km altitude.
- 11.22 How could you measure the approximate speed of sound in air?
- 11.23 Air at 25°C flows at  $M = 2.2$ . Determine the air speed and the Mach angle.
- 11.24 A photograph of a bullet shows a Mach angle of 32°. Determine the speed of the bullet for standard air.
- 11.25 A projectile is fired into a gas in which the pressure is 50 psia and the density is 0.27  $\text{lbm/ft}^3$ . It is observed experimentally that a Mach cone emanates from the projectile with 20° total angle. What is the speed of the projectile with respect to the gas?
- 11.26 The National Transonic Facility (NTF) is a high-speed wind tunnel designed to operate with air at cryogenic temperatures to reduce viscosity, thus raising the unit Reynolds number ( $Re/x$ ) and reducing pumping power requirements. Operation is envisioned at temperatures of  $-270^\circ\text{F}$  and below. A schlieren photograph taken in the NTF shows a Mach angle of 57° where  $T = -270^\circ\text{F}$  and  $p = 1.3 \text{ psia}$ . Evaluate the local Mach number and flow speed. Calculate the unit Reynolds number for the flow.

- 11.27 An F-4 aircraft makes a high-speed pass over an airfield on a day when  $T = 35^\circ\text{C}$ . The aircraft flies at  $M = 1.4$  and 200 m altitude. Calculate the speed of the aircraft. How long after it passes directly over point A on the ground does its Mach cone pass over point A?
- 11.28 An aircraft passes overhead at 3 km altitude. The aircraft flies at  $M = 1.5$ ; assume air temperature is constant at  $20^\circ\text{C}$ . Find the air speed of the aircraft. A headwind blows at 30 m/s. How long after the aircraft passes directly overhead does its sound reach a point on the ground?
- 11.29 A supersonic aircraft flies at 10,000 ft altitude at a speed of 3000 ft/s on a standard day. How long after passing directly above a ground observer is the sound of the aircraft heard by the ground observer?
- 11.30 For the conditions of Problem 11.29, find the location at which the sound wave that first reaches the ground observer was emitted.
- 11.31 The Concorde supersonic transport cruises at  $M = 2.2$  at 17 km altitude on a standard day. How long after the aircraft passes directly above a ground observer is the sound of the aircraft heard?
- 11.32 Opponents of supersonic transport aircraft claim that sound waves can be refracted in the upper atmosphere and that, as a result, sonic booms can be heard several hundred miles away from the ground track of the aircraft. Explain the phenomenon of sound wave refraction.
- 11.33 The airflow around an automobile is assumed to be incompressible. Investigate the validity of this assumption for an automobile traveling at 60 mph. (Relative to the automobile the minimum air velocity is zero, and the maximum is approximately 120 mph.)
- 11.34 Plot the percentage discrepancy between the density at the stagnation point and the density at a location where the Mach number is  $M$ , of a compressible flow, for Mach numbers ranging from 0.05 to 0.95. Find the Mach numbers at which the discrepancy is 1 percent, 5 percent, and 10 percent.
- 11.35 The stagnation pressure at the nose of an aircraft in flight is 48 kPa (abs). Estimate the Mach number and speed of the craft, if the undisturbed air is at 27.6 kPa (abs) and  $-55^\circ\text{C}$ .
- 11.36 Compute the air density in the undisturbed air, and at the stagnation point, of Problem 11.35. What is the percentage increase in density? Can we approximate this as an incompressible flow?
- 11.37 Consider flow of standard air at 600 m/s. What is the local isentropic stagnation pressure? The stagnation enthalpy? The stagnation temperature?
- 11.38 A body moves through standard air at 200 m/s. What is the stagnation pressure on the body? Assume (a) compressible flow and (b) incompressible flow.
- 11.39 A DC-10 aircraft cruises at 12 km altitude on a standard day. A pitot-static tube on the nose of the aircraft measures stagnation and static pressures of 29.6 kPa and 19.4 kPa. Calculate (a) the flight Mach number of the aircraft, (b) the speed of the aircraft, and (c) the stagnation temperature that would be sensed by a probe on the aircraft.
- 11.40 The Anglo-French Concorde supersonic transport cruises at  $M = 2.2$  at 20 km altitude. Evaluate the speed of sound, aircraft flight speed, and Mach angle. What is the maximum air temperature at stagnation points on the aircraft structure?
- 11.41 An aircraft cruises at  $M = 0.65$  at 10 km altitude on a standard day. The aircraft speed is deduced from measurement of the difference between the stagnation and static pressures. What is the value of this difference? Compute the air speed from this actual difference assuming (a) compressibility and (b) incompressibility. Is the discrepancy in air-speed computations significant in this case?
- 11.42 Modern high-speed aircraft use "air data computers" to compute air speed from measurement of the difference between the stagnation and static pressures. Plot, as a function

of actual Mach number  $M$ , for  $M = 0.1$  to  $M = 0.9$ , the percentage error in computing the Mach number assuming incompressibility (i.e., using the Bernoulli equation), from this pressure difference. Plot the percentage error in speed, as a function of speed, of an aircraft cruising at 12 km altitude, for a range of speeds corresponding to the actual Mach number ranging from  $M = 0.1$  to  $M = 0.9$ .

- 11.43 A smoothbore "12-pounder" cannon used on a sailing ship fires a spherical cast-iron shot, with diameter  $D = 110$  mm and mass  $m = 5.44$  kg, horizontally at sea level on a standard day. Initially the shot travels at supersonic speed, but it is slowed rapidly by aerodynamic drag. At the instant when the speed is sonic, estimate (a) the horizontal acceleration of the shot (assume the drag coefficient for a sphere at sonic speed is  $C_D = 1.3$ ), (b) the maximum pressure on the surface of the shot, and (c) the maximum air temperature near the surface of the shot.
- 11.44 A supersonic wind tunnel test section is designed to have  $M = 2.5$  at  $60^\circ\text{F}$  and 5 psia. The fluid is air. Determine the required inlet stagnation conditions,  $T_0$  and  $p_0$ . Calculate the required mass flow rate for a test section area of  $2.0$  ft<sup>2</sup>.
- 11.45 Air flows steadily through a length (① denotes inlet and ② denotes exit) of insulated constant-area duct. Properties change along the duct as a result of friction.

- (a) Beginning with the control volume form of the first law of thermodynamics, show that the equation can be reduced to

$$h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} = \text{constant}$$

- (b) Denoting the constant by  $h_0$  (the stagnation enthalpy), show that for adiabatic flow of an ideal gas with friction

$$\frac{T_0}{T} = 1 + \frac{k-1}{2} M^2$$

- (c) For this flow does  $T_{0_1} = T_{0_2}$ ?  $p_{0_1} = p_{0_2}$ ? Explain these results.

- 11.46 For aircraft flying at supersonic speeds, lift and drag coefficients are functions of Mach number only. A supersonic transport with wingspan of 75 m is to fly at 780 m/s at 20 km altitude on a standard day. Performance of the aircraft is to be measured from tests of a model with 0.9 m wingspan in a supersonic wind tunnel. The wind tunnel is to be supplied from a large reservoir of compressed air, which can be heated if desired. The static temperature of air in the test section is to be  $10^\circ\text{C}$  to avoid freezing of moisture. At what air speed should the wind tunnel tests be run to duplicate the Mach number of the prototype? What must be the stagnation temperature in the reservoir? What pressure is required in the reservoir if the test section pressure is to be 10 kPa (abs)?
- 11.47 Actual performance characteristics of the Lockheed SR-71 "Blackbird" reconnaissance aircraft were classified. However, it was thought to cruise at  $M = 3.3$  at 26 km altitude. Calculate the aircraft flight speed for these conditions. Determine the local isentropic stagnation pressure. Because the aircraft speed is supersonic, a normal shock occurs in front of a total-head tube. The stagnation pressure decreases by 74.7 percent across the shock. Evaluate the stagnation pressure sensed by a probe on the aircraft. What is the maximum air temperature at stagnation points on the aircraft structure?
- 11.48 Air flows in an insulated duct. At point ① the conditions are  $M_1 = 0.1$ ,  $T_1 = 20^\circ\text{C}$ , and  $p_1 = 1.0$  MPa (abs). Downstream, at point ②, because of friction the conditions are  $M_2 = 0.7$ ,  $T_2 = -5.62^\circ\text{C}$ , and  $p_2 = 136.5$  kPa (abs). (Four significant figures are given to minimize roundoff errors.) Compare the stagnation temperatures at points ① and ②, and explain the result. Compute the stagnation pressures at points ① and ②. Can you explain how it can be that the velocity *increases* for this frictional

- flow? Should this process be isentropic or not? Justify your answer by computing the change in entropy between points ① and ②. Plot static and stagnation state points on a  $Ts$  diagram.
- 11.49 Air is cooled as it flows without friction at a rate of 0.05 kg/s in a duct. At point ① the conditions are  $M_1 = 0.5$ ,  $T_1 = 500^\circ\text{C}$ , and  $p_1 = 500$  kPa (abs). Downstream, at point ②, the conditions are  $M_2 = 0.2$ ,  $T_2 = -18.57^\circ\text{C}$ , and  $p_2 = 639.2$  kPa (abs). (Four significant figures are given to minimize roundoff errors.) Compare the stagnation temperatures at points ① and ②, and explain the result. Compute the rate of cooling. Compute the stagnation pressures at points ① and ②. Should this process be isentropic or not? Justify your answer by computing the change in entropy between points ① and ②. Plot static and stagnation state points on a  $Ts$  diagram.
- 11.50 Consider steady, adiabatic flow of air through a long straight pipe with  $A = 0.05$  m<sup>2</sup>. At the inlet (section ①) the air is at 200 kPa (abs),  $60^\circ\text{C}$ , and 146 m/s. Downstream at section ②, the air is at 95.6 kPa (abs) and 280 m/s. Determine  $p_{01}$ ,  $p_{02}$ ,  $T_{01}$ ,  $T_{02}$ , and the entropy change for the flow. Show static and stagnation state points on a  $Ts$  diagram.
- 11.51 Air flows steadily through a constant-area duct. At section ①, the air is at 60 psia,  $600^\circ\text{R}$ , and 500 ft/s. As a result of heat transfer and friction, the air at section ② downstream is at 40 psia,  $800^\circ\text{R}$ . Calculate the heat transfer per pound of air between sections ① and ②, and the stagnation pressure at section ②.
- 11.52 Air passes through a normal shock in a supersonic wind tunnel. Upstream conditions are  $M_1 = 1.8$ ,  $T_1 = 270$  K, and  $p_1 = 10.0$  kPa (abs). Downstream conditions are  $M_2 = 0.6165$ ,  $T_2 = 413.6$  K, and  $p_2 = 36.13$  kPa (abs). (Four significant figures are given to minimize roundoff errors.) Evaluate local isentropic stagnation conditions (a) upstream from, and (b) downstream from, the normal shock. Calculate the change in specific entropy across the shock. Plot static and stagnation state points on a  $Ts$  diagram.
- 11.53 Air enters a turbine at  $M_1 = 0.4$ ,  $T_1 = 2350^\circ\text{F}$ , and  $p_1 = 90.0$  psia. Conditions leaving the turbine are  $M_2 = 0.8$ ,  $T_2 = 1200^\circ\text{F}$ , and  $p_2 = 3.00$  psia. (Four significant figures are given to minimize roundoff errors.) Evaluate local isentropic stagnation conditions (a) at the turbine inlet and (b) at the turbine outlet. Calculate the change in specific entropy across the turbine. Plot static and stagnation state points on a  $Ts$  diagram.
- 11.54 A Boeing 747 cruises at  $M = 0.87$  at an altitude of 13 km on a standard day. A window in the cockpit is located where the external flow Mach number is 0.2 relative to the plane surface. The cabin is pressurized to an equivalent altitude of 2500 m in a standard atmosphere. Estimate the pressure difference across the window. Be sure to specify the direction of the net pressure force.
- 11.55 A CO<sub>2</sub> cartridge is used to propel a toy rocket. Gas in the cartridge is pressurized to 45 MPa (gage) and is at  $25^\circ\text{C}$ . Calculate the critical conditions (temperature, pressure, and flow speed) that correspond to these stagnation conditions.
- 11.56 The gas storage reservoir for a high-speed wind tunnel contains helium at 2000 K and 5.0 MPa (gage). Calculate the critical conditions (temperature, pressure, and flow speed) that correspond to these stagnation conditions.
- 11.57 Stagnation conditions in a solid propellant rocket motor are  $T_0 = 3000$  K and  $p_0 = 45$  MPa (gage). Critical conditions occur in the throat of the rocket nozzle where the Mach number is equal to one. Evaluate the temperature, pressure, and flow speed at the throat. Assume ideal gas behavior with  $R = 323$  J/(kg · K) and  $k = 1.2$ .
- 11.58 The hot gas stream at the turbine inlet of a JT9-D jet engine is at  $2350^\circ\text{F}$ , 140 kPa (abs), and  $M = 0.32$ . Calculate the critical conditions (temperature, pressure, and flow speed) that correspond to these conditions. Assume the fluid properties of pure air.

# COMPRESSIBLE FLOW

In Chapter 11 we reviewed some basic concepts of compressible flow. The main focus of this chapter is to discuss one-dimensional compressible flow in more detail. The first question we can ask is “What would cause the fluid properties to vary in a one-dimensional compressible flow?” The answer is that various phenomena can cause changes: We could force the velocity (and hence, in general the other properties) to change by passing the flow through a channel of varying area; we may have flow in a channel with friction; we may heat or cool the fluid, and we will learn that we may even have what is called a normal shock. For simplicity, we will study each of these phenomena separately (bearing in mind that a real flow is likely to experience several of them simultaneously). After completing our treatment of one-dimensional flow, we will introduce some basic concepts of two-dimensional flows: oblique shocks and expansion waves.

## 12-1 BASIC EQUATIONS FOR ONE-DIMENSIONAL COMPRESSIBLE FLOW

Our first task is to develop general equations for a one-dimensional flow that express the basic laws from Chapter 4: *mass conservation* (continuity), *momentum*, the *first law of thermodynamics*, the *second law of thermodynamics*, and an *equation of state*. To do so, we will use the fixed control volume shown in Fig. 12.1. We initially assume that the flow is affected by *all* of the phenomena mentioned above (i.e., area change, friction, and heat transfer—even the normal shock will be described by this approach). Then, for each individual phenomenon we will simplify the equations to obtain useful results.


As shown in Fig. 12.1, the properties at sections ① and ② are labeled with corresponding subscripts.  $R_x$  is the  $x$  component of surface force from friction and pressure on the sides of the channel (there will also be surface forces from pressures at surfaces ① and ②). Note that the  $x$  component of body force is zero, so it is not shown, and  $\dot{Q}$  is the heat transfer.

### a. Continuity Equation

Basic equation:

$$\frac{d}{dt} \int_{CV} \rho \, dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

Assumptions: (1) Steady flow.  
(2) One-dimensional flow.

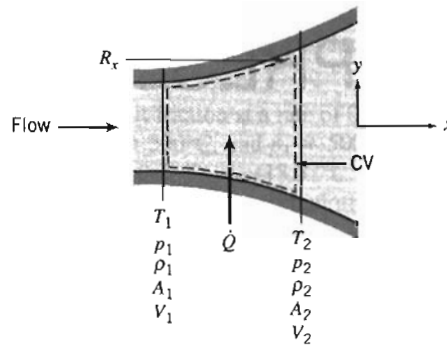

**Fig. 12.1** Control volume for analysis of a general one-dimensional flow.

Then

$$(-\rho_1 V_1 A_1) + (\rho_2 V_2 A_2) = 0$$

or

$$\rho_1 V_1 A_1 = \rho_2 V_2 A_2 = \rho V A = \dot{m} = \text{constant} \quad (12.1a)$$

### b. Momentum Equation

Basic equation:

$$= 0(3) = 0(1) \\ F_{S_x} + F_{B_x} = \frac{\partial}{\partial t} \int_{CV} V_x \rho dV + \int_{CS} V_x \rho \vec{V} \cdot d\vec{A} \quad (4.18a)$$

Assumption: (3)  $F_{B_x} = 0$ .

The surface force is caused by pressure forces at surfaces ① and ②, and by the friction and distributed pressure force,  $R_x$ , along the channel walls. Substituting gives

$$R_x + p_1 A_1 - p_2 A_2 = V_1 (-\rho_1 V_1 A_1) + V_2 (\rho_2 V_2 A_2)$$

Using continuity, we obtain

$$R_x + p_1 A_1 - p_2 A_2 = \dot{m} V_2 - \dot{m} V_1 \quad (12.1b)$$

### c. First Law of Thermodynamics

Basic equation:

$$\dot{Q} - \dot{W}_s - \dot{W}_{\text{shear}} - \dot{W}_{\text{other}} = \frac{\partial}{\partial t} \int_{CV} e \rho dV + \int_{CS} (e + pv) \rho \vec{V} \cdot d\vec{A} \quad (4.56)$$

where

$$e = u + \frac{V^2}{2} + gz \approx 0(6)$$

- Assumptions: (4)  $\dot{W}_s = 0$ .  
 (5)  $\dot{W}_{\text{shear}} = \dot{W}_{\text{other}} = 0$ .  
 (6) Effects of gravity are negligible.

(Note that even if we have friction, there is no friction *work* at the walls because with friction the velocity at the walls must be zero from the no-slip condition.) Under these assumptions, the first law reduces to

$$\dot{Q} = \left( u_1 + p_1 v_1 + \frac{V_1^2}{2} \right) (-\rho_1 V_1 A_1) + \left( u_2 + p_2 v_2 + \frac{V_2^2}{2} \right) (\rho_2 V_2 A_2)$$

(Remember that  $v$  here represents the specific volume.) This can be simplified by using  $h \equiv u + pv$ , and continuity (Eq. 12.1a),

$$\dot{Q} = \dot{m} \left\{ \left( h_2 + \frac{V_2^2}{2} \right) - \left( h_1 + \frac{V_1^2}{2} \right) \right\}$$

We can write the heat transfer on a per unit mass rather than per unit time basis:

$$\frac{\delta Q}{dm} = \frac{1}{\dot{m}} \dot{Q}$$

so

$$\frac{\delta Q}{dm} + h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} \quad (12.1c)$$

Equation 12.1c expresses the fact that heat transfer changes the total energy (the sum of thermal energy  $h$ , and kinetic energy  $V^2/2$ ) of the flowing fluid. This combination,  $h + V^2/2$ , occurs often in compressible flow, and is called the *stagnation enthalpy*,  $h_0$ . This is the enthalpy obtained if a flow is brought adiabatically to rest.

Hence, Eq. 12.1c can also be written

$$\frac{\delta Q}{dm} = h_{0_2} - h_{0_1}$$

We see that heat transfer causes the stagnation enthalpy, and hence, stagnation temperature,  $T_0$ , to change.

#### d. Second Law of Thermodynamics

Basic equation:

$$\frac{\partial}{\partial t} \int_{CV} s \rho dV + \int_{CS} s \rho \vec{V} \cdot d\vec{A} \geq \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \quad (4.58)$$

or

$$s_1 (-\rho_1 V_1 A_1) + s_2 (\rho_2 V_2 A_2) \geq \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA$$

and, again using continuity,

$$\dot{m}(s_2 - s_1) \geq \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \quad (12.1d)$$

### e. Equation of State

Equations of state are relations among intensive thermodynamic properties. These relations may be available as tabulated data or charts, or as algebraic equations. In general, regardless of the format of the data, as we discussed in Chapter 11 (see references [1]–[3] of that chapter) for a simple substance any property can be expressed as a function of any two other independent properties. For example, we could write  $h = h(s, p)$ , or  $\rho = \rho(s, p)$ , and so on.

We will primarily be concerned with ideal gases with constant specific heats, and for these we can write Eqs. 11.1 and 11.7b (renumbered for convenient use in this chapter),

$$p = \rho RT \quad (12.1e)$$

and

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p(T_2 - T_1) \quad (12.1f)$$

For ideal gases with constant specific heats, the change in entropy,  $\Delta s = s_2 - s_1$ , for any process can be computed from any of Eqs. 11.11. For example, Eq. 11.11b (renumbered for convenient use in this chapter) is

$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (12.1g)$$

We now have a basic set of equations for analyzing one-dimensional compressible flows of an ideal gas with constant specific heats:

---


$$\rho_1 V_1 A_1 = \rho_2 V_2 A_2 = \rho V A = \dot{m} = \text{constant} \quad (12.1a)$$

$$R_x + p_1 A_1 - p_2 A_2 = \dot{m} V_2 - \dot{m} V_1 \quad (12.1b)$$

$$\frac{\delta Q}{dm} + h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} \quad (12.1c)$$

$$\dot{m}(s_2 - s_1) \geq \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \quad (12.1d)$$

$$p = \rho RT \quad (12.1e)$$

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p(T_2 - T_1) \quad (12.1f)$$

$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (12.1g)$$


---

(Eq. 12.1e applies only if we have an ideal gas; Equations 12.1f and 12.1g apply only if we have an ideal gas with constant specific heats.) Our task is now to simplify this set of equations for each of the phenomena that can affect the flow:

- ✓ Flow with varying area.
- ✓ Flow in a channel with friction.
- ✓ Flow in a channel with heating or cooling.
- ✓ Normal shock.



## 12-2 ISENTROPIC FLOW OF AN IDEAL GAS—AREA VARIATION

The first phenomenon is one in which the flow is changed only by area variation—there is no heat transfer ( $\delta Q/dm = 0$ ) or friction ( $R_x$ , the  $x$  component of surface force, results only from pressure on the sides of the channel), and there are no shocks. The absence of shocks means the flow will be reversible and adiabatic, so Eq. 12.1d becomes

$$\dot{m}(s_2 - s_1) = \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA = 0$$

or

$$\Delta s = s_2 - s_1 = 0$$

so such a flow is *isentropic*. This means that Eq. 12.1g leads to the result we saw in Chapter 11,

$$T_1 p_1^{(1-k)/k} = T_2 p_2^{(1-k)/k} = T p^{(1-k)/k} = \text{constant} \quad (11.12b)$$

or its equivalent (which can be obtained by using the ideal gas equation of state in Eq. 11.12b to eliminate temperature),

$$\frac{p_1}{\rho_1^k} = \frac{p_2}{\rho_2^k} = \frac{p}{\rho^k} = \text{constant} \quad (11.12c)$$

Hence, the basic set of equations (Eqs. 12.1) becomes:

$$\rho_1 V_1 A_1 = \rho_2 V_2 A_2 = \rho V A = \dot{m} = \text{constant} \quad (12.2a)$$

$$R_x + p_1 A_1 - p_2 A_2 = \dot{m} V_2 - \dot{m} V_1 \quad (12.2b)$$

$$h_{0_1} = h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} = h_{0_2} = h_0 \quad (12.2c)$$

$$s_2 = s_1 = s \quad (12.2d)$$

$$p = \rho R T \quad (12.2e)$$

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p (T_2 - T_1) \quad (12.2f)$$

$$\frac{p_1}{\rho_1^k} = \frac{p_2}{\rho_2^k} = \frac{p}{\rho^k} = \text{constant} \quad (12.2g)$$

Note that Eqs. 12.2c, 12.2d, and 12.2f provide insight into how this process appears on an  $hs$  diagram and on a  $Ts$  diagram. From Eq. 12.12c, the total energy, or stagnation enthalpy  $h_0$ , of the fluid is constant; the enthalpy and kinetic energy may vary along the flow, but their sum is constant. This means that if the fluid accelerates, its temperature must decrease, and vice versa. Equation 12.2d indicates that the entropy remains constant. These results are shown for a typical process in Fig. 12.2.

Equation 12.2f indicates that the temperature and enthalpy are linearly related; hence, processes plotted on a  $Ts$  diagram will look very similar to that shown in Fig. 12.2 except for the vertical scale.

Equations 12.2 *could* be used to analyze isentropic flow in a channel of varying area. For example, if we know conditions at section ① (i.e.,  $p_1$ ,  $\rho_1$ ,  $T_1$ ,  $s_1$ ,  $h_1$ ,  $V_1$ , and  $A_1$ )



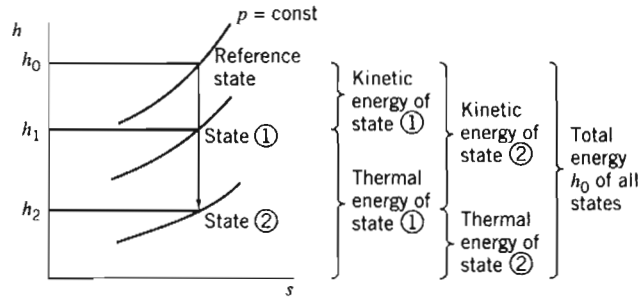


Fig. 12.2 Isentropic flow in the  $hs$  plane.

we could use these equations to find conditions at some new section ② where the area is  $A_2$ : We would have seven equations and seven unknowns ( $p_2, \rho_2, T_2, s_2, h_2, V_2$ , and, if desired, the net pressure force on the walls  $R_x$ ). We stress *could*, because in practice this procedure is unwieldy—we have a set of seven nonlinear coupled algebraic equations to solve (however, we will see, for example in Example Problem 12.1, that *Excel* can be used to solve this set of equations). Instead we will usually use some of these equations as convenient but also take advantage of the results we obtained for isentropic flows in Chapter 11, and develop property relations in terms of the local Mach number, the stagnation conditions, and critical conditions. Before proceeding with this approach, we can gain insight into the isentropic process by reviewing the results we obtained in Chapter 11 when we analyzed a differential control volume (Fig. 11.4). The momentum equation for this was

$$\frac{dp}{\rho} + d\left(\frac{V^2}{2}\right) = 0 \tag{11.19b}$$

or

$$dp = -\rho V dV$$

Dividing by  $\rho V^2$ , we obtain

$$\frac{dp}{\rho V^2} = -\frac{dV}{V} \tag{12.3}$$

A convenient differential form of the continuity equation can be obtained from Eq. 12.2a, in the form

$$\rho AV = \text{constant}$$

Differentiating and dividing by  $\rho AV$  yields

$$\frac{d\rho}{\rho} + \frac{dA}{A} + \frac{dV}{V} = 0 \tag{12.4}$$

Solving Eq. 12.4 for  $dA/A$  gives

$$\frac{dA}{A} = -\frac{dV}{V} - \frac{d\rho}{\rho}$$

Substituting from Eq. 12.3 gives

$$\frac{dA}{A} = \frac{dp}{\rho V^2} - \frac{d\rho}{\rho}$$

or

$$\frac{dA}{A} = \frac{dp}{\rho V^2} \left[ 1 - \frac{V^2}{dp/d\rho} \right]$$

Now recall that for an isentropic process,  $dp/d\rho = \partial p/\partial \rho)_s = c^2$ , so

$$\frac{dA}{A} = \frac{dp}{\rho V^2} \left[ 1 - \frac{V^2}{c^2} \right] = \frac{dp}{\rho V^2} [1 - M^2]$$

or

$$\frac{dp}{\rho V^2} = \frac{dA}{A} \frac{1}{[1 - M^2]} \quad (12.5)$$

Substituting from Eq. 12.3 into Eq. 12.5, we obtain

$$\frac{dV}{V} = - \frac{dA}{A} \frac{1}{[1 - M^2]} \quad (12.6)$$

Although we cannot use them for computations (we have not so far determined how  $M$  varies with  $A$ ), Eqs. 12.5 and 12.6 give us very interesting insights into how the pressure and velocity change as we change the area of the flow. Three possibilities are discussed below.

### Subsonic Flow, $M < 1$

For  $M < 1$ , the factor  $1/[1 - M^2]$  in the two equations is positive, so that in a *converging* section, the pressure must *decrease* and the velocity must *increase* ( $dA$  is negative,  $dp$  is negative, and  $dV$  is positive). This result is consistent with our everyday experience and is not surprising—for example, recall the venturi meter in Chapter 8, in which a reduction in area at the throat of the venturi led to a local increase in velocity, and because of the Bernoulli principle, to a pressure drop (the Bernoulli principle assumes incompressible flow, which is the limiting case of subsonic flow). Because a converging channel accelerates subsonic flow, such a shape is called a *subsonic nozzle*.

On the other hand, a *diverging* channel must lead to a pressure *increase* and a velocity *decrease*, also not a surprising result. Because a diverging channel decelerates flow, such a shape is called a *subsonic diffuser*.

The subsonic nozzle and diffuser are shown in Fig. 12.3.

### Supersonic Flow, $M > 1$

For  $M > 1$ , the factor  $1/[1 - M^2]$  in Eqs. 12.5 and 12.6 is negative, so that in a *converging* section, the pressure must *increase* and the velocity must *decrease* ( $dA$  is negative,  $dp$  is positive, and  $dV$  is negative). This result is perhaps initially surprising. For example, it is the opposite of the venturi meter behavior! Because a converging channel leads to flow deceleration, such a shape is called a *supersonic diffuser*.

On the other hand, a *diverging* channel causes a pressure *decrease* and a velocity *increase*. Because a diverging channel causes flow acceleration, such a shape is called a *supersonic nozzle*.

The supersonic diffuser and nozzle are also shown in Fig. 12.3.

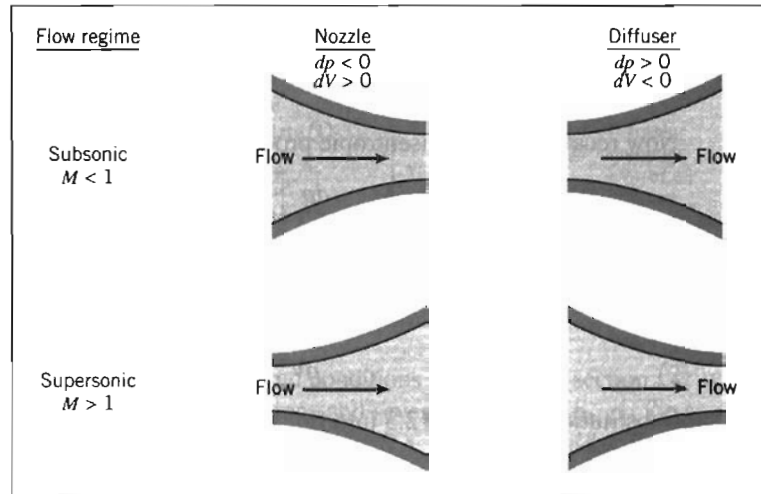


Fig. 12.3 Nozzle and diffuser shapes as a function of initial Mach number.

These somewhat counterintuitive results can be understood when we realize that we are used to assuming that  $\rho = \text{constant}$ , but we are now in a flow regime where the fluid density is a sensitive function of flow conditions. From Eq. 12.4,

$$\frac{dV}{V} = -\frac{dA}{A} - \frac{d\rho}{\rho}$$

For example, in a supersonic diverging flow ( $dA$  positive) the flow actually accelerates ( $dV$  also positive) because the density drops sharply ( $d\rho$  is negative and large, with the net result that the right side of the equation is positive). We can see examples of supersonic diverging nozzles in the space shuttle main engines, each of which has a nozzle about 10 ft long with an 8 ft exit diameter. The maximum thrust is obtained from the engines when the combustion gases exit at the highest possible speed, which the nozzles achieve.

### Sonic Flow, $M = 1$

As we approach  $M = 1$ , from either a subsonic or supersonic state, the factor  $1/[1 - M^2]$  in Eqs. 12.5 and 12.6 approaches infinity, implying that the pressure and velocity changes also approach infinity. This is obviously unrealistic, so we must look for some other way for the equations to make physical sense. The only way we can avoid these singularities in pressure and velocity is if we require that  $dA \rightarrow 0$  as  $M \rightarrow 1$ . Hence, for an isentropic flow, sonic conditions can only occur where the area is constant! We can be even more specific: We can imagine approaching  $M = 1$  from either a subsonic or a supersonic state. A subsonic flow ( $M < 1$ ) would need to be accelerated using a subsonic nozzle, which we have learned is a converging section; a supersonic flow ( $M > 1$ ) would need to be decelerated using a supersonic diffuser, which is also a converging section. Hence, sonic conditions are limited not just to a location of constant area, but one that is a minimum area. The important result is that *for isentropic flow the sonic condition  $M = 1$  can only be attained at a throat, or section of minimum area.* (This does *not* mean that a throat *must* have  $M = 1$ . After all, we may have no flow at all in the device!).

We can see that to isentropically accelerate a fluid from rest to supersonic speed we would need to have a subsonic nozzle (converging section) followed by a supersonic

nozzle (diverging section), with  $M = 1$  at the throat. This device is called a *converging-diverging nozzle* (C-D nozzle). Of course, to create a supersonic flow we need more than just a C-D nozzle: we must also generate and maintain a pressure difference between the inlet and exit. We will discuss shortly C-D nozzles in some detail, and the pressures required to accomplish a change from subsonic to supersonic flow.

We note that we must be careful in our discussion of isentropic flow (especially deceleration), because real fluids can experience nonisentropic phenomena such as boundary-layer separation and shock waves. In practice, supersonic flow cannot be decelerated to exactly  $M = 1$  at a throat because sonic flow near a throat is unstable in a rising (adverse) pressure gradient. (Disturbances that are always present in a real subsonic flow propagate upstream, disturbing the sonic flow at the throat, causing shock waves to form and travel upstream, where they may be disgorged from the inlet of the supersonic diffuser.)

The throat area of a real supersonic diffuser must be slightly larger than that required to reduce the flow to  $M = 1$ . Under the proper downstream conditions, a weak normal shock forms in the diverging channel just downstream from the throat. Flow leaving the shock is subsonic and decelerates in the diverging channel. Thus deceleration from supersonic to subsonic flow cannot occur isentropically in practice, since the weak normal shock causes an entropy increase. Normal shocks will be analyzed in Section 12-5.

For accelerating flows (favorable pressure gradients) the idealization of isentropic flow is generally a realistic model of the actual flow behavior. For decelerating flows, the idealization of isentropic flow may not be realistic because of the adverse pressure gradients and the attendant possibility of flow separation, as discussed for incompressible boundary-layer flow in Chapter 9.

### Reference Stagnation and Critical Conditions for Isentropic Flow of an Ideal Gas

As we mentioned at the beginning of this section, in principle we could use Eqs. 12.2 to analyze one-dimensional isentropic flow of an ideal gas, but the computations would be somewhat tedious. Instead, because the flow is isentropic, we can use the results of Sections 11-3 (reference stagnation conditions) and 11.4 (reference critical conditions). The idea is illustrated in Fig. 12.4: Instead of using Eqs. 12.2 to compute, for example, properties at state ② from those at state ①, we can use state ① to determine two reference states (the stagnation state and the critical state), and then use these to obtain properties at state ②. We need two reference states because the reference stagnation state does not provide area information (mathematically the stagnation area is infinite).

We will use Eqs. 11.20 (renumbered for convenience),

$$\frac{p_0}{p} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{k/(k-1)} \quad (12.7a)$$

$$\frac{T_0}{T} = 1 + \frac{k-1}{2} M^2 \quad (12.7b)$$

$$\frac{\rho_0}{\rho} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{1/(k-1)} \quad (12.7c)$$

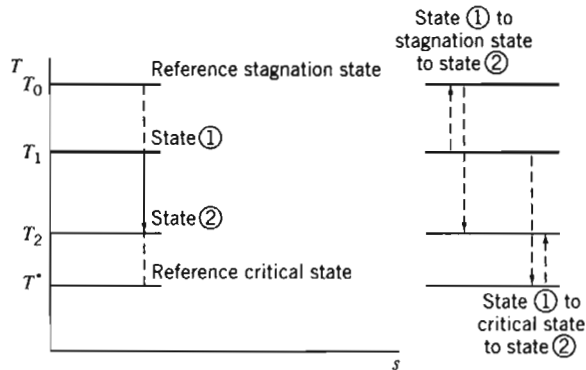


Fig. 12.4 Example of stagnation and critical reference states in the  $Ts$  plane.

We note that *the stagnation conditions are constant throughout the isentropic flow*. The critical conditions (when  $M = 1$ ) were related to stagnation conditions in Section 11.3,

$$\frac{p_0}{p^*} = \left[ \frac{k+1}{2} \right]^{k/(k-1)} \quad (11.21a)$$

$$\frac{T_0}{T^*} = \frac{k+1}{2} \quad (11.21b)$$

$$\frac{\rho_0}{\rho^*} = \left[ \frac{k+1}{2} \right]^{1/(k-1)} \quad (11.21c)$$

$$V^* = c^* = \sqrt{\frac{2k}{k+1}} RT_0 \quad (11.22)$$

Although a particular flow may never attain sonic conditions (as in the example in Fig. 12.4), we will still find the critical conditions useful as reference conditions. Equations 12.7a, 12.7b, and 12.7c relate local properties ( $p$ ,  $\rho$ ,  $T$ , and  $V$ ) to stagnation properties ( $p_0$ ,  $\rho_0$ , and  $T_0$ ) via the Mach number  $M$ , and Eqs. 11.21 and 11.22 relate critical properties ( $p^*$ ,  $\rho^*$ ,  $T^*$ , and  $V^*$ ) to stagnation properties ( $p_0$ ,  $\rho_0$ , and  $T_0$ ) respectively, but we have yet to obtain a relation between areas  $A$  and  $A^*$ . To do this we start with continuity (Eq. 12.2a) in the form

$$\rho AV = \text{constant} = \rho^* A^* V^*$$

Then

$$\frac{A}{A^*} = \frac{\rho^* V^*}{\rho V} = \frac{\rho^* c^*}{\rho M c} = \frac{1}{M} \frac{\rho^*}{\rho} \sqrt{\frac{T^*}{T}}$$

$$\frac{A}{A^*} = \frac{1}{M} \frac{\rho^*}{\rho_0} \frac{\rho_0}{\rho} \sqrt{\frac{T^*/T_0}{T/T_0}}$$

$$\frac{A}{A^*} = \frac{1}{M} \frac{\left[ 1 + \frac{k-1}{2} M^2 \right]^{1/(k-1)}}{\left[ \frac{k+1}{2} \right]^{1/(k-1)}} \left[ \frac{1 + \frac{k-1}{2} M^2}{\frac{k+1}{2}} \right]^{1/2}$$

$$\frac{A}{A^*} = \frac{1}{M} \left[ \frac{1 + \frac{k-1}{2} M^2}{\frac{k+1}{2}} \right]^{(k+1)/2(k-1)} \quad (12.7d)$$

Equations 12.7 form a set that is convenient for analyzing isentropic flow of an ideal gas with constant specific heats, which we usually use instead of the basic equations, Eqs. 12.2. For convenience we list Eqs. 12.7 together:

---


$$\frac{p_0}{p} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{k/(k-1)} \quad (12.7a)$$

$$\frac{T_0}{T} = 1 + \frac{k-1}{2} M^2 \quad (12.7b)$$

$$\frac{\rho_0}{\rho} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{1/(k-1)} \quad (12.7c)$$

$$\frac{A}{A^*} = \frac{1}{M} \left[ \frac{1 + \frac{k-1}{2} M^2}{\frac{k+1}{2}} \right]^{(k+1)/2(k-1)} \quad (12.7d)$$


---

Equations 12.7 provide property relations in terms of the local Mach number, the stagnation conditions, and critical conditions; they are so useful that some calculators have some of them built in (for example the *HP 48G* series [1]). It is a good idea to program them if your calculator does not already have them. There are even interactive web sites that make them available (see, for example, [2]), and they are fairly easy to define in spreadsheets such as *Excel*. While they are somewhat complicated algebraically, they have the advantage over the basic equations, Eq. 12.2, that they are not coupled. Each property can be found directly from its stagnation value and the Mach number. Equation 12.7d shows the relation between Mach number  $M$  and area  $A$ . The critical area  $A^*$  (defined whether or not a given flow ever attains sonic conditions) is used to normalize area  $A$ . For each Mach number  $M$  we obtain a unique area ratio, but as shown in Fig. 12.5 each  $A/A^*$  ratio (except 1) has two possible Mach numbers—one subsonic, the other supersonic. The shape shown in Fig. 12.5 *looks* like a converging-diverging section for accelerating from a subsonic to a supersonic flow (with, as necessary,  $M = 1$  only at the throat), but in practice this is not the shape to which such a passage would be built. For example, the diverging section usually will have a much less severe angle of divergence to reduce the chance of flow separation (in Fig. 12.5 the Mach number increases linearly, but this is not necessary).

Appendix E-1 lists flow functions for property ratios  $T_0/T$ ,  $p_0/p$ ,  $\rho_0/\rho$ , and  $A/A^*$  in terms of  $M$  for isentropic flow of an ideal gas. A table of values, as well as a plot of these property ratios, is presented for air ( $k = 1.4$ ) for a limited range of Mach numbers. The associated *Excel* workbook, *Isentropic Relations*, can be used to print a larger table of values for air and other ideal gases.

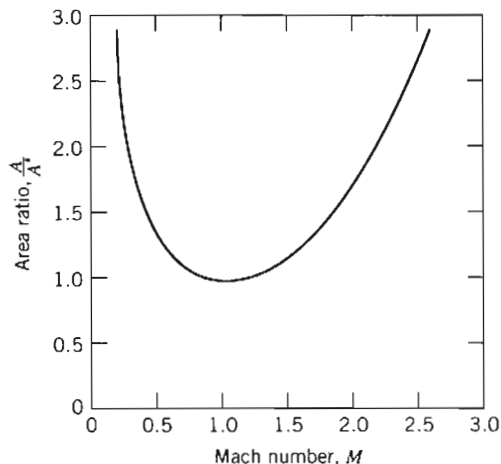


Fig. 12.5 Variation of  $A/A^*$  with Mach number for isentropic flow of an ideal gas with  $k = 1.4$ .

Example Problem 12.1 demonstrates use of some of the above equations. As shown in Fig. 12.4, we can use the equations to relate a property at one state to the stagnation value and then from the stagnation value to a second state, but note that we can accomplish this in one step—for example,  $p_2$  can be obtained from  $p_1$  by writing

$$p_2 = \left( \frac{p_2}{p_0} \right) \left( \frac{p_0}{p_1} \right) p_1, \text{ where the pressure ratios come from Eq. 12.7a evaluated}$$

at the two Mach numbers.


### EXAMPLE 12.1 Isentropic Flow in a Converging Channel

Air flows isentropically in a channel. At section ①, the Mach number is 0.3, the area is  $0.001 \text{ m}^2$ , and the absolute pressure and the temperature are 650 kPa and  $62^\circ\text{C}$ , respectively. At section ②, the Mach number is 0.8. Sketch the channel shape, plot a  $Ts$  diagram for the process, and evaluate properties at section ②. Verify that the results agree with the basic equations, Eqs. 12.2.

#### EXAMPLE PROBLEM 12.1

**GIVEN:** Isentropic flow of air in a channel. At sections ① and ②, the following data are given:  $M_1 = 0.3$ ,  $T_1 = 62^\circ\text{C}$ ,  $p_1 = 650 \text{ kPa}$  (abs),  $A_1 = 0.001 \text{ m}^2$ , and  $M_2 = 0.8$ .

- FIND:** (a) The channel shape.  
 (b) A  $Ts$  diagram for the process.  
 (c) Properties at section ②.  
 (d) Show that the results satisfy the basic equations.

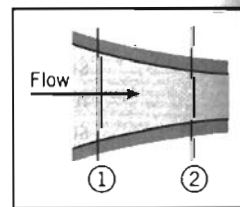

#### SOLUTION:

To accelerate a subsonic flow requires a converging nozzle. The channel shape must be as shown.


On the  $Ts$  plane, the process follows an  $s = \text{constant}$  line. Stagnation conditions remain fixed for isentropic flow.



Consequently, the stagnation temperature at section ② can be calculated (for air,  $k = 1.4$ ) from Eq. 12.7b,

$$\begin{aligned} T_{0_2} &= T_{0_1} = T_1 \left[ 1 + \frac{k-1}{2} M_1^2 \right] \\ &= (62 + 273) \text{ K} \left[ 1 + 0.2 (0.3)^2 \right] \end{aligned}$$

$$T_{0_2} = T_{0_1} = 341 \text{ K} \longleftarrow T_{0_1}, T_{0_2}$$

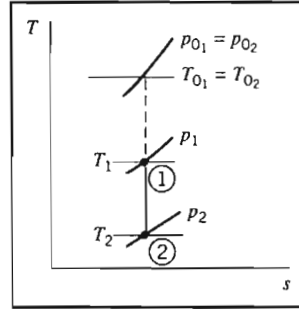

For  $p_{0_2}$ , from Eq. 12.7a,

$$p_{0_2} = p_{0_1} = p_1 \left[ 1 + \frac{k-1}{2} M_1^2 \right]^{k/(k-1)} = 650 \text{ kPa} \left[ 1 + 0.2 (0.3)^2 \right]^{3.5}$$

$$p_{0_2} = 692 \text{ kPa (abs)} \longleftarrow p_{0_2}$$

For  $T_2$ , from Eq. 12.7b,

$$T_2 = T_{0_2} / \left[ 1 + \frac{k-1}{2} M_2^2 \right] = 341 \text{ K} / \left[ 1 + 0.2 (0.8)^2 \right]$$

$$T_2 = 302 \text{ K} \longleftarrow T_2$$

For  $p_2$ , from Eq. 12.7a,

$$p_2 = p_{0_2} / \left[ 1 + \frac{k-1}{2} M_2^2 \right]^{k/(k-1)} = 692 \text{ kPa} / \left[ 1 + 0.2 (0.8)^2 \right]^{3.5}$$

$$p_2 = 454 \text{ kPa} \longleftarrow p_2$$

Note that we could have directly computed  $T_2$  from  $T_1$  because  $T_0 = \text{constant}$ :

$$\frac{T_2}{T_1} = \frac{T_2/T_0}{T_1/T_0} = \frac{\left[ 1 + \frac{k-1}{2} M_1^2 \right]}{\left[ 1 + \frac{k-1}{2} M_2^2 \right]} = \frac{\left[ 1 + 0.2 (0.3)^2 \right]}{\left[ 1 + 0.2 (0.8)^2 \right]}$$

$$\frac{T_2}{T_1} = \frac{0.8865}{0.9823} = 0.9025$$

Hence,

$$T_2 = 0.9025 T_1 = 0.9025 (273 + 62) \text{ K} = 302 \text{ K}$$

Similarly, for  $p_2$ ,

$$\frac{p_2}{p_1} = \frac{p_2/p_0}{p_1/p_0} = \frac{0.8865^{3.5}}{0.9823^{3.5}} = 0.6982$$

Hence,

$$p_2 = 0.6982 p_1 = 0.6982 (650 \text{ kPa}) = 454 \text{ kPa}$$

The density  $\rho_2$  at section ② can be found from Eq. 12.7c using the same procedure we used for  $T_2$  and  $p_2$ , or we can use the ideal gas equation of state, Eq. 12.2e,

$$\rho_2 = \frac{p_2}{RT_2} = \frac{4.54 \times 10^5 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{302 \text{ K}} = 5.24 \text{ kg/m}^3 \longleftarrow \rho_2$$

and the velocity at section ② is

$$V_2 = M_2 c_2 = M_2 \sqrt{kRT_2} = 0.8 \times \sqrt{1.4 \times \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 302 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{s}^2 \cdot \text{N}}} = 279 \text{ m/s} \leftarrow V_2$$

The area  $A_2$  can be computed from Eq. 12.7d, noting that  $A^*$  is constant for this flow,

$$\begin{aligned} \frac{A_2}{A_1} &= \frac{A_2}{A^*} \frac{A^*}{A_1} = \frac{1}{M_2} \left[ \frac{1 + \frac{k-1}{2} M_2^2}{\frac{k+1}{2}} \right]^{(k+1)/2(k-1)} \bigg/ \frac{1}{M_1} \left[ \frac{1 + \frac{k-1}{2} M_1^2}{\frac{k+1}{2}} \right]^{(k+1)/2(k-1)} \\ &= \frac{1}{0.8} \left[ \frac{1 + 0.2(0.8)^2}{1.2} \right]^3 \bigg/ \frac{1}{0.3} \left[ \frac{1 + 0.2(0.3)^2}{1.2} \right]^3 = \frac{1.038}{2.035} = 0.5101 \end{aligned}$$

Hence,

$$A_2 = 0.5101 A_1 = 0.5101(0.001 \text{ m}^2) = 5.10 \times 10^{-4} \text{ m}^2 \leftarrow A_2$$

Note that  $A_2 < A_1$  as expected.

Let us verify that these results satisfy the basic equations.

We first need to obtain  $\rho_1$  and  $V_1$ :

$$\rho_1 = \frac{p_1}{RT_1} = \frac{6.5 \times 10^5 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{335 \text{ K}} = 6.76 \text{ kg/m}^3$$

and

$$V_1 = M_1 c_1 = M_1 \sqrt{kRT_1} = 0.3 \times \sqrt{1.4 \times \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 335 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{s}^2 \cdot \text{N}}} = 110 \text{ m/s}$$

The mass conservation equation is

$$\rho_1 V_1 A_1 = \rho_2 V_2 A_2 = \rho VA = \dot{m} = \text{constant} \quad (12.2a)$$

$$\dot{m} = \frac{6.76 \text{ kg}}{\text{m}^3} \times \frac{110 \text{ m}}{\text{s}} \times 0.001 \text{ m}^2 = \frac{5.24 \text{ kg}}{\text{m}^3} \times \frac{279 \text{ m}}{\text{s}} \times 0.00051 \text{ m}^2 = 0.744 \text{ kg/s} \quad (\text{Check!})$$

We cannot check the momentum equation (Eq. 12.2b) because we do not know the force  $R_x$  produced by the walls of the device (we could use Eq. 12.2b to compute this if we wished). The energy equation is

$$h_{01} = h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} = h_{02} = h_0 \quad (12.2c)$$

We will check this by replacing enthalpy with temperature using Eq. 12.2f,

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p (T_2 - T_1) \quad (12.2f)$$

so the energy equation becomes

$$c_p T_1 + \frac{V_1^2}{2} = c_p T_2 + \frac{V_2^2}{2} = c_p T_0$$

Using  $c_p$  for air from Table A.6,

$$c_p T_1 + \frac{V_1^2}{2} = 1004 \frac{\text{J}}{\text{kg} \cdot \text{K}} \times 335 \text{ K} + \frac{(110)^2}{2} \left(\frac{\text{m}}{\text{s}}\right)^2 \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \times \frac{\text{J}}{\text{N} \cdot \text{m}} = 342 \text{ kJ/kg}$$

$$c_p T_2 + \frac{V_2^2}{2} = 1004 \frac{\text{J}}{\text{kg} \cdot \text{K}} \times 302 \text{ K} + \frac{(278)^2}{2} \left(\frac{\text{m}}{\text{s}}\right)^2 \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}} \times \frac{\text{J}}{\text{N} \cdot \text{m}} = 342 \text{ kJ/kg}$$

$$c_p T_0 = 1004 \frac{\text{J}}{\text{kg} \cdot \text{K}} \times 341 \text{ K} = 342 \text{ kJ/kg} \quad (\text{Check!})$$

The final equation we can check is the relation between pressure and density for an isentropic process (Eq. 12.2g),

$$\frac{p_1}{\rho_1^k} = \frac{p_2}{\rho_2^k} = \frac{p}{\rho^k} = \text{constant}$$

$$\frac{p_1}{\rho_1^{1.4}} = \frac{650 \text{ kPa}}{\left(6.76 \frac{\text{kg}}{\text{m}^3}\right)^{1.4}} = \frac{p_2}{\rho_2^{1.4}} = \frac{454 \text{ kPa}}{\left(5.24 \frac{\text{kg}}{\text{m}^3}\right)^{1.4}} = 44.7 \frac{\text{kPa}}{\left(\frac{\text{kg}}{\text{m}^3}\right)^{1.4}} \quad (\text{Check!})$$

The basic equations are satisfied by our solution.

This Example Problem illustrates:

- ✓ Use of the isentropic equations, Eqs. 12.7.
- ✓ That the isentropic equations are consistent with the basic equations, Eqs. 12.2.
- ✓ That the computations can be quite laborious without using preprogrammed isentropic relations!



The *Excel* workbook for this Example Problem is convenient for performing the calculations, using either the isentropic equations or the basic equations.



## Isentropic Flow in a Converging Nozzle

Now that we have our computing equations (Eqs. 12.7) for analyzing isentropic flows, we are ready to see how we could obtain flow in a nozzle, starting from rest. We first look at the converging nozzle, and then the C-D nozzle. In either case, to produce a flow we must provide a pressure difference. For example, as illustrated in the converging nozzle shown in Fig. 12.6a, we can do this by providing the gas from a reservoir (or “plenum chamber”) at  $p_0$  and  $T_0$ , and using a vacuum pump/valve combination to create a low pressure, the “back pressure,”  $p_b$ . We are interested in what happens to the gas properties as the gas flows through the nozzle, and also in knowing how the mass flow rate increases as we progressively lower the back pressure. (We could also produce a flow by maintaining a constant back pressure, e.g., atmospheric, and increasing the pressure in the plenum chamber.)

Let us call the pressure at the exit plane  $p_e$ . We will see that this will often be equal to the applied back pressure,  $p_b$ , but not always! The results we obtain as we progressively open the valve from a closed position are shown in Figs. 12.6b and 12.6c. We consider each of the cases shown.

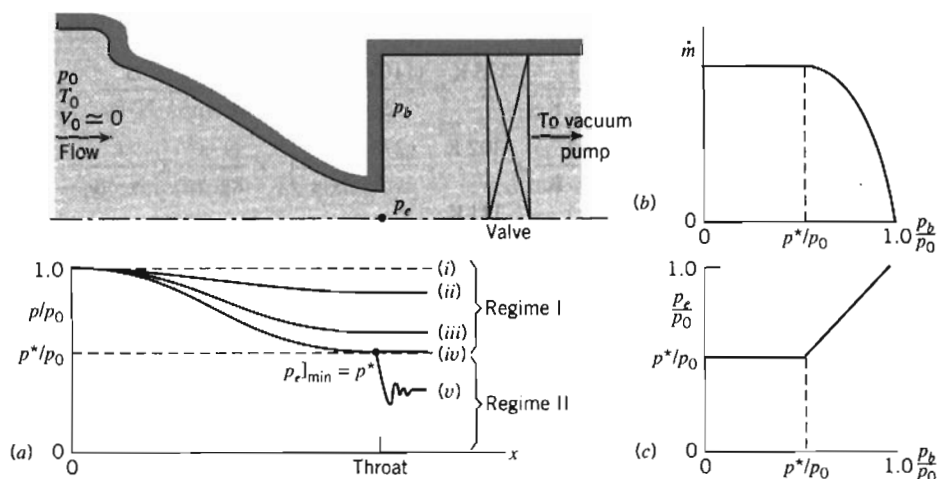


Fig. 12.6 Converging nozzle operating at various back pressures.

When the valve is closed, there is no flow through the nozzle. The pressure is  $p_0$  throughout, as shown by condition (i) in Fig. 12.6a.

If the back pressure,  $p_b$ , is now reduced to slightly less than  $p_0$ , there will be flow through the nozzle with a decrease in pressure in the direction of flow, as shown by condition (ii). Flow at the exit plane will be subsonic with the exit-plane pressure equal to the back pressure.

What happens as we continue to decrease the back pressure? As expected the flow rate will continue to increase, and the exit-plane pressure will continue to decrease, as shown by condition (iii) in Fig. 12.6a.

As we progressively lower the back pressure the flow rate increases, and hence, so do the velocity and Mach number at the exit plane. The question arises: "Is there a limit to the mass flow rate through the nozzle?" or, to put it another way, "Is there an upper limit on the exit Mach number?" The answer to these questions is "Yes!" To see this, recall that for isentropic flow Eq. 12.6 applies:

$$\frac{dV}{V} = -\frac{dA}{A} \frac{1}{[1 - M^2]} \quad (12.6)$$

From this we learned that the *only* place we can have sonic conditions ( $M = 1$ ) is where the change in area  $dA$  is zero. We *cannot* have sonic conditions anywhere in the converging section. Logically we can see that the *maximum exit Mach number is one*. Because the flow started from rest ( $M = 0$ ), if we postulated that  $M > 1$  at the exit, we would have had to pass through  $M = 1$  somewhere in the converging section, which would be a violation of Eq. 12.6.

Hence, the maximum flow rate occurs when we have sonic conditions at the exit plane, when  $M_e = 1$ , and  $p_e = p_b = p^*$ , the critical pressure. This is shown as condition (iv) in Fig. 12.6a, and is called a "choked flow," beyond which the flow rate cannot be increased. From Eq. 12.7f,

$$\left. \frac{p_e}{p_0} \right|_{\text{choked}} = \frac{p^*}{p_0} = \left( \frac{2}{k+1} \right)^{k/(k-1)} \quad (12.8)$$

For air,  $k = 1.4$ , so  $p_e/p_0]_{\text{choked}} = 0.528$ . For example, if we wish to have sonic flow at the exit of a nozzle from a plenum chamber that is at atmospheric pressure, we would need to maintain a back pressure of about 7.76 psia, or about 6.94 psig vacuum. This does not sound difficult for a vacuum pump to generate, but actually takes a lot of power to maintain, because we will have a large mass flow rate through the pump. For the maximum, or choked, mass flow rate we have

$$\dot{m}_{\text{choked}} = \rho^* V^* A^*$$

Using the ideal gas equation of state, Eq. 12.2e, and the stagnation to critical pressure and temperature ratios, Eqs. 12.7d and 12.7e, respectively, with  $A^* = A_e$ , it can be shown that this becomes

$$\dot{m}_{\text{choked}} = A_e p_0 \sqrt{\frac{k}{RT_0}} \left( \frac{2}{k+1} \right)^{(k+1)/2(k-1)} \quad (12.9)$$

For air,  $\dot{m}_{\text{choked}} = 0.04 A_e p_0 / \sqrt{T_0}$  ( $\dot{m}_{\text{choked}}$  in kg/s,  $A_e$  in  $\text{m}^2$ ,  $p_0$  in Pa, and  $T_0$  in K), or  $\dot{m}_{\text{choked}} = 76.6 A_e p_0 / \sqrt{T_0}$  ( $\dot{m}_{\text{choked}}$  in lbm/s,  $A_e$  in  $\text{ft}^2$ ,  $p_0$  in psia, and  $T_0$  in  $^{\circ}\text{R}$ ). The maximum flow rate in the converging nozzle depends on the gas ( $k$  and  $R$ ), the size of the exit area ( $A_e$ ), and the conditions in the reservoir ( $p_0$ ,  $T_0$ ).

Suppose we now insist on lowering the back pressure below this “benchmark” level of  $p^*$ . Our next question is “What will happen to the flow in the nozzle?” The answer is “Nothing!” The flow remains choked: the mass flow rate does not increase, as shown in Fig. 12.6*b*, and the pressure distribution in the nozzle remains unchanged, with  $p_c = p^* > p_b$ , as shown in condition (*v*) in Figs. 12.6*a* and 12.6*c*. After exiting, the flow adjusts down to the applied back pressure, but does so in a nonisentropic, three-dimensional manner in a series of expansion waves and shocks, and for this part of the flow our one-dimensional, isentropic flow concepts no longer apply. We will return to this discussion in Section 12-6.

This idea of choked flow seems a bit strange, but can be explained in at least two ways. First, we have already discussed that to increase the mass flow rate beyond choked would require  $M_e > 1$ , which is not possible. Second, once the flow reaches sonic conditions, it becomes “deaf” to downstream conditions: Any change (i.e., a reduction) in the applied back pressure propagates in the fluid at the speed of sound in all directions, so it gets “washed” downstream by the fluid which is moving at the speed of sound at the nozzle exit.

Flow through a converging nozzle may be divided into two regimes:

1. In Regime I,  $p_b/p_0 \geq p^*/p_0$ . Flow to the throat is isentropic and  $p_e = p_b$ .
2. In Regime II,  $p_b/p_0 < p^*/p_0$ . Flow to the throat is isentropic, and  $M_e = 1$ . A nonisentropic expansion occurs in the flow leaving the nozzle and  $p_e = p^* > p_b$ .

The flow processes corresponding to Regime II are shown on a  $Ts$  diagram in Fig. 12.7. Two problems involving converging nozzles are solved in Example Problems 12.2 and 12.3.

Although isentropic flow is an idealization, it often is a very good approximation for the actual behavior of nozzles. Since a nozzle is a device that accelerates a flow, the internal pressure gradient is favorable. This tends to keep the wall boundary layers thin and to minimize the effects of friction.

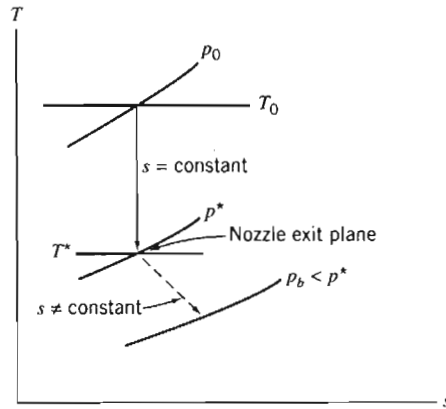


Fig. 12.7 Schematic  $Ts$  diagram for choked flow through a converging nozzle.


### EXAMPLE 12.2 Isentropic Flow in a Converging Nozzle

A converging nozzle, with a throat area of  $0.001 \text{ m}^2$ , is operated with air at a back pressure of  $591 \text{ kPa (abs)}$ . The nozzle is fed from a large plenum chamber where the absolute stagnation pressure and temperature are  $1.0 \text{ MPa}$  and  $60^\circ\text{C}$ . The exit Mach number and mass flow rate are to be determined.

#### EXAMPLE PROBLEM 12.2

**GIVEN:** Air flow through a converging nozzle at the conditions shown:  
Flow is isentropic.

**FIND:** (a)  $M_e$ .  
(b)  $\dot{m}$ .

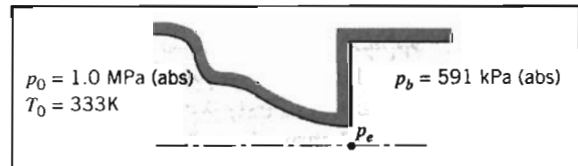

**SOLUTION:**


The first step is to check for choking. The pressure ratio is

$$\frac{p_b}{p_0} = \frac{5.91 \times 10^5}{1.0 \times 10^6} = 0.591 > 0.528$$

so the flow is *not* choked. Thus  $p_b = p_e$ , and the flow is isentropic, as sketched on the  $Ts$  diagram.

Since  $p_0 = \text{constant}$ ,  $M_e$  may be found from the pressure ratio,

$$\frac{p_0}{p_e} = \left[ 1 + \frac{k-1}{2} M_e^2 \right]^{k/(k-1)}$$

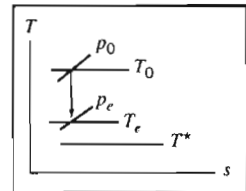

Solving for  $M_e$ , since  $p_e = p_b$ , we obtain

$$1 + \frac{k-1}{2} M_e^2 = \left( \frac{p_0}{p_b} \right)^{(k-1)/k}$$

and

$$M_e = \left\{ \left[ \left( \frac{p_0}{p_b} \right)^{(k-1)/k} - 1 \right] \frac{2}{k-1} \right\}^{1/2} = \left\{ \left[ \left( \frac{1.0 \times 10^6}{5.91 \times 10^5} \right)^{0.286} - 1 \right] \frac{2}{1.4-1} \right\}^{1/2} = 0.90 \longleftarrow M_e$$

The mass flow rate is

$$\dot{m} = \rho_e V_e A_e = \rho_e M_e c_e A_e$$

We need  $T_e$  to find  $\rho_e$  and  $c_e$ . Since  $T_0 = \text{constant}$ ,

$$\frac{T_0}{T_e} = 1 + \frac{k-1}{2} M_e^2$$

or

$$T_e = \frac{T_0}{1 + \frac{k-1}{2} M_e^2} = \frac{(273 + 60) \text{ K}}{1 + 0.2(0.9)^2} = 287 \text{ K}$$

$$c_e = \sqrt{kRT_e} = \left[ 1.4 \times \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 287 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \right]^{1/2} = 340 \text{ m/s}$$

and

$$\rho_e = \frac{p_e}{RT_e} = \frac{5.91 \times 10^5 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{287 \text{ K}} = 7.18 \text{ kg/m}^3$$

Finally,

$$\dot{m} = \rho_e M_e c_e A_e = \frac{7.18 \text{ kg}}{\text{m}^3} \times 0.9 \times 340 \frac{\text{m}}{\text{s}} \times 0.001 \text{ m}^2 = 2.20 \text{ kg/s} \longleftarrow \dot{m}$$

This problem illustrates use of the isentropic equations, Eqs. 12.7, for a flow that is not choked.




The *Excel* workbook for this Example Problem is convenient for performing the calculations (using either the isentropic equations or the basic equations).

### EXAMPLE 12.3 Choked Flow in a Converging Nozzle

Air flows isentropically through a converging nozzle. At a section where the nozzle area is  $0.013 \text{ ft}^2$ , the local pressure, temperature, and Mach number are 60 psia,  $40^\circ\text{F}$ , and 0.52, respectively. The back pressure is 30 psia. The Mach number at the throat, the mass flow rate, and the throat area are to be determined.

**EXAMPLE PROBLEM 12.3****GIVEN:** Air flow through a converging nozzle at the conditions shown:

$$\begin{aligned}M_1 &= 0.52 \\T_1 &= 40^\circ\text{F} \\p_1 &= 60 \text{ psia} \\A_1 &= 0.013 \text{ ft}^2\end{aligned}$$

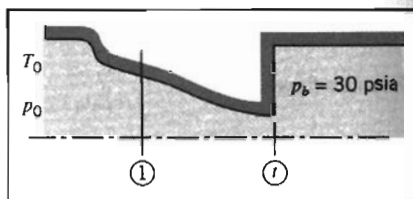**FIND:** (a)  $M_2$ , (b)  $\dot{m}$ , (c)  $A_2$ .**SOLUTION:**First we check for choking, to determine if flow is isentropic down to  $p_b$ . To check, we evaluate the stagnation conditions.


$$p_0 = p_1 \left[ 1 + \frac{k-1}{2} M_1^2 \right]^{k/(k-1)} = 60 \text{ psia} [1 + 0.2(0.52)^2]^{3.5} = 72.0 \text{ psia}$$

The back pressure ratio is

$$\frac{p_b}{p_0} = \frac{30.0}{72.0} = 0.417 < 0.528$$

so the flow is choked! For choked flow,

$$M_1 = 1.0 \longleftarrow M_2$$

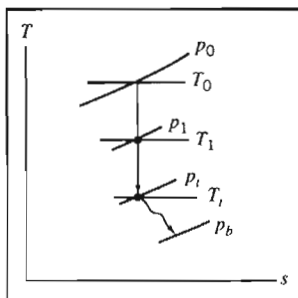The  $Ts$  diagram isThe mass flow rate may be found from conditions at section ①, using  $\dot{m} = \rho_1 V_1 A_1$ .

$$\begin{aligned}V_1 &= M_1 c_1 = M_1 \sqrt{kRT_1} \\&= 0.52 \left[ 1.4 \times 53.3 \frac{\text{ft} \cdot \text{lbf}}{\text{lbm} \cdot ^\circ\text{R}} \times (460 + 40)^\circ\text{R} \times 32.2 \frac{\text{lbm}}{\text{slug}} \times \frac{\text{slug} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2} \right]^{1/2}\end{aligned}$$

$$V_1 = 570 \text{ ft/s}$$

$$\rho_1 = \frac{p_1}{RT_1} = \frac{60 \text{ lbf}}{\text{in}^2} \times \frac{\text{lbm} \cdot ^\circ\text{R}}{53.3 \text{ ft} \cdot \text{lbf}} \times \frac{1}{500^\circ\text{R}} \times 144 \frac{\text{in}^2}{\text{ft}^2} = 0.324 \text{ lbm/ft}^3$$

$$\dot{m} = \rho_1 V_1 A_1 = 0.324 \frac{\text{lbm}}{\text{ft}^3} \times 570 \frac{\text{ft}}{\text{s}} \times 0.013 \text{ ft}^2 = 2.40 \text{ lbm/s} \longleftarrow \dot{m}$$



From Eq. 12.6,

$$\frac{A_1}{A^*} = \frac{1}{M_1} \left[ \frac{1 + \frac{k-1}{2} M_1^2}{\frac{k+1}{2}} \right]^{(k+1)/2(k-1)} = \frac{1}{0.52} \left[ \frac{1 + 0.2(0.52)^2}{1.2} \right]^{3.00} = 1.303$$

For choked flow,  $A_r = A^*$ . Thus,

$$A_r = A^* = \frac{A_1}{1.303} = \frac{0.013 \text{ ft}^2}{1.303} = 9.98 \times 10^{-3} \text{ ft}^2 \quad \leftarrow A_r$$

This problem illustrates use of the isentropic equations, Eqs. 12.7, for a flow that is choked.

✓ Because the flow is choked, we could also have used Eq. 12.9 for  $\dot{m}$  (after finding  $T_0$ ).

● The *Excel* workbook for this Example Problem is convenient for performing the calculations.

### Isentropic Flow in a Converging-Diverging Nozzle

Having considered isentropic flow in a converging nozzle, we turn now to isentropic flow in a converging-diverging (C-D) nozzle. As in the previous case, flow through the converging-diverging passage of Fig. 12.8 is induced by a vacuum pump downstream, and is controlled by the valve shown; upstream stagnation conditions are constant. Pressure in the exit plane of the nozzle is  $p_e$ ; the nozzle discharges to back pressure  $p_b$ . As for the converging nozzle, we wish to see, among other things, how the flow rate varies with the applied pressure difference ( $p_0 - p_b$ ). Consider the effect of gradually reducing the back pressure. The results are illustrated graphically in Fig. 12.8. Let us consider each of the cases shown.

With the valve initially closed, there is no flow through the nozzle; the pressure is constant at  $p_0$ . Opening the valve slightly ( $p_b$  slightly less than  $p_0$ ) produces pressure

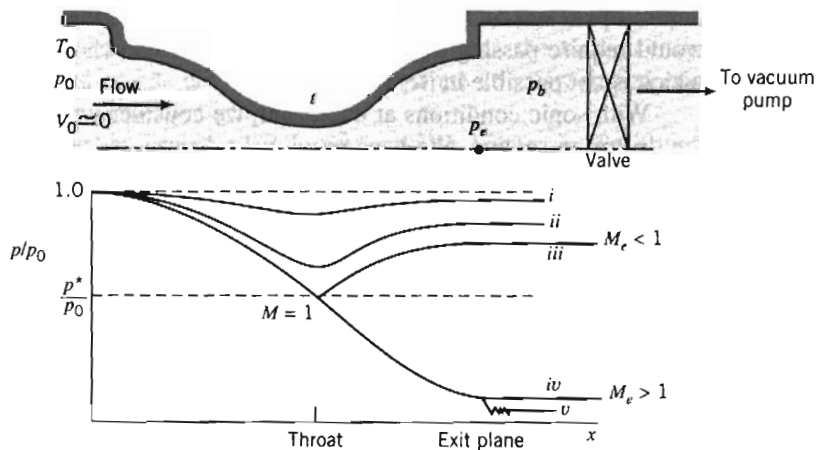


Fig. 12.8 Pressure distributions for isentropic flow in a converging-diverging nozzle.

distribution curve (i). If the flow rate is low enough, the flow will be subsonic and essentially incompressible at all points on this curve. Under these conditions, the C-D nozzle will behave as a venturi, with flow accelerating in the converging portion until a point of maximum velocity and minimum pressure is reached at the throat, then decelerating in the diverging portion to the nozzle exit. (This behavior is described accurately by the Bernoulli equation, Eq. 6.18.)

As the valve is opened farther and the flow rate is increased, a more sharply defined pressure minimum occurs, as shown by curve (ii). Although compressibility effects become important, the flow is still subsonic everywhere, and flow decelerates in the diverging section. (Clearly, this behavior is *not* described accurately by the Bernoulli equation.) Finally, as the valve is opened farther, curve (iii) results. At the section of minimum area the flow finally reaches  $M = 1$ , and the nozzle is choked—the flow rate is the maximum possible for the given nozzle and stagnation conditions.

All flows with pressure distributions (i), (ii), and (iii) are isentropic; each curve is associated with a unique rate of mass flow. Finally, when curve (iii) is reached, critical conditions are present at the throat. For this flow rate, the flow is choked, and

$$\dot{m} = \rho^* V^* A^*$$

where  $A^* = A_t$ , just as it was for the converging nozzle, and for this maximum possible flow rate Eq. 12.9 applies (with  $A_e$  replaced with the throat area  $A_t$ ),

$$\dot{m}_{\text{choked}} = A_t p_0 \sqrt{\frac{k}{RT_0}} \left( \frac{2}{k+1} \right)^{(k+1)/2(k-1)} \quad (12.10)$$

For air,  $\dot{m}_{\text{choked}} = 0.04 A_t p_0 / \sqrt{T_0}$  ( $\dot{m}_{\text{choked}}$  in kg/s,  $A_t$  in  $\text{m}^2$ ,  $p_0$  in Pa, and  $T_0$  in K), or  $\dot{m}_{\text{choked}} = 76.6 A_t p_0 / \sqrt{T_0}$  ( $\dot{m}_{\text{choked}}$  in lbm/s,  $A_t$  in  $\text{ft}^2$ ,  $p_0$  in psia, and  $T_0$  in R). The maximum flow rate in the C-D nozzle depends on the gas ( $k$  and  $R$ ), the size of the throat area ( $A_t$ ), and the conditions in the reservoir ( $p_0$ ,  $T_0$ ). Any attempt to increase the flow rate by further lowering the back pressure will fail, for the two reasons we discussed earlier: once we attain sonic conditions, downstream changes can no longer be transmitted upstream, and we cannot exceed sonic conditions, at the throat because this would require passing through the sonic state somewhere in the converging section, which is not possible in isentropic flow.

With sonic conditions at the throat, we consider what *can* happen to the flow in the diverging section. We have previously discussed (see Fig. 12.3) that a diverging section will decelerate a subsonic flow ( $M < 1$ ) but will accelerate a supersonic flow ( $M > 1$ )—very different behaviors! The question arises: “Does a sonic flow behave as a subsonic or as a supersonic flow as it enters a diverging section?” The answer to this question is that it can behave like either one, depending on the downstream pressure! We have already seen subsonic flow behavior [curve (iii)]: the applied back pressure leads to a gradual downstream pressure increase, decelerating the flow. We now consider accelerating the choked flow.

To accelerate flow in the diverging section requires a pressure decrease. This condition is illustrated by curve (iv) in Fig. 12.8. The flow will accelerate isentropically in the nozzle provided the exit pressure is set at  $p_{iv}$ . Thus, we see that with a throat Mach

number of unity, there are two possible isentropic flow conditions in the converging-diverging nozzle. This is consistent with the results of Fig. 12.5, where we found two Mach numbers for each  $A/A^*$  in isentropic flow.

Lowering the back pressure below condition  $(iv)$ , say to condition  $(v)$ , has no effect on flow in the nozzle. The flow is isentropic from the plenum chamber to the nozzle exit [as in condition  $(iv)$ ] and then it undergoes a three-dimensional irreversible expansion to the lower back pressure. A nozzle operating under these conditions is said to be *underexpanded*, since additional expansion takes place outside the nozzle.

A converging-diverging nozzle generally is intended to produce supersonic flow at the exit plane. If the back pressure is set at  $p_{iv}$ , flow will be isentropic through the nozzle, and supersonic at the nozzle exit. Nozzles operating at  $p_b = p_{iv}$  [corresponding to curve  $(iv)$  in Fig. 12.8] are said to operate at *design conditions*.

Flow leaving a C-D nozzle is supersonic when the back pressure is at or below nozzle design pressure. The exit Mach number is fixed once the area ratio,  $A_e/A^*$ , is specified. All other exit plane properties (for isentropic flow) are uniquely related to stagnation properties by the fixed exit plane Mach number.

The assumption of isentropic flow for a real nozzle at design conditions is a reasonable one. However, the one-dimensional flow model is inadequate for the design of relatively short nozzles to produce uniform supersonic exit flow.

Rocket-propelled vehicles use C-D nozzles to accelerate the exhaust gases to the maximum possible speed to produce high thrust. A propulsion nozzle is subject to varying ambient conditions during flight through the atmosphere, so it is impossible to attain the maximum theoretical thrust over the complete operating range. Because only a single supersonic Mach number can be obtained for each area ratio, nozzles for supersonic wind tunnels often are built with interchangeable test sections, or with variable geometry.

You undoubtedly have noticed that nothing has been said about the operation of converging-diverging nozzles with back pressure in the range  $p_{iii} > p_b > p_{iv}$ . For such cases the flow cannot expand isentropically to  $p_b$ . Under these conditions a shock (which may be treated as an irreversible discontinuity involving entropy increase) occurs somewhere within the flow. Following a discussion of normal shocks in Section 12-5, we shall return to complete the discussion of converging-diverging nozzle flows in Section 12-6.

Nozzles operating with  $p_{iii} > p_b > p_{iv}$  are said to be *overexpanded* because the pressure at some point in the nozzle is less than the back pressure. Obviously, an overexpanded nozzle could be made to operate at a new design condition by removing a portion of the diverging section.


In Example Problem 12.4, we consider isentropic flow in a C-D nozzle; in Example Problem 12.5, we consider choked flow in a C-D nozzle.

### EXAMPLE 12.4 Isentropic Flow in a Converging-Diverging Nozzle

Air flows isentropically in a converging-diverging nozzle, with exit area of  $0.001 \text{ m}^2$ . The nozzle is fed from a large plenum where the stagnation conditions are  $350 \text{ K}$  and  $1.0 \text{ MPa}$  (abs). The exit pressure is  $954 \text{ kPa}$  (abs) and the Mach number at the throat is  $0.68$ . Fluid properties and area at the nozzle throat and the exit Mach number are to be determined.

**EXAMPLE PROBLEM 12.4****GIVEN:** Isentropic flow of air in C-D nozzle as shown:

$$\begin{aligned} T_0 &= 350 \text{ K} \\ p_0 &= 1.0 \text{ MPa (abs)} \\ p_b &= 954 \text{ kPa (abs)} \\ M_t &= 0.68 \quad A_e = 0.001 \text{ m}^2 \end{aligned}$$

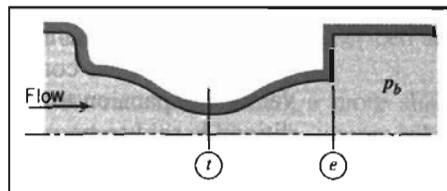**FIND:** (a) Properties and area at nozzle throat.  
(b)  $M_e$ .**SOLUTION:**

Stagnation temperature is constant for isentropic flow. Thus, since

$$\frac{T_0}{T} = 1 + \frac{k-1}{2} M^2$$

then

$$T_t = \frac{T_0}{1 + \frac{k-1}{2} M_t^2} = \frac{350 \text{ K}}{1 + 0.2(0.68)^2} = 320 \text{ K} \leftarrow T_t$$

Also, since  $p_0$  is constant for isentropic flow, then

$$\begin{aligned} p_t &= p_0 \left( \frac{T_t}{T_0} \right)^{k/(k-1)} = p_0 \left[ \frac{1}{1 + \frac{k-1}{2} M_t^2} \right]^{k/(k-1)} \\ p_t &= 1.0 \times 10^6 \text{ Pa} \left[ \frac{1}{1 + 0.2(0.68)^2} \right]^{3.5} = 734 \text{ kPa (abs)} \leftarrow p_t \end{aligned}$$

so

$$\rho_t = \frac{p_t}{RT_t} = \frac{7.34 \times 10^5 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{320 \text{ K}} = 7.99 \text{ kg/m}^3 \leftarrow \rho_t$$

and

$$\begin{aligned} V_t &= M_t c_t = M_t \sqrt{kRT_t} \\ V_t &= 0.68 \left[ 1.4 \times \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 320 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \right]^{1/2} = 244 \text{ m/s} \leftarrow V_t \end{aligned}$$

From Eq. 12.7d we can obtain a value of  $A_t/A^*$ 

$$\frac{A_t}{A^*} = \frac{1}{M_t} \left[ \frac{1 + \frac{k-1}{2} M_t^2}{\frac{k+1}{2}} \right]^{(k+1)/2(k-1)} = \frac{1}{0.68} \left[ \frac{1 + 0.2(0.68)^2}{1.2} \right]^{3.00} = 1.11$$

but at this point  $A^*$  is not known.


Since  $M_t < 1$ , flow at the exit must be subsonic. Therefore,  $p_e = p_b$ . Stagnation properties are constant, so

$$\frac{p_0}{p_e} = \left[ 1 + \frac{k-1}{2} M_e^2 \right]^{k/(k-1)}$$

Solving for  $M_e$  gives

$$M_e = \left\{ \left[ \left( \frac{p_0}{p_e} \right)^{(k-1)/k} - 1 \right] \frac{2}{k-1} \right\}^{1/2} = \left\{ \left[ \left( \frac{1.0 \times 10^6}{9.54 \times 10^5} \right)^{0.286} - 1 \right] (5) \right\}^{1/2} = 0.26 \longleftarrow M_e$$

The  $Ts$  diagram for this flow is

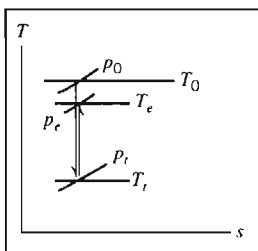

Since  $A_e$  and  $M_e$  are known, we can compute  $A^*$ . From Eq. 12.7d

$$\frac{A_e}{A^*} = \frac{1}{M_e} \left[ \frac{1 + \frac{k-1}{2} M_e^2}{\frac{k+1}{2}} \right]^{(k+1)/2(k-1)} = \frac{1}{0.26} \left[ \frac{1 + 0.2(0.26)^2}{1.2} \right]^{3.00} = 2.317$$

Thus,

$$A^* = \frac{A_e}{2.317} = \frac{0.001 \text{ m}^2}{2.317} = 4.32 \times 10^{-4} \text{ m}^2$$

and

$$A_t = 1.110A^* = (1.110)(4.32 \times 10^{-4} \text{ m}^2) = 4.80 \times 10^{-4} \text{ m}^2 \longleftarrow A_t$$

This problem illustrates use of the isentropic equations, Eqs. 12.7, for flow in a C-D nozzle that is not choked.

✓ Note that use of Eq. 12.7d allowed us to obtain the throat area without needing to first compute other properties.



The *Excel* workbook for this Example Problem is convenient for performing the calculations (using either the isentropic equations or the basic equations).




### EXAMPLE 12.5 Isentropic Flow in a Converging-Diverging Nozzle: Choked Flow


The nozzle of Example 12.4 has a design back pressure of 87.5 kPa (abs) but is operated at a back pressure of 50.0 kPa (abs). Assume flow within the nozzle is isentropic. Determine the exit Mach number and mass flow rate.

**EXAMPLE PROBLEM 12.5****GIVEN:** Air flow through C-D nozzle as shown:

$$\begin{aligned}
 T_0 &= 350 \text{ K} \\
 p_0 &= 1.0 \text{ MPa (abs)} \\
 p_e(\text{design}) &= 87.5 \text{ kPa (abs)} \\
 p_b &= 50.0 \text{ kPa (abs)} \\
 A_e &= 0.001 \text{ m}^2 \\
 A_t &= 4.8 \times 10^{-4} \text{ m}^2 \text{ (Example Problem 12.4)}
 \end{aligned}$$

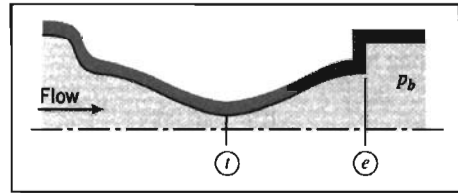**FIND:** (a)  $M_e$ . (b)  $\dot{m}$ .**SOLUTION:**

The operating back pressure is *below* the design pressure. Consequently, the nozzle is underexpanded, and the  $Ts$  diagram and pressure distribution will be as shown:

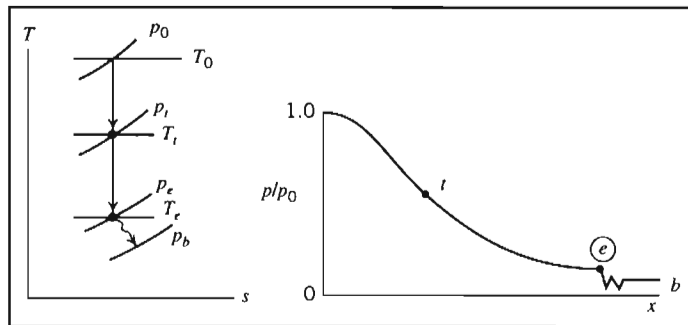

Flow *within* the nozzle will be isentropic, but the irreversible expansion from  $p_e$  to  $p_b$  will cause an entropy increase;  $p_e = p_e(\text{design}) = 87.5 \text{ kPa (abs)}$ .

Since stagnation properties are constant for isentropic flow, the exit Mach number can be computed from the pressure ratio. Thus

$$\frac{p_0}{p_e} = \left[ 1 + \frac{k-1}{2} M_e^2 \right]^{k/(k-1)}$$

or

$$M_e = \left\{ \left[ \left( \frac{p_0}{p_e} \right)^{(k-1)/k} - 1 \right] \frac{2}{k-1} \right\}^{1/2} = \left\{ \left[ \left( \frac{1.0 \times 10^6}{8.75 \times 10^4} \right)^{0.286} - 1 \right] \frac{2}{0.4} \right\}^{1/2} = 2.24 \longleftarrow M_e$$

Because the flow is choked we can use Eq. 12.10 for the mass flow rate,

$$\dot{m}_{\text{choked}} = A_t p_0 \sqrt{\frac{k}{RT_0}} \left( \frac{2}{k+1} \right)^{(k+1)/2(k-1)} = 0.04 \frac{A_t p_0}{\sqrt{T_0}} \quad (12.10)$$

(with  $\dot{m}_{\text{choked}}$  in kg/s,  $A_t$  in  $\text{m}^2$ ,  $p_0$  in Pa, and  $T_0$  in K), so

$$\dot{m}_{\text{choked}} = 0.04 \times 4.8 \times 10^{-4} \times 1 \times 10^6 / \sqrt{350}$$

$$\dot{m} = \dot{m}_{\text{choked}} = 1.04 \text{ kg/s} \longleftarrow \dot{m}$$

This problem illustrates use of the isentropic equations, Eqs. 12.7, for flow in a C-D nozzle that is choked.

- ✓ Note that we used Eq. 12.10 in an “engineering equation” form—that is, an equation containing a coefficient that has units. While useful here, generally these equations are no longer used in engineering because their correct use depends on using input variable values in specific units.



The *Excel* workbook for this Example Problem is convenient for performing the calculations (using either the isentropic equations or the basic equations).

We have now completed our study of idealized one-dimensional isentropic flow in channels of varying area. In real channels, we will have friction and quite possibly heat transfer. Our next tasks are to study effects of these phenomena on a flow. As we mentioned at the beginning of this chapter, in this introductory text we cannot study flows that experience *all* these phenomena: In the next section, we consider the effect of friction alone, in Section 12-4 we study the effect of heat transfer alone, and in Section 12-5 we study the effect of normal shocks (and see in Section 12-6 how these affect the C-D nozzle, in more detail than we did in this section).

## 12-3 FLOW IN A CONSTANT-AREA DUCT WITH FRICTION

Gas flow in constant-area ducts is commonly encountered in a variety of engineering applications. In this section we consider flows in which wall friction is responsible for changes in fluid properties.

As for isentropic flow with area variation (Section 12-2), our starting point in analyzing flows with friction is the set of basic equations (Eqs. 12.1), describing one-dimensional motion that is affected by several phenomena: area change, friction, heat transfer and normal shocks. These are

$$\rho_1 V_1 A_1 = \rho_2 V_2 A_2 = \rho V A = \dot{m} = \text{constant} \quad (12.1a)$$

$$R_x + p_1 A_1 - p_2 A_2 = \dot{m} V_2 - \dot{m} V_1 \quad (12.1b)$$

$$\frac{\delta Q}{dm} + h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} \quad (12.1c)$$

$$\dot{m}(s_2 - s_1) \geq \int_{\text{CS}} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \quad (12.1d)$$

$$p = \rho R T \quad (12.1e)$$

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p (T_2 - T_1) \quad (12.1f)$$

$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (12.1g)$$

Equation 12.1a is *continuity*, Eq. 12.1b is a *momentum equation*, Eq. 12.1c is an *energy equation*, Eq. 12.1d is the *second law of thermodynamics*, and Eqs. 12.1e, 12.1f, and 12.1g are useful *property relations* for an ideal gas with constant specific heats.

We must simplify these equations for flow in a constant-area duct with friction. The first problem we have is what to do with the heat that friction generates. There are two obvious cases we can consider: In the first we assume that the flow is *adiabatic*, so any heat generated remains in the fluid; in the second we assume that the flow remains *isothermal*, so the fluid either gives off heat or absorbs heat as necessary. While some flows may be neither adiabatic nor isothermal, many real-world flows are. Flow in a relatively short duct will be approximately adiabatic; flow in a very long duct (e.g., an uninsulated natural gas pipeline) will be approximately isothermal (the pipeline will be at the ambient temperature). We consider first adiabatic flow.

### Basic Equations for Adiabatic Flow

We can simplify Eqs. 12.1 for frictional adiabatic flow in a constant-area duct of an ideal gas with constant specific heats, as shown in Fig. 12.9.

We now have  $A_1 = A_2 = A$ . In addition, for no heat transfer we have  $\delta Q/dm = 0$ . Finally, the force  $R_x$  is now due only to friction (no  $x$  component of surface force is caused by pressure on the parallel sides of the channel). Hence, for this flow our equations become

$$\rho_1 V_1 = \rho_2 V_2 = \rho V \equiv G = \frac{\dot{m}}{A} = \text{constant} \quad (12.11a)$$

$$R_x + p_1 A - p_2 A = \dot{m} V_2 - \dot{m} V_1 \quad (12.11b)$$

$$h_{0,1} = h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} = h_{0,2} = h_0 \quad (12.11c)$$


$$s_2 > s_1 \quad (12.11d)$$

$$p = \rho R T \quad (12.11e)$$

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p (T_2 - T_1) \quad (12.11f)$$

$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (12.11g)$$

Equations 12.11 can be used to analyze frictional adiabatic flow in a channel of constant area. For example, if we know conditions at section ① (i.e.,  $p_1$ ,  $\rho_1$ ,  $T_1$ ,  $s_1$ ,  $h_1$ , and  $V_1$ ), we can use these equations to find conditions at some new section ② after the fluid has experienced a total friction force  $R_x$ . It is the effect of friction that causes

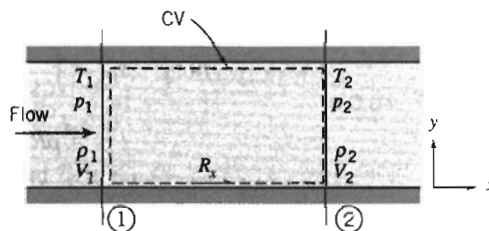

**Fig. 12.9** Control volume used for integral analysis of frictional adiabatic flow.



fluid properties to change along the duct. For a known friction force we have six equations (not including the constraint of Eq. 12.11d) and six unknowns ( $p_2$ ,  $\rho_2$ ,  $T_2$ ,  $s_2$ ,  $h_2$ , and  $V_2$ ). In practice this procedure is unwieldy—as for isentropic flow we have a set of nonlinear coupled algebraic equations to solve.

### Adiabatic Flow: The Fanno Line


If we were to attempt the calculations described above, as the flow progresses down the duct (i.e., for increasing values of  $R_x$ ), we would develop a relationship between  $T$  and  $s$  shown qualitatively in Fig. 12.10 for two possibilities: a flow that was initially subsonic (starting at some point ①), and flow that was initially supersonic (starting at some point ①'). The locus of all possible downstream states is referred to as the *Fanno line*. Detailed calculations show some interesting features of Fanno-line flow. At the point of maximum entropy, the Mach number is unity. On the upper branch of the curve, the Mach number is always less than unity, and it increases monotonically as we proceed to the right along the curve. At every point on the lower portion of the curve, the Mach number is greater than unity; the Mach number decreases monotonically as we move to the right along the curve.

For any initial state on a Fanno line, each point on the Fanno line represents a mathematically possible downstream state. Indeed, we determined the locus of all possible downstream states by letting the friction force  $R_x$  vary and calculating the corresponding properties. Note the arrows in Fig. 12.10, indicating that, as required by Eq. 12.11d, the entropy must increase for this flow. In fact it is because we *do* have friction (an irreversibility) present in an adiabatic flow that this is certain. Referring again to Fig. 12.10, we see that for an initially subsonic flow (state ①), the effect of friction is to increase the Mach number toward unity. For a flow that is initially supersonic (state ①'), the effect of friction is to decrease the Mach number toward unity.


In developing the simplified form of the first law for Fanno-line flow, Eq. 12.11c, we found that stagnation enthalpy remains constant. Consequently, when the fluid is an ideal gas with constant specific heats, stagnation temperature must also remain constant. What happens to stagnation pressure? Friction causes the local isentropic stagnation pressure to decrease for all Fanno-line flows, as shown in Fig. 12.11. Since entropy must increase in the direction of flow, the flow process must proceed to the right on the  $Ts$  diagram. In Fig. 12.11, a path from state ① to state ② is shown on the subsonic portion of the curve. The corresponding local isentropic stagnation pressures,  $p_{0_1}$  and  $p_{0_2}$ , clearly show that  $p_{0_2} < p_{0_1}$ . An identical result is obtained for flow on the supersonic branch of the curve from state ①' to state ②'. Again  $p_{0_2'} < p_{0_1'}$ . Thus  $p_0$  decreases for any Fanno-line flow.

The effects of friction on flow properties in Fanno-line flow are summarized in Table 12.1.

In deducing the effect of friction on flow properties for Fanno-line flow, we used the shape of the Fanno line on the  $Ts$  diagram and the basic governing equations (Eqs. 12.11). You should follow through the logic indicated in the right column of the table. Note that the effect of friction is to accelerate a subsonic flow! This seems a real puzzle—a violation of Newton's second law—until we realize that the pressure is dropping quite rapidly, so the pressure gradient more than cancels the drag due to friction. We can also note that the density is decreasing in this flow (largely because of the pressure drop) mandating (from continuity) that the velocity must be increasing. All properties simultaneously affect one another (as expressed in the coupled set of equations, Eqs. 12.11), so it is not possible to conclude

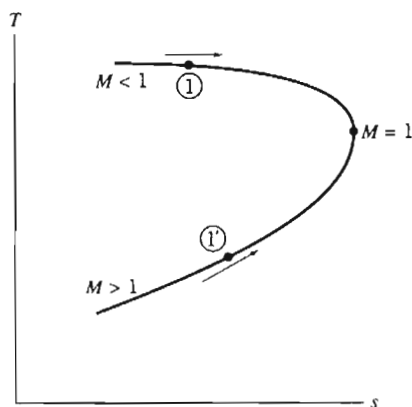

**Fig. 12.10** Schematic  $Ts$  diagram for frictional adiabatic (Fanno-line) flow in a constant-area duct.

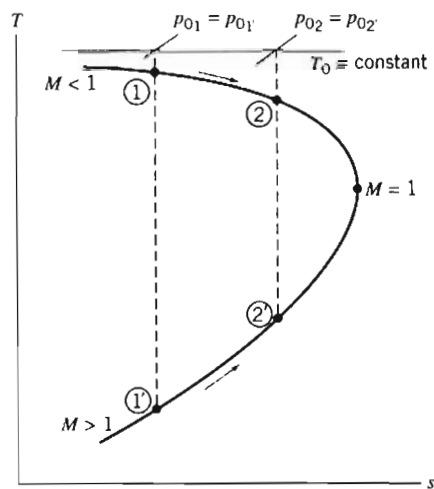

**Fig. 12.11** Schematic of Fanno-line flow on  $Ts$  plane, showing reduction in local isentropic stagnation pressure caused by friction.

that the change in any one property is solely responsible for changes in any of the others.

We have noted that entropy must increase in the direction of flow: It is the effect of friction that causes the change in flow properties along the Fanno-line curve. From Fig. 12.11, we see that there is a maximum entropy point corresponding to  $M = 1$  for each Fanno line. The maximum entropy point is reached by increasing the amount of friction (through addition of duct length), just enough to produce a Mach number of unity (choked flow) at the exit. If we insist on adding duct beyond this critical duct length, at which the flow is choked, one of two things happens: if the inlet flow is subsonic, the additional length forces the sonic condition to move down to the new exit, and the flow rate in the duct (and Mach number at each location) decreases; if the inlet flow is supersonic, the additional length causes a normal shock to appear somewhere in the duct, and the shock moves upstream as more duct is added (for more details see Section 12-6).

**Table 12.1** Summary of Effects of Friction on Properties in Fanno-Line Flow

Property	Subsonic $M < 1$	Supersonic $M > 1$	Obtained from:
Stagnation temperature, $T_0$	Constant	Constant	Energy equation
Entropy, $s$	Increases	Increases	$T ds$ equation
Stagnation pressure, $p_0$	Decreases	Decreases	$T_0 = \text{constant};$ $s$ increases
Temperature, $T$	Decreases	Increases	Shape of Fanno line
Velocity, $V$	Increases	Decreases	Energy equation, and trend of $T$
Mach number, $M$	Increases	Decreases	Trends of $V$ , $T$ , and definition of $M$
Density, $\rho$	Decreases	Increases	Continuity equation, and effect on $V$
Pressure, $p$	Decreases	Increases	Equation of state, and effects on $\rho$ , $T$

To compute the critical duct length, we must analyze the flow in detail, accounting for friction. This analysis requires that we begin with a differential control volume, develop expressions in terms of Mach number, and integrate along the duct to the section where  $M = 1$ . This is our next task, and it will involve quite a bit of algebraic manipulation, so first we will demonstrate use of some of Eqs. 12.11 in Example Problem 12.6.

### EXAMPLE 12.6 Frictional Adiabatic Flow in a Constant-Area Channel

Air flow is induced in an insulated tube of 7.16 mm diameter by a vacuum pump. The air is drawn from a room, where  $p_0 = 101 \text{ kPa (abs)}$  and  $T_0 = 23^\circ\text{C}$ , through a smoothly contoured converging nozzle. At section ①, where the nozzle joins the constant-area tube, the static pressure is 98.5 kPa (abs). At section ②, located some distance downstream in the constant-area tube, the air temperature is  $14^\circ\text{C}$ . Determine the mass flow rate, the local isentropic stagnation pressure at section ②, and the friction force on the duct wall between sections ① and ②.

#### EXAMPLE PROBLEM 12.6

**GIVEN:** Air flow in insulated tube.

**FIND:** (a)  $\dot{m}$ .  
(b) Stagnation pressure at section ②.  
(c) Force on duct wall.

**SOLUTION:**

The mass flow rate can be obtained from properties at section ①. For isentropic flow through the converging nozzle, local isentropic stagnation properties remain constant. Thus,

$$\frac{p_{01}}{p_1} = \left(1 + \frac{k-1}{2} M_1^2\right)^{k/(k-1)}$$

and

$$M_1 = \left\{ \frac{2}{k-1} \left[ \left( \frac{p_{01}}{p_1} \right)^{(k-1)/k} - 1 \right] \right\}^{1/2} = \left\{ \frac{2}{0.4} \left[ \left( \frac{1.01 \times 10^5}{9.85 \times 10^4} \right)^{0.286} - 1 \right] \right\}^{1/2} = 0.190$$


$$T_1 = \frac{T_{01}}{1 + \frac{k-1}{2} M_1^2} = \frac{(273 + 23) \text{ K}}{1 + 0.2(0.190)^2} = 294 \text{ K}$$

For an ideal gas,

$$\rho_1 = \frac{p_1}{RT_1} = \frac{9.85 \times 10^4 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{294 \text{ K}} = 1.17 \text{ kg/m}^3$$

$$V_1 = M_1 c_1 = M_1 \sqrt{kRT_1} = (0.190) \left[ 1.4 \times \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 294 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \right]^{1/2}$$

$$V_1 = 65.3 \text{ m/s}$$

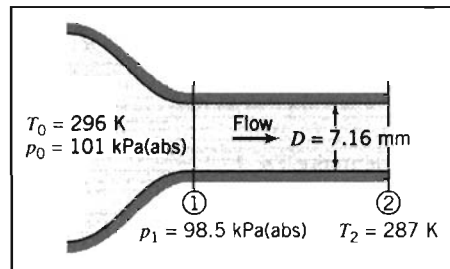

The area,  $A_1$ , is

$$A_1 = A = \frac{\pi D^2}{4} = \frac{\pi}{4} (7.16 \times 10^{-3})^2 \text{ m}^2 = 4.03 \times 10^{-5} \text{ m}^2$$

From continuity,

$$\dot{m} = \rho_1 V_1 A_1 = 1.17 \frac{\text{kg}}{\text{m}^3} \times 65.3 \frac{\text{m}}{\text{s}} \times 4.03 \times 10^{-5} \text{ m}^2$$

$$\dot{m} = 3.08 \times 10^{-3} \text{ kg/s} \leftarrow \dot{m}$$

Flow is adiabatic, so  $T_0$  is constant, and

$$T_{0_2} = T_{0_1} = 296 \text{ K} \leftarrow T_{0_2}$$

Then

$$\frac{T_{0_2}}{T_2} = 1 + \frac{k-1}{2} M_2^2$$

Solving for  $M_2$  gives

$$M_2 = \left[ \frac{2}{k-1} \left( \frac{T_{0_2}}{T_2} - 1 \right) \right]^{1/2} = \left[ \frac{2}{0.4} \left( \frac{296}{287} - 1 \right) \right]^{1/2} = 0.396 \leftarrow M_2$$

$$V_2 = M_2 c_2 = M_2 \sqrt{kRT_2} = (0.396) \left[ 1.4 \times 287 \frac{\text{N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 287 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \right]^{1/2}$$

$$V_2 = 134 \text{ m/s} \leftarrow V_2$$

From continuity, Eq. 12.11a,  $\rho_1 V_1 = \rho_2 V_2$ , so

$$\rho_2 = \rho_1 \frac{V_1}{V_2} = 1.17 \frac{\text{kg}}{\text{m}^3} \times \frac{65.3}{134} = 0.570 \text{ kg/m}^3 \leftarrow \rho_2$$


and

$$p_2 = \rho_2 R T_2 = 0.570 \frac{\text{kg}}{\text{m}^3} \times 287 \frac{\text{N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 287 \text{ K} = 47.0 \text{ kPa (abs)} \leftarrow p_2$$

The local isentropic stagnation pressure is

$$p_{0_2} = p_2 \left( 1 + \frac{k-1}{2} M_2^2 \right)^{k/(k-1)} = 47.0 \times 10^4 \text{ Pa} [1 + 0.2(0.396)^2]^{3.5}$$

$$p_{0_2} = 52.4 \text{ kPa (abs)} \leftarrow p_{0_2}$$

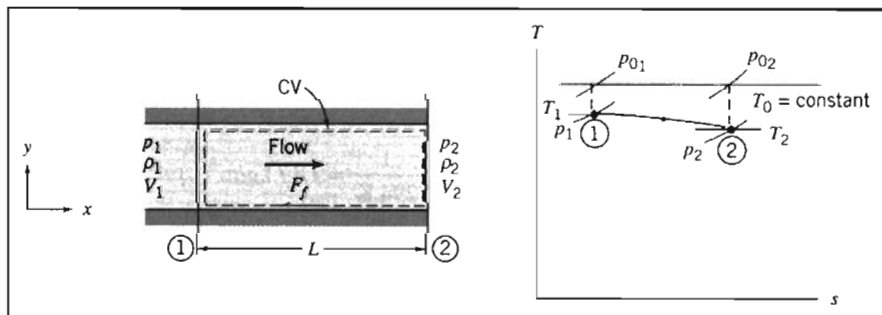

The friction force may be obtained using the momentum equation (Eq. 12.11b),

$$R_x + p_1 A - p_2 A = \dot{m} V_2 - \dot{m} V_1 \quad (12.11b)$$

which we apply to the control volume shown above (except we replace  $R_x$  from Fig. 12.9 with  $-F_f$  because we know the friction force  $F_f$  on the fluid acts in the negative  $x$  direction).

$$-F_f = (p_2 - p_1)A + \dot{m}(V_2 - V_1)$$

$$-F_f = (4.70 - 9.85)10^4 \frac{\text{N}}{\text{m}^2} \times 4.03 \times 10^{-5} \text{m}^2 + 3.08 \times 10^{-3} \frac{\text{kg}}{\text{s}} \times (134 - 65.3) \frac{\text{m}}{\text{s}} \times \frac{\text{N} \cdot \text{s}^2}{\text{kg} \cdot \text{m}}$$

or

$$F_f = 1.86 \text{ N} \quad (\text{to the left, as shown})$$

This is the force exerted on the control volume by the duct wall. The force of the *fluid* on the *duct* is

$$K_x = -F_f = 1.86 \text{ N} \quad \leftarrow (\text{to the right}) \quad K_x$$

This problem illustrates use of some of the basic equations, Eqs. 12.11, for flow in a duct with friction.



The *Excel* workbook for this Example Problem is convenient for performing the calculations.

### Fanno-Line Flow Functions for One-Dimensional Flow of an Ideal Gas

The primary independent variable in Fanno-line flow is the friction force,  $F_f$ . Knowledge of the total friction force between any two points in a Fanno-line flow enables us to predict downstream conditions from known upstream conditions. The total friction force is the integral of the wall shear stress over the duct surface area. Since wall shear stress varies along the duct, we must develop a differential equation and then integrate to find property variations. To set up the differential equation, we use the differential control volume shown in Fig. 12.12.

Comparing Fig. 12.12 to Fig. 12.9 we see that we can use the basic equations, Eqs. 12.11, for flow in a duct with friction, if we replace  $T_1, p_1, \rho_1, V_1$ , with  $T, p, \rho, V$ , and  $T_2, p_2, \rho_2, V_2$ , with  $T + dT, p + dp, \rho + d\rho, V + dV$ , and also  $R_x$  with  $-dF_f$ .

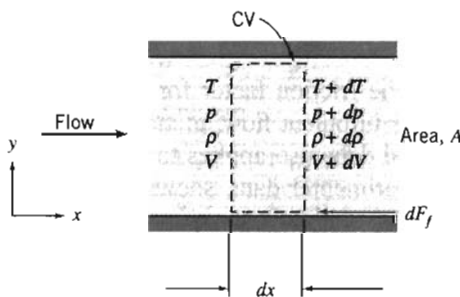


Fig. 12.12 Differential control volume used for analysis of Fanno-line flow.

The continuity equation (Eq. 12.11a) becomes

$$\rho V = (\rho + d\rho)(V + dV) = \frac{\dot{m}}{A}$$

so

$$\rho V = \rho V + \rho dV + d\rho V + d\rho dV$$

which reduces to

$$\rho dV + V d\rho = 0 \quad (12.12a)$$

since products of differentials are negligible. The momentum equation (Eq. 12.11b) becomes

$$-dF_f + pA - (p + dp)A = \dot{m}(V + dV) - \dot{m}V$$

which reduces to

$$-\frac{dF_f}{A} - dp = \rho V dV \quad (12.12b)$$

after using continuity ( $\dot{m} = \rho AV$ ). The first law of thermodynamics (Eq. 12.11c) becomes

$$h + \frac{V^2}{2} = (h + dh) + \frac{(V + dV)^2}{2}$$

which reduces to

$$dh + d\left(\frac{V^2}{2}\right) = 0 \quad (12.12c)$$

since products of differentials are negligible.

Equations 12.12 are differential equations that we can integrate to develop useful relations, but before doing so we need to see how we can relate the friction force  $F_f$  to other flow properties. First, we note that

$$dF_f = \tau_w dA_w = \tau_w P dx \quad (12.13)$$

where  $P$  is the wetted perimeter of the duct. To obtain an expression for  $\tau_w$  in terms of flow variables at each cross section, we assume changes in flow variables with  $x$  are gradual and use correlations developed in Chapter 8 for fully developed, incompressible duct flow. For incompressible flow, the local wall shear stress can be written in terms of flow properties and friction factor. From Eqs. 8.16, 8.32, and 8.34 we have, for incompressible flow,

$$\tau_w = -\frac{R}{2} \frac{dp}{dx} = \frac{\rho R}{2} \frac{dh_t}{dx} = \frac{f\rho V^2}{8} \quad (12.14)$$

where  $f$  is the friction factor for pipe flow, given by Eq. 8.36 for laminar flow and Eq. 8.37 for turbulent flow, plotted in Fig. 8.12. (We assume that this correlation of experimental data also applies to compressible flow. This assumption, when checked against experimental data, shows surprisingly good agreement for subsonic flows; data for supersonic flow are sparse.)

Ducts of other than circular shape can be included in our analysis by introducing the hydraulic diameter

$$D_h = \frac{4A}{P} \quad (8.50)$$

(Recall the factor of 4 was included in Eq. 8.50 so that  $D_h$  would reduce to diameter  $D$  for circular ducts.)

Combining Eqs. 8.50, 12.13, and 12.14, we obtain

$$dF_f = \tau_w P dx = f \frac{\rho V^2}{8} \frac{4A}{D_h} dx$$

or

$$dF_f = \frac{fA}{D_h} \frac{\rho V^2}{2} dx \quad (12.15)$$

Substituting this result into the momentum equation (Eq. 12.12b), we obtain

$$-\frac{f}{D_h} \frac{\rho V^2}{2} dx - dp = \rho V dV$$

or, after dividing by  $p$ ,

$$\frac{dp}{p} = -\frac{f}{D_h} \frac{\rho V^2}{2p} dx - \frac{\rho V dV}{p}$$

Noting that  $p/\rho = RT = c^2/k$ , and  $V dV = d(V^2/2)$ , we obtain

$$\frac{dp}{p} = -\frac{f}{D_h} \frac{kM^2}{2} dx - \frac{k}{c^2} d\left(\frac{V^2}{2}\right)$$

and finally,

$$\frac{dp}{p} = -\frac{f}{D_h} \frac{kM^2}{2} dx - \frac{kM^2}{2} \frac{d(V^2)}{V^2} \quad (12.16)$$

To relate  $M$  and  $x$ , we must eliminate  $dp/p$  and  $d(V^2)/V^2$  from Eq. 12.16. From the definition of Mach number,  $M = V/c$ , so  $V^2 = M^2 c^2 = M^2 kRT$ , and after differentiating this equation and dividing by the original equation,

$$\frac{d(V^2)}{V^2} = \frac{dT}{T} + \frac{d(M^2)}{M^2} \quad (12.17a)$$

From the continuity equation, Eq. 12.12a,  $d\rho/\rho = -dV/V$  and so

$$\frac{d\rho}{\rho} = -\frac{1}{2} \frac{d(V^2)}{V^2}$$

From the ideal gas equation of state,  $p = \rho RT$ ,

$$\frac{dp}{p} = \frac{d\rho}{\rho} + \frac{dT}{T}$$

Combining these three equations, we obtain

$$\frac{dp}{p} = \frac{1}{2} \frac{dT}{T} - \frac{1}{2} \frac{d(M^2)}{M^2} \quad (12.17b)$$

Substituting Eqs. 12.17 into Eq. 12.16 gives

$$\frac{1}{2} \frac{dT}{T} - \frac{1}{2} \frac{d(M^2)}{M^2} = -\frac{f}{D_h} \frac{kM^2}{2} dx - \frac{kM^2}{2} \frac{dT}{T} - \frac{kM^2}{2} \frac{d(M^2)}{M^2}$$



This equation can be simplified to

$$\left(\frac{1+kM^2}{2}\right)\frac{dT}{T} = -\frac{f}{D_h}\frac{kM^2}{2}dx + \left(\frac{1-kM^2}{2}\right)\frac{d(M^2)}{M^2} \quad (12.18)$$

We have been successful in reducing the number of variables somewhat. However, to relate  $M$  and  $x$ , we must obtain an expression for  $dT/T$  in terms of  $M$ . Such an expression can be obtained most readily from the stagnation temperature equation

$$\frac{T_0}{T} = 1 + \frac{k-1}{2}M^2 \quad (11.20b)$$

Since stagnation temperature is constant for Fanno-line flow,

$$T\left(1 + \frac{k-1}{2}M^2\right) = \text{constant}$$

and after differentiating this equation and dividing by the original equation,

$$\frac{dT}{T} + \frac{M^2\frac{(k-1)}{2}}{\left(1 + \frac{k-1}{2}M^2\right)}\frac{d(M^2)}{M^2} = 0$$

Substituting for  $dT/T$  into Eq. 12.18 yields

$$\frac{M^2\frac{(k-1)}{2}\left(\frac{1+kM^2}{2}\right)}{\left(1 + \frac{k-1}{2}M^2\right)}\frac{d(M^2)}{M^2} = \frac{f}{D_h}\frac{kM^2}{2}dx - \left(\frac{1-kM^2}{2}\right)\frac{d(M^2)}{M^2}$$

Combining terms, we obtain

$$\frac{(1-M^2)}{\left(1 + \frac{k-1}{2}M^2\right)}\frac{d(M^2)}{kM^4} = \frac{f}{D_h}dx \quad (12.19)$$

We have (finally!) obtained a differential equation that relates changes in  $M$  with  $x$ . Now we must integrate the equation to find  $M$  as a function of  $x$ .

Integrating Eq. 12.19 between states ① and ② would produce a complicated function of both  $M_1$  and  $M_2$ . The function would have to be evaluated numerically for each new combination of  $M_1$  and  $M_2$  encountered in a problem. Calculations can be simplified considerably using critical conditions (where, by definition,  $M = 1$ ). All Fanno-line flows tend toward  $M = 1$ , so integration is between a section where the Mach number is  $M$  and the section where sonic conditions occur (the critical conditions). Mach number will reach unity when the maximum possible length of duct is used, as shown schematically in Fig. 12.13.

The task is to perform the integration

$$\int_M^1 \frac{(1-M^2)}{kM^4\left(1 + \frac{k-1}{2}M^2\right)}d(M^2) = \int_0^{L_{\max}} \frac{f}{D_h}dx \quad (12.20)$$



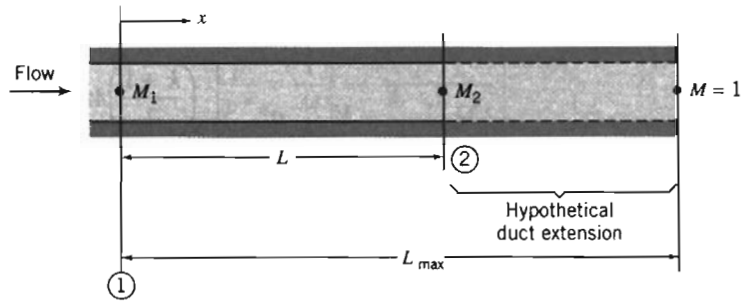


Fig. 12.13 Coordinates and notation used for analysis of Fanno-line flow.

The left side may be integrated by parts. On the right side, the friction factor,  $f$ , may vary with  $x$ , since Reynolds number will vary along the duct. Note, however, that since  $\rho V$  is constant along the duct (from continuity), the variation in Reynolds number is caused solely by variations in fluid absolute viscosity.

For a mean friction factor,  $\bar{f}$ , defined over the duct length as

$$\bar{f} = \frac{1}{L_{\max}} \int_0^{L_{\max}} f dx$$

integration of Eq. 12.20 leads to

$$\frac{1 - M^2}{kM^2} + \frac{k+1}{2k} \ln \left[ \frac{(k+1)M^2}{2 \left( 1 + \frac{k-1}{2} M^2 \right)} \right] = \frac{\bar{f} L_{\max}}{D_h} \quad (12.21a)$$

Equation 12.21a gives the maximum  $\bar{f}L/D_h$  corresponding to any initial Mach number.

Since  $\bar{f}L_{\max}/D_h$  is a function of  $M$ , the duct length,  $L$ , required for the Mach number to change from  $M_1$  to  $M_2$  (as illustrated in Fig. 12.13) may be found from

$$\frac{\bar{f}L}{D_h} = \left( \frac{\bar{f}L_{\max}}{D_h} \right)_{M_1} - \left( \frac{\bar{f}L_{\max}}{D_h} \right)_{M_2}$$

Critical conditions are appropriate reference conditions to use in developing property ratio flow functions in terms of local Mach number. Thus, for example, since  $T_0$  is constant, we can write

$$\frac{T}{T^*} = \frac{T/T_0}{T^*/T_0} = \frac{\left( \frac{k+1}{2} \right)}{\left( 1 + \frac{k-1}{2} M^2 \right)} \quad (12.21b)$$

Similarly,

$$\frac{V}{V^*} = \frac{M\sqrt{kRT}}{\sqrt{kRT^*}} = M\sqrt{\frac{T}{T^*}} = \left[ \frac{\left( \frac{k+1}{2} \right) M^2}{1 + \frac{k-1}{2} M^2} \right]^{1/2}$$

From continuity,  $V/V^* = \rho^*/\rho$ , so

$$\frac{V}{V^*} = \frac{\rho^*}{\rho} = \left[ \frac{\left(\frac{k+1}{2}\right) M^2}{1 + \frac{k-1}{2} M^2} \right]^{1/2} \quad (12.21c)$$

From the ideal gas equation of state,

$$\frac{p}{p^*} = \frac{\rho}{\rho^*} \frac{T}{T^*} = \frac{1}{M} \left[ \frac{\left(\frac{k+1}{2}\right)}{1 + \frac{k-1}{2} M^2} \right]^{1/2} \quad (12.21d)$$

The ratio of local stagnation pressure to the reference stagnation pressure is given by

$$\frac{p_0}{p_0^*} = \frac{p_0}{p} \frac{p}{p^*} \frac{p^*}{p_0^*}$$

$$\frac{p_0}{p_0^*} = \left(1 + \frac{k-1}{2} M^2\right)^{k/(k-1)} \frac{1}{M} \left[ \frac{\left(\frac{k+1}{2}\right)}{1 + \frac{k-1}{2} M^2} \right]^{1/2} \frac{1}{\left(\frac{k+1}{2}\right)^{k/(k-1)}}$$

or

$$\frac{p_0}{p_0^*} = \frac{1}{M} \left[ \left(\frac{2}{k+1}\right) \left(1 + \frac{k-1}{2} M^2\right) \right]^{(k+1)/2(k-1)} \quad (12.21e)$$

Equations 12.21 form a complete set for analyzing flow of an ideal gas in a duct with friction, which we usually use instead of (or in addition to) the basic equations, Eqs. 12.11. For convenience we list them together:

$$\frac{\bar{f} L_{\max}}{D_h} = \frac{1 - M^2}{kM^2} + \frac{k+1}{2k} \ln \left[ \frac{(k+1)M^2}{2\left(1 + \frac{k-1}{2} M^2\right)} \right] \quad (12.21a)$$

$$\frac{T}{T^*} = \frac{\left(\frac{k+1}{2}\right)}{\left(1 + \frac{k-1}{2} M^2\right)} \quad (12.21b)$$

$$\frac{V}{V^*} = \frac{\rho^*}{\rho} = \left[ \frac{\left(\frac{k+1}{2}\right) M^2}{1 + \frac{k-1}{2} M^2} \right]^{1/2} \quad (12.21c)$$

$$\frac{p}{p^*} = \frac{1}{M} \left[ \frac{\left( \frac{k+1}{2} \right)}{1 + \frac{k-1}{2} M^2} \right]^{1/2} \quad (12.21d)$$

$$\frac{p_0}{p_0^*} = \frac{1}{M} \left[ \left( \frac{2}{k+1} \right) \left( 1 + \frac{k-1}{2} M^2 \right) \right]^{(k+1)/2(k-1)} \quad (12.21e)$$


Equations 12.21, the Fanno-line relations, provide property relations in terms of the local Mach number and critical conditions. They are obviously quite algebraically complicated, but unlike Eqs. 12.11 are not coupled. It is a good idea to program them into your calculator. They are also fairly easy to define in spreadsheets such as *Excel*. It is important to remember that, as demonstrated in Fig. 11.3, the properties at a state, in any flow process, may be related to that state's isentropic stagnation properties through use of Eqs. 11.20. Appendix E-2 lists flow functions for property ratios  $p_0/p_0^*$ ,  $T/T^*$ ,  $p/p^*$ ,  $\rho/\rho^*$ ,  $(V^*/V)$ , and  $fL_{\max}/D_h$  in terms of  $M$  for Fanno-line flow of an ideal gas. A table of values, as well as a plot of these property ratios, is presented for air ( $k = 1.4$ ) for a limited range of Mach numbers. The associated *Excel* workbook, *Fanno-Line Relations*, can be used to print a larger table of values for air and other ideal gases.

### EXAMPLE 12.7 Frictional Adiabatic Flow in a Constant-Area Channel: Solution Using Fanno-Line Flow Functions

Air flow is induced in a smooth insulated tube of 7.16 mm diameter by a vacuum pump. Air is drawn from a room, where  $p_0 = 760$  mm Hg (abs) and  $T_0 = 23^\circ\text{C}$ , through a smoothly contoured converging nozzle. At section ①, where the nozzle joins the constant-area tube, the static pressure is  $-18.9$  mm Hg (gage). At section ②, located some distance downstream in the constant-area tube, the static pressure is  $-412$  mm Hg (gage). The duct walls are smooth; assume the average friction factor,  $f$ , is the value at section ①. Determine the length of duct required for choking from section ①, the Mach number at section ②, and the duct length,  $L_{12}$ , between sections ① and ②. Sketch the process on a  $Ts$  diagram.

#### EXAMPLE PROBLEM 12.7

**GIVEN:** Air flow (with friction) in an insulated constant-area tube.

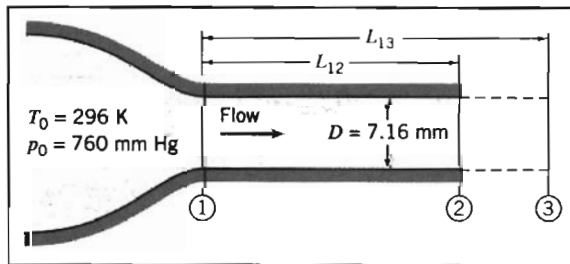

Gage pressures:  $p_1 = -18.9$  mm Hg, and  $p_2 = -412$  mm Hg.  $M_3 = 1.0$

**FIND:** (a)  $L_{13}$ . (b)  $M_2$ . (c)  $L_{12}$ . (d) Sketch the  $Ts$  diagram.

**SOLUTION:**

Flow in the constant-area tube is frictional and adiabatic, a Fanno-line flow. To find the friction factor, we need to know the flow conditions at section ①. If we assume flow in the nozzle is isentropic, local properties at the nozzle exit may be computed using isentropic relations. Thus

$$\frac{p_{01}}{p_1} = \left(1 + \frac{k-1}{2} M_1^2\right)^{k/(k-1)}$$

Solving for  $M_1$ , we obtain

$$M_1 = \left\{ \frac{2}{k-1} \left[ \left( \frac{p_{01}}{p_1} \right)^{(k-1)/k} - 1 \right] \right\}^{1/2} = \left\{ \frac{2}{0.4} \left[ \left( \frac{760}{760-18.9} \right)^{0.286} - 1 \right] \right\}^{1/2} = 0.190$$

$$T_1 = \frac{T_{01}}{1 + \frac{k-1}{2} M_1^2} = \frac{296 \text{ K}}{1 + 0.2(0.190)^2} = 294 \text{ K}$$

$$V_1 = M_1 c_1 = M_1 \sqrt{kRT_1} = 0.190 \left[ 1.4 \times \frac{287 \text{ N}\cdot\text{m}}{\text{kg}\cdot\text{K}} \times 294 \text{ K} \times \frac{\text{kg}\cdot\text{m}}{\text{N}\cdot\text{s}^2} \right]^{1/2}$$

$$V_1 = 65.3 \text{ m/s}$$

Using the density of mercury at room temperature (23°C),

$$p_1 = g \rho_{\text{Hg}} h_1 = g \text{ SG } \rho_{\text{H}_2\text{O}} h_1$$

$$= \frac{9.81 \text{ m}}{\text{s}^2} \times 13.5 \times \frac{1000 \text{ kg}}{\text{m}^3} \times (760 - 18.9) 10^{-3} \text{ m} \times \frac{\text{N}\cdot\text{s}^2}{\text{kg}\cdot\text{m}}$$

$$p_1 = 98.1 \text{ kPa (abs)}$$

$$\rho_1 = \frac{p_1}{RT_1} = \frac{9.81 \times 10^4}{287 \text{ N}\cdot\text{m}} \times \frac{\text{kg}\cdot\text{K}}{\text{N}\cdot\text{m}} \times \frac{1}{294 \text{ K}} = 1.16 \text{ kg/m}^3$$

At  $T = 294 \text{ K}$  (21°C),  $\mu = 1.82 \times 10^{-5} \text{ kg}/(\text{m}\cdot\text{s})$  from Table A.10, Appendix A. Thus

$$Re_1 = \frac{\rho_1 V_1 D_1}{\mu_1} = \frac{1.16 \text{ kg}}{\text{m}^3} \times \frac{65.3 \text{ m}}{\text{s}} \times \frac{0.00716 \text{ m}}{1.82 \times 10^{-5} \text{ kg}} \times \frac{\text{m}\cdot\text{s}}{\text{kg}} = 2.98 \times 10^4$$

From Eq. 8.37 (turbulent flow), for smooth pipe,  $f = 0.0235$ .

From Appendix E-2 at  $M_1 = 0.190$ ,  $p/p^* = 5.745$  (Eq. 12.21d), and  $\bar{f}L_{\text{max}}/D_h = 16.38$  (Eq. 12.21a). Thus, assuming  $\bar{f} = f_1$ ,

$$L_{13} = (L_{\text{max}})_1 = \left( \frac{\bar{f}L_{\text{max}}}{D_h} \right)_1 \frac{D_h}{f_1} = 16.38 \times \frac{0.00716 \text{ m}}{0.0235} = 4.99 \text{ m} \longleftarrow L_{13}$$


Since  $p^*$  is constant for all states on the same Fanno line, conditions at section ② can be determined from the pressure ratio,  $(p/p^*)_2$ . Thus

$$\left( \frac{p}{p^*} \right)_2 = \frac{p_2}{p^*} = \frac{p_2}{p_1} \frac{p_1}{p^*} = \frac{p_2}{p_1} \left( \frac{p}{p^*} \right)_1 = \left( \frac{760 - 412}{760 - 18.9} \right) 5.745 = 2.698$$

where we used Eq. 12.21d to obtain the value of  $p/p^*$  at section ①. For  $p/p^* = 2.698$  at section ②, Eq. 12.21d yields  $M_2 = 0.400$  (after obtaining an initial guess value from the plot in Appendix E-2, and iterating).

$$M_2 = 0.400 \longleftarrow M_2$$

The  $Ts$  diagram for this flow is

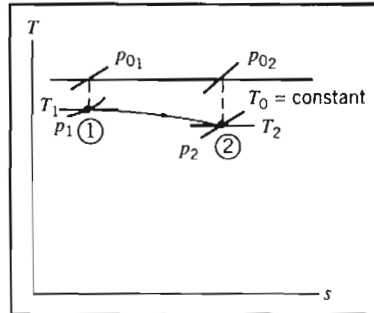

At  $M_2 = 0.400$ ,  $\bar{f}L_{\max}/D_h = 2.309$  (Eq. 12.21a, Appendix E-2). Thus


$$L_{23} = (L_{\max})_2 = \left( \frac{\bar{f}L_{\max}}{D_h} \right)_2 \frac{D_h}{f_1} = 2.309 \times \frac{0.00716 \text{ m}}{0.0235} = 0.704 \text{ m}$$

Finally,

$$L_{12} = L_{13} - L_{23} = (4.99 - 0.704) \text{ m} = 4.29 \text{ m} \longleftarrow L_{12}$$

This problem illustrates use of the Fanno-line equations, Eqs. 12.21.

- ✓ These equations give the same results as the basic equations, Eqs. 12.11, as can be seen by comparing, for example, the value of  $M_2$  obtained in this Example Problem and in Example Problem 12.6.
- ✓ The computations can be quite laborious without using preprogrammed Fanno-line relations!

 The *Excel* workbook for this Example Problem is convenient for performing the calculations, either using the Fanno-line relations or the basic equations.

### Isothermal Flow (CD-ROM)

## 12-4 FRICTIONLESS FLOW IN A CONSTANT-AREA DUCT WITH HEAT EXCHANGE

To explore the effects of heat exchange on a compressible flow, we apply the basic equations to steady, one-dimensional, frictionless flow of an ideal gas with constant specific heats through the finite control volume shown in Fig. 12.14.

As in Section 12-2 (effects of area variation only) and Section 12-3 (effects of friction only), our starting point in analyzing frictionless flows with heat exchange is the

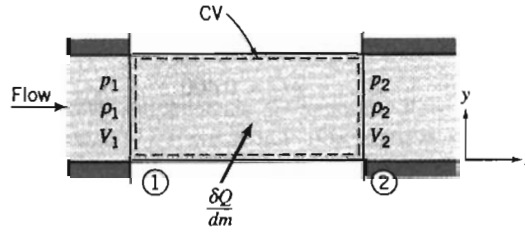


Fig. 12.14 Control volume used for integral analysis of frictionless flow with heat exchange.

set of basic equations (Eqs. 12.1), describing one-dimensional motion that is affected by several phenomena: area change, friction, heat transfer, and normal shocks. These are

$$\rho_1 V_1 A_1 = \rho_2 V_2 A_2 = \rho VA = \dot{m} = \text{constant} \quad (12.1a)$$

$$R_x + p_1 A_1 - p_2 A_2 = \dot{m} V_2 - \dot{m} V_1 \quad (12.1b)$$

$$\frac{\delta Q}{dm} + h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} \quad (12.1c)$$

$$\dot{m}(s_2 - s_1) \geq \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \quad (12.1d)$$

$$p = \rho RT \quad (12.1e)$$

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p (T_2 - T_1) \quad (12.1f)$$

$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (12.1g)$$

We recall that Eq. 12.1a is *continuity*, Eq. 12.1b is a *momentum equation*, Eq. 12.1c is an *energy equation*, Eq. 12.1d is the *second law of thermodynamics*, and Eqs. 12.1e, 12.1f, and 12.1g are useful *property relations* for an ideal gas with constant specific heats.

### Basic Equations for Flow with Heat Exchange

We simplify Eqs. 12.1 using the facts that  $A_1 = A_2 = A$  and that  $R_x = 0$ . In addition we have the relation  $h_0 = h + V^2/2$ . Equations 12.1 become for this flow

$$\rho_1 V_1 = \rho_2 V_2 = \rho VA \equiv G = \frac{\dot{m}}{A} = \text{constant} \quad (12.30a)$$

$$p_1 A - p_2 A = \dot{m} V_2 - \dot{m} V_1 \quad (12.30b)$$

$$\frac{\delta Q}{dm} = \left( h_2 + \frac{V_2^2}{2} \right) - \left( h_1 + \frac{V_1^2}{2} \right) = h_{02} - h_{01} \quad (12.30c)$$

$$\dot{m}(s_2 - s_1) \geq \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \quad (12.30d)$$

$$p = \rho RT \quad (12.30e)$$

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p (T_2 - T_1) \quad (12.30f)$$

$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (12.30g)$$

Note that Eq. 12.30c indicates that the heat exchange changes the total (kinetic plus internal) energy of the flow. Equation 12.30d is not very useful here. The inequality or equality may apply, depending on the nature of the heat exchange, but in any event we should *not* conclude that in this flow the entropy necessarily increases. For example, for a gradual cooling it will decrease!

Equations 12.30 can be used to analyze frictionless flow in a channel of constant area with heat exchange. For example, if we know conditions at section ① (i.e.,  $p_1$ ,  $\rho_1$ ,  $T_1$ ,  $s_1$ ,  $h_1$ , and  $V_1$ ) we can use these equations to find conditions at some new section ② after the fluid has experienced a total heat exchange  $\delta Q/dm$ . For a given heat exchange, we have six equations (not including the constraint of Eq. 12.30d) and six unknowns ( $p_2$ ,  $\rho_2$ ,  $T_2$ ,  $s_2$ ,  $h_2$ , and  $V_2$ ). It is the effect of heat exchange that causes fluid properties to change along the duct. In practice, as we have seen for other flows, this procedure is unwieldy—we again have a set of nonlinear coupled algebraic equations to solve. We will use Eqs. 12.30 in Example Problem 12.8. We will also develop some Mach number-based relations to supplement or replace the basic equations, and show how to use these in Example Problem 12.9.

### The Rayleigh Line

If we use Eqs. 12.30 to compute property values as a given flow proceeds with a prescribed heat exchange rate, we obtain a curve shown qualitatively in the  $Ts$  plane in Fig. 12.15. The locus of all possible downstream states is called the *Rayleigh line*. The calculations show some interesting features of Rayleigh-line flow. At the point of maximum temperature (point  $a$  of Fig. 12.15), the Mach number for an ideal gas is  $1/\sqrt{k}$ . At the point of maximum entropy (point  $b$  of Fig. 12.15),  $M = 1$ . On the upper branch of the curve, Mach number is always less than unity, and it increases monotonically as we proceed to the right along the curve. At every point on the lower portion of the curve, Mach number is greater than unity, and it decreases monotonically as we move to the right along the curve. Regardless of the initial Mach number, with heat addition the flow state proceeds to the right, and with heat rejection the flow state proceeds to the left along the Rayleigh line.

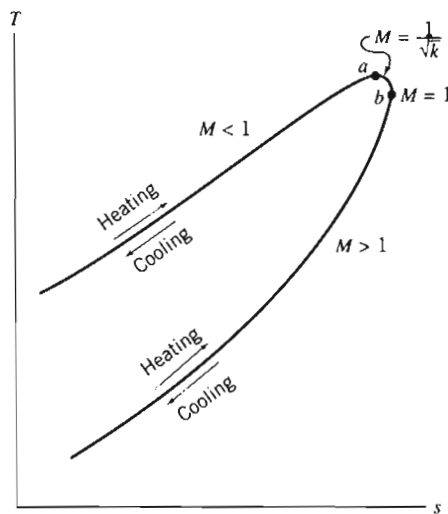


Fig. 12.15 Schematic  $Ts$  diagram for frictionless flow in a constant-area duct with heat exchange (Rayleigh-line flow).

For any initial state in a Rayleigh-line flow, any other point on the Rayleigh line represents a mathematically possible downstream state. Although the Rayleigh line represents all mathematically possible states, are they all physically attainable downstream states? A moment's reflection will indicate that they are. Since we are considering a flow with heat exchange, the second law (Eq. 12.30d) does not impose any restrictions on the sign of the entropy change.

The effects of heat exchange on properties in steady, frictionless, compressible flow of an ideal gas are summarized in Table 12.2; the basis of each indicated trend is discussed in the next few paragraphs.

The direction of entropy change is always determined by the heat exchange; entropy increases with heating and decreases with cooling. Similarly, the first law, Eq. 12.30c, shows that heating increases the stagnation enthalpy and cooling decreases it; since  $\Delta h_0 = c_p \Delta T_0$ , the effect on stagnation temperature is the same.

The effect of heating and cooling on temperature may be deduced from the shape of the Rayleigh line in Fig. 12.15. We see that except for the region  $1/\sqrt{k} < M < 1$  (for air,  $1/\sqrt{k} \approx 0.85$ ), heating causes  $T$  to increase, and cooling causes  $T$  to decrease. However, we also see the unexpected result that for  $1/\sqrt{k} < M < 1$ , *heat addition* causes the stream temperature to *decrease*, and *heat rejection* causes the stream temperature to *increase*!

**Table 12.2** Summary of Effects of Heat Exchange on Fluid Properties

Property	Heating		Cooling		Obtained from:
	$M < 1$	$M > 1$	$M < 1$	$M > 1$	
Entropy, $s$	Increase	Increase	Decrease	Decrease	$T ds$ equation
Stagnation temperature, $T_0$	Increase	Increase	Decrease	Decrease	First law, and $\Delta h_0 = c_p \Delta T_0$
Temperature, $T$	$\left(M < \frac{1}{\sqrt{k}}\right)$		$\left(M < \frac{1}{\sqrt{k}}\right)$		Shape of Rayleigh line
	Increase	Increase	Decrease	Decrease	
Mach number, $M$	$\left(\frac{1}{\sqrt{k}} < M < 1\right)$		$\left(\frac{1}{\sqrt{k}} < M < 1\right)$		Trend on Rayleigh line
	Decrease		Increase		
Pressure, $p$	Increase	Decrease	Decrease	Increase	Trend on Rayleigh line
Velocity, $V$	Decrease	Increase	Increase	Decrease	Trend on Rayleigh line
Density, $\rho$	Increase	Decrease	Decrease	Increase	Momentum equation, and effect on $p$
Stagnation pressure, $p_0$	Decrease	Increase	Increase	Decrease	Continuity equation, and effect on $V$
	Decrease	Decrease	Increase	Increase	Fig. 12.16



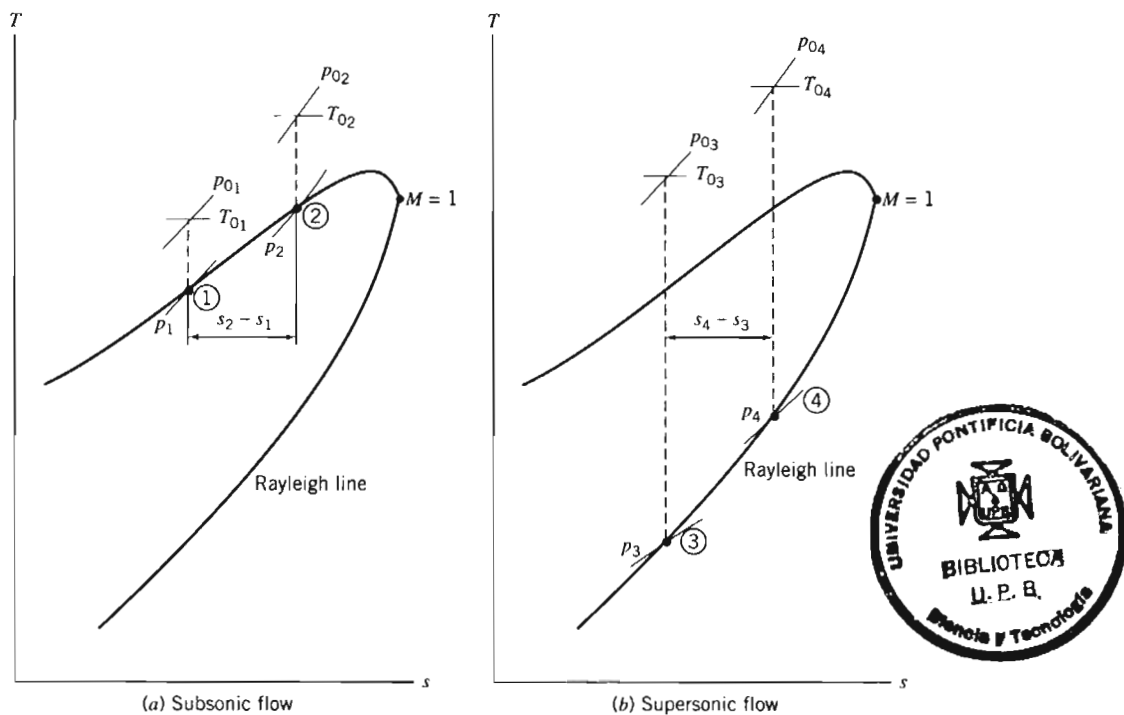


Fig. 12.16 Reduction in stagnation pressure due to heat addition for two flow cases.

For subsonic flow, the Mach number increases monotonically with heating, until  $M = 1$  is reached. For given inlet conditions, all possible downstream states lie on a single Rayleigh line. Therefore, the point  $M = 1$  determines the maximum possible heat addition without choking. If the flow is initially supersonic, heating will reduce the Mach number. Again, the maximum possible heat addition without choking is that which reduces the Mach number to  $M = 1.0$ .

The effect of heat exchange on static pressure is obtained from the shapes of the Rayleigh line and of constant-pressure lines on the  $Ts$  plane (see Fig. 12.16). For  $M < 1$ , pressure falls with heating, and for  $M > 1$ , pressure increases, as shown by the shapes of the constant-pressure lines. Once the pressure variation has been found, the effect on velocity may be found from the momentum equation,

$$p_1 A - p_2 A = \dot{m} V_2 - \dot{m} V_1 \quad (12.30b)$$

or

$$p + \left( \frac{\dot{m}}{A} \right) V = \text{constant}$$

Thus, since  $\dot{m}/A$  is a positive constant, trends in  $p$  and  $V$  must be opposite. From the continuity equation, Eq. 12.30a, the trend in  $\rho$  is opposite to that in  $V$ .

Local isentropic stagnation pressure always decreases with heating. This is illustrated schematically in Fig. 12.16. A reduction in stagnation pressure has obvious practical implications for heating processes, such as combustion chambers. Adding the same amount of energy per unit mass (same change in  $T_0$ ) causes a larger change

in  $p_0$  for supersonic flow; because heating occurs at a lower temperature in supersonic flow, the entropy increase is larger.

### EXAMPLE 12.8 Frictionless Flow in a Constant-Area Duct with Heat Addition


Air flows with negligible friction through a duct of area  $A = 0.25 \text{ ft}^2$ . At section ①, flow properties are  $T_1 = 600^\circ\text{R}$ ,  $p_1 = 20 \text{ psia}$ , and  $V_1 = 360 \text{ ft/s}$ . At section ②,  $p_2 = 10 \text{ psia}$ . The flow is heated between sections ① and ②. Determine the properties at section ②, the energy added, and the entropy change. Finally, plot the process on a  $Ts$  diagram.

#### EXAMPLE PROBLEM 12.8

**GIVEN:** Frictionless flow of air in duct shown:

$$\begin{aligned} T_1 &= 600^\circ\text{R} \\ p_1 &= 20 \text{ psia} & p_2 &= 10 \text{ psia} \\ V_1 &= 360 \text{ ft/s} & A_1 &= A_2 = A = 0.25 \text{ ft}^2 \end{aligned}$$

**FIND:** (a) Properties at section ②.  
(b)  $\delta Q/dm$ .  
(c)  $s_2 - s_1$ .  
(d)  $Ts$  diagram.

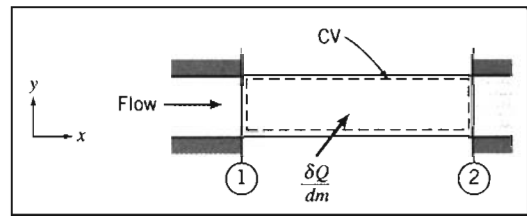

**SOLUTION:**

The momentum equation (Eq. 12.30b) is

$$p_1 A - p_2 A = \dot{m} V_2 - \dot{m} V_1 \quad (12.30b)$$

or

$$p_1 - p_2 = \frac{\dot{m}}{A} (V_2 - V_1) = \rho_1 V_1 (V_2 - V_1)$$

Solving for  $V_2$  gives

$$V_2 = \frac{p_1 - p_2}{\rho_1 V_1} + V_1$$

For an ideal gas, Eq. 12.30e,

$$\rho_1 = \frac{p_1}{RT_1} = \frac{20 \text{ lbf}}{\text{in.}^2} \times \frac{144 \text{ in.}^2}{\text{ft}^2} \times \frac{\text{lbm} \cdot ^\circ\text{R}}{53.3 \text{ ft} \cdot \text{lbf}} \times \frac{1}{600^\circ\text{R}} = 0.0901 \text{ lbm/ft}^3$$

$$V_2 = (20 - 10) \frac{\text{lbf}}{\text{in.}^2} \times \frac{144 \text{ in.}^2}{\text{ft}^2} \times \frac{\text{ft}^3}{0.0901 \text{ lbm}} \times \frac{\text{s}}{360 \text{ ft}} \times \frac{32.2 \text{ lbm}}{\text{slug}} \times \frac{\text{slug} \cdot \text{ft}}{\text{lbf} \cdot \text{s}^2} + \frac{360 \text{ ft}}{\text{s}}$$

$$V_2 = 1790 \text{ ft/s} \quad \leftarrow V_2$$

From continuity, Eq. 12.30a,  $G = \rho_1 V_1 = \rho_2 V_2$ , so

$$\rho_2 = \rho_1 \frac{V_1}{V_2} = 0.0901 \frac{\text{lbm}}{\text{ft}^3} \left( \frac{360}{1790} \right) = 0.0181 \text{ lbm/ft}^3 \quad \leftarrow \rho_2$$

Solving for  $T_2$ , we obtain

$$T_2 = \frac{p_2}{\rho_2 R} = \frac{10 \text{ lbf}}{\text{in.}^2} \times \frac{144 \text{ in.}^2}{\text{ft}^2} \times \frac{\text{ft}^3}{0.0181 \text{ lbfm}} \times \frac{\text{lbfm} \cdot \text{°R}}{53.3 \text{ ft} \cdot \text{lbf}} = 1490 \text{°R} \leftarrow T_2$$

The local isentropic stagnation temperature is given by 11.20b,

$$T_{0_2} = T_2 \left( 1 + \frac{k-1}{2} M_2^2 \right)$$

$$c_2 = \sqrt{kRT_2} = 1890 \text{ ft/s}; \quad M_2 = \frac{V_2}{c_2} = \frac{1790}{1890} = 0.947$$

$$T_{0_2} = 1490 \text{°R} [1 + 0.2(0.947)^2] = 1760 \text{°R} \leftarrow T_{0_2}$$

and

$$p_{0_2} = p_2 \left( \frac{T_{0_2}}{T_2} \right)^{k/(k-1)} = 10 \text{ psia} \left( \frac{1760}{1490} \right)^{3.5} = 17.9 \text{ psia} \leftarrow p_{0_2}$$

The heat addition is obtained from the energy equation (Eq. 12.30c),

$$\frac{\delta Q}{dm} = \left( h_2 + \frac{V_2^2}{2} \right) - \left( h_1 + \frac{V_1^2}{2} \right) = h_{0_2} - h_{0_1} \quad (12.30c)$$

or

$$\frac{\delta Q}{dm} = h_{0_2} - h_{0_1} = c_p(T_{0_2} - T_{0_1})$$

We already obtained  $T_{0_2}$ . For  $T_{0_1}$  we have

$$T_{0_1} = T_1 \left( 1 + \frac{k-1}{2} M_1^2 \right)$$

$$c_1 = \sqrt{kRT_1} = 1200 \text{ ft/s}; \quad M_1 = \frac{V_1}{c_1} = \frac{360}{1200} = 0.3$$

$$T_{0_1} = 600 \text{°R} [1 + 0.2(0.3)^2] = 611 \text{°R}$$

so

$$\frac{\delta Q}{dm} = \frac{0.240 \text{ Btu}}{\text{lbfm} \cdot \text{°R}} (1760 - 611) \text{°R} = 276 \text{ Btu/lbfm} \leftarrow \frac{\delta Q}{dm}$$

For the change in entropy (Eq. 12.30g),


$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} = c_p \ln \frac{T_2}{T_1} - (c_p - c_v) \ln \frac{p_2}{p_1} \quad (12.30g)$$

Then

$$s_2 - s_1 = \frac{0.240 \text{ Btu}}{\text{lbfm} \cdot \text{°R}} \times \ln \left( \frac{1490}{600} \right) - (0.240 - 0.171) \frac{\text{Btu}}{\text{lbfm} \cdot \text{°R}} \times \ln \left( \frac{10}{20} \right)$$

$$s_2 - s_1 = 0.266 \text{ Btu}/(\text{lbfm} \cdot \text{°R}) \leftarrow s_2 - s_1$$

The process follows a Rayleigh line:

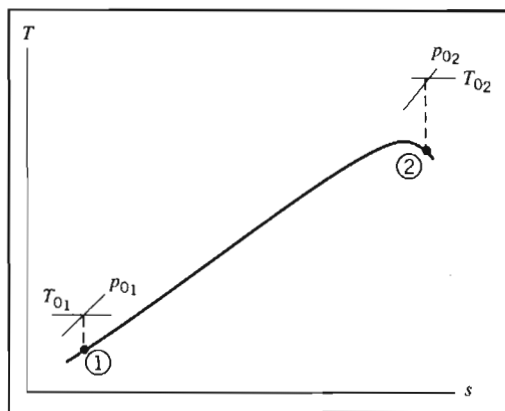

To complete our analysis, let us examine the change in  $p_0$  by comparing  $p_{02}$  with  $p_{01}$ .

$$p_{01} = p_1 \left( \frac{T_{01}}{T_1} \right)^{k/(k-1)} = 20.0 \text{ psia} \left( \frac{611}{600} \right)^{3.5} = 21.3 \text{ psia} \longleftarrow p_{01}$$

Comparing, we see that  $p_{02}$  is less than  $p_{01}$ .

This problem illustrates the use of the basic equations, Eqs. 12.30, for analyzing frictionless flow of an ideal gas in a duct with heat exchange.



The *Excel* workbook for this Example Problem is convenient for performing the calculations.

### Rayleigh-Line Flow Functions for One-Dimensional Flow of an Ideal Gas

Equations 12.30 are the basic equations for Rayleigh-line flow between two arbitrary states ① and ② in the flow. To reduce labor in solving problems, it is convenient to derive flow functions for property ratios in terms of local Mach number as we did for Fanno-line flow. The reference state is again taken as the critical condition where  $M = 1$ ; properties at the critical condition are denoted by (\*).

Dimensionless properties (such as  $p/p^*$  and  $T/T^*$ ) may be obtained by writing the basic equations between a point in the flow where properties are  $M$ ,  $T$ ,  $p$ , etc., and the critical state ( $M = 1$ , with properties denoted as  $T^*$ ,  $p^*$ , etc.).

The pressure ratio,  $p/p^*$ , may be obtained from the momentum equation, Eq. 12.30b,

$$pA - p^*A = \dot{m}V^* - \dot{m}V$$

or

$$p + \rho V^2 = p^* + p^*V^{*2}$$

Substituting  $\rho = p/RT$ , and factoring out pressures yields

$$p \left[ 1 + \frac{V^2}{RT} \right] = p^* \left[ 1 + \frac{V^{*2}}{RT^*} \right]$$

Noting that  $V^2/RT = k(V^2/kRT) = kM^2$ , we find

$$p[1 + kM^2] = p^* [1 + k]$$

and finally,

$$\frac{p}{p^*} = \frac{1 + k}{1 + kM^2} \quad (12.31a)$$

From the ideal gas equation of state,

$$\frac{T}{T^*} = \frac{p}{p^*} \frac{\rho^*}{\rho}$$

From the continuity equation, Eq. 12.30a,

$$\frac{\rho^*}{\rho} = \frac{V}{V^*} = M \frac{c}{c^*} = M \sqrt{\frac{T}{T^*}}$$

Then, substituting for  $\rho^*/\rho$ , we obtain

$$\frac{T}{T^*} = \frac{p}{p^*} M \sqrt{\frac{T}{T^*}}$$

Squaring and substituting from Eq. 12.31a gives

$$\frac{T}{T^*} = \left[ \frac{p}{p^*} M \right]^2 = \left[ M \left( \frac{1 + k}{1 + kM^2} \right) \right]^2 \quad (12.31b)$$

From continuity, using Eq. 12.31b,

$$\frac{\rho^*}{\rho} = \frac{V}{V^*} = \frac{M^2(1 + k)}{1 + kM^2} \quad (12.31c)$$

The dimensionless stagnation temperature,  $T_0/T_0^*$ , can be determined from

$$\begin{aligned} \frac{T_0}{T_0^*} &= \frac{T_0}{T} \frac{T}{T^*} \frac{T^*}{T_0^*} \\ &= \left( 1 + \frac{k-1}{2} M^2 \right) \left[ M \left( \frac{1+k}{1+kM^2} \right) \right]^2 \frac{1}{\left( \frac{k+1}{2} \right)} \\ \frac{T_0}{T_0^*} &= \frac{2(k+1)M^2 \left( 1 + \frac{k-1}{2} M^2 \right)}{(1+kM^2)^2} \end{aligned} \quad (12.31d)$$

Similarly,

$$\begin{aligned} \frac{p_0}{p_0^*} &= \frac{p_0}{p} \frac{p}{p^*} \frac{p^*}{p_0^*} \\ &= \left( 1 + \frac{k-1}{2} M^2 \right)^{k/(k-1)} \left( \frac{1+k}{1+kM^2} \right) \frac{1}{\left( \frac{k+1}{2} \right)^{k/(k-1)}} \\ \frac{p_0}{p_0^*} &= \frac{1+k}{1+kM^2} \left[ \left( \frac{2}{k+1} \right) \left( 1 + \frac{k-1}{2} M^2 \right) \right]^{k/(k-1)} \end{aligned} \quad (12.31e)$$

For convenience we collect together the equations:

$$\frac{p}{p^*} = \frac{1+k}{1+kM^2} \quad (12.31a)$$

$$\frac{T}{T^*} = \left[ M \left( \frac{1+k}{1+kM^2} \right) \right]^2 \quad (12.31b)$$

$$\frac{\rho^*}{\rho} = \frac{V}{V^*} = \frac{M^2(1+k)}{1+kM^2} \quad (12.31c)$$

$$\frac{T_0}{T_0^*} = \frac{2(k+1)M^2 \left( 1 + \frac{k-1}{2} M^2 \right)}{(1+kM^2)^2} \quad (12.31d)$$

$$\frac{p_0}{p_0^*} = \frac{1+k}{1+kM^2} \left[ \left( \frac{2}{k+1} \right) \left( 1 + \frac{k-1}{2} M^2 \right) \right]^{k/k-1} \quad (12.31e)$$

Equations 12.31, the Rayleigh-line relations, provide property ratios in terms of the local Mach number and critical conditions. They are obviously complicated, but can be programmed into your calculator. They are also fairly easy to define in spreadsheets such as *Excel*. In Example Problem 12.9 we will explore their use. Appendix E-3 lists flow functions for property ratios  $T_0/T_0^*$ ,  $p_0/p_0^*$ ,  $T/T^*$ ,  $p/p^*$ , and  $\rho^*/\rho$  ( $V/V^*$ ), in terms of  $M$  for Rayleigh-line flow of an ideal gas. A table of values, as well as a plot of these property ratios, is presented for air ( $k = 1.4$ ) for a limited range of Mach numbers. The associated *Excel* workbook, *Rayleigh-Line Relations*, can be used to print a larger table of values for air and other ideal gases.


### EXAMPLE 12.9 Frictionless Flow in a Constant-Area Duct with Heat Addition: Solution Using Rayleigh-Line Flow Functions

Air flows with negligible friction in a constant-area duct. At section ①, properties are  $T_1 = 60^\circ\text{C}$ ,  $p_1 = 135 \text{ kPa (abs)}$ , and  $V_1 = 732 \text{ m/s}$ . Heat is added between section ① and section ②, where  $M_2 = 1.2$ . Determine the properties at section ②, the heat exchange per unit mass, and the entropy change, and sketch the process on a  $Ts$  diagram.

#### EXAMPLE PROBLEM 12.9

**GIVEN:** Frictionless flow of air as shown:  
 $T_1 = 333 \text{ K}$                        $M_2 = 1.2$   
 $p_1 = 135 \text{ kPa (abs)}$   
 $V_1 = 732 \text{ m/s}$

**FIND:** (a) Properties at section ②.  
 (b)  $\delta Q/dm$ .  
 (c)  $s_2 - s_1$ .  
 (d)  $Ts$  diagram.

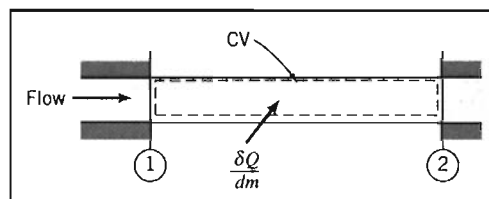

**SOLUTION:**

To obtain property ratios, we need both Mach numbers.

$$c_1 = \sqrt{kRT_1} = \left[ 1.4 \times \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 333 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \right]^{1/2} = 366 \text{ m/s}$$

$$M_1 = \frac{V_1}{c_1} = \frac{732 \text{ m}}{366 \text{ m}} \times \frac{\text{s}}{\text{s}} = 2.00$$

From the Rayleigh-line flow functions of Appendix E-3 we find the following:

$M$	$T_0/T_0^*$	$p_0/p_0^*$	$T/T^*$	$p/p^*$	$V/V^*$
2.00	0.7934	1.503	0.5289	0.3636	1.455
1.20	0.9787	1.019	0.9119	0.7958	1.146

Using these data and recognizing that critical properties are constant, we obtain

$$\frac{T_2}{T_1} = \frac{T_2/T^*}{T_1/T^*} = \frac{0.9119}{0.5289} = 1.72; \quad T_2 = 1.72T_1 = (1.72)333 \text{ K} = 573 \text{ K} \quad \leftarrow T_2$$

$$\frac{p_2}{p_1} = \frac{p_2/p^*}{p_1/p^*} = \frac{0.7958}{0.3636} = 2.19; \quad p_2 = 2.19p_1 = (2.19)135 \text{ kPa}$$

$$p_2 = 296 \text{ kPa (abs)} \quad \leftarrow p_2$$

$$\frac{V_2}{V_1} = \frac{V_2/V^*}{V_1/V^*} = \frac{1.146}{1.455} = 0.788; \quad V_2 = 0.788V_1 = (0.788)732 \text{ m/s}$$

$$V_2 = 577 \text{ m/s} \quad \leftarrow V_2$$

$$\rho_2 = \frac{p_2}{RT_2} = \frac{2.96 \times 10^5 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{573 \text{ K}} = 1.80 \text{ kg/m}^3 \quad \leftarrow \rho_2$$

The heat addition may be determined from the energy equation, Eq. 12.30c, which reduces to (see Example Problem 12.8)

$$\frac{\delta Q}{dm} = h_{0_2} - h_{0_1} = c_p(T_{0_2} - T_{0_1})$$

From the isentropic-stagnation functions (Eq. 11.20b) at  $M = 2.0$ ,

$$\frac{T}{T_0} = \frac{T_1}{T_{0_1}} = 0.5556; \quad T_{0_1} = \frac{T_1}{0.5556} = \frac{333 \text{ K}}{0.5556} = 599 \text{ K}$$

and at  $M = 1.2$ ,

$$\frac{T}{T_0} = \frac{T_2}{T_{0_2}} = 0.7764; \quad T_{0_2} = \frac{T_2}{0.7764} = \frac{573 \text{ K}}{0.7764} = 738 \text{ K} \quad \leftarrow T_{0_2}$$

Substituting gives

$$\frac{\delta Q}{dm} = c_p(T_{0_2} - T_{0_1}) = 1.00 \frac{\text{kJ}}{\text{kg} \cdot \text{K}} \times (738 - 599) \text{ K} = 139 \text{ kJ/kg} \quad \leftarrow \frac{\delta Q}{dm}$$

For the change in entropy (Eq. 12.30g),

$$\begin{aligned} s_2 - s_1 &= c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \\ &= 1.00 \frac{\text{kJ}}{\text{kg} \cdot \text{K}} \times \ln \left( \frac{573}{333} \right) - \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times \ln \left( \frac{2.96 \times 10^5}{1.35 \times 10^5} \right) \times \frac{\text{kJ}}{1000 \text{ N} \cdot \text{m}} \\ s_2 - s_1 &= 0.317 \text{ kJ}/(\text{kg} \cdot \text{K}) \end{aligned}$$

Finally, check the effect on  $p_0$ . From the isentropic-stagnation function (Eq. 11.20a), at  $M = 2.0$ ,


$$\frac{p}{p_0} = \frac{p_1}{p_{01}} = 0.1278; \quad p_{01} = \frac{p_1}{0.1278} = \frac{135 \text{ kPa}}{0.1278} = 1.06 \text{ MPa (abs)}$$

and at  $M = 1.2$ ,

$$\frac{p}{p_0} = \frac{p_2}{p_{02}} = 0.4124; \quad p_{02} = \frac{p_2}{0.4124} = \frac{296 \text{ kPa}}{0.4124} = 718 \text{ kPa (abs)}$$

Thus,  $p_{02} < p_{01}$ , as expected for a heating process.

The process follows the supersonic branch of a Rayleigh line:

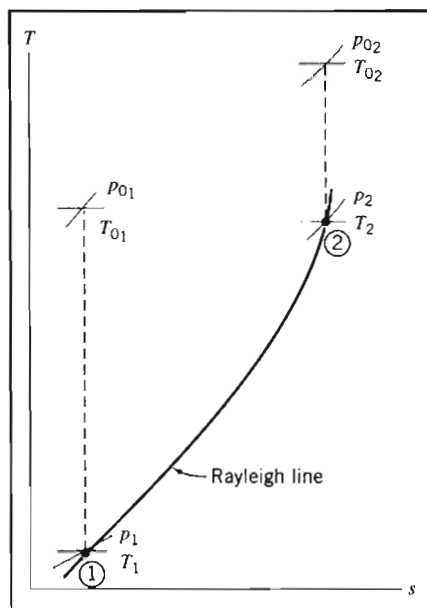

This problem illustrates the use of the Rayleigh-line equations, Eqs. 12.31, for analyzing frictionless flow of an ideal gas in a duct with heat exchange.



The *Excel* workbook for this Example Problem is convenient for performing the calculations.



## 12-5 NORMAL SHOCKS

We have previously mentioned normal shocks in the section on nozzle flow. In practice, these irreversible discontinuities can occur in any supersonic flow field, in either internal flow or external flow.<sup>1</sup> Knowledge of property changes across shocks and of shock behavior is important in understanding the design of supersonic diffusers, e.g., for inlets on high performance aircraft, and supersonic wind tunnels. Accordingly, the purpose of this section is to analyze the normal shock process.

Before applying the basic equations to normal shocks, it is important to form a clear physical picture of the shock itself. Although it is physically impossible to have discontinuities in fluid properties, the normal shock is nearly discontinuous. The thickness of a shock is about  $0.2 \mu\text{m}$  ( $10^{-5}$  in.), or roughly 4 times the mean free path of the gas molecules [3]. Large changes in pressure, temperature, and other properties occur across this small distance. Local fluid decelerations reach tens of millions of  $g$ s! These considerations justify treating the normal shock as an abrupt discontinuity; we are interested in changes occurring across the shock rather than in the details of its structure.

Consider the short control volume surrounding a normal shock standing in a passage of arbitrary shape shown in Fig. 12.17. You may be exhausted by this procedure by now, but as for isentropic flow with area variation (Section 12-2), frictional flow (Section 12-3), and flow with heat exchange (Section 12-4), our starting point in analyzing this normal shock is the set of basic equations (Eqs. 12.1), describing one-dimensional motion that may be affected by several phenomena: area change, friction, and heat transfer. These are

$$\rho_1 V_1 A_1 = \rho_2 V_2 A_2 = \rho V A = \dot{m} = \text{constant} \quad (12.1a)$$

$$R_x + p_1 A_1 - p_2 A_2 = \dot{m} V_2 - \dot{m} V_1 \quad (12.1b)$$

$$\frac{\delta Q}{dm} + h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} \quad (12.1c)$$

$$\dot{m}(s_2 - s_1) \geq \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \quad (12.1d)$$

$$p = \rho R T \quad (12.1e)$$

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p (T_2 - T_1) \quad (12.1f)$$

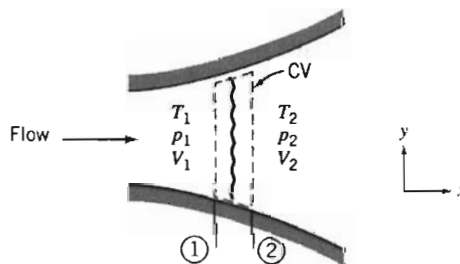


Fig. 12.17 Control volume used for analysis of normal shock.

<sup>1</sup> The NCFMF video *Channel Flow of a Compressible Fluid* shows several examples of shock formation in internal flow.

$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (12.1g)$$

We recall that Equation 12.1a is *continuity*, Eq. 12.1b is a *momentum equation*, Eq. 12.1c is an *energy equation*, Eq. 12.1d is the *second law of thermodynamics*, and Eqs. 12.1e, 12.1f, and 12.1g are useful *property relations* for an ideal gas with constant specific heats.

We must simplify these equations for flow through a normal shock.

### Basic Equations for a Normal Shock

We can now simplify Eqs. 12.1 for flow of an ideal gas with constant specific heats through a normal shock. The most important simplifying feature is that the width of the control volume is infinitesimal (in reality about  $0.2 \mu\text{m}$  as we indicated), so  $A_1 \approx A_2 \approx A$ , the force due to the walls  $R_x \approx 0$  (because the control volume wall surface area is infinitesimal), and the heat exchange with the walls  $\delta Q/dm \approx 0$ , for the same reason. Hence, for this flow our equations become

$$\rho_1 V_1 = \rho_2 V_2 = \frac{\dot{m}}{A} = \text{constant} \quad (12.32a)$$

$$p_1 A - p_2 A = \dot{m} V_2 - \dot{m} V_1$$

or, using Eq. 12.32a,

$$p_1 + \rho_1 V_1^2 = p_2 + \rho_2 V_2^2 \quad (12.32b)$$

$$h_{01} = h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2} = h_{02} \quad (12.32c)$$

$$s_2 > s_1 \quad (12.32d)$$

$$p = \rho RT \quad (12.32e)$$

$$\Delta h = h_2 - h_1 = c_p \Delta T = c_p (T_2 - T_1) \quad (12.32f)$$

$$\Delta s = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} \quad (12.32g)$$

Equations 12.32 can be used to analyze flow through a normal shock. For example, if we know conditions before the shock, at section ①, (i.e.,  $p_1$ ,  $\rho_1$ ,  $T_1$ ,  $s_1$ ,  $h_1$ , and  $V_1$ ), we can use these equations to find conditions after the shock, at section ②. We have six equations (not including the constraint of Eq. 12.32d) and six unknowns ( $p_2$ ,  $\rho_2$ ,  $T_2$ ,  $s_2$ ,  $h_2$ , and  $V_2$ ). Hence, for given upstream conditions there is a single unique downstream state. In practice this procedure is unwieldy—as we have seen in earlier sections, we have a set of nonlinear coupled algebraic equations to solve.


We can certainly use these equations for analyzing normal shocks, but we will usually find it more useful to develop normal shock functions based on  $M_1$ , the upstream Mach number. Before doing this, let us consider the set of equations. We have repeatedly stated in this chapter that changes in a one-dimensional flow can be caused by area variation, friction, or heat transfer, but in deriving Eqs. 12.32 we have eliminated all three causes! In this case, then, what is causing the flow to change? Perhaps there are no changes through a normal shock! Indeed, if we examine each of these

equations we see that each one is satisfied—has a possible “solution”—if all properties at location ② are equal to the corresponding properties at location ① (e.g.,  $p_2 = p_1$ ,  $T_2 = T_1$ ) *except* for Eq. 12.32d, which expresses the second law of thermodynamics. Nature is telling us that in the absence of area change, friction, and heat transfer, flow properties will not change *except* in a very abrupt, irreversible manner, for which the entropy increases. In fact, all properties *except*  $T_0$  *do* change through the shock. We must find a solution in which *all* of Eqs. 12.32 are satisfied. (Incidentally, because all the equations except Eq. 12.32d are satisfied by  $p_2 = p_1$ ,  $T_2 = T_1$ , and so on, numerical searching methods such as *Excel's Solver* have some difficulty in finding the correct solution!)

Further insight into the equations governing a normal shock, Eqs. 12.32, can be had by recalling our discussion of Fanno-line (friction) and Rayleigh-line (heat exchange) curves. Since all conditions at state ① are known, we can locate state ① on a  $Ts$  diagram. If we were to draw a Fanno-line curve through state ①, we would have a locus of mathematical states that satisfy Eqs. 12.32a and 12.32c through 12.32g. (The Fanno-line does not satisfy Eq. 12.32b, which assumes no friction force.) Drawing a Rayleigh-line curve through state ① gives a locus of mathematical states that satisfy Eqs. 12.32a, 12.32b, and 12.32d through 12.32g. (The Rayleigh-line does not satisfy Eq. 12.32c, which assumes no heat exchange.) These curves are shown in Fig. 12.18.

The normal shock must satisfy all seven of Eqs. 12.32a through 12.32g. Consequently, for a given state ①, the end state (state ②) of the normal shock must lie on both the Fanno line and the Rayleigh line passing through state ①. Hence, the intersection of the two lines at state ② represents conditions downstream from the shock, corresponding to upstream conditions at state ①. In Fig. 12.18, flow through the shock has been indicated as occurring from state ① to state ②. This is the only possible direction of the shock process, as dictated by the second law ( $s_2 > s_1$ ).

From Fig. 12.18 we note also that flow through a normal shock involves a change from supersonic to subsonic speeds. Normal shocks can occur only in flow that is initially supersonic.

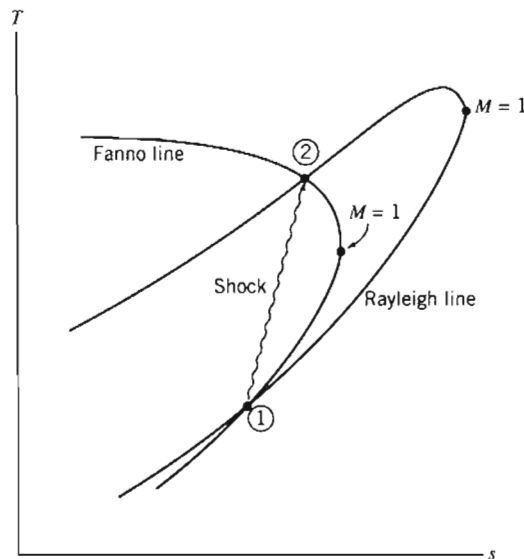

**Fig. 12.18** Intersection of Fanno line and Rayleigh line as a solution of the normal-shock equations.



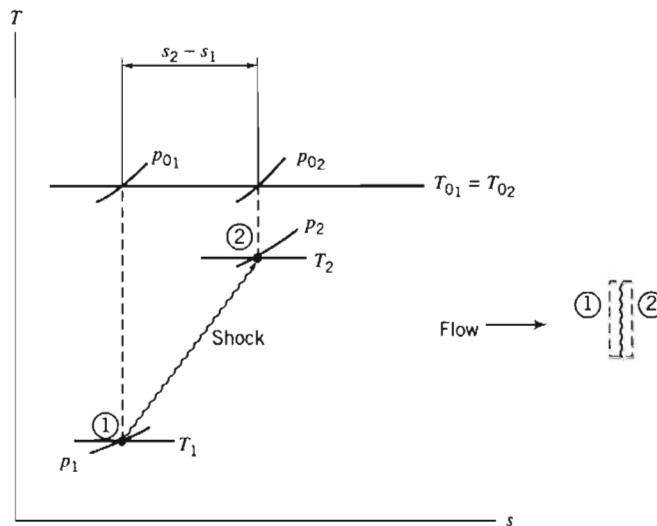


Fig. 12.19 Schematic of normal-shock process on the  $Ts$  plane.

As an aid in summarizing the effects of a normal shock on the flow properties, a schematic of the normal-shock process is illustrated on the  $Ts$  plane of Fig. 12.19. This figure, together with the governing basic equations, is the basis for Table 12.3. You should follow through the logic indicated in the table.

Note the parallel between normal shocks (Table 12.3) and supersonic flow with friction (Table 12.1). Both represent irreversible processes in supersonic flow, and all properties change in the same directions.

### Normal-Shock Flow Functions for One-Dimensional Flow of an Ideal Gas

We have mentioned that the basic equations, Eqs. 12.32, can be used to analyze flows that experience a normal shock. As in previous flows, it is often more convenient to use Mach number-based equations, in this case based on the incoming Mach number,  $M_1$ . This involves three steps: First, we obtain property ratios (e.g.,  $T_2/T_1$  and  $p_2/p_1$ ) in terms of  $M_1$  and  $M_2$ , then we develop a relation between  $M_1$  and  $M_2$ , and finally, we use this relation to obtain expressions for property ratios in terms of upstream Mach number,  $M_1$ .

Table 12.3 Summary of Property Changes across a Normal Shock

Property	Effect	Obtained from:
Stagnation temperature, $T_0$	Constant	Energy equation
Entropy, $s$	Increase	Second law
Stagnation pressure, $p_0$	Decrease	$Ts$ diagram
Temperature, $T$	Increase	$Ts$ diagram
Velocity, $V$	Decrease	Energy equation, and effect on $T$
Density, $\rho$	Increase	Continuity equation, and effect on $V$
Pressure, $p$	Increase	Momentum equation, and effect on $V$
Mach number, $M$	Decrease	$M = V/c$ , and effects on $V$ and $T$

The temperature ratio can be expressed as

$$\frac{T_2}{T_1} = \frac{T_2}{T_{0_2}} \frac{T_{0_2}}{T_{0_1}} \frac{T_{0_1}}{T_1}$$

Since stagnation temperature is constant across the shock, we have

$$\frac{T_2}{T_1} = \frac{1 + \frac{k-1}{2} M_1^2}{1 + \frac{k-1}{2} M_2^2} \quad (12.33)$$

A velocity ratio may be obtained by using

$$\frac{V_2}{V_1} = \frac{M_2 c_2}{M_1 c_1} = \frac{M_2}{M_1} \frac{\sqrt{kRT_2}}{\sqrt{kRT_1}} = \frac{M_2}{M_1} \sqrt{\frac{T_2}{T_1}}$$

or

$$\frac{V_2}{V_1} = \frac{M_2}{M_1} \left[ \frac{1 + \frac{k-1}{2} M_1^2}{1 + \frac{k-1}{2} M_2^2} \right]^{1/2}$$

A ratio of densities may be obtained from the continuity equation

$$\rho_1 V_1 = \rho_2 V_2 \quad (12.32a)$$

so that

$$\frac{\rho_2}{\rho_1} = \frac{V_1}{V_2} = \frac{M_1}{M_2} \left[ \frac{1 + \frac{k-1}{2} M_2^2}{1 + \frac{k-1}{2} M_1^2} \right]^{1/2} \quad (12.34)$$

Finally, we have the momentum equation,

$$p_1 + \rho_1 V_1^2 = p_2 + \rho_2 V_2^2 \quad (12.32b)$$

Substituting  $\rho = p/RT$ , and factoring out pressures, gives

$$p_1 \left[ 1 + \frac{V_1^2}{RT_1} \right] = p_2 \left[ 1 + \frac{V_2^2}{RT_2} \right]$$

Since

$$\frac{V^2}{RT} = k \frac{V^2}{kRT} = kM^2$$

then

$$p_1 [1 + kM_1^2] = p_2 [1 + kM_2^2]$$

Finally,

$$\frac{p_2}{p_1} = \frac{1 + kM_1^2}{1 + kM_2^2} \quad (12.35)$$

To solve for  $M_2$  in terms of  $M_1$ , we must obtain another expression for one of the property ratios given by Eqs. 12.33 through 12.35.

From the ideal gas equation of state, the temperature ratio may be written as

$$\frac{T_2}{T_1} = \frac{p_2/\rho_2 R}{p_1/\rho_1 R} = \frac{p_2}{p_1} \frac{\rho_1}{\rho_2}$$

Substituting from Eqs. 12.34 and 12.35 yields

$$\frac{T_2}{T_1} = \left[ \frac{1 + kM_1^2}{1 + kM_2^2} \right] \frac{M_2}{M_1} \left[ \frac{1 + \frac{k-1}{2} M_1^2}{1 + \frac{k-1}{2} M_2^2} \right]^{1/2} \quad (12.36)$$

Equations 12.33 and 12.36 are two equations for  $T_2/T_1$ . We can combine them and solve for  $M_2$  in terms of  $M_1$ . Combining and canceling gives

$$\left[ \frac{1 + \frac{k-1}{2} M_1^2}{1 + \frac{k-1}{2} M_2^2} \right]^{1/2} = \frac{M_2}{M_1} \left[ \frac{1 + kM_1^2}{1 + kM_2^2} \right]$$

Squaring, we obtain

$$\frac{1 + \frac{k-1}{2} M_1^2}{1 + \frac{k-1}{2} M_2^2} = \frac{M_2^2}{M_1^2} \left[ \frac{1 + 2kM_1^2 + k^2 M_1^4}{1 + 2kM_2^2 + k^2 M_2^4} \right]$$

which may be solved explicitly for  $M_2^2$ . Two solutions are obtained:

$$M_2^2 = M_1^2 \quad (12.37a)$$

and

$$M_2^2 = \frac{M_1^2 + \frac{2}{k-1}}{\frac{2k}{k-1} M_1^2 - 1} \quad (12.37b)$$

Obviously, the first of these is trivial. The second expresses the unique dependence of  $M_2$  on  $M_1$ .

Now, having a relationship between  $M_2$  and  $M_1$ , we can solve for property ratios across a shock. Knowing  $M_1$ , we obtain  $M_2$  from Eq. 12.37b; the property ratios can be determined subsequently from Eqs. 12.33 through 12.35.

Since the stagnation temperature remains constant, the stagnation temperature ratio across the shock is unity. The ratio of stagnation pressures is evaluated as

$$\frac{p_{0_2}}{p_{0_1}} = \frac{p_{0_2}}{p_2} \frac{p_2}{p_1} \frac{p_1}{p_{0_1}} = \frac{p_2}{p_1} \left[ \frac{1 + \frac{k-1}{2} M_2^2}{1 + \frac{k-1}{2} M_1^2} \right]^{k/(k-1)} \quad (12.38)$$

Combining Eqs. 12.35 and 12.37b, we obtain (after considerable algebra)

$$\frac{p_2}{p_1} = \frac{1 + kM_1^2}{1 + kM_2^2} = \frac{2k}{k+1} M_1^2 - \frac{k-1}{k+1} \quad (12.39)$$

Using Eqs. 12.37b and 12.39, we find that Eq. 12.38 becomes

$$\frac{p_{0_2}}{p_{0_1}} = \frac{\left[ \frac{\frac{k+1}{2} M_1^2}{1 + \frac{k-1}{2} M_1^2} \right]^{k/(k-1)}}{\left[ \frac{2k}{k+1} M_1^2 - \frac{k-1}{k+1} \right]^{1/(k-1)}} \quad (12.40)$$

After substituting for  $M_2^2$  from Eq. 12.37b into Eqs. 12.33 and 12.34, we summarize the set of Mach number-based equations (renumbered for convenience) for use with an ideal gas passing through a normal shock:

$$M_2^2 = \frac{M_1^2 + \frac{2}{k-1}}{\frac{2k}{k-1} M_1^2 - 1} \quad (12.41a)$$

$$\frac{p_{0_2}}{p_{0_1}} = \frac{\left[ \frac{\frac{k+1}{2} M_1^2}{1 + \frac{k-1}{2} M_1^2} \right]^{k/(k-1)}}{\left[ \frac{2k}{k+1} M_1^2 - \frac{k-1}{k+1} \right]^{1/(k-1)}} \quad (12.41b)$$

$$\frac{T_2}{T_1} = \frac{\left(1 + \frac{k-1}{2} M_1^2\right) \left(k M_1^2 - \frac{k-1}{2}\right)}{\left(\frac{k+1}{2}\right)^2 M_1^2} \quad (12.41c)$$

$$\frac{p_2}{p_1} = \frac{2k}{k+1} M_1^2 - \frac{k-1}{k+1} \quad (12.41d)$$

$$\frac{\rho_2}{\rho_1} = \frac{V_1}{V_2} = \frac{\frac{k+1}{2} M_1^2}{1 + \frac{k-1}{2} M_1^2} \quad (12.41e)$$

Equations 12.41, while quite complex algebraically, provide explicit property relations in terms of the incoming Mach number,  $M_1$ . They are so useful that some calculators have some of them built in (e.g., the *HP 48G* series [1]); it is a good idea to program them if your calculator does not already have them. There are also interactive web sites that make them available (see, e.g., [2]), and they are fairly easy to define in spreadsheets such as *Excel*. Appendix E-4 lists flow functions for  $M_2$  and property ratios  $p_{0_2}/p_{0_1}$ ,  $T_2/T_1$ ,  $p_2/p_1$ , and  $\rho_2/\rho_1$  ( $V_1/V_2$ ) in terms of  $M_1$  for normal-shock flow of an ideal gas. A table of values, as well as a plot of these property ratios, is presented for air ( $k = 1.4$ ) for a limited range of Mach numbers. The associated *Excel* workbook, *Normal-Shock Relations*, can be used to print a larger table of values for air and other ideal gases.

A problem involving a normal shock is solved in Example Problem 12.10.

**EXAMPLE 12.10 Normal Shock in a Duct**


A normal shock stands in a duct. The fluid is air, which may be considered an ideal gas. Properties upstream from the shock are  $T_1 = 5^\circ\text{C}$ ,  $p_1 = 65.0\text{ kPa (abs)}$ , and  $V_1 = 668\text{ m/s}$ . Determine properties downstream and  $s_2 - s_1$ . Sketch the process on a  $Ts$  diagram.

**EXAMPLE PROBLEM 12.10**

**GIVEN:** Normal shock in a duct as shown:

$$\begin{aligned} T_1 &= 5^\circ\text{C} \\ p_1 &= 65.0\text{ kPa (abs)} \\ V_1 &= 668\text{ m/s} \end{aligned}$$

**FIND:** (a) Properties at section ②.  
(b)  $s_2 - s_1$ .  
(c)  $Ts$  diagram.

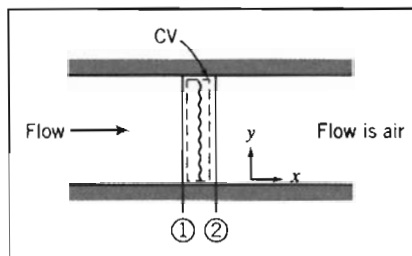**SOLUTION:**

First compute the remaining properties at section ①. For an ideal gas,

$$\rho_1 = \frac{p_1}{RT_1} = \frac{6.5 \times 10^4 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{278 \text{ K}} = 0.815 \text{ kg/m}^3$$

$$c_1 = \sqrt{kRT_1} = \left[ 1.4 \times 287 \frac{\text{N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 278 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} \right]^{1/2} = 334 \text{ m/s}$$

Then

$$M_1 = \frac{V_1}{c_1} = \frac{668}{334} = 2.00, \text{ and (using isentropic stagnation relations, Eqs. 11.20b and 11.20a)}$$

$$T_{01} = T_1 \left( 1 + \frac{k-1}{2} M_1^2 \right) = 278 \text{ K} \left[ 1 + 0.2(2.0)^2 \right] = 500 \text{ K}$$

$$p_{01} = p_1 \left( 1 + \frac{k-1}{2} M_1^2 \right)^{k/(k-1)} = 65.0 \text{ kPa} \left[ 1 + 0.2(2.0)^2 \right]^{3.5} = 509 \text{ kPa (abs)}$$

From the normal-shock flow functions, Eqs. 12.41, at  $M_1 = 2.0$ ,

$M_1$	$M_2$	$p_{02}/p_{01}$	$T_2/T_1$	$p_2/p_1$	$V_2/V_1$
2.00	0.5774	0.7209	1.687	4.500	0.3750

From these data

$$T_2 = 1.687T_1 = (1.687)278 \text{ K} = 469 \text{ K} \quad \leftarrow T_2$$

$$p_2 = 4.500p_1 = (4.500)65.0 \text{ kPa} = 293 \text{ kPa (abs)} \quad \leftarrow p_2$$

$$V_2 = 0.3750V_1 = (0.3750)668 \text{ m/s} = 251 \text{ m/s} \quad \leftarrow V_2$$



For an ideal gas,

$$\rho_2 = \frac{p_2}{RT_2} = \frac{2.93 \times 10^5 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{469 \text{ K}} = 2.18 \text{ kg/m}^3 \leftarrow \rho_2$$

Stagnation temperature is constant in adiabatic flow. Thus

$$T_{0_2} = T_{0_1} = 500 \text{ K} \leftarrow T_{0_2}$$

Using the property ratios for a normal shock, we obtain

$$p_{0_2} = p_{0_1} \frac{p_{0_2}}{p_{0_1}} = 509 \text{ kPa} (0.7209) = 367 \text{ kPa (abs)} \leftarrow p_{0_2}$$

For the change in entropy (Eq. 12.32g),


$$s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1}$$

But  $s_{0_2} - s_{0_1} = s_2 - s_1$ , so

$$s_{0_2} - s_{0_1} = s_2 - s_1 = c_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1} = -0.287 \frac{\text{kJ}}{\text{kg} \cdot \text{K}} \times \ln(0.7209)$$

$$s_2 - s_1 = 0.0939 \text{ kJ/(kg} \cdot \text{K)} \leftarrow s_2 - s_1$$

The  $Ts$  diagram is

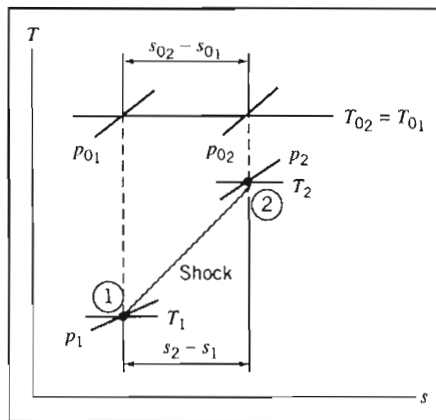

This problem illustrates the use of the normal shock relations, Eqs. 12.41, for analyzing flow of an ideal gas through a normal shock.



The *Excel* workbook for this Example Problem is convenient for performing the calculations.

## 12-6 SUPERSONIC CHANNEL FLOW WITH SHOCKS

Supersonic flow is a necessary condition for a normal shock to occur. The possibility of a normal shock must be considered in any supersonic flow. Sometimes a shock *must* occur to match a downstream pressure condition; it is desirable to determine if a shock will occur and the shock location when it does occur.

In Section 12-5 we showed that stagnation pressure decreases dramatically across a shock: The stronger the shock, the larger the decrease in stagnation pressure. It is necessary to control shock position to obtain acceptable performance from a supersonic diffuser or supersonic wind tunnel.

In this section isentropic flow in a converging-diverging nozzle (Section 12-2) is extended to include shocks. Additional topics (on the CD) include operation of supersonic diffusers and supersonic wind tunnels, flows with friction, and flows with heat addition.

### Flow in a Converging-Diverging Nozzle

Since we have considered normal shocks, we now can complete our discussion of flow in a converging-diverging nozzle operating under varying back pressures, begun in Section 12-2. The pressure distribution through a nozzle for different back pressures is shown in Fig. 12.20.

Four flow regimes are possible. In Regime I the flow is subsonic throughout. The flow rate increases with decreasing back pressure. At condition (iii), which forms the dividing line between Regimes I and II, flow at the throat is sonic, and  $M_t = 1$ .

As the back pressure is lowered below condition (iii), a normal shock appears downstream from the throat, as shown by condition (vi). There is a pressure rise across the shock. Since the flow is subsonic ( $M < 1$ ) behind the shock, the flow decelerates, with an accompanying increase in pressure, through the diverging channel. As the back pressure is lowered further, the shock moves downstream until it appears at the exit plane (condition vii). In Regime II, as in Regime I, the exit flow is subsonic, and consequently  $p_e = p_b$ . Since flow properties at the throat are constant for all conditions in Regime II, the flow rate in Regime II does not vary with back pressure.

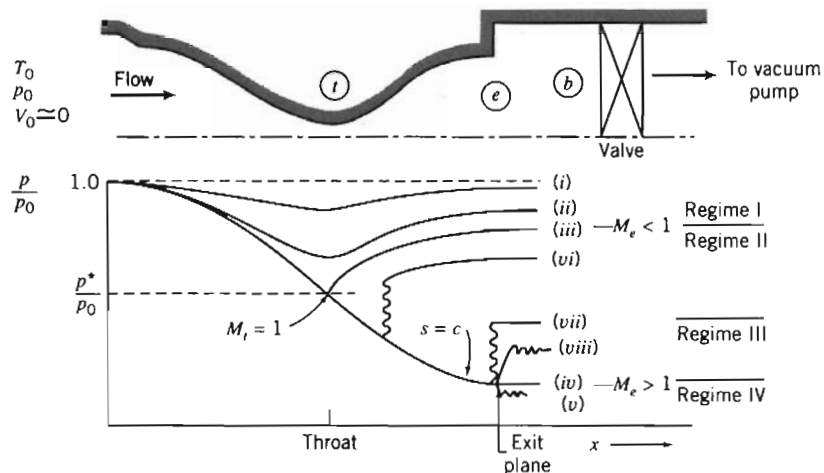


Fig. 12.20 Pressure distributions for flow in a converging-diverging nozzle for different back pressures.

In Regime III, as exemplified by condition (viii), the back pressure is higher than the exit pressure, but not high enough to sustain a normal shock in the exit plane. The flow adjusts to the back pressure through a series of oblique compression shocks outside the nozzle; these oblique shocks cannot be treated by one-dimensional theory.

As previously noted in Section 12-2, condition (iv) represents the design condition. In Regime IV the flow adjusts to the lower back pressure through a series of oblique expansion waves outside the nozzle; these oblique expansion waves cannot be treated by one-dimensional theory.

The  $Ts$  diagram for converging-diverging nozzle flow with a normal shock is shown in Fig. 12.21; state ① is located immediately upstream from the shock and state ② is immediately downstream. The entropy increase across the shock moves the subsonic downstream flow to a new isentropic line. The critical temperature is constant, so  $p_2^*$  is lower than  $p_1^*$ . Since  $\rho^* = p^*/RT^*$ , the critical density downstream also is reduced. To carry the same mass flow rate, the downstream flow must have a larger critical area. From continuity (and the equation of state), the critical area ratio is the inverse of the critical pressure ratio, i.e., across a shock,  $p^*A^* = \text{constant}$ .

If the Mach number (or position) of the normal shock in the nozzle is known, the exit-plane pressure can be calculated directly. In the more realistic situation, the exit-plane pressure is specified, and the position and strength of the shock are unknown. The subsonic flow downstream must leave the nozzle at the back pressure, so  $p_b = p_e$ . Then

$$\frac{p_b}{p_{01}} = \frac{p_e}{p_{01}} = \frac{p_e}{p_{02}} \frac{p_{02}}{p_{01}} = \frac{p_e}{p_{02}} \frac{A_1^*}{A_2^*} = \frac{p_e}{p_{02}} \frac{A_t}{A_e} \frac{A_e}{A_2^*} \quad (12.42)$$

Because we have isentropic flow from state ② (after the shock) to the exit plane,  $A_2^* = A_e^*$  and  $p_{02} = p_{0e}$ . Then from Eq. 12.42 we can write

$$\frac{p_e}{p_{01}} = \frac{p_e}{p_{02}} \frac{A_t}{A_e} \frac{A_e}{A_2^*} = \frac{p_e}{p_{0e}} \frac{A_t}{A_e} \frac{A_e}{A_e^*}$$

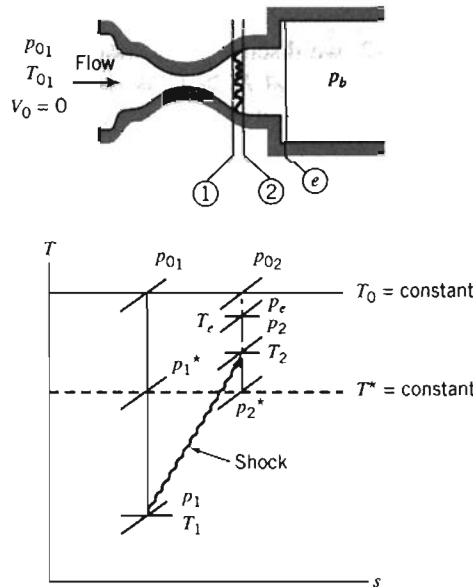


Fig. 12.21 Schematic  $Ts$  diagram for flow in a converging-diverging nozzle with a normal shock.

Rearranging,

$$\frac{p_e}{p_{0_1}} \frac{A_e}{A_t} = \frac{p_e}{p_{0_e}} \frac{A_e}{A_e^*} \quad (12.43)$$

In Eq. 12.43 the left side contains known quantities, and the right side is a function of the exit Mach number  $M_e$  only. The pressure ratio is obtained from the stagnation pressure relation (Eq. 11.20a); the area ratio is obtained from the isentropic area relation (Eq. 12.7d). Finding  $M_e$  from Eq. 12.43 usually requires iteration. (Problem 12.118 uses *Excel's Solver* feature to perform the iteration.) The magnitude and location of the normal shock can be found once  $M_e$  is known by rearranging Eq. 12.43 (remembering that  $p_{0_2} = p_{0_e}$ ),

$$\frac{p_{0_2}}{p_{0_1}} = \frac{A_t}{A_e} \frac{A_e}{A_e^*} \quad (12.44)$$

In Eq. 12.44 the right side is known (the first area ratio is given and the second is a function of  $M_e$  only), and the left side is a function of the Mach number before the shock,  $M_1$ , only (Eq. 12.41b). Hence,  $M_1$  can be found. The area at which this shock occurs can then be found from the isentropic area relation (Eq. 12.7d, with  $A^* = A$ ) for isentropic flow between the throat and state ①.

### Supersonic Diffuser (CD-ROM)

## 12-7 OBLIQUE SHOCKS AND EXPANSION WAVES

So far we have considered one-dimensional compressible flows. With the understanding we have developed, we are ready to introduce some basic concepts of two-dimensional flow: *oblique shocks* and *expansion waves*.

### Oblique Shocks

In Section 11-2, we discussed the Mach cone, with Mach angle  $\alpha$ , that is generated by an airplane flying at  $M > 1$ , as shown (in airplane coordinates) in Fig. 12.26a. The Mach cone is a weak pressure (sound) wave, so weak that, as shown in Fig. 12.26a, it barely disturbs the streamlines—it is the limiting case of an oblique shock. If we zoom in on the airplane, we see that at the nose of the airplane we have

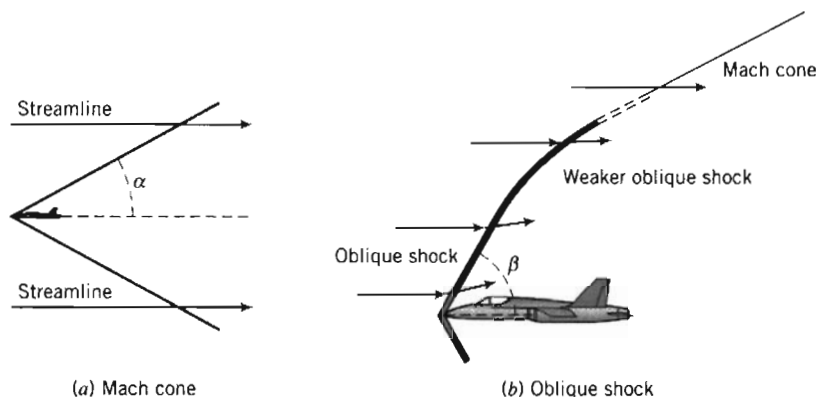


Fig. 12.26 Mach cone and oblique shock generated by airplane.

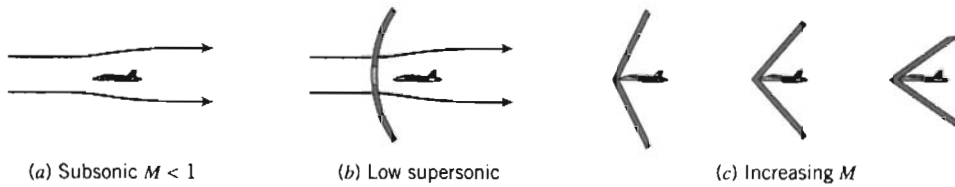


Fig. 12.27 Airplane flow patterns as speed increases.

an oblique shock—a shock wave that is aligned, at some angle  $\beta < 90^\circ$ , to the flow. This oblique shock causes the streamlines to abruptly change direction (usually to follow the surface of the airplane or the airplane’s airfoil). Further away from the airplane we still have an oblique shock, but it becomes progressively weaker ( $\beta$  decreases) and the streamlines experience smaller deflections until, far away from the airplane the oblique shock becomes a Mach cone ( $\beta \rightarrow \alpha$ ) and the streamlines are essentially unaffected by the airplane.

A supersonic airplane does not necessarily generate an oblique shock that is attached to its nose—we may instead have a detached normal shock ahead of the airplane! In fact, as illustrated in Fig. 12.27, as an airplane accelerates to its supersonic cruising speed the flow will progress from subsonic, through supersonic with a detached normal shock, to attached oblique shocks that become increasingly “pressed” against the airplane’s surface.

We can explain these flow phenomena using concepts we developed in our analysis of normal shocks. Consider the oblique shock shown in Fig. 12.28a. It is at some angle  $\beta$  with respect to the incoming supersonic flow, with velocity  $\vec{V}_1$ , and causes the flow to deflect at some angle  $\theta$ , with velocity  $\vec{V}_2$  after the shock.

It is convenient to orient the  $xy$  coordinates orthogonal to the oblique shock, and decompose  $\vec{V}_1$  and  $\vec{V}_2$  into components normal and tangential to the shock, as shown in Fig. 12.28b, with appropriate subscripts. The control volume is assumed to have arbitrary area  $A$  before and after the shock, and infinitesimal thickness across the shock (the upper and lower surfaces in Fig. 12.28b). For this infinitesimal control volume, we can write the basic equations: continuity, momentum, and the first and second laws of thermodynamics.

The continuity equation is

$$\frac{\partial}{\partial t} \int_{CV} \rho \, dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \tag{4.12}$$

Assumption: (1) Steady flow.

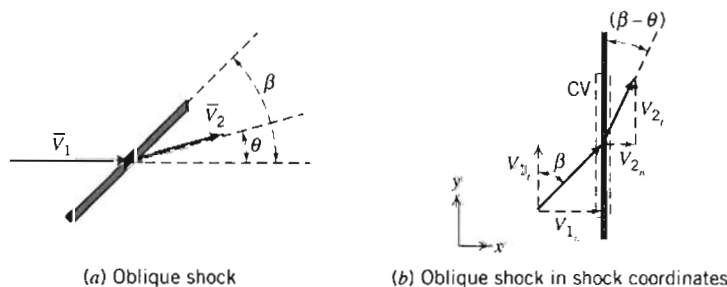


Fig. 12.28 Oblique shock control volume.



Then

$$(-\rho_1 V_{1_n} A) + (\rho_2 V_{2_n} A) = 0$$

(The tangential velocity components  $V_{1_t}$  and  $V_{2_t}$  flow through an infinitesimal area, so do not contribute to continuity.) Hence,

$$\rho_1 V_{1_n} = \rho_2 V_{2_n} \quad (12.45a)$$

Next we consider the momentum equation for motion normal and tangential to the shock. We get an interesting result if we look first at the tangential,  $y$  component,

$$F_{S_y} + \cancel{F_{b_y}} = \overset{= 0(2)}{\frac{\partial}{\partial t} \int_{CV} \overset{= 0(1)}{V_y} \rho dV} + \int_{CS} V_y \rho \vec{V} \cdot d\vec{A} \quad (4.18b)$$

Assumption: (2) Negligible body forces.

Then

$$0 = V_{1_t} (-\rho_1 V_{1_n} A) + V_{2_t} (\rho_2 V_{2_n} A)$$

or, using Eq. 12.45a

$$V_{1_t} = V_{2_t} = V_t$$

Hence, we have proved that *the oblique shock has no effect on the velocity component parallel to the shock* (a result that is perhaps not surprising). The momentum equation for the normal,  $x$  direction is

$$F_{S_x} + \cancel{F_{b_x}} = \overset{= 0(2)}{\frac{\partial}{\partial t} \int_{CV} \overset{= 0(1)}{V_x} \rho dV} + \int_{CS} V_x \rho \vec{V} \cdot d\vec{A} \quad (4.18a)$$

For our control volume we obtain

$$p_1 A - p_2 A = V_{1_n} (-\rho_1 V_{1_n} A) + V_{2_n} (\rho_2 V_{2_n} A)$$

or, again using Eq. 12.45a,

$$p_1 + \rho_1 V_{1_n}^2 = p_2 + \rho_2 V_{2_n}^2 \quad (12.45b)$$

The first law of thermodynamics is

$$\cancel{\dot{Q}} - \cancel{\dot{W}_y} - \cancel{\dot{W}_{shear}} - \cancel{\dot{W}_{other}} = \overset{= 0(4)}{\frac{\partial}{\partial t} \int_{CV} \overset{= 0(5)}{e} \rho dV} + \overset{= 0(5)}{\int_{CS} \overset{= 0(1)}{(e + pv)} \rho \vec{V} \cdot d\vec{A}} \quad (4.18a)$$

where

$$e = u + \frac{V^2}{2} + \overset{= 0(6)}{gz}$$

Assumptions: (4) Adiabatic flow.

(5) No work terms.

(6) Negligible gravitational effect.

For our control volume we obtain

$$0 = \left( u_1 + p_1 v_1 + \frac{V_1^2}{2} \right) (-\rho_1 V_{1n} A) + \left( u_2 + p_2 v_2 + \frac{V_2^2}{2} \right) (\rho_2 V_{2n} A)$$

(Remember that  $v$  here represents the specific volume.) This can be simplified by using  $h \equiv u + pv$ , and continuity (Eq. 12.45a),

$$h_1 + \frac{V_1^2}{2} = h_2 + \frac{V_2^2}{2}$$

But each velocity can be replaced by its Pythagorean sum, so

$$h_1 + \frac{V_{1n}^2 + V_{1t}^2}{2} = h_2 + \frac{V_{2n}^2 + V_{2t}^2}{2}$$

We have already learned that the tangential velocity is constant,  $V_{1t} = V_{2t} = V_t$ , so the first law simplifies to

$$h_1 + \frac{V_{1n}^2}{2} = h_2 + \frac{V_{2n}^2}{2} \quad (12.45c)$$

Finally, the second law of thermodynamics is

$$\begin{aligned} &= 0(1) && = 0(4) \\ \frac{\partial}{\partial t} \int_{CV} s \rho dV + \int_{CS} s \rho \vec{V} \cdot d\vec{A} &\geq \int_{CS} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \end{aligned} \quad (4.58)$$

The shock is irreversible, so Eq. 4.58 for our control volume is

$$s_1(-\rho_1 V_{1n} A) + s_2(\rho_2 V_{2n} A) > 0$$

and, again using continuity,

$$s_2 > s_1 \quad (12.45d)$$

The continuity and momentum equations, and the first and second laws of thermodynamics, for an oblique shock, are given by Eqs. 12.45a through 12.45d, respectively. Examination of these equations shows that they are *identical* to the corresponding equations for a normal shock, Eqs. 12.32a through 12.32d, except  $V_1$  and  $V_2$  are replaced with normal velocity components  $V_{1n}$  and  $V_{2n}$ , respectively! Hence, we can use all of the concepts and equations of Section 12-5 for normal shocks, as long as we replace the velocities with their normal components only. The normal velocity components are given by

$$V_{1n} = V_1 \sin \beta \quad (12.46a)$$

and

$$V_{2n} = V_2 \sin(\beta - \theta) \quad (12.46b)$$

The corresponding Mach numbers are

$$M_{1n} = \frac{V_{1n}}{c_1} = M_1 \sin \beta \quad (12.47a)$$

and

$$M_{2_n} = \frac{V_{2_n}}{c_2} = M_2 \sin(\beta - \theta) \quad (12.47b)$$

The oblique shock equations for an ideal gas with constant specific heats are obtained directly from Eqs. 12.41:

$$M_{2_n}^2 = \frac{M_{1_n}^2 + \frac{2}{k-1}}{\frac{2k}{k-1} M_{1_n}^2 - 1} \quad (12.48a)$$

$$\frac{p_{0_2}}{p_{0_1}} = \frac{\left[ \frac{\frac{k+1}{2} M_{1_n}^2}{1 + \frac{k-1}{2} M_{1_n}^2} \right]^{k/(k-1)}}{\left[ \frac{2k}{k+1} M_{1_n}^2 - \frac{k-1}{k+1} \right]^{1/(k-1)}} \quad (12.48b)$$

$$\frac{T_2}{T_1} = \frac{\left( 1 + \frac{k-1}{2} M_{1_n}^2 \right) \left( k M_{1_n}^2 - \frac{k-1}{2} \right)}{\left( \frac{k+1}{2} \right)^2 M_{1_n}^2} \quad (12.48c)$$

$$\frac{p_2}{p_1} = \frac{2k}{k+1} M_{1_n}^2 - \frac{k-1}{k+1} \quad (12.48d)$$

$$\frac{\rho_2}{\rho_1} = \frac{V_{1_n}}{V_{2_n}} = \frac{\frac{k+1}{2} M_{1_n}^2}{1 + \frac{k-1}{2} M_{1_n}^2} \quad (12.48e)$$

Equations 12.48, along with Eqs. 12.46 and 12.47, can be used to analyze oblique shock problems. Appendix E-5 lists flow functions for  $M_{2_n}$  and property ratios  $p_{0_2}/p_{0_1}$ ,  $T_2/T_1$ ,  $p_2/p_1$ , and  $\rho_2/\rho_1$  ( $V_1/V_2$ ) in terms of  $M_{1_n}$  for oblique-shock flow of an ideal gas. A table of values of these property ratios is presented for air ( $k = 1.4$ ) for a limited range of Mach numbers. The associated *Excel* workbook, *Oblique-Shock Relations*, can be used to print a larger table of values for air and other ideal gases. In essence, as demonstrated in Example Problem 12.11, an oblique shock problem can be analyzed as an equivalent normal shock problem.

### EXAMPLE 12.11 Comparison of Normal and Oblique Shocks

Air at  $-2^\circ\text{C}$  and 100 kPa is traveling at a speed of 1650 m/s. Find the pressure, temperature, and speed after the air experiences a normal shock. Compare with the pressure, temperature, and speed (and find the deflection angle  $\theta$ ) if the air instead experiences an oblique shock at angle  $\beta = 30^\circ$ .



**EXAMPLE PROBLEM 12.11****GIVEN:** Air flow with:

$$\begin{aligned} p_1 &= 100 \text{ kPa} \\ T_1 &= -2^\circ\text{C} \\ V_1 &= 1650 \text{ m/s} \end{aligned}$$

**FIND:** Downstream pressure, temperature, and speed if it experiences (a) a normal shock and (b) an oblique shock at angle  $\beta = 30^\circ$ . Also find the deflection angle  $\theta$ .**SOLUTION:**

(a) Normal shock

First compute the speed of sound,

$$c_1 = \sqrt{kRT_1} = \sqrt{1.4 \times 287 \frac{\text{N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 271 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{s}^2 \cdot \text{N}}} = 330 \text{ m/s}$$

Then the upstream Mach number is

$$M_1 = \frac{V_1}{c_1} = \frac{1650 \text{ m/s}}{330 \text{ m/s}} = 5.0$$

From the normal-shock flow functions, Eqs. 12.41, at  $M_1 = 5.0$ 

$M_1$	$M_2$	$p_2/p_1$	$T_2/T_1$	$V_2/V_1$
5.0	0.4152	29.00	5.800	0.2000

From these data

$$\begin{aligned} T_2 &= 5.800T_1 = (5.800)271 \text{ K} = 1572 \text{ K} = 1299^\circ\text{C} && \leftarrow T_2 \\ p_2 &= 29.00p_1 = (29.00)100 \text{ kPa} = 2.9 \text{ MPa} && \leftarrow p_2 \\ V_2 &= 0.200V_1 = (0.200)1650 \text{ m/s} = 330 \text{ m/s} && \leftarrow V_2 \end{aligned}$$

(b) Oblique shock

First compute the normal and tangential components of velocity,

$$V_{1n} = V_1 \sin \beta = 1650 \text{ m/s} \times \sin 30^\circ = 825 \text{ m/s}$$

$$V_{1t} = V_1 \cos \beta = 1650 \text{ m/s} \times \cos 30^\circ = 1429 \text{ m/s}$$

Then the upstream *normal* Mach number is

$$M_{1n} = \frac{V_{1n}}{c_1} = \frac{825 \text{ m/s}}{330 \text{ m/s}} = 2.5$$

From the oblique-shock flow functions, Eqs. 12.48, at  $M_{1n} = 2.5$ 

$M_{1n}$	$M_{2n}$	$p_2/p_1$	$T_2/T_1$	$V_{2n}/V_{1n}$
2.5	0.5130	7.125	2.138	0.300

From these data

$$T_2 = 2.138T_1 = (2.138)271 \text{ K} = 579 \text{ K} = 306^\circ \text{C} \quad \leftarrow T_2$$

$$p_2 = 7.125p_1 = (7.125)100 \text{ kPa} = 712.5 \text{ kPa} \quad \leftarrow p_2$$

$$V_{2_n} = 0.300V_{1_n} = (0.300)825 \text{ m/s} = 247.5 \text{ m/s}$$

$$V_{2_t} = V_{1_t} = 1429 \text{ m/s} \quad \leftarrow V_2$$

The downstream velocity is given by the Pythagorean sum of the velocity components,

$$V_2 = \sqrt{(V_{2_n}^2 + V_{2_t}^2)} = \sqrt{(247.5^2 + 1429^2)} \text{ m/s} = 1450 \text{ m/s}$$

Note that

$$c_2 = \sqrt{kRT_2} = \sqrt{1.4 \times 287 \frac{\text{N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 579 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{s}^2 \cdot \text{N}}} = 482 \text{ m/s}$$

so that the downstream Mach number is

$$M_2 = \frac{V_2}{c_2} = \frac{1450 \text{ m/s}}{482 \text{ m/s}} = 3.01$$

Although the downstream normal Mach number must be subsonic, the actual downstream Mach number could be subsonic or supersonic (as in this case).

The deflection angle can be obtained from Eq. 12.46b

$$V_{2_n} = V_2 \sin(\beta - \theta)$$

or

$$\theta = \beta - \sin^{-1}\left(\frac{V_{2_n}}{V_2}\right) = 30^\circ - \sin^{-1}\left(\frac{247.5}{1450}\right) = 30^\circ - 9.8^\circ = 20.2^\circ \quad \leftarrow \theta$$

This Example Problem illustrates:

- ✓ That an oblique shock involves deflection of the flow through angle  $\theta$ .
- ✓ Use of normal shock functions for solution of oblique shock problems.
- ✓ The important result that for a given supersonic flow an oblique shock will always be weaker than a normal shock, because  $M_{1_n} < M_1$ .
- ✓ That while  $M_{2_n} < 1$  always,  $M_2$  can be subsonic or supersonic (as in this case).



The *Excel* workbook for oblique shocks is convenient for performing these calculations.

We can gain further insight into oblique shock behavior by combining some of our earlier equations to relate the deflection angle  $\theta$ , the Mach number  $M_1$ , and the shock angle  $\beta$ . From the oblique shock geometry of Fig. 12.28b,

$$\frac{V_{1_n}}{V_{2_n}} = \frac{V_{1_t} \tan \beta}{V_{2_t} \tan(\beta - \theta)} = \frac{\tan \beta}{\tan(\beta - \theta)}$$

We can also relate the two normal velocities from Eq. 12.48e,

$$\frac{V_{1_n}}{V_{2_n}} = \frac{\frac{k+1}{2} M_{1_n}^2}{1 + \frac{k-1}{2} M_{1_n}^2} \quad (12.48e)$$

Equating the two expressions for the normal velocity ratio, we have

$$\frac{V_{1_n}}{V_{2_n}} = \frac{\tan \beta}{\tan(\beta - \theta)} = \frac{\frac{k+1}{2} M_{1_n}^2}{1 + \frac{k-1}{2} M_{1_n}^2}$$

and

$$\tan(\beta - \theta) = \frac{\tan \beta}{\frac{(k+1)}{2} M_{1_n}^2} \left( 1 + \frac{k-1}{2} M_{1_n}^2 \right)$$

Finally, if we use  $M_{1_n} = M_1 \sin \beta$  in this expression and further simplify, we obtain (after using a trigonometric identity and more algebra)

---


$$\tan \theta = \frac{2 \cot \beta (M_1^2 \sin^2 \beta - 1)}{M_1^2 (k + \cos 2\beta) + 2} \quad (12.49)$$


---

Equation 12.49 relates the deflection angle  $\theta$  to the incoming Mach number  $M_1$  and the oblique shock angle  $\beta$ . For a given Mach number, we can compute  $\theta$  as a function of  $\beta$ , as shown in Fig. 12.29 for air ( $k = 1.4$ ).

Appendix E-5 presents a table of values of deflection angle  $\theta$  as a function of Mach number  $M_1$  and oblique shock angle  $\beta$  for air ( $k = 1.4$ ) for a limited range of Mach numbers. The associated *Excel* workbook, *Oblique-Shock Relations*, can be used to print a larger table of values for air and other ideal gases.

We should note that we used  $M_1$  and shock angle  $\beta$  to compute  $\theta$ , but in reality the causality is the reverse: it is the deflection  $\theta$  caused by an object such as the surface of an airplane wing that causes an oblique shock at angle  $\beta$ . We can draw some interesting conclusions from Fig. 12.29:

- ✓ For a given Mach number and deflection angle, there are generally *two* possible oblique shock angles—we could generate a weak shock (smaller  $\beta$  value, and hence, smaller normal Mach number,  $M_{1_n}$ ) or a strong shock (larger  $\beta$  value, and hence, larger normal Mach number). In most cases the weak shock appears (exceptions include situations where the downstream pressure is forced to take on a large value as caused by, for example, an obstruction).
- ✓ For a given Mach number, there is a maximum deflection angle. For example, for air ( $k = 1.4$ ), if  $M_1 = 3$ , the maximum deflection angle is  $\theta_{\max} \approx 34^\circ$ . Any attempt to deflect the flow at an angle  $\theta > \theta_{\max}$  would cause a detached normal shock to form instead of an oblique shock.
- ✓ For zero deflection ( $\theta \rightarrow 0$ ), the weak shock becomes a Mach wave and  $\beta \rightarrow \alpha = \sin^{-1}(1/M_1)$ .

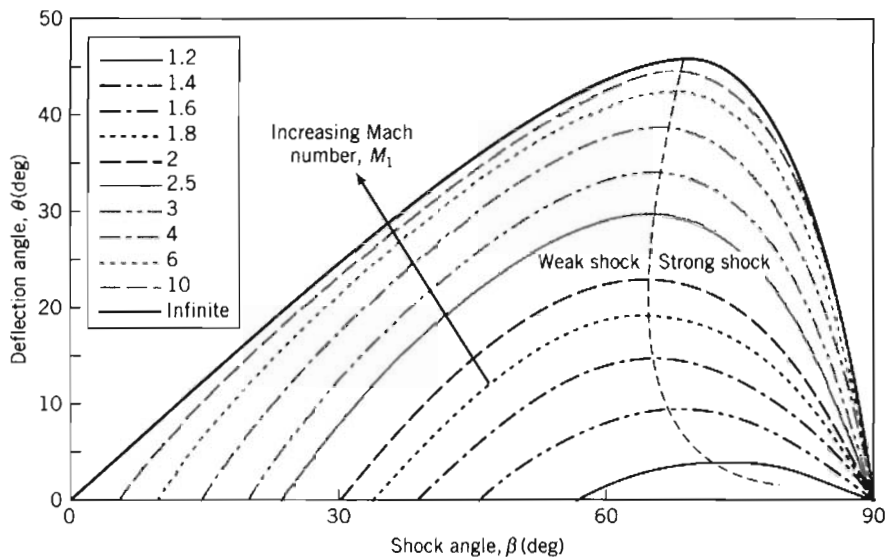


Fig. 12.29 Oblique shock deflection angle.

Figure 12.29 can be used to explain the phenomena shown in Fig. 12.27. If an airplane (or airplane wing), causing deflection  $\theta$ , accelerates from subsonic through supersonic speed, we can plot the airplane's progress on Fig. 12.29 as a horizontal line from right to left, through lines of increasing Mach number. For example, for  $\theta = 10^\circ$ , we obtain the following results: As  $M_1$  increases from subsonic through about 1.4 there is no oblique shock solution—we instead either have no shock (subsonic flow) or a detached normal shock; at some Mach number the normal shock first attaches and becomes an oblique shock (Problem 12.133 shows that for  $\theta = 10^\circ$ , the normal shock first attaches and becomes oblique at  $M_1 \approx 1.42$ , with  $\beta \approx 67^\circ$ ); as  $M_1$  increases from 1.6 through 1.8, 2.0, 2.5, etc., toward infinity, from Fig. 12.29,  $\beta \approx 51^\circ, 44^\circ, 39^\circ, 32^\circ$ , toward  $12^\circ$ , respectively—the oblique shock angle progressively decreases, as we saw in Fig. 12.27.

A problem involving oblique shocks is solved in Example Problem 12.12.


### EXAMPLE 12.12 Oblique Shocks on an Airfoil

An airplane travels at a speed of 600 m/s in air at  $4^\circ\text{C}$  and 100 kPa. The airplane's airfoil has a sharp leading edge with included angle  $\delta = 6^\circ$ , and an angle of attack  $\alpha = 1^\circ$ . Find the pressures on the upper and lower surfaces of the airfoil immediately after the leading edge.

#### EXAMPLE PROBLEM 12.12

**GIVEN:** Air flow over sharp leading edge with:  
 $p_1 = 100 \text{ kPa}$                        $\delta = 6^\circ$   
 $T_1 = 4^\circ\text{C}$                                $\alpha = 1^\circ$   
 $V_1 = 600 \text{ m/s}$

**FIND:** Pressure on upper and lower surfaces.

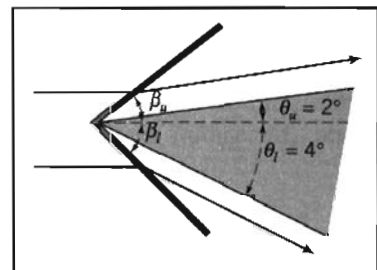

**SOLUTION:**

For an angle of attack of  $1^\circ$  of an airfoil with leading edge angle  $6^\circ$ , the deflection angles are  $\theta_u = 2^\circ$  and  $\theta_l = 4^\circ$  as shown.

(a) Upper surface

First compute the speed of sound,

$$c_1 = \sqrt{kRT_1} = \sqrt{1.4 \times 287 \frac{\text{N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times 277 \text{ K} \times \frac{\text{kg} \cdot \text{m}}{\text{s}^2 \cdot \text{N}}} = 334 \text{ m/s}$$

Then the upstream Mach number is

$$M_1 = \frac{V_1}{c_1} = \frac{600 \text{ m/s}}{334 \text{ m/s}} = 1.80$$

For  $M_1 = 1.80$  and  $\theta_u = 2^\circ$ , we obtain  $\beta_u$  from

$$\tan \theta_u = \frac{2 \cot \beta_u (M_1^2 \sin^2 \beta_u - 1)}{M_1^2 (k + \cos 2\beta_u) + 2} \quad (12.49)$$

This can be solved for  $\beta_u$  using manual iteration or interpolation, or by using, for example, *Excel's Goal Seek* function,

$$\beta_u = 35.5^\circ$$

Then we can find  $M_{1n(\text{upper})}$ ,

$$M_{1n(\text{upper})} = M_1 \sin \beta_u = 1.80 \times \sin 35.5^\circ = 1.045$$

The normal Mach number for the upper oblique shock is close to one—the shock is quite weak.

From the oblique-shock pressure ratio, Eqs. 12.48d, at  $M_{1n(\text{upper})} = 1.045$ ,

$$\frac{p_{2(\text{upper})}}{p_1} = \frac{2k}{k+1} M_{1n(\text{upper})}^2 - \frac{k-1}{k+1} = \frac{2 \times 1.4}{(1.4+1)} (1.045)^2 - \frac{(1.4-1)}{(1.4+1)} = 1.11$$

Hence,

$$p_{2(\text{upper})} = 1.11 p_1 = (1.11)100 \text{ kPa} = 111 \text{ kPa} \leftarrow \frac{p_{2(\text{upper})}}{p_1}$$

(b) Lower surface

For  $M_1 = 1.80$  and  $\theta_l = 4^\circ$ , we obtain  $\beta_l$  from

$$\tan \theta_l = \frac{2 \cot \beta_l (M_1^2 \sin^2 \beta_l - 1)}{M_1^2 (k + \cos 2\beta_l) + 2} \quad (12.49)$$

and find

$$\beta_l = 37.4^\circ$$

Then we can find  $M_{1n(\text{lower})}$ ,

$$M_{1n(\text{lower})} = M_1 \sin \beta_l = 1.80 \times \sin 37.4^\circ = 1.093$$

The normal Mach number for the lower oblique shock is also close to one.

From the oblique-shock pressure ratio, Eq. 12.48d, at  $M_{1n(\text{lower})} = 1.093$ ,

$$\frac{p_{2(\text{lower})}}{p_1} = \frac{2k}{k+1} M_{1n(\text{lower})}^2 - \frac{k-1}{k+1} = \frac{2 \times 1.4}{(1.4+1)} (1.093)^2 - \frac{(1.4-1)}{(1.4+1)} = 1.23$$

Hence,

$$p_{2(\text{lower})} = 1.23 p_1 = (1.23)100 \text{ kPa} = 123 \text{ kPa} \leftarrow p_{2(\text{lower})}$$

This Example Problem illustrates the use of Eq. 12.49 for obtaining oblique shock data from the flow deflection.


The *Excel* workbook for oblique shocks is convenient for performing these calculations.

### Isentropic Expansion Waves

Oblique shock waves occur when a flow is suddenly compressed as it is deflected. We can ask ourselves what happens if we *gradually* redirect a supersonic flow, for example, along a curved surface. The answer is that we may generate isentropic compression or expansion waves, as illustrated schematically in Figs. 12.30a and 12.30b, respectively. From Fig. 12.30a we see that a series of compression waves will eventually converge, and their cumulative effect will eventually generate an oblique shock not far from the curved surface. While compression waves do occur, they are not of great interest because the oblique shocks they lead to usually dominate the aerodynamics—at most the waves are a local phenomenon. On the other hand, as shown in Fig. 12.30b, expansion waves in series are divergent and so do not coalesce. Figure 12.30c shows expansion around a sharp-edged corner.

We wish to analyze these isentropic waves to obtain a relation between the deflection angle and the Mach number. First we note that each wave is a Mach wave, so is at angle  $\alpha = \sin^{-1}(1/M)$ , where  $M$  is the Mach number immediately before the wave. Compression waves are convergent because the wave angle  $\alpha$  increases as the Mach number decreases. On the other hand, expansion waves are divergent because as the flow expands the Mach number increases, decreasing the Mach angle.

Consider an isentropic wave as shown in Fig. 12.31a. (It happens to be a compression wave, but the analysis that follows applies to both expansion and compression waves.) The speed changes from  $V$  to  $V + dV$ , with deflection  $d\theta$ . As with the oblique shock analysis for Fig. 12.28a, it is convenient to orient the  $xy$  coordinates orthogonal to the wave, as shown in Fig. 12.31b. For this infinitesimal control volume, we can write the basic equations (continuity, momentum, and the first and second laws of thermodynamics). Comparing the isentropic wave control volume of Fig. 12.31b to the control volume for an oblique shock shown in Fig. 12.28, we see that the control volumes have similar features. However, an isentropic wave differs

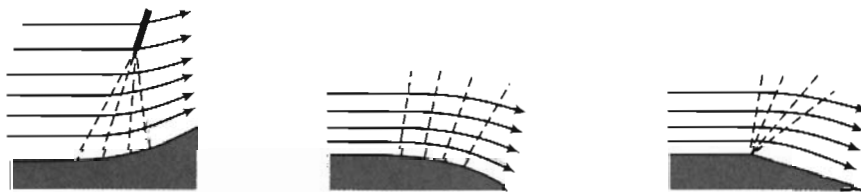

(a) Isentropic compression waves

(b) Isentropic expansion waves

(c) Isentropic expansion at a corner

Fig. 12.30 Isentropic compression and expansion waves.

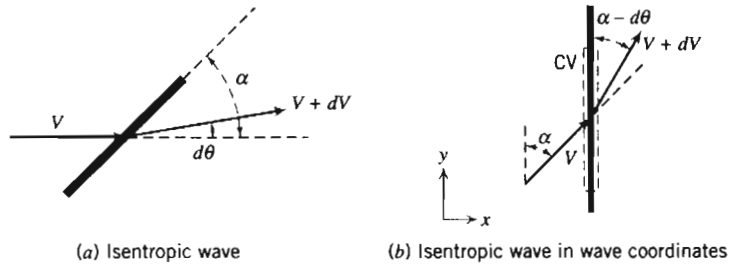


Fig. 12.31 Isentropic wave control volume.



from an oblique shock wave in two important ways:

- ✓ The wave angle is  $\alpha = \sin^{-1}(1/M)$ , instead of angle  $\beta$  for the oblique shock.
- ✓ The changes in velocity and in density, pressure, etc., and the deflection angle, are all infinitesimals.

The second factor is the reason that the flow, which is adiabatic, is isentropic.

With these two differences in mind we repeat the analysis that we performed for the oblique shock. The continuity equation is

$$\frac{\partial}{\partial t} \int_{CV} \rho dV + \int_{CS} \rho \vec{V} \cdot d\vec{A} = 0 \quad (4.12)$$

Assumption: (1) Steady flow.

Then

$$\{-\rho V \sin \alpha A\} + \{(\rho + d\rho)(V + dV) \sin(\alpha - d\theta)A\} = 0$$

or

$$\rho V \sin \alpha = (\rho + d\rho)(V + dV) \sin(\alpha - d\theta) \quad (12.50)$$

Next we consider the momentum equation for motion normal and tangent to the shock. We look first at the tangential,  $y$  component

$$F_{s_y} + F_{\beta_y} = \frac{\partial}{\partial t} \int_{CV} V_y \rho dV + \int_{CS} V_y \rho \vec{V} \cdot d\vec{A} \quad (4.18b)$$

Assumption: (2) Negligible body forces.

Then

$$0 = V \cos \alpha \{-\rho V \sin \alpha A\} + (V + dV) \cos(\alpha - d\theta) \{(\rho + d\rho)(V + dV) \sin(\alpha - d\theta)A\}$$

or, using continuity (Eq. 12.50),

$$V \cos \alpha = (V + dV) \cos(\alpha - d\theta)$$

Expanding and simplifying [using the facts that, to first order, in the limit as  $d\theta \rightarrow 0$ ,  $\cos(d\theta) \rightarrow 1$ , and  $\sin(d\theta) \rightarrow d\theta$ ], we obtain

$$d\theta = -\frac{dV}{V \tan \alpha}$$

But  $\sin \alpha = 1/M$ , so  $\tan \alpha = 1/\sqrt{M^2 - 1}$ , and

$$d\theta = -\sqrt{M^2 - 1} \frac{dV}{V} \quad (12.51)$$

We skip the analysis of the normal,  $x$  component of momentum, and move on to the first law of thermodynamics, which is

$$\begin{aligned} &= 0(4) = 0(5) = 0(5) = 0(5) = 0(1) \\ \cancel{\dot{Q}} - \cancel{\dot{W}_y} - \cancel{\dot{W}_{\text{shear}}} - \cancel{\dot{W}_{\text{other}}} &= \frac{\partial}{\partial t} \int_{\text{CV}} e \rho dV + \int_{\text{CS}} (e + pv) \rho \vec{V} \cdot d\vec{A} \quad (4.18a) \end{aligned}$$

where

$$e = u + \frac{V^2}{2} + \cancel{gz} = 0(6)$$

- Assumptions: (4) Adiabatic flow.  
 (5) No work terms.  
 (6) Negligible gravitational effect.

For our control volume we obtain (using  $h \equiv u + pv$ , where  $v$  represents the specific volume)

$$\begin{aligned} 0 &= \left\{ h + \frac{V^2}{2} \right\} \{ -\rho V \sin \alpha A \} \\ &+ \left\{ (h + dh) + \frac{(V + dV)^2}{2} \right\} \{ (\rho + d\rho)(V + dV) \sin(\alpha - d\theta) A \} \end{aligned}$$

This can be simplified, using continuity (Eq. 12.50), to

$$h + \frac{V^2}{2} = (h + dh) + \frac{(V + dV)^2}{2}$$

Expanding and simplifying, in the limit to first order, we obtain

$$dh = -V dV$$

If we confine ourselves to ideal gases,  $dh = c_p dT$ , so

$$c_p dT = -V dV \quad (12.52)$$

Equation 12.52 relates differential changes in temperature and velocity. We can obtain a relation between  $M$  and  $V$  using  $V = Mc = M\sqrt{kRT}$ . Differentiating (and dividing the left side by  $V$  and the right by  $M\sqrt{kRT}$ ),

$$\frac{dV}{V} = \frac{dM}{M} + \frac{1}{2} \frac{dT}{T}$$

Eliminating  $dT$  using Eq. 12.52,

$$\frac{dV}{V} = \frac{dM}{M} - \frac{1}{2} \frac{V dV}{c_p T} = \frac{dM}{M} - \frac{1}{2} \frac{dV}{V} \left( \frac{V^2}{c_p T} \right) = \frac{dM}{M} - \frac{1}{2} \frac{dV}{V} \left( \frac{M^2 c^2}{c_p T} \right)$$

$$\frac{dV}{V} = \frac{dM}{M} - \frac{1}{2} \frac{dV}{V} \left( \frac{M^2 kRT}{c_p T} \right) = \frac{dM}{M} - \frac{1}{2} \frac{dV}{V} M^2 (k - 1)$$

Hence,



$$\frac{dV}{V} = \frac{2}{2 + M^2(k-1)} \frac{dM}{M} \quad (12.53)$$

Finally, combining Eqs. 12.51 and 12.53,

$$d\theta = -\frac{2\sqrt{M^2-1}}{2 + M^2(k-1)} \frac{dM}{M} \quad (12.54)$$

We will generally apply Eq. 12.54 to expansion waves, for which  $d\theta$  is negative, so it is convenient to change variables,  $d\omega \equiv -d\theta$ . Equation 12.54 relates the differential change in Mach number through an isentropic wave to the deflection angle. We can integrate this to obtain the deflection as a function of Mach number, to within a constant of integration. We *could* integrate Eq. 12.54 between the initial and final Mach numbers of a given flow, but it will be more convenient to integrate from a reference state, the critical speed ( $M = 1$ ) to Mach number  $M$ , with  $\omega$  arbitrarily set to zero at  $M = 1$ ,

$$\int_0^\omega d\omega = \int_1^M \frac{2\sqrt{M^2-1}}{2 + M^2(k-1)} \frac{dM}{M}$$

leading to the *Prandtl-Meyer supersonic expansion function*,

---


$$\omega = \sqrt{\frac{k+1}{k-1}} \tan^{-1} \left( \sqrt{\frac{k-1}{k+1}} (M^2-1) \right) - \tan^{-1} \left( \sqrt{M^2-1} \right) \quad (12.55)$$


---

We use Eq. 12.55 to relate the total deflection caused by isentropic expansion from  $M_1$  to  $M_2$ ,

$$\text{Deflection} = \omega_2 - \omega_1 = \omega(M_2) - \omega(M_1)$$

Appendix E-6 presents a table of values of the *Prandtl-Meyer supersonic expansion function*,  $\omega$ , as a function of Mach number  $M$  for air ( $k = 1.4$ ) for a limited range of Mach numbers. The associated *Excel* workbook, *Isentropic Expansion Wave Relations*, can be used to print a larger table of values for air and other ideal gases.

We have already indicated that the flow is isentropic. We can verify this by using the second law of thermodynamics,

$$\begin{aligned} &= 0(1) & &= 0(4) \\ \frac{\partial}{\partial t} \int_{cv} s \rho dV + \int_{cs} s \rho \vec{V} \cdot d\vec{A} &\geq \int_{cs} \frac{1}{T} \left( \frac{\dot{Q}}{A} \right) dA \end{aligned} \quad (4.58)$$

The wave is reversible, so Eq. 4.58 for our control volume is

$$s[-\rho V \sin \alpha A] + (s + ds)\{(\rho + d\rho)(V + dV) \sin(\alpha - d\theta)A\} = 0$$

and using continuity (Eq. 12.50),

$$ds = 0$$

The flow is demonstrated to be isentropic. Hence, stagnation properties are constant and the local isentropic stagnation property equations (Section 11-3) will be useful here.

$$\frac{p_0}{p} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{k/(k-1)} \quad (11.20a)$$

$$\frac{T_0}{T} = 1 + \frac{k-1}{2} M^2 \quad (11.20b)$$

$$\frac{\rho_0}{\rho} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{1/(k-1)} \quad (11.20c)$$

Equation 12.55, together with Eqs. 11.20a through 11.20c, can be used for analyzing isentropic expansion or compression waves. (We never got around to deriving the normal component of momentum—the above analysis provides a complete set of equations.) A problem involving expansion waves is solved in Example Problem 12.13.

### EXAMPLE 12.13 Expansion Wave on an Airfoil


The airplane of Example Problem 12.12 (speed of 600 m/s in air at 4°C and 100 kPa, with a sharp leading edge with included angle  $\delta = 6^\circ$ ) now has an angle of attack  $\alpha = 6^\circ$ . Find the pressures on the upper and lower surfaces of the airfoil immediately after the leading edge.

#### EXAMPLE PROBLEM 12.13

**GIVEN:** Air flow over sharp leading edge with:

$$\begin{aligned} p_1 &= 100 \text{ kPa} & \delta &= 6^\circ \\ T_1 &= 4^\circ\text{C} & \alpha &= 6^\circ \\ V_1 &= 600 \text{ m/s} \end{aligned}$$

**FIND:** Pressures on upper and lower surfaces.

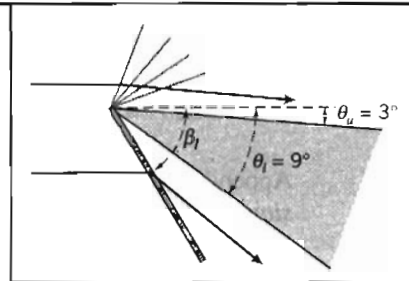

**SOLUTION:**

For an angle of attack of  $6^\circ$  of an airfoil with leading edge angle  $6^\circ$ , the deflection angles are  $\theta_u = 3^\circ$  and  $\theta_l = 9^\circ$  as shown.

(a) Upper surface—isentropic expansion

First compute the speed of sound,

$$c_1 = \sqrt{kRT_1} = \sqrt{1.4 \times \frac{287 \text{ N} \cdot \text{m}}{\text{kg} \cdot \text{K}} \times \frac{277 \text{ K}}{\text{s}^2 \cdot \text{N}} \times \frac{\text{kg} \cdot \text{m}}{\text{s}^2 \cdot \text{N}}} = 334 \text{ m/s}$$

Then the upstream Mach number is

$$M_1 = \frac{V_1}{c_1} = \frac{600 \text{ m/s}}{334 \text{ m/s}} = 1.80$$

For  $M_1 = 1.80$ , the Prandtl-Meyer function  $\omega_1$  is obtained from

$$\omega_1 = \sqrt{\frac{k+1}{k-1}} \tan^{-1} \left( \sqrt{\frac{k-1}{k+1} (M_1^2 - 1)} \right) - \tan^{-1} \left( \sqrt{M_1^2 - 1} \right) \quad (12.55)$$

so

$$\omega_1 = \sqrt{\frac{1.4+1}{1.4-1}} \tan^{-1} \left( \sqrt{\frac{1.4-1}{1.4+1}} (1.80^2 - 1) \right) - \tan^{-1} \left( \sqrt{1.80^2 - 1} \right) = 20.7^\circ$$

The Prandtl-Meyer function value on the upper surface,  $\omega_u$ , is then

$$\omega_u = \omega_1 + \theta_u = 20.7^\circ + 3^\circ = 23.7^\circ$$

For this Prandtl-Meyer function value,  $M_{2(\text{upper})}$  is obtained from Eq. 12.55:

$$\omega_u = \sqrt{\frac{k+1}{k-1}} \tan^{-1} \left( \sqrt{\frac{k-1}{k+1}} (M_{2(\text{upper})}^2 - 1) \right) - \tan^{-1} \left( \sqrt{M_{2(\text{upper})}^2 - 1} \right)$$

This can be solved using manual iteration or interpolation, or by using, for example, *Excel's Goal Seek* function,

$$M_{2(\text{upper})} = 1.90$$

Finally, we can find  $p_{2(\text{upper})}$  from repeated use of Eq. 11.20a,

$$\begin{aligned} p_{2(\text{upper})} &= \frac{p_{2(\text{upper})}}{p_0} \frac{p_0}{p_1} p_1 = \left\{ \left[ 1 + \frac{k-1}{2} M_1^2 \right]^{k/(k-1)} / \left[ 1 + \frac{k-1}{2} M_{2(\text{upper})}^2 \right]^{k/(k-1)} \right\} p_1 \\ &= \left\{ \left[ 1 + (0.2)1.80^2 \right]^{3.5} / \left[ 1 + (0.2)1.90^2 \right]^{3.5} \right\} \times 100 \text{ kPa} \end{aligned}$$

so

$$p_{2(\text{upper})} = 85.8 \text{ kPa} \longleftarrow p_{2(\text{upper})}$$

(b) Lower surface—oblique shock

For  $M_1 = 1.80$  and  $\theta_l = 9^\circ$ , we obtain  $\beta_l$  from

$$\tan \theta_l = \frac{2 \cot \beta_l (M_1^2 \sin^2 \beta_l - 1)}{M_1^2 (k + \cos 2\beta_l) + 2} \quad (12.49)$$

and find

$$\beta_l = 42.8^\circ$$

Then we can find  $M_{1n(\text{lower})}$ ,

$$M_{1n(\text{lower})} = M_1 \sin \beta_l = 1.80 \times \sin 42.8^\circ = 1.223$$

From the oblique-shock pressure ratio, Eq. 12.48d, at  $M_{1n(\text{lower})} = 1.223$ ,

$$\frac{p_{2(\text{lower})}}{p_1} = \frac{2k}{k+1} M_{1n(\text{lower})}^2 - \frac{k-1}{k+1} = \frac{2 \times 1.4}{1.4+1} (1.223)^2 - \frac{1.4-1}{1.4+1} = 1.58$$

Hence,

$$p_{2(\text{lower})} = 1.58 p_1 = (1.58)100 \text{ kPa} = 158 \text{ kPa} \longleftarrow p_{2(\text{lower})}$$

This Example Problem illustrates the use of Eq. 12.55 and the isentropic stagnation relations for analysis of isentropic expansion waves and the use of Eq. 12.49 for an oblique shock.



The *Excel* workbooks for isentropic expansion waves and oblique shocks are convenient for performing these calculations.

Example Problem 12.13 hints at the approach we can use to obtain lift and drag coefficients of a supersonic wing, illustrated in Example Problem 12.14.

### EXAMPLE 12.14 Lift and Drag Coefficients of a Supersonic Airfoil


The airplane of Example Problem 12.13 has a symmetric diamond cross section (sharp leading and trailing edges of angle  $\delta = 6^\circ$ ). For a speed of 600 m/s in air at  $4^\circ\text{C}$  and 100 kPa, find the pressure distribution on the upper and lower surfaces, and the lift and drag coefficients for an angle of attack of  $\alpha = 6^\circ$ .

#### EXAMPLE PROBLEM 12.14

**GIVEN:** Air flow over symmetric section shown with:

$$\begin{aligned} p_1 &= 100 \text{ kPa} & \delta &= 6^\circ \\ T_1 &= 4^\circ\text{C} & \alpha &= 6^\circ \\ V_1 &= 600 \text{ m/s} \end{aligned}$$

**FIND:** Pressure distribution, and lift and drag coefficients.

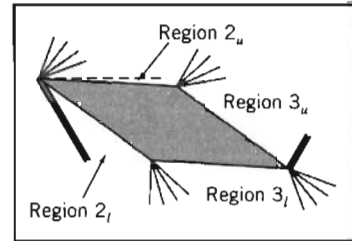

**SOLUTION:**

We first need to obtain the pressures on the four surfaces of the airfoil. We have already obtained in Example Problem 12.13 the data for Region  $2_u$  and Region  $2_l$ :

$$\begin{aligned} M_{2(\text{upper})} &= 1.90 & p_{2(\text{upper})} &= 85.8 \text{ kPa} & \leftarrow & p_{2(\text{upper})} \\ M_{2(\text{lower})} &= 1.489 & p_{2(\text{lower})} &= 158 \text{ kPa} & \leftarrow & p_{2(\text{lower})} \end{aligned}$$

(Note that  $M_{2(\text{lower})} = 1.489$  is obtained from  $M_{1n} = 1.223$  in Example Problem 12.13 by direct use of Eqs. 12.48a and 12.47b.) In addition, for Region  $2_u$ , we found the Prandtl-Meyer function to be  $23.7^\circ$ . Hence, for Region  $3_u$ , we can find the value of the Prandtl-Meyer function from the deflection angle. For  $6^\circ$  leading- and trailing-edges, the airfoil angles at the upper and lower surfaces are each  $174^\circ$ . Hence, at the upper and lower surfaces the deflections are each  $6^\circ$ .

For Region  $3_u$ ,

$$\omega_{3(\text{upper})} = \omega_{2(\text{upper})} + \theta = 23.7^\circ + 6^\circ = 29.7^\circ$$

For this Prandtl-Meyer function value,  $M_{3(\text{upper})}$  is obtained from Eq. 12.55,

$$\omega_{3(\text{upper})} = \sqrt{\frac{k+1}{k-1}} \tan^{-1} \left( \sqrt{\frac{k-1}{k+1} (M_{3(\text{upper})}^2 - 1)} \right) - \tan^{-1} \left( \sqrt{M_{3(\text{upper})}^2 - 1} \right)$$

This can be solved using manual iteration or interpolation, or by using, for example, *Excel's Goal Seek* function,

$$M_{3(\text{upper})} = 2.12$$

Finally, we can find  $p_{3(\text{upper})}$  from repeated use of Eq. 11.20a,

$$\begin{aligned} p_{3(\text{upper})} &= \frac{p_{3(\text{upper})}}{p_0} \frac{p_0}{p_1} p_1 = \left\{ \left[ 1 + \frac{k-1}{2} M_1^2 \right]^{k/(k-1)} \left/ \left[ 1 + \frac{k-1}{2} M_{3(\text{upper})}^2 \right]^{k/(k-1)} \right\} p_1 \\ &= \left\{ \left[ 1 + (0.2)1.80^2 \right]^{3.5} \left/ \left[ 1 + (0.2)2.12^2 \right]^{3.5} \right\} \times 100 \text{ kPa} \end{aligned}$$

so

$$p_{3(\text{upper})} = 60.9 \text{ kPa} \quad \leftarrow \quad p_{3(\text{upper})}$$

For Region 3<sub>l</sub>, we first need to find the Prandtl-Meyer function in the previous region, Region 2<sub>l</sub>. For  $M_{2(\text{lower})} = 1.223$ , we find from Eq. 12.55,

$$\begin{aligned} \omega_{2(\text{lower})} &= \sqrt{\frac{k+1}{k-1}} \tan^{-1} \left( \sqrt{\frac{k-1}{k+1} (M_{2(\text{lower})}^2 - 1)} \right) - \tan^{-1} \left( \sqrt{M_{2(\text{lower})}^2 - 1} \right) \\ &= \sqrt{\frac{1.4+1}{1.4-1}} \tan^{-1} \left( \sqrt{\frac{1.4-1}{1.4+1} (1.489^2 - 1)} \right) - \tan^{-1} \left( \sqrt{1.489^2 - 1} \right) \end{aligned}$$

so

$$\omega_{2(\text{lower})} = 11.58^\circ$$

Hence, for Region 3<sub>l</sub>,

$$\omega_{3(\text{lower})} = \omega_{2(\text{lower})} + \theta = 11.58^\circ + 6^\circ = 17.6^\circ$$

and  $M_{3(\text{lower})}$  is obtained from Eq. 12.55,

$$\omega_{3(\text{lower})} = \sqrt{\frac{k+1}{k-1}} \tan^{-1} \left( \sqrt{\frac{k-1}{k+1} (M_{3(\text{lower})}^2 - 1)} \right) - \tan^{-1} \left( \sqrt{M_{3(\text{lower})}^2 - 1} \right)$$

Once again, this can be solved using manual iteration or interpolation, or by using, for example, *Excel's Goal Seek* function,

$$M_{3(\text{lower})} = 1.693$$

Finally, we can find  $p_{3(\text{lower})}$  from repeated use of Eq. 11.20a,

$$\begin{aligned} p_{3(\text{lower})} &= \frac{p_{3(\text{lower})}}{p_{0_2}} \frac{p_{0_2}}{p_{2(\text{lower})}} p_{2(\text{lower})} = \left\{ \left[ 1 + \frac{k-1}{2} M_{2(\text{lower})}^2 \right]^{k/(k-1)} \right\} / \left\{ \left[ 1 + \frac{k-1}{2} M_{3(\text{lower})}^2 \right]^{k/(k-1)} \right\} p_{2(\text{lower})} \\ &= \left\{ \left[ 1 + (0.2)1.489^2 \right]^{3.5} \right\} / \left\{ \left[ 1 + (0.2)1.693^2 \right]^{3.5} \right\} \times 158 \text{ kPa} \end{aligned}$$

Hence,

$$p_{3(\text{lower})} = 117 \text{ kPa} \quad \leftarrow \quad p_{3(\text{lower})}$$

(Note that we cannot use  $p_0$ , the stagnation pressure of the incoming flow for computing this pressure, because the flow experienced a shock before reaching the lower surface.)

To compute the lift and drag coefficients, we need the lift and drag force.


First we find the vertical and horizontal forces with respect to coordinates orthogonal to the airfoil.

The vertical force (assuming the chord  $c$  and span  $s$  are in meters) is given by

$$\begin{aligned} F_V &= s \frac{c}{2} \left\{ (p_{2(\text{lower})} + p_{3(\text{lower})}) - (p_{2(\text{upper})} + p_{3(\text{upper})}) \right\} \\ F_V &= s(\text{m}) \frac{c(\text{m})}{2} \left\{ (158 + 117) - (85.8 + 60.9) \right\} (\text{kPa}) = 64.2 \text{ } s c \text{ kN} \end{aligned}$$

and the horizontal force by

$$\begin{aligned} F_H &= s \frac{c}{2} \tan 3^\circ \left\{ (p_{2(\text{upper})} + p_{2(\text{lower})}) - (p_{3(\text{upper})} + p_{3(\text{lower})}) \right\} \\ F_H &= s(\text{m}) \frac{c(\text{m})}{2} \tan 3^\circ \left\{ (85.8 + 158) - (60.9 + 117) \right\} (\text{kPa}) = 1.73 \text{ } s c \text{ kN} \end{aligned}$$

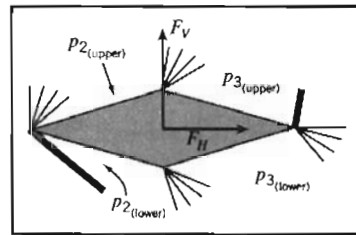

The lift and drag forces (per unit plan area) are then

$$F_L = F_V \cos 6^\circ - F_H \sin 6^\circ = 63.6 \text{ sc kN}$$

and

$$F_D = F_V \sin 6^\circ + F_H \cos 6^\circ = 8.42 \text{ sc kN}$$

The lift and drag coefficients require the air density,

$$\rho = \frac{p}{RT} = \frac{100 \times 10^3 \text{ N}}{\text{m}^2} \times \frac{\text{kg} \cdot \text{K}}{287 \text{ N} \cdot \text{m}} \times \frac{1}{277 \text{ K}} = 1.258 \text{ kg/m}^3$$

The lift coefficient is then

$$C_L = \frac{F_L}{\frac{1}{2} \rho V^2 sc} = 2 \times \frac{63.6 \times 10^3 \text{ N}}{1.258 \frac{\text{m}^3}{\text{kg}} \times (600)^2 \frac{\text{s}^2}{\text{m}^2}} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} = 0.281 \longleftarrow C_L$$

and the drag coefficient is

$$C_D = \frac{F_D}{\frac{1}{2} \rho V^2 sc} = 2 \times \frac{8.42 \times 10^3 \text{ N}}{1.258 \frac{\text{m}^3}{\text{kg}} \times (600)^2 \frac{\text{s}^2}{\text{m}^2}} \times \frac{\text{kg} \cdot \text{m}}{\text{N} \cdot \text{s}^2} = 0.037 \longleftarrow C_D$$

(Note that instead of using  $\frac{1}{2} \rho V^2$  in the denominator of the coefficients, we could have used  $\frac{1}{2} k p M^2$ .)

The lift-drag ratio is approximately 7.6.

This Example Problem illustrates the use of oblique shock and isentropic expansion wave equations to determine the pressure distribution on an airfoil.

- ✓ We did not need to analyze the flow after the trailing expansion waves and oblique shock—unlike subsonic flow, the downstream condition has no effect on the airfoil.
- ✓ Unlike a subsonic flow, a supersonic flow can generate drag even in the absence of boundary layers and flow separation.
- ✓ Note that, unlike a subsonic flow, a supersonic flow *can* negotiate a sharp corner, even if we include the effect of a viscous boundary layer (as we have not done here). This is because an expanding supersonic flow has a negative pressure gradient, i.e., it is *not* adverse!
- ✓ An actual airfoil is not likely to have planar surfaces, so more sophisticated techniques than we can cover here are needed. However, this example illustrates the kind of results to be expected when analyzing a supersonic airfoil.



The *Excel* workbooks for oblique shocks and isentropic expansion waves are convenient for performing these calculations.

## 12-8 SUMMARY

In this chapter, we:

- ✓ Developed a set of governing equations (continuity, the momentum equation, the first and second laws of thermodynamics, and equations of state) for one-dimensional flow of a compressible fluid (in particular an ideal gas) as it may be affected by area change, friction, heat exchange, and normal shocks.
- ✓ Simplified these equations for isentropic flow affected only by area change, and developed isentropic relations for analyzing such flows.
- ✓ Simplified the equations for flow affected only by friction, and developed the Fanno-line relations for analyzing such flows.
- ✓ Simplified the equations for flow affected only by heat exchange, and developed the Rayleigh-line relations for analyzing such flows.
- ✓ Simplified the equations for flow through a normal shock, and developed normal-shock relations for analyzing such flows.
- ✓ Introduced some basic concepts of two-dimensional flow: oblique shocks and expansion waves.

While investigating the above flows we developed insight into some interesting compressible flow phenomena, including:

- ✓ Use of  $T_s$  plots in visualizing flow behavior.
- ✓ Flow through, and necessary shape of, subsonic and supersonic nozzles and diffusers.
- ✓ The phenomenon of choked flow in converging nozzles and CD nozzles, and the circumstances under which shock waves develop in CD nozzles.
- ✓ \*The phenomena of choked flow in flows with friction and flows with heat exchange.
- ✓ Computation of pressures and lift and drag coefficients for a supersonic airfoil.

## REFERENCES

1. *HP 48G Series User's Guide*, Hewlett-Packard Company, Corvallis Division, 1000 N.E. Circle Blvd., Corvallis, OR 97330.
2. *Isentropic Calculator* (<http://www.aoe.vt.edu/aoe3114/calc.html>), William Devenport, Aerospace and Ocean Engineering, Virginia Polytechnic Institute and State University.
3. Hermann, R., *Supersonic Inlet Diffusers*. Minneapolis, MN: Minneapolis-Honeywell Regulator Co., Aeronautical Division, 1956.
4. Runstadler, P.W., Jr., "Diffuser Data Book," Creare, Inc., Hanover, NH, Technical Note 186, 1975.
5. Seddon, J., and E. L. Goldsmith, *Intake Aerodynamics*. New York: American Institute of Aeronautics and Astronautics, 1985.
6. Shapiro, A. H., *The Dynamics and Thermodynamics of Compressible Fluid Flow*, Vol. 1. New York: Ronald Press, 1953.
7. Zucrow, M. J., and J. D. Hoffman, *Compressible Flow*, Vol. 1. New York: Wiley, 1976.
8. Coles, D., *Channel Flow of a Compressible Fluid*, NCFMF video.
9. Baals, D. W., and W. R. Corliss, *Wind Tunnels of NASA*. Washington, D.C.: National Aeronautics and Space Administration, SP-440, 1981.
10. Pope, A., and K. L. Goin, *High-Speed Wind Tunnel Testing*. New York: Krieger, 1978.
11. Glass, I.I., "Some Aspects of Shock-Wave Research," *AIAA J.*, 25, 2, February 1987, pp. 214–229.

\* This topic applies to sections that may be omitted without loss of continuity in the text material.

## PROBLEMS

Most of the problems in this chapter involve computation of isentropic, Fanno, Rayleigh, normal shock, oblique shock, or isentropic expansion wave effects. The CD contains associated *Excel* workbooks for each of these phenomena, and these are recommended for use while solving the problems (the CD also contains *Excel* add-in functions for your optional installation). To avoid needless duplication, the CD symbol will only be used next to problems when *Excel* has an *additional* benefit (e.g., for graphing).


- 12.1 Steam flows steadily and isentropically through a nozzle. At an upstream section where the speed is negligible, the temperature and pressure are 880°F and 875 psia. At a section where the nozzle diameter is 0.50 in., the steam pressure is 290 psia. Determine the speed and Mach number at this section and the mass flow rate of steam. Sketch the passage shape.
- 12.2 Steam flows steadily and isentropically through a nozzle. At an upstream section where the speed is negligible, the temperature and pressure are 900°F and 900 psia. At a section where the nozzle diameter is 0.188 in., the steam pressure is 600 psia. Determine the speed and Mach number at this section and the mass flow rate of steam. Sketch the passage shape.
- 12.3 At a section in a passage, the pressure is 20 psia, the temperature is 50°F, and the speed is 388 ft/s. For isentropic flow of air, determine the Mach number at the point where the pressure is 6 psia. Sketch the passage shape.
- 12.4 At a section in a passage, the pressure is 200 kPa (abs), the temperature is 32°C, and the speed is 525 m/s. At a section downstream the Mach number is 2. Determine the pressure at this downstream location for isentropic flow of air. Sketch the passage shape.
- 12.5 Air flows steadily and isentropically through a passage. At section ①, where the cross-sectional area is 0.02 m<sup>2</sup>, the air is at 40.0 kPa(abs), 60°C, and  $M = 2.0$ . At section ② downstream, the speed is 519 m/s. Calculate the Mach number at section ②. Sketch the shape of the passage between sections ① and ②.
- 12.6 Air, at an absolute pressure of 60.0 kPa and 27°C, enters a passage at 486 m/s, where  $A = 0.02$  m<sup>2</sup>. At section ② downstream,  $p = 78.8$  kPa (abs). Assuming isentropic flow, calculate the Mach number at section ②. Sketch the flow passage.
- 12.7 Air flows steadily and isentropically through a passage at 65 kg/s. At the section where  $A = 0.513$  m<sup>2</sup>,  $M = 2$ ,  $T = 0^\circ\text{C}$ , and  $p = 15.0$  kPa (abs). Determine the speed and cross-sectional area downstream where  $T = 106^\circ\text{C}$ . Sketch the flow passage.
- 12.8 For isentropic flow of air, at a section in a passage,  $A = 0.25$  m<sup>2</sup>,  $p = 15$  kPa (abs),  $T = 10^\circ\text{C}$ , and  $V = 590$  m/s. Find the Mach number and the mass flow rate. At a section downstream the temperature is 137°C and the Mach number is 0.75. Determine the cross-sectional area and pressure at this downstream location. Sketch the passage shape.
- 12.9 A passage is designed to expand air isentropically to atmospheric pressure from a large tank in which properties are held constant at 5°C and 304 kPa (abs). The desired flow rate is 1 kg/s. Assuming the passage is 5 m long, and that the Mach number increases linearly with position in the passage, plot the cross-sectional area and pressure as functions of position.
- 12.10 Air flows isentropically through a converging nozzle into a receiver in which the absolute pressure is 240 kPa. The air enters the nozzle with negligible speed at a pressure of 406 kPa (abs) and a temperature of 95°C. Determine the mass flow rate through the nozzle for a throat area of 0.01 m<sup>2</sup>.



- 12.11 Air flows isentropically through a converging nozzle into a receiver where the pressure is 33 psia. If the pressure is 50 psia and the speed is 500 ft/s at the nozzle location where the Mach number is 0.4, determine the pressure, speed, and Mach number at the nozzle throat.
- 12.12 Air flowing isentropically through a converging nozzle discharges to the atmosphere. At the section where the absolute pressure is 250 kPa, the temperature is 20°C and the air speed is 200 m/s. Determine the nozzle throat pressure.
- 12.13 Air flowing isentropically through a converging nozzle discharges to the atmosphere. At a section the area is  $A = 0.05 \text{ m}^2$ ,  $T = 3.3^\circ\text{C}$ , and  $V = 200 \text{ m/s}$ . If the flow is just choked, find the pressure and the Mach number at this location. What is the throat area? What is the mass flow rate?
- 12.14 Air flows from a large tank ( $p = 650 \text{ kPa (abs)}$ ,  $T = 550^\circ\text{C}$ ) through a converging nozzle, with a throat area of  $600 \text{ mm}^2$ , and discharges to the atmosphere. Determine the mass rate of flow for isentropic flow through the nozzle.
- 12.15 Air, with  $p_0 = 650 \text{ kPa (abs)}$  and  $T_0 = 350 \text{ K}$ , flows isentropically through a converging nozzle. At the section in the nozzle where the area is  $2.6 \times 10^{-3} \text{ m}^2$ , the Mach number is 0.5. The nozzle discharges to a back pressure of 270 kPa (abs). Determine the exit area of the nozzle.
- 12.16 A converging nozzle is connected to a large tank that contains compressed air at 15°C. The nozzle exit area is  $0.001 \text{ m}^2$ . The exhaust is discharged to the atmosphere. To obtain a satisfactory shadow photograph of the flow pattern leaving the nozzle exit, the pressure in the exit plane must be greater than 325 kPa (gage). What pressure is required in the tank? What mass flow rate of air must be supplied if the system is to run continuously? Show static and stagnation state points on a  $Ts$  diagram.
- 12.17 Air at 0°C is contained in a large tank on the space shuttle. A converging section with exit area  $1 \times 10^{-3} \text{ m}^2$  is attached to the tank, through which the air exits to space at a rate of 2 kg/s. What are the pressure in the tank, and the pressure, temperature, and speed at the exit?
- 12.18 A large tank supplies air to a converging nozzle that discharges to atmospheric pressure. Assume the flow is reversible and adiabatic. For what range of tank pressures will the flow at the nozzle exit be sonic? If the tank pressure is 600 kPa (abs) and the temperature is 600 K, determine the mass flow rate through the nozzle, if the exit area is  $1.29 \times 10^{-3} \text{ m}^2$ .
- 12.19 A large tank initially is evacuated to 27 in. Hg (vacuum). (Ambient conditions are 29.4 in. Hg at 70°F.) At  $t = 0$ , an orifice of 0.25 in. diameter is opened in the tank wall; the vena contracta area is 65 percent of the geometric area. Calculate the mass flow rate at which air initially enters the tank. Show the process on a  $Ts$  diagram. Make a schematic plot of mass flow rate as a function of time. Explain why the plot is nonlinear.
- 12.20 An 18 in. diameter spherical cavity initially is evacuated. The cavity is to be filled with air for a combustion experiment. The pressure is to be 5 psia, measured after its temperature reaches  $T_{\text{atm}}$ . Assume the valve on the cavity is a converging nozzle with throat diameter of 0.05 in., and the surrounding air is at standard conditions. For how long should the valve be opened to achieve the desired final pressure in the cavity? Calculate the entropy change for the air in the cavity.
- 12.21 Air flows isentropically through a converging nozzle attached to a large tank, where the absolute pressure is 171 kPa and the temperature is 27°C. At the inlet section the Mach number is 0.2. The nozzle discharges to the atmosphere; the discharge area is  $0.015 \text{ m}^2$ . Determine the magnitude and direction of the force that must be applied to hold the nozzle in place.



- 12.22 A stream of air flowing in a duct ( $A = 5 \times 10^{-4} \text{ m}^2$ ) is at  $p = 300 \text{ kPa (abs)}$ , has  $M = 0.5$ , and flows at  $\dot{m} = 0.25 \text{ kg/s}$ . Determine the local isentropic stagnation temperature. If the cross-sectional area of the passage were reduced downstream, determine the maximum percentage reduction of area allowable without reducing the flow rate (assume isentropic flow). Determine the speed and pressure at the minimum area location.
- 12.23 Consider a "rocket cart" propelled by a jet supplied from a tank of compressed air on the cart. Initially, air in the tank is at  $1.3 \text{ MPa (abs)}$  and  $20^\circ\text{C}$ , and the mass of the cart and tank is  $M_0 = 25 \text{ kg}$ . The air exhausts through a converging nozzle with exit area  $A_e = 30 \text{ mm}^2$ . Rolling resistance of the cart is  $F_R = 6 \text{ N}$ ; aerodynamic resistance is negligible. For the instant after air begins to flow through the nozzle: (a) compute the pressure in the nozzle exit plane, (b) evaluate the mass flow rate of air through the nozzle, and (c) calculate the acceleration of the tank and cart assembly.
- 12.24 An air-jet-driven experimental rocket of  $25 \text{ kg}$  mass is to be launched from the space shuttle into space. The temperature of the air in the rocket's tank is  $125^\circ\text{C}$ . A converging section with exit area  $25 \text{ mm}^2$  is attached to the tank, through which the air exits to space at a rate of  $0.05 \text{ kg/s}$ . What is the pressure in the tank, and the pressure, temperature, and air speed at the exit when the rocket is first released? What is the initial acceleration of the rocket?
- 12.25 A cylinder of gas used for welding contains helium at  $3000 \text{ psig}$  and room temperature. The cylinder is knocked over, its valve is broken off, and gas escapes through a converging passage. The minimum flow area is  $0.10 \text{ in.}^2$  at the outlet section where the gas flow is uniform. Find (a) the mass flow rate at which gas leaves the cylinder and (b) the instantaneous acceleration of the cylinder (assume the cylinder axis is horizontal and its mass is  $125 \text{ lb}$ ). Show static and stagnation states and the process path on a  $Ts$  diagram.
- 12.26 A converging nozzle is bolted to the side of a large tank. Air inside the tank is maintained at a constant  $50 \text{ psia}$  and  $100^\circ\text{F}$ . The inlet area of the nozzle is  $10 \text{ in.}^2$  and the exit area is  $1 \text{ in.}^2$ . The nozzle discharges to the atmosphere. For isentropic flow in the nozzle, determine the total force on the bolts, and indicate whether the bolts are in tension or compression.
- 12.27 An ideal gas, with  $k = 1.4$ , flows isentropically through the converging nozzle shown and discharges into a large duct where the pressure is  $p_2 = 150 \text{ kPa (abs)}$ . The gas is *not* air and the gas constant,  $R$ , is unknown. Flow is steady and uniform at all cross-sections. Find the exit area of the nozzle,  $A_2$ , and the exit speed,  $V_2$ .

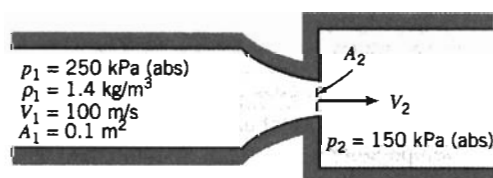

P12.27


- 12.28 An insulated air tank with  $V = 107 \text{ ft}^3$  is used in a blowdown installation. Initially the tank is charged to  $400 \text{ psia}$  at  $800^\circ\text{R}$ . The mass flow rate of air from the tank is a function of time; during the first  $30 \text{ s}$  of blowdown  $64.5 \text{ lbm}$  of air leaves the tank. Determine the air temperature in the tank after  $30 \text{ s}$  of blowdown. Estimate the nozzle throat area.

- 12.29 A jet transport aircraft, with pressurized cabin, cruises at 11 km altitude. The cabin temperature and pressure initially are at 25°C and equivalent to 2.5 km altitude. The interior volume of the cabin is 25 m<sup>3</sup>. Air escapes through a small hole with effective flow area of 0.002 m<sup>2</sup>. Calculate the time required for the cabin pressure to decrease by 40 percent. Plot the cabin pressure as a function of time.
- 12.30 A large insulated tank, pressurized to 620 kPa (gage), supplies air to a converging nozzle which discharges to atmosphere. The initial temperature in the tank is 127°C. When flow through the nozzle is initiated, what is the Mach number in the exit plane of the nozzle? What is the pressure in the exit plane when the flow is initiated? At what condition will the exit-plane Mach number change? How will the exit-plane pressure vary with time? How will flow rate through the nozzle vary with time? What would you estimate the air temperature in the tank to be when flow through the nozzle approaches zero?
- 12.31 Air escapes from a high-pressure bicycle tire through a hole with diameter  $d = 0.254$  mm. The initial pressure in the tire is  $p_1 = 620$  kPa (gage). (Assume the temperature remains constant at 27°C.) The internal volume of the tire is approximately  $4.26 \times 10^{-4}$  m<sup>3</sup>, and is constant. Estimate the time needed for the pressure in the tire to drop to 310 kPa (gage). Compute the change in specific entropy of the air in the tire during this process. Plot the tire pressure as a function of time.
- 12.32 A converging-diverging nozzle is attached to a very large tank of air in which the pressure is 21 psia and the temperature is 100°F. The nozzle exhausts to the atmosphere where the pressure is 14.7 psia. The exit area of the nozzle is 1 in.<sup>2</sup> What is the flow rate through the nozzle? Assume the flow is isentropic.
- 12.33 At the design condition of the system of Problem 12.32, the exit Mach number is  $M_e = 2.0$ . Find the pressure in the tank of Problem 12.32 (keeping the temperature constant) for this condition. What is the flow rate? What is the throat area?
- 12.34 A converging-diverging nozzle, designed to expand air to  $M = 3.0$ , has a 250 mm<sup>2</sup> exit area. The nozzle is bolted to the side of a large tank and discharges to standard atmosphere. Air in the tank is pressurized to 4.5 MPa (gage) at 750 K. Assume flow within the nozzle is isentropic. Evaluate the pressure in the nozzle exit plane. Calculate the mass flow rate of air through the nozzle.
- 12.35 A converging-diverging nozzle, with a throat area of 2 in.<sup>2</sup>, is connected to a large tank in which air is kept at a pressure of 80 psia and a temperature of 60°F. If the nozzle is to operate at design conditions (flow is isentropic) and the ambient pressure outside the nozzle is 12.9 psia, calculate the exit area of the nozzle and the mass flow rate.
- 12.36 Air, at a stagnation pressure of 7.20 MPa (abs) and a stagnation temperature of 1100 K, flows isentropically through a converging-diverging nozzle having a throat area of 0.01 m<sup>2</sup>. Determine the speed and the mass flow rate at the downstream section where the Mach number is 4.0.
- 12.37 Air is to be expanded through a converging-diverging nozzle by a frictionless adiabatic process, from a pressure of 1.10 MPa (abs) and a temperature of 115°C, to a pressure of 141 kPa (abs). Determine the throat and exit areas for a well-designed shockless nozzle, if the mass flow rate is 2 kg/s.
- 12.38 Air flows isentropically through a converging-diverging nozzle attached to a large tank, in which the pressure is 251 psia and the temperature is 500°R. The nozzle is operating at design conditions for which the nozzle exit pressure,  $p_e$ , is equal to the surrounding atmospheric pressure,  $p_a$ . The exit area of the nozzle is  $A_e = 1.575$  in.<sup>2</sup> Calculate the flow rate through the nozzle. Plot the mass flow rate as the temperature of the tank is progressively increased to 2000°R (all pressures remaining the same). Explain this result (e.g., compare the mass flow rates at 500°R and 2000°R).

- 12.58 For the conditions of Problem 12.52, determine the duct length. Assume the duct is circular and made from commercial steel. Plot the variations of pressure and Mach number versus distance along the duct.
- 12.59 Consider the flow described in Example Problem 12.7. Using the flow functions for Fanno-line flow of an ideal gas, plot static pressure, temperature, and Mach number versus  $L/D$  measured from the tube inlet; continue until the choked state is reached.
- 12.60 Using coordinates  $T/T_0$  and  $(s - s^*)/c_p$ , where  $s^*$  is the entropy at  $M = 1$ , plot the Fanno line starting from the inlet conditions specified in Example Problem 12.7. Proceed to  $M = 1$ .
- 12.61 Using coordinates  $T/T^*$  and  $(s - s^*)/c_p$ , where  $s^*$  is the entropy at  $M = 1$ , plot the Fanno line for air flow for  $0.1 < M < 3.0$ .
- 12.62 Air flows through a 40 ft length of insulated constant-area duct with  $D = 2.12$  ft. The relative roughness is  $e/D = 0.002$ . At the duct inlet,  $T_1 = 100^\circ\text{F}$  and  $p_1 = 17.0$  psia. At a location downstream,  $p_2 = 14.7$  psia, and the flow is subsonic. Is sufficient information given to solve for  $M_1$  and  $M_2$ ? Prove your answer graphically. Find the mass flow rate in the duct and  $T_2$ .
- 12.63 Air brought into a tube through a converging-diverging nozzle initially has stagnation temperature and pressure of  $1000^\circ\text{R}$  and 200 psia. Flow in the nozzle is isentropic; flow in the tube is adiabatic. At the junction between the nozzle and tube the pressure is 2.62 psia. The tube is 4 ft long and 1 in. in diameter. If the outlet Mach number is unity, find the average friction factor over the tube length. Calculate the change in pressure between the tube inlet and discharge.
- 12.64 For the conditions of Problem 12.51, determine the duct length. Assume the duct is circular and made from commercial steel. Plot the variations of pressure and Mach number versus distance along the duct.
- 12.65 Beginning with the inlet conditions of Problem 12.51, and using coordinates  $T/T_0$  and  $(s - s^*)/c_p$ , plot the supersonic and subsonic branches of the Fanno line.
- 12.66 A smooth constant-area duct assembly ( $D = 150$  mm) is to be fed by a converging-diverging nozzle from a tank containing air at 295 K and 1.0 MPa (abs). Shock-free operation is desired. The Mach number at the duct inlet is to be 2.1 and the Mach number at the duct outlet is to be 1.4. The entire assembly will be insulated. Find (a) the pressure required at the duct outlet, (b) the duct length required, and (c) the change in specific entropy. Show the static and stagnation state points and the process path on a  $Ts$  diagram.
- \*12.67 In long, constant-area pipelines, as used for natural gas, temperature is constant. Assume gas leaves a pumping station at 50 psia and  $70^\circ\text{F}$  at  $M = 0.10$ . At the section along the pipe where the pressure has dropped to 20 psia, calculate the Mach number of the flow. Is heat added to or removed from the gas over the length between the pressure taps? Justify your answer: Sketch the process on a  $Ts$  diagram. Indicate (qualitatively)  $T_{01}$ ,  $T_{02}$ , and  $p_{02}$ .
- \*12.68 Air enters a horizontal channel of constant area at  $200^\circ\text{F}$ , 600 psia, and 350 ft/s. Determine the limiting pressure for isothermal flow. Compare with the limiting pressure for frictional adiabatic flow.
- \*12.69 Air enters a 6 in. diameter pipe at  $60^\circ\text{F}$ , 200 psia, and 190 ft/s. The average friction factor is 0.016. Flow is isothermal. Calculate the local Mach number and the distance from the entrance of the channel, at the point where the pressure reaches 75 psia.

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- \*12.70** A clean steel pipe is 950 ft long and 5.25 in. inside diameter. Air at 80°F, 120 psia, and 80 ft/s enters the pipe. Calculate and compare the pressure drops through the pipe for (a) incompressible, (b) isothermal, and (c) adiabatic flows.
- \*12.71** Natural gas (molecular mass  $M_m = 18$  and  $k = 1.3$ ) is to be pumped through a 36 in. i.d. pipe connecting two compressor stations 40 miles apart. At the upstream station the pressure is not to exceed 90 psig, and at the downstream station it is to be at least 10 psig. Calculate the maximum allowable rate of flow (ft<sup>3</sup>/day at 70°F and 1 atm) assuming sufficient heat exchange through the pipe to maintain the gas at 70°F.
- 12.72** Consider frictionless flow of air in a constant-area duct. At section ①,  $M_1 = 0.50$ ,  $p_1 = 1.10$  MPa (abs), and  $T_{01} = 333$  K. Through the effect of heat exchange, the Mach number at section ② is  $M_2 = 0.90$  and the stagnation temperature is  $T_{02} = 478$  K. Determine the amount of heat exchange per unit mass to or from the fluid between sections ① and ② and the pressure difference,  $p_1 - p_2$ .
- 12.73** Air flows through a 2 in. inside diameter pipe with negligible friction. Inlet conditions are  $T_1 = 60^\circ\text{F}$ ,  $p_1 = 150$  psia, and  $M_1 = 0.30$ . Determine the heat exchange per pound of air required to produce  $M_2 = 1.0$  at the pipe exit, where  $p_2 = 72.0$  psia.
- 12.74** Air flows without friction through a short duct of constant area. At the duct entrance,  $M_1 = 0.30$ ,  $T_1 = 50^\circ\text{C}$ , and  $\rho_1 = 2.16$  kg/m<sup>3</sup>. As a result of heating, the Mach number and pressure at the tube outlet are  $M_2 = 0.60$  and  $p_2 = 150$  kPa. Determine the heat addition per unit mass and the entropy change for the process.
- 12.75** Liquid Freon, used to cool electronic components, flows steadily into a horizontal tube of constant diameter,  $D = 15.9$  mm. Heat is transferred to the flow, and the liquid boils and leaves the tube as vapor. The effects of friction are negligible compared with the effects of heat addition. Flow conditions are shown. Find (a) the rate of heat transfer and (b) the pressure difference,  $p_1 - p_2$ .

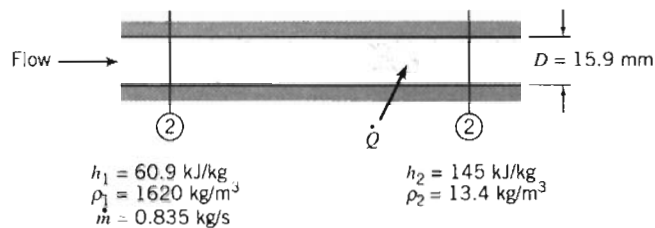

P12.75


- 12.76** Air flows at 1.42 kg/s through a 100 mm diameter duct. At the inlet section, the temperature and absolute pressure are 52°C and 60.0 kPa. At the section downstream where the flow is choked,  $T_2 = 45^\circ\text{C}$ . Determine the heat addition per unit mass, the entropy change, and the change in stagnation pressure for the process, assuming frictionless flow.
- 12.77** Consider frictionless flow of air in a duct of constant area,  $A = 0.087$  ft<sup>2</sup>. At one section, the static properties are 500°R and 15.0 psia and the Mach number is 0.2. At a section downstream, the static pressure is 10.0 psia. Draw a  $Ts$  diagram showing the static and stagnation states. Calculate the flow speed and temperature at the downstream location. Evaluate the rate of heat exchange for the process.
- 12.78** A combustor from a JT8D jet engine (as used on the Douglas DC-9 aircraft) has an air flow rate of 15 lbm/s. The area is constant and frictional effects are negligible. Properties at the combustor inlet are 1260°R, 235 psia, and 609 ft/s. At the

\* These problems require material from sections that may be omitted without loss of continuity in the text material.

combustor outlet,  $T = 1840^\circ\text{R}$  and  $M = 0.476$ . The heating value of the fuel is 18,000 Btu/lbm; the air-fuel ratio is large enough so properties are those of air. Calculate the pressure at the combustor outlet. Determine the rate of energy addition to the air stream. Find the mass flow rate of fuel required; compare it to the air flow rate. Show the process on a  $Ts$  diagram, indicating static and stagnation states and the process path.

- 12.79 Consider frictionless flow of air in a duct with  $D = 4$  in. At section ①, the temperature and pressure are  $30^\circ\text{F}$  and 10 psia; the mass flow rate is 1.2 lbm/s. How much heat may be added without choking the flow? Evaluate the resulting change in stagnation pressure.
- 12.80 A constant-area duct is fed with air from a converging-diverging nozzle. At the entrance to the duct, the following properties are known:  $p_{01} = 800$  kPa (abs),  $T_{01} = 700$  K, and  $M_1 = 3.0$ . A short distance down the duct (at section ②)  $p_2 = 46.4$  kPa. Assuming frictionless flow, determine the speed and Mach number at section ②, and the heat exchange between the inlet and section ②.
- 12.81 Air flows steadily and without friction at 1.83 kg/s through a duct with cross-sectional area of  $0.02$  m<sup>2</sup>. At the duct inlet, the temperature and absolute pressure are  $260^\circ\text{C}$  and 126 kPa. The exit flow discharges subsonically to atmospheric pressure. Determine the Mach number, temperature, and stagnation temperature at the duct outlet and the heat exchange rate.
- 12.82 Air flows without friction in a short section of constant-area duct. At the duct inlet,  $M_1 = 0.30$ ,  $T_1 = 50^\circ\text{C}$ , and  $\rho_1 = 2.16$  kg/m<sup>3</sup>. At the duct outlet,  $M_2 = 0.60$ . Determine the heat addition per unit mass, the entropy change, and the change in stagnation pressure for the process.
- 12.83 In the frictionless flow of air through a 100 mm diameter duct, 1.42 kg/s enters at  $52^\circ\text{C}$  and 60.0 kPa (abs). Determine the amount of heat that must be added to choke the flow, and the fluid properties at the choked state.
- 12.84 Air, from an aircraft inlet system, enters the engine combustion chamber where heat is added during a frictionless process in a tube with constant area of  $0.01$  m<sup>2</sup>. The local isentropic stagnation temperature and Mach number entering the combustor are 427 K and 0.3. The mass flow rate is 0.5 kg/s. When the rate of heat addition is set at 404 kW, flow leaves the combustor at 1026 K and 22.9 kPa (abs). Determine for this process (a) the Mach number at the combustor outlet, (b) the static pressure at the combustor inlet, and (c) the change in local isentropic stagnation pressure during the heat addition process. Show static and stagnation state points and indicate the process path on a  $Ts$  diagram.
- 12.85 Consider steady, one-dimensional flow of air in a combustor with constant area of  $0.5$  ft<sup>2</sup>, where hydrocarbon fuel, added to the air stream, burns. The process is equivalent to simple heating because the amount of fuel is small compared to the amount of air; heating occurs over a short distance so that friction is negligible. Properties at the combustor inlet are  $818^\circ\text{R}$ , 200 psia, and  $M = 0.3$ . The speed at the combustor outlet must not exceed 2000 ft/s. Find the properties at the combustor outlet and the heat addition rate. Show the process path on a  $Ts$  diagram, indicating static and stagnation state points before and after the heat addition.
- 12.86 Flow in a gas turbine combustor is modeled as steady, one-dimensional, frictionless heating of air in a channel of constant area. For a certain process, the inlet conditions are  $960^\circ\text{F}$ , 225 psia, and  $M = 0.4$ . Calculate the maximum possible heat addition. Find all fluid properties at the outlet section and the reduction in stagnation pressure. Show the process path on a  $Ts$  diagram, indicating all static and stagnation state points.

- 12.87 A supersonic wind tunnel is supplied from a high-pressure tank of air at 25°C. The test section temperature is to be maintained above 0°C to prevent formation of ice particles. To accomplish this, air from the tank is heated before it flows into a converging-diverging nozzle which feeds the test section. The heating is done in a short section with constant area. The heater output is  $\dot{Q} = 10$  kW. The design Mach number in the wind tunnel test section is to be 3.0. Evaluate the stagnation temperature required at the heater exit. Calculate the maximum mass flow rate at which air can be supplied to the wind tunnel test section. Determine the area ratio,  $A_e/A_r$ .
- 12.88 Consider steady flow of air in a combustor where thermal energy is added by burning fuel. Neglect friction. Assume thermodynamic properties are constant and equal to those of pure air. Calculate the stagnation temperature at the burner exit. Compute the Mach number at the burner exit. Evaluate the heat addition per unit mass and the heat exchange rate. Express the rate of heat addition as a fraction of the maximum rate of heat addition possible with this inlet Mach number.

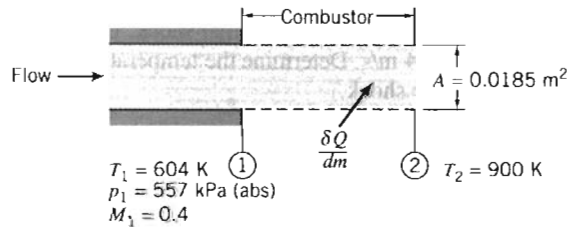


P12.88

- 12.89 Using coordinates  $T/T^*$  and  $(s - s^*)/c_p$ , where  $s^*$  is the entropy at  $M = 1$ , plot the Rayleigh line for air flow ( $k = 1.4$ ) for  $0.4 < M < 3.0$ .
- 12.90 Beginning with the inlet conditions of Problem 12.50, and using coordinates  $T/T_{01}$  and  $(s - s^*)/c_p$ , plot the supersonic and subsonic branches of the Rayleigh line for the flow.
- 12.91 Frictionless flow of air in a constant-area duct discharges to atmospheric pressure at section ②. Upstream at section ①,  $M_1 = 3.0$ ,  $T_1 = 215^\circ\text{R}$ , and  $p_{t1} = 1.73$  psia. Between sections ① and ②, 48.5 Btu/lbm of air is added to the flow. Determine  $M_2$  and  $p_2$ . In addition to a  $Ts$  diagram, sketch the pressure distribution versus distance along the channel, labeling sections ① and ②.
- 12.92 A jet transport aircraft cruises at  $M = 0.85$  at an altitude of 40,000 ft. Air for the cabin pressurization system is taken aboard through an inlet duct and slowed isentropically to 100 ft/s relative to the aircraft. Then it enters a compressor where its pressure is raised adiabatically to provide a cabin pressure equivalent to 8000 ft altitude. The air temperature increase across the compressor is 170°F. Finally, the air is cooled to 70°F (in a heat exchanger with negligible friction) before it is added to the cabin air. Sketch a diagram of the system, labeling all components and numbering appropriate cross-sections. Determine the stagnation and static temperature and pressure at each cross-section. Sketch to scale and label a  $Ts$  diagram showing the static and stagnation state points and indicating the process paths. Evaluate the work added in the compressor and the energy rejected in the heat exchanger.
- 12.93 A normal shock occurs when a pitot-static tube is inserted into a supersonic wind tunnel. Pressures measured by the tube are  $p_{02} = 68.1$  kPa (abs) and  $p_2 = 54.8$  kPa (abs). Before the shock,  $T_1 = 160$  K and  $p_1 = 11.0$  kPa (abs). Calculate the air speed in the wind tunnel.

- 12.94 A total-pressure probe is placed in a supersonic wind tunnel where  $T = 530^\circ\text{R}$  and  $M = 2.0$ . A normal shock stands in front of the probe. Behind the shock,  $M_2 = 0.577$  and  $p_2 = 5.76$  psia. Find (a) the downstream stagnation pressure and stagnation temperature and (b) all fluid properties upstream from the shock. Show static and stagnation state points and the process path on a  $Ts$  diagram.
- 12.95 Air flows steadily through a long, insulated constant-area pipe. At section ①,  $M_1 = 2.0$ ,  $T_1 = 140^\circ\text{F}$ , and  $p_1 = 35.9$  psia. At section ②, downstream from a normal shock,  $V_2 = 1080$  ft/s. Determine the density and Mach number at section ②. Make a qualitative sketch of the pressure distribution along the pipe.
- 12.96 Air approaches a normal shock at  $M_1 = 3.0$ , with  $T_{01} = 700$  K and  $p_1 = 125$  kPa (abs). Determine the speed and temperature of the air leaving the shock and the entropy change across the shock.
- 12.97 A normal shock stands in a constant-area duct. Air approaches the shock with  $T_{01} = 1000^\circ\text{R}$ ,  $p_{01} = 100$  psia, and  $M_1 = 3.0$ . Determine the static pressure downstream from the shock. Compare the downstream pressure with that reached by decelerating isentropically to the same subsonic Mach number.
- 12.98 Air undergoes a normal shock. Upstream,  $T_1 = 35^\circ\text{C}$ ,  $p_1 = 229$  kPa (abs), and  $V_1 = 704$  m/s. Determine the temperature and stagnation pressure of the air stream leaving the shock.
- 12.99 A normal shock occurs in air at a section where  $V_1 = 924$  m/s,  $T_1 = 10^\circ\text{C}$ , and  $p_1 = 35.0$  kPa (abs). Determine the speed and Mach number downstream from the shock, and the change in stagnation pressure across the shock.
- 12.100 Air approaches a normal shock with  $T_1 = 18^\circ\text{C}$ ,  $p_1 = 101$  kPa (abs), and  $V_1 = 766$  m/s. Determine the speed immediately downstream from the shock and the pressure change across the shock. Calculate the corresponding pressure change for a frictionless, shockless deceleration between the same speeds.
- 12.101 A supersonic aircraft cruises at  $M = 2.2$  at 12 km altitude. A pitot tube is used to sense pressure for calculating air speed. A normal shock stands in front of the tube. Evaluate the local isentropic stagnation conditions in front of the shock. Estimate the stagnation pressure sensed by the pitot tube. Show static and stagnation state points and the process path on a  $Ts$  diagram.
- 12.102 Stagnation pressure and temperature probes are located on the nose of a supersonic aircraft. At 35,000 ft altitude a normal shock stands in front of the probes. The temperature probe indicates  $T_0 = 420^\circ\text{F}$  behind the shock. Calculate the Mach number and air speed of the plane. Find the static and stagnation pressures behind the shock. Show the process and the static and stagnation state points on a  $Ts$  diagram.
- 12.103 The Concorde supersonic transport flies at  $M = 2.2$  at 20 km altitude. Air is decelerated isentropically by the engine inlet system to a local Mach number of 1.3. The air passes through a normal shock and is decelerated further to  $M = 0.4$  at the engine compressor section. Assume, as a first approximation, that this subsonic diffusion process is isentropic and use standard atmosphere data for freestream conditions. Determine the temperature, pressure, and stagnation pressure of the air entering the engine compressor.
- 12.104 A supersonic wind tunnel is to be operated at  $M = 2.2$  in the test section. Upstream from the test section, the nozzle throat area is  $0.07$  m<sup>2</sup>. Air is supplied at stagnation conditions of 500 K and 1.0 MPa (abs). At one flow condition, while the tunnel is being brought up to speed, a normal shock stands at the nozzle exit plane. The flow is steady. For this *starting* condition, immediately downstream from the shock find (a) the Mach number, (b) the static pressure, (c) the stagnation pressure, and (d) the minimum area theoretically possible for the second throat downstream from the test section. On a  $Ts$  diagram show static and stagnation state points and the process path.



- 12.105 Consider a supersonic wind tunnel starting as shown. The nozzle throat area is  $1.25 \text{ ft}^2$ , and the test section design Mach number is 2.50. As the tunnel starts, a normal shock stands in the divergence of the nozzle where the area is  $3.05 \text{ ft}^2$ . Upstream stagnation conditions are  $T_0 = 1080^\circ\text{R}$  and  $p_0 = 115 \text{ psia}$ . Find the minimum theoretically possible diffuser throat area at this instant. Calculate the entropy increase across the shock.

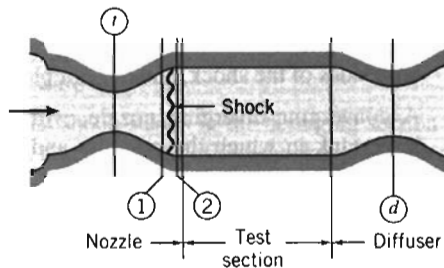


P12.105



- 12.106 A supersonic aircraft cruises at  $M = 2.7$  at 60,000 ft altitude. A normal shock stands in front of a pitot tube on the aircraft; the tube senses a stagnation pressure of 10.4 psia. Calculate the static pressure and temperature behind the shock. Evaluate the loss in stagnation pressure through the shock. Determine the change in specific entropy across the shock. Show static and stagnation states and the process path on a  $Ts$  diagram.
- 12.107 An aircraft is in supersonic flight at 10 km altitude on a standard day. The true air speed of the plane is 659 m/s. Calculate the flight Mach number of the aircraft. A total-head tube attached to the plane is used to sense stagnation pressure which is converted to flight Mach number by an on-board computer. However, the computer programmer has ignored the normal shock that stands in front of the total-head tube and has assumed isentropic flow. Evaluate the pressure sensed by the total-head tube. Determine the erroneous air speed calculated by the computer program.
- 12.108 A supersonic aircraft flies at  $M_1 = 2.7$  at 20 km altitude on a standard day. Air enters the engine inlet system where it is slowed isentropically to  $M_2 = 1.3$ . A normal shock occurs at that location. The resulting subsonic flow is decelerated further to  $M_4 = 0.40$ . The subsonic diffusion is adiabatic but not isentropic; the final pressure is 104 kPa (abs). Evaluate (a) the stagnation temperature for the flow, (b) the pressure change across the shock, (c) the entropy change,  $s_4 - s_1$ , and (d) the final stagnation pressure. Sketch the process path on a  $Ts$  diagram, indicating all static and stagnation states.
- 12.109 A blast wave propagates outward from an explosion. At large radii, curvature is small and the wave may be treated as a strong normal shock. (The pressure and temperature rise associated with the blast wave decrease as the wave travels outward.) At one instant, a blast wave front travels at  $M = 1.60$  with respect to undisturbed air at standard conditions. Find (a) the speed of the air behind the blast wave with respect to the wave and (b) the speed of the air behind the blast wave as seen by an observer on the ground. Draw a  $Ts$  diagram for the process as seen by an observer on the wave, indicating static and stagnation state points and property values.
- 12.110 Air flows through a converging-diverging nozzle with  $A_e/A_t = 3.5$ . The upstream stagnation conditions are atmospheric; the back pressure is maintained by a vacuum pump. Determine the back pressure required to cause a normal shock to stand in the nozzle exit plane and the flow speed leaving the shock.


- 12.111 A converging-diverging nozzle expands air from 250°F and 50.5 psia to 14.7 psia. The throat and exit plane areas are 0.801 and 0.917 in.<sup>2</sup>, respectively. Calculate the exit Mach number. Evaluate the mass flow rate through the nozzle.
- 12.112 A converging-diverging nozzle is attached to a large tank of air, in which  $T_{01} = 300$  K and  $p_{01} = 250$  kPa (abs). At the nozzle throat the pressure is 132 kPa (abs). In the diverging section, the pressure falls to 68.1 kPa before rising suddenly across a normal shock. At the nozzle exit the pressure is 180 kPa. Find the Mach number immediately behind the shock. Determine the pressure immediately downstream from the shock. Calculate the entropy change across the shock. Sketch the  $Ts$  diagram for this flow, indicating static and stagnation state points for conditions at the nozzle throat, both sides of the shock, and the exit plane.
- 12.113 A converging-diverging nozzle, with throat area  $A_t = 1.0$  in.<sup>2</sup>, is attached to a large tank in which the pressure and temperature are maintained at 100 psia and 600°R. The nozzle exit area is 1.58 in.<sup>2</sup> Determine the exit Mach number at design conditions. Referring to Fig. 12.20, determine the back pressures corresponding to the boundaries of Regimes I, II, III, and IV. Sketch the corresponding plot for this nozzle.
- 12.114 A converging-diverging nozzle, with  $A_e/A_t = 4.0$ , is designed to expand air isentropically to atmospheric pressure. Determine the exit Mach number at design conditions and the required inlet stagnation pressure. Referring to Fig. 12.20, determine the back pressures that correspond to the boundaries of Regimes I, II, III, and IV. Sketch the plot of pressure ratio versus axial distance for this nozzle.
- 12.115 Air flows adiabatically from a reservoir, where  $T = 60^\circ\text{C}$  and  $p = 600$  kPa (abs), through a converging-diverging nozzle with  $A_e/A_t = 4.0$ . A normal shock occurs where  $M = 2.42$ . Assuming isentropic flow before and after the shock, determine the back pressure downstream from the nozzle. Sketch the pressure distribution.
- 12.116 A normal shock occurs in the diverging section of a converging-diverging nozzle where  $A = 4.0$  in.<sup>2</sup> and  $M = 2.50$ . Upstream,  $T_0 = 1000^\circ\text{R}$  and  $p_0 = 100$  psia. The nozzle exit area is 6.0 in.<sup>2</sup> Assume the flow is isentropic except across the shock. Determine the nozzle exit pressure, throat area, and mass flow rate.
- 12.117 A converging-diverging nozzle is designed to expand air isentropically to atmospheric pressure from a large tank, where  $T_0 = 150^\circ\text{C}$  and  $p_0 = 790$  kPa (abs). A normal shock stands in the diverging section, where  $p = 160$  kPa (abs) and  $A = 600$  mm<sup>2</sup>. Determine the nozzle back pressure, exit area, and throat area.
- 12.118 A converging-diverging nozzle, with design pressure ratio  $p_e/p_0 = 0.128$ , is operated with a back pressure condition such that  $p_b/p_0 = 0.830$ , causing a normal shock to stand in the diverging section. Determine the Mach number at which the shock occurs.
- 12.119 Air flows through a converging-diverging nozzle, with  $A_e/A_t = 3.5$ . The upstream stagnation conditions are atmospheric; the back pressure is maintained by a vacuum system. Determine the range of back pressures for which a normal shock will occur within the nozzle and the corresponding mass flow rate, if  $A_t = 500$  mm<sup>2</sup>.
- 12.120 Air flows through a converging-diverging nozzle with  $A_e/A_t = 1.87$ . Upstream,  $T_{01} = 240^\circ\text{F}$  and  $p_{01} = 100$  psia. The back pressure is maintained at 40 psia. Determine the Mach number and flow speed in the nozzle exit plane.
- 12.121 A converging-diverging nozzle, with  $A_e/A_t = 1.633$ , is designed to operate with atmospheric pressure at the exit plane. Determine the range(s) of inlet stagnation pressures for which the nozzle will be free from normal shocks.
- 12.122 A normal shock occurs in the diverging section of a converging-diverging nozzle where  $A = 4.0$  in.<sup>2</sup> and  $M = 2.00$ . Upstream,  $T_{01} = 1000^\circ\text{R}$  and  $p_{01} = 100$  psia. The nozzle exit area is 6.0 in.<sup>2</sup> Assume that flow is isentropic except across the

shock. Find the nozzle exit pressure. Show the processes on a  $Ts$  diagram, and indicate the static and stagnation state points.

- 12.123 Air flows adiabatically from a reservoir, where  $T_{01} = 60^\circ\text{C}$  and  $p_{01} = 600$  kPa (abs), through a converging-diverging nozzle. The design Mach number of the nozzle is 2.94. A normal shock occurs at the location in the nozzle where  $M = 2.42$ . Assuming isentropic flow before and after the shock, determine the back pressure downstream from the nozzle. Sketch the pressure distribution.
- 12.124 Consider flow of air through a converging-diverging nozzle. Sketch the approximate behavior of the mass flow rate versus back pressure ratio,  $p_b/p_0$ . Sketch the variation of pressure with distance along the nozzle, and the  $Ts$  diagram for the nozzle flow, when the back pressure is  $p^*$ .
- 12.125 A stationary normal shock stands in the diverging section of a converging-diverging nozzle. The Mach number ahead of the shock is 3.0. The nozzle area at the shock is  $500$  mm<sup>2</sup>. The nozzle is fed from a large tank where the pressure is  $1000$  kPa (gage) and the temperature is  $400$  K. Find the Mach number, stagnation pressure, and static pressure after the shock. Calculate the nozzle throat area. Evaluate the entropy change across the shock. Finally, if the nozzle exit area is  $600$  mm<sup>2</sup>, estimate the exit Mach number. Would the actual exit Mach number be higher, lower, or the same as your estimate? Why?
- \*12.126 A supersonic wind tunnel must have two throats, with the second throat larger than the first. Explain why this must be so.
- \*12.127 A normal shock stands in a section of insulated constant-area duct. The flow is frictional. At section ①, some distance upstream from the shock,  $T_1 = 470^\circ\text{R}$ . At section ④, some distance downstream from the shock,  $T_4 = 750^\circ\text{R}$  and  $M_4 = 1.0$ . Denote conditions immediately upstream and downstream from the shock by subscripts ② and ③, respectively. Sketch the pressure distribution along the duct, indicating clearly the locations of sections ① through ④. Sketch a  $Ts$  diagram for the flow. Determine the Mach number at section ①.
- \*12.128 A normal shock stands in a section of insulated constant-area duct. The flow is frictional. At section ①, some distance upstream from the shock,  $T_1 = 668^\circ\text{R}$ ,  $p_{01} = 78.2$  psia, and  $M_1 = 2.05$ . At section ④, some distance downstream from the shock,  $M_4 = 1.00$ . Calculate the air speed,  $V_2$ , immediately ahead of the shock, where  $T_2 = 388^\circ\text{F}$ . Evaluate the entropy change,  $s_4 - s_1$ .
- 12.129 Supersonic air flow at  $M_1 = 2.2$  and  $75$  kPa is deflected by an oblique shock with angle  $\beta = 30^\circ$ . Find the Mach number and pressure after the shock, and the deflection angle. Compare these results to those obtained if instead the flow had experienced a normal shock. What is the smallest possible value of angle  $\beta$  for this upstream Mach number?
-  12.130 Consider supersonic flow of air at  $M_1 = 3.0$ . What is the range of possible values of the oblique shock angle  $\beta$ ? For this range of  $\beta$ , plot the pressure ratio across the shock.
- 12.131 The temperature and Mach number before an oblique shock are  $T_1 = 15^\circ\text{C}$  and  $M_1 = 2.75$ , respectively, and the pressure ratio across the shock is 4.5. Find the deflection angle,  $\theta$ , the shock angle,  $\beta$ , and the Mach number after the shock,  $M_2$ .
- 12.132 The air velocities before and after an oblique shock are  $1000$  m/s and  $500$  m/s, respectively, and the deflection angle is  $\theta = 30^\circ$ . Find the oblique shock angle  $\beta$ , and the pressure ratio across the shock.


\* These problems require material from sections that may be omitted without loss of continuity in the text material.

- 12.133 An airfoil at zero angle of attack has a sharp leading edge with an included angle of  $20^\circ$ . It is being tested over a range of speeds in a wind tunnel. The air temperature upstream is maintained at  $15^\circ\text{C}$ . Determine the Mach number and corresponding air speed at which a detached normal shock first attaches to the leading edge, and the angle of the resulting oblique shock. Plot the oblique shock angle  $\beta$  as a function of upstream Mach number  $M_1$ , from the minimum attached-shock value through  $M_1 = 7$ .
- 12.134 An airfoil has a sharp leading edge with an included angle of  $\delta = 60^\circ$ . It is being tested in a wind tunnel running at  $1200\text{ m/s}$  (the air pressure and temperature upstream are  $75\text{ kPa}$  and  $3.5^\circ\text{C}$ ). Plot the pressure and temperature in the region adjacent to the upper surface as functions of angle of attack,  $\alpha$ , ranging from  $\alpha = 0^\circ$  to  $30^\circ$ . What are the maximum pressure and temperature? (Ignore the possibility of a detached shock developing if  $\alpha$  is too large; see Problem 12.135.)

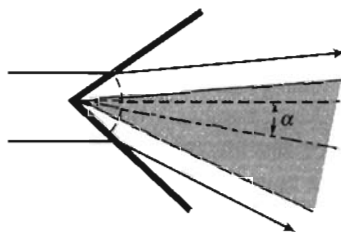


P12.134, 12.135

- 12.135 The airfoil of Problem 12.134 will develop a detached shock on the lower surface if the angle of attack,  $\alpha$ , exceeds a certain value. What is this angle of attack? Plot the pressure and temperature in the region adjacent to the lower surface as functions of angle of attack,  $\alpha$ , ranging from  $\alpha = 0^\circ$  to the angle at which the shock becomes detached. What are the maximum pressure and temperature?
- 12.136 The wedge-shaped airfoil shown has chord  $c = 2\text{ m}$  and included angle  $\delta = 10^\circ$ . Find the lift per unit span at a Mach number of 2.5 in air for which the static pressure is  $80\text{ kPa}$ .

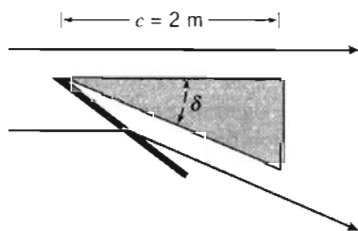


P12.136, 12.140

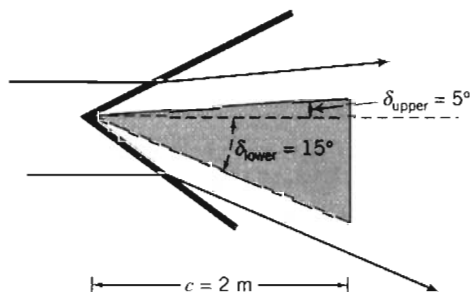


P12.137

- 12.137 The wedge-shaped airfoil shown has chord  $c = 2\text{ m}$  and angles  $\delta_{\text{lower}} = 15^\circ$  and  $\delta_{\text{upper}} = 5^\circ$ . Find the lift per unit span at a Mach number of 2.75 in air at a static pressure of  $75\text{ kPa}$ .
- 12.138 Air flows at Mach number of 2.5, static pressure  $75\text{ kPa}$ , and is expanded by angles  $\theta_1 = 10^\circ$  and  $\theta_2 = 10^\circ$ , as shown. Find the pressure changes.

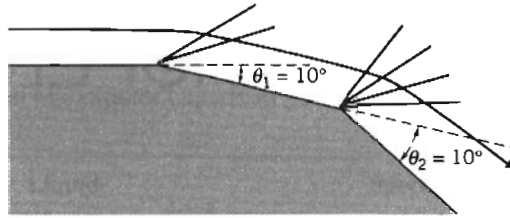


P12.138, 12.139

- 12.139 Find the incoming and intermediate Mach numbers and static pressures if, after two expansions of  $\theta_1 = 10^\circ$  and  $\theta_2 = 10^\circ$ , the Mach number is 3.5 and static pressure is 20 kPa.
- 12.140 Consider the wedge-shaped airfoil of Problem 12.136. Suppose the oblique shock could be replaced by isentropic *compression* waves. Find the lift per unit span at the Mach number of 2.5 in air for which the static pressure is 80 kPa.
- 12.141 Compare the static and stagnation pressures produced by (a) an oblique shock and (b) isentropic *compression* waves as they each deflect a flow at a Mach number of 3.5 through a deflection angle of  $35^\circ$  in air for which the static pressure is 50 kPa.
- 12.142 Find the lift and drag per unit span on the airfoil shown for flight at a Mach number of 1.75 in air for which the static pressure is 50 kPa. The chord length is 1 m.

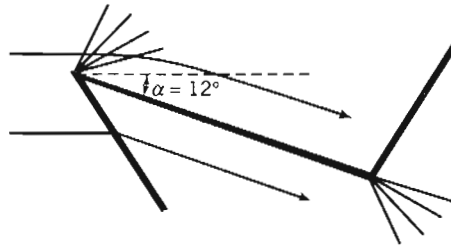

P12.142, 12.143

- 12.143 Plot the lift and drag per unit span, and the lift/drag ratio, as functions of angle of attack for  $\alpha = 0^\circ$  to  $18^\circ$ , for the airfoil shown, for flight at a Mach number of 1.75 in air for which the static pressure is 50 kPa. The chord length is 1 m.
- 12.144 Find the drag coefficient of the symmetric, zero angle of attack airfoil shown for a Mach number of 2.0 in air for which the static pressure is 95 kPa and temperature is  $0^\circ\text{C}$ . The included angles at the nose and tail are each  $10^\circ$ .

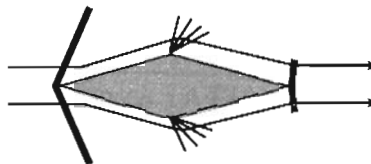

P12.144, 12.145



- 12.145 Find the lift and drag coefficients of the airfoil of Problem 12.144 if the airfoil now has an angle of attack of  $12^\circ$ .

## Appendix A

# FLUID PROPERTY DATA

### A-1 SPECIFIC GRAVITY

Specific gravity data for several common liquids and solids are presented in Figs. A.1a and A.1b and in Tables A.1 and A.2. For liquids specific gravity is a function of temperature. (Density data for water and air are given as functions of temperature in Tables A.7 through A.10.) For most liquids specific gravity decreases as temperature increases. Water is unique: It displays a maximum density of  $1000 \text{ kg/m}^3$  ( $1.94 \text{ slug/ft}^3$ ) at  $4^\circ\text{C}$

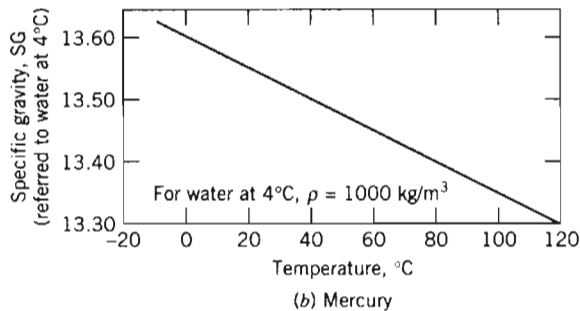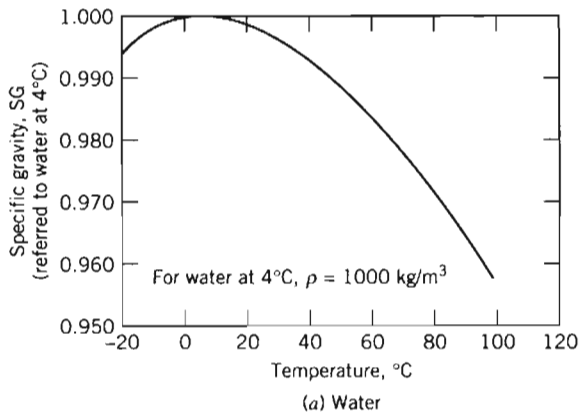

**Fig. A.1** Specific gravity of water and mercury as functions of temperature. (Data from [1].)  
(The specific gravity of mercury varies linearly with temperature. The variation is given by  $SG = 13.60 - 0.00240 T$  when  $T$  is measured in degrees C.)

**Table A.1** Specific Gravities of Selected Engineering Materials

(a) Common Manometer Liquids at 20°C (Data from [1, 2, 3].)

Liquid	Specific Gravity
E. V. Hill blue oil	0.797
Meriam red oil	0.827
Benzene	0.879
Dibutyl phthalate	1.04
Monochloronaphthalene	1.20
Carbon tetrachloride	1.595
Bromoethylbenzene (Meriam blue)	1.75
Tetrabromoethane	2.95
Mercury	13.55

(b) Common Materials (Data from [4].)

Material	Specific Gravity (—)
Aluminum	2.64
Balsa wood	0.14
Brass	8.55
Cast Iron	7.08
Concrete (cured)	2.4*
Concrete (liquid)	2.5*
Copper	8.91
Ice (0°C)	0.917
Lead	11.4
Oak	0.77
Steel	7.83
Styrofoam (1 pcf**)	0.0160
Styrofoam (3 pcf)	0.0481
Uranium (depleted)	18.7
White pine	0.43

\*depending on aggregate

\*\*pounds per cubic foot

(39°F). The maximum density of water is used as a reference value to calculate specific gravity. Thus

$$SG \equiv \frac{\rho}{\rho_{H_2O} \text{ (at } 4^\circ\text{C)}}$$

Consequently the maximum SG of water is exactly unity.

Specific gravities for solids are relatively insensitive to temperature; values given in Table A.1 were measured at 20°C.

The specific gravity of seawater depends on both its temperature and salinity. A representative value for ocean water is  $SG = 1.025$ , as given in Table A.2.

**Table A.2** Physical Properties of Common Liquids at 20°C  
(Data from [1, 5, 6].)

Liquid	Isentropic Bulk Modulus <sup>a</sup> (GN/m <sup>2</sup> )	Specific Gravity (—)
Benzene	1.48	0.879
Carbon tetrachloride	1.36	1.595
Castor oil	2.11	0.969
Crude oil	—	0.82–0.92
Ethanol	—	0.789
Gasoline	—	0.72
Glycerin	4.59	1.26
Heptane	0.886	0.684
Kerosene	1.43	0.82
Lubricating oil	1.44	0.88
Methanol	—	0.796
Mercury	28.5	13.55
Octane	0.963	0.702
Seawater <sup>b</sup>	2.42	1.025
SAE 10W oil	—	0.92
Water	2.24	0.998

<sup>a</sup>Calculated from speed of sound; 1 GN/m<sup>2</sup> = 10<sup>9</sup> N/m<sup>2</sup> (1 N/m<sup>2</sup> = 1.45 × 10<sup>-4</sup> lbf/in.<sup>2</sup>).

<sup>b</sup>Dynamic viscosity of seawater at 20°C is  $\mu = 1.08 \times 10^{-3}$  N·s/m<sup>2</sup>. (Thus, the kinematic viscosity of seawater is about 5 percent higher than that of fresh water.)



**Table A.3** Properties of the U.S. Standard Atmosphere (Data from [7].)

Geometric Altitude (m)	Temperature (K)	$p/p_{SL}$ (—)	$\rho/\rho_{SL}$ (—)
-500	291.4	1.061	1.049
0	288.2	1.000 <sup>a</sup>	1.000 <sup>b</sup>
500	284.9	0.9421	0.9529
1,000	281.7	0.8870	0.9075
1,500	278.4	0.8345	0.8638
2,000	275.2	0.7846	0.8217
2,500	271.9	0.7372	0.7812
3,000	268.7	0.6920	0.7423
3,500	265.4	0.6492	0.7048
4,000	262.2	0.6085	0.6689
4,500	258.9	0.5700	0.6343
5,000	255.7	0.5334	0.6012
6,000	249.2	0.4660	0.5389
7,000	242.7	0.4057	0.4817
8,000	236.2	0.3519	0.4292
9,000	229.7	0.3040	0.3813
10,000	223.3	0.2615	0.3376
11,000	216.8	0.2240	0.2978
12,000	216.7	0.1915	0.2546
13,000	216.7	0.1636	0.2176
14,000	216.7	0.1399	0.1860
15,000	216.7	0.1195	0.1590
16,000	216.7	0.1022	0.1359
17,000	216.7	0.08734	0.1162
18,000	216.7	0.07466	0.09930
19,000	216.7	0.06383	0.08489
20,000	216.7	0.05457	0.07258
22,000	218.6	0.03995	0.05266
24,000	220.6	0.02933	0.03832
26,000	222.5	0.02160	0.02797
28,000	224.5	0.01595	0.02047
30,000	226.5	0.01181	0.01503
40,000	250.4	0.002834	0.003262
50,000	270.7	0.0007874	0.0008383
60,000	255.8	0.0002217	0.0002497
70,000	219.7	0.00005448	0.00007146
80,000	180.7	0.00001023	0.00001632
90,000	180.7	0.000001622	0.000002588

<sup>a</sup> $p_{SL} = 1.01325 \times 10^5 \text{ N/m}^2 \text{ (abs) (= 14.696 psia)}$ .



<sup>b</sup> $\rho_{SL} = 1.2250 \text{ kg/m}^3 \text{ (= 0.002377 slug/ft}^3\text{)}$ .

## A-2 SURFACE TENSION

The values of surface tension,  $\sigma$ , for most organic compounds are remarkably similar at room temperature; the typical range is 25 to 40 mN/m. Water is higher, at about 73 mN/m at 20°C. Liquid metals have values in the range between 300 and 600 mN/m; mercury has a value of about 480 mN/m at 20°C. Surface tension decreases with temperature; the decrease is nearly linear with absolute temperature. Surface tension at the critical temperature is zero.

Values of  $\sigma$  are usually reported for surfaces in contact with the pure vapor of the liquid being studied or with air. At low pressures both values are about the same.

**Table A.4** Surface Tension of Common Liquids at 20°C  
(Data from [1, 5, 8, 9].)

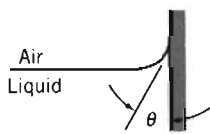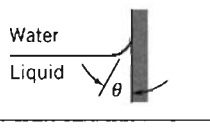Liquid	Surface Tension, $\sigma$ (mN/m) <sup>a</sup>	Contact Angle, $\theta$ (degrees)
(a) In contact with air		
Benzene	28.9	
Carbon tetrachloride	27.0	
Ethanol	22.3	
Glycerin	63.0	
Hexane	18.4	
Kerosene	26.8	
Lube oil	25–35	
Mercury	484	140
Methanol	22.6	
Octane	21.8	
Water	72.8	~ 0
(b) In contact with water		
Benzene	35.0	
Carbon tetrachloride	45.0	
Hexane	51.1	
Mercury	375	140
Methanol	22.7	
Octane	50.8	

<sup>a</sup>1 mN/m = 10<sup>-3</sup> N/m.

## A-3 THE PHYSICAL NATURE OF VISCOSITY

Viscosity is a measure of internal fluid friction, i.e., resistance to deformation. The mechanism of gas viscosity is reasonably well understood, but the theory is poorly

developed for liquids. We can gain some insight into the physical nature of viscous flow by discussing these mechanisms briefly.

The viscosity of a Newtonian fluid is fixed by the state of the material. Thus  $\mu = \mu(T, p)$ . Temperature is the more important variable, so let us consider it first. Excellent empirical equations for viscosity as a function of temperature are available.

### Effect of Temperature on Viscosity

#### a. Gases

All gas molecules are in continuous random motion. When there is bulk motion due to flow, the bulk motion is superimposed on the random motions. It is then distributed throughout the fluid by molecular collisions. Analyses based on kinetic theory predict

$$\mu \propto \sqrt{T}$$

The kinetic theory prediction is in fair agreement with experimental trends, but the constant of proportionality and one or more correction factors must be determined; this limits practical application of this simple equation.

If two or more experimental points are available, the data may be correlated using the empirical Sutherland correlation [7]

$$\mu = \frac{bT^{1/2}}{1 + S/T} \quad (\text{A.1})$$

Constants  $b$  and  $S$  may be determined most simply by writing

$$\mu = \frac{bT^{3/2}}{S + T}$$

or

$$\frac{T^{3/2}}{\mu} = \left(\frac{1}{b}\right)T + \frac{S}{b}$$

(Compare this with  $y = mx + c$ .) From a plot of  $T^{3/2}/\mu$  versus  $T$ , one obtains the slope,  $1/b$ , and the intercept,  $S/b$ . For air,

$$b = 1.458 \times 10^{-6} \frac{\text{kg}}{\text{m} \cdot \text{s} \cdot \text{K}^{1/2}}$$

$$S = 110.4 \text{ K}$$

These constants were used with Eq. A.1 to compute viscosities for the standard atmosphere in [7], the air viscosity values at various temperatures shown in Table A.10, and using appropriate conversion factors, the values shown in Table A.9.


#### b. Liquids

Viscosities for liquids cannot be estimated well theoretically. The phenomenon of momentum transfer by molecular collisions is overshadowed in liquids by the effects of interacting force fields among the closely packed liquid molecules.

Liquid viscosities are affected drastically by temperature. This dependence on absolute temperature may be represented by the empirical equation

$$\mu = Ae^{B/(T-C)} \quad (\text{A.2})$$



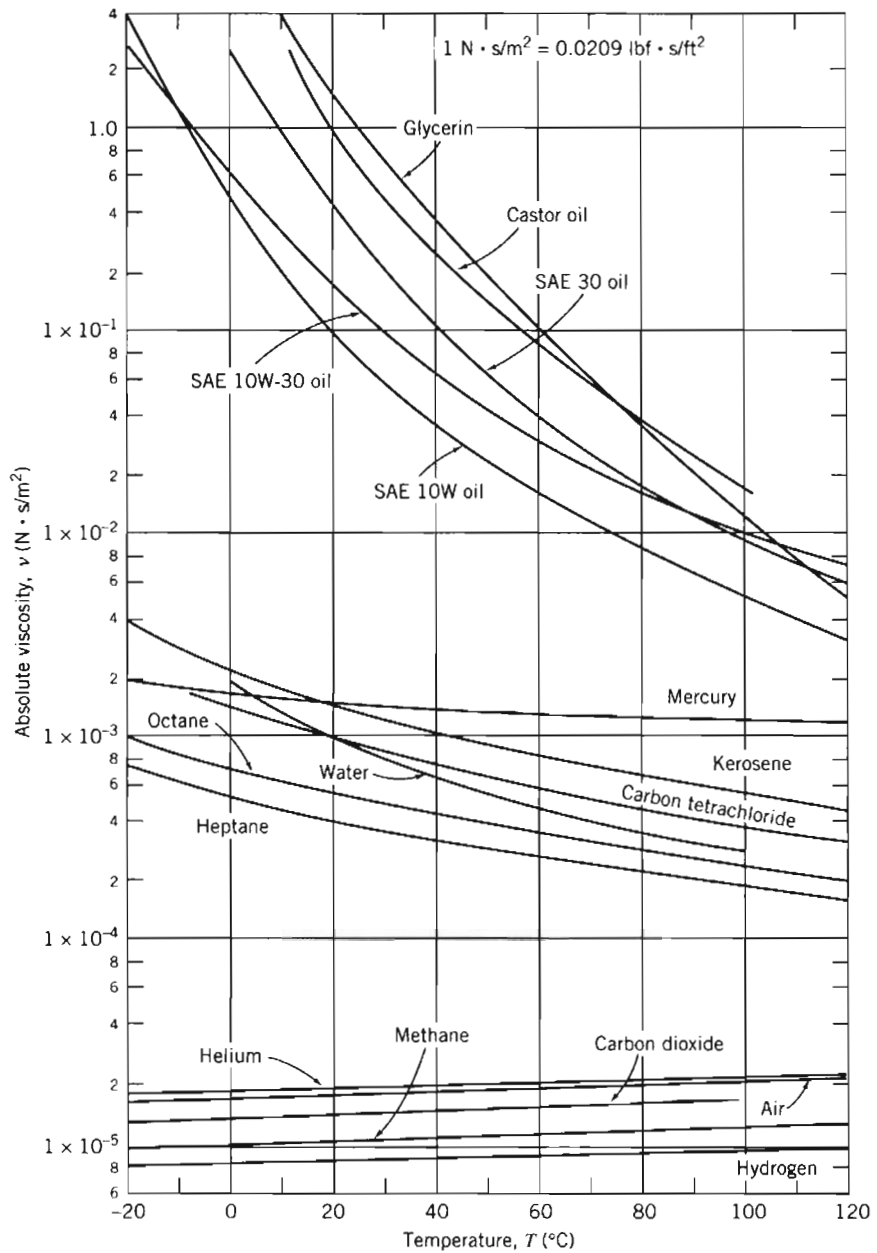

**Fig. A.2** Dynamic (absolute) viscosity of common fluids as a function of temperature. (Data from [1, 6, and 10].)



The graphs for air and water were computed from the *Excel* workbook *Absolute Viscosities*, using Eq. A.1 and Eq. A.3, respectively. The workbook can be used to compute viscosities of other fluids if constants  $b$  and  $S$  (for a gas) or  $A$ ,  $B$ , and  $C$  (for a liquid) are known.

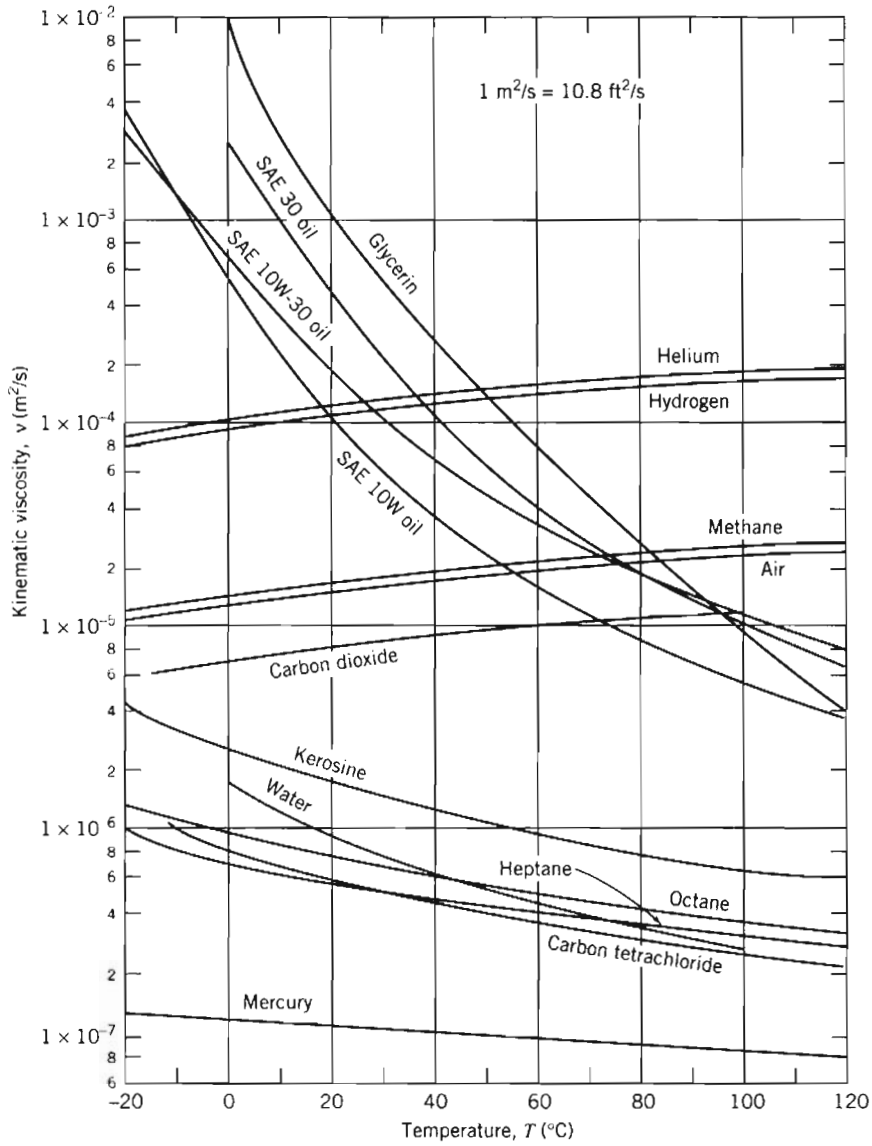


Fig. A.3 Kinematic viscosity of common fluids (at atmospheric pressure) as a function of temperature. (Data from [1, 6, and 10].)

or the equivalent form

$$\mu = A10^{B/(T-C)} \quad (\text{A.3})$$

where  $T$  is absolute temperature.

Equation A.3 requires at least three points to fit constants  $A$ ,  $B$ , and  $C$ . In theory it is possible to determine the constants from measurements of viscosity at just three temperatures. It is better practice to use more data and to obtain the constants from a statistical fit to the data.

However a curve-fit is developed, always compare the resulting line or curve with the available data. The best way is to critically inspect a plot of the curve-fit compared with the data. In general, curve-fit results will be satisfactory only when the quality of the available data and that of the empirical relation are known to be excellent.

Data for the dynamic viscosity of water are fitted well using constant values  $A = 2.414 \times 10^{-5} \text{ N} \cdot \text{s/m}^2$ ,  $B = 247.8 \text{ K}$ , and  $C = 140 \text{ K}$ . Reference 10 states that using these constants in Eq. A.3 predicts water viscosity within  $\pm 2.5$  percent over the temperature range from  $0^\circ\text{C}$  to  $370^\circ\text{C}$ . Equation A.3 and *Excel* were used to compute the water viscosity values at various temperatures shown in Table A.8, and using appropriate conversion factors, the values shown in Table A.7.

Note that the viscosity of a liquid decreases with temperature, while that of a gas increases with temperature.

### Effect of Pressure on Viscosity

#### a. Gases

The viscosity of gases is essentially independent of pressure between a few hundredths of an atmosphere and a few atmospheres. However, viscosity at high pressures increases with pressure (or density).

#### b. Liquids

The viscosities of most liquids are not affected by moderate pressures, but large increases have been found at very high pressures. For example, the viscosity of water at 10,000 atm is twice that at 1 atm. More complex compounds show a viscosity increase of several orders of magnitude over the same pressure range.

More information may be found in [11].

## A-4 LUBRICATING OILS

Engine and transmission lubricating oils are classified by viscosity according to standards established by the Society of Automotive Engineers [12]. The allowable viscosity ranges for several grades are given in Table A.5.

Viscosity numbers with W (e.g., 20W) are classified by viscosity at  $0^\circ\text{F}$ . Those without W are classified by viscosity at  $210^\circ\text{F}$ .

Multigrade oils (e.g., 10W-40) are formulated to minimize viscosity variation with temperature. High polymer "viscosity index improvers" are used in blending these multigrade oils. Such additives are highly non-Newtonian; they may suffer permanent viscosity loss caused by shearing.

Special charts are available to estimate the viscosity of petroleum products as a function of temperature. The charts were used to develop the data for typical lubricating oils plotted in Figs. A.2 and A.3. For details, see [15].

**Table A.5** Allowable Viscosity Ranges for Lubricants (Data from [12–14].)

Engine Oil	SAE Viscosity Grade	Max. Viscosity (cP) <sup>a</sup> at Temp. (°C)	Viscosity (cSt) <sup>b</sup> at 100°C	
			Min	Max
	0W	3250 at -30	3.8	—
	5W	3500 at -25	3.8	—
	10W	3500 at -20	4.1	—
	15W	3500 at -15	5.6	—
	20W	4500 at -10	5.6	—
	25W	6000 at -5	9.3	—
	20	—	5.6	<9.3
	30	—	9.3	<12.5
	40	—	12.5	<16.3
	50	—	16.3	<21.9
Axle and Manual Transmission Lubricant	SAE Viscosity Grade	Max. Temp. (°C) for Viscosity of 150,000 cP	Viscosity (cSt) at 100°C	
	70W	-55	4.1	—
	75W	-40	4.1	—
	80W	-26	7.0	—
	85W	-12	11.0	—
	90	—	13.5	<24.0
	140	—	24.0	<41.0
	250	—	41.0	—
Automatic Transmission Fluid (Typical)	Maximum Viscosity (cP)	Temperature (°C)	Viscosity (cSt) at 100°C	
	50000	-40	6.5	8.5
	4000	-23.3	6.5	8.5
	1700	-18	6.5	8.5

<sup>a</sup>1 centipoise = 1 cP = 1 mPa·s = 10<sup>-3</sup> Pa·s (= 2.09 × 10<sup>-5</sup> lbf·s/ft<sup>2</sup>).

<sup>b</sup>1 centistoke = 10<sup>-6</sup> m<sup>2</sup>/s (= 1.08 × 10<sup>-5</sup> ft<sup>2</sup>/s).

Table A.6 Thermodynamic Properties of Common Gases at STP<sup>a</sup> (Data from [7, 16, 17].)

Gas	Chemical Symbol	Molecular Mass, $M_m$	$\left(\frac{R^b}{\text{kg} \cdot \text{K}}\right)$	$\left(\frac{c_p}{\text{kg} \cdot \text{K}}\right)$	$\left(\frac{c_v}{\text{kg} \cdot \text{K}}\right)$	$k = \frac{c_p}{c_v}$ (-)	$\left(\frac{R^b}{\text{ft} \cdot \text{lbm} \cdot \text{R}}\right)$	$\left(\frac{c_p}{\text{lbm} \cdot \text{R}}\right)$	$\left(\frac{c_v}{\text{lbm} \cdot \text{R}}\right)$
Air	—	28.98	286.9	1004	717.4	1.40	53.33	0.2399	0.1713
Carbon dioxide	CO <sub>2</sub>	44.01	188.9	840.4	651.4	1.29	35.11	0.2007	0.1556
Carbon monoxide	CO	28.01	296.8	1039	742.1	1.40	55.17	0.2481	0.1772
Helium	He	4.003	2077	5225	3147	1.66	386.1	1.248	0.7517
Hydrogen	H <sub>2</sub>	2.016	4124	14,180	10,060	1.41	766.5	3.388	2.402
Methane	CH <sub>4</sub>	16.04	518.3	2190	1672	1.31	96.32	0.5231	0.3993
Nitrogen	N <sub>2</sub>	28.01	296.8	1039	742.0	1.40	55.16	0.2481	0.1772
Oxygen	O <sub>2</sub>	32.00	259.8	909.4	649.6	1.40	48.29	0.2172	0.1551
Steam <sup>c</sup>	H <sub>2</sub> O	18.02	461.4	~2000	~1540	~1.30	85.78	~0.478	~0.368

<sup>a</sup>STP = standard temperature and pressure,  $T = 15^\circ\text{C} = 59^\circ\text{F}$  and  $p = 101.325 \text{ kPa (abs)} = 14.696 \text{ psia}$ .

<sup>b</sup> $R \equiv R_u/M_m$ ;  $R_u = 8314.3 \text{ J/(kgmol} \cdot \text{K)} = 1545.3 \text{ ft} \cdot \text{lbm/(lbmol} \cdot \text{R)}$ ;  $1 \text{ Btu} = 778.2 \text{ ft} \cdot \text{lbm}$ .

<sup>c</sup>Water vapor behaves as an ideal gas when superheated by  $55^\circ\text{C (100}^\circ\text{F)}$  or more.



Table A.7 Properties of Water (U.S. Customary Units)

Temperature, $T$ (°F)	Density, $\rho$ (slug/ft <sup>3</sup> )	Dynamic Viscosity, $\mu$ (lbf · s/ft <sup>2</sup> )	Kinematic Viscosity, $\nu$ (ft <sup>2</sup> /s)	Surface Tension, $\sigma$ (lbf/ft)	Vapor Pressure, $p_v$ (psia)	Bulk Modulus, $E_v$ (psi)
32	1.94	3.68E-05	1.90E-05	0.00519	0.0886	2.92E + 05
40	1.94	3.20E-05	1.65E-05	0.00514	0.122	
50	1.94	2.73E-05	1.41E-05	0.00509	0.178	
59	1.94	2.38E-05	1.23E-05	0.00504	0.247	
60	1.94	2.35E-05	1.21E-05	0.00503	0.256	
68	1.94	2.10E-05	1.08E-05	0.00499	0.339	
70	1.93	2.05E-05	1.06E-05	0.00498	0.363	3.20E + 05
80	1.93	1.80E-05	9.32E-06	0.00492	0.507	
90	1.93	1.59E-05	8.26E-06	0.00486	0.699	
100	1.93	1.43E-05	7.38E-06	0.00480	0.950	
110	1.92	1.28E-05	6.68E-06	0.00474	1.28	
120	1.92	1.16E-05	6.05E-06	0.00467	1.70	3.32E + 05
130	1.91	1.06E-05	5.54E-06	0.00461	2.23	
140	1.91	9.70E-06	5.08E-06	0.00454	2.89	
150	1.90	8.93E-06	4.70E-06	0.00448	3.72	
160	1.89	8.26E-06	4.37E-06	0.00441	4.75	
170	1.89	7.67E-06	4.06E-06	0.00434	6.00	
180	1.88	7.15E-06	3.80E-06	0.00427	7.52	
190	1.87	6.69E-06	3.58E-06	0.00420	9.34	
200	1.87	6.28E-06	3.36E-06	0.00413	11.5	3.08E + 05
212	1.86	5.84E-06	3.14E-06	0.00404	14.7	

Table A.8 Properties of Water (SI Units)

Temperature, $T$ (°C)	Density, $\rho$ (kg/m <sup>3</sup> )	Dynamic Viscosity, $\mu$ (N·s/m <sup>2</sup> )	Kinematic Viscosity, $\nu$ (m <sup>2</sup> /s)	Surface Tension, $\sigma$ (N/m)	Vapor Pressure, $p_v$ (kPa)	Bulk Modulus, $E_v$ (GPa)
0	1000	1.76E-03	1.76E-06	0.0757	0.661	2.01
5	1000	1.51E-03	1.51E-06	0.0749	0.872	
10	1000	1.30E-03	1.30E-06	0.0742	1.23	
15	999	1.14E-03	1.14E-06	0.0735	1.71	
20	998	1.01E-03	1.01E-06	0.0727	2.34	2.21
25	997	8.93E-04	8.96E-07	0.0720	3.17	
30	996	8.00E-04	8.03E-07	0.0712	4.25	
35	994	7.21E-04	7.25E-07	0.0704	5.63	
40	992	6.53E-04	6.59E-07	0.0696	7.38	
45	990	5.95E-04	6.02E-07	0.0688	9.59	
50	988	5.46E-04	5.52E-07	0.0679	12.4	2.29
55	986	5.02E-04	5.09E-07	0.0671	15.8	
60	983	4.64E-04	4.72E-07	0.0662	19.9	
65	980	4.31E-04	4.40E-07	0.0654	25.0	
70	978	4.01E-04	4.10E-07	0.0645	31.2	
75	975	3.75E-04	3.85E-07	0.0636	38.6	
80	972	3.52E-04	3.62E-07	0.0627	47.4	
85	969	3.31E-04	3.41E-07	0.0618	57.8	
90	965	3.12E-04	3.23E-07	0.0608	70.1	2.12
95	962	2.95E-04	3.06E-07	0.0599	84.6	
100	958	2.79E-04	2.92E-07	0.0589	101	

**Table A.9** Properties of Air at Atmospheric Pressure  
(U.S. Customary Units)

Temperature, $T$ (°F)	Density, $\rho$ (slug/ft <sup>3</sup> )	Dynamic Viscosity, $\mu$ (lbf · s/ft <sup>2</sup> )	Kinematic Viscosity, $\nu$ (ft <sup>2</sup> /s)
40	0.00247	3.63E-07	1.47E-04
50	0.00242	3.69E-07	1.52E-04
59	0.00238	3.74E-07	1.57E-04
60	0.00237	3.74E-07	1.58E-04
68	0.00234	3.79E-07	1.62E-04
70	0.00233	3.80E-07	1.63E-04
80	0.00229	3.85E-07	1.68E-04
90	0.00225	3.91E-07	1.74E-04
100	0.00221	3.96E-07	1.79E-04
110	0.00217	4.02E-07	1.86E-04
120	0.00213	4.07E-07	1.91E-04
130	0.00209	4.12E-07	1.97E-04
140	0.00206	4.18E-07	2.03E-04
150	0.00202	4.23E-07	2.09E-04
160	0.00199	4.28E-07	2.15E-04
170	0.00196	4.33E-07	2.21E-04
180	0.00193	4.38E-07	2.27E-04
190	0.00190	4.43E-07	2.33E-04
200	0.00187	4.48E-07	2.40E-04

**Table A.10** Properties of Air at Atmospheric Pressure (SI Units)

Temperature, $T$ (°C)	Density, $\rho$ (kg/m <sup>3</sup> )	Dynamic Viscosity, $\mu$ (N · s/m <sup>2</sup> )	Kinematic Viscosity, $\nu$ (m <sup>2</sup> /s)
0	1.29	1.72E-05	1.33E-05
5	1.27	1.74E-05	1.37E-05
10	1.25	1.76E-05	1.41E-05
15	1.23	1.79E-05	1.45E-05
20	1.21	1.81E-05	1.50E-05
25	1.19	1.84E-05	1.54E-05
30	1.17	1.86E-05	1.59E-05
35	1.15	1.88E-05	1.64E-05
40	1.13	1.91E-05	1.69E-05
45	1.11	1.93E-05	1.74E-05
50	1.09	1.95E-05	1.79E-05
55	1.08	1.98E-05	1.83E-05
60	1.06	2.00E-05	1.89E-05
65	1.04	2.02E-05	1.94E-05
70	1.03	2.04E-05	1.98E-05
75	1.01	2.06E-05	2.04E-05
80	1.00	2.09E-05	2.09E-05
85	0.987	2.11E-05	2.14E-05
90	0.973	2.13E-05	2.19E-05
95	0.960	2.15E-05	2.24E-05
100	0.947	2.17E-05	2.29E-05

## REFERENCES

1. *Handbook of Chemistry and Physics*, 62nd ed. Cleveland, OH: Chemical Rubber Publishing Co., 1981–1982.
2. “Meriam Standard Indicating Fluids,” Pamphlet No. 920GEN: 430-1, The Meriam Instrument Co., 10920 Madison Avenue, Cleveland, OH 44102.
3. E. Vernon Hill, Inc., P.O. Box 7053, Corte Madera, CA 94925.
4. Avallone, E. A., and T. Baumeister, III, eds., *Marks’ Standard Handbook for Mechanical Engineers*, 9th ed. New York: McGraw-Hill, 1987.
5. *Handbook of Tables for Applied Engineering Science*. Cleveland, OH: Chemical Rubber Publishing Co., 1970.
6. Vargaftik, N. B., *Tables on the Thermophysical Properties of Liquids and Gases*, 2nd ed. Washington, D.C.: Hemisphere Publishing Corp., 1975.
7. *The U.S. Standard Atmosphere (1976)*. Washington, D.C.: U.S. Government Printing Office, 1976.
8. Trefethen, L., “Surface Tension in Fluid Mechanics,” in *Illustrated Experiments in Fluid Mechanics*. Cambridge, MA: The M.I.T. Press, 1972.
9. Streeter, V. L., ed., *Handbook of Fluid Dynamics*. New York: McGraw-Hill, 1961.
10. Touloukian, Y. S., S. C. Saxena, and P. Hestermans, *Thermophysical Properties of Matter, the TPRC Data Series. Vol. 11—Viscosity*. New York: Plenum Publishing Corp., 1975.
11. Reid, R. C., and T. K. Sherwood, *The Properties of Gases and Liquids*, 2nd ed. New York: McGraw-Hill, 1966.
12. “Engine Oil Viscosity Classification—SAE Standard J300 Jun86,” *SAE Handbook*, 1987 ed. Warrendale, PA: Society of Automotive Engineers, 1987.
13. “Axle and Manual Transmission Lubricant Viscosity Classification—SAE Standard J306 Mar85,” *SAE Handbook*, 1987 ed. Warrendale, PA: Society of Automotive Engineers, 1987.
14. “Fluid for Passenger Car Type Automatic Transmissions—SAE Information Report J311 Apr86,” *SAE Handbook*, 1987 ed. Warrendale, PA: Society of Automotive Engineers, 1987.
15. ASTM Standard D 341–77, “Viscosity-Temperature Charts for Liquid Petroleum Products,” American Society for Testing and Materials, 1916 Race Street, Philadelphia, PA 19103.
16. NASA, *Compressed Gas Handbook (Revised)*. Washington, D.C.: National Aeronautics and Space Administration, SP-3045, 1970.
17. ASME, *Thermodynamic and Transport Properties of Steam*. New York: American Society of Mechanical Engineers, 1967.

## Appendix B

# EQUATIONS OF MOTION IN CYLINDRICAL COORDINATES

The continuity equation in cylindrical coordinates for constant density is

$$\frac{1}{r} \frac{\partial}{\partial r} (rv_r) + \frac{1}{r} \frac{\partial}{\partial \theta} (v_\theta) + \frac{\partial}{\partial z} (v_z) = 0 \quad (\text{B.1})$$

Normal and shear stresses in cylindrical coordinates for constant density and viscosity are

$$\begin{aligned} \sigma_{rr} &= -p + 2\mu \frac{\partial v_r}{\partial r} & \tau_{r\theta} &= \mu \left[ r \frac{\partial}{\partial r} \left( \frac{v_\theta}{r} \right) + \frac{1}{r} \frac{\partial v_r}{\partial \theta} \right] \\ \sigma_{\theta\theta} &= -p + 2\mu \left( \frac{1}{r} \frac{\partial v_\theta}{\partial \theta} + \frac{v_r}{r} \right) & \tau_{\theta z} &= \mu \left( \frac{\partial v_\theta}{\partial z} + \frac{1}{r} \frac{\partial v_z}{\partial \theta} \right) \\ \sigma_{zz} &= -p + 2\mu \frac{\partial v_z}{\partial z} & \tau_{zr} &= \mu \left( \frac{\partial v_r}{\partial z} + \frac{\partial v_z}{\partial r} \right) \end{aligned} \quad (\text{B.2})$$

The Navier–Stokes equations in cylindrical coordinates for constant density and viscosity are

*r* component:

$$\begin{aligned} \rho \left( \frac{\partial v_r}{\partial t} + v_r \frac{\partial v_r}{\partial r} + \frac{v_\theta}{r} \frac{\partial v_r}{\partial \theta} - \frac{v_\theta^2}{r} + v_z \frac{\partial v_r}{\partial z} \right) \\ = \rho g_r - \frac{\partial p}{\partial r} + \mu \left\{ \frac{\partial}{\partial r} \left( \frac{1}{r} \frac{\partial}{\partial r} [rv_r] \right) + \frac{1}{r^2} \frac{\partial^2 v_r}{\partial \theta^2} - \frac{2}{r^2} \frac{\partial v_\theta}{\partial \theta} + \frac{\partial^2 v_r}{\partial z^2} \right\} \end{aligned} \quad (\text{B.3a})$$

*θ* component:

$$\begin{aligned} \rho \left( \frac{\partial v_\theta}{\partial t} + v_r \frac{\partial v_\theta}{\partial r} + \frac{v_\theta}{r} \frac{\partial v_\theta}{\partial \theta} + \frac{v_r v_\theta}{r} + v_z \frac{\partial v_\theta}{\partial z} \right) \\ = \rho g_\theta - \frac{1}{r} \frac{\partial p}{\partial \theta} + \mu \left\{ \frac{\partial}{\partial r} \left( \frac{1}{r} \frac{\partial}{\partial r} [rv_\theta] \right) + \frac{1}{r^2} \frac{\partial^2 v_\theta}{\partial \theta^2} + \frac{2}{r^2} \frac{\partial v_r}{\partial \theta} + \frac{\partial^2 v_\theta}{\partial z^2} \right\} \end{aligned} \quad (\text{B.3b})$$

*z* component:

$$\begin{aligned} \rho \left( \frac{\partial v_z}{\partial t} + v_r \frac{\partial v_z}{\partial r} + \frac{v_\theta}{r} \frac{\partial v_z}{\partial \theta} + v_z \frac{\partial v_z}{\partial z} \right) \\ = \rho g_z - \frac{\partial p}{\partial z} + \mu \left\{ \frac{1}{r} \frac{\partial}{\partial r} \left( r \frac{\partial v_z}{\partial r} \right) + \frac{1}{r^2} \frac{\partial^2 v_z}{\partial \theta^2} + \frac{\partial^2 v_z}{\partial z^2} \right\} \end{aligned} \quad (\text{B.3c})$$

---

---

## Appendix C

# VIDEOS FOR FLUID MECHANICS

Listed below by supplier are titles of videos on fluid mechanics.

1. Encyclopaedia Britannica Educational Corporation  
310 South Michigan Avenue  
Chicago, Illinois 60604

The following twenty-two videos, developed by the National Committee for Fluid Mechanics Films (NCFMF),<sup>1</sup> are available (length as noted):

*Aerodynamic Generation of Sound* (44 min, principals: M. J. Lighthill, J. E. Ffowcs-Williams)  
*Boundary Layer Control* (25 min, principal: D. C. Hazen)  
*Cavitation* (31 min, principal: P. Eisenberg)  
*Channel Flow of a Compressible Fluid* (29 min, principal: D. E. Coles)  
*Deformation of Continuous Media* (38 min, principal: J. L. Lumley)  
*Eulerian and Lagrangian Descriptions in Fluid Mechanics* (27 min, principal: J. L. Lumley)  
*Flow Instabilities* (27 min, principal: E. L. Mollo-Christensen)  
*Flow Visualization* (31 min, principal: S. J. Kline)  
*The Fluid Dynamics of Drag*<sup>2</sup> (4 parts, 120 min, principal: A. H. Shapiro)  
*Fundamentals of Boundary Layers* (24 min, principal: F. H. Abernathy)  
*Low-Reynolds-Number Flows* (33 min, principal: Sir G. I. Taylor)  
*Magnetohydrodynamics* (27 min, principal: J. A. Shercliff)  
*Pressure Fields and Fluid Acceleration* (30 min, principal: A. H. Shapiro)  
*Rarefied Gas Dynamics* (33 min, principals: F. C. Hurlbut, F. S. Sherman)  
*Rheological Behavior of Fluids* (22 min, principal: H. Markovitz)  
*Rotating Flows* (29 min, principal: D. Fultz)  
*Secondary Flow* (30 min, principal: E. S. Taylor)  
*Stratified Flow* (26 min, principal: R. R. Long)  
*Surface Tension in Fluid Mechanics* (29 min, principal: L. M. Trefethen)  
*Turbulence* (29 min, principal: R. W. Stewart)  
*Vorticity* (2 parts, 44 min, principal: A. H. Shapiro)  
*Waves in Fluids* (33 min, principal: A. E. Bryson)

2. The University of Iowa  
AVC Marketing  
215 Seashore Center  
Iowa City, Iowa 52242-1402

The following six videos were prepared by H. Rouse as a series, in the order listed. They can be viewed individually without serious loss of continuity.

<sup>1</sup> Detailed summaries of the NCFMF videos are contained in *Illustrated Experiments in Fluid Mechanics* (Cambridge, MA: The M.I.T. Press, 1972).

<sup>2</sup> The contents of this video are summarized and illustrated in *Shape and Flow: The Fluid Dynamics of Drag*, by Ascher H. Shapiro (New York: Anchor Books, 1961).



*Introduction to the Study of Fluid Motion* (24 min). This orientation video shows a variety of familiar flow phenomena. Use of scale models for empirical study of complex phenomena is illustrated and the significance of the Euler, Froude, Mach, and Reynolds numbers as similarity parameters is shown using several sequences of model and prototype flows.

*Fundamental Principles of Flow* (23 min). The basic concepts and physical relationships needed to analyze fluid motions are developed in this video. The continuity, momentum, and energy equations are derived and used to analyze a jet propulsion device.

*Fluid Motion in a Gravitational Field* (23 min). Buoyancy effects and free-surface flows are illustrated in this video. The Froude number is shown to be a fundamental parameter for flows with a free surface. Wave motions are shown for open-channel and density-stratified flows.

*Characteristics of Laminar and Turbulent Flow* (26 min). Dye, smoke, suspended particles, and hydrogen bubbles are used to visualize laminar and turbulent flows. Instabilities that lead to turbulence are shown; production and decay of turbulence and mixing are described.

*Form Drag, Lift, and Propulsion* (24 min). The effects of boundary-layer separation on flow patterns and pressure distributions are shown for several body shapes. The basic characteristics of lifting shapes, including effects of aspect ratio, are discussed, and the results are applied to analysis of the performance of propellers and torque converters.

*Effects of Fluid Compressibility* (17 min). The hydraulic analogy between open-channel liquid flow and compressible gas flow is used to show representative wave patterns. Schlieren optical flow visualization is used in a supersonic wind tunnel to show patterns of flow past several bodies at subsonic and supersonic speeds.

3. American Institute of Aeronautics and Astronautics  
370 L'Enfant Promenade, S.W.  
Washington, D.C. 20024-2518

*America's Wings* (29 min). Individuals who made significant contributions to development of aircraft for high-speed flight are interviewed; they discuss and explain their contributions. This is an effective video for a relatively sophisticated audience.

4. Purdue University  
Center for Instructional Services  
Film Booking  
Hicks Undergraduate Library  
West Lafayette, Indiana 47907

*Tacoma Narrows Bridge Collapse* (3 min, silent). This brief video contains spectacular original footage from the spontaneous collapse in a light breeze of the 2800 ft suspension bridge over the Tacoma Narrows, which occurred November 7, 1940.

# SELECTED PERFORMANCE CURVES FOR PUMPS AND FANS

---

## D-1 INTRODUCTION

Many firms, worldwide, manufacture fluid machines in numerous standard types and sizes. Each manufacturer publishes complete performance data to allow application of its machines in systems. This Appendix contains selected performance data for use in solving pump and fan system problems. Two pump types and one fan type are included.

Choice of a manufacturer may be based on established practice, location, or cost. Once a manufacturer is chosen, machine selection is a three-step process:

1. Select a machine type, suited to the application, from a manufacturer's full-line catalog, which gives the ranges of pressure rise (head) and flow rate for each machine type.
2. Choose an appropriate machine model and driver speed from a master selector chart, which superposes the head and flow rate ranges of a series of machines on one graph.
3. Verify that the candidate machine is satisfactory for the intended application, using a detailed performance curve for the specific machine.

It is wise to consult with experienced system engineers, either employed by the machine manufacturer or in your own organization, before making a final purchase decision.

Many manufacturers currently use computerized procedures to select a machine that is most suitable for each given application. Such procedures are simply automated versions of the traditional selection method. Use of the master selector chart and the detailed performance curves is illustrated below for pumps and fans, using data from one manufacturer of each type of machine. Literature of other manufacturers differs in detail but contains the necessary information for machine selection.

---

## D-2 PUMP SELECTION

Representative data are shown in Figs. D.1 through D.10 for Peerless<sup>1</sup> horizontal split case single-stage (series AE) pumps and in Figs. D.11 and D.12 for Peerless multi-stage (series TU and TUT) pumps.

Figures D.1 and D.2 are master pump selector charts for series AE pumps at 3500 and 1750 nominal rpm. On these charts, the model number (e.g., 6AE14) indicates the discharge line size (6 in. nominal pipe), the pump series (AE), and the maximum impeller diameter (approximately 14 in.).

<sup>1</sup> Peerless Pump Company, P.O. Box 7026, Indianapolis, IN 46207-7026.

Figures D.3 through D.10 are detailed performance charts for individual pump models in the AE series.

Figures D.11 and D.12 are master pump selector charts for series TU and TUT pumps at 1750 nominal rpm. Data for two-stage pumps are presented in Fig. D.11, while Fig. D.12 contains data for pumps with three, four, and five stages.

Each pump performance chart contains curves of total head versus volume flow rate; curves for several impeller diameters—tested in the same casing—are presented on a single graph. Each performance chart also contains contours showing pump efficiency and driver power; the net positive suction head (*NPSH*) requirement, as it varies with flow rate, is shown by the curve at the bottom of each chart. The best efficiency point (BEP) for each impeller may be found using the efficiency contours.

Use of the master pump selector chart and detailed performance curves is illustrated in Example Problem D.1.

### EXAMPLE D.1 Pump Selection Procedure

Select a pump to deliver 1750 gpm of water at 120 ft total head. Choose the appropriate pump model and driver speed. Specify the pump efficiency, driver power, and *NPSH* requirement.

#### EXAMPLE PROBLEM D.1

**GIVEN:** Select a pump to deliver 1750 gpm of water at 120 ft total head.

**FIND:** (a) Pump model and driver speed.  
(b) Pump efficiency.  
(c) Driver power.  
(d) *NPSH* requirement.

**SOLUTION:**

Use the pump selection procedure described in Section D-1. (The numbers below correspond to the numbered steps given in the procedure.)

1. First, select a machine type suited to the application. (This step actually requires a manufacturer's full-line catalog, which is not reproduced here. The Peerless product line catalog specifies a maximum delivery and head of 2500 gpm and 660 ft for series AE pumps. Therefore the required performance can be obtained; assume the selection is to be made from this series.)
2. Second, consult the master pump selector chart. The desired operating point is not within any pump contour on the 3500 rpm selector chart (Fig. D.1). From the 1750 rpm chart (Fig. D.2), select a model 6AE14 pump. From the performance curve for the 6AE14 pump (Fig. D.6), choose a 13 in. impeller.
3. Third, verify the performance of the machine using the detailed performance chart. On the performance chart for the 6AE14 pump, project up from the abscissa at  $Q = 1750$  gpm. Project across from  $H = 120$  ft on the ordinate. The intersection is the pump performance at the desired operating point:

$$\eta \approx 85.8 \text{ percent} \quad \mathcal{P} \approx 64 \text{ hp}$$

From the operating point, project down to the *NPSH* requirement curve. At the intersection, read *NPSH*  $\approx 17$  ft.

{ This completes the selection process for this pump. One should consult with experienced system engineers to verify that the system operating condition has been predicted accurately and the pump has been selected correctly. }



## D-3 FAN SELECTION

Fan selection is similar to pump selection. A representative master fan selection chart is shown in Fig. D.13 for a series of Buffalo Forge<sup>2</sup> axial-flow fans. The chart shows the performance of the entire series of fans as a function of fan size and driver speed.

The master fan selector chart is used to select a fan size and driver speed for detailed consideration. Final evaluation of suitability of the fan model for the application is done using detailed performance charts for the specific model. A sample performance chart for a Buffalo Forge Size 48 Vaneaxial fan is presented in Fig. D.14.

The performance chart is plotted as total pressure rise versus volume flow rate. Figure D.14 contains curves for HB, LB, and MB wheels, operating at various constant speeds; the shaded bands represent measured total efficiency for the fans.

### EXAMPLE D.2 Fan Selection Procedure

Select an axial-flow fan to deliver 40,000 cfm of standard air at 1.25 in. H<sub>2</sub>O total pressure. Choose the appropriate fan model and driver speed. Specify the fan efficiency and driver power.

#### EXAMPLE PROBLEM D.2

**GIVEN:** Select an axial fan to deliver 40,000 cfm of standard air at 1.25 in. H<sub>2</sub>O total head.

**FIND:** (a) Fan size and driver speed.  
(b) Fan efficiency.  
(c) Driver power.

**SOLUTION:**

Use the fan selection procedure described in Section D-1. (The numbers below correspond to the numbered steps given in the procedure.)

1. First, select a machine type suited to the application. (This step actually requires a manufacturer's full-line catalog, which is not reproduced here. Assume the fan selection is to be made from the axial fan data presented in Fig. D.13.)
2. Second, consult the master fan selector chart. The desired operating point is within the contour for the Size 48 fan on the selector chart (Fig. D.13). To achieve the desired performance requires driving the fan at 870 rpm.
3. Third, verify the performance of the machine using the detailed performance chart (Fig. D.14). On the detailed performance chart, project up from the abscissa at  $Q = 40,000$  cfm. Project across from  $p = 1.25$  in. H<sub>2</sub>O on the ordinate. The intersection is the desired operating point.

These operating conditions cannot be delivered by a Type LB wheel; however, they are close to peak efficiency for either HB or MB wheels. The operating conditions can be delivered at about 72 percent total efficiency using an HB wheel. With an MB wheel, slightly in excess of 75 percent total efficiency may be expected. From the chart, the "efficiency factor" is 4780 at  $\eta = 0.75$ , and the fan driver power requirement is

$$\mathcal{P} = \frac{\text{Total Pressure} \times \text{Capacity}}{\text{Efficiency Factor}} = \frac{1.25 \text{ in. H}_2\text{O} \times 40,000 \text{ cfm}}{4780} = 10.5 \text{ hp}$$

{ This completes the fan selection process. Again, one should consult with experienced system engineers to verify that the system operating condition has been predicted accurately and the fan has been selected correctly. }

<sup>2</sup> Buffalo Forge, 465 Broadway, Buffalo, NY 14240.

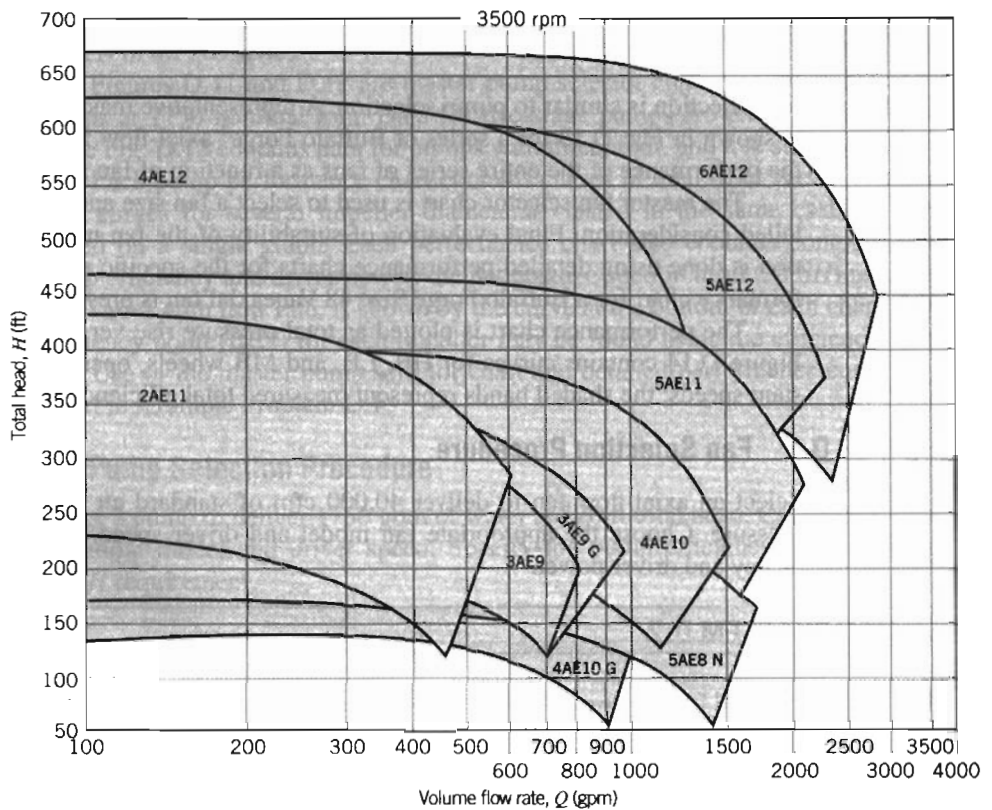


Fig. D.1 Selector chart for Peerless horizontal split case (series AE) pumps at 3500 nominal rpm.

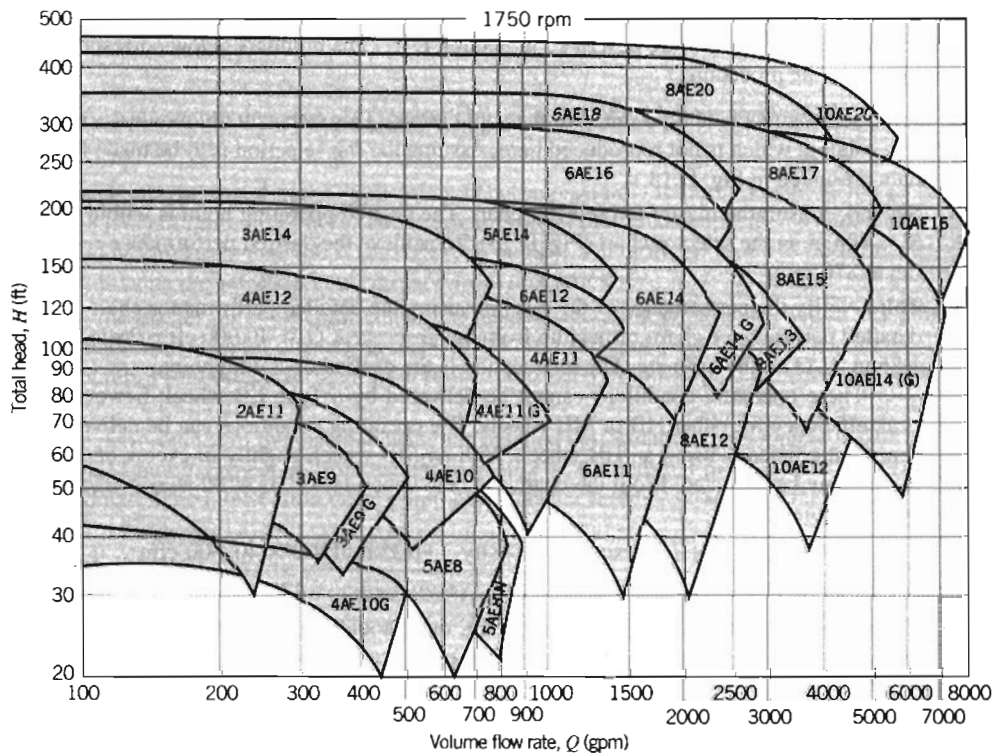


Fig. D.2 Selector chart for Peerless horizontal split case (series AE) pumps at 1750 nominal rpm.

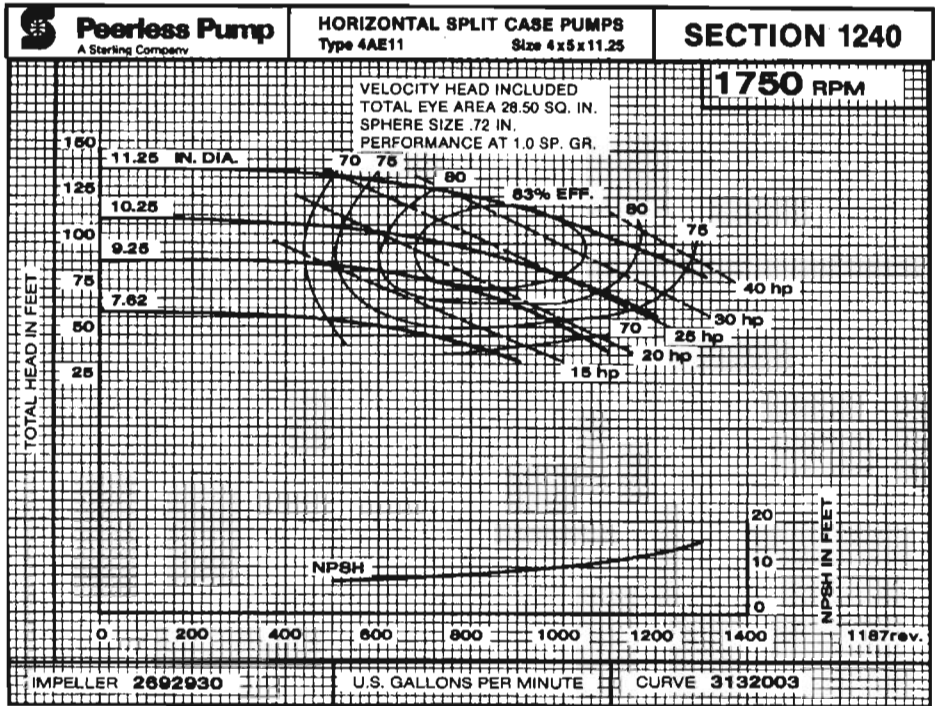


Fig. D.3 Performance curve for Peerless 4AE11 pump at 1750 rpm.

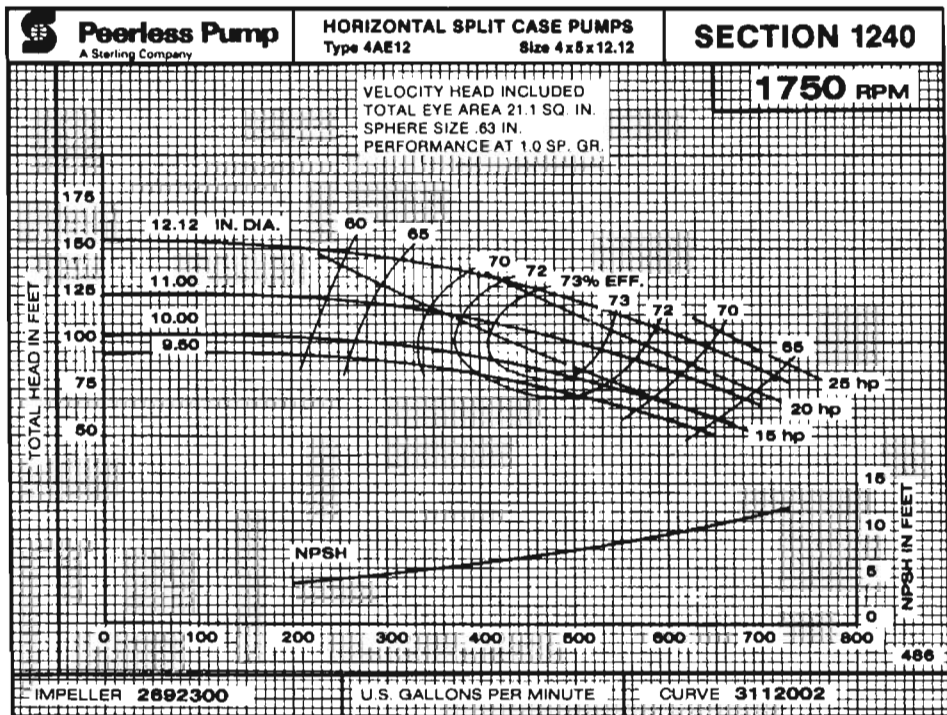


Fig. D.4 Performance curve for Peerless 4AE12 pump at 1750 rpm.

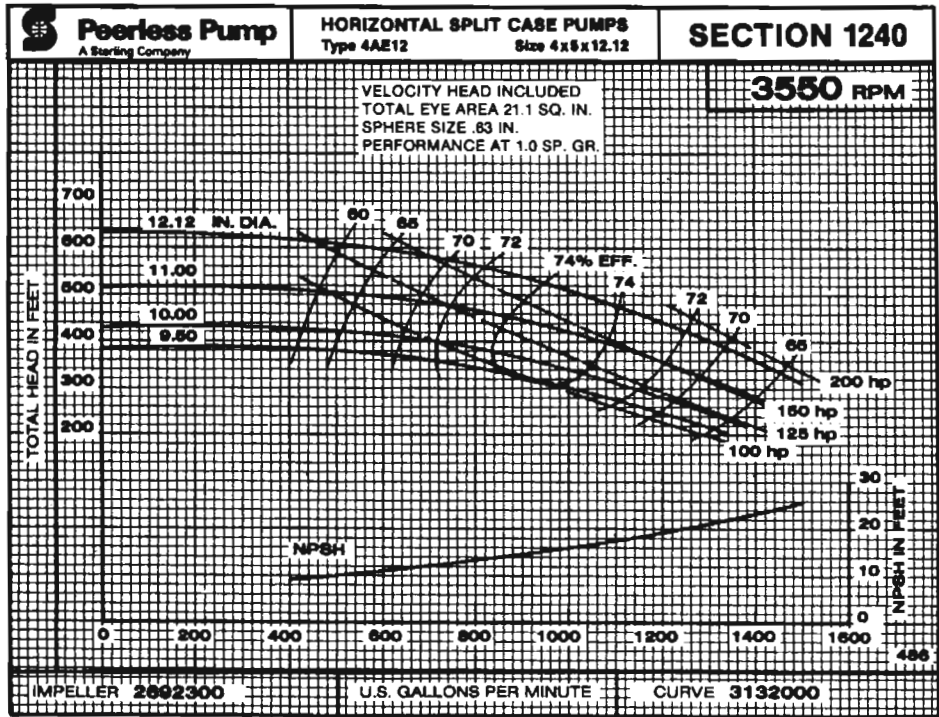


Fig. D.5 Performance curve for Peerless 4AE12 pump at 3550 rpm.

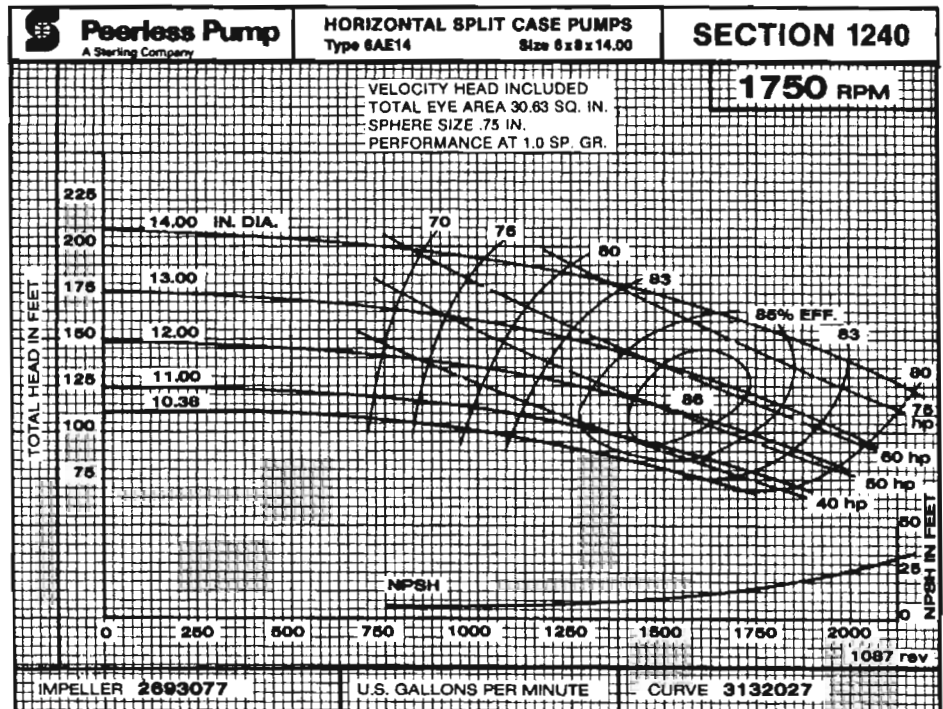


Fig. D.6 Performance curve for Peerless 6AE14 pump at 1750 rpm.

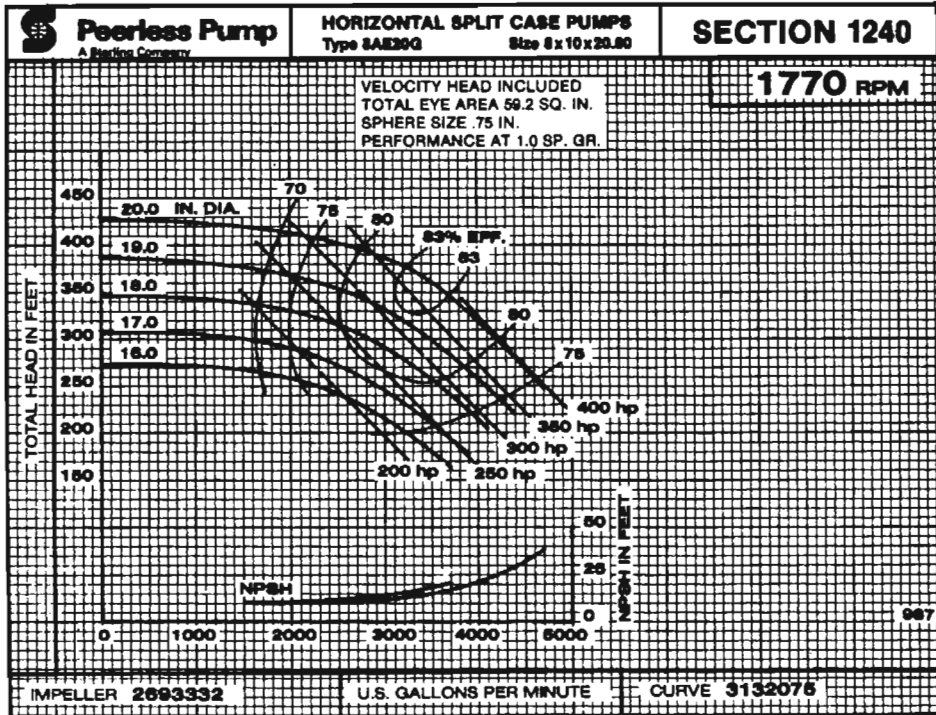


Fig. D.7 Performance curve for Peerless 8AE20G pump at 1770 rpm.

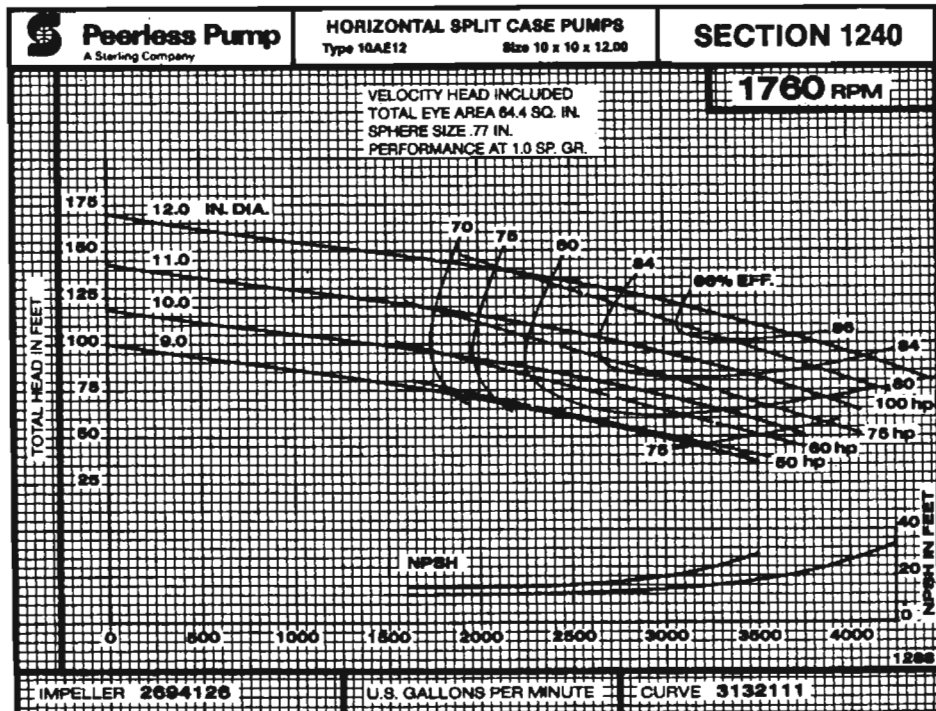


Fig. D.8 Performance curve for Peerless 10AE12 pump at 1760 rpm.



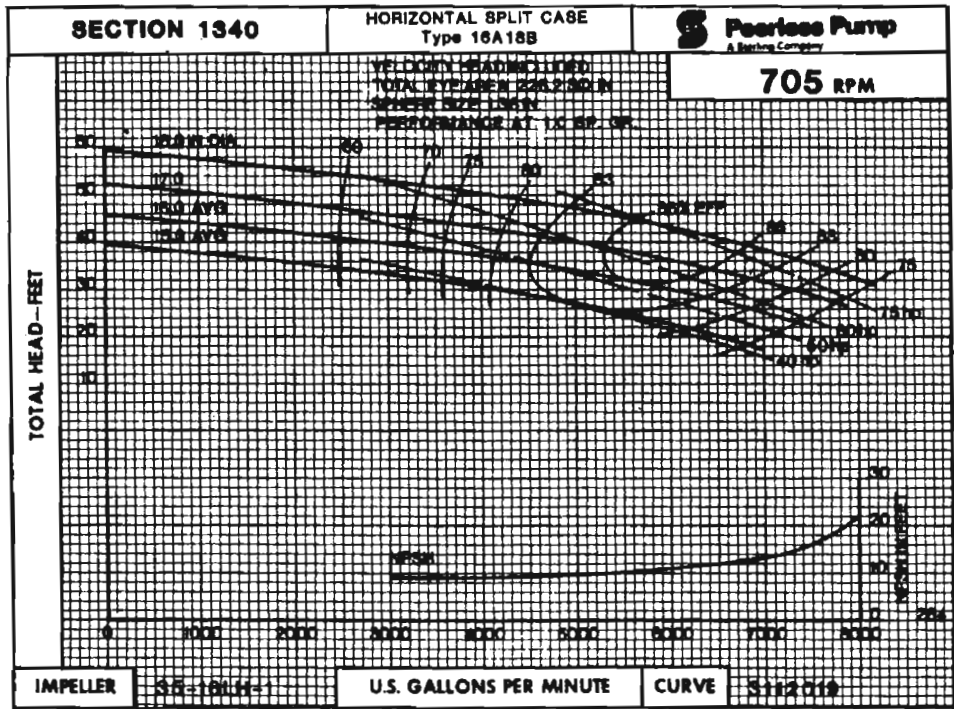


Fig. D.9 Performance curve for Peerless 16A 18B pump at 705 rpm.

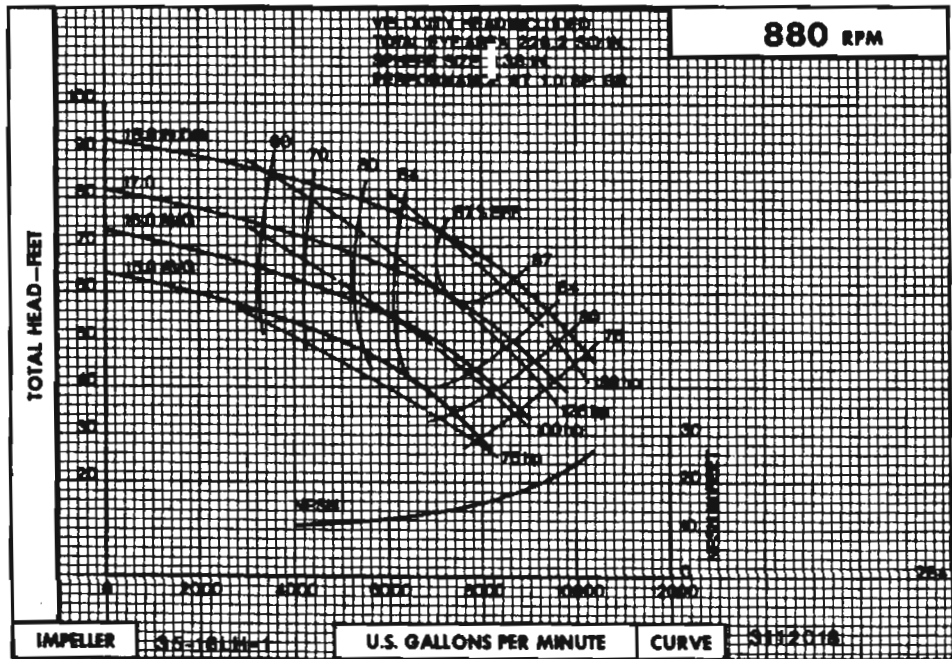


Fig. D.10 Performance curve for Peerless 16A 18B pump at 880 rpm.

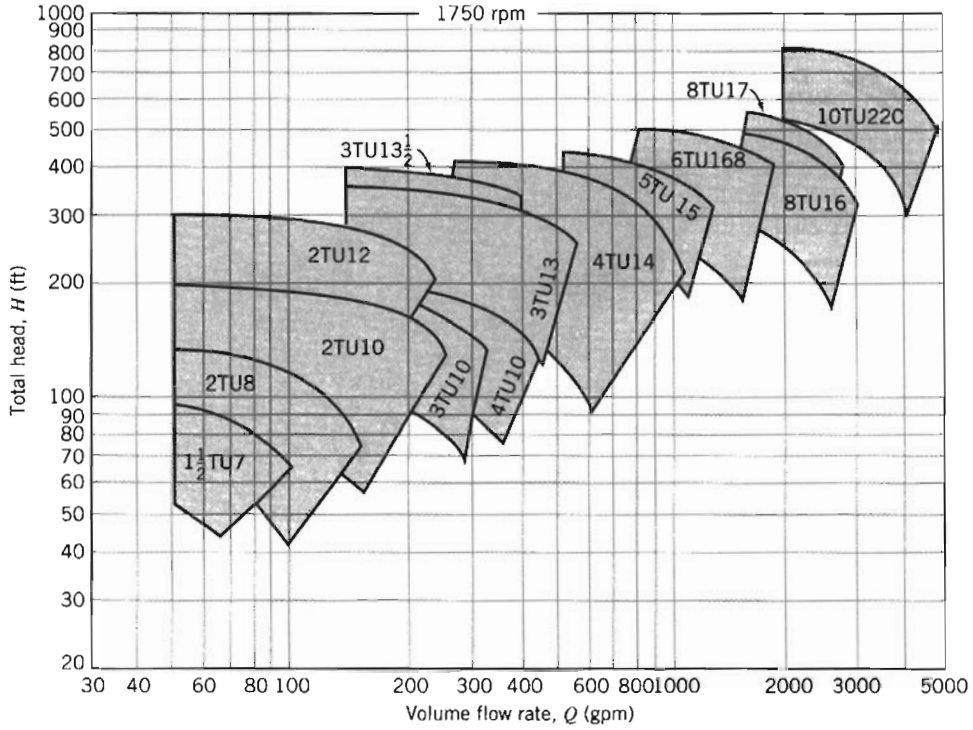


Fig. D.11 Selector chart for Peerless two-stage (series TU and TUT) pumps at 1750 nominal rpm.

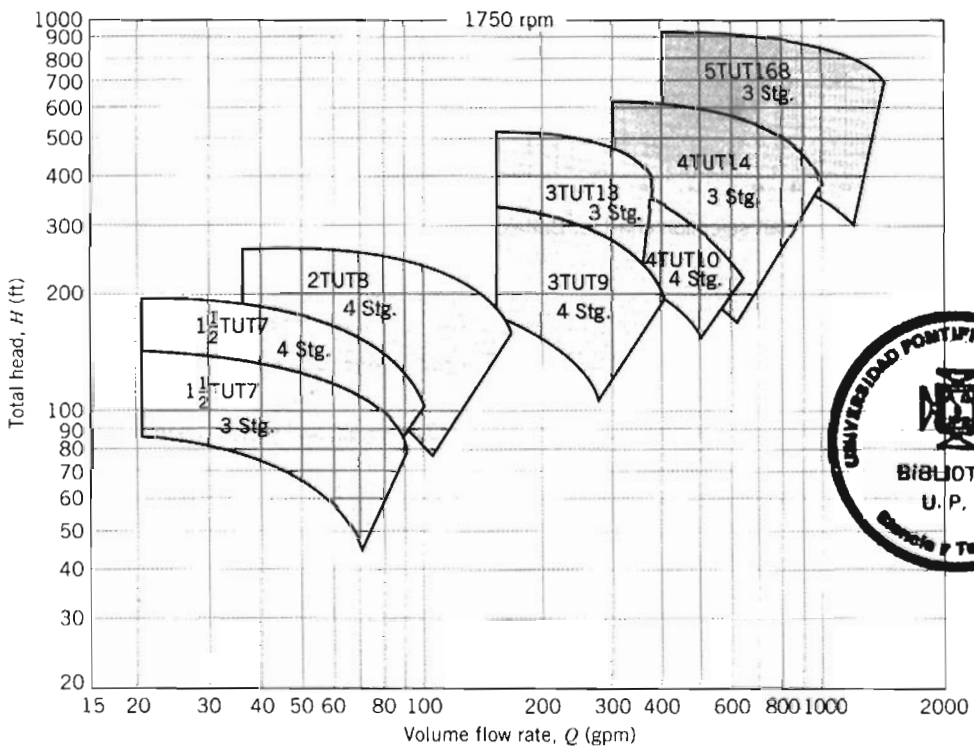


Fig. D.12 Selector chart for Peerless multi-stage (series TU and TUT) pumps at 1750 nominal rpm.



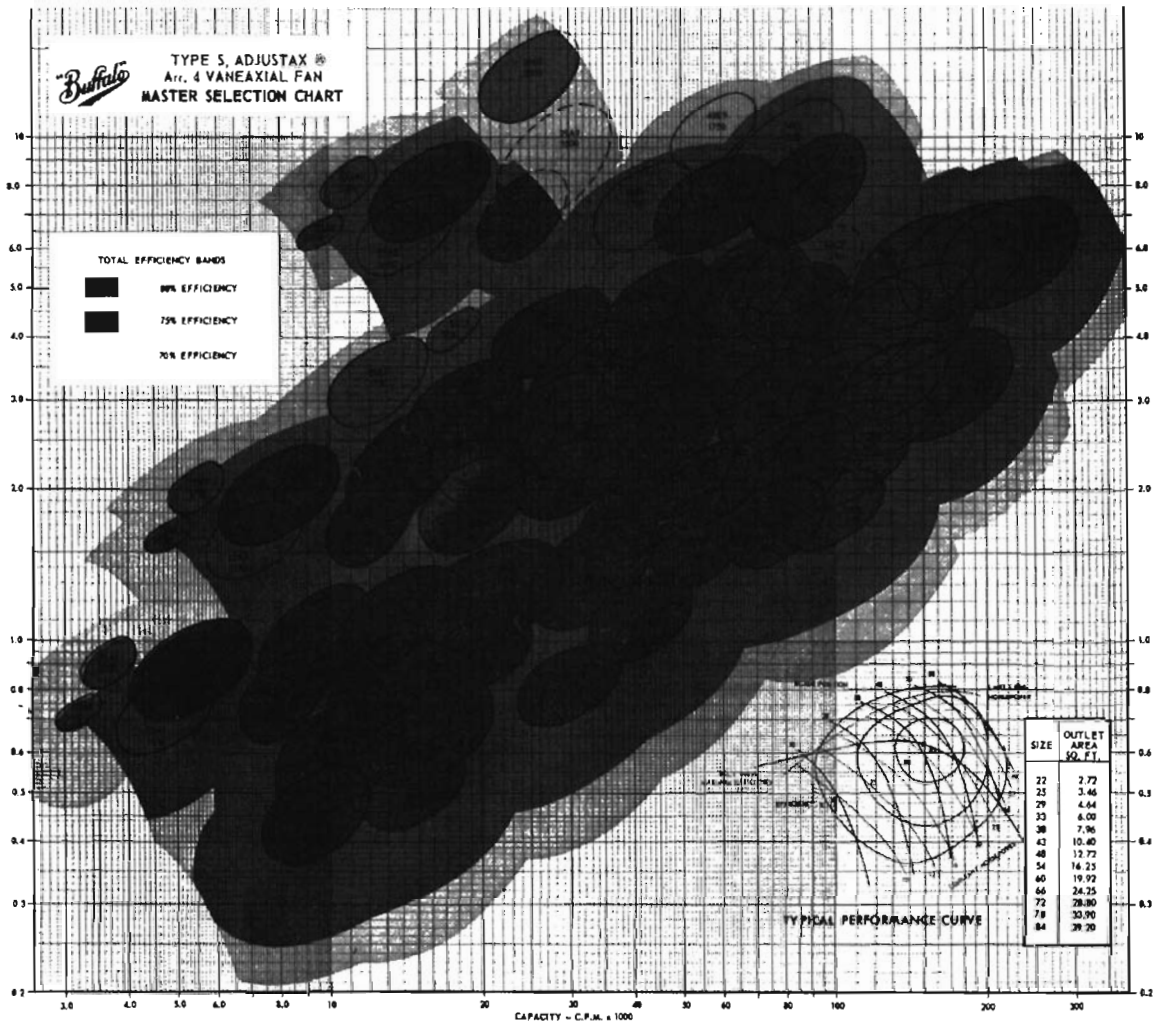


Fig. D.13 Master fan selection chart for Buffalo Forge axial fans.



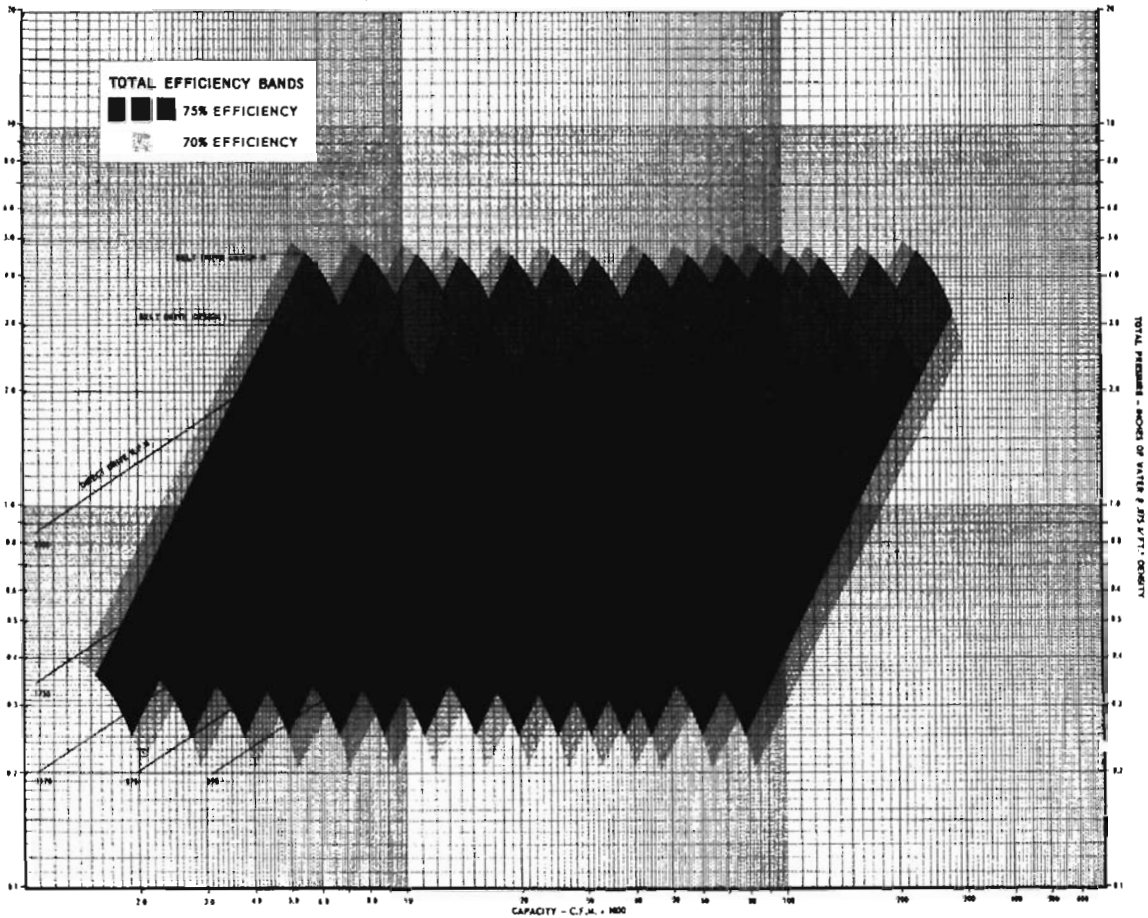


Fig. D.14 Performance chart for Buffalo Forge axial fans.

## REFERENCES

1. Peerless Pump literature:
  - Horizontal Split Case Single Stage Double Suction Pumps, Series AE, Brochure B-1200, 1987.
  - Horizontal Split Case Series AE Pumps, 60 Hertz, Performance Curves, Brochure B-1240, n.d.
  - Horizontal Split Case, Multistage Single Suction Pumps, Types TU, TUT, 60 Hertz, Performance Curves, Brochure B-1440, n.d.
2. Buffalo Forge literature:
  - Axial Flow Fans, Bulletin F-305A, 1968.

## Appendix E

# FLOW FUNCTIONS FOR COMPUTATION OF COMPRESSIBLE FLOW

### E-1 ISENTROPIC FLOW

Isentropic flow functions are computed using the following equations:

$$\frac{T_0}{T} = 1 + \frac{k-1}{2} M^2 \quad (11.20b)/(12.7b)$$

$$\frac{p_0}{p} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{k/(k-1)} \quad (11.20a)/(12.7a)$$


$$\frac{\rho_0}{\rho} = \left[ 1 + \frac{k-1}{2} M^2 \right]^{1/(k-1)} \quad (11.20c)/(12.7c)$$


$$\frac{A}{A^*} = \frac{1}{M} \left[ \frac{1 + \frac{k-1}{2} M^2}{\frac{k+1}{2}} \right]^{(k+1)/2(k-1)} \quad (12.7d)$$

Representative values of the isentropic flow functions for  $k = 1.4$  are presented in Table E.1 and plotted in Fig. E.1.

**Table E.1** Isentropic Flow Functions (one-dimensional flow, ideal gas,  $k = 1.4$ )

$M$	$T/T_0$	$p/p_0$	$\rho/\rho_0$	$A/A^*$
0.00	1.0000	1.0000	1.0000	$\infty$
0.50	0.9524	0.8430	0.8852	1.340
1.00	0.8333	0.5283	0.6339	1.000
1.50	0.6897	0.2724	0.3950	1.176
2.00	0.5556	0.1278	0.2301	1.688
2.50	0.4444	0.05853	0.1317	2.637
3.00	0.3571	0.02722	0.07623	4.235
3.50	0.2899	0.01311	0.04523	6.790
4.00	0.2381	0.006586	0.02766	10.72
4.50	0.1980	0.003455	0.01745	16.56
5.00	0.1667	0.001890	0.01134	25.00

 This table was computed from the *Excel* workbook *Isentropic Relations*. The workbook contains a more detailed, printable version of the table and can be easily modified to generate data for a different Mach number range, or for a different gas.

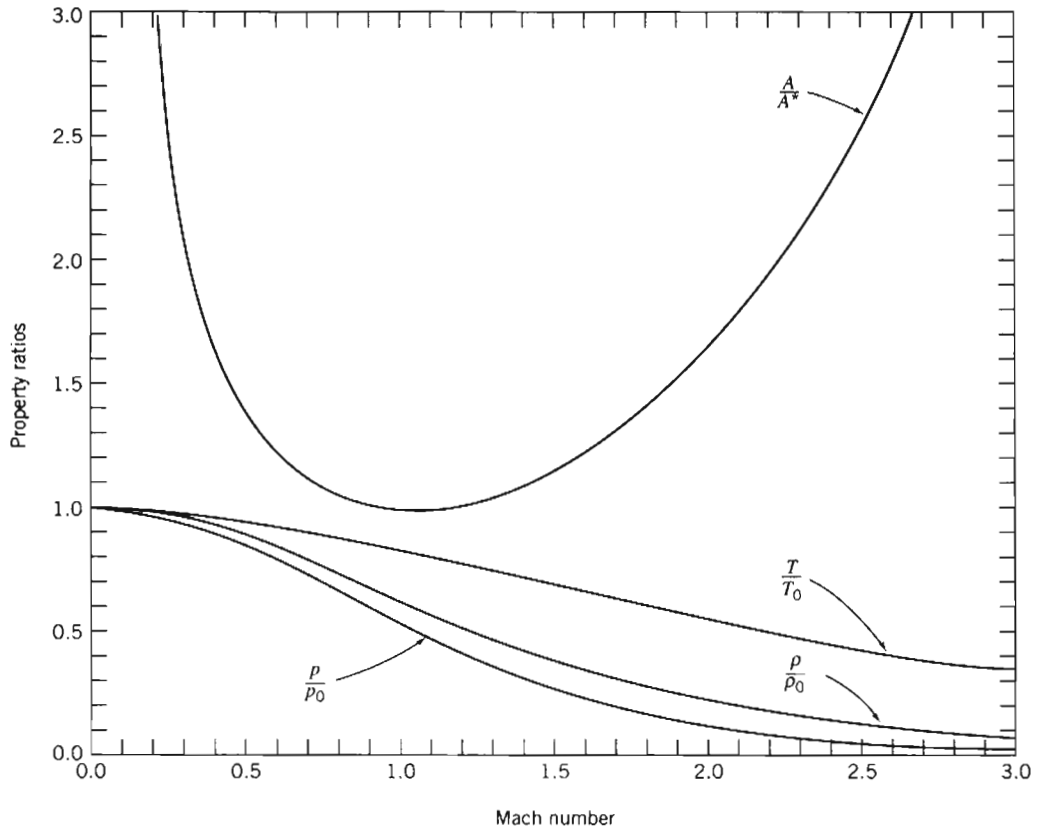

**Fig. E.1** Isentropic flow functions.



This graph was generated from the *Excel* workbook. The workbook can be modified easily to generate curves for a different gas.

## E-2 FANNO-LINE FLOW

Fanno-line flow functions are computed using the following equations:

$$\frac{p_0}{p_0^*} = \frac{1}{M} \left[ \left( \frac{2}{k+1} \right) \left( 1 + \frac{k-1}{2} M^2 \right) \right]^{(k+1)/2(k-1)} \quad (12.21e)$$

$$\frac{T}{T^*} = \frac{\left( \frac{k+1}{2} \right)}{\left( 1 + \frac{k-1}{2} M^2 \right)} \quad (12.21b)$$

$$\frac{p}{p^*} = \frac{1}{M} \left[ \frac{\left( \frac{k+1}{2} \right)}{1 + \frac{k-1}{2} M^2} \right]^{1/2} \quad (12.21d)$$

$$\frac{V}{V^*} = \frac{\rho^*}{\rho} = \left[ \frac{\left( \frac{k+1}{2} \right) M^2}{1 + \frac{k-1}{2} M^2} \right]^{1/2} \quad (12.21c)$$

$$\frac{\bar{f} L_{\max}}{D_h} = \frac{1 - M^2}{kM^2} + \frac{k+1}{2k} \ln \left[ \frac{(k+1)M^2}{2 \left( 1 + \frac{k-1}{2} M^2 \right)} \right] \quad (12.21a)$$

Representative values of the Fanno-line flow functions for  $k = 1.4$  are presented in Table E.2 and plotted in Fig. E.2.

**Table E.2** Fanno-Line Flow Functions (one-dimensional flow, ideal gas,  $k = 1.4$ )

$M$	$p_0/p_0^*$	$T/T^*$	$p/p^*$	$V/V^*$	$\bar{f} L_{\max}/D_h$
0.00	$\infty$	1.200	$\infty$	0.0000	$\infty$
0.50	1.340	1.143	2.138	0.5345	1.069
1.00	1.000	1.000	1.000	1.000	0.0000
1.50	1.176	0.8276	0.6065	1.365	0.1361
2.00	1.688	0.6667	0.4083	1.633	0.3050
2.50	2.637	0.5333	0.2921	1.826	0.4320
3.00	4.235	0.4286	0.2182	1.964	0.5222
3.50	6.790	0.3478	0.1685	2.064	0.5864
4.00	10.72	0.2857	0.1336	2.138	0.6331
4.50	16.56	0.2376	0.1083	2.194	0.6676
5.00	25.00	0.2000	0.08944	2.236	0.6938



This table was computed from the *Excel* workbook *Fanno-Line Relations*. The workbook contains a more detailed, printable version of the table and can be modified easily to generate data for a different Mach number range, or for a different gas.

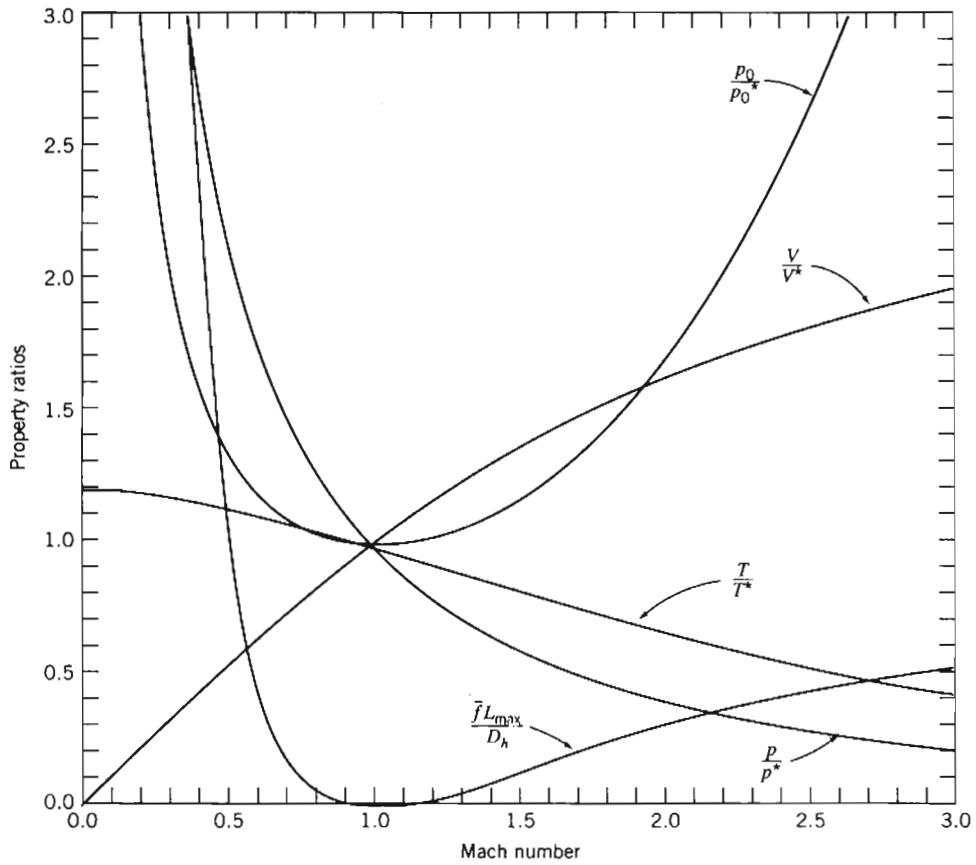


Fig. E.2 Fanno-line flow functions.



This graph was generated from the *Excel* workbook. The workbook can be modified easily to generate curves for a different gas.

**E-3 RAYLEIGH-LINE FLOW**

Rayleigh-line flow functions are computed using the following equations:

$$\frac{T_0}{T_0^*} = \frac{2(k+1)M^2 \left(1 + \frac{k-1}{2} M^2\right)}{(1+kM^2)^2} \quad (12.31d)$$

$$\frac{p_0}{p_0^*} = \frac{1+k}{1+kM^2} \left[ \left( \frac{2}{k+1} \right) \left( 1 + \frac{k-1}{2} M^2 \right) \right]^{k/(k-1)} \quad (12.31e)$$

$$\frac{T}{T^*} = \left[ M \left( \frac{1+k}{1+kM^2} \right) \right]^2 \quad (12.31b)$$

$$\frac{p}{p^*} = \frac{1+k}{1+kM^2} \quad (12.31a)$$

$$\frac{\rho^*}{\rho} = \frac{V}{V^*} = \frac{M^2(1+k)}{1+kM^2} \quad (12.31c)$$

Representative values of the Rayleigh-line flow functions for  $k = 1.4$  are presented in Table E.3 and plotted in Fig. E.3.

**Table E.3** Rayleigh-Line Flow Functions (one-dimensional flow, ideal gas,  $k = 1.4$ )

$M$	$T_0/T_0^*$	$p_0/p_0^*$	$T/T^*$	$p/p^*$	$V/V^*$
0.00	0.0000	1.268	0.0000	2.400	0.0000
0.50	0.6914	1.114	0.7901	1.778	0.4444
1.00	1.000	1.000	1.000	1.000	1.000
1.50	0.9093	1.122	0.7525	0.5783	1.301
2.00	0.7934	1.503	0.5289	0.3636	1.455
2.50	0.7101	2.222	0.3787	0.2462	1.539
3.00	0.6540	3.424	0.2803	0.1765	1.588
3.50	0.6158	5.328	0.2142	0.1322	1.620
4.00	0.5891	8.227	0.1683	0.1026	1.641
4.50	0.5698	12.50	0.1354	0.08177	1.656
5.00	0.5556	18.63	0.1111	0.06667	1.667



This table was computed from the *Excel* workbook *Rayleigh-Line Relations*. The workbook contains a more detailed, printable version of the table and can be easily modified to generate data for a different Mach number range, or for a different gas.

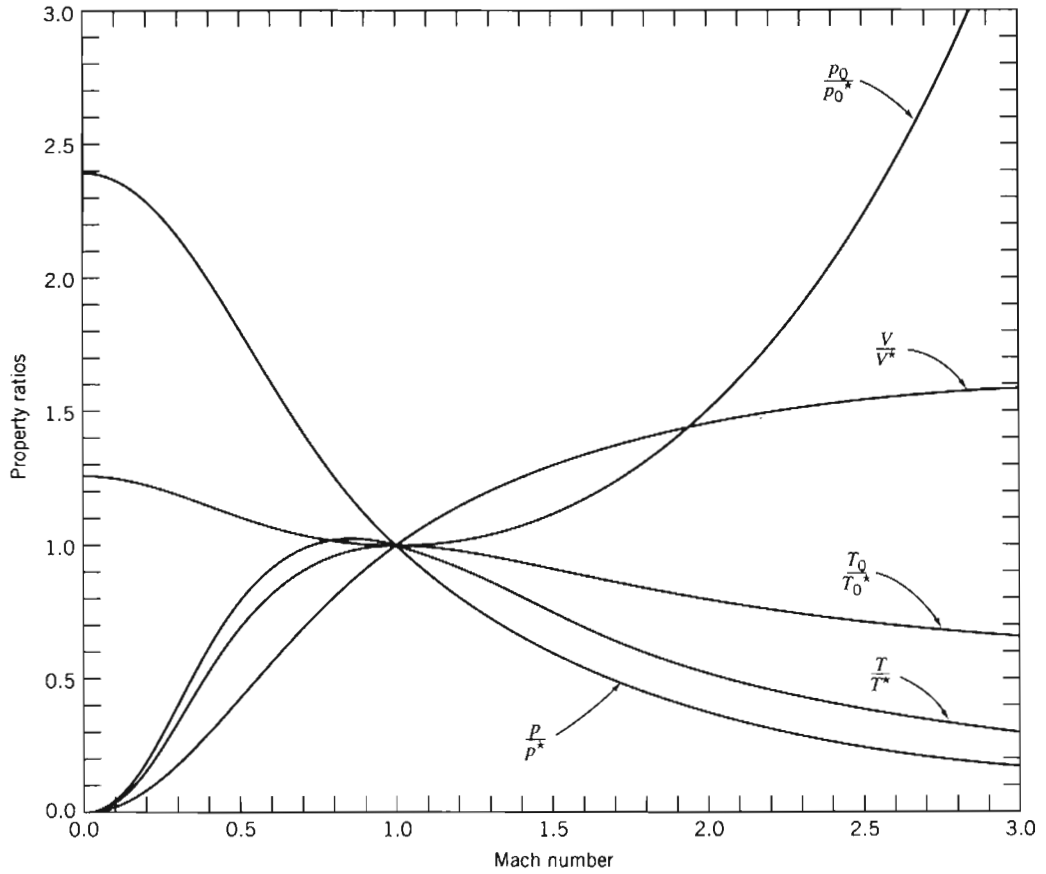


Fig. E.3 Rayleigh-line flow functions.



This graph was generated from the *Excel* workbook. The workbook can be modified easily to generate curves for a different gas.

**E-4 NORMAL SHOCK**

Normal-shock flow functions are computed using the following equations:

$$M_2^2 = \frac{M_1^2 + \frac{2}{k-1}}{\frac{2k}{k-1} M_1^2 - 1} \quad (12.41a)$$

$$\frac{p_{02}}{p_{01}} = \frac{\left[ \frac{\frac{k+1}{2} M_1^2}{1 + \frac{k-1}{2} M_1^2} \right]^{k/(k-1)}}{\left[ \frac{2k}{k+1} M_1^2 - \frac{k-1}{k+1} \right]^{1/(k-1)}} \quad (12.41b)$$

$$\frac{T_2}{T_1} = \frac{\left( 1 + \frac{k-1}{2} M_1^2 \right) \left( k M_1^2 - \frac{k-1}{2} \right)}{\left( \frac{k+1}{2} \right)^2 M_1^2} \quad (12.41c)$$


$$\frac{p_2}{p_1} = \frac{2k}{k+1} M_1^2 - \frac{k-1}{k+1} \quad (12.41d)$$

$$\frac{\rho_2}{\rho_1} = \frac{V_1}{V_2} = \frac{\frac{k+1}{2} M_1^2}{1 + \frac{k-1}{2} M_1^2} \quad (12.41e)$$

Representative values of the normal-shock flow functions for  $k = 1.4$  are presented in Table E.4 and plotted in Fig. E.4.

**Table E.4** Normal-Shock Flow Functions (one-dimensional flow, ideal gas,  $k = 1.4$ )

$M_1$	$M_2$	$p_{02}/p_{01}$	$T_2/T_1$	$p_2/p_1$	$\rho_2/\rho_1$
1.00	1.000	1.000	1.000	1.000	1.000
1.50	0.7011	0.9298	1.320	2.458	1.862
2.00	0.5774	0.7209	1.687	4.500	2.667
2.50	0.5130	0.4990	2.137	7.125	3.333
3.00	0.4752	0.3283	2.679	10.33	3.857
3.50	0.4512	0.2130	3.315	14.13	4.261
4.00	0.4350	0.1388	4.047	18.50	4.571
4.50	0.4236	0.09170	4.875	23.46	4.812
5.00	0.4152	0.06172	5.800	29.00	5.000

 This table was computed from the *Excel* workbook *Normal-Shock Relations*. The workbook contains a more detailed, printable version of the table and can be modified easily to generate data for a different Mach number range, or for a different gas.



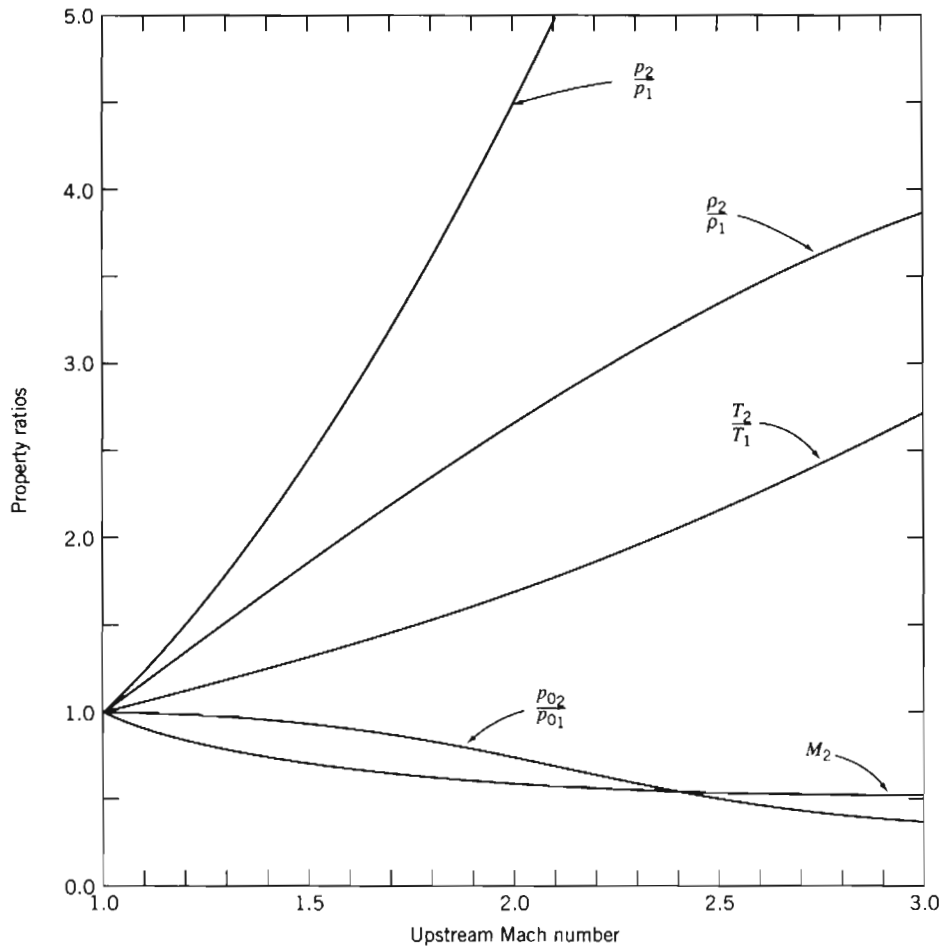


Fig. E.4 Normal-shock flow functions.



This graph was generated from the *Excel* workbook. The workbook can be modified easily to generate curves for a different gas.



**E-5 OBLIQUE SHOCK**

Oblique-shock flow functions are computed using the following equations:

$$M_{2n}^2 = \frac{M_{1n}^2 + \frac{2}{k-1}}{\frac{2k}{k-1} M_{1n}^2 - 1} \quad (12.48a)$$

$$\frac{p_{02}}{p_{01}} = \frac{\left[ \frac{\frac{k+1}{2} M_{1n}^2}{1 + \frac{k-1}{2} M_{1n}^2} \right]^{k/(k-1)}}{\left[ \frac{2k}{k+1} M_{1n}^2 - \frac{k-1}{k+1} \right]^{1/(k-1)}} \quad (12.48b)$$

$$\frac{T_2}{T_1} = \frac{\left( 1 + \frac{k-1}{2} M_{1n}^2 \right) \left( k M_{1n}^2 - \frac{k-1}{2} \right)}{\left( \frac{k+1}{2} \right)^2 M_{1n}^2} \quad (12.48c)$$

$$\frac{p_2}{p_1} = \frac{2k}{k+1} M_{1n}^2 - \frac{k-1}{k+1} \quad (12.48d)$$

$$\frac{\rho_2}{\rho_1} = \frac{V_{1n}}{V_{2n}} = \frac{\frac{k+1}{2} M_{1n}^2}{1 + \frac{k-1}{2} M_{1n}^2} \quad (12.48e)$$

Representative values of the oblique-shock flow functions for  $k = 1.4$  are presented in Table E.5 (identical to Table E.4 except for the Mach number notations).

**Table E.5** Oblique-Shock Flow Functions (ideal gas,  $k = 1.4$ )

$M_{1n}$	$M_{2n}$	$p_{02}/p_{01}$	$T_2/T_1$	$p_2/p_1$	$\rho_2/\rho_1$
1.00	1.000	1.0000	1.000	1.000	1.000
1.50	0.7011	0.9298	1.320	2.458	1.862
2.00	0.5774	0.7209	1.687	4.500	2.667
2.50	0.5130	0.4990	2.137	7.125	3.333
3.00	0.4752	0.3283	2.679	10.33	3.857
3.50	0.4512	0.2130	3.315	14.13	4.261
4.00	0.4350	0.1388	4.047	18.50	4.571
4.50	0.4236	0.09170	4.875	23.46	4.812
5.00	0.4152	0.06172	5.800	29.00	5.000

The deflection angle  $\theta$ , oblique-shock angle  $\beta$ , and Mach number  $M_1$  are related using the following equation:

$$\tan \theta = \frac{2 \cot \beta (M_1^2 \sin^2 \beta - 1)}{M_1^2 (k + \cos 2\beta) + 2} \quad (12.49)$$

Representative values of angle  $\theta$  are presented in Table E.6.

**Table E.6** Oblique-Shock Deflection Angle  $\theta$  (deg) (ideal gas,  $k = 1.4$ )

		Mach number $M_1$										
		1.2	1.4	1.6	1.8	2	2.5	3	4	6	10	$\infty$
Shock angle $\beta$ (deg)	0	–	–	–	–	–	–	–	–	–	–	–
	5	–	–	–	–	–	–	–	–	–	–	4.16
	10	–	–	–	–	–	–	–	–	0.64	5.53	8.32
	15	–	–	–	–	–	–	–	0.80	7.18	10.5	12.4
	20	–	–	–	–	–	–	0.77	7.44	12.4	15.1	16.5
	25	–	–	–	–	–	1.93	7.28	12.9	17.1	19.3	20.6
	30	–	–	–	–	–	7.99	12.8	17.8	21.5	23.4	24.5
	35	–	–	–	1.41	5.75	13.2	17.6	22.2	25.6	27.3	28.3
	40	–	–	1.31	6.49	10.6	17.7	21.8	26.2	29.4	31.1	32.0
	45	–	–	5.73	10.7	14.7	21.6	25.6	29.8	33.0	34.6	35.5
	50	–	3.28	9.31	14.2	18.1	24.9	28.9	33.1	36.2	37.8	38.8
	55	–	6.18	12.1	16.9	20.7	27.4	31.5	35.8	39.0	40.7	41.6
	60	1.61	8.20	13.9	18.6	22.4	29.2	33.3	37.8	41.1	42.9	43.9
	65	3.16	9.27	14.6	19.2	23.0	29.8	34.1	38.7	42.3	44.2	45.3
	70	3.88	9.32	14.2	18.5	22.1	28.9	33.3	38.2	42.1	44.2	45.4
	75	3.80	8.29	12.5	16.2	19.5	25.9	30.2	35.3	39.5	41.8	43.1
	80	3.01	6.25	9.34	12.2	14.8	20.1	23.9	28.7	32.8	35.2	36.6
	85	1.66	3.36	5.03	6.61	8.08	11.2	13.6	16.8	19.7	21.6	22.7
90	0	0	0	0	0	0	0	0	0	0	0	



Tables E.5 and E.6 were computed from the *Excel* workbook *Oblique-Shock Relations*. The workbook contains a more detailed, printable version of the tables and can be modified easily to generate data for a different Mach number range, or for a different gas.

**E-6** ISENTROPIC EXPANSION WAVE RELATIONS


The Prandtl-Meyer supersonic expansion function,  $\omega$ , is

$$\omega = \sqrt{\frac{k+1}{k-1}} \tan^{-1} \left( \sqrt{\frac{k-1}{k+1}} (M^2 - 1) \right) - \tan^{-1} \left( \sqrt{M^2 - 1} \right) \quad (12.55)$$

Representative values of angle  $\omega$  are presented in Table E.7.

**Table E.7** Prandtl-Meyer Supersonic Expansion Function  $\omega$  (deg) (ideal gas,  $k = 1.4$ )

$M$	$\omega$ (deg)	$M$	$\omega$ (deg)	$M$	$\omega$ (deg)	$M$	$\omega$ (deg)
1.00	0.00	2.00	26.4	3.00	49.8	4.00	65.8
1.50	0.49	2.05	27.7	3.05	50.7	4.05	66.4
1.10	1.34	2.10	29.1	3.10	51.6	4.10	67.1
1.15	2.38	2.15	30.4	3.15	52.6	4.15	67.7
1.20	3.56	2.20	31.7	3.20	53.5	4.20	68.3
1.25	4.83	2.25	33.0	3.25	54.4	4.25	68.9
1.30	6.17	2.30	34.3	3.30	55.2	4.30	69.5
1.35	7.56	2.35	35.5	3.35	56.1	4.35	70.1
1.40	8.99	2.40	36.7	3.40	56.9	4.40	70.7
1.45	10.4	2.45	37.9	3.45	57.7	4.45	71.3
1.50	11.9	2.50	39.1	3.50	58.5	4.50	71.8
1.55	13.4	2.55	40.3	3.55	59.3	4.55	72.4
1.60	14.9	2.60	41.4	3.60	60.1	4.60	72.9
1.65	16.3	2.65	42.5	3.65	60.9	4.65	73.4
1.70	17.8	2.70	43.6	3.70	61.6	4.70	74.0
1.75	19.3	2.75	44.7	3.75	62.3	4.75	74.5
1.80	20.7	2.80	45.7	3.80	63.0	4.80	75.0
1.85	22.2	2.85	46.8	3.85	63.7	4.85	75.5
1.90	23.6	2.90	47.8	3.90	64.4	4.90	76.0
1.95	25.0	2.95	48.8	3.95	65.1	4.95	76.4
2.00	26.4	3.00	49.8	4.00	65.8	5.00	76.9

 This table was computed from the *Excel* workbook *Isentropic Expansion Wave Relations*. The workbook contains a more detailed, printable version of the table and can be easily modified to generate data for a different Mach number range, or for a different gas.

---

## Appendix F

# ANALYSIS OF EXPERIMENTAL UNCERTAINTY

---

### F-1 INTRODUCTION

Experimental data often are used to supplement engineering analysis as a basis for design. Not all data are equally good; the validity of data should be documented before test results are used for design. Uncertainty analysis is the procedure used to quantify data validity and accuracy.

Analysis of uncertainty also is useful during experiment design. Careful study may indicate potential sources of unacceptable error and suggest improved measurement methods.

---

### F-2 TYPES OF ERROR

Errors always are present when experimental measurements are made. Aside from gross blunders by the experimenter, experimental error may be of two types. Fixed (or systematic) error causes repeated measurements to be in error by the same amount for each trial. Fixed error is the same for each reading and can be removed by proper calibration or correction. Random error (nonrepeatability) is different for every reading and hence cannot be removed. The factors that introduce random error are uncertain by their nature. The objective of uncertainty analysis is to estimate the probable random error in experimental results.

We assume that equipment has been constructed correctly and calibrated properly to eliminate fixed errors. We assume that instrumentation has adequate resolution and that fluctuations in readings are not excessive. We assume also that care is used in making and recording observations so that only random errors remain.

---

### F-3 ESTIMATION OF UNCERTAINTY

Our goal is to estimate the uncertainty of experimental measurements and calculated results due to random errors. The procedure has three steps:

1. Estimate the uncertainty interval for each measured quantity.
2. State the confidence limit on each measurement.
3. Analyze the propagation of uncertainty into results calculated from experimental data.

Below we outline the procedure for each step and illustrate applications with examples.

**Step 1.** *Estimate the measurement uncertainty interval.* Designate the measured variables in an experiment as  $x_1, x_2, \dots, x_n$ . One possible way to find the uncertainty interval for each variable would be to repeat each measurement many times. The result would be a distribution of data for each variable. Random errors in measurement usually produce a *normal (Gaussian)* frequency distribution of measured values. The data scatter for a normal distribution is characterized by the standard deviation,  $\sigma$ . The uncertainty interval for each measured variable,  $x_i$ , may be stated as  $\pm n\sigma_i$ , where  $n = 1, 2, \text{ or } 3$ .

For normally distributed data, over 99 percent of measured values of  $x_i$  lie within  $\pm 3\sigma_i$  of the mean value, 95 percent lie within  $\pm 2\sigma_i$ , and 68 percent lie within  $\pm \sigma_i$  of the mean value of the data set [1]. Thus it would be possible to quantify expected errors within any desired *confidence limit* if a statistically significant set of data were available.

The method of repeated measurements usually is impractical. In most applications it is impossible to obtain enough data for a statistically significant sample owing to the excessive time and cost involved. However, the normal distribution suggests several important concepts:

1. Small errors are more likely than large ones.
2. Plus and minus errors are about equally likely.
3. No finite maximum error can be specified.

A more typical situation in engineering work is a "single-sample" experiment, where only one measurement is made for each point [2]. A reasonable estimate of the measurement uncertainty due to random error in a single-sample experiment usually is plus or minus half the smallest scale division (the *least count*) of the instrument. However, this approach also must be used with caution, as illustrated in the following example.

### EXAMPLE F.1 Uncertainty in Barometer Reading

The observed height of the mercury barometer column is  $h = 752.6$  mm. The least count on the vernier scale is 0.1 mm, so one might estimate the probable measurement error as  $\pm 0.05$  mm.

A measurement probably could not be made this precisely. The barometer sliders and meniscus must be aligned by eye. The slider has a least count of 1 mm. As a conservative estimate, a measurement could be made to the nearest millimeter. The probable value of a single measurement then would be expressed as  $752.6 \pm 0.5$  mm. The relative uncertainty in barometric height would be stated as

$$u_h = \pm \frac{0.5 \text{ mm}}{752.6 \text{ mm}} = \pm 0.000664 \quad \text{or} \quad \pm 0.0664 \text{ percent}$$

*Comments:*

1. An uncertainty interval of  $\pm 0.1$  percent corresponds to a result specified to three significant figures; this precision is sufficient for most engineering work.
2. The measurement of barometer height was precise, as shown by the uncertainty estimate. But was it accurate? At typical room temperatures, the observed barometer reading must be reduced by a temperature correction of nearly 3 mm! This is an example of a fixed error that requires a correction factor.

**Step 2.** *State the confidence limit on each measurement.* The uncertainty interval of a measurement should be stated at specified odds. For example, one may write  $h = 752.6 \pm 0.5$  mm (20 to 1). This means that one is willing to bet 20 to 1 that the height of the mercury column actually is within  $\pm 0.5$  mm of the stated value. It should be obvious [3] that “. . . the specification of such odds can only be made by the experimenter based on . . . total laboratory experience. There is no substitute for sound engineering judgment in estimating the uncertainty of a measured variable.”

The confidence interval statement is based on the concept of standard deviation for a normal distribution. Odds of about 370 to 1 correspond to  $\pm 3\sigma$ ; 99.7 percent of all future readings are expected to fall within the interval. Odds of about 20 to 1 correspond to  $\pm 2\sigma$  and odds of 3 to 1 correspond to  $\pm \sigma$  confidence limits. Odds of 20 to 1 typically are used for engineering work.

**Step 3.** *Analyze the propagation of uncertainty in calculations.* Suppose that measurements of independent variables,  $x_1, x_2, \dots, x_n$ , are made in the laboratory. The relative uncertainty of each independently measured quantity is estimated as  $u_i$ . The measurements are used to calculate some result,  $R$ , for the experiment. We wish to analyze how errors in the  $x_i$ s propagate into the calculation of  $R$  from measured values.

In general,  $R$  may be expressed mathematically as  $R = R(x_1, x_2, \dots, x_n)$ . The effect on  $R$  of an error in measuring an individual  $x_i$  may be estimated by analogy to the derivative of a function [4]. A variation,  $\delta x_i$ , in  $x_i$  would cause variation  $\delta R_i$  in  $R$ ,

$$\delta R_i = \frac{\partial R}{\partial x_i} \delta x_i$$

The relative variation in  $R$  is

$$\frac{\delta R_i}{R} = \frac{1}{R} \frac{\partial R}{\partial x_i} \delta x_i = \frac{x_i}{R} \frac{\partial R}{\partial x_i} \frac{\delta x_i}{x_i} \quad (\text{F.1})$$

Equation F.1 may be used to estimate the relative uncertainty in the result due to uncertainty in  $x_i$ . Introducing the notation for relative uncertainty, we obtain

$$u_{R_i} = \frac{x_i}{R} \frac{\partial R}{\partial x_i} u_{x_i} \quad (\text{F.2})$$

How do we estimate the relative uncertainty in  $R$  caused by the combined effects of the relative uncertainties in all the  $x_i$ s? The random error in each variable has a range of values within the uncertainty interval. It is unlikely that all errors will have adverse values at the same time. It can be shown [2] that the best representation for the relative uncertainty of the result is

$$u_R = \pm \left[ \left( \frac{x_1}{R} \frac{\partial R}{\partial x_1} u_1 \right)^2 + \left( \frac{x_2}{R} \frac{\partial R}{\partial x_2} u_2 \right)^2 + \dots + \left( \frac{x_n}{R} \frac{\partial R}{\partial x_n} u_n \right)^2 \right]^{1/2} \quad (\text{F.3})$$

### EXAMPLE F.2 Uncertainty in Volume of Cylinder

Obtain an expression for the uncertainty in determining the volume of a cylinder from measurements of its radius and height. The volume of a cylinder in terms of radius and height is

$$V = V(r, h) = \pi r^2 h$$

Differentiating, we obtain

$$dV = \frac{\partial V}{\partial r} dr + \frac{\partial V}{\partial h} dh = 2\pi r h dr + \pi r^2 dh$$

since

$$\frac{\partial V}{\partial r} = 2\pi r h \quad \text{and} \quad \frac{\partial V}{\partial h} = \pi r^2$$

From Eq. F.2, the relative uncertainty due to radius is

$$u_{V,r} = \frac{\delta V_r}{V} = \frac{r}{V} \frac{\partial V}{\partial r} u_r = \frac{r}{\pi r^2 h} (2\pi r h) u_r = 2u_r$$

and the relative uncertainty due to height is

$$u_{V,h} = \frac{\delta V_h}{V} = \frac{h}{V} \frac{\partial V}{\partial h} u_h = \frac{h}{\pi r^2 h} (\pi r^2) u_h = u_h$$

The relative uncertainty in volume is then

$$u_V = \pm \left[ (2u_r)^2 + (u_h)^2 \right]^{1/2} \quad (\text{F.4})$$

*Comment:* The coefficient 2, in Eq. F.4, shows that the uncertainty in measuring cylinder radius has a larger effect than the uncertainty in measuring height. This is true because the radius is squared in the equation for volume.

## F-4 APPLICATIONS TO DATA

Applications to data obtained from laboratory measurements are illustrated in the following examples.

### EXAMPLE F.3 Uncertainty in Liquid Mass Flow Rate

The mass flow rate of water through a tube is to be determined by collecting water in a beaker. The mass flow rate is calculated from the net mass of water collected divided by the time interval,

$$\dot{m} = \frac{\Delta m}{\Delta t} \quad (\text{F.5})$$

where  $\Delta m = m_f - m_e$ . Error estimates for the measured quantities are

$$\text{Mass of full beaker, } m_f = 400 \pm 2 \text{ g (20 to 1)}$$

$$\text{Mass of empty beaker, } m_e = 200 \pm 2 \text{ g (20 to 1)}$$

$$\text{Collection time interval, } \Delta t = 10 \pm 0.2 \text{ s (20 to 1)}$$

The relative uncertainties in measured quantities are

$$u_{m_f} = \pm \frac{2 \text{ g}}{400 \text{ g}} = \pm 0.005$$



$$u_{m_e} = \pm \frac{2 \text{ g}}{200 \text{ g}} = \pm 0.01$$

$$u_{\Delta t} = \pm \frac{0.2 \text{ s}}{10 \text{ s}} = \pm 0.02$$

The relative uncertainty in the measured value of net mass is calculated from Eq. F.3 as

$$\begin{aligned} u_{\Delta m} &= \pm \left[ \left( \frac{m_f}{\Delta m} \frac{\partial \Delta m}{\partial m_f} u_{m_f} \right)^2 + \left( \frac{m_e}{\Delta m} \frac{\partial \Delta m}{\partial m_e} u_{m_e} \right)^2 \right]^{1/2} \\ &= \pm \{ [(2)(1)(\pm 0.005)]^2 + [(1)(-1)(\pm 0.01)]^2 \}^{1/2} \\ u_{\Delta m} &= \pm 0.0141 \end{aligned}$$

Because  $\dot{m} = \dot{m}(\Delta m, \Delta t)$ , we may write Eq. F.3 as

$$u_{\dot{m}} = \pm \left[ \left( \frac{\Delta m}{\dot{m}} \frac{\partial \dot{m}}{\partial \Delta m} u_{\Delta m} \right)^2 + \left( \frac{\Delta t}{\dot{m}} \frac{\partial \dot{m}}{\partial \Delta t} u_{\Delta t} \right)^2 \right]^{1/2} \quad (\text{F.6})$$

The required partial derivative terms are

$$\frac{\Delta m}{\dot{m}} \frac{\partial \dot{m}}{\partial \Delta m} = 1 \quad \text{and} \quad \frac{\Delta t}{\dot{m}} \frac{\partial \dot{m}}{\partial \Delta t} = -1$$

Substituting into Eq. F.6 gives

$$\begin{aligned} u_{\dot{m}} &= \pm \{ [(1)(\pm 0.0141)]^2 + [(-1)(\pm 0.02)]^2 \}^{1/2} \\ u_{\dot{m}} &= \pm 0.0245 \quad \text{or} \quad \pm 2.45 \text{ percent (20 to 1)} \end{aligned}$$

*Comment:* The 2 percent uncertainty interval in time measurement makes the most important contribution to the uncertainty interval in the result.

#### EXAMPLE F.4 Uncertainty in the Reynolds Number for Water Flow

The Reynolds number is to be calculated for flow of water in a tube. The computing equation for the Reynolds number is

$$Re = \frac{4\dot{m}}{\pi\mu D} = Re(\dot{m}, D, \mu) \quad (\text{F.7})$$

We have considered the uncertainty interval in calculating the mass flow rate. What about uncertainties in  $\mu$  and  $D$ ? The tube diameter is given as  $D = 6.35$  mm. Do we assume that it is exact? The diameter might be measured to the nearest 0.1 mm. If so, the relative uncertainty in diameter would be estimated as

$$u_D = \pm \frac{0.05 \text{ mm}}{6.35 \text{ mm}} = \pm 0.00787 \quad \text{or} \quad \pm 0.787 \text{ percent}$$

The viscosity of water depends on temperature. The temperature is estimated as  $T = 24 \pm 0.5^\circ\text{C}$ . How will the uncertainty in temperature affect the uncertainty in  $\mu$ ? One way to estimate this is to write

$$u_{\mu(T)} = \pm \frac{\delta\mu}{\mu} = \frac{1}{\mu} \frac{d\mu}{dT} (\pm \delta T) \quad (\text{F.8})$$

The derivative can be estimated from tabulated viscosity data near the nominal temperature of  $24^\circ\text{C}$ . Thus

$$\frac{d\mu}{dT} \approx \frac{\Delta\mu}{\Delta T} = \frac{\mu(25^\circ\text{C}) - \mu(23^\circ\text{C})}{(25 - 23)^\circ\text{C}} = \frac{(0.000890 - 0.000933) \text{ N}\cdot\text{s}}{\text{m}^2} \times \frac{1}{2^\circ\text{C}}$$

$$\frac{d\mu}{dT} = -2.15 \times 10^{-5} \text{ N}\cdot\text{s}/(\text{m}^2 \cdot ^\circ\text{C})$$

It follows from Eq. F.8 that the relative uncertainty in viscosity due to temperature is

$$u_{\mu(T)} = \frac{1}{0.000911 \text{ N}\cdot\text{s}} \frac{\text{m}^2}{\text{m}^2} \times -2.15 \times 10^{-5} \frac{\text{N}\cdot\text{s}}{\text{m}^2 \cdot ^\circ\text{C}} \times (\pm 0.5^\circ\text{C})$$

$$u_{\mu(T)} = \pm 0.0118 \quad \text{or} \quad \pm 1.18 \text{ percent}$$

Tabulated viscosity data themselves also have some uncertainty. If this is  $\pm 1.0$  percent, an estimate for the resulting relative uncertainty in viscosity is

$$u_\mu = \pm [(\pm 0.01)^2 + (\pm 0.0118)^2]^{1/2} = \pm 0.0155 \quad \text{or} \quad \pm 1.55 \text{ percent}$$

The uncertainties in mass flow rate, tube diameter, and viscosity needed to compute the uncertainty interval for the calculated Reynolds number now are known. The required partial derivatives, determined from Eq. F.7, are

$$\frac{\dot{m}}{Re} \frac{\partial Re}{\partial \dot{m}} = \frac{\dot{m}}{Re} \frac{4}{\pi \mu D} = \frac{Re}{Re} = 1$$

$$\frac{\mu}{Re} \frac{\partial Re}{\partial \mu} = \frac{\mu}{Re} (-1) \frac{4\dot{m}}{\pi \mu^2 D} = -\frac{Re}{Re} = -1$$

$$\frac{D}{Re} \frac{\partial Re}{\partial D} = \frac{D}{Re} (-1) \frac{4\dot{m}}{\pi \mu D^2} = -\frac{Re}{Re} = -1$$

Substituting into Eq. F.3 gives

$$u_{Re} = \pm \left\{ \left[ \frac{\dot{m}}{Re} \frac{\partial Re}{\partial \dot{m}} u_{\dot{m}} \right]^2 + \left[ \frac{\mu}{Re} \frac{\partial Re}{\partial \mu} u_\mu \right]^2 + \left[ \frac{D}{Re} \frac{\partial Re}{\partial D} u_D \right]^2 \right\}^{1/2}$$

$$u_{Re} = \pm \{ [(1)(\pm 0.0245)]^2 + [(-1)(\pm 0.0155)]^2 + [(-1)(\pm 0.00787)]^2 \}^{1/2}$$

$$u_{Re} = \pm 0.0300 \quad \text{or} \quad \pm 3.00 \text{ percent}$$

*Comment:* Examples F.3 and F.4 illustrate two points important for experiment design. First, the mass of water collected,  $\Delta m$ , is calculated from two measured quantities,  $m_f$  and  $m_e$ . For any stated uncertainty interval in the measurements of  $m_f$  and  $m_e$ , the relative uncertainty in  $\Delta m$  can be decreased by making  $\Delta m$  larger. This might be accomplished by using larger containers or a longer measuring interval,  $\Delta t$ , which also would reduce the relative uncertainty in the measured  $\Delta t$ . Second, the uncertainty in tabulated property data may be significant. The data uncertainty also is increased by the uncertainty in measurement of fluid temperature.

### EXAMPLE F.5 Uncertainty in Air Speed

Air speed is calculated from pitot tube measurements in a wind tunnel. From the Bernoulli equation,

$$V = \left( \frac{2gh\rho_{\text{water}}}{\rho_{\text{air}}} \right)^{1/2} \quad (\text{F.9})$$

where  $h$  is the observed height of the manometer column.

The only new element in this example is the square root. The variation in  $V$  due to the uncertainty interval in  $h$  is

$$\frac{h}{V} \frac{\partial V}{\partial h} = \frac{h}{V} \frac{1}{2} \left( \frac{2gh\rho_{\text{water}}}{\rho_{\text{air}}} \right)^{-1/2} \frac{2g\rho_{\text{water}}}{\rho_{\text{air}}}$$

$$\frac{h}{V} \frac{\partial V}{\partial h} = \frac{h}{V} \frac{1}{2} \frac{1}{V} \frac{2g\rho_{\text{water}}}{\rho_{\text{air}}} = \frac{1}{2} \frac{V^2}{V^2} = \frac{1}{2}$$

Using Eq. F.3, we calculate the relative uncertainty in  $V$  as

$$u_V = \pm \left[ \left( \frac{1}{2} u_h \right)^2 + \left( \frac{1}{2} u_{\rho_{\text{water}}} \right)^2 + \left( -\frac{1}{2} u_{\rho_{\text{air}}} \right)^2 \right]^{1/2}$$

If  $u_h = \pm 0.01$  and the other uncertainties are negligible,

$$u_V = \pm \left\{ \left[ \frac{1}{2} (\pm 0.01) \right]^2 \right\}^{1/2}$$

$$u_V = \pm 0.00500 \quad \text{or} \quad \pm 0.500 \text{ percent}$$

*Comment:* The square root reduces the relative uncertainty in the calculated velocity to half that of  $u_h$ .



## F-5 SUMMARY

A statement of the probable uncertainty of data is an important part of reporting experimental results completely and clearly. The American Society of Mechanical Engineers requires that all manuscripts submitted for journal publication include an adequate statement of uncertainty of experimental data [5]. Estimating uncertainty in experimental results requires care, experience, and judgment, in common with many endeavors in engineering. We have emphasized the need to quantify the uncertainty of measurements, but space allows including only a few examples. Much more information is available in the references that follow (e.g., [4, 6, 7]). We urge you to consult them when designing experiments or analyzing data.

## REFERENCES

1. Pugh, E. M., and G. H. Winslow, *The Analysis of Physical Measurements*. Reading, MA: Addison-Wesley, 1966.
2. Kline, S. J., and F. A. McClintock, "Describing Uncertainties in Single-Sample Experiments," *Mechanical Engineering*, 75, 1, January 1953, pp. 3–9.
3. Doebelin, E. O., *Measurement Systems*, 4th ed. New York: McGraw-Hill, 1990.
4. Young, H. D., *Statistical Treatment of Experimental Data*. New York: McGraw-Hill, 1962.
5. Rood, E. P., and D. P. Telionis, "JFE Policy on Reporting Uncertainties in Experimental Measurements and Results," *Transactions of ASME, Journal of Fluids Engineering*, 113, 3, September 1991, pp. 313–314.
6. Coleman, H. W., and W. G. Steele, *Experimentation and Uncertainty Analysis for Engineers*. New York: Wiley, 1989.
7. Holman, J. P., *Experimental Methods for Engineers*, 5th ed. New York: McGraw-Hill, 1989.

## Appendix G

# SI UNITS, PREFIXES, AND CONVERSION FACTORS

**Table G.1** SI Units and Prefixes<sup>a</sup>

SI Units	Quantity	Unit	SI Symbol	Formula
SI base units:	Length	meter	m	—
	Mass	kilogram	kg	—
	Time	second	s	—
	Temperature	kelvin	K	—
SI supplementary unit:	Plane angle	radian	rad	—
SI derived units:	Energy	joule	J	N · m
	Force	newton	N	kg · m/s <sup>2</sup>
	Power	watt	W	J/s
	Pressure	pascal	Pa	N/m <sup>2</sup>
	Work	joule	J	N · m

SI prefixes	Multiplication Factor	Prefix	SI Symbol
	1 000 000 000 000 = 10 <sup>12</sup>	tera	T
	1 000 000 000 = 10 <sup>9</sup>	giga	G
	1 000 000 = 10 <sup>6</sup>	mega	M
	1 000 = 10 <sup>3</sup>	kilo	k
	0.01 = 10 <sup>-2</sup>	centi <sup>b</sup>	c
	0.001 = 10 <sup>-3</sup>	milli	m
	0.000 001 = 10 <sup>-6</sup>	micro	μ
	0.000 000 001 = 10 <sup>-9</sup>	nano	n
	0.000 000 000 001 = 10 <sup>-12</sup>	pico	p

<sup>a</sup> Source: ASTM Standard for Metric Practice E 380-97, 1997.

<sup>b</sup> To be avoided where possible.

### G-1 UNIT CONVERSIONS

The data needed to solve problems are not always available in consistent units. Thus it often is necessary to convert from one system of units to another.

In principle, all derived units can be expressed in terms of basic units. Then, only conversion factors for basic units would be required.

In practice, many engineering quantities are expressed in terms of defined units, for example, the horsepower, British thermal unit (Btu), quart, or nautical mile.

Definitions for such quantities are necessary, and additional conversion factors are useful in calculations.

Basic SI units and necessary conversion factors, plus a few definitions and convenient conversion factors are given in Table G.2.

**Table G.2** Conversion Factors and Definitions

<b>Fundamental Dimension</b>	<b>English Unit</b>	<b>Exact SI Value</b>	<b>Approximate SI Value</b>
Length	1 in.	0.0254 m	—
Mass	1 lbm	0.453 592 37 kg	0.454 kg
Temperature	1°F	5/9 K	—
<b>Definitions:</b>			
Acceleration of gravity:	$g = 9.8066 \text{ m/s}^2 (= 32.174 \text{ ft/s}^2)$		
Energy:	Btu (British thermal unit) $\equiv$ amount of energy required to raise the temperature of 1 lbm of water 1°F (1 Btu = 778.2 ft · lbf) kilocalorie $\equiv$ amount of energy required to raise the temperature of 1 kg of water 1 K (1 kcal = 4187 J)		
Length:	1 mile = 5280 ft; 1 nautical mile = 6076.1 ft = 1852 m (exact)		
Power:	1 horsepower $\equiv$ 550 ft · lbf/s		
Pressure:	1 bar $\equiv$ $10^5$ Pa		
Temperature:	degree Fahrenheit, $T_F = \frac{9}{5} T_C + 32$ (where $T_C$ is degrees Celsius) degree Rankine, $T_R = T_F + 459.67$ Kelvin, $T_K = T_C + 273.15$ (exact)		
Viscosity:	1 Poise $\equiv$ 0.1 kg/(m · s) 1 Stoke $\equiv$ 0.0001 m <sup>2</sup> /s		
Volume:	1 gal $\equiv$ 231 in. <sup>3</sup> (1 ft <sup>3</sup> = 7.48 gal)		
<b>Useful Conversion Factors:</b>			
	1 lbf = 4.448 N		
	1 lbf/in. <sup>2</sup> = 6895 Pa		
	1 Btu = 1055 J		
	1 hp = 746 W = 2545 Btu/hr		
	1 kW = 3413 Btu/hr		
	1 quart = 0.000946 m <sup>3</sup> = 0.946 liter		
	1 kcal = 3.968 Btu		



# ANSWERS TO SELECTED PROBLEMS



## Chapter 1

- 1.3  $m = 12.4 \text{ lbm}$   
 1.5  $\Psi = 0.119 \text{ m}^3$ ,  $D = 0.610 \text{ m}$   
 1.6  $m = 61.2 \text{ lbm}$ ;  $27.8 \text{ kg}$   
 1.8  $\rho = 0.0765 \text{ lbf/ft}^3$ ,  $u_p = \pm 0.348\%$   
 1.9  $\rho = 1.39 \text{ kg/m}^3$ ,  $u_p = \pm 0.238\%$   
 1.10  $\rho = 1130 \pm 21.4 \text{ kg/m}^3$   
 $\text{SG} = 1.13 \pm 0.214$  (20 to 1)  
 1.11  $u_m = \pm 1.60\%$ ,  $\pm 0.267\%$   
 1.12  $\rho = 930 \pm 27.2 \text{ kg/m}^3$  (20 to 1)  
 1.13  $\rho = 1260 \pm 28.9 \text{ kg/m}^3$   
 $\text{SG} = 1.26 \pm 0.0289$  (20 to 1)  
 1.16  $\mu = 1.005 \times 10^{-3} \text{ N} \cdot \text{s/m}^2$ ;  
 $u_\mu = 0.61\%$   
 1.17  $u_a = \pm 4.10\%$   
 1.18  $\delta x = \pm 0.158 \text{ mm}$   
 1.19  $\delta D = \pm 0.00441 \text{ in.}$   
 1.20  $H = 57.7 \pm 0.548 \text{ ft}$   
 1.21  $u_\Psi = \pm 10.9\%$   
 1.22  $t = 3W/gk$   
 1.23  $s = 2.05 \text{ W}^2/gk^2$   
 1.24  $V_{\text{max}} = 0.798 \text{ m/s}$ ;  $t = 3.84 \text{ s}$   
 1.25  $d = 0.074 \text{ mm}$   
 1.26  $V_{\text{max}} = 56.8 \text{ m/s}$ ,  $V_{100} = 38.3 \text{ m/s}$   
 1.27  $V_0 = 37.7 \text{ m/s}$ ,  $\theta_0 = 21.8^\circ$   
 1.30  $1 \text{ psi} = 6.89 \text{ kPa}$   
 $1 \text{ liter} = 0.264 \text{ gal}$   
 $1 \text{ lbf} \cdot \text{s/ft}^2 = 47.9 \text{ N} \cdot \text{s/m}^2$   
 1.31  $1 \text{ m}^2/\text{s} = 10.7 \text{ ft}^2/\text{s}$   
 $100 \text{ W} = 0.134 \text{ hp}$   
 $1 \text{ kJ/kg} = 0.43 \text{ Btu/lbm}$   
 1.32  $\text{SG} = 13.6$ ,  $v = 7.37 \times 10^{-5} \text{ m}^3/\text{kg}$   
 $\gamma_E = 847 \text{ lbf/ft}^3$ ,  $\gamma_M = 144 \text{ lbf/ft}^3$   
 1.33  $1 \text{ in}^3/\text{min} = 273 \text{ mm}^3/\text{s}$   
 $\text{m}^3/\text{s} = 15860 \text{ gal/min}$   
 $\text{L/min} = 0.264 \text{ gal/min}$   
 1.34  $32 \text{ psi} = 2.25 \text{ kgf/cm}^2$   
 1.35  $N_{S_{cu}} = 4.06$   
 1.37  $W = 77 \text{ lbf}$ ,  $\Psi = 1.24 \text{ ft}^3$

## Chapter 2

- 2.3  $y = cx^{-b/a}$   
 2.4  $y = cx^{-b/a}$   
 2.5  $xy^2 = c$   
 2.9  $x = y/3$ ;  $t = 2 \text{ s}$   
 2.10  $xy = 2$   
 2.11  $y = \sqrt{c - bx/at}$   
 2.12  $xy = 8$   
 2.13  $y - y_0 = (B/2A^2)(x - x_0)^2$   
 2.22  $y = (x^2/4) + 4$ ; (4, 8); (5, 10.25)  
 2.23  $x = (y^2/4) - 3$ ; (6, 6); (1, 4)  
 2.24 (2.8, 5), (3, 3)  
 2.25 (5.67, 3.00); (3.58, 3.25)  
 2.28  $b = 1.53 \times 10^{-6} \text{ kg/m} \cdot \text{s} \cdot \text{K}^{1/2}$ ;  $S = 101.9 \text{ K}$   
 2.29  $\tau_{yx} = -1.83 \text{ N/m}^2$ ; Plus  $x$   
 2.30  $F = 0.228 \text{ N}$ ; Right  
 2.32  $a = -0.491 \text{ ft/s}^2$   
 2.33  $\tau_{yx} = 0.277 \text{ lbf/ft}^2$ ; Positive  $x$   
 2.34  $F = 17.1 \text{ lbf}$   
 2.35  $V = 34.3 \text{ ft/s}$   
 2.36  $F_v = \mu VA/h$ ;  $V = (mgh/\mu A)(1 - \exp[-\mu AT/(M + m)h])$ ;  $\mu = 1.29 \text{ N} \cdot \text{s/m}^2$   
 2.37  $F_b = \mu Ua^2/h$ ;  $t = 3.0h/\mu a^2$   
 2.38  $a_0 = 4.91 \text{ m/s}^2$ ;  
 $U = (g \sin \theta md/\mu A)(1 - \exp(-\mu AT/md))$ ;  
 $\mu = 0.27 \text{ N} \cdot \text{s/m}^2$   
 2.39  $F = 2.83 \text{ N}$   
 2.41  $\mu = 8.07 \times 10^{-4} \text{ N} \cdot \text{s/m}^2$   
 2.42  $\mu = 0.0208 \text{ N} \cdot \text{s/m}^2$   
 2.43  $\mu = 0.0159 \text{ N} \cdot \text{s/m}^2$   
 2.44  $t = 4 \text{ s}$   
 2.46  $\omega_{\text{max}} = 2.63 \text{ rad/s}$ ;  $t = 0.671 \text{ s}$   
 2.47  $\mu = 0.202 \text{ N} \cdot \text{s/m}^2$   
 2.49  $\dot{\gamma} = \omega/\theta$ ;  $T = 2\pi R^3 \tau_{yx}/3$   
 2.50  $k = 0.0449$ ;  $n = 1.21$ ;  
 $\mu = 0.191 \text{ N} \cdot \text{s/m}^2$ ;  $0.195 \text{ N} \cdot \text{s/m}^2$   
 2.51  $T = \pi \mu \Delta \omega R^4/2a$ ;  $\mathcal{P} = \pi \mu \omega_0 \Delta \omega R^4/2a$ ;  
 $s = 2Ta/\pi \mu R^4 \omega$ ;  $\eta = 1 - s$   
 2.53  $u = 0.277 \text{ percent}$

2.54  $\tau = \mu\omega z \tan \theta/\alpha; T = 0.0206 \text{ N}\cdot\text{m}$

2.55  $T = \frac{2\pi\mu\omega R^4}{h} \left( \frac{\cos^3 \alpha}{3} - \cos \alpha + \frac{2}{3} \right)$

2.57  $\Delta p = 2.91 \text{ kPa}$

2.61  $\Delta\rho/\rho_0 = 0.453\%$

**Chapter 3**

3.1  $m = 62 \text{ kg}; t = 22.3 \text{ mm}$

3.2  $\Delta h = 6.72 \text{ mm Hg}; \Delta z = 173 \text{ m}$

3.4  $z = 2980 \text{ m}; \Delta z = 1480 \text{ m}$

3.5  $F = 21.9 \text{ N}$

3.6  $F = 2620 \text{ lbf}; T = 14.4 \text{ lbf}$

3.7  $\text{SG} = 1.75 \text{ (Meriam Blue)}; p_1 = 0.89 \text{ psi};$

$p_u = 0.509 \text{ psi}$

3.8  $\Delta p = 972 \text{ kPa}; \rho_{\text{cube}} = 991 \text{ kg/m}^3$

3.9  $p_{\text{cold}} = 316 \text{ kPa (abs)};$

$p_{\text{warm}} = 254 \text{ kPa (gage)}$

3.10  $D = 15.8 \text{ mm}$

3.12  $\Delta\rho/\rho_0 = 4.34\%; 2.14\%$

3.14  $p = 6.39 \times 10^3 \text{ N/m}^2; h = 43.6 \text{ mm}$

3.15  $p = 3.48 \text{ kPa (gage)}; p = 123 \text{ kPa (gage)}$

3.16  $p = 128 \text{ kPa (gage)}$

3.17  $H = 17.8 \text{ mm}$

3.18  $p_1 - p_2 = 59.5 \text{ Pa}$

3.19  $h = 42.8 \text{ mm}$

3.20  $H = 30.0 \text{ mm}$

3.21  $p_a = 1.18 \text{ psi}$

3.22  $\text{SG} = 0.900$

3.23  $p = 24.7 \text{ kPa (gage)}; h = 0.116 \text{ m}$

3.24  $p_A - p_B = 1.64 \text{ psi}$

3.25  $l = 1.6 \text{ m}$

3.26  $L = 27.2 \text{ mm}$

3.27  $l = 0.546 \text{ m}$

3.28  $h = 1.11 \text{ in.}$

3.29  $\theta = 12.5^\circ; s = 5.0$

3.30  $\theta = 11.1^\circ$

3.31  $h = 7.85 \text{ mm}; s = 0.308$

3.32  $p_{\text{atm}} = 14.0 \text{ psi}$

3.33  $l = 0.316 \text{ m}$

3.34  $\Delta h = 38.1 \text{ mm}; 67.9 \text{ mm}$

3.35  $D = 9.3 \text{ mm}$

3.39  $\Delta z = 89.0 \text{ mm}; \Delta z = 1440 \text{ m}$

3.40  $\rho = 0.00332 \text{ kg/m}^3$

3.41  $p = 57.5 \text{ kPa}; p = 60.2 \text{ kPa}$

3.43  $F_L = 14.7 \text{ kN}; F_L = 52.7 \text{ kN}$

3.44  $F_R = 25.7 \text{ kN}, y' = 1.86 \text{ m}; F_R = 71.5 \text{ kN},$   
 $y' = 1.78 \text{ m}$

3.45  $F_R = 376 \text{ N}; y' = 0.3 \text{ m}$

3.46  $F_A = 366 \text{ kN}$

3.47  $W = 15,800 \text{ lbf}$

3.49  $F = 2\rho g R^3/3; y' = 3\pi R/16$

3.50  $F_D = 32.9 \text{ N}$

3.51  $F = 1.82 \times 10^6 \text{ lbf};$

$\vec{F}_H = (1.76\hat{i} + 3.04\hat{j})10^6 \text{ lbf}$

3.52  $F_R = 552 \text{ kN}; (x', y') = (2.5, 2.0) \text{ m}$

3.54  $F = 33.3 \text{ kN}; D \approx 7.3 \text{ mm}$

3.55  $F_{AB} = 1800 \text{ lbf}$

3.56  $D = 2.60 \text{ m}$

3.57  $F_A = 32.7 \text{ kN}$

3.58  $d = 2.66 \text{ m}$

3.59  $\text{SG} = 0.542$

3.61 (a)  $F_V = 73.9 \text{ kN}; x' = 1.06 \text{ m}$

(b)  $F_{AH} = 34.8 \text{ kN}$  (c)  $F_{AV} = 30.2 \text{ kN}$

3.62 (a)  $F_V = 7.63 \text{ kN}; \text{Moment} = 3.76 \text{ kN}\cdot\text{m}$

(b)  $F_{AH} = 5.71 \text{ kN}$

3.63  $F_{RV} = 2.19 \text{ kN}; x' = 0.243 \text{ m}$

3.64  $F_{RV} = \rho g w \pi R^2/4; x' = 4R/3\pi$

3.65  $F_V = 1.05 \text{ MN}; x' = 1.61 \text{ m}$

3.66  $F_{RV} = 17,100 \text{ lbf}; x' = 2.14 \text{ ft}$

3.67  $F_B = 82.4 \text{ kN}$

3.68  $F_R = 1.83 \times 10^7 \text{ N}; \alpha = 19.9^\circ$

3.69  $F_R = 370 \text{ kN}; \alpha = 57.6^\circ$

3.70  $F_R = 557 \text{ kN}; \alpha = 48.3^\circ$

3.71  $MIL = \rho R^2[1 + 3\pi/4], F/L = \rho g R^2/2$

3.72  $F_V = 2.48 \text{ kN}; x' = 0.642 \text{ m};$

$F_H = 7.35 \text{ kN}; y' = 0.217 \text{ m}$

3.73  $F_V = 1.55 \text{ kN}; x' = 0.120 \text{ m}$

3.74  $W = 4\rho g L(H - d)^{3/2}/3\sqrt{a}$

3.75  $\text{SG} = (\cos^{-1}(1 - \alpha) + (\alpha - 1)\sqrt{2 - \alpha})/\pi$

3.76  $M = 631 \text{ kg}$

3.77  $F_R = 284 \text{ kN}; \alpha = 34.2^\circ$

3.78  $\gamma_s = 51.2 \text{ lbf/ft}^3; h_G = 0.223 \text{ ft}$

3.79  $h = 177 \text{ mm}$

3.81  $\text{SG} = \text{SG}_{\text{H}_2\text{O}} W_{\text{air}}/(W_{\text{air}} - W_{\text{net}})$

3.83  $V = 2.52 \times 10^{-3} \text{ m}^3; \text{six weights}$

3.84  $F_B = 8.02 \times 10^{-11} \text{ N};$

$V = 0.344 \text{ mm}^3$

3.86 Claims are valid; Lift is increased 45 percent

3.87  $D = 116 \text{ m}; M = 703 \text{ kg}$

3.88  $D = 82.7 \text{ m}; M = 637 \text{ kg}$

3.89  $\theta = 23.8^\circ$

3.91  $x = 1.23 \text{ ft}; F = 1.5 \text{ lbf}$

3.93  $\text{SG} > 0.70$

3.94  $\omega = 1.81 \text{ rad/s}$

3.98  $\omega = 13.1 \text{ rad/s}; \text{No}$



- 3.99  $a = gh/L$   
 3.100 Slope = 0.22  
 3.101  $\omega = 188 \text{ rad/s}$   
 3.102  $p_A = -1.23 \text{ kPa}$ ;  $\Delta h = 126 \text{ mm}$   
 3.103  $\Delta p = \rho\omega^2 R^2/2$ ;  $\omega = 7.16 \text{ rad/s}$   
 3.104  $a_r = -r\omega^2$ ;  $\partial p/\partial r = \rho r\omega^2$ ;  $p = 7.19 \text{ MPa}$   
 3.105 Slope = -0.20;  
 $p(x, 0) = 106 - 1.57x(\text{m}) \text{ kPa}$   
 3.106  $\alpha = 13.3^\circ$   
 3.107  $\alpha = 30^\circ$ ; Slope = 0.346  
 3.108  $p_2/p_1 = 24.2$   
 3.109  $T = 47.6 \text{ lbf}$ ;  $p = 55.3 \text{ lbf/ft}^2$  (gage)  
 3.110 Slope = 0.540;  $\omega = 3.48 \text{ rad/s}$   
 3.113  $\omega = 31.3 \text{ rad/s}$ ;  
 $p_{\max} = 51.5 \text{ kPa}$  (gage);  
 $p_{\min} = 43.9 \text{ kPa}$  (gage)

## Chapter 4

- 4.1  $s_2 - s_1 = -0.291 \text{ kJ}/(\text{kg} \cdot \text{K})$   
 4.2  $x = 0.943 \text{ m}$   
 4.3  $s = 2290 \text{ ft}$ ,  $t = 22.4 \text{ s}$   
 4.4  $V_0 = 87.5 \text{ km/hr}$   
 4.5  $\theta = 48.2^\circ$   
 4.6  $\Delta u = 77.5 \text{ kJ/kg}$   
 4.7  $\Delta U = 4.50 \times 10^5 \text{ Btu}$ ;  $\Delta U = 0$ ;  
 $dT/dt = 11.8^\circ\text{R/hr}$   
 4.8  $t = 1.5 \text{ hr}$   
 4.9  $h = 21.2 \text{ mm}$ ;  $\mu_s = 0.604$   
 4.10 (b) 0; (e)  $-0.5\hat{i} - 0.5\hat{j} \text{ m}^4/\text{s}^2$   
 4.12  $Q = Vhw/2$ ;  $mf_x = -\rho V^2 wh/3$   
 4.13 Integrals =  $-12.0 \text{ m}^3/\text{s}$ ;  $16\hat{i} - 24\hat{j} - 12\hat{k} \text{ m}^4/\text{s}^2$   
 4.14  $Q = u_{\max} \pi R^2/2$ ;  $mf = u_{\max}^2 \pi R\hat{i}/3$   
 4.15 K.E. flux =  $-\rho V^3 wh/8$   
 4.16 K.E. flux =  $\pi \rho u_{\max}^3 R^2/8$   
 4.17  $Q_3 = -5.00 \text{ ft}^3/\text{s}$  (into CV)  
 4.18  $\vec{V}_3 = 4.04\hat{i} - 2.34\hat{j} \text{ m/s}$   
 4.19  $t = 2.39 \text{ s}$ ;  $Q_{\text{total}} = 1.33 \text{ m}^3$   
 4.20  $\dot{m}/w = \rho^2 gh^3 \sin \theta/6\mu$   
 4.21  $u_{\max} = 7.50 \text{ m/s}$   
 4.22  $V_m = \pi V_1/4$   
 4.23  $U = 5.00 \text{ ft/s}$   
 4.24  $Q = 10.45 \text{ mL/s}$ ;  $\bar{u} = 0.139 \text{ m/s}$ ;  
 $u_{\max} = 0.213 \text{ m/s}$   
 4.25  $V_3 = 3.33 \text{ ft/s}$  (into CV)  
 4.26  $v_{\min} = 5.0 \text{ m/s}$   
 4.27  $\dot{m}_2 = 16.2 \text{ kg/s}$   
 4.28  $\partial \Psi/\partial t = -0.181 \text{ gal/s}$   
 4.29  $\partial \rho/\partial t = -0.369 \text{ kg/m}^3/\text{s}$   
 4.30  $dh/dt = -8.61 \text{ mm/s}$   
 4.31  $dh/dt = -0.326 \text{ mm/s}$  (falling)  
 4.32  $\partial \rho_0/\partial t = 2.50 \times 10^{-3} \text{ slug/ft}^3/\text{s}$   
 4.33  $dh/dt = -56.6 \text{ mm/s}$   
 4.34  $t_1 = 14.8 \text{ s}$ ;  $t_2 = 49.6 \text{ s}$   
 4.35  $Q = 1.50 \times 10^4 \text{ gal/s}$ ;  $A = 4.92 \times 10^7 \text{ ft}^2$   
 4.36  $y = 0.134 \text{ m}$   
 4.37  $t = 22.2 \text{ s}$   
 4.38  $Q_0 = 3.61 \times 10^{-5} \text{ m}^3/\text{s}$ ;  
 $dh/dt = -0.0532 \text{ m/s}$   
 4.39  $dy/dt = -9.01 \text{ mm/s}$   
 4.40  $\dot{m}_{bc} = 1.42 \text{ kg/s}$  (out)  
 4.41  $Q_{cd} = 4.5 \times 10^{-3} \text{ m}^3/\text{s}$ ;  $Q_{ad} = 0.6 \times 10^{-3} \text{ m}^3/\text{s}$ ;  $Q_{bc} = 1.65 \times 10^{-3} \text{ m}^3/\text{s}$   
 4.43  $t = 6V_0/5Q_0$   
 4.45  $mf = 349\hat{i} - 16.5\hat{j} \text{ N}$   
 4.46 Ratio = 1.2  
 4.47 Ratio = 1.33  
 4.48  $mf = -340\hat{i} - 1230\hat{j} \text{ lbf}$   
 4.49  $mf = -320\hat{i} + 332\hat{j} \text{ N}$   
 4.50  $F = 90.4 \text{ kN}$   
 4.51  $T = 1.23 \text{ N}$   
 4.52  $M = 409 \text{ kg}$   
 4.53  $F_x = 184 \text{ N}$   
 4.54  $F_x = 0.0230 \text{ lbf}$   
 4.55  $M = 671 \text{ kg}$   
 4.56  $F = 1.81 \text{ kN}$ , tension  
 4.57  $F = 321 \text{ N}$   
 4.58  $F = 370 \text{ N}$   
 4.59  $F = 18.5 \text{ kN}$   
 4.60  $F = 206 \text{ lbf}$ , tension  
 4.61  $\vec{F} = -714\hat{i} + 498\hat{j} \text{ N}$   
 4.62  $F = 8.32 \text{ kN}$   
 4.63  $F = 1.70 \text{ lbf}$   
 4.64  $Q = 0.424 \text{ m}^3/\text{s}$ ;  $F_y = 4.05 \text{ kN}$   
 4.65  $T = 65,200 \text{ lbf}$   
 4.66  $T = 47,400 \text{ lbf}$   
 4.68  $V = 0.867 \text{ m/s}$   
 4.69  $t = 1.19 \text{ mm}$ ;  $F_x = 3.63 \text{ kN}$   
 4.70  $\vec{F} = -26.7\hat{i} - 139\hat{j} \text{ lbf}$   
 4.71  $\vec{F} = -4.68\hat{i} + 1.66\hat{j} \text{ kN}$   
 4.72  $V_2 = 6.60 \text{ m/s}$ ;  $p_2 - p_1 = 84.2 \text{ kPa}$   
 4.73  $\vec{F} = -1040\hat{i} - 667\hat{j} \text{ N}$   
 4.74  $F = 4.77 \text{ lbf}$   
 4.75  $F = 5.11 \text{ kN}$   
 4.76  $F = 837 \text{ lbf}$   
 4.77  $Q = 0.141 \text{ m}^3/\text{s}$ ;  $\vec{F} = -1.65\hat{i} - 1.34\hat{j} \text{ kN}$

- 4.78  $\vec{F} = 799\hat{i} - 387\hat{j}$  N
- 4.79  $K_x = 37.9$  N
- 4.80  $\dot{m} = 9.67$  kg/s;  $V_{2,\max} = 15.0$  m/s;  
 $F_D = 65$  N
- 4.81  $D = (5\pi/8 - 2/\pi)\rho U^2$
- 4.82  $u_{\max} = 30$  ft/s;  $p_1 - p_2 = 0.190$  lbf/ft<sup>2</sup>
- 4.83  $u_{\max} = 60$  ft/s;  $p_1 - p_2 = 0.699$  lbf/ft<sup>2</sup>
- 4.84  $F = 7.90 \times 10^{-4}$  N
- 4.85  $F/w = 0.0393$  N/m
- 4.86 Drag = 0.446 N
- 4.87  $F/w = 0.277$  N/m
- 4.89  $h_2/h_1 = 0.5(1 + \sin \theta)$
- 4.90 Error = 1.73 percent
- 4.91  $h = H/2$
- 4.92  $h = 202$  mm;  $F = 0.543$  N
- 4.93  $V = [V_0^2 + 2gh]^{1/2}$ ;  $F = 3.56$  N
- 4.94  $V = [V_0^2 - 2gh]^{1/2}$ ;  $h = 16.2$  ft
- 4.95  $V = 175$  ft/s;  $F_{x,\text{jet}} = 2.96$  lbf
- 4.96  $M = 4.46$  kg;  $M_w = 2.06$  kg
- 4.97  $F = 5.9$  kN
- 4.98  $p_1 = 61.0$  kPa (gage);  $K_y = 209$  N  
(perpendicular to plate)
- 4.100  $z = 3V_0^2/2g$
- 4.101  $z = V_0^2/2g$
- 4.102  $p(x) = p(0) - \rho(Qx/whL)^2$
- 4.104  $h_1 = [h_2^2 + 2Q^2/gb^2h_2]^{1/2}$
- 4.105  $V(r) = V_0 r/2h$
- 4.107  $\vec{F} = -822\hat{i} + 220\hat{j}$  N
- 4.108  $\vec{F} = -570\hat{i} + 329\hat{j}$  lbf
- 4.109  $V_j = 80$  m/s
- 4.110  $F = 1.73$  kN
- 4.111  $F = 167$  N
- 4.112  $F = 3840$  lbf at  $U = 75$  mph
- 4.113  $\dot{W} = \rho(V - U)^2 UA(1 - \cos \theta)$
- 4.114  $t = 4.17$  mm;  $F = 4240$  N
- 4.115  $t = 6.25$  mm;  $F = 7940$  N
- 4.116  $\alpha = 30^\circ$ ;  $F = 10.3$  kN
- 4.117  $U = V/2$
- 4.118  $a_{rt} = 13.5$  m/s<sup>2</sup>
- 4.119  $\dot{m}_2/\dot{m}_3 = 0.5$ ;  $F = 7.46$  kN
- 4.120  $t = M/\rho AV(1 + \sin \theta)$
- 4.121  $U_t = 15.8$  m/s
- 4.123  $U/V = \ln[M_0/(M_0 - \rho V A t)]$ ;  $V = 0.61$  m/s
- 4.125  $\theta = 19.7^\circ$
- 4.126  $A = 111$  mm<sup>2</sup>
- 4.127  $t = 22.6$  s
- 4.128  $h = 17.9$  mm
- 4.129  $U = 22.5$  m/s
- 4.130  $a_{rt} = 5.99$  m/s<sup>2</sup>;  $U/U_t = 0.667$
- 4.131  $t = 1.71$  s;  $s = 7.47$  m
- 4.132  $dU/dt = 14.2$  m/s<sup>2</sup>;  $U_t = 15.2$  m/s
- 4.134  $t = M/\rho VA(1 + V/U_0)$
- 4.135  $V = 16.4$  m/s;  $x_{\max} = 1.93$  m;  
 $t = 2.51$  s
- 4.136  $U/U_0 = e^{-4\rho VA t/M}$
- 4.137  $t = 0.750 M/\rho VA$ ;  $x = 0.238 MU_0/\rho VA$
- 4.138  $a_y = -16.5$  ft/s<sup>2</sup>
- 4.139  $Q \approx 0.0469$  m<sup>3</sup>/s
- 4.140  $t = 126$  s
- 4.141  $U = 227$  m/s
- 4.142  $U = 834$  m/s;  $a_{\max} = 96.7$  m/s<sup>2</sup>
- 4.143  $M_f = 186$  lbm
- 4.144  $U = 281$  m/s
- 4.145 Mass fraction = 0.393
- 4.146  $a = 83.3$  m/s<sup>2</sup>;  $U = 719$  m/s
- 4.147  $M_{\text{fuel}} = 38.1$  kg
- 4.148  $a_0 = 17.3$  g
- 4.149  $V = 3860$  ft/s;  $Y = 33,500$  ft
- 4.150  $V = 1910$  m/s
- 4.152  $\theta = 18.9^\circ$
- 4.153  $t = M/2\rho VA$
- 4.154  $U = U_0/[1 + 2\rho U_0 A t/M_0]^{1/2}$
- 4.155  $U/V = 1 - 1/[1 + 2\rho VA t/M_0]^{1/2}$
- 4.156  $\dot{m} = Mg/V_e$ ;  $t = 110$  s
- 4.157  $V_{\max} = 456$  ft/s;  $Y_{\max} = 3600$  ft  
(139 m/s; 1090 m)
- 4.160  $h = 20.5$  m
- 4.166  $V = 43.8$  m/s
- 4.167  $F = 22.8$  kN;  $T = 469$  kN·m
- 4.168  $T = 0.193$  N·m;  $\dot{\omega} = 2610$  rad/s<sup>2</sup>
- 4.169  $\omega_{\max} = 29.5$  rad/s
- 4.170  $\omega_{\max} = 20.2$  rad/s
- 4.171  $T = 16.9$  N·m;  $\omega = 461$  rpm
- 4.173  $\omega = 39.1$  rad/s
- 4.174  $T = 0.0722$  N·m
- 4.175  $T = 0.0161$  N·m
- 4.176  $\dot{\omega} = 0.161$  rad/s<sup>2</sup>
- 4.177  $\omega = 6.04$  rad/s;  $A = 1720$  m<sup>2</sup>
- 4.179  $T = 29.4$  N·m;  $\vec{M} = 51.0\hat{i} + 1.40\hat{j}$  N·m
- 4.183  $\dot{W} = -80.0$  kW
- 4.184  $\partial T/\partial t = -0.177$  °R/s
- 4.185 Efficiency = 74.8%
- 4.186  $\dot{Q} = -146$  Btu/s
- 4.187  $p_1 - p_2 = 75.4$  kPa
- 4.188  $\dot{W} = -96.0$  kW
- 4.189  $\dot{W} = -3.41$  kW

$$4.190 \quad Q = 0.0166 \text{ m}^3/\text{s}; z_{\max} = 61.4 \text{ m}; \\ F = 561 \text{ N}$$

$$4.191 \quad V = 94.5 \text{ m/s}; \dot{W} = -739 \text{ kW}$$

$$4.192 \quad \Delta m.e. = -1.88 \text{ N} \cdot \text{m}/\text{kg}; \\ \Delta T = 4.49 \times 10^{-4} \text{ K}$$

## Chapter 5

$$5.1 \quad (\text{b}), (\text{c}), (\text{d})$$

$$5.2 \quad (\text{b}), (\text{d})$$

$$5.3 \quad A + E + J = 0$$

$$5.4 \quad (\text{a}), (\text{b})$$

$$5.5 \quad v = A(y^2/2 - By) + f(x)$$

$$5.6 \quad u = -2yx - 2x + f(y)$$

$$5.7 \quad v = Ay/x^2$$

$$5.8 \quad u = 2Ay/x$$

$$5.9 \quad v = Ay/(x^2 + y^2)$$

$$5.10 \quad v/U)_{\max} = 0.0025$$

$$5.11 \quad v/U)_{\max} = 0.00182$$

$$5.12 \quad v/U)_{\max} = 0.00167$$

$$5.13 \quad v/U)_{\max} = 0.00188$$

$$5.14 \quad u = 3Bx^2y^2/2; xy^{3/2} = c$$

$$5.15 \quad v = -2Axy^{3/3}; xy^{3/2} = c$$

$$5.19 \quad (\text{a}), (\text{b}), (\text{c})$$

$$5.20 \quad V_r = -\Lambda \cos \theta / r^2$$

$$5.21 \quad \vec{V} = \hat{e}_\theta \omega r z / h$$

$$5.24 \quad \psi = U y^2 / 2h; y = h / \sqrt{2}$$

$$5.25 \quad \psi = xy + y^2 - x^3/3$$

$$5.26 \quad \psi = A\theta - B \ln(r)$$

$$5.27 \quad \vec{V} = (-U \cos \theta + q/2\pi r)\hat{e}_r + U \sin \theta \hat{e}_\theta$$

$$5.28 \quad \psi = -y^3z - 2z^2$$

$$5.29 \quad Q = 1 \text{ m}^3/\text{s}/\text{m}$$

$$5.30 \quad \psi = Uy^2/2h; y = 3.54 \text{ ft}$$

$$5.31 \quad \psi = Uy^2/2\delta; y/\delta = 0.50, 0.707$$

$$5.32 \quad y/\delta = 0.460, 0.667$$

$$5.33 \quad y/\delta = 0.442, 0.652$$

$$5.35 \quad \psi = -c \ln r; Q/b = 0.0912 \text{ m}^3/\text{s}/\text{m}$$

$$5.36 \quad \psi = -\omega r^2/2; Q/b = 1.1 \times 10^{-3} \text{ m}^3/\text{s}/\text{m}$$

$$5.37 \quad \text{Yes}; \vec{a}_p = 1.75\hat{i} + 0.875\hat{j} \text{ m/s}^2$$

$$5.38 \quad \vec{a}_p = (16\hat{i} + 32\hat{j} + 16\hat{k})/3 \text{ m/s}^2$$

$$5.39 \quad \text{3-D; No}; \vec{a}_p = 27\hat{i} + 9\hat{j} + 64\hat{k} \text{ m/s}^2$$

$$5.40 \quad \vec{a}_p = -2.86(10^{-2}\hat{i} + 10^{-4}\hat{j}) \text{ m/s}^2; \\ dy/dx = 0.01$$

$$5.42 \quad u = Ax^2/2; \vec{a}_p = A^2(0.5\hat{i} + \hat{j})$$

$$5.44 \quad a_p = -(U^2/2L)(1 - x/2L)$$

$$5.45 \quad \vec{a}_p = -(Q/2\pi h)^2 r^{-3} \hat{e}_r$$

$$5.46 \quad a_r = -81.0 \text{ km/s}^2; a_\theta = -3.0 \text{ km/s}^2$$

$$5.48 \quad \partial T/\partial x = -0.0873 \text{ }^\circ\text{F}/\text{mi}$$

$$5.49 \quad DT/Dt = -14 \text{ }^\circ\text{F}/\text{min}$$

$$5.50 \quad DC/Dt = 0.00, 125 \text{ ppm}/\text{hr}, \\ 250 \text{ ppm}/\text{hr}$$

$$5.52 \quad \vec{a}_p = x\hat{i} + y\hat{j}$$

$$5.53 \quad c = -2 \text{ s}^{-1}; \vec{a}_p = 4\hat{i} + 8\hat{j} + 5\hat{k} \text{ m/s}^2$$

$$5.54 \quad \vec{a}_p = (A^2x - AB)\hat{i} + A^2y\hat{j}; \vec{a}_p = -0.12\hat{i} + \\ 0.267\hat{j} \text{ m/s}^2, \vec{a}_p = -0.08\hat{i} + 0.40\hat{j} \text{ m/s}^2, \\ \vec{a}_p = -0.04\hat{i} + 0.80\hat{j} \text{ m/s}^2$$

$$5.55 \quad \psi = axy[2 + \cos(\omega t)] + \text{constant}; \\ \vec{a}_{\text{local}} = 3\pi\hat{i} - 6\pi\hat{j} \text{ m/s}^2, \vec{a}_{\text{conv}} = 18\hat{i} + \\ 36\hat{j} \text{ m/s}^2;$$

$$\vec{a}_{\text{total}} = 27.4\hat{i} + 17.2\hat{j} \text{ m/s}^2$$

$$5.56 \quad \text{Ratio} = 100$$

$$5.59 \quad v = v_0(1 - y/h);$$

$$\vec{a}_p = \hat{i}v_0^2x/h^2 - \hat{j}(v_0^2/h)(1 - y/h)$$

$$5.60 \quad \vec{a}_p = \hat{e}_r(v_0/2h)^2r - \hat{k}(v_0^2/h)(1 - z/h)$$

$$5.64 \quad f_1 = x_0e^{At}, f_2 = y_0e^{-At};$$

$$t(1, 1) = 0.693 \text{ s}, t(2, 0.5) = 1.39 \text{ s};$$

$$\vec{a}_p(1, 1) = \hat{i} + \hat{j} \text{ m/s}^2,$$

$$\vec{a}_p(2, 0.5) = 2\hat{i} + 0.5\hat{j} \text{ m/s}^2$$

$$5.66 \quad \text{Yes; Yes}$$

$$5.68 \quad \Gamma = -0.100 \text{ m}^2/\text{s}$$

$$5.69 \quad \Gamma = 0$$

$$5.70 \quad \vec{\omega} = -0.5\hat{k} \text{ rad/s}; \Gamma = -0.50 \text{ m}^2/\text{s}$$

$$5.71 \quad \text{Yes; Yes}$$

$$5.72 \quad \text{Yes; No}$$

$$5.73 \quad \vec{\omega} = -0.05 \text{ s}^{-1}\hat{k}; \psi = Ay^2/2 + c$$

$$5.74 \quad \vec{\omega} = -2x\hat{k}; \Gamma = -2 \text{ m}^2/\text{s};$$

$$\psi = 2xy^2$$

$$5.75 \quad \vec{V} = -2y\hat{i} - 2x\hat{j}$$

$$5.76 \quad \psi = A(y^2 - x^2)/2 + By; \Gamma = 0$$

$$5.77 \quad \vec{\omega} = -\hat{k}$$

$$5.78 \quad \omega = -U/2h$$

$$5.79 \quad \text{Yes}; \psi = -(q\theta + K \ln r)/2\pi$$

$$5.80 \quad \Gamma = -UL/4, 0$$

$$5.81 \quad \vec{\zeta} = \hat{e}_\theta V_{\max} 2r/R^2$$

$$5.82 \quad \vec{\zeta} = \hat{k} 2y u_{\max}/b^2$$

$$5.83 \quad df/dV = -0.0134 \text{ lbf}/\text{ft}^3$$

$$5.84 \quad df/dV = -1.85 \text{ kN}/\text{m}^3$$

## Chapter 6

- 6.1  $\vec{a}_p = 90\hat{i} + 2\hat{j}$  ft/s<sup>2</sup>;  
 $\nabla p = -(180\hat{i} + 68.4\hat{j})$  lbf/ft<sup>2</sup>/ft
- 6.2  $a = 5.66$  m/s<sup>2</sup> at  $\theta = 45^\circ$  above  $x$  axis;  
 $\nabla p = -(4.0\hat{i} + 13.8\hat{j})$  kN/m<sup>2</sup>/m
- 6.3  $\vec{a}_{\text{total}} = 310\hat{i} - 190\hat{j}$  ft/s;  
 $\nabla p = -4.17\hat{i} + 2.56\hat{j} - 0.43\hat{k}$  psi/ft
- 6.4  $\vec{a}_p = 2\hat{i} + 2\hat{j}$  ft/s<sup>2</sup>;  
 $\nabla p = -(4\hat{i} + 68.4\hat{j})$  lbf/ft<sup>2</sup>/ft
- 6.5  $\nabla p = -(3.0\hat{i} + 9.0\hat{j})$  kN/m<sup>2</sup>/m
- 6.8  $u = -Ax$ ;  $\vec{a}_p = 8\hat{i} + 4\hat{j}$  m/s<sup>2</sup>;  
 $\nabla p = -12\hat{i} - 6\hat{j} - 14.7\hat{k}$  N/m<sup>3</sup>;  
 $p(x) = 190 - 3x^2$  Pa (gage)
- 6.9 Yes;  $(x, y) = (2.5, 1.5)$ ;  
 $\nabla p = -\rho[(4x - 10)\hat{i} + (4y - 6)\hat{j} + g\hat{k}]$ ;  
 $\Delta p = 9.6$  N/m<sup>2</sup>
- 6.11  $p = 43.4$  kPa (gage)
- 6.14  $a_x = 16v_0^2x/D^2$ ;  $p(0) = 8\rho v_0^2(L/D)^2$
- 6.15  $\partial p/\partial x_{\text{max}} = 100$  kPa/m;  $L = 4$  m
- 6.16  $\partial p/\partial x_{\text{max}} = 10$  MPa/m;  $L = 1$  m
- 6.17  $F = 1.56$  N, down
- 6.18  $\nabla p = -4.23\hat{i} - 12.1\hat{j}$  N/m<sup>3</sup>;  
 $(x/h) = [1 - y/h] = \text{constant}$
- 6.19  $a_{p\text{max}} = 144$  m/s<sup>2</sup>;  $M/L = 1.20 \times 10^{-3}$  kg/m
- 6.20  $F_y = 4\rho V^2 L^3 w/3b^2$
- 6.21  $a_{p_x} = q^2 x/h^2$
- 6.22  $a_r = -2800g$ ;  $\partial p/\partial r = 270$  lbf/ft<sup>2</sup>/ft
- 6.24  $p_{L/2} - p_0 = -30.6$  N/m<sup>2</sup>
- 6.26  $\vec{V} = 3\hat{i} - 2\hat{j}$  m/s;  $\vec{a} = 3\hat{i} + 2\hat{j}$  m/s<sup>2</sup>;  
 $\vec{a}_t = 1.16\hat{i} - 0.771\hat{j}$  m/s<sup>2</sup>;  
 $\partial p/\partial s = -1.71$  N/m<sup>2</sup>/m
- 6.27  $B = -0.1$  m<sup>-1</sup> · s<sup>-1</sup>;  $\vec{a}_p = 0.04\hat{i} + 0.02\hat{j}$  m/s<sup>2</sup>  
 $a_n = 0.0291$  m/s<sup>2</sup>
- 6.28  $\vec{a}_p = 2.0\hat{i} + 4.0\hat{j}$  ft/s<sup>2</sup>;  $R = 1.40$  ft
- 6.29  $\vec{a}_p = 4.0\hat{i} + 2.0\hat{j}$  ft/s<sup>2</sup>;  $R = 5.84$  ft
- 6.30  $\vec{a}_p = 0.5\hat{i} + 1.0\hat{j}$  m/s<sup>2</sup>;  $R = 2.83$  m
- 6.32  $x^2y = 2$ ;  $\vec{a}_p = 2A^2x^3\hat{i} + Bx^2y(B - A)\hat{j}$ ;  
 $R = 5.35$  m
- 6.33  $\Delta h = 33.7$  mm Hg
- 6.34  $\Delta h = 48.4$  mm water
- 6.35  $F = 0.379$  lbf; 1.52 lbf
- 6.36  $V = 89.5$  ft/s
- 6.37  $\Delta h = 628$  mm water
- 6.39  $p_{\text{dyn}} = 296$  N/m<sup>2</sup>;  $p = -355$  N/m<sup>2</sup> (gage)
- 6.40  $V = 27.5$  m/s
- 6.41  $p_0 = 900$  kPa (abs);  $p_0 = 413$  kPa (abs);  
 $\vec{V}_{\text{abs}} = 2.5\hat{i} + 21.7\hat{j}$  m/s;  $p_0 = 338$  kPa (abs)
- 6.42  $p = 227$  kPa (gage), 148 kPa (gage)
- 6.43  $p = 291$  kPa (gage)
- 6.44  $h = 4.78$  m
- 6.45  $V = 21.5$  ft/s;  $Q = 0.469$  ft<sup>3</sup>/s
- 6.47  $p = -0.404$  kPa (gage)
- 6.48  $V = 330$  ft/s
- 6.49  $Q = 66.1$  m<sup>3</sup>/hr
- 6.50  $V = 44.2$  m/s
- 6.51  $\Delta p = 5.54$  kPa;  $\Delta p/q = 0.933$
- 6.52  $p = p_\infty + \frac{1}{2}\rho U^2(1 - 4 \sin^2 \theta)$ ;  
 $\theta = 30^\circ, 150^\circ, 210^\circ, 330^\circ$
- 6.53  $F = 278$  N/m
- 6.55  $Q = 301$  gpm;  $F_x = 565$  lbf; Tension
- 6.56  $Q = 2.55 \times 10^{-3}$  m<sup>3</sup>/s
- 6.57  $p = 39.0$  psf (gage);  $K_x = 1.67$  lbf
- 6.58  $p_{1g} = 49.2$  kPa;  $K_x = 57.5$  N
- 6.59  $V_2 = 3.05$  m/s;  $p_{02} = 4.65$  kPa (gage);  
 $K_y = 11.5$  N
- 6.60  $p = 1.35$  psig;  $p_{\text{max}} = 1.79$  psig;  
 $F = 4.76$  lbf
- 6.63  $h/h_0 = \left[1 - \sqrt{\frac{g}{2h_0(AR^2 - 1)}} t\right]^2$
- 6.64  $h = H/2$ ;  $r = H$
- 6.65  $\Delta h = 202$  mm;  $K_x = 0.547$ N, 219 N
- 6.66  $F_v = 83.3$  kN
- 6.67  $F_v = 532$  kN
- 6.68  $p = 164$  kPa (gage);  $F = 152$  N
- 6.74  $C_c = 0.5$
- 6.77  $p = 12.3$  kN/m<sup>2</sup> (gage)
- 6.78  $a = 3.47$  m/s<sup>2</sup>
- 6.79  $dQ/dt = 0.0516$  m<sup>3</sup>/s/s
- 6.80  $d^2l/dt^2 = 2g/lL$
- 6.82  $p_{\text{gage}} = 3\rho V^2 R^2/8b^2$
- 6.83  $D/d = 0.32$
- 6.84 No; Yes
- 6.85 No;  $p_2 - p_1 = -252$  lbf/ft<sup>2</sup>
- 6.86  $\phi = [A(y^2 - x^2)/2 + Bxy]t$
- 6.90  $\phi = xy^2 - x^3/3$
- 6.91  $\vec{V} = -2(y\hat{i} + x\hat{j})$ ;  $\phi = 2xy$
- 6.92  $\psi = -2xy$
- 6.93  $\psi = B(x^2 - y^2)/2 - 2Axy$
- 6.94  $\vec{V} = -(2x + 1)\hat{i} + 2y\hat{j}$ ;  $\psi = -(2xy + y)$ ;  
 $\Delta p = 12.0$  kN/m<sup>2</sup>
- 6.95  $|\vec{V}| = x^2 + y^2$ ;  $\psi = xy^2 - x^3/3$
- 6.96  $\phi = 3A(x^2y - x^3)$

- 6.97 Stagnation point  $(-2, 4/3)$  m;  $\phi = A(y^2 - x^2)/2 - Bx - Cy$ ;  $\Delta p = 55.8$  kPa  
 6.98  $Q = 1.25$  m<sup>3</sup>/s/m;  $\phi = B(y^2 - x^2)/2$   
 6.99  $r > 10a$   
 6.101  $r > 9.77$  m,  $p = -6.37$  kPa (gage)  
 6.102 Stagnation at  $r = 0.367$  m,  $\theta = 0, \pi$   
 6.103  $h = 0.162$  m;  $\bar{V} = 44.3\hat{i}$  m/s,  
 $p = -957$  N/m<sup>2</sup> (gage)  
 6.105  $q = 50\pi$  m<sup>2</sup>/s;  $y = \pm\pi$   
 6.106  $r = 1.82$  m,  $\theta = 63^\circ$ ;  $p = -317$  N/m<sup>2</sup> (gage)  
 6.107  $R_x/b = 5.51$  kN/m

### Chapter 7

- 7.1  $\sigma/\rho LV_0^2, gL/V_0^2$   
 7.2  $V_0^2/gL$   
 7.3  $gL/V_0^2$   
 7.4  $v/V_0L$   
 7.5  $D/L, \Delta p/\rho \bar{V}^2, v/\bar{V}D$   
 7.7  $F/\mu VD = \text{constant}$   
 7.9  $\Delta p/\rho V^2 = f(\mu/\rho VD, d/D)$   
 7.10  $\delta/x = f(\rho Ux/\mu)$   
 7.11  $\tau_w/\rho U^2 = f(\mu/\rho UL)$   
 7.13  $V = \sqrt{gD} f(\lambda/d)$   
 7.14  $Q = h^2(gh)^{1/2}f(b/h)$   
 7.15  $WD^2\omega\mu = f(l/D, c/D)$   
 7.16  $V(\rho\lambda/\sigma)^{1/2} = \text{constant}$   
 7.17  $t = \sqrt{dl/g} f(\mu^2/\rho^2gd^3)$   
 7.18  $E = \rho V^3f(nr/V)$   
 7.19  $\mathcal{P} = \rho D^5\omega^3f(Q/D^3\omega)$   
 7.20  $4; 3; \mu/\rho d^{3/2}g^{1/2}$   
 7.21  $4; 3; \mu/\rho d^{3/2}g^{1/2}$   
 7.22  $Q = Vh^2f(\rho Vh/\mu, V^2/gh)$   
 7.23  $3; \rho VD/\mu, d/D, \sigma/\rho DV^2$   
 7.25  $\rho VD/\mu, h/d, D/d$   
 7.27  $V^2/g\delta, A/\delta^2, \theta, \mu\delta^2/mg,$   
 7.29  $3; \dot{m} = \rho A^{5/4}g^{1/2}f(h/A^{1/2}, \Delta p/\rho A^{1/2}g)$   
 7.30  $T/\rho V^2D^3, \mu/\rho VD, \omega D/V, d/D$   
 7.31  $\mathcal{P} = \rho\omega D^3f(\mu\omega/p, c/D, \ell/D)$   
 7.32  $F_T/\rho V^2D^2, gD/V^2, \omega D/V, p/\rho V^2, \mu/\rho VD$   
 7.33  $\mathcal{P}/\rho D^2V^3, \omega D/V, \mu/\rho VD, c/V$   
 7.34  $\dot{Q}/\rho V^3L^2, c_p\Theta/V^2, \mu/\rho VL$   
 7.36  $p_{\max}/\rho U_0^2 = f(E_v/\rho U_0^2)$   
 7.37  $\mathcal{P}/\rho\omega^3D^5, V/\omega D, H/D, \mu/\rho\omega D^2$   
 7.38  $p = 539$  kPa;  $F = 1.34$  kN  
 7.39  $V_{\text{air}}/V_{\text{water}} = 15.1$  at  $20^\circ\text{C}$   
 7.40  $V_m = 6.9$  m/s;  $F_D$  (prototype) = 522 N

- 7.41  $V_m/V_p = 0.331$ ;  $F_D = 214$  N  
 7.42  $p = 1.94$  MPa (abs);  $F_D = 43.4$  kN  
 7.43  $V_m = 40.3$  m/s;  $V_p = 40.3$  m/s  
 7.44  $V_m = 6.00$  m/s;  $F_D = 1.05$  N  
 7.45  $V = 179$  ft/s;  $F_m/F_p = 4.94$   
 7.46  $D_m = 5.04$  in.;  $\omega_m = 1000$  rpm  
 7.47  $V_m = 80$  ft/s;  $\omega_m = 1600$  rpm  
 7.48  $p_m = 2.96$  psia  
 7.49  $\bar{V} = 0.048$  ft/s;  $\Delta p = 0.019$  psig  
 7.50  $C_{D,m} = 0.0972$ ;  $F_D = 470$  N  
 7.51  $V_1/V_2 = 1/2$ ;  $f_1/f_2 = 1/4$   
 7.52  $V_m = 0.13$  m/s;  $\omega_m = 0.5$  Hz  
 7.53  $F_D = 2.46$  kN;  $\mathcal{P} = 55.1$  kW  
 7.54  $\tau = 1070$  hr  
 7.55  $V_m = 1.88$  m/s;  $V_p = 7.29$  m/s;  
 $F_{Dm}/F_D = 0.872$   
 7.56  $V_m = 9.51$  m/s;  $F_{Dp}/F_{Dm} = 0.263$ ;  
 $p_\infty = 88.1$  kPa  
 7.57  $V_{\max} = 27.1$  ft/s  
 7.58  $C_D = 0.951$ ;  $F_D = 794$  lbf;  $V = 807$  ft/s  
 7.59 Scale ratio = 1/50; Not possible  
 7.61  $Q = 2.47$  m<sup>3</sup>/s  
 7.63  $\Delta p_p = 52.5$  kPa;  $Q_m = 0.0928$  m<sup>3</sup>/min  
 7.65  $h = 145$  ft · lbf/slug;  $Q = 5.92$  ft<sup>3</sup>/s;  
 $D = 0.491$  ft  
 7.66  $F_1/\rho\omega^2D^4 = f_1(g/\omega^2D, \omega D/V)$ ;  
 $T/\rho\omega^2D^5 = f_2(g/\omega^2D, \omega D/V)$ ;  
 $\mathcal{P}/\rho\omega^3D^5 = f_3(g/\omega^2D, \omega D/V)$ ;  
 7.67  $\omega = 533$  rpm;  $F_t = 7.81$  kN;  
 $T = 71$  kN · m  
 7.68 KE ratio = 7.22  
 7.69  $F_B \approx 0.273$  N;  $C_D = 0.443$ ;  $F_D = 1.64$  kN  
 7.70  $F_B = 0.574$ ; 0.44%

### Chapter 8

- 8.1  $Re = 4Q/\pi D\mu$ ;  $Re = 3000$   
 8.2  $Q = 0.396$  m<sup>3</sup>/s;  $L_{\text{lam}} = 34.5$  m;  
 $L_{\text{turb}} = 6.25 - 10$  m  
 8.4  $Q_1 = 0.0158$  m<sup>3</sup>/min;  $Q_2 = 0.0396$  m<sup>3</sup>/min;  
 $Q_3 = 0.079$  m<sup>3</sup>/min  
 8.6  $\bar{V}/u_{\max} = 2/3$   
 8.7  $Q/b = 2hu_{\max}/3$ ;  $\bar{V}/u_{\max} = 2/3$   
 8.8  $\tau_{yx} = -2.5$  N/m<sup>2</sup> (to right);  
 $Q/b = 2.08 \times 10^{-5}$  m<sup>3</sup>/s/m  
 8.9  $\tau_{yx} = -0.040$  lbf/ft<sup>2</sup> (to right);  
 $Q/b = 6.67 \times 10^{-5}$  ft<sup>3</sup>/s/ft  
 8.10  $\tau_{yx} = y\partial p/\partial x$ ;  $\tau_{\max} = -0.00835$  lbf/ft<sup>2</sup>  
 8.11  $Q = 0.353$  cc/s  
 8.12  $Q = 1.02$  cc/s



- 8.13  $Q = 3.97 \times 10^{-4}$  cc/s  
 8.14  $w = 0.50$  ft;  $dp/dx = -400$  psi/ft;  
 $h = 2.02 \times 10^{-3}$  in.  
 8.15  $M = 4.32$  kg;  $a = 1.28 \times 10^{-5}$  m  
 8.18  $n = 1.48$   
 8.19  $\mu = 0.0695$  N·s/m<sup>2</sup>  
 8.20  $Q/b = 0.0146$  ft<sup>3</sup>/s/ft  
 8.21  $u_{\text{int}} = 3.75$  m/s  
 8.22  $\partial p/\partial x = -92.6$  N/m<sup>2</sup>/m  
 8.23  $u_{\text{int}} = 4.17 \times 10^{-3}$  m/s;  
 $u_{\text{max}} = 4.34 \times 10^{-3}$  m/s  
 8.24  $\Delta p = -2U\mu/a^2$ ;  $\Delta p = +2U\mu/a^2$   
 8.25  $Re = 1.94$ ;  $\tau = 2.02$  kN/m<sup>2</sup>;  $\mathcal{P} = 11.4$  W  
 8.27  $v = 1.0 \times 10^{-4}$  m<sup>2</sup>/s  
 8.28  $\tau_{\text{max}} = 34.8$  N/m<sup>2</sup>;  $Q/w = 263$  mm<sup>3</sup>/s/mm;  
 $Re = 0.236$   
 8.29  $u_{\text{int}} = 0.23$  m/s;  $u_{\text{is}} = 0.268$  m/s  
 8.30  $Q/b = 2.5 \times 10^{-3}$  m<sup>3</sup>/s/m;  $\tau = 1.43 \times$   
 $10^{-2}$  N/m<sup>2</sup>;  $\partial p/\partial x = 22.9$  N/m<sup>2</sup>/m  
 8.31  $y/b = 0.695$ ;  $u_{\text{max}}/U = 1.24$ ;  
 $\mathcal{V}/w = 9.27 \times 10^{-2}$  ft<sup>3</sup>/ft  
 8.33  $\partial p/\partial x = 34.4$  N/m<sup>2</sup>/m,  $-68.8$  N/m<sup>2</sup>/m  
 8.34  $Q/b = 2.5 \times 10^{-3}$  m<sup>3</sup>/s/m;  $\tau = 0.912$  N/m<sup>2</sup>;  
 $\partial p/\partial x = 1.46$  kN/m<sup>2</sup>/m  
 8.35  $t = 95.5$  s  
 8.39  $\eta_{\text{max}} = 33.3\%$   
 8.41  $t = 10$  s  
 8.44  $r = 0.707 R$   
 8.46  $Q = 11.3$  mm<sup>3</sup>/s  
 8.47  $\Delta p = 4.97$  lbf/in.<sup>2</sup>;  $u_{\mu} = 32\%$   
 8.48  $\delta D = \pm 0.775$   $\mu$ m  
 8.49  $\Delta p = 406$  kPa;  $\Delta p = 8160$  MPa  
 8.52  $u = (c_1/\mu) \ln r + c_2$ ;  $c_1 = \mu V_0/\ln(r_i/r_0)$ ;  
 $c_2 = -V_0 \ln r_o/\ln(r_i/r_o)$   
 8.57  $\tau_w = 3.0$  lbf/ft<sup>2</sup>  
 8.58  $\bar{\tau}_w = -8.0$  N/m<sup>2</sup>  
 8.59  $\tau_w = 33.8$  Pa;  $\tau_w = 82.5$  Pa  
 8.60  $Q = 4.52 \times 10^{-7}$  m<sup>3</sup>/s;  $\Delta p = 235$  kPa;  
 $\tau_w = 294$  N/m<sup>2</sup>  
 8.61  $n = 6.49$ ;  $n = 9.17$   
 8.62  $r/R = 0.707$  (laminar);  $0.757$  (turbulent)  
 8.64  $\beta = 4/3$  (laminar);  $1.02$  (turbulent)  
 8.65  $\alpha = 1.54$   
 8.66  $\alpha = 2.0$   
 8.68  $h_i = 589$  J/kg;  $p = 833$  kPa;  
 $p = 343$  kPa;  $h = 60$  m  
 8.69  $H_i = 4.24$  ft;  $h_i = 137$  ft·lbf/slug  
 8.70  $\bar{V}_1 = 6.44$  ft/s  
 8.71  $d = 2.97$  m  
 8.72  $Q = 2.66 \times 10^{-2}$  m<sup>3</sup>/s  
 8.73  $H_i = 2720$  ft  
 8.74  $p = 1.68$  MPa  
 8.76  $H_i = 28.4$  ft  
 8.77  $H = 104$  ft,  $H_i = 25.2$  ft  
 8.79  $e/D = 0.003$   
 8.80  $f = 0.039$   
 8.84  $p_2 - p_1 = 1.22$  kPa  
 8.85  $\bar{V} = 76.2$  ft/s;  $Q = 224$  ft<sup>3</sup>/min  
 8.86  $Q = 1.10 \times 10^{-3}$  m<sup>3</sup>/s  
 8.89  $Q = 0.0361$  ft<sup>3</sup>/s  
 8.90  $\Delta Q = 0.0184$  m<sup>3</sup>/s  
 8.92  $N = 275$  mm;  $N = 150$  mm  
 8.93  $\Delta p = 115$  kPa;  $K = 0.234$   
 8.94  $AR = 2.7$ ,  $2\phi = 12^\circ$ ;  $Q = 0.172$  m<sup>2</sup>/s  
 8.98  $\Delta Q/Q = 16.4\%$ ;  $p_{\text{min}} = -5.26$  kPa (gage)  
 8.99  $\bar{V} = 0.723$  m/s;  $d = 3.66$  m  
 8.101  $d = 6.15$  m  
 8.102  $Q = 2.87 \times 10^{-5}$  m<sup>3</sup>/s;  $d = 13.6$  mm  
 8.105  $d = 54.0$  m  
 8.106  $p = 1.03$  MPa (gage)  
 8.107  $\Delta z = 88.4$  m; Fraction = 1.1 percent  
 8.108  $\Delta p = 43.9$  N/m<sup>2</sup>  
 8.109  $\bar{V} = 12.9$  ft/s;  $\Delta p = 3.63$  psi  
 8.112  $\Delta z = 8.13$  m  
 8.113  $p = 593$  kPa  
 8.114  $e/D = 0.021$ ; Saving = 48.2 percent  
 8.115  $d = 1.51$  m  
 8.117  $L = 26.5$  m  
 8.118  $Q = 1.01$  m<sup>3</sup>/s  
 8.119  $Q = 0.0395$  m<sup>3</sup>/s  
 8.120  $Q = 5.33 \times 10^{-3}$  m<sup>3</sup>/s  
 8.121  $h_1 = -42.5$  mm/s  
 8.122  $Q = 5.14 \times 10^{-3}$  m<sup>3</sup>/s;  $3.65 \times 10^{-3}$  m<sup>3</sup>/s  
 8.123  $V_0 = 28.0$  m/s;  $F = 365$  N  
 8.126  $Q = 38$  L/min;  $L = 143$  m;  
 $L = 1.15 \times 10^6$  m  
 8.127  $d = 61.2$  m;  $Q = 0.104$  m<sup>3</sup>/s;  
 $p = 591$  kPa  
 8.128  $Q = 0.260$  ft<sup>3</sup>/s;  $p_{\text{min}} = -2.96$  psig  
 8.129  $Q = 5.30 \times 10^{-4}$  m<sup>3</sup>/s;  $Q = 5.35 \times$   
 $10^{-4}$  m<sup>3</sup>/s  
 8.130  $L = 0.97$  ft  
 8.131  $p = 35.9$  psig;  $Q = 11.5$  gpm  
 8.132  $D \geq 14$  mm  
 8.133  $D = 2.5$  in. (nominal)  
 8.134  $h = 0.194$  m;  $b = 0.388$  m  
 8.135  $D = 6$  in.  
 8.138  $Re_{\bar{V}} = 8.21 \times 10^4$ ;  $f = 0.019$   
 8.139  $dQ/dt = -0.524$  m<sup>3</sup>/s/min  
 8.141  $\mathcal{P} = 2.08$  hp

- 8.142  $\mathcal{P} = 4.69 \text{ kW}$   
 8.143  $\Delta p = 52.7 \text{ psi}$   
 8.144  $D = 48 \text{ mm}; \Delta p = 3840 \text{ kPa};$   
 $\mathcal{P} = 24.3 \text{ kW}$   
 8.145  $p = 341 \text{ psig}; \mathcal{P} = 171 \text{ hp}$   
 8.146  $\Delta p = 43.7 \text{ psi}; \mathcal{P} = 286 \text{ hp};$   
 Cost = \$853/day  
 8.147  $L = 72.7 \text{ km}; \mathcal{P} = 7.73 \text{ MW}$   
 8.148  $Q = 108 \text{ gpm}; V = 124 \text{ ft/s}; \mathcal{P} = 13.4 \text{ hp}$   
 8.149  $C = \$13.63/\text{day}$   
 8.151  $Q = 0.0419 \text{ m}^3/\text{s};$   
 $\Delta p = 487 \text{ kPa}; \mathcal{P} = 29.1 \text{ kW}$   
 8.152  $Q = 0.757 \text{ m}^3/\text{s}; \Delta p = 542 \text{ kPa};$   
 $\mathcal{P} = 586 \text{ kW}; Q = 0.807 \text{ m}^3/\text{s};$   
 $\Delta p = 480 \text{ kPa}; \mathcal{P} = 533 \text{ kW}$   
 8.154  $Q = 3.97 \times 10^{-3} \text{ m}^3/\text{s};$   
 $Q_1 = 3.28 \times 10^{-3} \text{ m}^3/\text{s};$   
 $Q_2 = 6.9 \times 10^{-4} \text{ m}^3/\text{s}$   
 8.155  $Q_0 = 8.81 \times 10^{-3} \text{ m}^3/\text{s};$   
 $Q_1 = 4.66 \times 10^{-3} \text{ m}^3/\text{s};$   
 $Q_2 = Q_3 = 2.13 \times 10^{-3} \text{ m}^3/\text{s}$   
 8.158  $\Delta p = 462 \text{ lbf/ft}^2$   
 8.159  $Q = 0.224 \text{ m}^3/\text{s}$   
 8.160  $\Delta p = 266 \text{ kPa}; Q = 0.0177 \text{ m}^3/\text{s}$   
 8.161  $Q = 0.0404 \text{ m}^3/\text{s}$   
 8.162  $Q = 96.8 \text{ gpm}$   
 8.163  $Q = 136 \text{ gpm}$   
 8.164  $D = 40.8 \text{ mm}; \dot{m} = 0.0220 \text{ kg/s}$   
 8.165  $\dot{m} = 2.10 \text{ kg/s}; \Delta h = 170 \text{ mm Hg}$   
 8.166  $Q = 1.37 \text{ ft}^3/\text{s}$   
 8.169  $Re = 1800; f = 0.0356;$   
 $p = -290 \text{ N/m}^2 \text{ (gage)}$
- Chapter 9**  
 9.2  $x = 182 \text{ mm}; x_m = 13.5 \text{ mm}$   
 9.3  $x = 0.114 \text{ m}$   
 9.6  $A = U; B = \pi/2\delta; C = 0$   
 9.9  $\delta^*/\delta = 1/2, 1/3, 3/8, 0.363$   
 9.10  $\theta/\delta = 0.167, 0.133, 0.137$   
 9.11  $\delta^*/\delta = 0.125, 0.333; \theta/\delta = 0.0972, 0.133$   
 9.12  $\dot{m}_{ab} = 30 \text{ kg/s}; F_x = -30 \text{ N}$   
 9.13  $\dot{m}_{ab} = 50.4 \text{ kg/s}; F_x = -50.4 \text{ N}$   
 9.14  $\dot{m}_{ab} = 20 \text{ kg/s}; F_x = -24 \text{ N}$   
 9.15  $U_2 = 81.4 \text{ ft/s}; p_1 - p_2 = 0.264 \text{ lbf/ft}^2$   
 9.16  $U_2 = 18.4 \text{ m/s}; \Delta p = 2.19 \text{ Pa}$   
 9.17  $U_2 = 13.8 \text{ m/s}; \Delta p = 20.7 \text{ Pa}$   
 9.18  $\Delta p = 59.0 \text{ Pa}$   
 9.19  $p_2 = -73.1 \text{ Pa (gage)}; \tau = 0.300 \text{ N/m}^2$   
 9.20  $U_2 = 24.6 \text{ m/s}; p_1 = -43.9 \text{ mm H}_2\text{O};$   
 $p_2 = -44.5 \text{ mm H}_2\text{O}$
- 9.21  $\delta^* = 2.54 \text{ mm}; \Delta p = 107 \text{ N/m}^2;$   
 $F_D = 2.28 \text{ N}$   
 9.22  $p_2 = -40.8 \text{ Pa (gage)}; \tau = 0.12 \text{ Pa}$   
 9.28  $y = 3.28 \text{ mm}; \text{Slope} = 0.00327;$   
 $\theta = 1.09 \text{ mm}$   
 9.32  $F = 1.62 \text{ N}$   
 9.33  $\theta = 0.283 \text{ mm}; F = 1.13 \text{ N}$   
 9.34  $F_D = 26.3 \text{ N}; F_D = 45.5 \text{ N}$   
 9.36  $\delta/x = 3.46/\sqrt{Re_x}; C_f = 0.577/\sqrt{Re_x}$   
 9.38  $F_D = 5.63 \times 10^{-2} \text{ N}$   
 9.39  $F = 0.783 \text{ N}$   
 9.41  $F_D = 18.9 \text{ N}; x_t = 0.145 \text{ m}$   
 9.44  $F = 2.27 \text{ N}$   
 9.46  $F = 2.32 \text{ N}$   
 9.48  $F = 2.37 \text{ N}$   
 9.49  $\delta_i = 6.62 \text{ mm}, \tau_w = 0.0540 \text{ N/m}^2;$   
 $\delta_i = 26 \text{ mm}, \tau_w = 0.249 \text{ N/m}^2$   
 9.50  $\delta = 31.3 \text{ mm}; \tau_w = 0.798 \text{ N/m}^2; F = 0.7 \text{ N}$   
 9.51  $W = 80.1 \text{ mm}$   
 9.52  $\Delta p = 6.16 \text{ N/m}^2; \Delta x = 232 \text{ mm}$   
 9.53  $H_6 = 321 \text{ mm}; L = 0.517 \text{ m}; \Delta x = 242 \text{ mm}$   
 9.54  $U_2 = 26.8 \text{ m/s}; \Delta p = 56.8 \text{ Pa};$   
 $\Delta L = 1.20 \text{ m}; \Delta L = 0.564 \text{ m}$   
 9.55 Consumed = 0.089%;  
 Performance = 17.7 Btu/ton-mile  
 9.60  $a = b = 0, c = 3, d = -2; H = 3.89$   
 9.61  $U_{\max} = 7.82 \text{ ft/s}; \Delta h = 0.00340 \text{ in. H}_2\text{O}$   
 9.62 Area reduction = -1.59%;  
 $d\theta/dx = 0.61 \text{ mm/m}; \theta \approx 1.10 \text{ mm}$   
 9.64  $Re_L = 1.55 \times 10^7; x_t = 53.2 \text{ mm};$   
 $\mathcal{P} = 15.3 \text{ kW}$   
 9.65  $F = 7.87 \text{ kN}; \mathcal{P} = 1.79 \text{ MW}$   
 9.66  $\bar{L} = 9.96 \text{ ft}; F = 2250 \text{ lbf}$   
 9.68  $V = 2.18 \text{ mph}; x_t = 0.0339 \text{ ft};$   
 $F_m = 3.65 \text{ lbf}; F_p = 4110 \text{ lbf}$   
 9.69  $x_t = 74.5 \text{ mm}; \delta = 81.3 \text{ mm}; F_D = 279 \text{ N}$   
 9.70  $V = 11.0 \text{ ft/s}; V = 11.5 \text{ ft/s}$   
 9.71  $F = 5.49 \times 10^5 \text{ N}$   
 9.74  $\delta = 1.65 \text{ m}; F = 1.56 \text{ MN}; \mathcal{P} = 11.2 \text{ MW}$   
 9.75  $F = 92.3 \text{ kN}$   
 9.76  $T = 86.2 \text{ N}\cdot\text{m}; \mathcal{P} = 542 \text{ W}$   
 9.77 Rings:  $d_o = 125 \text{ mm}; d_i = 41.8 \text{ mm}$   
 9.78  $D = 6.90 \text{ m}$   
 9.79  $D = 3.80 \text{ m}; D = 2.20 \text{ m}; l g$   
 9.80  $t = 9.30 \text{ s}; x = 477 \text{ m};$   
 $t = 7.39 \text{ s}; x = 407 \text{ m}$   
 9.81 Horizontal is 20 percent better  
 9.82  $\bar{C}_D = 0.299$   
 9.83  $s = 117 \text{ m}$

- 9.84 Wins; Loses  
 9.85  $V_{\max} = 24.7 \text{ km/hr}, 35.9 \text{ km/hr}, 26.8 \text{ km/hr}, 39.1 \text{ km/hr}$   
 9.86  $V_{\max} = 9.47 \text{ km/hr}, 8.94 \text{ km/hr}; 63.6 \text{ km/hr}, 73.0 \text{ km/hr}; 58.1 \text{ km/hr}, 68.1 \text{ km/hr}$   
 9.87  $M = 3.29 \times 10^{-3} \text{ slug}$   
 9.88  $k = 0.0948 \text{ km/hr/rpm}; \omega = 105 \text{ rpm}; \omega = 104 \text{ rpm}$   
 9.89  $t = 1.30 \text{ mm}$   
 9.90  $t = 2.95 \text{ s}; d = 624 \text{ ft}$   
 9.91  $V_t = 43.5, 121 \text{ m/s}; t = 8.11, 22.6 \text{ s}; y = 224, 1730 \text{ m}$   
 9.92  $V_{\max} = 489 \text{ ft/s}$   
 9.94  $FE = 6.13 \text{ mi/gal}; \Delta Q = 1720 \text{ gal/yr}$   
 9.95  $\mathcal{P} = 55.4 \text{ kW}, V_{\max} = 43.0 \text{ m/s}; \mathcal{P} = 49.5 \text{ kW}, V_{\max} = 44.7 \text{ m/s}; 7 \text{ months}$   
 9.96  $V = 42.2 \text{ mph}; \eta = 90.9\%; a_{\max} = 3.37 \text{ m/s}^2 (1/3 g); V_{\max} = 150 \text{ mph}; V_{\max} = 155 \text{ mph}$   
 9.97  $C_D = 1.17$   
 9.99  $V_{2(\text{rel})} = 15 \text{ m/s}; p_2 = -133 \text{ N/m}^2 \text{ (gage)}; M = 0.814 \text{ kg}$   
 9.101  $\omega_{\text{opt}} = V/3R$   
 9.102  $\mathcal{P} = 69.3 \text{ kW}$   
 9.103  $T = 11.9 \text{ N}\cdot\text{m}$   
 9.104  $D < 0.231 \text{ mm}$   
 9.105  $C_D = 0.479$   
 9.106  $V = 23.3 \text{ m/s}; Re = 48,200; F_D = 0.111 \text{ N}$   
 9.107  $x = 13.9 \text{ m}$   
 9.108  $V \approx 29.8 \text{ ft/s}$   
 9.109  $C_D = 61.9; \rho = 3720 \text{ kg/m}^3; V = 0.731 \text{ m/s}$   
 9.111  $V = 23.7 \text{ m/s}; t = 4.44 \text{ s}; y = 67.1 \text{ m}$   
 9.112  $M = 0.048 \text{ kg}$   
 9.113  $M = 519 \text{ kN}\cdot\text{m}$   
 9.114  $D \approx 6.2 \text{ m}$   
 9.115  $t = 126 \text{ s}$   
 9.117  $D = 7.99 \text{ mm}; h = 121 \text{ mm}$   
 9.118  $C_D = 1.08$   
 9.122  $C_D = 0.611; V = 36.9 \text{ mph}$   
 9.123  $F_D = 12.3 \text{ lbf}; \Delta FC = 1.15 \text{ lbm/hr}; FE = 27.5 \text{ mpg}; FE = 22.6 \text{ mpg (square-edged)}; \text{No! Net cost} = \$1.90$   
 9.124  $F_D = 2.59 \text{ kN}; d = 8.57 \text{ m}$   
 9.132  $\Delta \mathcal{P} = 18.2 \text{ kW}$   
 9.137  $M = 7260 \text{ kg}; V = 162 \text{ km/hr}$   
 9.138  $A_p = 7.03 \text{ m}^2; T = 1350 \text{ N}; \mathcal{P} = 944 \text{ kW}$   
 9.139  $M = 19.5 \text{ kg}; \mathcal{P} = 542 \text{ W}$   
 9.140  $V = 5.62 \text{ m/s}; \mathcal{P} = 31.0 \text{ kW}; V = 19.9 \text{ m/s}$

- 9.141  $\alpha = 3^\circ; \mathcal{P} = 10.0 \text{ kW}; 4.28 g's$   
 9.142  $V = 144 \text{ m/s}; R = 431 \text{ m}$   
 9.143  $M = 37.9 \text{ kg}; \mathcal{P} = 1.53 \text{ kW}$   
 9.144  $V \approx 289 \text{ km/hr}$   
 9.145  $V = 237 \text{ km/hr}$   
 9.146  $T = 17,300 \text{ lbf}$   
 9.147  $F_D = 2.15 \text{ kN}; \mathcal{P} = 149 \text{ kW}$   
 9.148  $V_{\min} = 158 \text{ km/hr}, F_D = 4.04 \text{ kN}, \mathcal{P} = 178 \text{ kW}; V_{\max} = 623 \text{ km/hr}, F_D = 4.89 \text{ kN}, \mathcal{P} = 845 \text{ kW}$   
 9.149  $F_L = -310 \text{ lbf}; \Delta F = 336 \text{ lbf}$   
 9.150  $\theta = 3.42^\circ; L = 168 \text{ km}$   
 9.153  $\mathcal{P} = 0.302 \text{ hp}$   
 9.157  $p = -190 \text{ N/m}^2 \text{ (gage)}; V = 149 \text{ km/hr}$   
 9.158  $F_L = 0.00291 \text{ lbf}$   
 9.159  $F_L = 50.9 \text{ kN}; F_D = 18.7 \text{ kN}; \mathcal{P} = 5.94 \text{ kW}$   
 9.160  $F_L/mg = 0.175; F_D/mg = 0.236$   
 9.161  $F_L/mg = 3.80, 3.40; F_D/mg = 4.51, 4.07; R = 263 \text{ m}, 307 \text{ m}$   
 9.162  $\omega = 11,600 \text{ rpm}; s = 1.19 \text{ m}$   
 9.163  $\omega = 2100 \text{ rpm}$

## Chapter 10

- 10.1  $D = 50 \text{ mm}; b = 6.4 \text{ mm}$   
 10.2  $H = 101 \text{ ft}, 106 \text{ ft}, 109 \text{ ft}, 111 \text{ ft}; \dot{W}_m = 3.86 \text{ hp}, 4.02 \text{ hp}, 4.15 \text{ hp}, 4.21 \text{ hp}$   
 10.3  $H = 99.8 \text{ m}; \dot{W}_m = 97.8 \text{ kW}$   
 10.4  $H = 135 \text{ m}; \dot{W}_m = 994 \text{ kW}$   
 10.5  $H = 487 \text{ m}; \dot{W}_m = 23.9 \text{ MW}$   
 10.6  $H = 50.1 \text{ ft}; \mathcal{P} = 12.7 \text{ hp}$   
 10.7  $\beta_1 = 64.2^\circ; \delta = 7.90^\circ$   
 10.8  $H = 61.4 \text{ m}; \dot{W}_m = 150 \text{ kW}$   
 10.9  $Q = 1.60 \text{ m}^3/\text{s}; H = 132 \text{ m}; \dot{W}_m = 2.10 \text{ MW}$   
 10.10  $\beta_1 = 47.7^\circ; H = 476 \text{ m}; \dot{W}_m = 37.3 \text{ MW}$   
 10.11  $H_0 = 179 \text{ m}; H = 174 \text{ m}; \dot{W}_m = 85.4 \text{ kW}$   
 10.12  $\beta_o = 61.3^\circ$   
 10.13  $\theta_{\text{eff}} = 30.4^\circ$   
 10.14  $\dot{W}_m = 11.7 \text{ kW}; H = 34.2 \text{ m}$   
 10.16  $\dot{W}_m = 5.75 \text{ kW}; H = 19.7 \text{ m}$   
 10.17  $\omega = 224 \text{ rad/s}; \alpha_2 = 80.4^\circ; H = 325 \text{ ft}; \dot{W}_m = 37.8 \text{ hp}$   
 10.18  $H = 165 \text{ ft (H}_2\text{O)}, 230 \text{ ft (gasoline)}$   
 10.19  $\eta = 0.445; Q = 450 \text{ gpm}; H = 30.9 \text{ ft}$   
 10.21  $H(\text{ft}) = 156 - 1.36 \times 10^{-4} [Q(\text{gpm})]^2$   
 10.22  $H(\text{ft}) = 91.5 - 4.01 \times 10^{-7} [Q(\text{gpm})]^2$   
 10.23  $\eta \approx 0.79; H \approx 176 \text{ ft at } Q \approx 630 \text{ gpm}$



- 10.24  $\eta \approx 0.83$ ;  $H \approx 185$  ft at  $Q \approx 820$  gpm  
 10.25  $H_1 = 15.1$  m;  $H_2 = 60.7$  m;  
 $\dot{W}_{\text{fluid}} = 1.86$  kW;  $\eta_p = 76\%$ ;  
 $\dot{W}_{\text{elec}} = 2.88$  kW  
 10.26  $\dot{W}_{\text{elec}} = 2.4$  kW;  $p_2 = 369$  kPa (gage)  
 10.29 1 hp (US) = 1.01 mhp;  
 $N_s$  (mhp) =  $4.39N_s$  (US)  
 10.30  $N_s = 1130$ ;  $\mathcal{P}_{\text{in}} = 11.6$  hp  
 10.31  $\eta \approx 0.86$  at  $Q = 2220$  gpm,  $H = 130$  ft;  
 $D = 13$  in.:  $Q = 2800$  gpm,  $H = 153$  ft;  
 $D = 11$  in.:  $Q = 1690$  gpm,  $H = 109$  ft  
 10.32  $\dot{W}_m = 735$  kW;  $Q' = 0.6$  m<sup>3</sup>/s;  
 $H' = 12.5$  m;  $\eta' = 80\%$ ;  $\mathcal{P}' = 91.9$  kW  
 10.33  $H_0 = 26$  m;  $\eta = 79\%$ ;  $Q' = 1.07$  m<sup>3</sup>/s;  
 $H' = 21.8$  m;  $H_0 = 56.6$  m;  
 $\mathcal{P}' = 289$  kW  
 10.34  $n = 5$  pump/motor units  
 10.35  $H_{1150} \approx 25.9$  ft  
 10.43  $N_m = 371$  rpm;  $D_m/D_p = 0.145$ ;  
 $Q_m = 14.2$  ft<sup>3</sup>/s  
 10.44 Yes; Operate at flow rate below *BEP*, lower speed.  
 10.45  $N_m = 7140$  rpm;  $D_m/D_p = 0.135$   
 10.46  $Q = 1080$  ft<sup>3</sup>/s;  $H = 211$  ft;  
 $\mathcal{P} = 25,800$  hp  
 10.47  $a = 0.0426$  (gpm)<sup>-1</sup>,  
 $b = -1.56 \times 10^{-9}$  (gpm)<sup>-3</sup>;  $r^2 = 0.996$   
 10.48  $T \approx 46$  °C;  $Q = 0.625$  L/s;  $H \approx 4.65$  m  
 10.49 *NPSHA* = 26.4 ft;  
 $H = 22.5$  ft ( $p = 9.73$  psig)  
 10.52  $Q_{\text{max}} = 948$  gpm  
 10.54  $H = 40.4$  ft; Cost = 0.29 ¢/hr;  $\mathcal{P} = 2.72$  hp  
 10.55  $D = 6$  in. (nominal);  $\mathcal{P}_m = 890$  hp  
 10.57  $H = 75.4$  ft;  $\mathcal{P}_h = 303$  hp  
 10.58  $Q = 627$  gpm  
 10.59  $Q = 2710$  gpm;  $L_e/D = 27,250$   
 10.60  $Q = 4600$  gpm;  $L_e/D = 9980$   
 10.61  $Q = 3000$  gpm;  $L_e/D = 51,600$   
 10.65 With 3 pumps,  $\eta \approx 0.91$ ;  
 $\mathcal{P}_m = 235,000$  hp  
 10.66  $H_p = 295$  ft  
 10.68  $Q = 2330$  gpm,  $H = 374$  ft; Type  
 8AE20G,  
 19.5 in. impeller, 1770 rpm  
 10.69  $Q = 197$  gpm,  $H = 116$  ft; Type  
 4AE12,  
 11 in. impeller, 1750 rpm  
 10.70  $Q = 600$  gpm,  $H = 778$  ft;  
 Type 5TUT-16B, 5-stage, 1750 rpm  
 10.73  $Q = 2020$  gpm  
 10.74  $Q = 898$  gpm,  $H = 104$  ft; Type  
 4AE11,  
 11 in. impeller, 1750 rpm  
 10.75  $Q = 11,200$  gpm,  $H = 101$  ft; 3 Type  
 10AE12, 12 in. impeller, 1750 rpm  
 10.76  $Q = 15,700$  gpm,  $H = 654$  ft (gasoline);  
 4 Type 10TU-22C, 2-stage, 1750 rpm  
 10.79  $Q_{\text{max}} = 11.2$  gpm at  $\Delta z = 0$   
 10.81  $N = 3500$  rpm;  $D = 3.18$  in.;  $\eta \approx 0.6$   
 10.82  $\eta \approx 0.8$  at  $Q = 9200$  cfm  
 10.84  $A_{\text{outlet}} = 6.29$  ft<sup>2</sup>;  $\eta \approx 0.85$   
 10.85  $\omega' = 659$  rpm;  $\mathcal{P}' = 32.8$  hp  
 10.86  $V = 123$  ft/s  
 10.88  $\mathcal{P}_{\text{loss}} = 0.292$  hp  
 10.89  $F_T = 680$  and 449 lbf  
 10.90  $D = 1.44$  m;  $T = 1.60$  kN and 800 N  
 10.91  $\eta = 57.1$  percent  
 10.92  $D = 18.6$  ft;  $n = 241$  rpm;  
 $\mathcal{P}_{\text{in}} = 72,700$  hp  
 10.93  $V = 16.0$  ft/s;  $J = 0.748$ ;  $C_F = 0.0415$   
 10.94  $\eta = 50.0$  percent;  $\eta_0 = 0$   
 10.97  $\mathcal{P}_{\text{out}} = 16,900$  hp;  $N = 353$  rpm;  
 $T = 3.22 \times 10^5$  ft · lbf  
 10.98  $N_s = 35.1$ ;  $Q = 31,800$  m<sup>3</sup>/s;  $D = 27.6$   
 10.99  $N_{s_{cu}} = 55.7$ ;  $Q \approx 34,600$  ft<sup>3</sup>/s  
 10.100  $D = 10.3$  ft;  $D_j = 14.5$  in.;  $Q = 310$  ft<sup>3</sup>/s  
 10.101  $N_s = 26.5$ ;  $T = 3.91 \times 10^6$  ft · lbf,  
 $Q = 2570$  cfs at  $H = 380$  ft  
 10.102 For one jet,  $N = 229$  rpm;  $D = 10.5$  ft  
 10.103  $\mathcal{P} = 1.77$  hp;  $\eta = 0.600$   
 10.104  $H_{\text{net}} \approx 1050$  ft;  $N_s \approx 5$   
 10.105  $N_{s_{cu}} = 4.55$ ;  $D = 6.20$  ft  
 10.107  $D_j \approx 2.2$  in.;  $\mathcal{P} \approx 60.3$  hp  
 10.108  $U_t \approx 79.6$  m/s;  $C_F = 0.364$   
 10.109  $\omega \approx 26$  s<sup>-1</sup>;  $\mathcal{P}_{\text{model}} \approx 0.069$  hp  
 10.110  $\mathcal{P} \approx 22$  hp;  $\omega = 98.9$  rpm  
 10.111  $Qh \approx 737$  gpm · ft with  $\eta_{\text{pump}} = 0.7$

### Chapter 11

- 11.1  $\Delta u = -574$  kJ/kg;  $\Delta h = -803$  kJ/kg;  
 $\Delta s = 143$  J/(kg · K)  
 11.2 Yes  
 11.3  $T_{\text{min}} = 246$  °C  
 11.4  $\Delta S = -0.923$  Btu/°R;  $\Delta U = -684$  Btu;  
 $\Delta H = -960$  Btu  
 11.5  $q = 1.10$  MJ/kg;  $q = 788$  kJ/kg  
 11.6  $\eta = 57.5\%$   
 11.8  $\dot{W} = 392$  kW  
 11.9  $W = 176$  MJ;  $W = 228$  MJ;  $T = 858$  K;  
 $Q = -317$  MJ

- 11.10  $\dot{m} = 36.7 \text{ kg/s}$ ;  $T_2 = 572 \text{ K}$ ;  $V_2 = 4.75 \text{ m/s}$ ;  $\dot{W} = 23 \text{ MW}$
- 11.11  $\eta = 65\%$
- 11.12  $\Delta t = 828 \text{ s}$
- 11.14  $M = 0.533, 1.08$
- 11.15  $M = 0.776$ ;  $V = 269 \text{ m/s}$
- 11.16  $c = 299 \text{ m/s}$ ;  $V = 987 \text{ m/s}$ ;  $V/V_b = 1.41$
- 11.23  $V = 761 \text{ m/s}$ ;  $\alpha = 27.0^\circ$
- 11.24  $V = 642 \text{ m/s}$
- 11.25  $V = 6320 \text{ ft/s}$
- 11.26  $M = 1.19$ ;  $V = 804 \text{ ft/s}$ ;  
 $Re/x = 9.84 \times 10^6 \text{ m}^{-1}$
- 11.27  $V = 493 \text{ m/s}$ ;  $\Delta t = 0.398 \text{ s}$
- 11.28  $V = 515 \text{ m/s}$ ;  $t = 6.16 \text{ s}$
- 11.29  $t = 8.51 \text{ s}$
- 11.30  $\Delta x = 3920 \text{ ft}$
- 11.31  $t \approx 48.5 \text{ s}$
- 11.34  $M = 0.141, 0.314, 0.441$
- 11.35  $M = 0.925$ ;  $V = 274 \text{ m/s}$
- 11.36  $\Delta\rho/\rho = 48.5\%$ ; No
- 11.37  $p_0 = 546 \text{ kPa}$ ;  $T_0 = 466 \text{ K}$ ;  
 $h_0 - h = 178 \text{ kJ/kg}$
- 11.38  $p_0 = 126, 128 \text{ kPa (abs)}$
- 11.39  $M = 0.801$ ;  $V = 236 \text{ m/s}$ ;  $T_0 = 245 \text{ K}$
- 11.40  $c = 295 \text{ m/s}$ ;  $V = 649 \text{ m/s}$ ;  $\alpha = 27.0^\circ$ ;  
 $T_0 = 426 \text{ K}$
- 11.41  $\Delta p = 8.67 \text{ kPa}$ ;  $V = 195 \text{ m/s}$ ;  $V = 205 \text{ m/s}$
- 11.43  $a_x = -161 \text{ m/s}^2$ ;  $p_0 = 191 \text{ kPa (abs)}$ ;  
 $T_0 = 346 \text{ K}$
- 11.44  $T_0 = 394^\circ\text{F}$ ;  $p_0 = 85.4 \text{ psia}$ ;  
 $\dot{m} = 145 \text{ lbm/s}$
- 11.45 Yes; No
- 11.46  $V = 890 \text{ m/s}$ ;  $T_0 = 677 \text{ K}$ ;  $p_0 = 212 \text{ kPa}$
- 11.47  $V = 987 \text{ m/s}$ ;  $p_0 = 125 \text{ kPa}$ ;  
 $p_0 = 31.6 \text{ kPa}$ ;  $T_0 = 707 \text{ K}$
- 11.48  $T_{01} = T_{02} = 20.6^\circ\text{C}$ ;  $p_{01} = 1.01 \text{ MPa}$ ;  
 $p_{02} = 189 \text{ kPa}$ ;  $s_2 - s_1 = 480 \text{ kJ/kg} \cdot \text{K}$
- 11.49  $T_{01} = 539^\circ\text{C}$ ;  $T_{02} = -16.6^\circ\text{C}$ ;  
 $Q = -27.9 \text{ kW}$ ;  $p_{01} = 593 \text{ kPa}$ ;  
 $p_{02} = 657 \text{ kPa}$ ;  $s_2 - s_1 = -1.19 \text{ kJ/kg} \cdot \text{K}$
- 11.50  $T_0 = 344 \text{ K}$ ;  $p_0 = 223, 145 \text{ kPa (abs)}$ ;  
 $s_2 - s_1 = 0.124 \text{ kJ/(kg} \cdot \text{K)}$
- 11.51  $\delta Q/dm = 63.0 \text{ Btu/lbm}$ ;  
 $p_{02} = 56.5 \text{ psia}$
- 11.52  $T_0 = 445 \text{ K}$ ;  $p_0 = 57.5, 46.7 \text{ kPa (abs)}$ ;  
 $s_2 - s_1 = 59.6 \text{ J/(kg} \cdot \text{K)}$
- 11.53  $T_0 = 2900, 1870^\circ\text{R}$ ;  
 $p_0 = 100, 4.57 \text{ psia}$ ;  
 $s_2 - s_1 = 0.107 \text{ Btu/(lbm} \cdot ^\circ\text{R)}$

- 11.54  $\Delta p = 48.2 \text{ kPa}$
- 11.55  $T^* = 260 \text{ K}$ ,  $p^* = 24.7 \text{ MPa (abs)}$ ;  
 $V^* = 252 \text{ m/s}$
- 11.56  $T^* = 1500 \text{ K}$ ,  $p^* = 2.44 \text{ MPa (abs)}$ ;  
 $V^* = 2280 \text{ m/s}$
- 11.57  $T^* = 2730 \text{ K}$ ,  $p^* = 25.4 \text{ MPa (abs)}$ ;  
 $V^* = 1030 \text{ m/s}$
- 11.58  $T^* = 2390^\circ\text{R}$ ,  $p^* = 79.2 \text{ kPa (abs)}$ ;  
 $V^* = 2400 \text{ ft/s}$

## Chapter 12

- 12.1  $V = 2620 \text{ ft/s}$ ;  $M = 1.36$ ;  
 $\dot{m} = 1.76 \text{ lbm/s}$
- 12.2  $V = 1660 \text{ ft/s}$ ;  $M = 0.787$ ;  
 $\dot{m} = 0.274 \text{ lbm/s}$
- 12.3  $M = 1.35$
- 12.4  $p = 93.8 \text{ kPa}$
- 12.5  $M_2 = 1.20$
- 12.6  $M_2 = 1.20$
- 12.7  $V = 475 \text{ m/s}$ ;  $A = 0.315 \text{ m}^2$
- 12.8  $M = 1.75$ ;  $\dot{m} = 27.2 \text{ kg/s}$ ;  
 $A_2 = 0.192 \text{ m}^2$ ;  $p_2 = 55.0 \text{ kPa}$
- 12.10  $\dot{m} = 8.50 \text{ kg/s}$
- 12.11  $p_t = 33 \text{ psia}$ ;  $M_t = 0.90$ ;  $V_t = 1060 \text{ ft/s}$
- 12.12  $p_t = 166 \text{ kPa}$
- 12.13  $p = 150 \text{ kPa}$ ;  $M = 0.6$ ;  $A_t = 0.0421 \text{ m}^2$ ;  
 $\dot{m} = 18.9 \text{ kg/s}$
- 12.14  $\dot{m} = 0.548 \text{ kg/s}$
- 12.15  $A = 1.94 \times 10^{-3} \text{ m}^2$
- 12.16  $p_0 = 806 \text{ kPa}$ ;  $\dot{m} = 1.92 \text{ kg/s}$
- 12.17  $p_0 = 818 \text{ kPa}$ ;  $p_e = 432 \text{ kPa}$ ;  
 $T_e = -45.5^\circ\text{C}$ ;  $V_e = 302 \text{ m/s}$
- 12.18  $p_0 \geq 191 \text{ kPa}$ ;  $\dot{m} = 1.28 \text{ kg/s}$
- 12.19  $\dot{m} = 0.0107 \text{ lbm/s}$
- 12.20  $t = 68.4 \text{ s}$ ;  $\Delta s = 0.0739 \text{ Btu/(lbm} \cdot ^\circ\text{R)}$
- 12.21  $R_x = 1560 \text{ N (to the left)}$
- 12.22  $T_0 = 188^\circ\text{C}$ ;  $\Delta A = -25.4 \text{ percent}$ ;  
 $p = 188 \text{ kPa}$ ;  $V = 393 \text{ m/s}$
- 12.23  $p = 687 \text{ kPa (abs)}$ ;  $\dot{m} = 0.0921 \text{ kg/s}$ ;  
 $a_{rfs} = 1.62 \text{ m/s}^2$
- 12.24  $p_0 = 988 \text{ kPa}$ ;  $p_e = 522 \text{ kPa}$ ;  
 $T_e = 58.7^\circ\text{C}$ ;  $V_e = 365 \text{ m/s}$ ,  $a = 1.25 \text{ m/s}^2$
- 12.25  $\dot{m} = 2.73 \text{ lbm/s}$ ;  $a_{rfs} = 99.8 \text{ ft/s}^2$
- 12.26  $R_x = 304 \text{ lbf, tension}$
- 12.27  $A_2 = 0.0340 \text{ m}^2$ ;  $V_2 = 424 \text{ m/s}$
- 12.28  $A_t = 0.377 \text{ in}^2$
- 12.29  $t = 23.6 \text{ s}$
- 12.30  $M_e = 1.00$ ;  $p_e = 381 \text{ kPa}$ ;  $p_t = 191 \text{ kPa}$ ;  
 $T \approx 288 \text{ K}$

- 12.31  $t = 23.5 \text{ s}$ ;  $\Delta s = 161 \text{ J}/(\text{kg} \cdot \text{K})$   
 12.32  $\dot{m} = 0.440 \text{ lbm/s}$   
 12.33  $p_0 = 115 \text{ psia}$ ;  $\dot{m} = 1.53 \text{ lbm/s}$ ;  
 $A_t = 0.593 \text{ in.}^2$   
 12.34  $p = 125 \text{ kPa (abs)}$ ;  $\dot{m} = 0.401 \text{ kg/s}$   
 12.35  $A = 2.99 \text{ in.}^2$ ;  $\dot{m} = 3.74 \text{ lbm/s}$   
 12.36  $V = 1300 \text{ m/s}$ ;  $\dot{m} = 87.4 \text{ kg/s}$   
 12.37  $A = 8.86 \times 10^{-4} \text{ m}^2$ ,  $1.50 \times 10^{-3} \text{ m}^2$   
 12.38  $\dot{m} = 3.57 \text{ lbm/s}$   
 12.39  $R_x = 950 \text{ N}$   
 12.40  $\dot{m} = 39.4 \text{ lbm/s}$ ;  $F_x = 9750 \text{ lbf}$   
 12.41  $p = 88.3 \text{ kPa (abs)}$ ;  $\dot{m} = 0.499 \text{ kg/s}$ ;  
 $K_x = 1030 \text{ N}$   
 12.42  $\dot{m} = 32.4 \text{ kg/s}$ ;  $A_e = 0.167 \text{ m}^2$ ;  
 $A_e/A_t = 19.4$   
 12.43  $p_t = 2740 \text{ psia}$ ;  $\dot{m} = 0.0437 \text{ lbm/s}$ ;  
 Thrust = 1.97 lbf; 36 percent;  
 $A_e = 7.52 \times 10^{-3} \text{ in}^2$   
 12.44  $p_0 = 5600 \text{ psia}$   
 12.45  $\dot{m} = 0.0726 \text{ kg/s}$ ;  $p \leq 33.5 \text{ kPa (abs)}$   
 12.46  $M = 0.20$ ;  $\dot{m} = 3.19 \times 10^{-3} \text{ kg/s}$ ;  
 $p = 47.9 \text{ kPa (abs)}$   
 12.47  $p = 18.5 \text{ psia}$ ;  $V = 1040 \text{ ft/s}$   
 12.48  $p = 477 \text{ kPa (abs)}$ ;  $\Delta s = 49.5 \text{ J}/(\text{kg} \cdot \text{K})$   
 12.49  $\dot{m} = 0.00321 \text{ kg/s}$ ;  $p_0 = 33.8 \text{ kPa (abs)}$ ;  
 $\Delta s = 314 \text{ J}/(\text{kg} \cdot \text{K})$   
 12.50  $\dot{m} = 0.0192 \text{ kg/s}$ ;  $T^* = 244 \text{ K}$ ;  
 $p^* = 53.4, 13.6 \text{ kPa (abs)}$   
 12.51  $T = 468 \text{ K}$ ;  $F = 60 \text{ N}$ ;  $\Delta s = 149 \text{ J}/(\text{kg} \cdot \text{K})$   
 12.52  $F = 822 \text{ lbf}$   
 12.53  $p_t = 56.6 \text{ psia}$ ;  $T = 433^\circ\text{R}$ ;  $p_0 = 27.8 \text{ psia}$ ;  
 $\dot{m} = 0.0316 \text{ lbm/s}$   
 12.54  $T = 238 \text{ K}$ ;  $p = 26.1 \text{ kPa (abs)}$ ;  
 $\Delta s = 172 \text{ J}/(\text{kg} \cdot \text{K})$   
 12.55  $M = 0.15$ ;  $T = 246 \text{ K}$ ,  $p_0 = 25.6 \text{ kPa}$ ;  
 $L = 8.41 \text{ m}$   
 12.56  $L = 1.27 \text{ m}$   
 12.57  $T = 459 \text{ K}$ ;  $L = 34.5 \text{ m}$   
 12.58  $L = 18.8 \text{ ft}$   
 12.63  $\bar{f} = 0.0122$ ;  $\Delta p = 13.0 \text{ psi}$   
 12.64  $L = 0.405 \text{ m}$   
 12.66  $p = 191 \text{ kPa (abs)}$ ;  $L = 5.02 \text{ m}$ ;  
 $\Delta s = 326 \text{ J}/(\text{kg} \cdot \text{K})$   
 12.67  $M = 0.25$ ; Added  
 12.68  $p = 153 \text{ psia}$   
 12.69  $M = 0.452$ ;  $L = 603 \text{ ft}$   
 12.70  $\Delta p = 16.6, 18.2, 18.1 \text{ psia}$   
 12.71  $Q = 1.84 \times 10^8 \text{ ft}^3/\text{day}$   
 12.72  $\delta Q/dm = 145 \text{ kJ/kg}$ ;  $\Delta p = 405 \text{ kPa}$   
 12.73  $\delta Q/dm = 243 \text{ Btu/lbm}$   
 12.74  $\delta Q/dm = 449 \text{ kJ/kg}$ ;  $\Delta s = 0.892 \text{ kJ}/(\text{kg} \cdot \text{K})$   
 12.75  $\dot{Q} = 111 \text{ kW}$ ;  $p_1 - p_2 = 1.30 \text{ MPa}$   
 12.76  $\delta Q/dm = 18 \text{ kJ/kg}$ ;  $\Delta s = 53.2 \text{ J}/(\text{kg} \cdot \text{K})$ ;  
 $\Delta p_0 = 2.0 \text{ kPa}$   
 12.77  $V = 1520 \text{ ft/s}$ ;  $T = 2310^\circ\text{R}$ ;  
 $\dot{Q} = 740 \text{ Btu/s}$   
 12.78  $p = 209 \text{ psia}$ ;  $\dot{Q} = 2270 \text{ Btu/s}$ ;  
 $\dot{m}_f = 0.126 \text{ lbm/s}$   
 12.79  $\delta Q/dm = 330 \text{ Btu/lbm}$ ;  $\Delta p_0 = -1.94 \text{ psia}$   
 12.80  $V = 866 \text{ m/s}$ ;  $p = 46.4 \text{ kPa}$ ;  $M = 1.96$ ;  
 $\delta Q/dm = 156 \text{ kJ/kg}$   
 12.81  $M = 0.50$ ;  $T_0 = 1560 \text{ K}$ ;  $\dot{Q} = 1.86 \text{ MJ/s}$   
 12.82  $\Delta p_0 = -22 \text{ kPa}$ ;  $\delta Q/dm = 447 \text{ kJ/kg}$ ;  
 $\Delta s = 889 \text{ J}/(\text{kg} \cdot \text{K})$   
 12.83  $\delta Q/dm = 17.0 \text{ kJ/kg}$ ;  $T = 318 \text{ K}$ ;  
 $p = 46.3 \text{ kPa}$ ;  $p_0 = 87.7 \text{ kPa}$   
 12.84  $M = 1.0$ ;  $p = 48.8 \text{ kPa}$ ;  
 $\Delta p_0 = -8.60 \text{ kPa}$   
 12.85  $\dot{Q} = 5.16 \times 10^4 \text{ Btu/s}$   
 12.86  $\delta Q/dm = 313 \text{ Btu/lbm}$ ;  $\Delta p_0 = -34 \text{ psia}$   
 12.87  $T_0 = 764 \text{ K}$ ;  $\dot{m} = 0.0215 \text{ kg/s}$ ;  
 $A_e/A_t = 4.23$   
 12.88  $T_0 = 966 \text{ K}$ ;  $M = 0.60$ ;  
 $\delta Q/dm = 343 \text{ kJ/kg}$ ; Fraction = 0.616  
 12.91  $M_2 = 1.74$ ;  $p_2 = 4.49 \text{ psia}$   
 12.93  $V = 536 \text{ m/s}$   
 12.94  $p_0 = 7.22 \text{ psia}$ ;  $T_0 = 954^\circ\text{R}$   
 12.95  $\rho = 0.359 \text{ lbm/ft}^3$ ;  $M = 0.701$   
 12.96  $V = 247 \text{ m/s}$ ;  $T = 670 \text{ K}$ ;  
 $\Delta s = 315 \text{ J}/(\text{kg} \cdot \text{K})$   
 12.97  $p = 28.1, 85.7 \text{ psia}$   
 12.98  $T = 520 \text{ K}$ ;  $p_0 = 1.29 \text{ MPa}$   
 12.99  $V = 257 \text{ m/s}$ ;  $M = 0.493$ ;  
 $\Delta p_0 = -512 \text{ kPa}$   
 12.100  $V = 255 \text{ m/s}$ ;  $\Delta p = 473, 842 \text{ kPa}$   
 12.101  $T_0 = 426 \text{ K}$ ;  $p_0 = 207, 130 \text{ kPa}$   
 12.102  $M = 2.48$ ;  $V = 2420 \text{ ft/s}$ ;  $p = 24.3 \text{ psia}$ ;  
 $p_0 = 29.1 \text{ psia}$   
 12.103  $T = 414 \text{ K}$ ;  $p = 51.9 \text{ kPa}$ ;  $p_0 = 57.9 \text{ kPa}$   
 12.104  $M = 0.545$ ;  $p = 514 \text{ kPa}$ ;  $p_0 = 629 \text{ kPa}$ ;  
 $A = 0.111 \text{ m}^2$   
 12.105  $A = 2.32 \text{ ft}^2$ ;  $\Delta s = 0.0423 \text{ Btu/lbm} \cdot ^\circ\text{R}$   
 12.106  $\Delta p_0 = -14.1 \text{ psi}$ ;  
 $\Delta s = 0.0591 \text{ Btu}/(\text{lbm} \cdot ^\circ\text{R})$   
 12.107  $M = 2.20$ ;  $p_0 = 178 \text{ kPa}$ ;  
 $V_s = 568 \text{ m/s}$   
 12.108  $T_0 = 533 \text{ K}$ ;  $\Delta p = 37.4 \text{ kPa}$ ;  
 $\Delta s = 30.0 \text{ J}/(\text{kg} \cdot \text{K})$ ;  $p_0 = 116 \text{ kPa}$

- 12.109  $V = 265, 279 \text{ m/s}$   
 12.110  $p = 33.4 \text{ kPa}; V = 162 \text{ m/s}$   
 12.111  $M = 1.45; \dot{m} = 0.808 \text{ lbm/s}$   
 12.112  $M = 0.701; p = 167 \text{ kPa};$   
 $\Delta s = 20.9 \text{ J/(kg} \cdot \text{K)}$   
 12.113  $M = 1.92; p = 89.4, 58.6, 14.5 \text{ psia}$   
 12.114  $M = 2.94; p_0 = 3.39 \text{ MPa};$   
 $p = 3.35, 1.00 \text{ MPa}, 101 \text{ kPa}$   
 12.115  $p = 301 \text{ kPa}$   
 12.116  $p = 46.7 \text{ psia}; A = 1.52 \text{ in.}^2;$   
 $\dot{m} = 2.55 \text{ lbm/s}$   
 12.117  $p = 587 \text{ kPa}; A_e = 756 \text{ mm}^2;$   
 $A = 448 \text{ m}^2$   
 12.118  $M = 1.50$   
 12.119  $33.4 < p_b < 99.6 \text{ kPa};$   
 $\dot{m} = 0.121 \text{ kg/s}$   
 12.120  $M = 2.12; V = 2000 \text{ ft/s}$   
 12.121  $P_{\text{atm}} < p_0 < 112 \text{ kPa}$  and  $p_0 > 743 \text{ kPa}$   
 12.122  $p = 66.6 \text{ psia}$   
 12.123  $p = 301 \text{ kPa (abs)}$   
 12.125  $M = 0.475; p_0 = 361 \text{ kPa}; T_0 = 400 \text{ K};$   
 $A_r = 118 \text{ mm}^2; s_2 - s_1 =$   
 $-0.320 \text{ kJ/(kg} \cdot \text{K)}; M_e = 0.377$   
 12.127  $M = 2.14$   
 12.128  $V = 2140 \text{ ft/s}; \Delta s = 0.0388 \text{ Btu/(lbm} \cdot \text{°R)}$   
 12.129  $M_2 = 2.06; p_2 = 93.4 \text{ kPa}; \theta = 3.72^\circ;$   
 Normal shock:  $M_2 = 0.547;$   
 $p_2 = 411 \text{ kPa}; \beta = 27^\circ$   
 12.130  $\beta = 19.5^\circ - 90^\circ$   
 12.131  $\theta = 25^\circ; \beta = 46.7^\circ; M_2 = 1.56$   
 12.132  $\beta = 66.2^\circ; p_2/p_1 = 6.06$   
 12.133  $M = 1.42; V = 484 \text{ m/s}$   
 12.136  $F_L/w = 138 \text{ kN/m}$   
 12.137  $F_L/w = 183 \text{ kN/m}$   
 12.138  $p_1 = 36.6 \text{ kPa}; p_2 = 15.9 \text{ kPa}$   
 12.141  $p_0 = 1317 \text{ kPa}, p = 497 \text{ kPa};$   
 $p_0 = 3814 \text{ kPa}, p = 571 \text{ kPa}$   
 12.142  $F_L/w = 64.3 \text{ kN/m}; D = 13.7 \text{ kN/m}$   
 12.144  $C_D = 0.0177$

---

---

# INDEX

- Absolute metric (system of units), 12  
Absolute pressure, 56  
Absolute viscosity, 28  
Acceleration:  
  convective, 199  
  gravitational, 11  
  local, 199  
  of particle in velocity field, 197, 199  
    cylindrical coordinates, 200  
    rectangular coordinates, 200  
Accelerometer, 100  
Adiabatic flow, *see* Fanno-line flow  
Adiabatic process, 592  
Adverse pressure gradient, 38, 409, 430  
Aging of pipes, 341  
Anemometer:  
  Laser Doppler, 382  
  thermal, 382  
Angle of attack, 448  
Angular deformation, 197, 203, 207  
Angular-momentum principle, 103, 145  
  fixed control volume, 145  
  rotating control volume, S-13  
Apparent viscosity, 31  
Apparent shear stress, 330  
Archimedes' principle, 81  
Area, centroid of, 69  
  second moment of, 70  
  product of inertia of, 71  
Area ratio, 343  
  isentropic flow, 628  
Aspect ratio:  
  airfoil, 453  
  flat plate, 438  
  rectangular duct, 348  
Atmosphere:  
  isothermal, 66  
  standard, 56  
Average velocity, 110, 311  
  
Barometer, 64  
Barotropic fluid, 40  
Barrels, U.S. petroleum industry, 353, 405  
Basic equation of fluid statics, 52  
Basic equations for control volume, 102  
  angular-momentum principle, for inertial control  
  volume, 145  
  for rotating control volume, S-13  
  conservation of mass, 109  
  first law of thermodynamics, 150  
  Newton's second law (linear momentum), for control  
  volume moving with constant velocity, 134  
  for control volume with arbitrary acceleration, S-7  
  for control volume with rectilinear acceleration, 137  
  for differential control volume, 129  
  for nonaccelerating control volume, 116  
  second law of thermodynamics, 151  
Basic laws for system, 102  
  angular-momentum principle, 103  
  conservation of mass, 102  
  first law of thermodynamics, 103  
  Newton's second law (linear momentum), 103  
    differential form, 212  
    second law of thermodynamics, 104  
Basic pressure-height relation, 55  
Bearing, journal, 318  
Bernoulli equation, 132, 237  
  applications, 243  
  cautions on use of, 248  
  interpretation as an energy equation, 249  
  irrotational flow, S-21  
  restrictions on use of, 238  
  unsteady flow, S-18  
Bingham plastic, 31  
Blasius' solution, S-39  
Blower, 488, 548  
Body force, 24  
Borda mouthpiece, 268  
Boundary layer, 37, 410  
  displacement thickness, 412  
  effect of pressure gradient on, 430  
  flat plate, 411  
  integral thicknesses, 413  
  laminar:  
    approximate solution, 422  
    exact solution, S-39  
  momentum integral equation for, 415, 420  
  momentum-flux profiles, 432  
  momentum thickness, 413  
  separation, 430  
  shape factor, 432  
  thickness, 412  
  transition, 411  
  turbulent, 426  
  velocity profiles, 432



- Boundary-layer:  
 control, 455, 461  
 thicknesses, 412  
 British gravitational (system of units), 12  
 Buckingham Pi theorem, 277  
 Bulk (compressibility) modulus, 40, 599, 718  
 Buoyancy force, 80
- Camber, 448  
 Capillary effect, 33, 282  
 Capillary viscometer, 327  
 Cavitation, 40, 524  
 Cavitation number, 285, 560  
 Center of pressure, 68, 69  
 Choking, 632, 638, 646, 661, S-48, S-49  
 Chord, 448  
 Circulation, 205, S-38  
 Coanda effect, 160  
 Compressible flow, 40, 589, 617  
 basic equations for, 617  
 ideal gas, 620  
 flow functions for computation of, 744  
 Compressor, 488, 548  
 Concentric-cylinder viscometer, 48  
 Confidence limit, 757  
 Conical diffuser, 344  
 Conservation:  
 of energy, *see* First law of thermodynamics  
 of mass, 102, 109, 184  
 cylindrical coordinates, 189  
 rectangular coordinates, 184  
 Consistency index, 31  
 Contact angle, 32, 720  
 Continuity, *see* Conservation of mass  
 Continuity equation, differential form, 184  
 cylindrical coordinates, 189  
 rectangular coordinates, 184  
 Continuum, 17  
 Contraction coefficient, 268, 396  
 Control surface, 7  
 Control volume, 7  
 deformable, 108  
 rate of work done by, 151  
 Convective acceleration, 199  
 Converging-diverging nozzle, *see* Nozzle  
 Converging nozzle, *see* Nozzle  
 Conversion factors, 762  
 Creeping flow, 387  
 Critical conditions, compressible flow, 610  
 Critical flow in open channel, 285  
 Critical pressure ratio, 610, 632  
 Critical Reynolds number, *see* Transition  
 Critical speed:  
 compressible flow, 611  
 Curl, 204, S-22  
 Cylinder:  
 drag coefficient, 441  
 inviscid flow around, S-33, S-35
- D'Alembert paradox, 35, S-33  
 Deformation:  
 angular, 197, 203, 207  
 linear, 197, 209  
 rate of, 27, 208  
 Del operator:  
 cylindrical coordinates, 190, S-2, S-22  
 rectangular coordinates, 54, 186  
 Density, 17  
 Density field, 18  
 Derivative, substantial, 199  
 Design conditions, *see* Nozzle  
 Differential equation, nondimensionalizing, 273  
 Diffuser, 343, 361, 488, 624  
 optimum geometries, 344  
 pressure recovery in, 344  
 supersonic, S-46  
 Dilatant, 31  
 Dilation, volume, 210  
 Dimension, 10  
 Dimensional homogeneity, 11  
 Dimensional matrix, 282  
 Dimensions of flow field, 20  
 Discharge coefficient, 371  
 flow nozzle, 374  
 orifice plate, 373  
 venturi meter, 376  
 Displacement thickness, 412  
 Disturbance thickness, *see* Boundary layer  
 Doppler effect, 382, 602  
 Doublet, S-28  
 strength of, S-28  
 Downwash, 453  
 Draft tube, 490, 513  
 Drag, 35, 410, 433  
 form, 38, 454  
 friction, 434, 438  
 parasite, 460  
 pressure, 38, 437, 438  
 profile, 454  
 Drag coefficient, 293, 434  
 airfoil, 454  
 complete aircraft, 455  
 cylinder, 441  
 rotating, 464  
 flat plate normal to flow, 438  
 flat plate parallel to flow, 434  
 golf balls, 462  
 induced, 453  
 selected objects, 439  
 sphere, 439, 480  
 spinning, 461  
 streamlined strut, 445  
 supersonic airfoil, 696  
 vehicle, 293  
 Dynamic pressure, 239, 240  
 Dynamic similarity, 286  
 Dynamic viscosity, 28  
 Dyne, 12

- Efficiency:  
  hydraulic turbine, 502  
  propeller, 558, 586  
  propulsive, 557  
  pump, 295, 501  
  windmill, 567
- Elementary plane flows, *see* Potential flow theory
- End-plate, 455
- Energy equation, for pipe flow, 334. *See also*  
  First law of thermodynamics
- Energy grade line, 254, 361, 364
- English Engineering (system of units), 12
- Enthalpy, 153, 590
- Entrance length, 312
- Entropy, 591
- Equation of state, 5, 620  
  ideal gas, 5, 589
- Equations of motion, *see* Navier-Stokes equations
- Equivalent length, 342  
  bends, 346  
  fittings and valves, 346  
  miter bends, 346
- Euler equations, 215, 232  
  along streamline, 234  
  cylindrical coordinates, 233  
  normal to streamline, 235  
  rectangular coordinates, 233  
  streamline coordinates, 234
- Eulerian method of description, 10, 201
- Euler number, 285
- Euler turbomachine equation, 491
- Experimental uncertainty, 2, 755
- Extensive property, 104
- External flow, 41, 409
- Fan, 488, 542  
  "laws," 297, 545  
  selection procedure, 735  
  specific speed, 546
- Fanno-line flow, 643, 645  
  basic equations for, 644  
  choking length, 653, S-49  
  effects on properties, 646  
  flow functions for computation of, 649, 746  
  normal shock formation in, S-49  
  *T*<sub>s</sub> diagram, 646
- Field representation, 18
- First law of thermodynamics, 103, 150
- Fittings, losses in, *see* Head loss, in valves and fittings
- Flap, 455
- Flat plate, flow over, 411
- Float-type flow meter, 380
- Flow behavior index, 31
- Flow coefficient, 296, 372  
  flow nozzle, 374, 375  
  orifice plate, 374  
  turbomachine, 514
- Flow field, dimensions of, 20
- Flow measurement, 369  
  internal flow, 370  
  direct methods, 369  
  linear flow meters, 380  
  electromagnetic, 381  
  float-type, 380  
  rotameter, 380  
  turbine, 380  
  ultrasonic, 382  
  vortex shedding, 380  
  restriction flow meters, 370  
  flow nozzle, 374  
  laminar flow element, 376  
  orifice plate, 373  
  venturi, 376  
  traversing methods, 382  
  laser Doppler anemometer, 382  
  thermal anemometer, 382
- Flow meter, *see* Flow measurement
- Flow nozzle, 374
- Flow visualization, 21, 292
- Fluid, 3
- Fluid machinery, 487  
  dynamic, *see* Turbomachine  
  fan, 488  
  performance characteristics, 502  
  positive displacement, 487  
  propeller, 489  
  pump, 488  
  turbine, 489
- Fluid particle, 19
- Fluid properties, 716
- Fluid statics:  
  basic equation of, 52  
  pressure-height relation, 55
- Fluid system, 347, 528
- Force:  
  body, 24  
  buoyancy, 81  
  compressibility, 284  
  drag, 433  
  gravity, 284  
  hydrostatic, 67  
  on curved submerged surface, 76  
  on plane submerged surface, 67  
  inertia, 282  
  lift, 433, 447  
  pressure, 53, 284, 433  
  shear, 433  
  surface, 24, 433  
  surface tension, 32, 33, 284  
  viscous, 284
- Forced vortex, 206
- Francis turbine, 490, 513
- Free surface, S-3, S-5
- Free vortex, 206, S-28
- Friction drag, *see* Drag
- Friction factor, 336, 338, 339  
  Darcy, 338

- Friction factor (*continued*)  
 data correlation for, 339, 340  
 Fanning, 338, 396  
 laminar flow, 340  
 smooth pipe correlation, 341
- Frictionless flow:  
 compressible adiabatic, *see* Isentropic flow  
 compressible with heat transfer, *see* Rayleigh-line flow  
 incompressible, 232
- Friction velocity, 302, 331
- Froude number, 285
- Froude speed of advance, 304
- Fully developed flow, 311  
 laminar, 312  
 turbulent, 330
- Fully rough flow regime, 339, 341
- $g_c$ , 11
- Gage pressure, 56
- Gas constant:  
 ideal gas equation of state, 5, 590, 726  
 universal, 590, 726
- Geometric similarity, 286
- Gibbs equations, 592
- Grade line 254  
 energy, 255, 361, 364  
 hydraulic, 255, 361, 364
- Gradient, 54
- Gravity, acceleration of, 11
- Guide vanes, 490
- Head, 254, 336, 493  
 gross, 509, 513  
 pump, 347, 501, 529  
 net, 509, 513  
 shutoff, 500
- Head coefficient, 296, 514
- Head loss, 335  
 in diffusers, 345  
 in enlargements and contractions, 343  
 in exits, 342  
 in gradual contractions, 344  
 in inlets, 343  
 major, 329, 336  
 minor, 329, 341  
 in miter bends, 346  
 in nozzles, 344  
 permanent, 377  
 in pipe bends, 346  
 in pipe entrances, 343  
 in pipes, 336  
 in sudden area changes, 343  
 total, 336  
 in valves and fittings, 346
- Head loss coefficient, 341
- Heat transfer, sign convention for, 104, 150
- Hydraulic accumulator, 163
- Hydraulic diameter, 348, 650
- Hydraulic grade line, 255, 361, 364
- Hydraulic jump, 190
- Hydraulic power, 501, 502
- Hydraulic systems, 67
- Hydraulic turbine, 490, 561
- Hydrometer, 97
- Hydrostatic force, 67  
 on curved submerged surfaces, 76  
 on plane submerged surfaces, 68
- Hydrostatic pressure distribution, 69, 121
- Hypersonic flow, 600
- Ice, 717
- Ideal fluid, S-22
- Ideal gas, 5, 589
- Impeller, 488
- Incomplete similarity, 289
- Incompressible flow, 40, 106, 187, 192
- Incompressible fluid, 57
- Induced drag, 453
- Inertial control volume, 116, 134
- Inertial coordinate system, 116, 137
- Intensive property, 104
- Internal energy, 590
- Internal flow, 41, 310
- Inviscid flow, 36, 232
- Irreversible process, 592
- Irrotational flow, 205, S-20
- Irrotationality condition, S-20
- Irrotational vortex, 207, S-28
- Isentropic expansion waves, 690  
 basic equations for, 691  
 on an airfoil, 694  
 Prandtl-Meyer expansion function, 693, 754
- Isentropic flow, 621  
 basic equations for, 621  
 ideal gas, 621  
 in converging-diverging nozzle, 637  
 in converging nozzle, 631  
 effect of area variation on, 621, 623  
 flow functions for computation of, 627, 744  
 in  $h_s$  plane, 622  
 reference conditions for, 625
- Isentropic process, 592
- Isentropic stagnation properties, 602  
 for ideal gas, 603, 606
- Isothermal flow, S-44
- Jet pump, 163
- Journal bearing, 318
- Kaplan turbine, 490, 513
- Kilogram force, 577
- Kinematic similarity, 286
- Kinematics of fluid motion, 197
- Kinematic viscosity, 28
- Kinetic energy coefficient, 335
- Kinetic energy ratio, 309



- Lagrangian method of description, 8, 201
- Laminar boundary layer, 422, S-39  
 flat plate approximate solution, 422  
 flat plate, exact solution, S-39
- Laminar flow, 39, 310  
 between parallel plates, 312  
 both plates stationary, 312  
 one plate moving, 318  
 in pipe, 324
- Laminar flow element (LFE), 376
- Laplace's equation, S-23
- Lapse rate, 613
- Lift, 410, 433, 447
- Lift coefficient, 448  
 airfoil, 450  
 rotating cylinder, 464  
 spinning golf ball, 462  
 spinning sphere, 461  
 supersonic airfoil, 696
- Lift/drag ratio, 452
- Linear deformation, 197, 209
- Linear momentum, *see* Newton's second law of motion
- Local acceleration, 199
- Loss, major and minor, *see* Head loss
- Loss coefficient, *see* Head loss
- Lubricating oil, 724, 725
- Mach angle, 602
- Mach cone, 601
- Mach number, 40, 286, 596
- Magnus effect, 463
- Major loss, *see* Head loss
- Manometer, 57  
 capillary effect in, 33  
 multiple liquid, 62  
 reservoir, 59  
 sensitivity, 59  
 U-tube, 58
- Material derivative, 199
- Mean line, 448
- Measurement, flow, *see* Flow measurement
- Mechanical energy, 252, 335
- Mechanical flow meter, *see* Flow measurement
- Mechanical power, 492
- Meniscus, 33, 282
- Meridional, 514
- Meter, flow, *see* Flow measurement
- Methods of description:  
 Eulerian, 10, 201  
 Lagrangian, 8, 201
- Metric horsepower, 577
- Mile, nautical, 763
- Minor loss, *see* Head loss
- Minor loss coefficient, *see* Head loss coefficient
- Model studies, 286
- Model test facilities, 299
- Modulus of elasticity, 40
- Molecular mass, 590, 726
- Momentum:  
 angular, *see* Angular-momentum principle  
 coefficient, 394  
 linear, *see* Newton's second law of motion
- Momentum equation:  
 differential form, 211  
 for control volume moving with constant velocity, 134  
 for control volume with arbitrary acceleration, S-7  
 for control volume with rectilinear acceleration, 137  
 for differential control volume, 129  
 for inertial control volume, 116  
 for inviscid flow, 232
- Momentum flux, 117
- Momentum integral equation, 415, 420  
 for zero pressure gradient flow, 421
- Momentum thickness, 413
- Moody diagram, 339
- National Transonic Facility (NTF), 299, 613
- Nautical mile, 763
- Navier-Stokes equations, 213  
 cylindrical coordinates, 730  
 rectangular coordinates, 214
- Net positive suction head, 524
- Network, pipe, 364
- Newton, 12
- Newtonian fluid, 28, 213
- Newton's second law of motion, 103
- Noncircular duct, 348
- Noninertial reference frame, 131, S-7
- Non-Newtonian fluid, 28, 30  
 apparent viscosity, 31  
 consistency index, 31  
 flow behavior index, 31  
 power-law model, 31  
 pseudoplastic, 31  
 rheopectic, 32  
 thixotropic, 32  
 time-dependent, 32  
 viscoelastic, 32
- Normal shock, 669  
 basic equations for, 670  
 effects on properties, 672  
 flow functions for computation of, 672, 750  
 supersonic channel flow with, 678, S-46  
 $T_s$  diagram, 671, 672
- Normal stress, 25, 145, 214
- No-slip condition, 3, 37, 311
- Nozzle, 243, 624  
 choked flow in, 632, 638  
 converging, 624, 631  
 converging-diverging, 625, 637, 678  
 design conditions, 639  
 incompressible flow through, 243  
 normal shock in, 678  
 overexpanded, 639  
 underexpanded, 639
- Oblique shock, 680  
 basic equations for, 681  
 comparison with normal shock, 684  
 deflection angle, 687, 753

- Oblique shock (*continued*)  
 flow functions for computation of, 684, 752  
 on an airfoil, 688  
 shock angle, 687
- One-dimensional flow, 20
- Open-channel flow, 41
- Orifice, reentrant, 268
- Orifice plate, 373
- Overexpanded nozzle, 639
- Particle derivative, 199
- Pascal, 762
- Pathline, 21
- Pelton wheel, 509
- Permanent head loss, *see* Head loss
- Physical properties, 716
- Pipe:  
 aging, 341, 581  
 compressible flow in, *see* Fanno-line flow  
 head loss, *see* Head loss  
 laminar flow in, 325  
 noncircular, 348  
 roughness, 337, 338  
 standard sizes, 351  
 turbulent flow in, 330, 337
- Pipe systems, 350  
 networks, 364  
 pumps in, 347, 529  
 single-path, 350
- Pi theorem, 277
- Pitch, 558
- Pitot-static tube, 241
- Pitot tube, 241
- Planform area, 446, 448
- Poise, 28
- Polar plot, lift-drag, 452
- Potential, velocity, S-22
- Potential flow theory, S-23  
 elementary plane flows, S-25  
 doublet, S-28  
 sink, S-25  
 source, S-25  
 uniform flow, S-25  
 vortex, S-28  
 superposition of elementary plane flows, S-28
- Potential function, S-22
- Power coefficient 296, 515, 558
- Power-law model, non-Newtonian fluid, 31
- Power-law velocity profile, 332
- Prandtl boundary layer equations, 301, S-39
- Pressure, 53, 56  
 absolute, 56  
 center of, 68, 69  
 dynamic, 239, 240  
 gage, 56  
 isentropic stagnation, *see* Isentropic stagnation properties  
 stagnation, 239, 240  
 static, 239  
 thermodynamic, 214, 239
- Pressure coefficient, 285, 343
- Pressure distribution:  
 airfoil, 446, 451  
 automobile, 460  
 converging-diverging nozzle, 637, 678  
 converging nozzle, 632  
 cylinder, inviscid flow, S-33, S-35  
 diffuser, 361, 431  
 entrance length of pipe, 359  
 sphere, 440  
 supersonic airfoil, 688, 694, 696
- Pressure drag, *see* Drag
- Pressure field, 53
- Pressure force, 53
- Pressure gradient, 54, 431  
 effect on boundary layer, 430
- Pressure recovery coefficient, 343  
 ideal, 344
- Pressure surface, 448
- Pressure tap, 240, 373
- Primary dimension, 10, 278
- Profile, velocity, *see* Velocity profile
- Propeller, 489, 554  
 actuator disk, 554  
 efficiency, 558  
 pitch, 558  
 power coefficient, 558  
 propulsive efficiency, 557  
 solidity, 557  
 speed of advance coefficient, 558  
 thrust coefficient, 558  
 torque coefficient, 558
- Properties, fluid, 716  
 air, 728  
 water, 716, 727
- Propulsive efficiency, 557
- Pseudoplastic, 31
- Pump, 488, 531  
 in fluid system, 347, 529  
 "laws," 297, 520  
 operating point, 529  
 parallel operation, 538  
 positive displacement, 549  
 selection procedure, 733  
 series operation, 537  
 specific speed, 516  
 variable-speed operation, 539
- Rankine propeller theory, 556
- Rate of deformation, 27, 208
- Rayleigh-line flow, 657  
 basic equations for, 658  
 choking, 661, S-49  
 effects on properties, 660  
 flow functions for computation of, 664, 748  
 maximum heat addition, 661  
 $T_s$  diagram, 659, 661
- Reentrant entrance, 268
- Reference frame, noninertial, 131, S-7

- Repeating parameter, 279
- Reversible process, 592
- Reynolds experiment, 310
- Reynolds number, 36, 284
  - critical, *see* Transition
- Reynolds stress, 330
- Reynolds transport theorem, 107
- Rheopectic, 32
- Rigid-body, motion of fluid, S-1
- Rotation, 197, 203
- Rotor, turbomachine, 489
- Roughness, pipe, 337, 338
- Runner, turbomachine, 489
  
- Secondary dimension, 11
- Secondary flow, 345
- Second law of thermodynamics, 104, 157
- Separation, 38, 430
- Shaft work, 151
- Shape factor, velocity profile, 432
- Shear rate, 28
- Shear stress, 3, 25
  - distribution in pipe, 329
- Shear work, 152
- Shock, normal, *see* Normal shock
- Shock, oblique, *see* Oblique shock
- Shockless entry flow, 493
- Shutoff head, 500
- Significant figures, 2
- Similarity:
  - dynamic, 286
  - geometric, 286
  - incomplete, 289
  - kinematic, 286
  - rules, 519
- Similar velocity profiles, 421, S-39, S-40
- Similitude, 275
- Sink, S-25
  - strength of, S-25
- Siphon, 244, 402
- SI units, 11, 762
  - prefixes, 762
- Skin friction coefficient, 423, 427, S-41
- Slug, 12
- Sluice gate, 125, 245
- Solidity, 489, 557
- Sound, speed of, 596, 599
- Source, S-25
  - strength of, S-25
- Span, wing, 453
- Specific gravity, 18, 716, 717, 718
- Specific heat:
  - constant pressure, 590, 726
  - constant volume, 590, 726
- Specific heat ratio, 591, 726
- Specific speed, 297, 515, 516, 546
- Specific volume, 153, 590
- Specific weight, 19
- Speed of advance coefficient, 558
- Speed of sound, 596
  - ideal gas, 599
  - solid and liquid, 599
- Sphere:
  - drag coefficient, 439
  - flow around, 37
  - inviscid flow around, 37
  - pressure distribution, 440
- Spin ratio, 461
- Stability, 80
- Stage, 488
- Stagnation enthalpy, 615, 619
- Stagnation point, 37, 410, S-34, S-36
- Stagnation pressure, 239, 240
  - isentropic, *see* Isentropic stagnation properties
- Stagnation pressure probe, 241
- Stagnation properties, *see* Isentropic stagnation properties
- Stagnation state, 602
- Stagnation temperature, 606
- Stall, wing, 449
- Standard atmosphere, 56
  - properties of, 57, 719
- Standard cubic foot (of gas), 16
- Standard pipe sizes, 351
- State:
  - equation of, 5
  - thermodynamic, 590
- Static fluid, pressure variation in, 57
- Static pressure, 239
- Static pressure probe, 240
- Static pressure tap, 239
- Steady flow, 19, 110, 187, 192
- Stoke, 28
- Stokes' drag law, 439
- Stokes' theorem, 206
- STP (standard temperature and pressure), 17, 726
- Streakline, 21
- Stream function, 193, 195
- Streamline, 21
  - equation of, 22, 193
- Streamline coordinates, 233, 237
- Streamline curvature, 235, 459
- Streamlining, 38, 445
- Stream tube, 250
- Stress, 24
  - components, 26, 214, 730
  - compressive, 53
  - normal, 25, 145, 214, 730
  - notation, 25
  - shear, 25, 214, 730
  - sign convention, 26
  - yield, 31
- Stress field, 24
- Stresses, Newtonian fluid, 214
- Strouhal number, 381, 442
- Substantial derivative, 199
- Suction surface, 448
- Sudden expansion, 343


- Superposition, of elementary plane flows, S-28
  - direct method of, S-29
  - inverse method of, S-33
- Surface force, 24
- Surface tension, 32, 720
- System, 5
- System head curves, 529
- System derivative, 104
  - relation to control volume, 107
- Systems:
  - of dimensions, 11
  - of units, 11
  
- Taylor series expansion, 53, 184, 189, 204, 212, 314, 417, 418, 419
- Tds* equations, 592
- Terminal speed, 8
- Thermodynamic pressure, *see* Pressure
- Thermodynamics, review of, 589
- Thixotropic, 32
- Three-dimensional flow, 20
- Throat, nozzle, 624
- Thrust coefficient, 558
- Timeline, 21
- Torque coefficient, 514, 558
- Total head tube, 241
- Trailing vortex, 452
- Transition, 311, 411, 440
- Translation, 197
- Transonic flow, 600
- Ts* diagram, 595
- Turbine, 489
  - hydraulic, 489, 561
  - impulse, 489, 509
  - reaction, 490, 513
  - specific speed, 516
  - wind, 566
- Turbine flow meter, 381
- Turbomachine, 487
  - axial flow, 488
  - centrifugal, 488
  - fan, 488
  - flow coefficient, 296, 514
  - head coefficient, 296, 514
  - mixed flow, 489
  - pump, 488
  - power coefficient, 296, 515
  - radial flow, 487
  - scaling laws for, 296
  - specific speed, 297, 515
  - stage, 488
  - torque coefficient, 514
- Turbulent boundary layer, approximate solution
  - for flat plate, 426
- Turbulent flow, 39, 310
- Turbulent pipe flow, 329
  - fluctuating velocity, 330
  - mean velocity, 330
  - shear stress distribution, 330
  - velocity profile, 331
    - buffer layer, 332
    - logarithmic, 331
    - power-law, 332
    - velocity defect, 332
    - viscous sublayer, 331
    - wall layer, 330
- Two-dimensional flow, 20
  
- Uncertainty, experimental, 2, 755
- Underexpanded nozzle, 639
- Uniform flow at a section, 20, 111
- Uniform flow field, 21
- Units, 11, 762
- Universal gas constant, 590, 726
- Unsteady Bernoulli equation, S-18
- Unsteady flow, 20
  
- Vapor pressure, 40
- Vector, differentiation of, 190, 199
- Velocity diagram, 493
- Velocity field, 19
- Velocity measurement, *see* Flow measurement
- Velocity of approach factor, 372
- Velocity potential, S-22
- Velocity profile, 37
  - in pipe flow, laminar, 326
  - turbulent, 331
- Vena contracta, 342, 361, 370
- Venturi flowmeter, 376
- Videotapes, fluid mechanics, 731
- Viscoelastic, 32
- Viscometer:
  - capillary, 327
  - concentric cylinder, 48, 219
  - cone-and-plate, 49
- Viscosity, 27, 28
  - absolute (or dynamic), 28, 722
  - apparent, 31
  - kinematic, 28, 723
  - physical nature of, 720
- Viscous flow, 36
- Viscous sublayer, 331
- Visualization, flow, 21, 292
- Volume dilation, 210
- Volume flow rate, 110
- Vortex:
  - forced, 206
  - free, 206, S-27
  - irrotational, 207, S-28
  - strength of, S-28
  - trailing, 442, 452
- Vortex shedding, 306, 442, 452
- Vorticity, 205
  - cylindrical coordinates, 205
  
- Wake, 38, 410
- Wall shear stress, 329, 423, 427, S-41
- Water hammer, 40, 304

Water, properties of, 716, 727, 728  
Weber number, 285  
Weight, 13  
Weir, 302  
Wetted area, 434  
Wetted perimeter, 348, 650  
Windmill, 565  
Wind tunnel, 293, 299  
    supersonic, S-47  
Wind turbine, 566  
    efficiency, 567  
Winglet, 455  
Wing loading, 453

Wing span, 453  
Work, rate of, 151  
    shaft, 151  
    shear, 152  
    sign convention for, 104, 151

Yield stress, 31

Zone:  
    of action, 602  
    of silence, 602

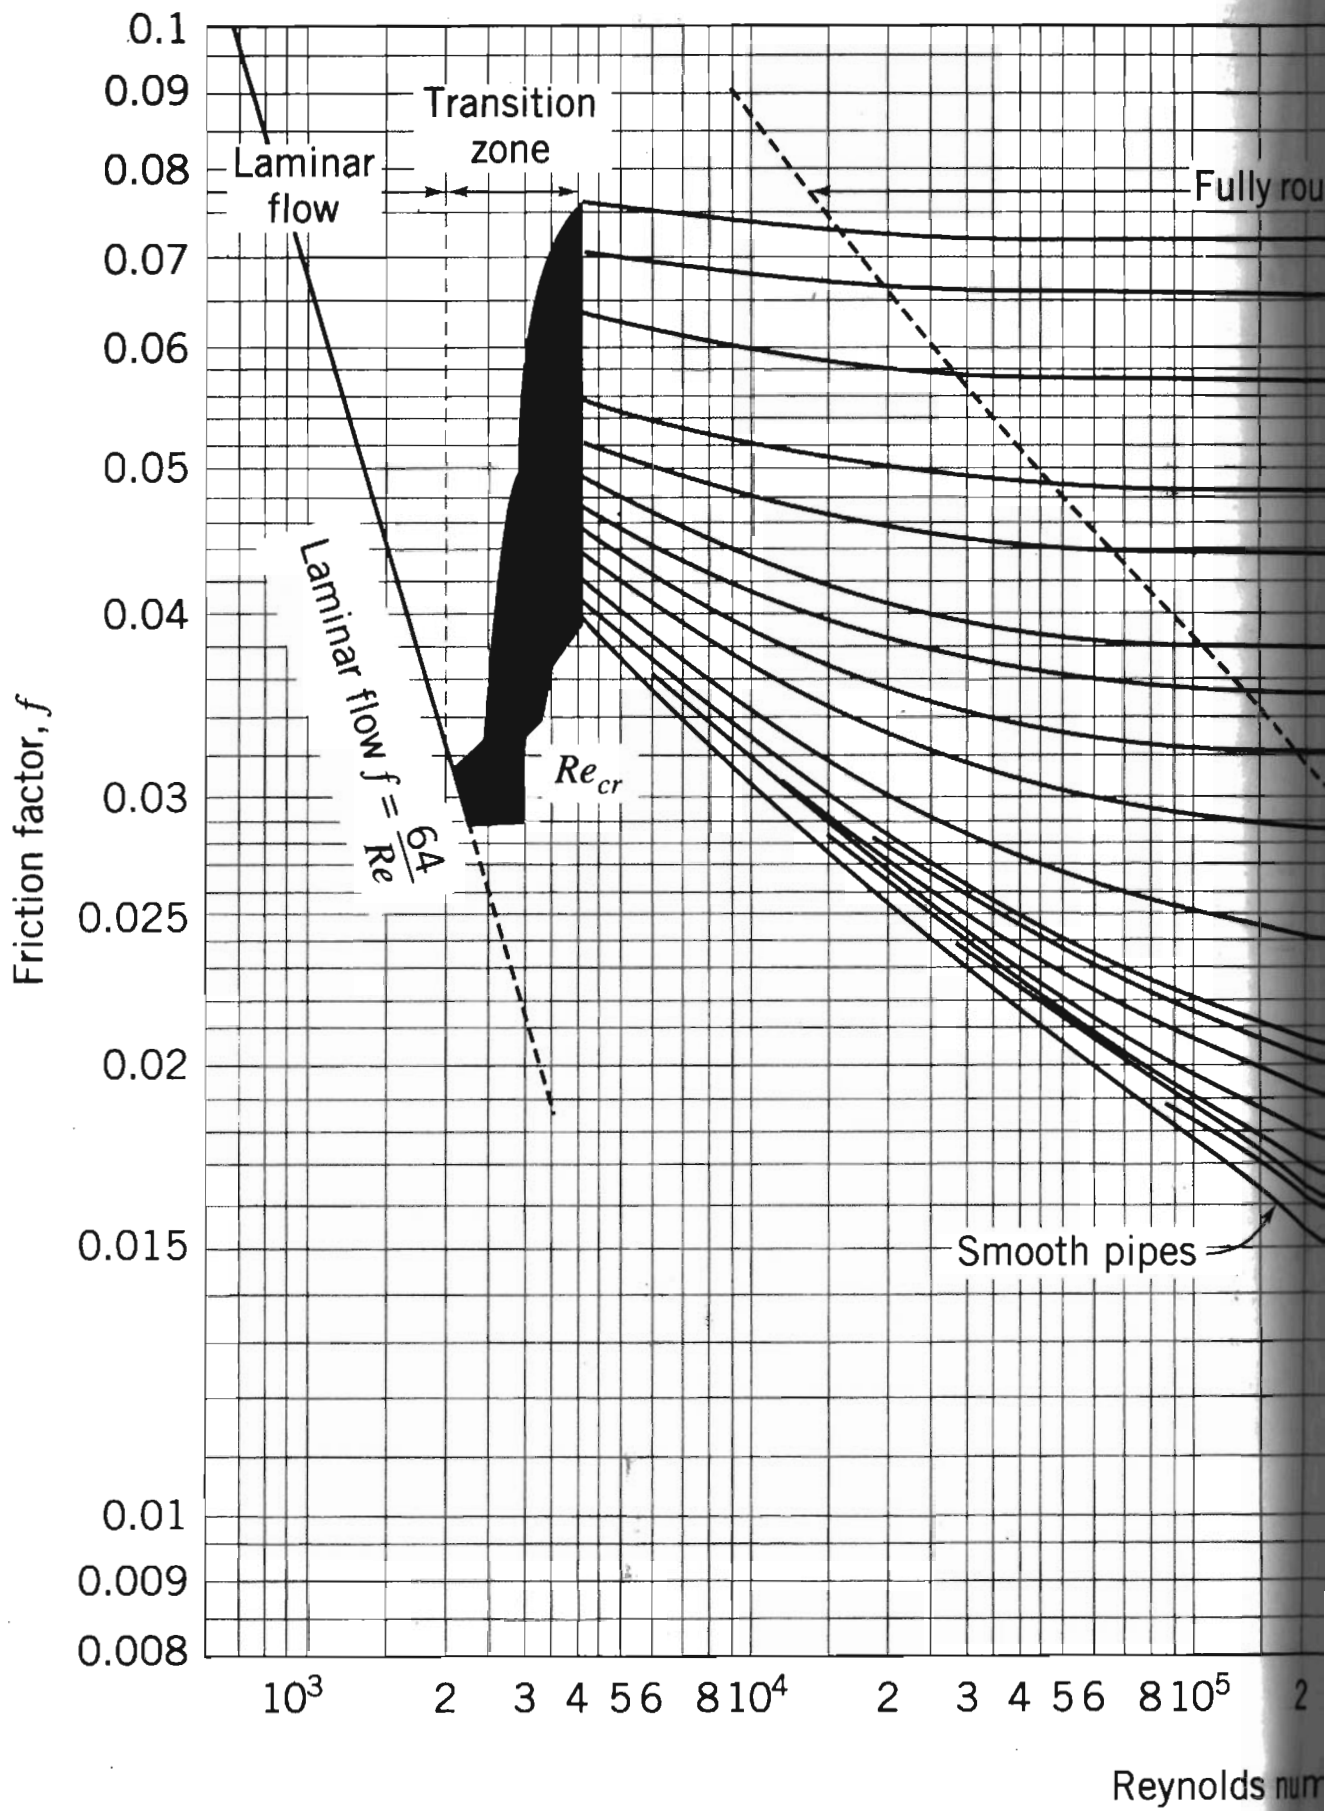


REVISADO 3

Biblioteca UPB



6 5000 00068617 2

ne

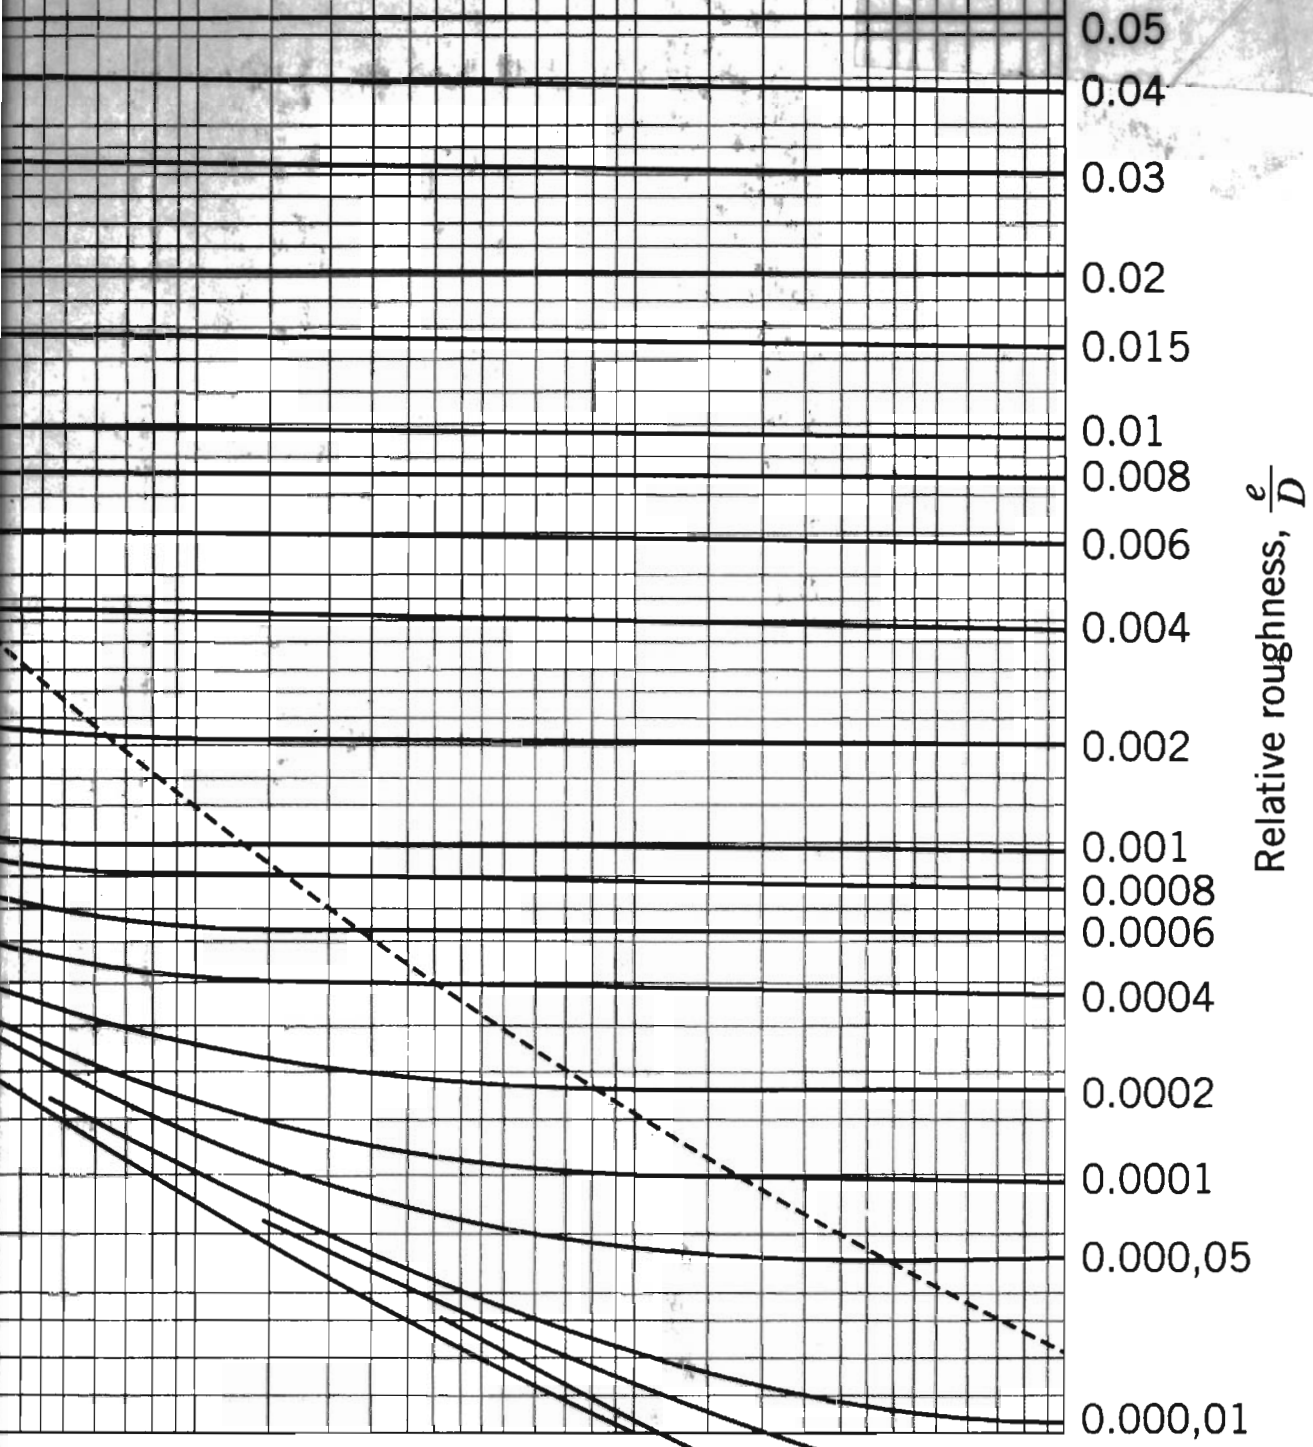

4 56 8 10<sup>6</sup>

2 3 4 56 8 10<sup>7</sup>

2 3 4 56 8 10<sup>8</sup>

$$Re = \frac{\rho \bar{V} D}{\mu}$$

$$\frac{e}{D} = 0.000,001$$

$$\frac{e}{D} = 0.000,005$$

138422



# A proven problem-solving approach in Fluid Mechanics now integrated with *Excel!*

Fox, McDonald & Pritchard provide a balanced approach to fluid mechanics that arms students with a proven problem-solving methodology. Students will learn to adopt an orderly approach to solving problems.

- Providing a fresh look, new co-author Philip J. Pritchard, of Manhattan College, has clarified and improved descriptions and explanations throughout the book.
- The text emphasizes the control volume concept to provide a practical problem solving approach that is theoretically inclusive.
- 116 detailed example problems illustrate important concepts; each problem is solved in complete detail to demonstrate good solution procedure.
- 45 example problems have associated *Excel* workbooks that enable students to perform “What if?” scenarios when studying the examples; many of the workbooks can be modified to solve end-of-chapter problems.
- Students can use *Excel* to vary problem parameters to gain insight into the behavior of complex solutions.
- 1315 end-of-chapter problems, with varying degrees of difficulty, provide the opportunity to practice building problem-solving skills.
- The CD accompanying the text includes: special and/or advanced topic sections for further study that are not included in the printed text, 45 example problem workbooks in *Excel*, and “A Brief Review of Microsoft *Excel*” (an introduction to *Excel*'s basic features, and such advanced features as *Solver* and macros).



[www.wiley.com/college/fox](http://www.wiley.com/college/fox)

ISBN 0-471-20231-2



9 780471 202318